Entering Text

Text Entry Window

E.g.) Text Entry window for S! Mail



Entry Mode

1 🔲 (Mode)

Show Entry Mode list.

Input Mode			
0	Kanji		
•	アイウ		
•	ፖイウ		
•	123[Full]		
۲	123[Half]		
۲	ABC[Full]		
۲	ABC[Half]		
	Confirm		

2 Select a mode

Mode	Description	Mode	Description
Kanji	Kanji and Hiragana	ABC[Full]	Double-byte alphanumerics
アイウ	Double-byte Katakana	ABC[Half]	Single-byte alphanumerics
アイウ	Single-byte Katakana	Symbols	Single/Double-byte symbols
123[Full]	Double-byte numbers	Pictogram	Pictograms
123[Half]	Single-byte numbers	Emotions	Emotions

Number Keys for Entering Text

Use number keys to enter text.

A single number key has multiple characters assigned to it. Press a key multiple times to scroll through its assigned characters (P2-2).



Kanji/Hiragana/Katakana

Entering Kanji

- E.g.) Enter "鈴木" in Kanji Mode
- In Text Entry window, enter "すずき"
 - Enter text as follows:
 - **[す]**: 3 🞼 (thrice)
 - [ব্দ]: @* > 3 ট্রাট্র (thrice) > 💥ট্র (once)
 - 「き」: 🛛 🖧 (twice)

*Press \bigodot first to move the cursor when the next character is on the same key.

2 🔘 for Predictive Candidate list

- 🔘 for Switch Candidate list.
- CLEAR to exit the list to add/edit text.
- There are two types of lists for converting Hiragana to Kanji: Predictive Candidate list and Switch Candidate list (P.2-4).

30714	漢
すずき	
- Predict - Switch	
鈴木 スズキ	
鈴木の 鈴木は	
鈴木が スズキの	
Confirm	

3 ② to highlight "鈴木" > ● (Confirm)

Entering Hiragana

- E.g.) Enter "すずき" in Kanji Mode
- 1 In Text Entry window, enter "すずき"
 - Enter text as follows:
 - [**す**]: 3 № (thrice)
 - [রু]: @* > 3 আঁ (thrice) > আঁ (once)
 - 「き」: 2 🖧 (twice)
 - *Press \bigcirc first to move the cursor when the next character is on the same key.
- 2 🖲 (Confirm)

Entering Katakana

- E.g.) Enter "スズキ" in アイウ (Katakana) Mode
- 1 In Text Entry window, enter "スズキ"
 - Enter text as follows:
 - 「ス」: 3 🎼 (thrice)
 - 「ズ」: ◎* > ③ ਛੋਂ (thrice) > 💥 (once)
 - [+]: 2 🖧 (twice)
 - Each character is automatically confirmed as you enter it in. *Press ⁽) first to move the cursor when the next character is on the same key.
- 2 🔘 (Confirm)

Entering Small Kana (つ, ッ, etc.)

- Enter Kana normally > 🗖 🗛
 - Alternatively, to enter small Kana, repeatedly Press a key.

Adding ° or °

Enter a Kana > 🏾 🐮 (ˆ) (> 🏹 🛱 (ˆ))

Entering Alphanumerics

E.g.) Enter "SoftBank" in ABC[Half] Mode

In Text Entry window, enter "SoftBank"

- Enter text as follows:
 - S : 7_{PQRs} (four times) > \square A/a
 - o : 6 🕷 (thrice)
 - f : 3 🞼 (thrice)
 - t : 8 🖏 (once)
 - B : 2_{ABC} (twice) > $\square_{A/a}$
 - a : $\bigcirc^* > 2_{ABC}^{*}$ (once)
 - n : 🏾 🖌 (twice)
 - k : <u>5 ﷺ</u> (twice)
- To easily enter a number in ABC[Half] Mode, Long Press a number key.
- *Press \bigodot first to move the cursor when the next character is on the same key.

Entering Symbols/Pictograms/Emotions

Symbols

Text Entry

Bymbol menu appears.

- In Symbol menu, (Change) to toggle tabs: *History* (previously entered symbols), *FullSym*. (double-byte symbols) or *HalfSym*. (single-byte symbols).
- 2 🔘 to highlight a symbol
- 3 🔘 (Confirm)

Pictograms

1 🗶

Pictogram menu appears.

- In Pictogram menu, (C) (Change) to toggle tabs: *History* (previously entered pictograms), *Common* (cross-carrier pictograms) or *All Pict*. (all pictograms).
- 2 🛇 to highlight a pictogram
- 3 🖲 (Confirm)

Emotions

(Mode) > Emotions

Emotion menu appears.

- In Emotion menu, (C) (Change) to toggle tabs: *History* (previously entered emotions) or *Emotions*.
- 2 🛇 to highlight an emotion
- 🕽 🔘 (Confirm)

Entering Spaces

- To add a double-byte space at the end of sentence:
- □ ₩™ > Press ⊡ (Change) multiple times for *FullSym.* > Highlight a space character > (Confirm)
- To add a single-byte space at the end of sentence:
- To insert a double-byte space mid-sentence:

□ ₩™> > Press ⊡ (Change) multiple times for *FullSym.* > Highlight a space character > ● (Confirm)

- To insert a single-byte space mid-sentence:
- □ ₩™> > Press ⊡ (Change) multiple times for *HalfSym.* > Highlight a space character > (Confirm)

Inserting a Line Break

■ To add a line break at the end of sentence:

■ To insert a line break mid-sentence (only for Kanji Mode):

Text Conversion

Candidate list appears during character entry.

• The candidate list sequence changes as words are entered more frequently.

Toggle	Example candidates for わ	Description
© (Predictive Candidates)	"私" or "わたし"	Predicts candidates beginning with the entered text
() (Switch Candidates)	"和" or "輪"	Shows candidates whose Kana/Kanji exactly matches with the entered text

Editing Text

Deleting/Editing Entered Text

1 To delete characters in a sentence:

Move the cursor to the right of the characters you want to delete > $\frac{CEER}{AACK^{O}}$ to delete one character to the left of the cursor.

Long Press (ELARGE to delete all the characters to the left of the cursor.

To delete characters from the end of the sentence:

With the cursor at the end of the sentence, $\mathsf{Press}_{\frac{(\mathsf{CERR})}{|\mathsf{AACK}|}}$ to delete one character.

- Long Press CLEAR to delete all the characters to the left of the cursor.
- 2 Enter correct characters

Copying, Cutting and Pasting

Copy or cut text and paste it.

- In Text Entry window, 🖸 (Options) > Copy/Cut
- 2 Move the cursor to the right/left of the text you want to select > ● (Start) > Move the cursor to the left/right to select the whole text > ● (End)
- 3 Move the cursor to where you want to paste > [] (Options) > Paste

User Dictionary

Words saved in User Dictionary appear as Switch Candidates.

Adding Words in User Dictionary

- 1 In Text Entry window, 🖸 (Options) > Add to Dict.
- 2 Move the cursor to the right/left of the text you want to select > (Start) > Move the cursor to the left/right to select the whole text > (End)
- **3** To enter the word, **(Confirm)**
- **4** Enter the reading > (Confirm)