

Customizing Mail Address

Default account name is random alphanumerics. To avoid receiving spam, a mail address that cannot easily be guessed is preferable.

sbm123-abc @ softbank.ne.jp
Account Name Domain Name
(Customize this)

- For more information, visit SoftBank Mobile Website (<http://www.softbank.jp/en/mobile/>).

- 1 In Standby,  (Mail) > **Settings** > **Custom Mail Addr**
Handset connects to My SoftBank.
 - Follow the onscreen instructions.

Message Type & Size

Item		S! Mail		SMS	
To	Email address	✓	Up to 254 single-byte alphanumerics/ Up to 20 recipients	-	-
	Phone number	✓		✓	Up to 21 single-byte alphanumerics/ Up to 1 recipient
Subject		✓	Up to 256 double-byte characters Up to 512 single-byte alphanumerics	-	-
Message body		✓	Up to 15360 double-byte characters Up to 30720 single-byte alphanumerics	✓	Up to 70 double-byte characters Up to 70 single-byte alphanumerics *1
Attachment		✓	*2	-	-

*1 When SMS Input char. (P.4-5) is set to English (160 char.), up to 160 single-byte alphanumerics can be entered.

*2 Maximum S! Mail size is 300KB including the subject, message body and attachments.


- Character limit varies with attachment size.

Sending S! Mail

Text entry: (P.2-2)

E.g.) Select a Phone Book entry to send S! Mail

1 In Standby, Long Press (Mail)

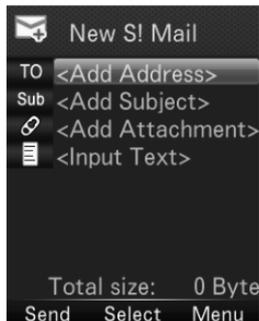

2 Highlight Address field > (Select) > Phone Book

3 Select a Phone Book entry

-  to change a tab.
-  to highlight an item.

4 (OK) to select an Email address/phone number


- When an Email address and phone number are saved,  to highlight an item to be selected.

5 Highlight Subject field > (Select) > Enter subject

6 Highlight Text field > (Select)

7 Enter message body

8 (Send)

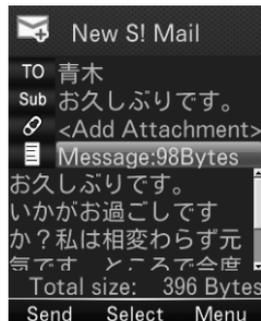

- Alternatively, in Standby,  (Mail) > Compose S!Mail to open New S! Mail window.

Attaching Files

- 1 In New S! Mail window, highlight Attachment field > ● (Select)
- 2 Select a file type > Select a folder > Select a file
 - When SD Card is inserted, ● to switch handset tab and SD card tab.
- 3  (Send)



- To capture photos/video to attach:
 - After Step 1, *Activate Camera* > *Photo mode/Video mode* > Frame subject > ● (Capture)/● (Record) (>  (Stop) for video)
- To view/play attached files:
 - Highlight Attachment field with an attachment > ● (Select) > Select a file > ● (View)/● (Play)
- To add more attachments:
 - Highlight Attachment field with an attachment > ● (Select) >  (Menu) > *Add* > Select a folder > Select a file >  (Finish)
- To delete attachments:
 - Highlight Attachment field > ● (Select) > Select an attachment >  (Menu) > *Delete* > *YES*


- Some files cannot be attached depending on the file format or size.
- Some copyright-protected files cannot be sent.

Sending SMS


Text entry: (P.2-2)

E.g.) Select a Phone Book entry to send SMS

1 In Standby,  (Mail) > *Compose SMS*

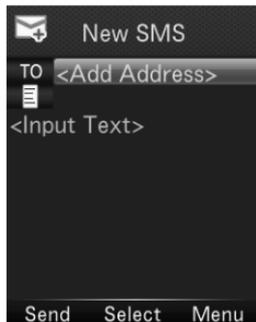

7  (Send)

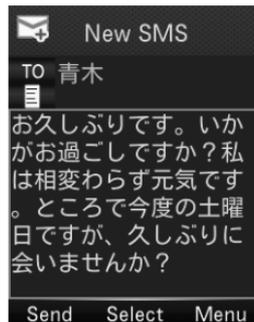

4

Messaging

- 2 Highlight Address field >  (Select) > *Phone Book*
- 3 Highlight an entry >  (OK)
 -  to change a tab.
 -  to highlight an item.
- 4 Highlight a phone number >  (OK)
 - When more than one number is saved,  to highlight an item to be selected.
- 5 Highlight Text field >  (Select)
- 6 Enter message body

General Settings

From In Standby, [Envelope Icon] (Mail) > Settings > Univ. Settings

Font Size	Set font size in preview [Icon] Select size
Scroll Unit	Set scroll unit in preview [Icon] Select a scroll unit
Delivery Report	Set whether to request Delivery Report for every message [Icon] ON/OFF
Auto Sent Del	Set whether to automatically delete older messages when Sent/Unsent is full [Icon] ON/OFF
Auto Rcvd Del	Set whether to automatically delete older messages when Inbox is full [Icon] ON/OFF

S! Mail Settings

From In Standby, [Envelope Icon] (Mail) > Settings > S! Mail Settings

Sending Options	Set Reply-To	Set whether to reply to the specified address. A reply-to address can be specified here [Icon] ON/OFF [Icon] Highlight Reply-To field > ● (Edit) > Phone Book/Direct Entry
	Set Signature	Set whether to use your Signature. A new Signature can be defined here [Icon] ON/ON When New/OFF [Icon] Highlight Signature field > ● (Edit) > Enter Signature
Incoming Opt		Set whether to download complete messages automatically [Icon] Auto Download All/Manual Retrieval


SMS Settings

From In Standby, [Envelope Icon] (Mail) > Settings > SMS Settings

Message Center	Set SMS Center number [Icon] Select SMS Center number
SMS input char.	Set text entry language [Icon] Japanese (70 char.)English (160 char.)

Messaging Window Layout

Message List

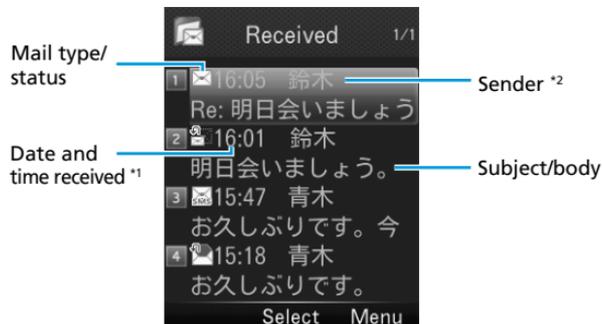

• For Sent, the following items are shown instead:

- *1 Date and time sent
- *2 Recipient

Message Type/Status

Both Message Type and Status are shown together.

Message Type		Message Status	
	Unread/Read S! Mail		Attachments
	Unread/Read S! Mail notification		Protected
	Unread/Read SMS in handset		Forwarded
	Unread/Read Emergency Alert Message (earthquake)		Replied
	Unread/Read Emergency Alert Message (disaster/evacuation information)		Failed (only for Sent)
	Unread/Read Emergency Alert Message (tsunami alert)		New delivery report (only for Sent)
	Forwarded server message		High priority
			Low priority

Message Details



- For Sent, the following items are shown instead:

- *1 Date and time sent
- *2 Recipient
- *3 Total number of sent messages

- After retrieving a complete message from the S! Mail notification with (Forwarded) or (Replied), the icon changes to / (Unread/Read S! Mail).
- Messages remain protected after complete messages are retrieved via protected S! Mail notifications.

Managing/Using Messages

Viewing a Message

- 1 In Standby, (Mail) > *Inbox/Draft Box/Sent/Unsent*
 - For Inbox, select one more folder. The number of unread messages appears next to the folder.
- 2 Select a message



Replying to a Message

- 1 In Message window,  (Reply) > *Reply to Sender/Reply to All* (> *Compose S! Mail/Compose SMS for Reply to Sender*)
 - When S! Mail is replied to, "Re:" is appended at the beginning of the subject.
- 2 Create a reply message >  (Send)
 - To quote the body and reply:
 In Message window,  (Menu) > *ReplyWithQuote* > *Reply to Sender/Reply to All*
 - Menu options differ by the message type you reply to.
 - Alternatively, select a message in Message List to reply.

Forwarding Messages

- 1 In Message window,  (Menu)
- 2 *Forward* > *Forward/Fwd Server Mail*
 - When S! Mail is forwarded, "Fw:" is appended at the beginning of the subject.
- 3 Create a forward message >  (Send)

Protecting Messages

- 1 In Standby,  (Mail) > *Inbox/Sent/Unsent*
 - For Inbox, select one more folder.
- 2 Select a message >  (Menu) > *Protect* > *This one*

Deleting Messages

- 1 In Standby,  (Mail) > *Inbox/Draft/Sent/Unsent*
 - For Inbox, select one more folder.
- 2 Select a message >  (Menu) > *Delete* > *Delete This* > *YES*