



006SH User Guide



## 006SH User Guide Contents

Introduction	
Introduction.....	3
<b>Getting Started</b>	
Package Contents.....	6
Parts & Functions.....	6
About USIM Card.....	7
SD Card.....	9
Battery Installation.....	12
Charging Battery.....	14
Handset Power On/Off.....	15
Using Touch Panel.....	16
<b>Basic Operations</b>	
Handset Interface.....	18
Applications.....	19
My Phone Number.....	21
Mobile Manners.....	22
Text Entry.....	23
Using Google Accounts.....	25
Android Market.....	27
Security Codes.....	28
USIM PIN.....	29
Activating Sleep Mode.....	30
Software Update.....	30
<b>Handset Interface</b>	
Home Screen Basics.....	32
Status Bar.....	33
Notifications Panel.....	34
Customizing Home Screen.....	34
Launcher Basics.....	36
<b>Phone</b>	
Placing/Answering Calls.....	40
Optional Services.....	41
Using Address Book.....	46
<b>Messaging &amp; Browser</b>	
Mail Types.....	50
Sending S! Mail/SMS.....	50
Receiving & Replying S! Mail/SMS.....	52
Handling S! Mail/SMS.....	53
Creating/Sending Gmail.....	54
Opening Received Gmail.....	55
Email Settings.....	56
Creating/Sending Email.....	56
Opening Received Email.....	57
Browsing the Internet.....	58
<b>Camera</b>	
Photo Camera & Video Camera.....	62
Capturing 3D Images.....	64

## Music & Images

Music.....	68
Still Images & Video.....	68

## Connectivity

Connecting to Wi-Fi.....	70
Using Bluetooth®.....	73

## Global Services

Global Roaming.....	78
Calling from Outside Japan.....	79

## Settings

Wireless & Networks.....	82
Sound Settings.....	84
Applications.....	85
Accounts & Sync.....	86
Privacy.....	87
Language & Keyboard.....	87
Date & Time.....	89
About Phone.....	89

## Appendix

Specifications.....	92
Customer Service.....	93

# Introduction

---

Thank you for purchasing 006SH.

## Guide Usage Notes

- Most operation descriptions are based on default settings.
- Unless noted otherwise, descriptions are for Home Screen.
- Some operation descriptions may be omitted.
- In this guide and on handset, "abroad" means "outside Japan" with regard to handset/service usage.

## Screenshots & Key Labels

Actual handset windows, menus, etc. may differ in appearance.  
Key labels are provided for reference only.



## Getting Started

Package Contents.....	6
Parts & Functions.....	6
About USIM Card.....	7
SD Card.....	9
Battery Installation.....	12
Charging Battery.....	14
Handset Power On/Off.....	15
Using Touch Panel.....	16


## Package Contents

### Package Contents

- 006SH (handset)
- Battery (SHBDT1)
- Micro USB Charging Adapter (SHCDL1)
- Micro USB Cable (SHDDL1)
- Stand (complimentary sample)
- microSDHC Card (complimentary sample) (In this guide, microSDHC/microSD Card is referred to as "SD Card.")
- クイックスタート (Japanese)
- お願いとご注意 (Japanese) with English "Quick Tips"
- Warranty (Japanese)

## Parts & Functions

### Handset Parts

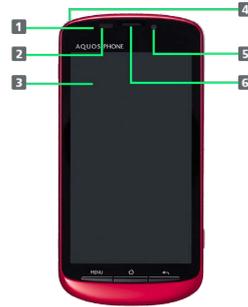


- 1 Notification Lamp
- 2 Light Sensor
- 3 Display
- 4 Strap Eyelet
- 5 Internal Camera
- 6 Earpiece



- 1 HDMI Port
- 2 Twin Camera
- 3 Speaker
- 4 TV Antenna (retractable)
- 5 Battery Cover Notch
- 6 Microphone
- 7 Headphone Jack
- 8 Infrared Port
- 9 Mobile Light
- 10 Battery Cover
- 11 FeliCa Logo
- 12 External Connector Port

## Handset Keys

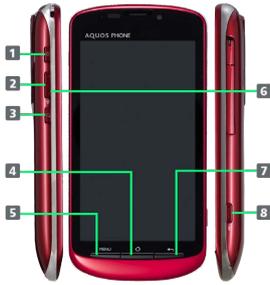

- 1** : Activate/cancel Sleep mode. Long Press for Power on or Phone options.
- 2** : Adjust volume
- 3** : Open Search window. Long Press for Voice Actions.
- 4** : Return to Home Screen. Long Press for active applications.
- 5** : Open Options menu
- 6** : Long Press to activate/cancel Manner mode
- 7** : Go back/escape
- 8** : Capture images: Long Press for Camera applications; Long Press in Unlock window to illuminate Mobile Light.

## About USIM Card

USIM Card is an IC card containing customer and authentication information, including handset number.

### Inserting USIM Card

Power off first.

**1**


Remove Battery Cover



· Use Battery Cover notch (○) to lift Cover, then remove it.

**2**


Unlock battery

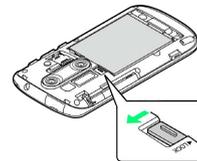

· Slide switch as shown.

**3**


Remove battery

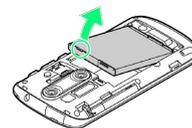

· Use tab (○) to lift battery.

**4**


Pull out Tray

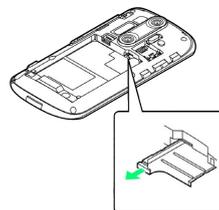

· Use tab to pull Tray straight out.

**5**


Place USIM Card in Tray

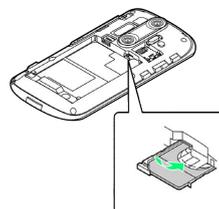

· Slide in Tray with USIM Card IC chip up.

**6**

Secure Tray

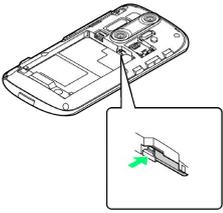**7**


Insert battery



- With recycling symbol up, align battery terminals with contacts.

**8**


Lock battery

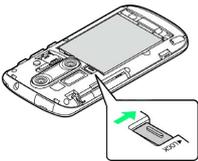


- Slide switch as shown.

**9**

Fit Battery Cover into slots as shown

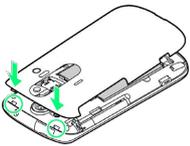**10**

Press down firmly along Battery Cover edges

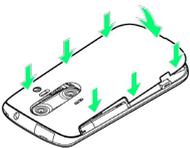

## Removing USIM Card

Power off first.

**1**


Remove Battery Cover



- Use Battery Cover notch (○) to lift Cover, then remove it.

**2**


Unlock battery

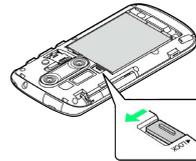

- Slide switch as shown.

**3**


Remove battery

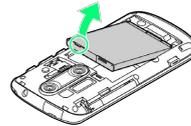

- Use tab (○) to lift battery.

**4**


Pull out Tray

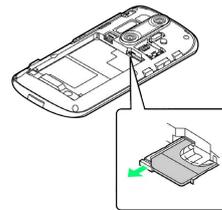

- Use tab to pull Tray straight out.

**5**


Remove USIM Card

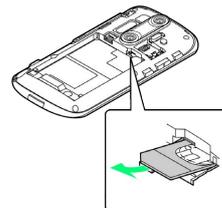

- Lift and slide out USIM Card as shown.

6

Secure Tray

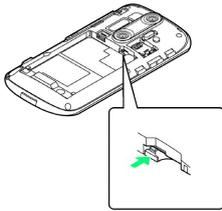

7


Insert battery



- With recycling symbol up, align battery terminals with contacts.

8


Lock battery

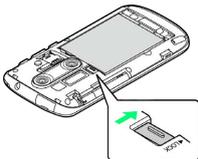

- Slide switch as shown.


9

Fit Battery Cover into slots as shown

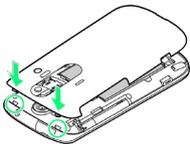

10

Press down firmly along Battery Cover edges

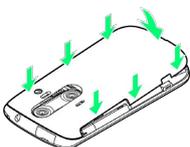

## SD Card

### Unmounting SD Card

Always perform Unmount microSD before removing SD Card.  
(Complimentary SD Card preinstalled.)

1

In Home Screen, **MENU** → **Settings**




2

microSD & phone storage



3

Unmount microSD → **OK**

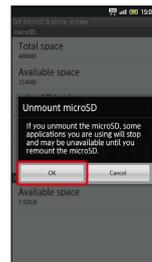

 SD Card is unmounted.

### Complimentary Sample microSDHC Card

Enjoy complimentary sample files; card is usable even after file deletion.


- Deleted sample files cannot be restored; not available via the Internet or any other channels.
- Sample files are designed exclusively for 006SH (not for use on other handset models).
- Warranty does not cover complimentary sample microSDHC Card/sample files.

## Removing SD Card

Before removing SD Card, always perform Unmount microSD, then power off. Do not apply excessive force to Holder.

**1**


Remove Battery Cover

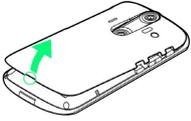

· Use Battery Cover notch (○) to lift Cover, then remove it.

**2**

Unlock Holder

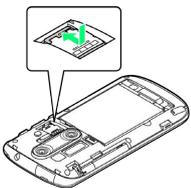

· Slide Holder as shown.

**3**

Lift Holder and remove SD Card



· Gently slide out SD Card as shown.

**4**


Lock Holder



· Replace Holder and slide as shown.


**5**

Fit Battery Cover into slots as shown

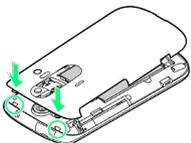

**6**

Press down firmly along Battery Cover edges

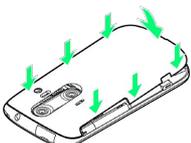


## Inserting SD Card

Power off first. Do not apply excessive force to Holder.

**1**


Remove Battery Cover

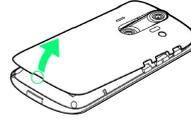

· Use Battery Cover notch (○) to lift Cover, then remove it.

**2**


Unlock Holder

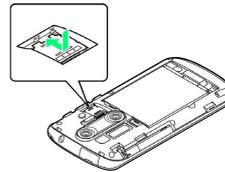

· Slide Holder as shown.

**3**

 
Lift up Holder and insert SD Card



· Do not insert other objects; do not force SD Card into Holder.

**4**

Slide Holder as shown until it stops

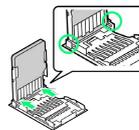


**5**

Replace Holder



6


Lock Holder

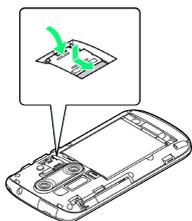

· Replace Holder and slide as shown.


7

Fit Battery Cover into slots as shown

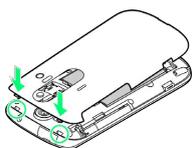

8

Press down firmly along Battery Cover edges

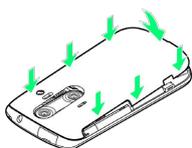

**!** Important SD Card Usage Notes

General Use

Keep SD Card out of infant's reach; may cause suffocation if swallowed.

Data Loss/Alteration

- SD Card files may be lost/altered accidentally.
- Keep a copy of contacts, etc. in a separate place. SoftBank Mobile is not liable for any damages resulting from accidental loss/alteration of information.
  - Never power off or remove battery while files are being accessed.

Formatting SD Card

When using a new SD Card for the first time, format it on handset before trying to save files, etc.

- Formatting deletes all SD Card files, even those created on other devices.
- Charge battery or install a charged battery beforehand.

1

In Home Screen, MENU → Settings



2

microSD & phone storage



3

Unmount microSD → OK



Unmount microSD changes to Mount microSD .

4

Erase microSD




5

## Erase microSD



6

Enter Handset Code → OK

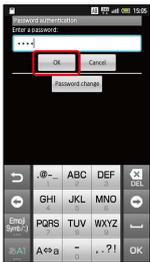

7

## Erase everything


 Formatting starts.

## Battery Installation

### Inserting Battery

1

Remove Battery Cover



- Use Battery Cover notch (○) to lift Cover, then remove it.

2


Insert battery



- With recycling symbol up, align battery terminals with contacts.

3


Lock battery

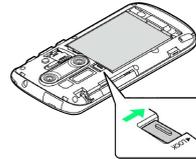

- Slide switch as shown.


4

Fit Battery Cover into slots as shown

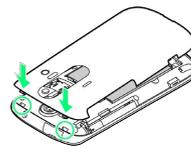

5

Press down firmly along Battery Cover edges

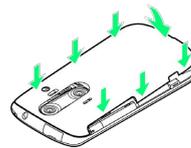

## Removing Battery

Power off first.

1


Remove Battery Cover



· Use Battery Cover notch (○) to lift Cover, then remove it.

2

Unlock battery

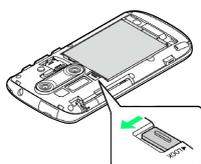

· Slide switch as shown.

3


Remove battery



· Use tab (○) to lift battery.


4

Fit Battery Cover into slots as shown

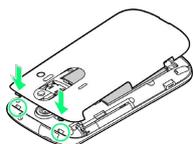

5

Press down firmly along Battery Cover edges

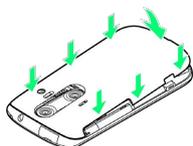

## Lithium-ion Battery

This product requires a lithium-ion battery. Lithium-ion batteries are recyclable.

- To avoid fire or electric shock, do not short-circuit or disassemble battery.
- To recycle a used lithium-ion battery, take it to any shop displaying the symbol below.



Li-ion00

## Battery Usage Notes

### General

Charge battery at least once every six months; uncharged battery may die or affect files/settings.

### Battery Life

Replace battery if operating time shortens noticeably.

- Depending on usage, bulges may appear near end of battery life; this does not affect safety.

### Maintenance

Clean device charging terminals with dry cotton swabs.


## Charging Battery

Battery must be inserted in handset to charge it.

### AC Charger


Use Micro USB Charging Adapter with AC Charger ZTDAA1 (sold separately).

- Do not pull, bend, or twist the cord.

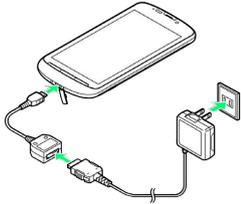

1

 Insert Charger Connector into Micro USB Charging Adapter



- Confirm connector orientation, then insert connector until it clicks.


2

Open Port Cover and connect Micro USB Charging Adapter to External Connector Port



3

Extend blades and plug AC Charger into AC outlet

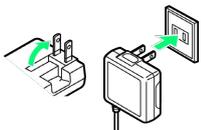


🚩 Notification Lamp illuminates while charging.

- Notification Lamp goes out when battery is full. Unplug AC Charger and retract blades. Remove handset and close Port Cover.

### USB Charge


Connect handset to a PC via Micro USB Cable.

- Power on handset and PC first.
- Battery may not charge if SD Card is not inserted.
- Handset may power on automatically when connected to a PC via Micro USB Cable; avoid connection aboard aircraft or in hospitals, etc. where handset use is prohibited.
- Battery may not charge or charge slowly depending on PC status/environment.

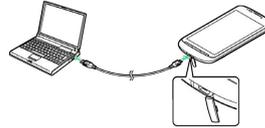

1

Open Port Cover and connect Micro USB Cable to External Connector Port

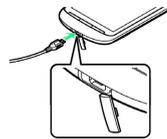

2

Connect Micro USB Cable to PC USB port



🚩 Charging starts.

- When finished, remove Micro USB Cable and close Port Cover.

## Handset Power On/Off

### Power On

1

Press and hold  until SoftBank logo appears



 After Power On Graphics, Unlock window appears.

2

Drag  to 



 Touch Panel unlocks and SD Card caution appears.

3

Yes

 Initial setup menu opens.

· Home Screen appears if initial setup menu is set hidden.

### Power Off

1

 (Long)




2

Power off



3

OK

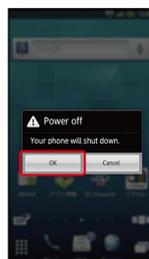

 Handset shuts down.

## Using Touch Panel

Touch Display to navigate menus, open functions, scroll pages, etc.

### Tap

Tap item or key to open or execute corresponding function/operation.



### Long Touch

Touch item for 1+ seconds (handset vibrates) to move icon, open menu, etc.




### Drag

Drag item to move it.




### Swipe/Flick

Swipe or flick to toggle sheets, pages, etc.

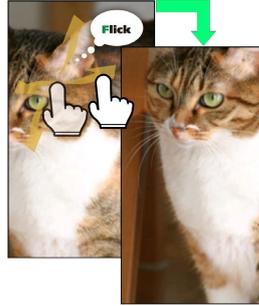

### Spread & Pinch

Spread or pinch to enlarge or reduce images, etc.

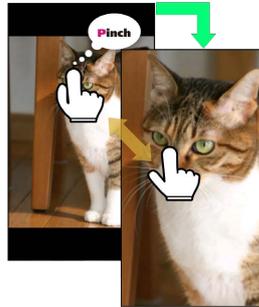

### + Calibrating Touch Panel

Calibrate Touch Panel to improve response. Hold handset normally during calibration.

In Home Screen, **MENU** → **Settings** → **About phone**  
 → **Adjust touch panel** → Tap center of each circle

## Basic Operations

Handset Interface.....	18
Applications.....	19
My Phone Number.....	21
Mobile Manners.....	22
Text Entry.....	23
Using Google Accounts.....	25
Android Market.....	27
Security Codes.....	28
USIM PIN.....	29
Activating Sleep Mode.....	30
Software Update.....	30

## Handset Interface

### Home Screen & Launcher

Perform most operations from Home Screen or Launcher.



### Selection & Execution

Tap (select/execute) item, icon, key, etc. to open or execute corresponding function/operation.




- Press  to return to previous window.

### Options Menu Operations

Press  to open Options menu.



- In some windows, Long Touch item, etc. to open Options menu. In Home Screen, Long Touch open area for Home settings (below).

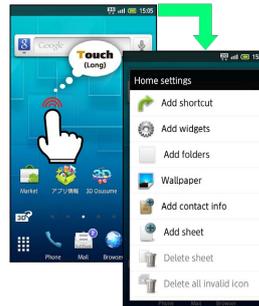

### Handset Customization

In Home Screen, press  then tap  to change settings.




### About Checkbox

Checkbox (  or  ) appears beside some options. Tap to select (  ) or cancel (  ) option.

## Portrait and Landscape Orientation

For some functions/windows, Display orientation changes with handset orientation.

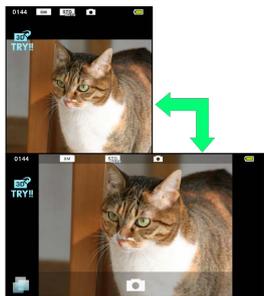

## Applications

### Starting Applications

1

In Home Screen, 



 Launcher (Basic functions) appears.

2

Click left/right to toggle pages



3

Tap icon



 Application starts.

- Tap  for Home Screen; some applications may remain active.

### + Opening Application Properties

In Home Screen or Launcher, Long Touch icon  Drag icon to  (Go App Info)

## Using Application List

Open list of active applications; toggle or close applications.

1

In Home Screen,  or  (Long)



 Active applications appear.

- Flick left/right to toggle lists.

2

Tap application



 Application starts.

## + Hiding Active Applications

In application list,  or 

## Closing Applications

1

In any application, 



 Home Screen appears.

2



 Active applications appear.

3

Tap 



 Application ends.

- Press  or  to hide active applications.

## + Escaping Applications

Closing Application with 

In any application, press  repeatedly until Home Screen returns

- Some applications may remain active.

Closing All Applications

In any application,     

# My Phone Number

## Confirming Handset Number

1

In Home Screen, MENU → Settings → Profile



Profile opens.

- Handset number appears in Own phone number field.

## Saving User Information

1

In Home Screen, MENU → Settings → Profile



Profile opens.

2

MENU → Edit



Profile entry window opens.

3

Tap item (entry field)

- Tap + to show/add entry field or ✕ to hide/delete.

4

Complete field



- Tap other items and complete fields as needed.

5

MENU → Save → Yes

Profile is saved.

## Mobile Manners

### Mobile Manners

Mute ringer for incoming transmissions.

1

In Home Screen or Launcher,  (  ; Long)



 Manner mode activates.

### + Canceling Manner Mode

 (  ; Long)

### ! Important

Shutter click, video recording tones, etc. still sound even in Manner mode.

### Activating Offline Mode

Temporarily suspend all wireless connections.

1

 (Long)



2

Offline mode

 Offline mode activates.

### + Canceling Offline Mode

 (Long)  Offline mode

# Text Entry

## Keyboard Basics

Use a keyboard to enter characters as follows:  
 12-Key: Multiple characters assigned to each key.  
 QWERTY and Android: Single letters assigned to each key.

- Tap a text entry field for keyboards.
- Default input method: iWnn IME - SH edition.

## + Keyboard Operations

Switching between 12-Key Keyboard and QWERTY Keyboard

In any keyboard, **Change keyboard (Portrait)** or **Change keyboard(Landscape)**


---

Changing Input Method

Long Touch text entry window **Input method**


**Android keyboard** or **iWnn IME- SH edition**

## 12-Key Keyboard Layout

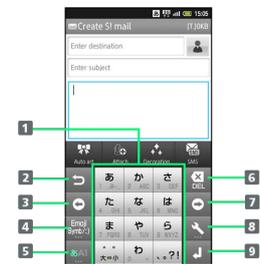

- 1 Enter characters
- 2 Reverse toggle character options
- 3 Move cursor left
- 4 Enter pictograms, symbols, or emoticons; toggle conversion options
- 5 Toggle entry modes
- 6 Delete characters
- 7 Move cursor right
- 8 Open text entry options; convert hiragana or insert spaces
- 9 Insert line breaks; enter current characters

## QWERTY Keyboard Layout

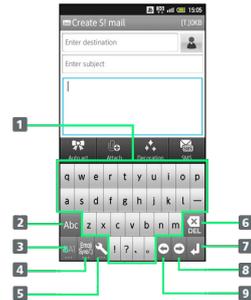

- 1 Enter characters
- 2 Enter letters
- 3 Toggle entry modes
- 4 Enter pictograms, symbols, or emoticons
- 5 Open text entry options
- 6 Delete characters
- 7 Insert line breaks; enter current characters
- 8 Move cursor right
- 9 Move cursor left

## Switching Entry Modes

Tap to toggle Half Alphabet, Half Numeric, and Kanji modes. Follow these steps to use other entry modes:


### 1

In a text entry window, Long Touch



### 2

Tap mode

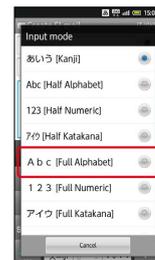

Keyboard interface changes accordingly.

## 💡 Entry Mode Indicators

Current entry mode indicator appears on Status Bar:

- あ : Kanji (kanji & hiragana)
- カ : Full Katakana (full-width katakana)
- か : Half Katakana (half-width katakana)
- A : Full Alphabet (full-width alphabet)
- Ab : Half Alphabet (half-width alphabet)
- 1 : Full Numeric (full-width numeric)
- 12 : Half Numeric (half-width numeric)
- ☒ : Character Code

## Alphabet

In 12-Key keyboard, follow these steps to enter Keitai:


1

In a text entry window, Long Touch 



2

Half Alphabet

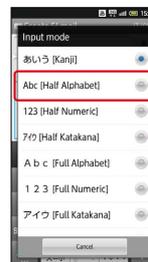

3

JKL (twice: K) → DEF (twice: e) → GHI (three times: i) →  
TUV (once: t) → ABC (once: a) → GHI (three times: i)



· The first character is capitalized automatically by default.  
(Cancel auto capitalization as needed.)

4

OK

 Keitai is entered.


## 💡 Toggling Case

Type a letter and tap  to toggle case.

## Flick Input

In 12-Key entry, flick key for target character.

- Long Touch a key for guidance; flick toward target character. Tap **OK** to enter.

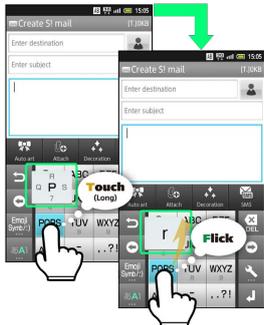

Target Character	Operation
P	Tap <b>PKBS</b> once
Q	Touch and flick left
R	Touch and flick up
S	Touch and flick right
7	Touch and flick down


## Using Google Accounts

Sign in to a Google Account to use Google services. (Some applications may be limited or disabled without a Google Account.)

### Creating a New Google Account

1

In Home Screen, **MENU** → **Settings** → **Accounts & sync**

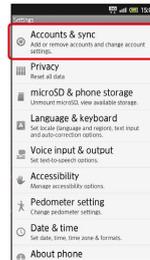

2

**Add account**



3

**Google**



 Add a Google Account appears.

4

**Next**



5

Create



6

Tap First name field → Enter first name → Next →  
 Enter last name → Next → Enter user name → Done  
 → Next



7

Tap password field → Enter password → Next → Re-  
 enter password → Done → Next



8

Tap security question



9

Tap question → Tap Answer field → Enter answer →  
 Next → Enter secondary mail address → Done →  
 Create

Account information is saved.

Follow onscreen instructions.

## Signing in to a Google Account

For applications requiring a Google Account, Add a Google Account appears; sign in to use the application.


1

In Add a Google Account, Next



2

Sign in

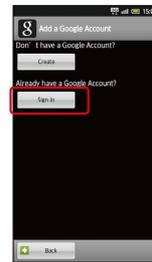

3

Tap Username field → Enter user name → Next → Enter  
 password → Done → Sign in



4

Finish setup

Sign-in is complete.

## Android Market

Download various applications via Android Market. (Sign in to a Google Account beforehand.)

SoftBank Mobile is not liable for any damages resulting from use of applications obtained from Android Market.

### Installing Free Applications

1

In Home Screen,  → In Launcher (Basic functions),  (Market)



 Market opens.

· If confirmation appears, follow onscreen instructions.

2

Tap free application → **FREE** (below Install) → **OK**

 Download (installation) starts.

### Purchasing Paid Applications

1

In Home Screen,  → In Launcher (Basic functions),  (Market)



 Market opens.

· If confirmation appears, follow onscreen instructions.

2

Tap paid application → Select price (below Buy) → **OK**  
→ Follow onscreen instructions

 Download (installation) starts.

### Updating Applications

1

In Home Screen,  → In Launcher (Basic functions),  (Market)



 Market opens.

· If confirmation appears, follow onscreen instructions.

2

**MENU** → **My apps** → Tap application → **Update** → **OK**

 Download (installation) starts.

· If confirmation appears, follow onscreen instructions.

### Purchased Applications

#### Payment

No additional payment required for re-downloads of uninstalled purchased applications.

#### Use on Other Android Devices

Install purchased applications on other Android devices free of charge by using the same Google Account used for the purchase.

### Additional Operations

#### Refund Requests

Request refunds within designated period. Returned applications are deleted from handset; no payment is required. (One refund request per application.)

In Market, **MENU** → **My apps** → Tap application → **Refund** → Tap answer → **OK**

#### Enabling Automatic Updates

In Market, **MENU** → **My apps** → Tap application → **Allow automatic updating** (  )

· Automatic update is not available for some applications.

**!** Important**Automatic Updates**

Application operations are subject to change due to automatic updates.

---

**Application Purchase Disclaimer**

SoftBank Mobile cannot be held liable for any damages to self or others that arise from purchase of applications.

## Security Codes

---

### Code Types

Among Security Codes, Center Access Code (Network Password; 4-digit code in contract) is required to use Optional Services via landlines or subscribe to fee-based information.

- Write down Handset Code, Administrator Code and Center Access Code (Network Password). If you forget these codes, contact us for recovery. For details, contact SoftBank Customer Support, [General Information](#).
- Do not reveal Handset Code, Administrator Code or Center Access Code (Network Password). SoftBank Mobile is not liable for misuse or damages.
- Incoming/outgoing call restriction settings will be locked if incorrect Center Access Code (Network Password) is entered three times consecutively during the setting. To resolve, the code must be changed. For details, contact SoftBank Customer Support, [General Information](#).
- If you have previously changed Network Password on a SoftBank handset, enter the latest code to set incoming/outgoing call restrictions.

# USIM PIN

Four to eight-digit code (9999 by default); activate USIM card lock to restrict handset use.

## Activating USIM Card Lock

1

In Home Screen, MENU → Settings → Location & security



2

Set up USIM card lock → Lock USIM card ( ) →

Enter PIN → OK



USIM card lock activates.

## Changing PIN

Activate USIM card lock first.

1

In Home Screen, MENU → Settings → Location & security



2

Set up USIM card lock → Change USIM PIN → Enter current PIN → OK → Enter new PIN → OK → Re-enter new PIN → OK

PIN is changed.

## Important

Entering incorrect PIN three consecutive times activates PIN Lock. To cancel, Personal Unblocking Key (PUK Code) is required; contact SoftBank Customer Support, [General Information](#). Entering incorrect PUK Code ten consecutive times activates PUK Lock, disabling handset. For recovery, USIM Card must be reissued at a SoftBank Shop (fees apply).

## Activating Sleep Mode


Display goes completely dark and Sleep mode activates after a period of inactivity.

Sleep mode prevents accidental operation/function activation. (Press  to activate Sleep mode anytime.)

### Canceling Sleep Mode

1

 or 

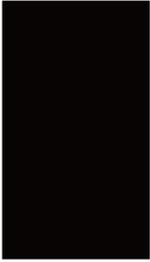

 Unlock window appears.

2

Drag  to 



 Sleep mode is canceled.

· When Security Lock is active, unlock it as well.


## Software Update

Check for firmware updates and download as required.

### Updating Software

1

In Home Screen,   

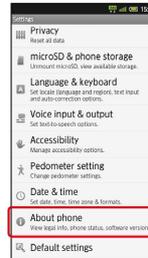

2

 Software update starts.

### Before Software Update

Always back up important information. SoftBank Mobile cannot be held liable for damages from lost information, etc.

### Precautions

#### During Update

Handset is disabled until update is complete. Update may take some time.

#### Signal Conditions

To reduce failure risk, be sure signal is strong and stable, and charge battery adequately beforehand. Update failure may disable handset.

## Handset Interface

Home Screen Basics.....	32
Status Bar.....	33
Notifications Panel.....	34
Customizing Home Screen.....	34
Launcher Basics.....	36

## Home Screen Basics

Home Screen appears at Power on; most operations start here. Home Screen includes five sheets by default. Add shortcuts, widgets or folders to each sheet.

### Window Description



- 1 Handset status and notifications
- 2 Search box
- 3 Shortcuts
- 4 Toggle 2D/3D view
- 5 Open Launcher
- 6 Open Home Screen sheet index
- 7 Open list of active applications

### toggling Home Screen Sheets

Flick open area left/right to toggle Home Screen sheets.

· From any sheet, press for first sheet.



### + Switching to 3D View

In Home Screen,

· Tap to return to 2D view.

## Using Home Screen Sheet Index

Use Home Screen sheet index to switch, add or delete sheets.

1

In Home Screen,



Home Screen sheet index appears.

2

Tap sheet



Sheet switches.

### + Home Screen Sheet Index Operations

#### Adding Sheets

In Home Screen sheet index,

#### Deleting Sheets

In Home Screen sheet index, Long Touch sheet (do not release yet) Drag it to (trash)

· If confirmation appears, follow onscreen instructions.

#### Closing Home Screen Sheet Index

In Home Screen sheet index,

## Status Bar

Indicators (new message notification, handset status, etc.) appear at the top of Display.



## Notification Indicators

Notification indicators appear on the left.



Indicator	Description
	Missed Calls
	Answer Phone Message Recorded
	New SMS/S! Mail
	New Email
	New Gmail
	Alarm Time Passed

## Status Indicators

Status indicators appear on the right.



Indicator	Description
	Battery Strength
	Signal Strength
	No Signal
	Offline mode
	Roaming
	3G Data in Use
	GSM Data in Use
	Alarm Set
	Standard manner mode
	Drive manner mode
	Silent manner mode
	Wi-Fi Connected
	Bluetooth® On
	Bluetooth® Connected
	Answer Phone (  : Message Recorded)

Some indicators appear in different colors while signed in to a Google Account.

## Notifications Panel

Open notifications, check handset status or change various settings.

### Opening Notifications Panel

1


Tap Status Bar (Display top)



Notifications panel opens.

Press  to exit.

### Window Description

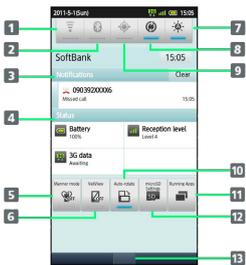

- 1 Toggle Wi-Fi on/off
- 2 Toggle Bluetooth® on/off
- 3 Notifications; tap **Clear** to delete all Notifications
- 4 Handset status
- 5 Open Manner mode options
- 6 Toggle VeilView on/off
- 7 Adjust Display brightness
- 8 Toggle account synchronization on/off
- 9 Toggle GPS positioning on/off
- 10 Toggle Display rotation on/off
- 11 Open list of active applications
- 12 Open microSD menu
- 13 Close Notifications panel

## Customizing Home Screen

Change Wallpaper or paste shortcuts.

### Setting Wallpaper

1

In Home Screen, Long Touch open area



Home settings opens.

2

#### Wallpaper



3

Live wallpapers or Wallpaper gallery



4

Tap file  **Set wallpaper** or **Set to wallpaper**



Wallpaper is set.

If prompted, follow onscreen instructions.

**+** Using SD Card Files as Wallpaper

Setting Wallpaper via Contents Manager

In Home settings, **Wallpaper** → **Contents manager**  
 → Tap image → Drag frame to specify image area → **Save**

· For 3D images, preview appears. Move slider to adjust 3D depth, then tap **Set to wallpaper** .

Setting Wallpaper from Gallery

In Home settings, **Wallpaper** → **Gallery** → Tap album → Tap image → Drag frame to specify image area → **Save**

**Adding Shortcuts**

Follow these steps to add an application shortcut:

**1**


In Home Screen, Long Touch open area



Home settings opens.


**2**

**Add shortcut**

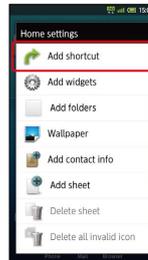

**3**

**Applications**

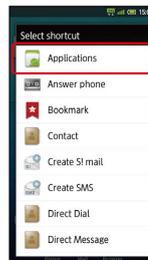

Application list appears.

· Flick left/right to toggle pages.

**4**

Tap application



Corresponding icon appears.

## + Managing Shortcuts

### Moving Shortcuts

In Home Screen, Long Touch shortcut (do not release yet)

➔ Drag it to target location

### Removing Shortcuts

In Home Screen, Long Touch shortcut (do not release yet)

➔ Drag it to 🗑️ (trash)

## Launcher Basics

Use Launcher to access applications.

Launcher includes six pages by default; add pages as needed.

### Opening Launcher

1

In Home Screen, 



 Launcher appears.

### Window Description



- 1 Applications
- 2 Toggle 2D/3D view
- 3 Open Home Screen
- 4 Open Launcher page index
- 5 Open list of active applications

### Switching Launcher Pages

Flick left/right to switch pages.



## Using Launcher Page Index

Use Launcher page index to switch, add or delete pages.

1

In Launcher, 



 Launcher page index appears.

2

Tap page



 Page opens.

### + Launcher Page Index Operations

**Adding Pages**

In Launcher page index, 

---

**Deleting Pages**

In Launcher page index, Long Touch page (do not release yet)  Drag it to  (trash)

- Delete applications on page beforehand.

---

**Closing Launcher Page Index**

In Launcher page index, 



## Phone

Placing/Answering Calls.....	40
Optional Services.....	41
Using Address Book.....	46

## Placing/Answering Calls

See below to dial directly or answer calls. (006SH does not support Video Call.)

### Placing a Call

1

In Home Screen,  In Launcher (Basic functions),  (Phone)



 Onscreen dialpad appears.

· If missed call count (  ) appears above  , Call History opens. Press  to return to Home Screen and start over.

2

Use onscreen dialpad to enter number



· Include area code for landline numbers.

3

Call



 Handset dials the number.

· Wait for other party to accept the call.

4

To end the call, 



 Call ends.

 After Calls to/from Unsaved Numbers

Save to Address Book confirmation appears. Tap  to address book then follow onscreen instructions.

### Answering a Call

1

When a call arrives,  or 



 Call connects.

· When a call arrives in Sleep mode, drag  to right to answer the call. Alternatively, press .

2

To end the call, 



 Call ends.

 After Calls to/from Unsaved Numbers

Save to Address Book confirmation appears. Tap  to address book then follow onscreen instructions.

## ! Emergency Location Report

Your location is automatically reported to the corresponding agency (police, etc.) when you place emergency calls (110, 119 or 118) with SoftBank 3G handsets.

- Registration/transmission fees do not apply.
- Positioning accuracy is affected by location/signal conditions. Always provide your location and purpose on the phone.
- Location Information is not reported when emergency calls are placed without Caller ID (such as when the number is prefixed with 184). However, the corresponding agency may obtain your Location Information in a life threatening situation.
- Location Information is not reported during Global Roaming.
- Emergency calls are restricted when Offline mode and USIM card lock are active. Long Press  and cancel Offline mode, power off, then restart handset.

## Optional Services

Use these SoftBank Optional Services:

### Optional Services

Service	Description
Call Forwarding	Divert all/all unanswered calls to a preset number
Voicemail	Divert all/unanswered calls to Voicemail Center; access messages via handset/touchtone phones
Call Waiting <sup>1</sup>	Answer calls or open another line during a call
Group Calling <sup>1</sup>	Switch between open lines/connect multiple lines
Caller ID	Show or hide your number when placing calls
Call Barring	Restrict incoming/outgoing calls by conditions

<sup>1</sup> A separate contract is required.

## Initiating Call Forwarding

1

In Home Screen, **MENU** → **Settings** → **Call settings**



Call settings opens.

2

**Voicemail/divert**



Voicemail/divert menu opens.

3

**Settings/stop**



Divert menu opens.

4

**Always** or **No answer** → Enter number



For **No answer**, tap **Wait time** and select ring time.

5

**OK**

Call Forwarding activates.

**+** Canceling Call Forwarding

In Divert menu, **Stop call forward** → **Yes**

## Initiating Voicemail

1

In Home Screen, **MENU** → **Settings** → **Call settings**



Call settings opens.

2

**Voicemail/divert**

Voicemail/divert menu opens.

3

**Settings/stop**

Divert menu opens.

4

**Always** or **No answer** → **Voicemail**



For **No answer**, tap **Wait time** and select ring time.

5

**OK**

Voicemail activates.

## + Voicemail Operations

### Playing Voicemail Messages

When a new message is recorded,  appears on Status Bar. To play messages, follow these steps:

In Voicemail/divert menu, **Play voicemail** → Follow voice guidance

### Canceling Voicemail

In Divert menu, **Stop call forward** → **Yes**

### Missed Call Notification

Activate this function for records of calls missed when handset is off/out-of-range. Activate Voicemail then follow these steps:

In Call settings, **Missed calls** → **Settings** → **Call** → Follow voice guidance

### Setting Handset Response to Missed Calls

In Call settings, **Missed calls** → **Sounds & alerts** → Set

- Set Missed calls sound, Vibration pattern, Incoming calls lamp and Ring duration.

## Activating Call Waiting

A separate contract is required.

1


In Home Screen, **MENU** → **Settings** → **Call settings**



 Call settings opens.

2

**Other service settings**

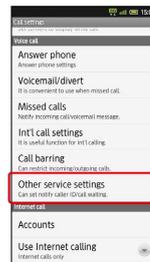

 Other service settings opens.

3

**Call waiting** (  )



 Call waiting activates.

- During a call, a tone sounds for incoming calls; drag  to right to answer.

## + Canceling Call Waiting

In Other call settings, **Call waiting** (  )

## Using Group Calling

A separate contract is required.

1

During a call, **MENU** → **Add Call**



2

Enter number → **Call**

3


When call connects, **MENU** → **More** → **Merge calls**

🚩 All lines connect to each other.

## Using Caller ID

1

In Home Screen, **MENU** → **Settings** → **Call settings**

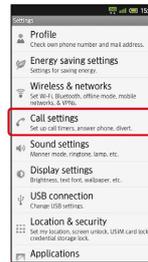

🚩 Call settings opens.

2

**Other service settings**

🚩 Other service settings opens.

3

**Notify caller ID** → **Network default** , **Hide number** or **Show number**



🚩 Caller ID activates.

## Using Call Barring

Restrict outgoing calls or reject calls.

- Center Access Code (Network Password) is required to set incoming/outgoing call restrictions.
- Incoming/outgoing call restriction settings will be locked if incorrect Center Access Code (Network Password) is entered three times consecutively during the setting. To resolve, the code must be changed. For details, contact SoftBank Customer Support, [General Information](#).
- If you have previously changed Network Password on a SoftBank handset, enter the latest code to set incoming/outgoing call restrictions.
- A call barred message appears if call is attempted with outgoing call restriction active. It may take longer to appear in some areas.

1

In Home Screen, **MENU** → **Settings** → **Call settings**



Call settings opens.

2


**Call barring**



Call barring menu opens.

3

**Bar outgoing** or **Bar incoming calls** → Tap option

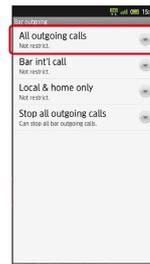

- "All outgoing calls" restricts all non-emergency calls; "Bar int'l call" restricts all international calls; "Local & home only" restricts all international calls except to Japan.
- "Restrict all incoming" rejects all calls, and "Bar if abroad" rejects calls while outside Japan.
- This also restricts outgoing/incoming SMS messages.

4

Enter Center Access Code (Network Password) → **OK**

Restriction is set.

## + Additional Operations

### Canceling All Outgoing Call Restrictions

In Call barring menu, **Bar outgoing** → **Stop all outgoing calls** → Enter Center Access Code → **OK**

### Canceling All Incoming Call Restrictions

In Call barring menu, **Bar incoming calls** → **Stop All incoming calls** → Enter Center Access Code → **OK**

### Limiting Calls to Numbers Saved in Address Book

In Call barring menu, **Restrict destinations** → Enter Handset Code → **OK** → **Restrict address book**

### Limiting Calls to Numbers in Call Permitted List

In Call barring menu, **Restrict destinations** → Enter Handset Code → **OK** → **Specified phone number** → **Switch on/off** (  ) → **Call permitted list** → **<Empty>** → Enter number → **OK**

### Reject Calls from Unsaved Numbers

In Call barring menu, **Reject call** → **Not registered numbers** (  )

### Reject Calls from Specified Numbers

In Call barring menu, **Reject call** → **Specified numbers** → **Switch on/off** (  ) → **Reject numbers list** → **<Empty>** → Enter number → **OK**

### Reject Calls with No/Undisplayable Caller ID or from Payphones

In Call barring menu, **Reject call** → **Number not sent** , **Payphone** or **Unavailable** (  )

## Using Address Book

Save contacts including names, phone numbers, mail addresses, etc.

### Adding Contacts

1

In Home Screen,  → In Launcher (Basic functions),  (Address Book)



 Address Book opens.

· If confirmation appears, follow onscreen instructions.

2

 → **Add new entry**



 Add contact window opens.

· If account selection window opens, tap an account to proceed.

3

Tap item → **Complete entry**



· Tap **Next** to move to other items. (Tap **Done** after mail address entry.)

4

Save → Yes



Contact is saved.

### ! Back Up Important Information

If handset is left with no battery or an exhausted one, contacts may be altered/lost; handset damage may also affect information recovery. SoftBank is not liable for any resulting damages. Keep separate copies of contacts, etc.

## Dialing via Address Book

1

In Home Screen, → In Launcher (Basic functions), (Address Book)



Address Book opens.

· If confirmation appears, follow onscreen instructions.

2

Tap tab (hiragana row, alphabet or ETC) for first character in "Read last" → Tap contact



Contact opens.

3



Handset dials the number.



## Messaging & Browser

Mail Types.....	50
Sending S! Mail/SMS.....	50
Receiving & Replying S! Mail/SMS.....	52
Handling S! Mail/SMS.....	53
Creating/Sending Gmail.....	54
Opening Received Gmail.....	55
Email Settings.....	56
Creating/Sending Email.....	56
Opening Received Email.....	57
Browsing the Internet.....	58

## Mail Types

### S! Mail

Exchange messages with S! Mail-compatible SoftBank handsets and e-mail compatible devices (other mobiles, PCs, etc.) beyond SMS character entry limit; attach media files, etc.

### SMS

Exchange up to 160 alphanumeric characters with SoftBank handsets.

### Gmail

Google webmail service; synchronize Gmail between handset and Google server automatically.

### Email

Exchange Email (POP3/IMAP4) messages on handset.

- Set up accounts to use Email.
- Upon Email message retrieval/transmission, accounts are synchronized between handset and source mail server; messages are also accessible from PCs.

## Sending S! Mail/SMS

### Sending S! Mail

Follow these steps to send S! Mail to a number/address saved in Address Book:

1

In Home Screen,  In Launcher (Basic functions),  (Mail)



 Folder list opens.

2


Create



 S! Mail Composition window opens.

3

 Address Book

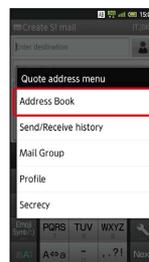

 Address Book opens.

4

Tap tab (hiragana row, alphabet or ETC) for first character in "Read last"  Tap contact

 Contact opens.

5

Tap mail address (or number)



6

Enter subject → Next → Enter message

7

Send



! Mail is sent.

- Failed S! Mail messages are saved in Unsent Folder, with up to two delivery attempts.

+ Saving without Sending

In S! Mail Composition window, MENU → Save → Save to unsent box → Save as New

Sending SMS

Follow these steps to send SMS via sent/received mail records:

1

In Home Screen, → In Launcher (Basic functions), (Mail)



Folder list opens.

2

Create → SMS



SMS Composition window opens.

3

Send/Receive history

4

Send history or Receive history → Tap number

5

Enter message → Send

Message is sent.

- Failed SMS messages are saved in Unsent Folder, with up to two delivery attempts.

+ Saving without Sending

In SMS Composition window, Save

## Receiving & Replying S! Mail/SMS

Handset receives S! Mail/SMS messages automatically; set message retrieval to manual or retrieve Server Mail as needed.

### Opening New Messages

1

When message arrives, ringtone sounds and  appears on Status Bar



 appears in Unlock window. Tap , then cancel Sleep mode; message list (Inbox) appears. Skip ahead to [3](#).

2


Tap Status Bar  Tap message notification



 Message list (Inbox) appears.

3

Tap message

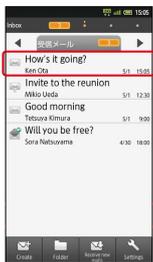

 Message window opens.

### Unread Message Notification

Unread message count (  ) appears above application icon.

### Retrieving Complete Messages

In message window, 

· Tap  to select item to retrieve.

### Important Message Retrieval Notes

#### Retrieval System

By default, complete message including attachments is retrieved; transmission fees apply depending on subscribed price plan.

#### Retrieval Outside Japan

Message retrieval outside Japan may incur high charges.

## Replying to Messages

To reply from message window, skip ahead to **3**.

**1**

In Home Screen,  In Launcher (Basic functions),  (Mail)



 Folder list opens.

**2**

Tap folder in Inbox  Tap message

 Message window opens.

**3**

Reply or Reply to all



**4**

Enter message  Send

 Message is sent.

## Handling S! Mail/SMS

### Opening Messages

Follow these steps to open received messages:

**1**

In Home Screen,  In Launcher (Basic functions),  (Mail)



 Folder list opens.

**2**

Tap folder in Inbox




 Message list appears.

· Flick left/right in message list to switch folders.

**3**

Tap message

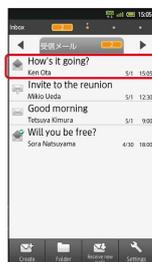

 Message window opens.

· Tap  or  to open other messages (higher or lower in message list).

## Creating/Sending Gmail

Use Google webmail service. Sign in to a Google Account beforehand.

### Creating/Sending Messages

1

In Home Screen,  In Launcher (Basic functions),  (Gmail)




 Inbox opens.

- If confirmation appears, follow onscreen instructions.

2

  Compose

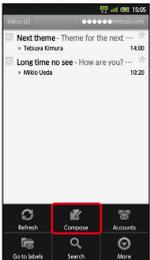

 Mail Composition window opens.

3

Complete message  



 Message is sent.

## + Gmail Composition Operations

### Adding Cc/Bcc Recipients

In Mail Composition window,   Add Cc/Bcc   
Add recipient

### Attaching Files

In Mail Composition window,   Attach  Select file

- If confirmation appears, follow onscreen instructions.

### Saving without Sending

After entering recipient, subject or message text, tap 

- Message is saved to Drafts.

## ! Important Gmail Usage Note

Gmail messages are not received if handset is set to reject messages sent from PCs.

# Opening Received Gmail

Gmail groups all related messages by subject. (Conversation view)

## Opening New Messages

1

When message arrives, ringtone sounds and  appears on Status Bar



2


Tap Status Bar  Tap message notification



 Inbox opens.

3

Tap message

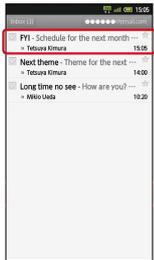

 Message window opens.

## Opening Messages

1


In Home Screen,   In Launcher (Basic functions),  (Gmail)



 Inbox opens.

2

Tap conversation (subject)

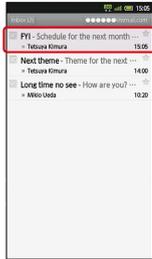

 Message window opens.

### + Replying to Messages

In message window,   Complete message  

## Email Settings

### Mail Account Setup

Confirm user name (user ID), password, server name, etc. beforehand.

1

In Home Screen,  → In Launcher (Communication),  (Email)



 Account setup menu opens (initial startup).

2

Enter mail address and password → **Next**



· For some mail addresses, incoming/outgoing server settings may need manual configuration; if so, complete setup manually. (Alternatively, for manual setup, tap **Manual setup** and proceed.)

3

Enter account name/sender name → **Done**

 Setup is complete.

· Sender name appears on outgoing messages.

## Creating/Sending Email

### Creating/Sending Messages

1

In Home Screen,  → In Launcher (Communication),  (Email)




 Inbox opens.

· For multiple accounts, Email window opens.

2

**MENU** → **Compose**

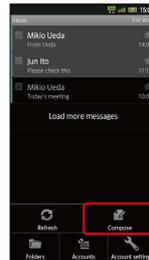

 Mail Composition window opens.

3

Complete message → **Send**



 Message is sent.

## Opening Received Email

### Opening New Messages

1

When message arrives, ringtone sounds and  appears on Status Bar



2


Tap Status Bar  Tap message notification



 Inbox opens.

3

Tap message

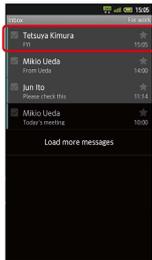

 Message window opens.

### Opening Messages

1

In Home Screen,   In Launcher (Communication),  (Email)



 Inbox opens.

2

Tap message

 Message window opens.

## Browsing the Internet

View Internet sites via Browser.

### Using Browser

1

In Home Screen,   In Launcher (Basic functions),  (Browser)



 Handset connects to the Internet.

· Flick to scroll pages.

### Opening URLs within Message Text

Internet connection confirmation appears upon tapping URL within message text; tap **Yes** to open linked page in Browser.

### Browser Operations

#### Using History

In a page, **MENU**  **More**  **History**  **History**   
Tap item  Tap record

#### Opening Frequently Visited Sites

In a page, **MENU**  **More**  **History**  **Most visited**  Tap record

#### Entering URLs Directly

In a page, tap URL entry field  Enter URL  

#### Searching for Words/Phrases

In a page, tap URL entry field  Enter word/phrase   
  Tap link

## Saving Bookmarks

1

In Home Screen,   In Launcher (Basic functions),  (Browser)



 Handset connects to the Internet.

2

Open target site  **MENU**  **Bookmarks**



 Bookmarks window opens.

3

**Add**  Check/edit title/URL  **OK**



 Current site is saved as a bookmark.

### Bookmarks Operations

#### Opening Bookmarks

In a page, **MENU**  **Bookmarks**  Tap bookmark

#### Deleting Bookmarks

In a page, **MENU**  **Bookmarks**  Long Touch bookmark  **Delete bookmark**  **OK**

## Opening Additional Windows

Open another page in a new window and switch between windows.

1

In Home Screen,   In Launcher (Basic functions),  (Browser)



 Handset connects to the Internet.

2

MENU  New window



 Current page opens in another window.

## SSL & TLS

Secure Sockets Layer (SSL) and Transport Layer Security (TLS) are encryption protocols that secure Internet transmissions of important/sensitive information such as credit card numbers and corporate secrets, providing protection against online threats (eavesdropping, falsification, impersonation, etc.). Handset is preloaded with digital certificates issued by certificate authorities.

## Window Operations

### Switching Windows

In a page, MENU  Windows  Tap window

### Closing Windows

In a page, MENU  Windows  Tap 

## Disclaimer

When a security notice appears upon opening an Internet page, subscribers must decide for themselves whether or not to open the page. Opening secure pages constitutes agreement to the terms of SSL/TLS usage. SoftBank, SHARP Corporation, VeriSign Japan, Cybertrust, Entrust Japan, GMO GlobalSign, RSA Security, SECOM Trust Systems and Comodo Japan cannot be held liable for any damages associated with the use of SSL/TLS.



## Camera

Photo Camera & Video Camera.....	62
Capturing 3D Images.....	64

## Photo Camera & Video Camera

### Capturing Photos

Capture JPEG images.

1

In Home Screen,  → In Launcher (Basic functions),  (Camera)



 Photo Viewfinder appears.

- If confirmation appears, follow onscreen instructions.

2

Frame subject on Display



- For people, focus automatically locks on detected face. (Face AF)

3

 or 

 Shutter clicks; photo is saved.

### + Photo Viewfinder Operations

#### Adjusting Brightness

In Photo Viewfinder, swipe vertically for Brightness Scale

#### Adjusting Zoom

In Photo Viewfinder, swipe horizontally for Zoom Slider

#### Locking Focus

In Photo Viewfinder, tap focus lock target

- Camera continuously focuses on moving subjects.
- To release shutter, tap the subject again.

#### Opening Captured Photo

After photo capture, tap preview thumbnail

- Press **MENU** to send captured photo via mail or set it as Wallpaper.

#### Selecting Mobile Light Option

In Photo Viewfinder, **MENU** → **Mobile light** → Tap option

- Do not shine Mobile Light in eyes; may damage eyesight.

#### Changing Image Size

In Photo Viewfinder, **MENU** → **Picture Size** → Tap size

#### Changing Scene Setting

In Photo Viewfinder, **MENU** → **Scene** → Tap scene

#### Using Self-timer

In Photo Viewfinder, **MENU** → **Self-timer** → Tap time

- Press  or  ; shutter is released after specified time elapses.

#### Switching between Internal Camera and External Camera

In Photo Viewfinder, **MENU** → **Switch in/out camera**

#### Disabling Automatic Addition of Location Information to Photos

When handset GPS function is active, Location Information is added to captured photos automatically. (Location Information is retained even after uploading photos to the Internet.) To prevent this, follow these steps:

In Photo Viewfinder, **MENU** → **Save settings** → **Location information** → **Automatic addition** → **OFF**

## Opening Help

In Photo Viewfinder, **MENU** → **Help**

## Recording Video

Record MPEG-4 video.

1


In Home Screen,  → In Launcher (Camera),  (Video Camera)



 Video Viewfinder appears.

2

Frame subject on Display  or 

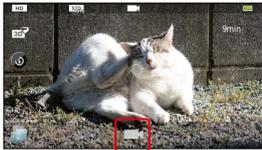

 Recording starts after a tone.

- For people, focus automatically locks on detected face. (Face AF)

3

 or  to stop

 Recording stops; video is saved.

## + Video Viewfinder Operations

### Adjusting Brightness

In Video Viewfinder, swipe vertically for Brightness Scale

### Adjusting Zoom

In Video Viewfinder, swipe horizontally for Zoom Slider

- Zoom is not available for HD videos.

### Locking Focus

In Video Viewfinder, tap focus lock target

- Camera continuously focuses on moving subjects.
- Camera uses color to track subjects; may not correctly track faintly colored subjects or ones similar to background color.

### Playing Recorded Video

After recording, tap preview thumbnail  Tap video

- Before preview, press **MENU** to send recorded video via mail or create 3D video.

### Selecting Mobile Light Option

In Video Viewfinder, 

- Tap  to toggle light on () / off () .
- Do not shine Mobile Light in eyes; may damage eyesight.

### Changing Recording Size

In Video Viewfinder, **MENU** → **Picture Size** → Tap size

### Changing Scene Setting

In Video Viewfinder, **MENU** → **Scene** → Tap scene

### Using Self-timer

In Video Viewfinder, **MENU** → **Self-timer** → Tap time

- Press  or  ; recording starts after specified time elapses.

### Enabling/Disabling Microphone

In Video Viewfinder, **MENU** → **Settings** → **Mic Setting** → **ON** or **OFF**

### Switching between Internal Camera and External Camera

In Video Viewfinder, **MENU** → **In/Out camera**

### Opening Help

In Video Viewfinder, **MENU** → **Help**

## ! Important Mobile Camera Usage Note

Mind your manners when using Camera.

## Capturing 3D Images

### Capturing 3D Photos

Capture 3D photos via 3D Viewfinder.

- Hold handset in landscape when capturing 3D photos.

1

In Home Screen,  → In Launcher (Basic functions),  (Camera)



 Photo Viewfinder appears.

- If confirmation appears, follow onscreen instructions.

2



 3D Viewfinder appears.

3

Frame subject on Display   or 

 


 Shutter clicks; photo is saved.

 3D Judge!

In 2D Viewfinder,  turns light blue and "TRY!!" appears for subjects likely to produce highly noticeable 3D effects.

 Disabling 3D Judge!

In Photo Viewfinder,  →  → 

## Recording 3D Video

Record 3D video via 3D Viewfinder.

- Hold handset in landscape when recording 3D video.

1

In Home Screen,  → In Launcher (Camera),  (Video Camera)



 Video Viewfinder appears.

2



 3D Viewfinder appears.

3

Frame subject on Display →  or 



 Recording starts after a tone.

4

 or  to stop

 Recording stops; video is saved.



## Music & Images

Music.....	68
Still Images & Video.....	68

## Music

### Playing Music

1

In Home Screen,  → In Launcher (Books/Videos),  (MusicPlayer)



 Library opens.

2

Tap file



 File plays.

## Still Images & Video

View still images and video; convert 2D images to 3D or use Slideshow.

### Opening/Playing Files

Supported File Formats:

Image	File Format
Still Images	JPEG, PNG, GIF, BMP, WBMP, MPO
Video	3GPP, 3GPP2, MP4, WMV, ASF, PIFF, WebM

1

In Home Screen,  → In Launcher (Tools),  (Gallery)



 Albums appear.

2

Tap album (e.g., 100SHARP)



3

Tap file

 File opens/plays.

### + Playback Operations

#### Slideshow

In still image (2D), 

· Tap image to stop.

#### Playing Video in 3D

During playback,  → 

## Connectivity

Connecting to Wi-Fi.....	70
Using Bluetooth®.....	73

## Connecting to Wi-Fi

Use household Wi-Fi networks, etc. to connect to the Internet.

### Registering Private Access Points

Follow these steps to save AOSS™-compatible access points:

- Configure access point settings beforehand.

1

In Home Screen, **MENU** → **Settings** → **Wireless & networks**



2

Wi-Fi settings



Wi-Fi settings opens.

- If disabled (  ), tap **Wi-Fi** to enable it (  ).

3


Easy Wi-Fi registration



Easy Wi-Fi registration opens.

4

AOSS method → Yes

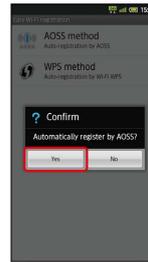

Search starts.

- Follow onscreen instructions.
- Connection is established automatically thereafter.

## Connecting Selected Access Points

1

In Home Screen, **MENU** → **Settings** → **Wireless & networks**



2

**Wi-Fi settings**

Wi-Fi settings opens.

· If disabled ( ), tap **Wi-Fi** to enable it ( ).

3

Tap access point



4

Tap Password field → Enter password



5

**Connect**

Connection is established.

· May omit password entry for some access points.

## + Wi-Fi Operations

### Registering WPS-compatible Access Points

In Wi-Fi settings, **Easy Wi-Fi registration** → **WPS method** → **Push-button method** or **PIN code method** → Follow onscreen instructions

### Connecting Access Points Manually

In Wi-Fi settings, **Add Wi-Fi network** → Tap Network SSID field → Enter Network SSID → Tap → Tap option → Tap Password field → Enter password → **Save**

· Omit password entry if security protocol is Open.

### Dismissing Access Points

In Wi-Fi settings, tap connected access point → **Forget**

### Disconnecting Access Points

In Wi-Fi settings, Long Touch access point → **Forget network** → **Yes**

## ! Important Easy Wi-Fi Registration Usage Note

Easy Wi-Fi registration may connect access points protected by different security protocols. Select an access point for the selected security protocol.

## Using Public Wireless LAN Services

Follow these steps to connect to BB mobilepoint:

- To use public wireless LAN services, subscription with the corresponding ISP, etc. is required.

1

In Home Screen, **MENU** → **Settings** → **Wireless & networks**



2

### Wi-Fi settings

Wi-Fi settings opens.

- If disabled ( , tap **Wi-Fi** to enable it (  ).

3

### Auto login settings



Public wireless LAN account settings opens.

4

### BB MOBILE POINT



BB MOBILE POINT opens.

5

**ON** or **OFF**

6

Tap Login ID field → Enter login ID

7

Tap Password field → Enter password → **Done**



8

**OK** → **OK**



When Auto-login is set to **ON**, handset connects to BB mobilepoint automatically in the service range.

## + Public Wireless LAN Operations

### Disconnecting Access Points

In Wi-Fi settings, Long Touch access point → **Forget network** → **Yes**

### Disabling Service Area Definition Automatic Updates

By default, service area definition is updated automatically upon connecting to Wi-Fi. Follow these steps to disable automatic updates:

In Public wireless LAN account settings, **MENU** → **Service area definition** → **OFF**

## ? Troubleshooting

Q. Cannot detect access points

A. There may be multiple access points nearby. Handset may not detect access points correctly if current Wi-Fi channel is used by other access points at the same time.

## Public Wireless LAN Usage Note

Connection to some public wireless LAN services may not be possible. Additional charges may apply depending on service area.

## Using Bluetooth®

Wirelessly transfer files/data between handset and compatible devices (handsfree devices, etc.).

### Activating Bluetooth®

1

In Home Screen, **MENU** → **Settings** → **Wireless & networks**



2

### Bluetooth



 Bluetooth® activates.

· Tap **Bluetooth** to toggle on (  )/off (  ).

## Device Search & Pairing

Search for nearby Bluetooth® devices and pair them with handset; transfer files to/from paired devices.

- Make devices to be paired discoverable first.

1

In Home Screen, **MENU** → **Settings** → **Wireless & networks**



2

**Bluetooth settings**



 Bluetooth settings opens; found devices are listed.

- If target device is not found, tap **Scan for devices** .

3

Tap device → Follow onscreen instructions to complete pairing

 Pairing completes; handset connects to handsfree devices, etc. automatically.

- Pairing procedure varies by device.

## Connecting Paired Handsfree Devices, Etc.

1

In Home Screen, **MENU** → **Settings** → **Wireless & networks**



2

**Bluetooth settings**



 Bluetooth settings opens.

3

Tap device

 The device is connected.

## Accepting Connection Requests

Handset automatically accepts connection requests from paired devices. For unpaired devices, enable Discoverable () first; when connection request arrives, follow onscreen prompt.

## + Bluetooth® Connection Operations

### Unpairing Devices

In Bluetooth settings, Long Touch device → Unpair (or Disconnect & unpair )

### Disconnecting Handsfree Devices, Etc.

In Bluetooth settings, tap device → OK

### Allowing Other Devices to Detect Handset

In Bluetooth settings, Discoverable (  )

· Discoverable is effective for 120 seconds, then turns off automatically.

### Accepting Connection Requests while Connected to a Device

In Bluetooth settings, Detailed Bluetooth Settings → Multiple connect standby → ON

### Receiving Files (e.g., Address Book via All File Transfer)

When file reception request arrives,  appears on Status Bar. Follow these steps to receive files:

In Home Screen, etc., tap Status Bar → Tap notification → Accept → After receiving files, tap Status Bar → Tap notification → Tap file (.vcf) → Register of data → Enter Handset Code → OK → Tap option

· If confirmation appears, follow onscreen instructions.  
· Received files are saved to SD Card; open them from Contents Manager.

### Sending Single Files (e.g., Address Book)

In Home Screen,  → In Launcher (Basic functions), Address Book → Long Touch contact → Send by Bluetooth → Yes → Tap device

· If an image is set for selected contact, image transfer confirmation appears.

### Sending Selected Files (e.g., Address Book)

In Home Screen,  → In Launcher (Basic functions), Address Book → MENU → Send by Bluetooth → Select and send → Tap contacts (  ) → Send → Yes → Tap device

· If a contact with image is included, image transfer confirmation appears.

### Sending All Files (e.g., Address Book)

In Home Screen,  → In Launcher (Basic functions), Address Book → MENU → Send by Bluetooth → Send all items → Yes → Enter Handset Code → OK → Tap device

· If a contact with image is included, image transfer confirmation appears.

## ? Troubleshooting

- Q. Cannot use Bluetooth®
- A. Offline mode may be active. Cancel it to use Bluetooth® functions.

## ! Important Bluetooth® Usage Notes

### Connection

Bluetooth® connection may not be possible with some Bluetooth® devices. Noise may interfere with wireless or handsfree conversations.

### File Transfer

Files may not appear correctly on recipient devices.



## Global Services

Global Roaming.....	78
Calling from Outside Japan.....	79

## Global Roaming

006SH is Global Roaming Service eligible. Use the same handset number outside Japan.

### Switching Network Services

Handset connects to 3G Network automatically by default. Follow these steps to change setting according to Network service provided by target network operator outside Japan:

- Use default Network service setting in Japan or other 3G Network areas.

1

In Home Screen, **MENU** → **Settings** → **Wireless & networks**



2

**Mobile networks** → **3G/GSM settings**



 3G/GSM settings opens.

3

**Manual** → **3G/GSM** , **3G** or **GSM**



 Network service is set.

- To switch Network services automatically, tap **Auto** .

## Selecting a Network Operator

Handset connects to an appropriate network operator automatically by default. Follow these steps to select a network operator manually:

1

In Home Screen, **MENU** → **Settings** → **Wireless & networks**



2

**Mobile networks** → **Network operators**



3

Tap operator

 Network operator is set.

- Tap **Select automatically** to set an appropriate network operator automatically.
- Tap **Search networks** to search for all available network operators.

## Calling from Outside Japan

See SoftBank Mobile Website for details:

[http://mb.softbank.jp/en/global\\_services/](http://mb.softbank.jp/en/global_services/)

Access roaming area/rate information or print it out to carry with you while traveling abroad.

### Calling Japan

1

In Home Screen,  → In Launcher (Basic functions), , (Phone)



 Onscreen dialpad appears.

· If missed call count (  ) appears above  , Call History opens. Press  to return to Home Screen and start over.

2

Use onscreen dialpad to enter number →  Call

 Roaming assistant appears.

· Do not add + before the number.

3

Japan number



 Handset dials the number.

## Calling Landlines & Mobiles within the Same Country

1

In Home Screen,  → In Launcher (Basic functions), , (Phone)



 Onscreen dialpad appears.

· If missed call count (  ) appears above  , Call History opens. Press  to return to Home Screen and start over.

2

Use onscreen dialpad to enter number →  Call

 Roaming assistant appears.

· Do not add + before the number.

3

Stay country number



 Handset dials the number.

## Calling Countries except Japan

1

In Home Screen,  → In Launcher (Basic functions),  (Phone)



 Onscreen dialpad appears.

· If missed call count (  ) appears above  , Call History opens. Press  to return to Home Screen and start over.

2

Use onscreen dialpad to enter number  

 Roaming assistant appears.

· Do not add + before the number.

3

Other country number



 Country code list appears.

4

Tap country



 
 Handset dials the number.

## Calling SoftBank Handsets

Always select  .


## International Call Operations

### Changing Country Codes

In Home Screen,  →  →   
 →  →  →   
 →  →  → 

· Tap  to enter country name and code directly.

### Deleting Country Codes

 In Home Screen,  →  →   
 →  →  →   
 → 

### Enabling/Disabling Abroad Assistant

In Home Screen,  →  →   
 →  → 

· Tap  to toggle Enable (  ) and Disable (  ).

## Settings

Wireless & Networks.....	82
Sound Settings.....	84
Applications.....	85
Accounts & Sync.....	86
Privacy.....	87
Language & Keyboard.....	87
Date & Time.....	89
About Phone.....	89

## Wireless & Networks

### Wireless & Network Settings

#### + Offline Mode

##### Disabling/Enabling All Wireless Connections

In Home Screen, **MENU** → **Settings** → **Wireless & networks** → **Offline mode**

- Tap **Offline mode** to toggle on (  )/off (  ).

#### + Wi-Fi

##### Enabling/Disabling Wi-Fi

In Home Screen, **MENU** → **Settings** → **Wireless & networks** → **Wi-Fi**

- Tap **Wi-Fi** to toggle on (  )/off (  ).

#### + Wi-Fi Settings

##### Enabling/Disabling Available Network

In Home Screen, **MENU** → **Settings** → **Wireless & networks** → **Wi-Fi settings** → **Network notification**

- Available when Wi-Fi is on (  ).
- Tap **Network notification** to toggle on (  )/off (  ).

##### Selecting a Wi-Fi Sleep Option

In Home Screen, **MENU** → **Settings** → **Wireless & networks** → **Wi-Fi settings** → **Wi-Fi sleep policy** → Tap option

##### Enabling/Disabling Auto-login in Public WLAN Service Areas

In Home Screen, **MENU** → **Settings** → **Wireless & networks** → **Wi-Fi settings** → **Auto login settings**  
 → Tap service → Tap Auto-login **ON** or **OFF**  
 → Tap Login ID field → Enter ID → **Next** → Enter password → **Done** → **OK**

- Available when Wi-Fi is on (  ).
- Registration procedure varies by ISP/contract terms.
- If confirmation appears, follow onscreen instructions.

#### + Home Network Settings

##### Enabling/Disabling DLNA Device Media File Sharing

In Home Screen, **MENU** → **Settings** → **Wireless & networks** → **Home network settings** → **Home network server**

- Set up **Wi-Fi for home NW server** beforehand.
- Tap **Home network server** to toggle on (  )/off (  ).
- See TV user guide to learn how to connect handset to DLNA-compatible TV.

##### Setting up a Network (Wi-Fi Access Point) for DLNA Service

In Home Screen, **MENU** → **Settings** → **Wireless & networks** → **Home network settings** → **Wi-Fi for home NW server** → Tap network

- Available when Home network server is off (  ).
- If confirmation appears, follow onscreen instructions.

##### Saving a Name that Appears on DLNA Devices

In Home Screen, **MENU** → **Settings** → **Wireless & networks** → **Home network settings** → **Home network server name** → Tap entry field → Enter name → **Done** → **OK**

#### + Bluetooth

##### Activating/Canceling Bluetooth®

In Home Screen, **MENU** → **Settings** → **Wireless & networks** → **Bluetooth**

- Tap **Bluetooth** to toggle on (  )/off (  ).

#### + Bluetooth Settings

##### Connecting to Bluetooth® Devices by Service

In Home Screen, **MENU** → **Settings** → **Wireless & networks** → **Bluetooth settings** → **Long Touch device** → **Options...** → Tap item → **Connect**

- Available for compatible devices only.

##### Changing Handset Name that Appears on Other Devices

In Home Screen, **MENU** → **Settings** → **Wireless & networks** → **Bluetooth settings** → **Device name** → Enter name → **OK**

- Pictograms and line breaks are not supported.

### Selecting whether to Use Handsfree Device or Operated Device as Means of Conversation

In Home Screen, **MENU** → **Settings** → **Wireless & networks** → **Bluetooth settings** → **Detailed Bluetooth Settings** → **Handsfree setting** → **Tap option**

## + VPN Settings

### Adding Virtual Private Networks (VPNs)

In Home Screen, **MENU** → **Settings** → **Wireless & networks** → **VPN settings** → **Add VPN** → **Tap item** → **Complete setting**

- Tap a VPN to connect/disconnect it. Long Touch one to edit/delete it.

## + Mobile Networks

### Enabling/Disabling Mobile Data Transmissions

In Home Screen, **MENU** → **Settings** → **Wireless & networks** → **Mobile networks** → **Data transmission**

- Tap **Data transmission** to toggle on (  )/off (  ).

### Enabling/Disabling Data Roaming

In Home Screen, **MENU** → **Settings** → **Wireless & networks** → **Mobile networks** → **Data roaming**

- Tap **Data roaming** to toggle on (  )/off (  ).
- If confirmation appears, follow onscreen instructions.

### Adding Access Points

In Home Screen, **MENU** → **Settings** → **Wireless & networks** → **Mobile networks** → **Access Point Names** → **MENU** → **New APN** → **Tap item** → **Complete setting** → **Done** → **OK** → **MENU** → **Save**

### Restoring Default Settings

In Home Screen, **MENU** → **Settings** → **Wireless & networks** → **Mobile networks** → **Access Point Names** → **MENU** → **Reset to default**

### Switching between 3G and GSM Networks Automatically

In Home Screen, **MENU** → **Settings** → **Wireless & networks** → **Mobile networks** → **3G/GSM settings** → **Auto**

### Switching between 3G and GSM Networks Manually

In Home Screen, **MENU** → **Settings** → **Wireless & networks** → **Mobile networks** → **3G/GSM settings** → **Manual** → **Tap Network**

### Selecting a Network Operator

In Home Screen, **MENU** → **Settings** → **Wireless & networks** → **Mobile networks** → **Network operators** → **Select automatically** (or tap operator directly)

- Tap **Select automatically** to set an appropriate network operator automatically.
- Tap **Search networks** to search for network operators again.

## Sound Settings

### Sound Settings

#### + Manner Mode

##### Activating Manner Mode

In Home Screen, **MENU** → **Settings** → **Sound settings**  
 → **Manner mode** → Tap option

#### + Phone Vibe

##### Enabling/Disabling Vibration

In Home Screen, **MENU** → **Settings** → **Sound settings**  
 → **Phone vibe**

· Tap **Phone vibe** to toggle on (  )/off (  ).

#### + Volume

##### Setting Handset Volume

In Home Screen, **MENU** → **Settings** → **Sound settings**  
 → **Volume** → Drag slider → **OK**

· To apply ringtone volume level to notification sound, tap **Use incoming call volume for notifications** .

#### + Earphone Type

##### Setting Earphone Type

In Home Screen, **MENU** → **Settings** → **Sound settings**  
 → **Earphone type** → Tap option → **OK**

#### + Melody

##### Setting Incoming Ringtone

In Home Screen, **MENU** → **Settings** → **Sound settings**  
 → **Melody** → Tap tone/file → **OK**

#### + Vibrator Pattern

##### Changing Vibration Pattern

In Home Screen, **MENU** → **Settings** → **Sound settings**  
 → **Vibrator Pattern** → Tap pattern → **OK**

#### + Incoming Lamp

##### Setting Incoming Illumination

In Home Screen, **MENU** → **Settings** → **Sound settings**  
 → **Incoming lamp** → **Blinking pattern** or **Blinking color** → Tap item → **OK**

#### + Notification Sound

##### Changing Notification Sound

In Home Screen, **MENU** → **Settings** → **Sound settings**  
 → **Notification sound** → Tap tone/file → **OK**

#### + Ring Duration

##### Changing Duration for Notification Sound

In Home Screen, **MENU** → **Settings** → **Sound settings**  
 → **Ring duration** → **Ring time setting** → Enter time  
 → **OK**

· For **Ring single song** , selected tone/file plays until it ends.

#### + Pulse Notification Light

##### Enabling/Disabling Illumination for Notifications

In Home Screen, **MENU** → **Settings** → **Sound settings**  
 → **Pulse notification light**

· Tap **Pulse notification light** to toggle on (  )/off (  ).

· Disable **Pulse notification light** to extend Battery Time.

#### + Audible Touch Tones

##### Enabling/Disabling Onscreen Dialpad Tones

In Home Screen, **MENU** → **Settings** → **Sound settings**  
 → **Audible touch tones**

· Tap **Audible touch tones** to toggle on (  )/off (  ).

· Disable **Audible touch tones** to extend Battery Time.

## + Audible Selection

### Enabling/Disabling Tap Sounds

In Home Screen, **MENU** → **Settings** → **Sound settings** → **Audible selection**

- Tap **Audible selection** to toggle on (  )/off (  ).
- Disable **Audible selection** to extend Battery Time.

## + Screen Lock Sounds

### Enabling/Disabling Lock/Unlock Sounds for Sleep Mode

In Home Screen, **MENU** → **Settings** → **Sound settings** → **Screen lock sounds**

- Tap **Screen lock sounds** to toggle on (  )/off (  ).
- Disable **Screen lock sounds** to extend Battery Time.

## + Haptic Feedback

### Enabling/Disabling Key Press Vibration

In Home Screen, **MENU** → **Settings** → **Sound settings** → **Haptic feedback**

- Tap **Haptic feedback** to toggle on (  )/off (  ).

## Applications

### Application Settings

## + Unknown Sources

### Enabling/Disabling Application Download from Other Sites than Android Market

In Home Screen, **MENU** → **Settings** → **Applications** → **Unknown sources**

- Tap **Unknown sources** to toggle on (  )/off (  ).
- If confirmation appears, follow onscreen instructions.

## + Preferred Install Location

### Setting Save Location

In Home Screen, **MENU** → **Settings** → **Applications** → **Preferred install location** → Tap option

## + File Transfer Mail Software

### Setting Default Mailer for Sending Files

In Home Screen, **MENU** → **Settings** → **Applications** → **File transfer mail software** → **Set the mail software** → Tap item

- Disable **Set the mail software** (  ) to select a mailer upon attaching a file.

## + Home Applications

### Changing Home Screen View

In Home Screen, **MENU** → **Settings** → **Applications** → **Home applications** → Tap option

## + Manage Applications

### Opening Application Properties

In Home Screen, **MENU** → **Settings** → **Applications** → **Manage applications** → Tap application

- Check version/memory usage, uninstall/force-stop application, etc.

## + Running Services

### Opening List of Active Services

In Home Screen, **MENU** → **Settings** → **Applications** →

**Running services**

- To stop active service, tap one then tap **Stop**.
- If confirmation appears, follow onscreen instructions.

## + Storage Use

### Checking Application Storage Status

In Home Screen, **MENU** → **Settings** → **Applications** →

**Storage use**

## + Battery Use

### Checking Battery Status

In Home Screen, **MENU** → **Settings** → **Applications** →

**Battery use**

## + Development

### Enabling/Disabling USB Debugging

In Home Screen, **MENU** → **Settings** → **Applications** →

**Development** → **USB debugging**

- Tap **USB debugging** to toggle on (  )/off (  ).
- If confirmation appears, follow onscreen instructions.

### Enabling/Disabling Sleep Mode while Charging

In Home Screen, **MENU** → **Settings** → **Applications** →

**Development** → **Stay awake**

- Tap **Stay awake** to toggle on (  )/off (  ).

### Enabling/Disabling Mock Locations

In Home Screen, **MENU** → **Settings** → **Applications** →

**Development** → **Allow mock locations**

- Tap **Allow mock locations** to toggle on (  )/off (  ).

## Accounts & Sync

### Account Synchronization Settings

## + Background Data

### Enabling/Disabling Automatic Application Data Transmission in Background

In Home Screen, **MENU** → **Settings** → **Accounts &**

**sync** → **Background data**

- Tap **Background data** to toggle on (  )/off (  ).
- If confirmation appears, follow onscreen instructions.
- When enabled, inactive applications are also ready for automatic data transmission.
- Disable **Background data** to extend Battery Time.

## + Auto-sync

### Setting Automatic Application Sync

In Home Screen, **MENU** → **Settings** → **Accounts &**

**sync** → **Auto-sync**

- Tap **Auto-sync** to toggle on (  )/off (  ).
- Enable **Background data** (  ) first.

## + Add Account

### Adding Accounts

In Home Screen, **MENU** → **Settings** → **Accounts &**

**sync** → **Add account** → Tap item → Follow onscreen instructions

## Privacy

### Resetting Handset

#### + Reset All

##### Deleting All Handset Files

In Home Screen, **MENU** → **Settings** → **Privacy** → **Reset all** → Enter Handset Code → **OK** → Read message → **Reset phone** → **Erase everything**

- To delete all SD Card files simultaneously, tap **Erase microSD** before tapping Reset phone.
- Reset all deletes all handset files including some preinstalled applications irreversibly. SD Card files are also deleted if **Erase microSD** is selected (  ).

## Language & Keyboard

### Language & Keyboard Settings

#### + Select Language

##### Selecting Handset Interface Language

In Home Screen, **MENU** → **Settings** → **Language & keyboard** → **Select language** → Tap option

#### + User Dictionary

##### Saving Words to User Dictionary

In Home Screen, **MENU** → **Settings** → **Language & keyboard** → **User dictionary** → **MENU** → **Add** → Enter word → **OK**

- Tap a saved word to edit/delete it.

#### + Android Keyboard

##### Enabling/Disabling Key Press Vibration

In Home Screen, **MENU** → **Settings** → **Language & keyboard** → **Android keyboard** → **Vibrate on keypress**

- Tap **Vibrate on keypress** to toggle on (  )/off (  ).

##### Enabling/Disabling Key Press Sound

In Home Screen, **MENU** → **Settings** → **Language & keyboard** → **Android keyboard** → **Sound on keypress**

- Tap **Sound on keypress** to toggle on (  )/off (  ).

##### Enabling/Disabling Key Preview

In Home Screen, **MENU** → **Settings** → **Language & keyboard** → **Android keyboard** → **Popup on keypress**

- Tap **Popup on keypress** to toggle on (  )/off (  ).

##### Enabling/Disabling Spelling Correction upon Tapping Letters

In Home Screen, **MENU** → **Settings** → **Language & keyboard** → **Android keyboard** → **Touch to correct words**

- Tap **Touch to correct words** to toggle on (  )/off (  ).

### Enabling/Disabling Auto Capitalization for English Typing

In Home Screen, **MENU** → **Settings** → **Language & keyboard** → **Android keyboard** → **Auto-capitalization**

· Tap **Auto-capitalization** to toggle on (  )/off (  ).

### Showing/Hiding Input Options Key

In Home Screen, **MENU** → **Settings** → **Language & keyboard** → **Android keyboard** → **Show settings key**

→ Tap option

### Enabling/Disabling Voice Input

In Home Screen, **MENU** → **Settings** → **Language & keyboard** → **Android keyboard** → **Voice input**

→ Tap option

· If confirmation appears, follow onscreen instructions.

### Enabling/Disabling Input Language Switching by Sliding on Spacebar

In Home Screen, **MENU** → **Settings** → **Language & keyboard** → **Android keyboard** → **Input languages**

→ Tap language

· Tap language to toggle on (  )/off (  ).

### Enabling/Disabling Word Suggestions

In Home Screen, **MENU** → **Settings** → **Language & keyboard** → **Android keyboard** → **Show suggestions**

· Tap **Show suggestions** to toggle on (  )/off (  ).

## + iWnn IME - SH edition

### Enabling/Disabling Key Press Sound

In Home Screen, **MENU** → **Settings** → **Language & keyboard** → **iWnn IME - SH edition** → **Sound on key press**

· Tap **Sound on key press** to toggle on (  )/off (  ).

### Enabling/Disabling Key Press Vibration

In Home Screen, **MENU** → **Settings** → **Language & keyboard** → **iWnn IME - SH edition** → **Vibrate on key press**

· Tap **Vibrate on keypress** to toggle on (  )/off (  ).

### Enabling/Disabling Key Preview (Flick Input Guidance)

In Home Screen, **MENU** → **Settings** → **Language & keyboard** → **iWnn IME - SH edition** → **Key input guide**

· Tap **Key input guide** to toggle on (  )/off (  ).

### Selecting a Keyboard Skin

In Home Screen, **MENU** → **Settings** → **Language & keyboard** → **iWnn IME - SH edition** → **Keyboard image**

→ Tap option

### Enabling/Disabling Flick Input

In Home Screen, **MENU** → **Settings** → **Language & keyboard** → **iWnn IME - SH edition** → **Flick input**

· Flick Input is to flick key for target character.

· Tap **Flick input** to toggle on (  )/off (  ).

### Adjusting Flick Input Sensitivity

In Home Screen, **MENU** → **Settings** → **Language & keyboard** → **iWnn IME - SH edition** → **Flick sensitivity** → **Drag slider** → **OK**

### Enabling/Disabling Toggle Input while Flick Input is Enabled

In Home Screen, **MENU** → **Settings** → **Language & keyboard** → **iWnn IME - SH edition** → **Toggle input**

· Toggle Input is to toggle characters by tapping keys.

· Tap **Toggle input** to toggle on (  )/off (  ).

### Selecting Automatic Cursor Movement Option

In Home Screen, **MENU** → **Settings** → **Language & keyboard** → **iWnn IME - SH edition** → **Auto cursor move** → Tap option

## Date & Time

### Date & Time Settings

#### + Automatic

##### Setting Date Automatically

In Home Screen, **MENU** → **Settings** → **Date & time** → **Automatic**

· Tap **Automatic** to toggle on (✓)/off (✗).

#### + Set Date

##### Setting Date Manually

In Home Screen, **MENU** → **Settings** → **Date & time** → **Set date** → Enter date → **Set**

· Available when **Automatic** is off (✗).

#### + Select Time Zone

##### Setting Time Zone Manually

In Home Screen, **MENU** → **Settings** → **Date & time** → **Select time zone** → Tap area

· Available when **Automatic** is off (✗).

#### + Set Time

##### Setting Time Manually

In Home Screen, **MENU** → **Settings** → **Date & time** → **Set time** → Enter time → **Set**

· Available when **Automatic** is off (✗).

#### + Use 24-hour Format

##### Enabling/Disabling 24-hour Format

In Home Screen, **MENU** → **Settings** → **Date & time** → **Use 24-hour format**

· Tap **Use 24-hour format** to toggle on (✓)/off (✗).

#### + Select Date Format

##### Changing Date Format

In Home Screen, **MENU** → **Settings** → **Date & time** → **Select date format** → Tap option

## About Phone

### Handset Information

#### + Status

##### Checking Handset Status

In Home Screen, **MENU** → **Settings** → **About phone** → **Status**

#### + Battery Use

##### Checking Battery Status/Usage Time

In Home Screen, **MENU** → **Settings** → **About phone** → **Battery use** → Tap item

· For energy saving items, **Display settings**, etc. appears; tap to open settings menu.

#### + Adjust Touch Panel

##### Calibrating Touch Panel

In Home Screen, **MENU** → **Settings** → **About phone** → **Adjust touch panel** → Follow onscreen instructions

#### + Adjust Sensitivity of Sensor

##### Calibrating Motion & Electromagnetic Sensors

In Home Screen, **MENU** → **Settings** → **About phone** → **Adjust sensitivity of sensor** → **OK** → Follow onscreen instructions (tone sounds when calibration completes) → **OK**

#### + Twin Camera Calibration

##### Calibrating Twin Camera

In Home Screen, **MENU** → **Settings** → **About phone** → **Twin Camera Calibration** → **OK** → **OK** →

Follow onscreen instructions

· Calibration may help reduce discomfort from 3D images shot on handset.

## + Software Update

### Checking for Firmware Updates & Downloading as Required

In Home Screen, **MENU** → **Settings** → **About phone** → **Software update** → **Execute** → Follow onscreen instructions

· See "[Software Update](#)" beforehand.

## + Major Update

### Checking for a New Version of Android Operating System Manually

In Home Screen, **MENU** → **Settings** → **About phone** → **Major Update** → **Confirm update** → Follow onscreen instructions

### Upgrading Android Operating System

Download upgrade data on PC beforehand.

In Home Screen, connect handset to a PC via Micro USB Cable → Tap Status Bar → **Switch USB Connection Mode** → **Fast transfer mode** → **MENU** → **Settings** → **About phone** → **Major Update** → **Start update**

· Available when a new version of Android operating system is released.

### Enabling/Disabling Automatic Update Check

In Home Screen, **MENU** → **Settings** → **About phone** → **Major Update** → **Check for updates**

· Tap **Check for updates** to toggle on (  )/off (  ).

## + Legal Information

### Reading Copyright, Usage Terms, Etc.

In Home Screen, **MENU** → **Settings** → **About phone** → **Legal information** → Tap item

## + Technical Regulations Conformity Certification

### Opening Technical Regulations Conformity Certification Information

Handset complies with requirements as stipulated by the Radio Law and Telecommunications Business Law. Follow these steps to check Technical Regulations Conformity Certification information ( , etc.):

In Home Screen, **MENU** → **Settings** → **About phone** → **Technical Regulations Conformity Certification**

## + Model Number

### Confirming Model Number

In Home Screen, **MENU** → **Settings** → **About phone**

· See below **Model number** .

## + Android Version

### Confirming Android Operating System Version

In Home Screen, **MENU** → **Settings** → **About phone**

· See below **Android version** .

## + Baseband Version

### Confirming Baseband Version

In Home Screen, **MENU** → **Settings** → **About phone**

· See below **Baseband version** .

## + Kernel Version

### Confirming Kernel Version

In Home Screen, **MENU** → **Settings** → **About phone**

· See below **Kernel version** .

## + Build Number

### Confirming Build Number

In Home Screen, **MENU** → **Settings** → **About phone**

· See below **Build number** .

## Appendix

Specifications.....	92
Customer Service.....	93

## Specifications

### Handset

Item	Description
Weight	114 g (139 g with battery) <sup>1</sup>
Continuous Talk Time <sup>2</sup>	370 minutes (3G) <sup>1</sup> 350 minutes (GSM) <sup>1</sup>
Continuous Standby Time <sup>3</sup>	450 hours (3G) <sup>1</sup> 350 hours (GSM) <sup>1</sup>
Continuous One Seg Reception Time <sup>4</sup>	6.5 hours <sup>1</sup>
Charging Time (Power off, charged with AC Charger)	200 minutes <sup>1</sup>
Size (W x H x D)	64 x 130 x 13 mm (without protruding parts) <sup>1</sup>
Maximum Output	0.25 W (3G) 2.0 W (GSM)

1 Approximate value.

2 Continuous Talk Time is an average measured with a new, fully charged battery, in strong signal conditions without moving handset.

3 Continuous Standby Time is an average measured with a new, fully charged battery, without calls or operations, in strong signal conditions without moving handset. The value is calculated with Data transmission disabled. Standby Time may vary with environment (e.g., battery strength, ambient temperature), settings, etc.

4 Continuous One Seg Reception Time is measured with a new, fully charged battery, with AV mode set to Standard, Brightness (Video setting) set to 10, Sound setting and Smooth mode set to OFF, using Headphones with Microphone (sold separately), until battery runs low (10% of capacity).

· Talk Time, Standby Time and One Seg Reception Time when Brightness (Display settings) is set to approximately half of maximum (11 of 21).

· Talk Time/Standby Time/One Seg Reception Time may vary with location, status, settings, etc.

· Display employs precision technology, however, some pixels may remain on/off.

### Battery

Item	Description
Voltage	3.7 V
Battery Type	Lithium-ion
Capacity	1,240 mAh
Size (W x H x D)	44.1 x 59.0 x 4.5 mm (without protruding parts) <sup>1</sup>

1 Approximate value.

## Customer Service

---

For information about SoftBank handsets or services, contact us at the following numbers.

### SoftBank Customer Support

#### General Information

From a SoftBank handset, dial toll free at 157  
From a landline/IP phone, dial toll free at 0800-919-0157

#### Customer Assistance (Repairs/Lost Handsets)

From a SoftBank handset, dial toll free at 113  
From a landline/IP phone, dial toll free at 0800-919-0113  
If you cannot reach a toll free number, use the following number (charges apply) for your service area:  
Hokkaido area, Tohoku area, Hokuriku area, Kanto-Koshinetsu area: 022-380-4380  
Tokai area: 052-388-2002  
Kansai area: 06-7669-0180  
Chugoku-Shikoku area, Kyushu-Okinawa area: 092-687-0010

### Smartphone Technical Support Center

From a SoftBank handset, dial toll free at 151  
From a landline/IP phone, dial toll free at 0800-1700-151

### SoftBank Mobile Global Call Center

From outside Japan, dial +81-3-5351-3491 (toll free from SoftBank handsets)  
If handset is lost/stolen, call this number immediately (international charges apply)



## 006SH User Guide Index

<b>A</b>	
About Phone.....	89
About USIM Card.....	7
Accounts & Sync.....	86
Activating Sleep Mode.....	30
Android Market.....	27
Applications.....	19
Applications.....	85
<b>B</b>	
Battery Installation.....	12
Browsing the Internet.....	58
<b>C</b>	
Calling from Outside Japan.....	79
Capturing 3D Images.....	64
Charging Battery.....	14
Connecting to Wi-Fi.....	70
Creating/Sending Email.....	56
Creating/Sending Gmail.....	54
Customer Service.....	93
Customizing Home Screen.....	34
<b>D</b>	
Date & Time.....	89
<b>E</b>	
Email Settings.....	56
<b>G</b>	
Global Roaming.....	78
<b>H</b>	
Handling S! Mail/SMS.....	53
Handset Interface.....	18
Handset Power On/Off.....	15
Home Screen Basics.....	32
<b>I</b>	
Introduction.....	3
<b>L</b>	
Language & Keyboard.....	87
Launcher Basics.....	36

## M

Mail Types.....	50
Mobile Manners.....	22
Music.....	68
My Phone Number.....	21

## N

Notifications Panel.....	34
--------------------------	----

## O

Opening Received Email.....	57
Opening Received Gmail.....	55
Optional Services.....	41

## P

Package Contents.....	6
Parts & Functions.....	6
Photo Camera & Video Camera.....	62
Placing/Answering Calls.....	40
Privacy.....	87

## R

Receiving & Replying S! Mail/SMS.....	52
---------------------------------------	----

## S

SD Card.....	9
Security Codes.....	28
Sending S! Mail/SMS.....	50
Software Update.....	30
Sound Settings.....	84
Specifications.....	92
Status Bar.....	33
Still Images & Video.....	68

## T

Text Entry.....	23
-----------------	----

## U

USIM PIN.....	29
Using Address Book.....	46
Using Bluetooth®.....	73
Using Google Accounts.....	25
Using Touch Panel.....	16

## W

Wireless & Networks.....	82
--------------------------	----



# SoftBank 006SH User Guide

July 2011, First Edition

SOFTBANK MOBILE Corp.

Visit [SoftBank Shop](#) for assistance

Model : SoftBank 006SH

Manufacturer : SHARP CORPORATION