



101DL User Guide

101DL User Guide Contents

Introduction	
Introduction.....	3
Getting Started	
Package Contents.....	6
Parts & Functions.....	6
USIM Card Installation.....	7
User Memory and SD Card.....	8
Charging Battery.....	11
Power On/Off.....	12
Touchscreen Operations.....	13
Basic Operations	
Basic Operations.....	16
Handset Phone Number.....	17
Mobile Manners.....	17
Text Entry.....	18
Google Account.....	19
Android Market™.....	21
Security Codes.....	23
USIM PIN.....	23
Activating Screen Lock.....	24
Software Updates.....	25
Handset Interface	
Home Screen Basics.....	28
Status Bar.....	28
Notifications Window.....	29
Phone	
Calling.....	32
Optional Services.....	33
Contacts.....	37
Messaging & Browser	
Messaging.....	40
Sending SoftBank Mail.....	40
Creating/Sending Gmail.....	42
Internet Mail Settings.....	43
Web Browsing.....	43
Camera	
Imaging.....	46
Music & Images	
Music Files.....	50
Image Files (PhotoStage).....	50
Image Files (Gallery).....	51
Connectivity	
Wi-Fi.....	54
Bluetooth®.....	55

Global Services

Calling Outside Japan.....	58
----------------------------	----

Settings

Wireless & Networks.....	62
Sound.....	63
Applications.....	64
Work Profile.....	65
Accounts & Sync.....	66
Privacy.....	66
Language & Keyboard.....	67
Date & Time.....	67
About Phone.....	68

Appendix

Specifications.....	70
Materials.....	70
Customer Service.....	71

Safety Precautions

Safety Precautions.....	74
General Notes.....	79

Introduction

Thank you for purchasing SoftBank 101DL.

Before You Begin

- SoftBank 101DL is referred to as "handset" in this guide.
- Read "Safety Precautions" and this guide thoroughly beforehand for proper usage.
- Accessible services may be limited by contract conditions or service area.
- Unauthorized copying of any part of this guide is prohibited.
- Guide content subject to change without prior notice.
- Contact SoftBank Customer Support, General Information if you find inaccuracies.

Guide Usage Notes

- Most operation descriptions are based on default settings.
- Unless noted otherwise, descriptions are for Home Screen.
- Some operation descriptions may be omitted.
- In this guide and on handset, "abroad" means "outside Japan" with regard to handset/service usage.
- In this guide, microSD/microSDHC Card is referred to as "SD Card."

Screenshots & Key Labels

Screenshots and Key labels are provided for reference only. Actual handset windows, menus, etc. may differ in appearance.

Accessing Guide on Handset

Access this Guide on handset via Guide icon in Home Screen or via Guide indicator on Status Bar. Guide indicator appears on Status Bar by default. Follow these steps to hide Guide indicator:

Access Guide →  →  Indicator →  off

Getting Started

Package Contents.....	6
Parts & Functions.....	6
USIM Card Installation.....	7
User Memory and SD Card.....	8
Charging Battery.....	11
Power On/Off.....	12
Touchscreen Operations.....	13


Package Contents

Package Contents


- Handset (SoftBank 101DL)
- AC Charger (DLCAB1)
- Micro USB Cable (DLDB1)
- Earphone with Mic (Complimentary Sample)
- 8 GB microSD Card (Complimentary Sample)
- クイックスタート (Japanese)
- 安全、環境、および規制情報 (Japanese)
- Maintenance and Support Information
- Warranty (Japanese)

Parts & Functions

Front/Top/Bottom

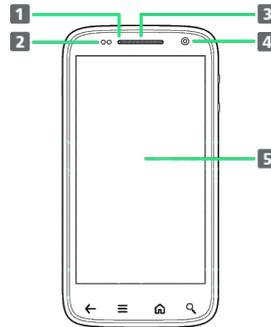


Part	Description
1 Charge LED	Lights to indicate handset status
2 Light/ Proximity Sensor	Detects surrounding brightness/prevents Touchscreen misoperation during call
3 Receiver	Hear the other party's voice here
4 Internal Camera	Photograph your own face, etc.
5 Touchscreen Display	Tap, Swipe/Flick, etc.

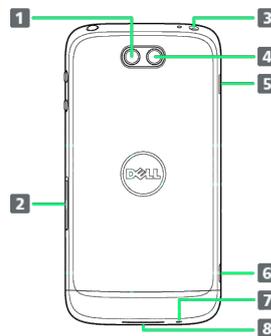

Part	Description
1 Light	Use as camera flash
2 USIM Card/ SD Card Slot	Insert USIM Card/SD Card
3 3.5 mm Audio Port	Connect headset
4 External Camera	Capture images
5 Manner Switch	Switch Silent mode On/Off
6 External Device Port	Connect Micro USB Cable
7 Mic	Speak here for calls
8 Speaker	Ringer and Speakerphone sound from here

Handset Keys

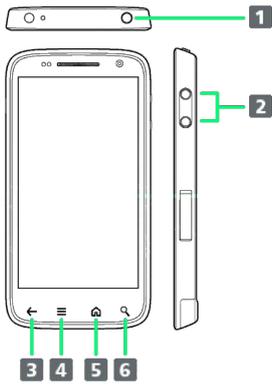

Part	Description
1 Power Key	Toggle Display Backlight on/off Long Press for Power on/off
2 Volume	Adjust Volume
3 ←	Go Back/Escape
4 ≡	Show Menu options
5 🏠	Return to Home Screen. Long Press for recent apps
6 🔍	Search for information on handset or Internet


USIM Card Installation

USIM Card IC chip contains customer and authentication information, including handset number.

Inserting USIM Card

1


Open Cap of USIM Card/SD Card Slot and insert USIM Card

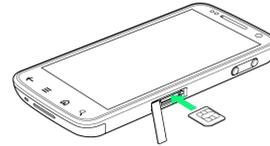

- USIM Card Slot is the top slot. See "Precautions on Inserting USIM Card."
- Slowly insert card fully, with gold IC area on top.

2


Close Cap of USIM Card/SD Card Slot

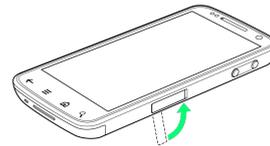

Removing USIM Card

1

Open Cap of USIM Card/SD Card Slot and remove USIM Card

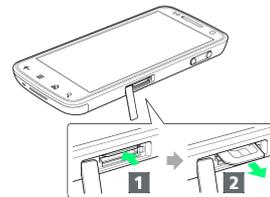

- Press USIM Card in direction **1** and release, then pull out in direction **2**.


2

Close Cap of USIM Card/SD Card Slot



! Precautions on Inserting USIM Card

Insert in correct place; USIM Card in top (SD Card in bottom).

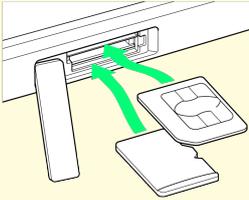

User Memory and SD Card

Handset accepts an SD Card up to 32 GB. Some SD Cards may not operate properly.

User Memory can be used to save data such as photos and video.

Memory and SD Card

Handset contains two memory types: System Memory and User Memory. They and SD Card have the following functions:


Type	Function
System Memory	System data and applications are installed here.
User Memory	Captured photos, videos, mail attachments, etc. are saved here. Data can be exchanged through a PC connection.
SD Card	Data can be exchanged through a PC connection. Image and music files saved here can be used on handset.

Inserting SD Card

Always power off first.

1


Open Cap of USIM Card/SD Card Slot and insert SD Card

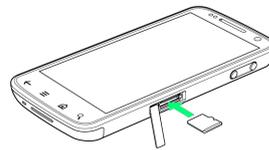

- SD Card Slot is the bottom slot. See "Precautions on Inserting SD Card."
- Slide in SD Card as shown.
- Do not insert other objects.

2

Close Cap of USIM Card/SD Card Slot

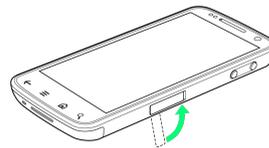


Removing SD Card

Always perform Unmount SD Card, then power off first.

1

Open Cap of USIM Card/SD Card Slot and remove SD Card

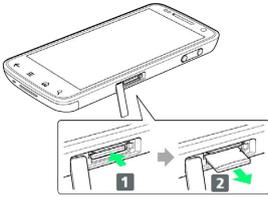

- Press SD Card in direction **1** and release, then pull out in direction **2**.

2

Close Cap of USIM Card/SD Card Slot



Formatting SD Card

When using a new SD Card for the first time, format it on handset before trying to save files, etc.

- Format Card deletes all SD Card files, even those created on other devices.
- Format while charging, or while Battery is well charged.


1

In Home Screen, Settings



2

Storage

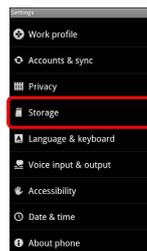

3

Format SD card



4

Erase SD card



5

Erase everything

 Handset erases all SD Card files.

Formatting User Memory

- Formatting deletes all data in User Memory. Check data before formatting User Memory.
- Format while charging, or while Battery is well charged.


1

In Home Screen,   Settings



2

Storage

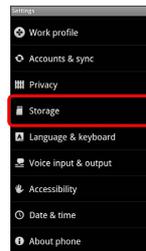

3

Format user memory



4

Erase user memory



5

Erase everything

 All data in User Memory is deleted.

! Precautions for Using User Memory/SD Card

Back Up Your Files


SoftBank Mobile is not liable for any damages resulting from accidental loss/alteration of information. Keep a copy of contacts, etc. in a separate place.
Never power off while files are being accessed.

Low Battery Warning

User Memory/SD Card may not read/write files correctly if Battery is low.

Precautions on Inserting SD Card

Insert in correct place; SD Card in bottom (USIM Card in top).

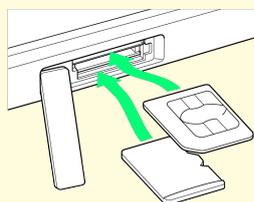

Charging Battery

Charger


1

Insert adapter plug into AC Charger




2

Connect USB plug to AC Charger

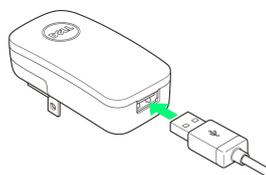


3

Connect Micro USB plug to External Device Port

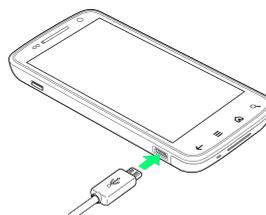

4

 Plug in AC Charger



☑ Lamp lights in white when charging starts, then in green when Battery is full.

5

Unplug AC Charger




· Unplug AC Charger from outlet, and Micro USB cable from AC Charger and handset.

USB Charging

- Power on handset and PC first.
- Battery may not charge or charge slowly depending on PC status/environment.


1

Connect USB Cable

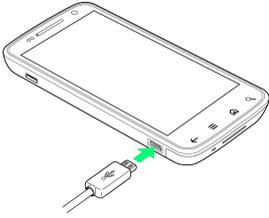

2

Connect USB Cable to PC USB port

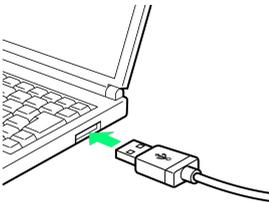

3

Disconnect handset from USB Cable




Power On/Off

Power On

1

Long Press Power Key

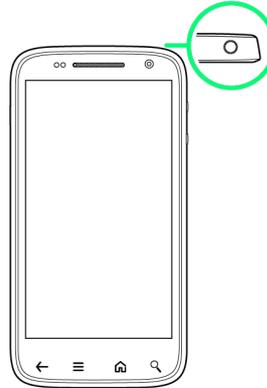

❏ Cancel Screen Lock window appears.

- Initial setup menu opens before Home Screen appears after powering on for the first time.

Power Off


1

Long Press Power Key



2

Power off → OK

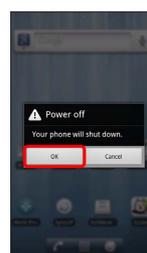

❏ Handset shuts down.

Touchscreen Operations

Touch Display to select menu items, open functions, scroll pages, etc.


Tap

Tap item or key to open or execute corresponding function/operation.



Touch & Hold

Touch item for 1+ seconds to move icons, open menus, etc.

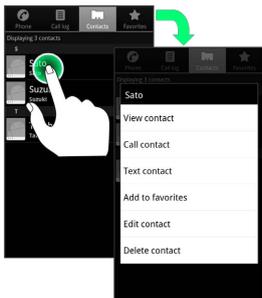


Drag

Drag item (e.g., Touch Panel unlock slider) to move it.




Swipe/Flick

Swipe/Flick to toggle sheets, pages, etc.

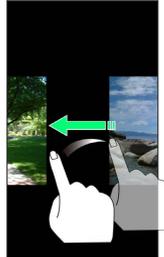

Pinch/Spread

Pinch/Spread to zoom in or out on images, etc.

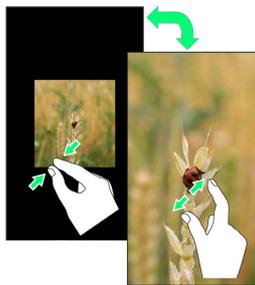

Basic Operations

Basic Operations.....	16
Handset Phone Number.....	17
Mobile Manners.....	17
Text Entry.....	18
Google Account.....	19
Android Market™.....	21
Security Codes.....	23
USIM PIN.....	23
Activating Screen Lock.....	24
Software Updates.....	25

Basic Operations

Home Screen & Launcher


Home Screen top sheet appears at power on. Most handset operations start from Home Screen sheets or Launcher pages.



Handset Navigation



Tap menu items, icons, onscreen key, etc. to open assigned items.

- Press ← to go back or escape.

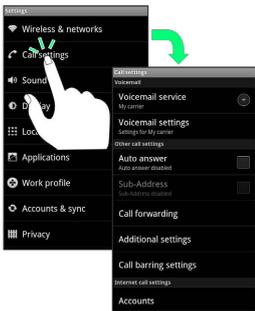

Menu Operations

Press ≡ for options. Alternatively, Touch & Hold Display for settings.

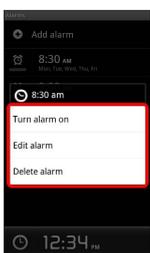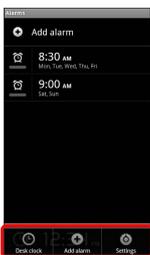

Handset Settings


In Home Screen, Press ≡ Tap Settings to customize settings.



Handset & Display Orientation

In most cases, Display orientation changes with handset orientation.

- Some application content may not change with handset orientation.

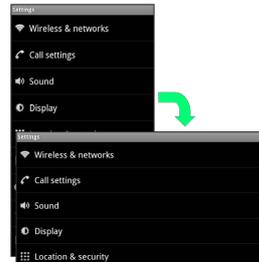

Handset Phone Number

My Phone Number

1

In Home Screen,   Settings



2

About phone



3

Status



4

Additional Status Info



 Handset phone number appears.

Mobile Manners


Silent Mode

Cancel most handset sounds to avoid disturbing others around you.

- Camera shutter click sounds even in Silent mode.
- When setting Silent mode by toggling the Manner Switch, do not cancel Silent mode from the operation screen.

1

Toggle Manner Switch toward Display

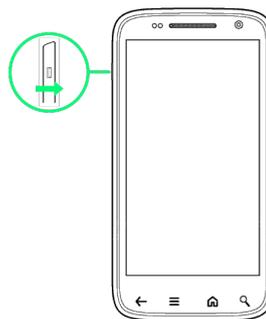

 Silent mode is set.


- Alternatively, Long Press Power Key and Tap **Silent mode** to set it.

Airplane Mode

Disable all functions which emit signals while power remains on.

1

Long Press Power Key

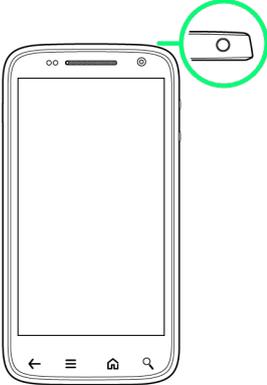

2

Airplane mode



 Airplane mode is set.


· Long Press Power Key again to cancel it.

Text Entry

Keyboards

Use onscreen keyboards for text entry. In 12-Key Keyboard, multiple characters are assigned to each key. In QWERTY Keyboard, single characters are assigned to each key.

· In any keyboard, Touch & Hold  for  (12-key Keyboard) /  (QWERTY Keyboard).

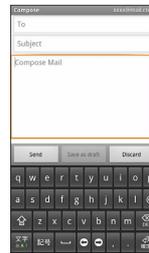

QWERTY Keyboard Layout



- 1 Text Entry
- 2 Toggle uppercase/lowercase or symbols
- 3 Toggle entry modes; Touch & Hold for entry mode list
- 4 Current entry mode
- 5 Delete character before cursor
- 6 Line feed
- 7 Symbol/Emoticon List
- 8 Space
- 9 Move cursor

Toggling Text Entry Modes

1

Touch & Hold 



 Entry mode list appears.

2

Tap entry mode



 Entry mode changes.

Google Account

Create a Google Account to use Google services. Some services cannot be used and some applications/functions are limited without a Google Account.

Creating a Google Account


1

In Home Screen,   Settings




2

Accounts & sync

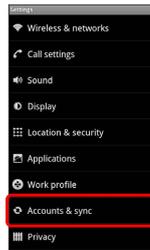

3

Add account

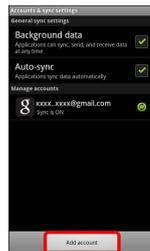

4


Google



 Add a Google Account appears.


5

Next

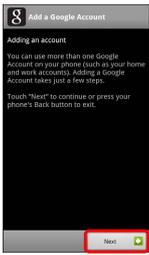

6

Create

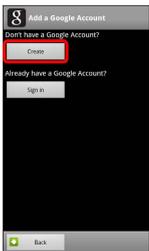

7

Enter your first name → Enter your last name → Enter your user name → Next



· If confirmation appears, follow onscreen instructions.

8


Enter your password → Re-enter your password to verify it → Next



9


Tap the security question field, then Tap question → Enter your answer → Enter your secondary Email address →

Create

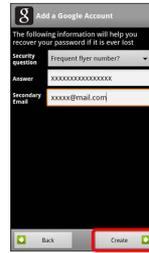

10

Verify the Terms of Service → I agree, Next

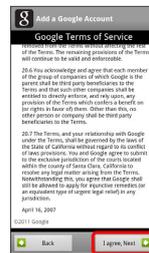

11


Enter the characters shown → Next



· The distorted text is shown. If the text is hard to read, Tap Next to enter another text. The different text is shown.

12

Select the items to synchronize → Finish

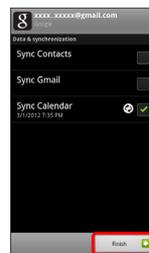

13

Finish setup




Google Account is added.

Signing in to Google Account

If an application requires a Google Account, Google sign in appears. Sign in to use the application.


1

Next

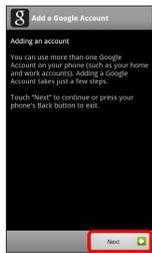

2

Sign in

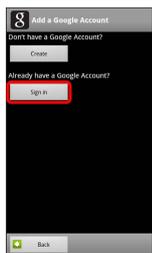

Google Account sign in appears.

3

Follow onscreen instructions

You are signed in to your Google Account.

Google Account Cautions

Do not forget your Google Account ID and Security Code.

Android Market™

Get applications in Android Market. Sign in to your Google Account beforehand.

Installing Free Applications

1

In Home Screen, (Market)



Market opens.

· If confirmation appears, follow onscreen instructions.

2

Tap application Download Accept & download

Application downloads and installs.

Purchasing Applications

1

In Home Screen, (Market)



Market opens.

· If confirmation appears, follow onscreen instructions.

2

Tap paid application Select price Follow onscreen instructions

Application downloads and installs.

Updating Installed Applications

1

In Home Screen,   (Market)



 Market opens.

- If confirmation appears, follow onscreen instructions.

2

 Application downloads and installs.

- If confirmation appears, follow onscreen instructions.

Purchased Applications

Payments

Pay once. Re-downloads of uninstalled applications are complimentary.

Installations on Other Android Devices

Install same application on other Android devices under same Google Account at no added cost.

 
Application Operations

Requesting Refunds

Refunds are possible within a limited time. Requesting a refund deletes the application and cancels the invoice. Request one refund per application.

In Market,      

Automatic Application Updates

In Market,     ()

- If confirmation appears, follow onscreen instructions.

Android Market Caution

Installing Applications

Download and install applications on this handset via Android Market (developed by Google Inc.) at your own risk. SoftBank Mobile is not responsible for user installed application content (quality, reliability, legality, appropriateness, accuracy, etc.) or malfunctions installed applications may cause (due to viruses, etc.).

Purchasing Applications

Purchase applications via Android Market at your own risk. SoftBank Mobile is not responsible for transactions between users and third party publishers.

Security Codes

Code Types

Some functions/services require these codes for use.

- Do not reveal Security Codes. SoftBank Mobile is not liable for misuse or damages.
- If you forget Security Codes, contact us for recovery. For more information, see [SoftBank Mobile Website \(http://mb.softbank.jp/en/#pagetop\)](http://mb.softbank.jp/en/#pagetop).

Types	Details
Center Access Code	4-digit code in contract: Change services; use Optional Services via landlines; or set call restrictions
Lock No.	9999 by default: Use Security Lock functions

USIM PIN

A four-to-eight-digit code to prevent unauthorized use. It is set to 9999 by default.

Enabling USIM Card Lock


1

In Home Screen,   Settings



2

Location & security

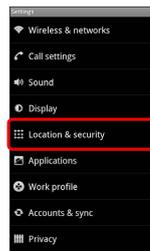

3

Set up SIM/RUIM card lock  Lock SIM/RUIM card ()

 Enter USIM PIN  OK



 PIN is enabled.

Changing USIM PIN

1

In Home Screen,   Settings



2

Location & security



3

Set up SIM/RUIM card lock  Change SIM/RUIM PIN 
 Enter PIN  OK  Enter New PIN  OK  Enter
 New PIN again  OK



 PIN is changed.

PIN Cautions

Entering PIN incorrectly three times activates PIN Lock. Enter PUK (Personal Unblocking Key) to unlock. For more about PUK, contact [SoftBank Customer Support](#).


Activating Screen Lock

After set period of inactivity, Screen Lock activates. Alternatively, Press Power Key for Screen Lock.

Canceling Screen Lock

1

Press Power Key

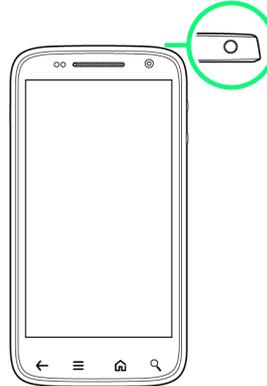

 Cancel Screen Lock window appears.

2

Drag  to right



 Screen Lock is canceled.

Software Updates

Look for available updates. Update as required.

Software Updates

1

In Home Screen, Settings



2

About phone



3

Software Update



4

Software Update



5

Over Wi-Fi / Over Mobile Network or Wi-Fi OK

Follow onscreen instructions

Software updates.

Before Software Update

Handset data may be lost to damage or malfunction, etc. Always back up important files. Back up important information before Software Update. SoftBank Mobile is not liable for loss or associated damages.

Software Update Cautions

During Software Update

Handset cannot be used until Software Update completes; it may take some time to complete. Confirm signal strength and Battery charge beforehand. Poor signal strength or low Battery may disrupt updates leading to lost data or handset malfunction.

If Handset Does Not Restart After Software Update

Long Press Power Key for 15 s or longer while Pressing Volume Down Key to restart. Contact [SoftBank Customer Support](#) if your handset still does not restart.

Handset Interface

Home Screen Basics.....	28
Status Bar.....	28
Notifications Window.....	29

Home Screen Basics

Home Screen top sheet appears at power on; most operations start here.

Layout



- 1 Status Bar
- 2 Search Box
- 3 Shortcuts

Toggling Home Screen Sheets

Home Screen consist of 7 sheets. Add shortcuts, widgets or folders to sheets. Swipe or Flick left/right to toggle Home Screen sheets.

· In any Home Screen sheet, Press  to return to Home Screen top sheet.



Status Bar

Status Bar appears at the top of Display.

Status Bar



- 1 Notification Indicators
- 2 Status Indicators

Notification Indicators

These Notification Indicators appear in Notifications Window:

Icon	Description
	Dell Stage Updates (Drag Status Bar down to access from Notifications Window)
	Guide (Drag Status Bar down to access from Notifications Window)
	New Gmail
	New Email
	New SMS/S! Mail
	New Voicemail
	Music Playing
	Wi-Fi Available
	USB Connected
	New Tweet
	Call in Progress
	Missed Call
	Call On Hold
	Call Forwarded
	Data Uploading
	Data Downloading
	Installation Complete
	App Update Available
	SD Card Uninserted
	SD Card Mounting
	SD Card Unmounted
	Quake Alert Received

Status Indicators

These Status Indicators appear in Status Bar:

Indicator	Description
	3G Data in Use
	GSM Data in Use
	HSPA Data in Use
	Wi-Fi Connected
	Data Syncing
	Bluetooth® On
	Bluetooth® Connected
	Airplane Mode
	Alarm Set
	Speakerphone On
	Signal Strength
	Roaming
	No Signal
	No USIM
	Silent Mode Active
	Mic Muted
	Charge Battery
	Battery Low
	Battery Charged
	Battery Charging
	Headphones Connected

Notifications Window

Open notifications (missed call, etc.), check handset status or change various settings.

Opening Notifications Window

1

Drag Status Bar down



 Notifications window opens.

- Alternatively, in Home Screen, Press  then Tap **Notifications**.

+ Closing Notifications Window

Touch Display bottom and Drag up to close Notifications window.

- Alternatively, Press  to close Notifications window.

Phone

Calling.....	32
Optional Services.....	33
Contacts.....	37

Calling

Learn calling basics, including handling incoming calls, and in-call operations.

Placing Calls

1

In Home Screen, 



 Onscreen dialpad appears.

2

Use onscreen dialpad to enter number



· Enter city code for landlines.

3



 Ringback tone sounds. Wait for receiver to accept call.

4

To end the call 



 Call ends.

Answering Calls

1


When call connects Drag  right



 Talk.

2

To end the call 

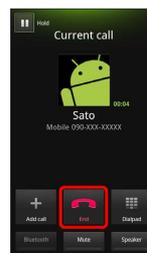

 Call ends.

Emergency Location Report

Using SoftBank 3G handset for emergency calls (110, 119 or 118) automatically reports handset location to corresponding agency (police, etc.)

- Location Report does not incur registration/transmission fees.
- Location/signal conditions affect positioning accuracy. Always provide location and call purpose.
- Hiding Caller ID (using 184, etc.) cancels Location Report. However, corresponding agency may obtain location information in life threatening situations.
- Location Report is not sent for calls made while outside Japan.

Optional Services

This handset is compatible with SoftBank Optional Services.

Optional Services

Use these SoftBank Optional Services:

Service	Description
Call Forwarding	Divert all/all unanswered calls to a preset number
Voicemail	Divert all/unanswered calls to Voicemail Center; access messages via handset/touchtone phones
Call Waiting ¹	Answer calls during a call
Group Calling ¹	Switch between open lines/connect multiple lines
Call Barring	Restrict incoming/outgoing calls by conditions
Caller ID	Show or hide your number when placing calls

1 Requires separate subscription

Call Forwarding


1

In Home Screen, Settings



2


Call settings

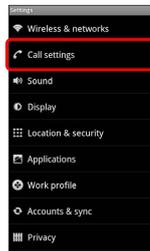

Call settings appears.

3

Call forwarding

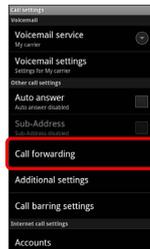

4

Tap forwarding condition Enter number Enable



Call Forwarding is set.

Voicemail


1

In Home Screen, Settings



2

Call settings

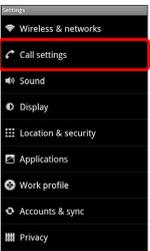

Call settings appears.

3

Call forwarding



4

Tap forwarding condition Enter 09066517000

Enable



Voicemail is set.

- When a new message is recorded appears in Status Bar.
Dial 1416 for voice guidance.

Call Waiting

Requires separate subscription.


1

In Home Screen, Settings



2


Call settings

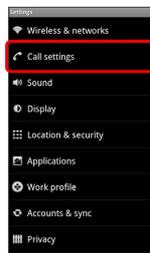

Call settings appears.

3

Additional settings

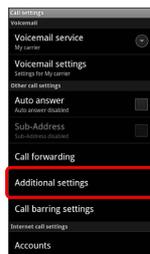

4

Call waiting ()



Call Waiting is set.

- Call Waiting tone sounds for incoming call. Slide right to accept the call.

Group Calling

Requires separate subscription.

1

During a call, **Add call**




2

Enter another phone number



3

When receiver accepts call **Merge calls**

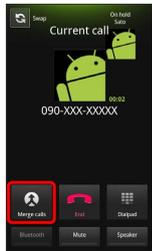

Group Call begins.

Caller ID


1

In Home Screen, **Settings**



2

Call settings

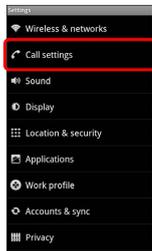

Call settings appears.

3

Additional settings



4

Caller ID **Network default** / **Hide number** / **Show number**



Caller ID is set.

Call Barring

Restrict calls from specified numbers.

- Call Barring requires Call Barring Password.
- Entering incorrect Call Barring Password three times disables Call Barring. Call Barring Password must be changed. Contact [SoftBank Customer Support](#).
- If you have previously changed Call Barring Password on a SoftBank handset, use the new code.
- If a call is attempted while calling is restricted, a message appears. Message may take time to appear in some areas.


1

In Home Screen,   Settings



2


Call settings

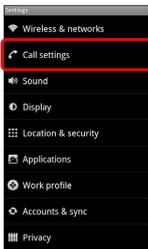

 Call settings appears.

3

Call barring settings

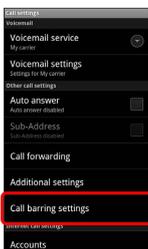

4

Tap items  Enter Call Barring Password  OK



 Call Barring is set.

Contacts

Save phone numbers, mail addresses, etc. to Contacts.

Adding New Contacts

1

In Home Screen,    (Contacts)



 New Contact window appears.

2


  New contact



· If an online Account is set for handset, it is shown as a contact.

3

Enter items  Done

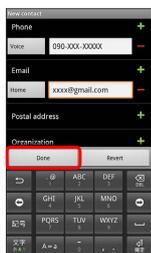

 Contact is saved.

Messaging & Browser

Messaging.....	40
Sending SoftBank Mail.....	40
Creating/Sending Gmail.....	42
Internet Mail Settings.....	43
Web Browsing.....	43

Messaging

S! Mail

Exchange long text messages with S! Mail-compatible SoftBank terminals, other mobile providers' handsets, computers/other email-compatible devices. Attach media files for multimedia messaging.

SMS

Exchange short text messages (up to 140 half pitch characters) using handset phone numbers as addresses.

Gmail

Gmail is Google's webmail service. Handset automatically syncs with Gmail.

Internet Mail

Use Internet Mail (POP3/IMAP4) on handset.


- Set up Internet Mail accounts beforehand.
- Exchanging Internet Mail via handset synchronizes handset and mail server.

Sending SoftBank Mail


Sending S! Mail

1

In Home Screen,   (SoftBank Mail)  S!Mail

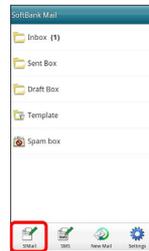

2

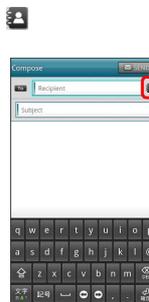

3


People / Outgoing History / Incoming History  Select address  OK



- Enter phone numbers directly in Address field.
- After entering addresses, Tap **To** to change them to Cc or Bcc.
- After entering addresses, Tap **X** to delete them.

4

Subject  Enter subject

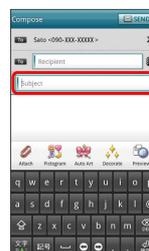

5

Tap Message field → Enter text



6

SEND




! Mail is sent.

- Before sending S! Mail, Press ← to go back, or save unsendable message as a draft.

Sending SMS

1

In Home Screen, (SoftBank Mail) → SMS

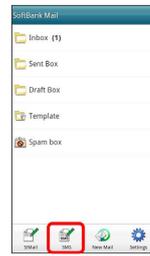

2



3

People / Outgoing History / Incoming History → Tap destination



- Enter phone numbers directly in Address field.
- After entering addresses, Tap ✕ to delete them.

4

Tap Message field → Enter text



5

SEND



 SMS is sent.

· Before sending SMS, Press ← to go back, or save unsendable message as a draft.

Creating/Sending Gmail

To use Google Mail, create a Google Account and sign in beforehand.

Creating/Sending Gmail

1


In Home Screen,    (Gmail)



 Inbox appears.

2

  Compose

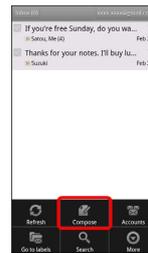

 New message window appears.

3

Enter To:, Subject:, and message text  



 Message is sent.

Gmail Caution


Barring Internet Mail on handset blocks Gmail messages.

Internet Mail Settings

Adding Accounts

1


In Home Screen,    (Email)

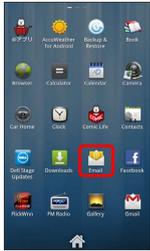

 Internet Mail list appears.


2

  Accounts

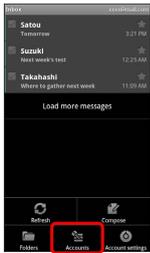

3

  Add account

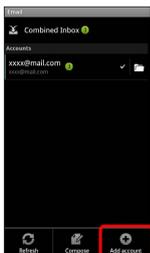

4

Follow onscreen instructions

 Account is added.

Web Browsing

Using Browser

1

In Home Screen, 



 Browser opens.

- Tapping web links within text messages automatically activates Browser.

Adding Bookmarks

1

In Home Screen, 



 Browser opens.

2

  Bookmarks



 Bookmarks opens.

3

Add  Confirm name and URL  OK



 Current webpage is added to Bookmarks.

Opening New Webpages

Open multiple webpages and toggle between them. Open up to 8 pages at once.

1

In Home Screen, 



 Browser opens.

2

  New window



 New webpage appears.

In Browser, Press  and Tap **Windows** to toggle active webpages.

Using SSL/TLS

Secure Sockets Layer (SSL) and Transport Layer Security (TLS) are encryption protocols that secure Internet transmissions of important/sensitive information such as credit card numbers and corporate secrets, providing protection against online threats (eavesdropping, falsification, impersonation, etc.). Handset is preloaded with digital certificates issued by certificate authorities.

SSL/TLS Caution

When a security notice appears upon opening an Internet page, subscribers must decide for themselves whether or not to open the page. Opening secure pages constitutes agreement to the terms of SSL/TLS usage. SoftBank Mobile, VeriSign Japan and Cybertrust cannot be held liable for any damages associated with the use of SSL/TLS.

Camera

Imaging.....46

Imaging

Capturing Photos

Captured photos are saved in User Memory.

1

In Home Screen,   (Camera)



 Camera Viewfinder appears.

2

Frame subject in Viewfinder  Touch & Hold 



 Auto Focus activates.

3

Release 



 Shutter clicks and photo is saved in User Memory.

Recording Videos

Captured video is saved in User Memory.


1

In Home Screen,   (Camera)



 Camera Viewfinder appears.

2

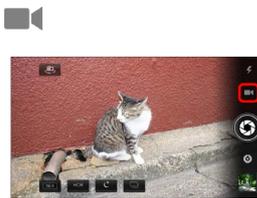

 Video Viewfinder appears.

3

Frame subject in Viewfinder  



 Recording begins.

4

Tap  to end Camera



 Recording ends and file is saved in User Memory.

Imaging Notes

Photo File Format

Photos are saved as JPEG files.

Video File Format

Videos are saved as MPEG-4 files.

Camera Cautions

Keep Lens Clean

Fingerprints/oils may hinder handset imaging. Clean lens with soft cloth beforehand.

Avoid Direct Sunlight Exposure

Do not expose lens to direct sunlight for extended periods; may color filter, altering images.

Music & Images

Music Files.....	50
Image Files (PhotoStage).....	50
Image Files (Gallery).....	51

Music Files

Playing Music Files

Play music files saved in User Memory or SD Card.

1


In Home Screen,    (Music)



 Music Library appears.

2

Tap a file to play it

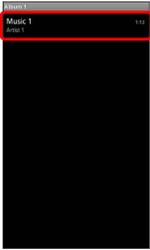

 Song plays.

Image Files (PhotoStage)

Viewing Images (PhotoStage)

View still images and videos saved in User Memory or SD Card.

1

In Home Screen,    (PhotoStage)



2


Flick the screen left or right to select the library



 Album index appears.

3

Select an album

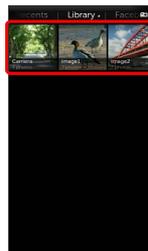

4

Tap image to view it

 Image appears.

Image Files (Gallery)

Viewing Images (Gallery)

View still images and videos saved in User Memory or SD Card.

1

In Home Screen,    (Gallery)



 Album index appears.

2

Select an album



3

Tap image to view it

 Image appears.

Connectivity

Wi-Fi.....	54
Bluetooth®.....	55

Wi-Fi

Use household Wi-Fi networks, etc. to connect to the Internet.

Connecting to Wi-Fi Networks

Select from available networks to establish a connection.

1

In Home Screen,   Settings



2

Wireless & networks  Wi-Fi settings



 Wi-Fi settings appears.

3

Wi-Fi ()



4

Select Wi-Fi Network  Enter Security Key  Connect



 Wi-Fi network connects.

- A Wireless LAN router in your home may have a sticker with a password for WEP, WPA, and KEY. For details contact your router manufacturer. Also, please check your provider's contract for the password for Public Wireless LAN.
- Unsecured networks do not require Security Key entry.

+ Wi-Fi Operations

Set the Available Access Point to "Notify upon Detection."

In Wi-Fi Settings, Network notification ()

  is shown on the Status Bar to notify you when an available access point is detected.

Deleting Networks

In Wi-Fi Settings, Tap active access point  Forget

Check Access Point Details

In Wi-Fi Setting, Tap current access point

 Connection Status, Security, Signal Strength, Connection Speed, IP Address appears.

Set Wi-Fi Sleep Policy

In Wi-Fi Settings,   Advanced  Wi-Fi sleep policy  Tap items   Save

Connect Static IP

In Wi-Fi Settings,   Advanced  Use static IP ()  Tap item  Enter information   Save

Deleting Access Points

In Wi-Fi Settings, Touch & Hold access point  Forget network

Bluetooth®

Connect handset to other Bluetooth® devices for wireless connectivity.

Activating Bluetooth®

- Handset may not pair with all Bluetooth® devices.
- Some paired devices may not operate correctly.
- Noise may occur when using wireless/handsfree devices.


1

In Home Screen,   Settings



2

Wireless & networks

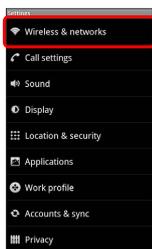

3

Bluetooth ()



 Bluetooth® is on.

- Tap **Bluetooth** to toggle Bluetooth® on/off.

? Troubleshooting

Q. Why can't I use Bluetooth®?

A. Airplane mode may be active. Bluetooth® is not available in Airplane mode.

Global Services

Calling Outside Japan..... 58

Calling Outside Japan

International Calling

1

In Home Screen, 



 Onscreen dialpad appears.

2

Touch & Hold 



 + appears.

3

Omit first 0 from phone numbers when placing international calls



· Do not omit first 0 from phone numbers when dialing Italy (39).

4



 Ringback tone sounds. Wait for receiver to accept call to talk.

Global Roaming

Place calls the same way you would within Japan.

- Do not enter country code or omit first 0 from phone numbers.

1

In Home Screen, 



 Onscreen dialpad appears.

2

Use onscreen dialpad to enter phone number



3



 Ringback tone sounds. Wait for receiver to accept call to talk.

Settings

Wireless & Networks.....	62
Sound.....	63
Applications.....	64
Work Profile.....	65
Accounts & Sync.....	66
Privacy.....	66
Language & Keyboard.....	67
Date & Time.....	67
About Phone.....	68

Wireless & Networks

Wireless & Networks Settings

+ Airplane Mode

Cancel All Handset Transmissions without Powering Off

In Home Screen,    

- Tap **Airplane mode** to toggle setting On () / Off ()

+ Wi-Fi

Enabling/Disabling Wi-Fi Connectivity

In Home Screen,    

- Tap **Wi-Fi** to toggle Wi-Fi On () / Off ()
- Alternatively, Tap **Wi-Fi** in **Wi-Fi settings**

+ Wi-Fi Settings

Enabling/Disabling Wi-Fi Access Point Notifications

In Home Screen,     

- **Wi-Fi** must be active to use this function.
- Tap **Network notification** to toggle setting On () / Off ()

Use WPS for Simple Wi-Fi Setup

In Home Screen,     

Follow onscreen instructions

- **Wi-Fi** must be active to use this function.

Adding Networks

In Home Screen,       

- **Wi-Fi** must be enabled to use this setting.
- Some security protocols may require additional information entry.

+ Bluetooth

Enabling/Disabling Bluetooth® Connectivity

In Home Screen,    

- Tap **Bluetooth** to toggle setting On () / Off ()
- Alternatively, Tap **Bluetooth** in **Bluetooth settings**

+ Bluetooth Settings

Changing Name Appearing on Paired Devices

In Home Screen,     

Enter name 

- **Bluetooth** must be enabled to use this setting.

Changing Device Visibility

In Home Screen,     

- Tap **Discoverable** to toggle setting On () / Off ()
- **Bluetooth** must be enabled to use this setting.

Searching for Pairable Devices

In Home Screen,     

- **Bluetooth** must be enabled to use this setting.

+ VPN Settings

Adding a VPN

In Home Screen,      Tap items  

- Tap **VPN** to toggle connection On/Off. Touch & Hold **VPN** to edit/delete it.

+ Mobile Networks

Enabling/Disabling 3G Packet Communications

In Home Screen,     

- Tap **Data enabled** to toggle setting On () / Off ()

Enabling/Disabling Data Roaming

In Home Screen, → **Settings** → **Wireless & networks** → **Mobile networks** → **Data roaming**

- Tap **Data roaming** to toggle setting On () / Off () .
- If confirmation appears, follow onscreen instructions.

Set Networks

In Home Screen, → **Settings** → **Wireless & networks** → **Mobile networks** → **Network Mode** →

Tap items

Adding Access Points

In Home Screen, → **Settings** → **Wireless & networks** → **Mobile networks** → **Access Point Names** → → **New APN** → Tap items → Set items → → **Save**

Deleting Added Access Points & Restoring Defaults

In Home Screen, → **Settings** → **Wireless & networks** → **Mobile networks** → **Access Point Names** → → **Reset to default**

Selecting Operator

In Home Screen, → **Settings** → **Wireless & networks** → **Mobile networks** → **Network operators** → **Select automatically** / Select from search results

- Tapping **Select automatically** automatically sets optimum network.
- To refresh search, Tap **Search networks** or **Select automatically** .

Sound

Sound Settings

+ Silent Mode

Adjust Silent Mode Settings

In Home Screen, → **Settings** → **Sound** → **Silent mode**

- Tap **Silent mode** to toggle Silent setting On () / Off () .
- Alternatively, use Manner Switch to set Silent mode.
- **Silent mode** is unavailable to cancel Silent mode () when set with Manner Switch.

+ Vibrate

Toggle Vibration On/Off for Selectable Items

In Home Screen, → **Settings** → **Sound** → **Vibrate** → Tap items

+ Volume

Adjust Volume Levels for Handset Sounds

In Home Screen, → **Settings** → **Sound** → **Volume** → Adjust volume → OK

- Tap **Use incoming call volume for notifications** () to use incoming transmission volume for notifications.

+ Phone Ringtone

Set Tones for Incoming Transmissions

In Home Screen, → **Settings** → **Sound** → **Phone ringtone** → Tap items to set → OK

+ Notification Ringtone

Select Notification Tones

In Home Screen, → **Settings** → **Sound** → **Notification ringtone** → Tap items → OK

+ Audible Touch Tones

Enable/Disable Dialpad Tones

In Home Screen,   

Audible touch tones

· Tap **Audible touch tones** to toggle setting On () / Off ()

· Cancel this setting to improve battery life.

+ Audible Selection

Enable/Disable Confirmation Tones

In Home Screen,   

Audible selection

· Tap **Audible selection** to toggle setting On () / Off ()

· Cancel this setting to improve battery life.

+ Screen Lock Sounds

Enable/Disable Screen Lock Tone

In Home Screen,   

Screen lock sounds

· Tap **Screen lock sounds** to toggle this setting On () / Off ()

· Cancel this setting to improve battery life.

+ Haptic Feedback

Enable/Disable Touch Vibration

In Home Screen,   

Haptic feedback

· Tap **Haptic feedback** to toggle setting On () / Off ()

Applications

Application Settings

+ Unknown Sources

Enable Non Market Applications

In Home Screen,   

Unknown sources

· Tap **Unknown sources** to toggle this setting On () / Off ()

· If confirmation appears, follow onscreen instructions.

+ Manage Applications

Confirm Name, Version, Size, etc. of Installed Applications

In Home Screen,   

Manage applications 

· Force close, or uninstall applications.

+ Running Services

Show Active Applications

In Home Screen,   

Running services

· Tap application then **Stop** to stop it.

+ Storage Use

Show Services Currently Running

In Home Screen,   

Storage use

+ Battery Use

Check Amount and Time of Battery Usage

In Home Screen,   

Battery use

· Adjust battery use for listed functions. Tap function name for adjustment window.

+ Development

Enable/Disable USB Debug

In Home Screen,     

- Tap **USB debugging** to toggle On ()/Off ().
- If confirmation appears, follow onscreen instructions.

Enable/Disable Sleep while Charging

In Home Screen,     

- Tap **Stay awake** to toggle setting On ()/Off ().

Enable/Disable Location Information

In Home Screen,     

- Tap **Allow mock locations** to toggle setting On ()/Off ().

Work Profile

Work Profile Settings

+ Using Divide Function

Setting Divide Function

In Home Screen,   

Follow onscreen instructions

Accounts & Sync

Accounts & Sync Settings

+ Background Data

Enable/Disable Background Transmissions

In Home Screen,  →  →  → 

- Tap  to toggle setting On () / Off ()
- If confirmation appears, follow onscreen instruction.
- Cancel this setting to improve battery life.

+ Auto-Sync

Enable/Disable Application Auto Sync

In Home Screen,  →  →  → 

- Tap  to toggle setting On () / Off ()
-  must be On () to enable this setting.

+ Add Account

Add Accounts

In Home Screen,  →  →  →  → Tap items to set → Follow onscreen instructions

Privacy

Privacy Settings

+ Back Up My Data

Automatically Back Up Data on Google Servers

In Home Screen,  →  →  → 

- Tap  to toggle setting On () / Off ()
- If confirmation appears, follow onscreen instruction.

+ Automatic Restore

Enable/Disable Automatic Restoration of Backed-up Settings (After Initialization, etc.)

In Home Screen,  →  →  → 

- Tap  to toggle setting On () / Off ()
-  must be On () to enable this setting.

+ Factory Data Reset

Restore Handset to Factory Defaults

In Home Screen,  →  →  →  → Confirm onscreen cautions →  → 

- This operation deletes all handset data. Backup essential data beforehand.
- Deleted handset data cannot be recovered.
- Set  On () to delete all data from user memory.
- For information on deleting all data from an SD Card, see "[Formatting SD Card.](#)"

Language & Keyboard

Language & Keyboard Settings

+ Select Language

Set User Interface Language

In Home Screen,     Tap setting

+ User Dictionary

Save Words in User Dictionary

In Home Screen,      

Input word 

· Tap saved word to edit/delete content.

+ OpenWnn/Flick Support

Enable/Disable Key Touch Tones

In Home Screen,     

· Tap  to toggle setting On () / Off ()

Enable/Disable Touch Vibration

In Home Screen,     

· Tap  to toggle setting On () / Off ()

Enable/Disable Auto Initial Caps

In Home Screen,     

· Tap  to toggle this setting On () / Off ()

Enable/Disable Predictive Entry

In Home Screen,     

· Tap  to toggle setting On () / Off ()

Date & Time

Date & Time Settings

+ Set Date

Setting Date Manually

In Home Screen,      

+ Select Time Zone

Setting Date Manually

In Home Screen,     

+ Set Time

Setting Time Manually

In Home Screen,      

+ Use 24-hour Format

Enabling/Disabling 24-hour Format

In Home Screen,    

· Tap  to toggle setting On () / Off ()

+ Select Date Format

Changing Date Format

In Home Screen,     

About Phone

About Phone

+ Software Update

Enable/Disable Automatic Software Updates

In Home Screen,     

· Tap  to toggle setting On () / Off ()

Enable/Disable Automatic Download Updates

In Home Screen,     

· Tap  to toggle setting On () / Off ()

· Available when  is On ()

Update Handset Software

In Home Screen,      

Fi /   

+ Status

Confirm Handset Status

In Home Screen,    

+ Battery Use

Confirm Battery Status/Battery Time

In Home Screen,     Tap items

· Adjustable items appear. Tap items to adjust.

+ Legal Information

Confirm Handset Copyrights & Licenses

In Home Screen,     Tap items

+ Model Number

Confirm Handset Model Number

In Home Screen,   

· Handset model number appears.

+ Android Version

Confirm Android Operating System Version

In Home Screen,   

· Android version info appears.

+ Baseband Version

Confirm Baseband Version

In Home Screen,   

· Baseband info appears.

+ Kernel Version

Confirm Kernel Version

In Home Screen,   

· Kernel version info appears.

+ OEM Version

Confirm OEM Version

In Home Screen,   

· OEM version info appears.

+ Build Number

Confirm Build Number

In Home Screen,   

· Build Number appears.

+ Certification

Confirm Certification Information

In Home Screen,    

Appendix

Specifications.....	70
Materials.....	70
Customer Service.....	71

Specifications

Model

Item	Description
Weight ¹	Handset alone: 145 g
Continuous Talk Time ¹	3G: 300 minutes
Continuous Standby Time ¹	3G: 320 hours
Charging Time ¹	3 hours
Dimensions (W x H x D)	64x126x10.6 mm
Maximum Output	3G: 0.5 W GSM: 2 W

¹ Approximate value

Materials

101DL

Parts	Material/Finishing
Outer Case	Plastic, polyurethane
Outer Case (TV Antenna Cover)	Plastic
Volume Key, Manner Switch	Stainless steel
Display/ Touchscreen	Glass
Camera Ring	Plastic/plating
Power Key	Plastic, polyurethane/plating
Receiver, Mic	PC resin

Customer Service

For SoftBank handset or service information, call General Information. For repairs, call Customer Assistance.

SoftBank Customer Support

General Information

From a SoftBank handset, dial toll free at 157
Call toll free from landlines at 0800-919-0157

Customer Assistance

From a SoftBank handset, dial toll free at 113
Call toll free from landlines at 0800-919-0113
If you cannot reach a toll free number, use the number (charges apply) below for your service area:
Hokkaido Area, Tohoku Area, Hokuriku Area, Kanto-Koshinetsu Area: 022-380-4380
Tokai Area: 052-388-2002
Kansai Area: 06-7669-0180
Chugoku, Shikoku Area, Kyushu, Okinawa Area: 092-687-0010

Smartphone Technical Support Center

From a SoftBank handset, dial toll free at 151
From a landline/IP phone, dial toll free at 0800-1700-151

SoftBank Mobile Global Call Center

From outside Japan, dial +81-3-5351-3491 (toll free from SoftBank handsets)
If handset is lost/stolen, call this number immediately (international charges apply)

Safety Precautions

Safety Precautions.....	74
General Notes.....	79

Safety Precautions

For proper handset use, carefully read Safety Precautions beforehand. Keep this guide for future reference.

Observe these safety precautions to prevent injury or damage to property.

SoftBank accepts no liability for any loss or damages incurred by you or a third party as a result of missed calls, etc., due to malfunction, erroneous operation or failure of this product.

Labels

Risks of injury or damage from improper use are categorized by levels. Understand these labels before reading this guide.

Mark	Descriptions
 DANGER	Great risk of death or serious injury ¹ from improper use
 WARNING	Risk of death or serious injury ¹ from improper use
 CAUTION	Risk of injury ² or damage to property ³ from improper use

- 1 Serious injury includes: Loss of eyesight, physical injury, high temperature burns, low temperature burns, electric shock, fractures, poisoning and other conditions having lasting effects or requiring hospitalization or long-term treatment.
- 2 Injury includes: Burns, electric shock, and other conditions not requiring hospitalization or long-term treatment.
- 3 Damage to property includes: Incidental damage to structures and household property and/or to pets and livestock.

Symbols

These symbols indicate prohibited or compulsory actions. Make sure you thoroughly understand their meanings before reading on.

Mark	Descriptions
 Prohibited	Action prohibited
 Do Not Disassemble	Disassembly prohibited
 Avoid Liquids Or Moisture	Exposure to liquids prohibited
 Do Not Use Wet Hands	Handling with wet hands prohibited
 Compulsory	Action compulsory
 Disconnect Power Source	Unplug power cord

Handset, USIM Card, AC Charger, USB Cable, Earphone with Mic & SD Card

DANGER



Compulsory

Use SoftBank specified devices (AC Charger or USB Cable) only.

Use of non-specified devices may cause Battery to leak, overheat, rupture or ignite; or may cause Charger to overheat, ignite or malfunction.



Do Not Disassemble

Do not disassemble/modify/solder handset.

May cause fire, injury, electric shock or malfunction. Also, Battery may leak, overheat, rupture or ignite.

Modifying handset is a violation of the Radio Law and subject to penalty.



Avoid Liquids Or Moisture

Keep liquids away from handset.

If handset or Battery is not dried after exposure to fluids (water, pet urine etc.), or Battery is charged while wet, overheating, electric shock, fire, injury, malfunction, etc. may occur. Be careful of where used or handled.



Prohibited

Do not charge, use or leave handset in places subject to high temperatures (near an open flame or heating equipment, in direct sunlight or inside a car on a hot day).

May cause deformation or malfunction; or may cause Battery to leak, overheat, ignite or rupture. Also, the outer housing may become hot resulting in burns.



Prohibited

Do not use excessive force to attach AC Charger, USB Cable or Earphone with Mic to handset. AC Charger or USB Cable may be the wrong way around.

Battery may leak, overheat, rupture or ignite.

⚠ WARNING

Prohibited

Do not place handset, AC Charger, USB Cable or Earphone with Mic in a microwave oven or pressure cooker, or on an induction cooktop.

May cause Battery to leak, overheat, rupture or ignite; or may cause handset, AC Charger, USB Cable or Earphone with Mic to overheat, emit smoke, ignite or malfunction.



Compulsory

Turn off handset when entering gas stations or other places where flammable gases (propane gas, gasoline, etc.) or fine particulates generate. Be sure to turn off handset beforehand. Do not charge Battery in such places.

Gases may ignite.

Using handset near petrochemicals or other flammables may cause fire or explosion.



Prohibited

Do not drop/throw handset or expose it to excessive shock.

May cause Battery to leak, overheat, rupture or ignite; or may cause fire, electric shock or malfunction.



Compulsory

If you notice an unusual sound, odor, smoke, etc. while using, charging or storing handset, immediately:

1. Unplug AC Charger from outlet.
2. Turn handset power off.

Continued use may cause fire or electric shock.



Prohibited

Keep liquids (water, pet urine, etc.) and conductive materials (e.g. pencil lead, metal fragments, metal necklaces, hairpins, etc.) away from Audio Port, or External Device Port.

May cause short circuit, resulting in fire or malfunction.

⚠ CAUTION

Prohibited

Do not place handset on an uneven or unstable surface.

Handset may fall, leading to injuries or handset malfunction. Be particularly careful while charging or when vibrator is activated.



Compulsory

Keep handset out of reach of infants.

Failing to do so may result in small parts being accidentally swallowed or may cause injury.



Compulsory

When a child uses handset, parent supervision is advised.

Provide child with proper instructions. Failing to do so may cause injury, etc.

Handset

WARNING

Prohibited

Do not use while operating a vehicle (car, motorcycle, bicycle, etc.)

May cause a traffic accident. Use of a mobile phone while driving is prohibited by law, and is subject to penalty. Stop vehicle in a safe location (where parking is allowed) before using handset.



Compulsory

Keep handset power off near high precision electronic devices or devices using weak signals.

Handset may cause these devices to malfunction.

Devices that may be affected:

Hearing aids, implanted cardiac pacemakers, implanted defibrillators and other electronic medical equipment; fire alarms, automatic doors and other automatic control devices.



Compulsory

Keep handset power off aboard aircraft.

When in-flight use is permitted, observe airline instructions.



Compulsory

If you have a weak heart, be careful with incoming call vibrator and ringtone volume settings.

These may affect your heart.



Compulsory

If thunder is heard while outside, immediately turn handset power off and seek shelter.

Failing to do so may attract lightning and cause electric shock.



Prohibited

Do not turn on or shine Light near someone's eyes. Do not look directly at Light when it is on. Also do not point Light at someone else and turn it on.

May cause harm such as loss of eyesight. Especially, do not photograph infants up close. May also temporarily affect eyesight or startle, leading to injury or other accident.

CAUTION

Prohibited

Do not use handset in a vehicle if it affects in-vehicle electronic devices.

Use of handset in some types of vehicles may, in some rare cases, affect in-vehicle electronic devices and interfere with safe driving.



Compulsory

If skin abnormality occurs with use of handset, immediately discontinue use and consult a doctor.

Handset contains metals, etc. Depending on your physical condition, you may experience itchiness, rash, etc.

For more information, see [Materials](#).



Prohibited

Keep magnetic cards, etc. away from handset.

Failing to do so may cause magnetic data on a cash card, credit card, telephone card or floppy disk to be lost.



Compulsory

Handset may become hot during prolonged use.

Skin contact for extended period may cause low-temperature burns.



Prohibited

Always maintain some distance from Speaker while ringtones, music or other handset sounds play.

Excessive volume may damage hearing.



Compulsory

Do not turn volume up too high when using earphones.

Using earphones for extended periods at high volume may impair hearing or sudden loud sound may harm your ears.

USIM Card & SD Card

CAUTION



Prohibited

Do not insert objects other than SD Card into SD Card Slot.

Doing so may cause overheating, electric shock or malfunction.



Prohibited

Do not subject SD Card to vibration or shock or remove it from Slot or turn off handset while data is being written to or read from SD Card.

Doing so may cause data loss or malfunction.



Prohibited

Use only SD Card supported by handset.

Failing to do so may cause data loss or malfunction.

Handset supports SD Card with a storage capacity of up to 32 GB.



Prohibited

Do not use excessive force when inserting or removing USIM Card.

Doing so may cause a malfunction. Be careful not to injure a hand or finger when removing USIM Card.



Prohibited

Insert specified USIM Card only.

Using other SIM cards may cause malfunction/data loss.

AC Charge & USB Cable

WARNING



Prohibited

Do not cover or wrap with clothing or bedding during charging.

Heat may build up resulting in fire or malfunction.



Prohibited

Use the specified power supply and voltage.

Failing to do so may cause fire or malfunction.

AC Charger: 100 V AC to 240 V AC (for household AC outlets only)

Also, do not use commercially available voltage converters, as when travelling.

May cause fire, electric shock or malfunction.



Disconnect Power Source

Hold plug and unplug AC Charger from outlet before extended periods of handset disuse.

Failing to do so may cause electric shock, fire or malfunction.



Disconnect Power Source

If liquid (water, pet urine, etc.) gets into AC Charger, immediately hold plug and unplug AC Charger from outlet.

Failing to do so may cause electric shock, smoke emission or fire.



Compulsory

If dust accumulates on AC Charger plug, hold plug and unplug AC Charger from outlet and wipe with a dry cloth.

Failing to do so may cause fire.



Compulsory

When plugging AC Charger into outlet, keep conductive materials (pencil lead, metal parts, necklaces, hair pins, etc.) away from AC Charger plug/USB Cable terminals and plug AC Charger firmly into outlet.

Failing to do so may cause electric shock, short circuit, fire, etc.



Do Not Use
Wet Hands

Do not plug/unplug AC Charger with wet hands.

May cause electric shock or malfunction.



Prohibited

If thunder is audible, do not touch AC Charger.

May cause electric shock.

CAUTION



Disconnect
Power Source

Firmly hold plug and unplug AC Charger from outlet before cleaning.

Failing to do so may cause electric shock.



Compulsory

Do not unplug AC Charger by pulling the cord. Firmly hold plug and unplug AC Charger.

Pulling the cord may damage the cord resulting in electric shock or fire.



Prohibited

When AC Charger is connected to an outlet, do not pull on cord or otherwise subject AC Charger to strong shock.

May cause injury or malfunction.

Handset Use & Electronic Medical Equipment

This section is based on "Guidelines on Safeguarding Medical Equipment from Electromagnetic Waves from Mobile Phones and Other Devices" (Electromagnetic Compatibility Conference Japan), and "Research Report on the Influence of Electromagnetic Waves on Medical Equipment" (Association of Radio Industries and Businesses, March 2001).

WARNING



Compulsory

Keep handset a minimum of 22 centimeters from implanted cardiac pacemaker or implanted defibrillator.

Radio waves may interfere with the operation of implanted cardiac pacemakers or implanted defibrillators.



Compulsory

When using electronic medical equipment (other than implanted cardiac pacemakers/defibrillators) outside of medical institutions, consult device manufacturer about the influence of radio waves.

Radio waves may interfere with the operation of electronic medical equipment.



Compulsory

Handset radio waves may affect electronic medical equipment. Observe these guidelines in medical institutions:

- Do not bring handset into an operating room, ICU (Intensive Care Unit) or CCU (Coronary Care Unit).
- Turn off handset in hospital wards.
- Turn off handset even in lobbies or areas where use is permitted if there is electronic medical equipment nearby.
- Observe the instructions of individual medical institutions and do not use or bring handset into prohibited areas.



Compulsory

Keep handset power off in crowded places such as rush hour trains; a person with an implanted cardiac pacemaker or implanted defibrillator may be nearby.

Radio waves may interfere with the operation of implanted cardiac pacemakers or implanted defibrillators.

General Notes

General Use

- Various applications from "Android Market" (TM), which is provided by Google, can be installed on this handset. SoftBank provides no warranty for the content of applications installed by the user (quality, reliability, legality, fitness for purpose, truthfulness of information, accuracy etc.), or for problems (viruses etc.) caused by such applications.
- If a security code is set for canceling Screen Lock on this handset, take care to remember it. If you forget code, take handset to a SoftBank Shop. Please note that settings etc. made by the customer will be lost.

Precautions Concerning Radio Waves

- This product is certified compliant with technical standards as wireless equipment for wireless stations in low-power data communications systems under the Radio Act. Therefore, no wireless station license is required for using this product. It is only usable within Japan.
- Do not use this product in the following locations:
 - In magnetic fields close to microwave ovens, or where static electricity or radio wave interference is generated, or near devices using radio waves close to 2.4 GHz (the environment may prevent signal reception).
- This device is certified compliant with technical standards, so the following actions are punishable by law.
 - Disassembly and modification of this product.
- The wireless channel for this product uses the same frequency band as the following devices and wireless stations.
 - Industrial, scientific and medical devices.
 - Wireless stations for mobile identification used on factory production lines etc.
 - Premises wireless stations (those requiring permits)
- Use of this device may cause interference with the above devices and wireless stations, so pay attention to the following points:
 1. Before using the device, confirm that premises wireless stations for identifying mobile units, specified low power radio stations, and amateur radio stations are not being operated nearby.
 2. If the device causes harmful radio interference to premises wireless stations for identifying mobile units, immediately change the frequency band to avoid interference.
 3. If the device causes radio interference to specified low power radio stations for identifying mobile units, contact [SoftBank Customer Support](#).

Item	Specifications
Frequency band used	2.4 GHz
Modulation system	DS-SS system/OFDM system
Expected interference range	Up to 40 m
Possibility of frequency alteration	The full band can be used, and bands for premises wireless stations and specified low power radio stations can be avoided.

Copyrights

Copyright laws protect sounds, images, computer programs, databases, other materials and copyright holders. Duplicated material is limited to private use only. Use of materials beyond this limit or without permission of copyright holders, such as by copying (including altering data format), modifying, transferring to anyone else, or making available over a network, may constitute copyright infringement, and be subject to criminal punishment. Comply with copyright laws when making copies with handset camera or using images captured with handset camera.

Portrait Rights

Portrait rights protect individuals' right to refuse to be photographed or to refuse unauthorized publication/use of their photographs. Portrait rights consist of the right to privacy, which is applicable to all persons, and the right to publicity, which protects the interests of celebrities. Therefore, photographing others including celebrities and publicizing/distributing their photographs without permission is illegal; use handset camera responsibly.

Streaming

Communication continues during streaming even while streaming is paused, so packet communications charges apply.

Handling

- Take care to avoid wetting the device when using it in rainy or snowy weather, or in high humidity. Handset, AC Charger, USB Cable, and Earphone with Mic are not waterproof.
- If handset freezes, Long Press Power Key and Volume Down Key together for 15 s to reset.

Quake Alert (Application)

- Quake Alert Setting is enabled by default.
- An alert tone sounds when an alert is received, even in Silent mode.
- Alerts are not received during calls/transmissions or in poor signal conditions.
- Depending on usage/situation, handset may receive alerts for other areas or no alerts.
- Standby Time may decrease when Quake Alert Setting is enabled.
- SoftBank Mobile cannot be held liable for any damages associated with this service, including accidents resulting from received information, reception timing or reception failure.

RF Exposure Information/Specific Absorption Rate (SAR) Information

SoftBank 101DL meets the MIC* technical regulation for exposure to radio waves.

The technical regulation established permitted levels of radio frequency energy, based on standards developed by independent scientific organizations through periodic and thorough evaluation of scientific studies.

The regulation employs a unit of measurement known as Specific Absorption Rate, or SAR.

SAR limit is 2 watts/kilogram (W/kg)** averaged over ten grams of tissue. SAR limit includes a substantial safety margin designed to assure the safety of all persons, regardless of age/health.

The value of SAR limit is equal to the international guidelines recommended by ICNIRP***. All mobile phones should be confirmed to comply with the regulation before sale to the public.

The highest SAR value for this mobile phone is 0.585 W/kg when tested for use at the ear.

The test for SAR was conducted in accordance with MIC testing procedure, using standard operating positions, with the phone transmitting at its highest permitted power level. While there may be differences between SAR levels of various phones and at various positions, all phones meet MIC technical regulation. Although SAR is determined at the highest certified power level, actual SAR of the phone during operation can be well below the maximum value.

For more information about SAR, see the following websites:

- Ministry of Internal Affairs and Communications (MIC)
<http://www.tele.soumu.go.jp/e/sys/ele/body/index.htm>
- Association of Radio Industries and Businesses (ARIB)
<http://www.arib-emf.org/> (Japanese)

*Ministry of Internal Affairs and Communications

**The technical regulation is provided in Article 14-2 of the Ministry Ordinance Regulating Radio Equipment.

***International Commission on Non-Ionizing Radiation Protection

SoftBank Body SAR Policy

For body worn operation, this mobile phone has been tested and meets RF exposure guidelines when used with an accessory containing no metal and positioning the handset a minimum 15 mm from the body. Use of other accessories may not ensure compliance with RF exposure guidelines.

For more information, see SOFTBANK MOBILE Corp. Website:

<http://www.softbankmobile.co.jp/ja/info/public/emf/emf02.html> (Japanese)

FCC RF Exposure Information

Your handset is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The guidelines are based on standards that were developed by independent scientific organization through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless handsets employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. The tests are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC for each model.

The highest SAR value for this model handset as reported to the FCC when tested for use at the ear is 0.79 W/kg, and when worn on the body in a holder or carry case, is 1.28 W/kg. Body-worn Operation; This device was tested for typical body-worn operations with the back of the handset kept 1.5 cm from the body.

To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5 cm separation distance between the user's body and the back of the handset. The use of beltclips, holsters and similar accessories should not contain metallic components in its assembly.

The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided. The FCC has granted an Equipment Authorization for this model handset with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. SAR information on this model handset is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/ea/> after searching on FCC ID E2KV04B001.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) website at <http://www.phonefacts.net>.

European RF Exposure Information

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg and the highest SAR value for this device when tested at the ear was 0.521 W/kg*. As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this User Guide. In this case, the highest tested SAR value is 0.584 W/kg. As SAR is measured utilizing the devices highest transmitting power the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network.

The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure then you can do so by limiting the length of calls or using a hands-free device to keep the mobile phone away from the head and body.

*The tests are carried out in accordance with international guidelines for testing.

101DL User Guide Index

A	
About Phone.....	68
Accounts & Sync.....	66
Activating Screen Lock.....	24
Android Market™.....	21
Applications.....	64
B	
Basic Operations.....	16
Bluetooth®.....	55
C	
Calling.....	32
Calling Outside Japan.....	58
Charging Battery.....	11
Contacts.....	37
Creating/Sending Gmail.....	42
Customer Service.....	71
D	
Date & Time.....	67
G	
General Notes.....	79
Google Account.....	19
H	
Handset Phone Number.....	17
Home Screen Basics.....	28
I	
Image Files (Gallery).....	51
Image Files (PhotoStage).....	50
Imaging.....	46
Internet Mail Settings.....	43
Introduction.....	3
L	
Language & Keyboard.....	67
M	
Materials.....	70
Messaging.....	40
Mobile Manners.....	17
Music Files.....	50

N

Notifications Window.....29

O

Optional Services.....33

P

Package Contents.....6

Parts & Functions.....6

Power On/Off.....12

Privacy.....66

S

Safety Precautions.....74

Security Codes.....23

Sending SoftBank Mail.....40

Software Updates.....25

Sound.....63

Specifications.....70

Status Bar.....28

T

Text Entry.....18

Touchscreen Operations.....13

U

User Memory and SD Card.....8

USIM Card Installation.....7

USIM PIN.....23

W

Web Browsing.....43

Wi-Fi.....54

Wireless & Networks.....62

Work Profile.....65

SoftBank 101DL User Guide

March 2012, First Edition
SOFTBANK MOBILE Corp.

Visit [SoftBank Shop](#) for assistance

Model : SoftBank 101DL
Manufacturer : Dell Inc.