

# Lenovo TAB7

## User Guide



# Lenovo TAB7

## User Guide Contents

Introduction	
About the User Guide.....	3
<b>Getting Started</b>	
Parts & Functions.....	6
USIM Card.....	7
SD Card.....	9
Charging Battery.....	14
Power On/Off.....	15
Making Initial Settings.....	16
Using a Google Account.....	18
Unlocking Screen.....	22
<b>Basic Operations</b>	
Basic Operation.....	26
Using Touchscreen.....	27
Silent Mode.....	28
Airplane Mode.....	29
Text Entry.....	30
Updating Software.....	31
<b>Tablet Interface</b>	
Screens.....	34
Status Bar.....	35
Using Notifications Window.....	36
Using Quick Settings.....	36
<b>Messaging</b>	
Sending Messages (+Message).....	40
Using Gmail.....	41
<b>Internet</b>	
Using Chrome.....	44
<b>Camera</b>	
Capturing Still Images/Videos.....	48
Viewing Captured Still Images/Videos (Photos).....	50
<b>Application Basics</b>	
Applications.....	54
Adding/Deleting Application.....	55
<b>Bluetooth</b>	
Connecting by Wi-Fi.....	58
Using Bluetooth® Function.....	59
<b>Tablet Settings</b>	
Tablet Settings.....	62
Data Usage Settings.....	63
Battery Settings.....	68
Sound & Vibration Settings.....	69
Display Settings.....	73
Biometrics and Passwords Settings.....	77
Safety & emergency Settings.....	84

System Settings.....	87
Other Settings.....	90
Global Services	
Before Using Tablet Abroad.....	96
Warranty/Specifications/Customer Services	
Warranty & After-Sales Service.....	100
Specifications.....	100
Customer Service.....	101
Safety Precautions	
Safety Precautions.....	104
General Notes.....	112
Bluetooth®/Wi-Fi (Wireless LAN) Functions.....	115
Waterproofing/Dustproofing.....	116
Intellectual Property Rights.....	117
Radio Wave Exposure and Specific Absorption Rate (SAR) Information.....	119

## About the User Guide

---

Most operation descriptions are based on default settings. Unless noted otherwise, descriptions are for Home Screen. Some operation descriptions may be omitted.

### Before Using This Product

Read "[Safety Precautions](#)" thoroughly beforehand for proper usage.

Accessible services may be limited by subscription contract conditions.

### Data Communication

- Tablet is designed to be always connected to the Internet. Communication is initiated automatically for some functions such as data syncing.
- Large-volume data communication, such as downloading applications and viewing videos, incurs expensive transmission fees. Subscription to a flat-rate plan is strongly recommended.
- Even if connected by Wi-Fi, some applications and services incur transmission fees.

### Screenshots & Key Labels

Screenshots in the User Guide may differ in appearance with actual Display. Key labels in the User Guide are simplified for description purposes and differ with actual Display.

### Other Notations

In the User Guide, the product is referred to as "tablet." microSD™/microSDHC™/microSDXC™ Card is referred to as "SD Card."




## Getting Started

Parts & Functions.....	6
USIM Card.....	7
SD Card.....	9
Charging Battery.....	14
Power On/Off.....	15
Making Initial Settings.....	16
Using a Google Account.....	18
Unlocking Screen.....	22


## Parts & Functions

### Tablet (Front)

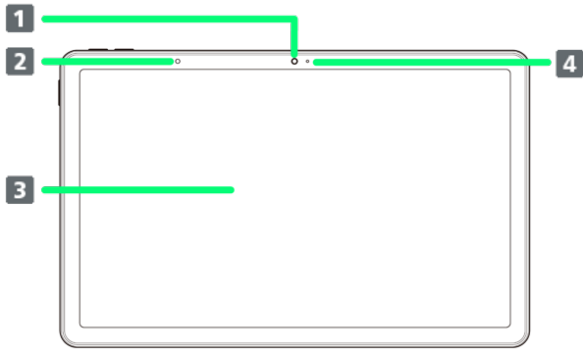


Part	Description
<b>1</b> Front Camera	Use to shoot photos or videos of yourself.
<b>2</b> Brightness Sensor	Detects ambient light level, etc.
<b>3</b> Display	Touchscreen-type display, operate with your fingers on Display.
<b>4</b> Charging Lamp	Lights/flashes while charging or for arriving mail.

### Tablet (Back and Sides)

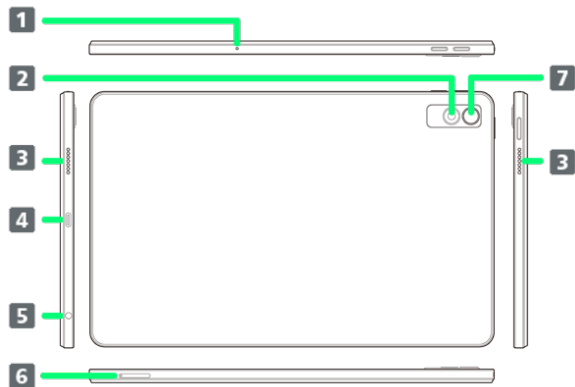 

Part	Description
<b>1</b> Mic	Use such as when recording video.
<b>2</b> Light	Use to shoot photos or videos of yourself.
<b>3</b> Speaker	Listen to music, video sound, etc.
<b>4</b> USB Type-C™ Port	Connect Micro USB Cable.
<b>5</b> Headphone Port	Connect headphones, etc.
<b>6</b> USIM/SD Card Tray	Install/remove USIM Card and SD Card.
<b>7</b> Camera	Capture photos and videos.

### Keys

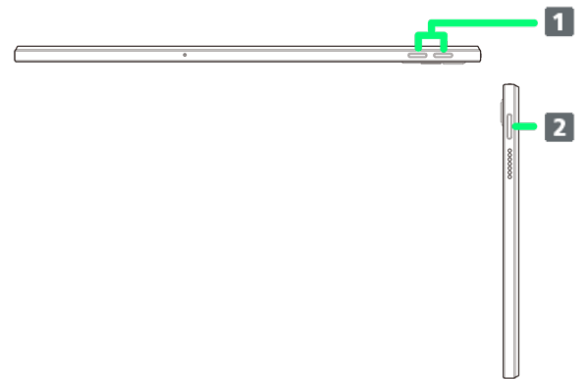

Part	Description
<b>1</b> Volume Up/Down Key	Adjust Volume.
<b>2</b> Power Key	Toggle Display on/off. Long Press for power on/off.




## USIM Card

USIM Card is an IC card containing customer information.

### Handling USIM Card

For USIM card handling, see following items.

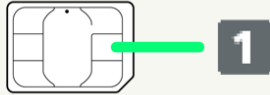

#### IC chip

For USIM Card handling, see SoftBank Website.

<https://www.softbank.jp/mobile/support/protect/usim/>

- Always keep the IC chip clean.
- Wipe clean with a dry, soft cloth.
- Avoid applying labels. May damage USIM Card.

### USIM Card Cautions

Observe the following when using USIM Card.


- Customer is responsible for any damage caused by inserting USIM Card in an other-brand IC card reader, etc. The company is not responsible in such case.
- USIM Card is the property of the company.
- USIM is replaceable (at cost) in case of loss/damage.
- Return USIM Card to the company when cancelling subscription.
- Returned USIM Cards are recycled for environmental purposes.
- Note that USIM Card specifications and performance may change without notice.
- It is recommended that you keep a separate copy of information that is stored on USIM Card. The company is not responsible for damages from stored information that is lost.
- Always follow emergency procedures to suspend service if your USIM Card or tablet (USIM Card inserted) is lost/stolen. For details, contact [Customer Service](#).
- Always power off tablet before inserting/removing USIM Card.
- Some services, functions, etc. may have restrictions when an other-carrier USIM card is used. SoftBank Corp. does not guarantee operation whatsoever

## Inserting USIM Card

Always power off beforehand.


**1**

Insert USIM/SD Card Removal Tool (complimentary sample) straight in hole in USIM/SD Card Tray

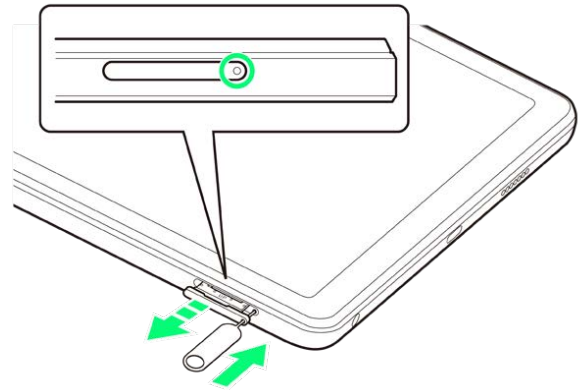


**2**

Pull USIM/SD Card Tray straight out

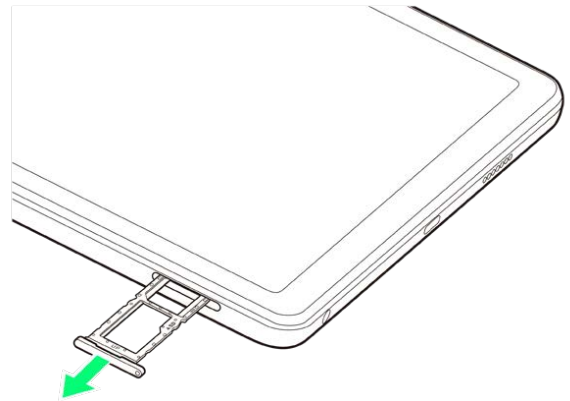

**3**


Set USIM Card in USIM/SD Card Tray

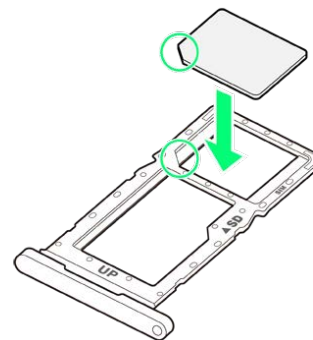

- Place gently, noting orientation of USIM Card (notch/IC (gold) chip facing down).
- Make sure USIM Card is in USIM/SD Card Tray securely.

4

Insert USIM/SD Card Tray straight in USIM/SD Card Slot

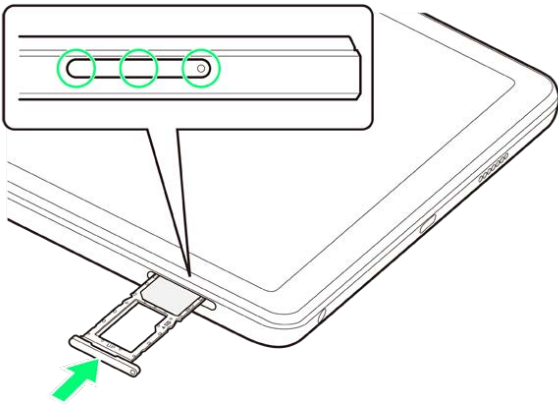

USIM Card is inserted.


- Press firmly where circled ○, and make sure there is no gap between tablet and USIM/SD Card Tray.

## Removing USIM Card

Always power off beforehand.


1

Insert USIM/SD Card Removal Tool (complimentary sample) straight in hole in USIM/SD Card Tray

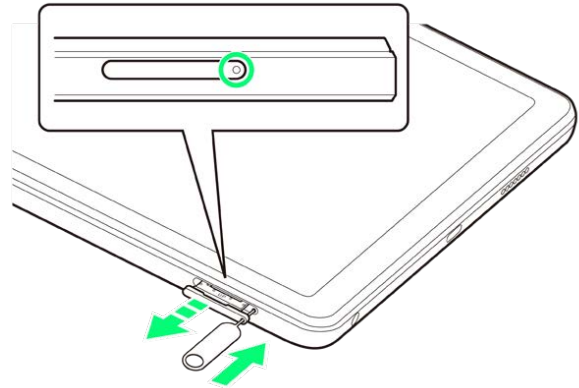


2

Pull USIM/SD Card Tray straight out

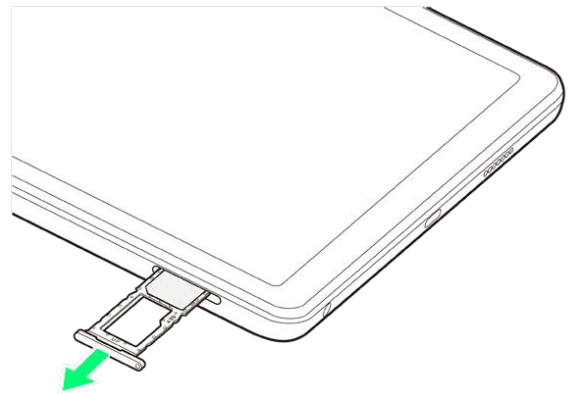


3


Remove USIM Card from USIM/SD Card Tray

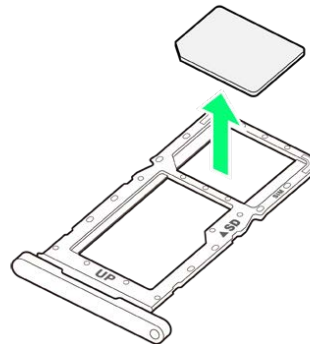

4

Insert USIM/SD Card Tray straight in USIM/SD Card Slot

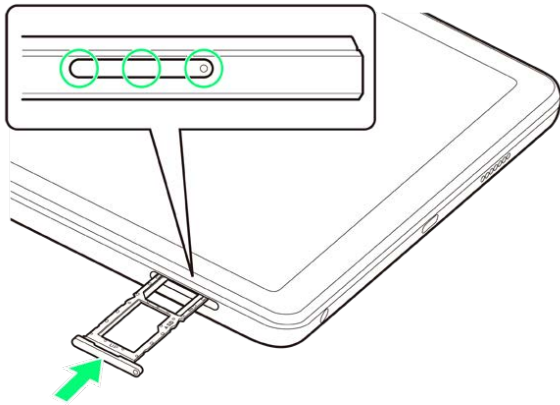

 USIM Card is removed.

- Press firmly where circled O, and make sure there is no gap between tablet and USIM/SD Card Tray.

## SD Card

Tablet supports SD Cards up to 2 TB. Some SD Cards may not operate properly.

When using a new SD card for the first time, always format it on tablet.

### SD Card Cautions

#### Data

Information stored on SD Card can become lost or changed accidentally or as a result of damage. It is recommended that you keep a separate copy of important data. The company is not responsible for damages from data that is lost or changed.

#### Reading/Writing Data

Never power off while reading or writing data.

#### Battery Level

A low battery charge may prevent reading/writing to SD Card.

### Handling SD Card


Use/store SD Cards away from the reach of infants. May cause choking if swallowed.

### Inserting SD Card

Always power off beforehand.


1

Insert USIM/SD Card Removal Tool (complimentary sample) straight in hole in USIM/SD Card Tray

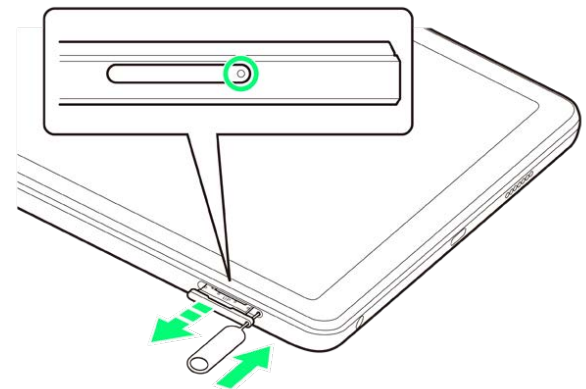


2

Pull USIM/SD Card Tray straight out

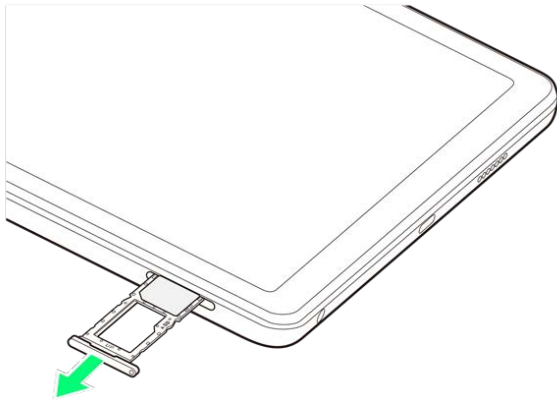

3


Set SD Card in USIM/SD Card Tray

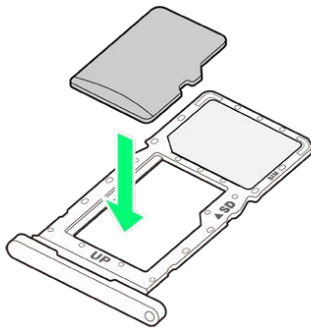


- Place gently, noting orientation of SD Card (metal terminal side facing down).
- Make sure SD Card is in USIM/SD Card Tray securely.

4

Insert USIM/SD Card Tray straight in USIM/SD Card Slot

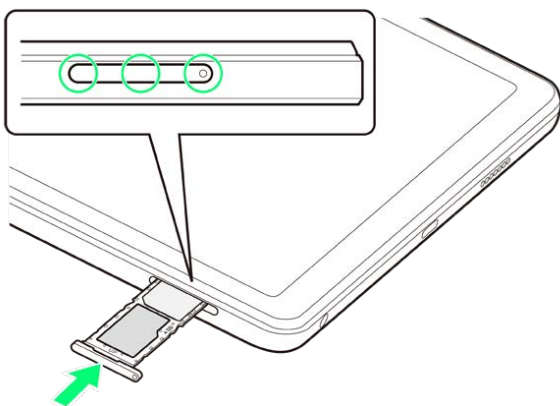


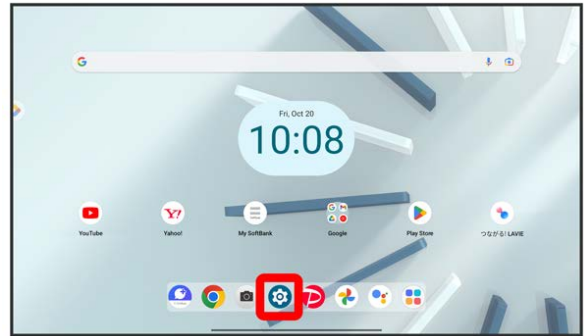 
 SD Card is inserted.

- Press firmly where circled O, and make sure there is no gap between tablet and USIM/SD Card Tray.

## Formatting SD Card


1

In Home Screen,  (Settings)




2

Storage

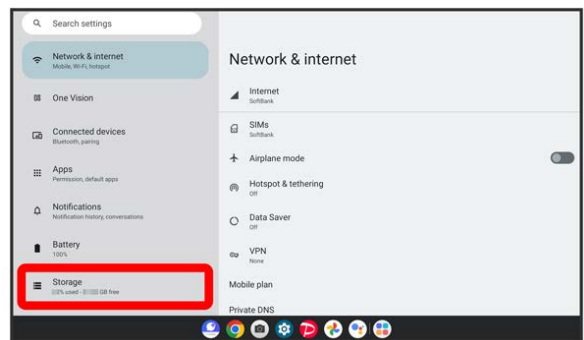


3

This device  SD card

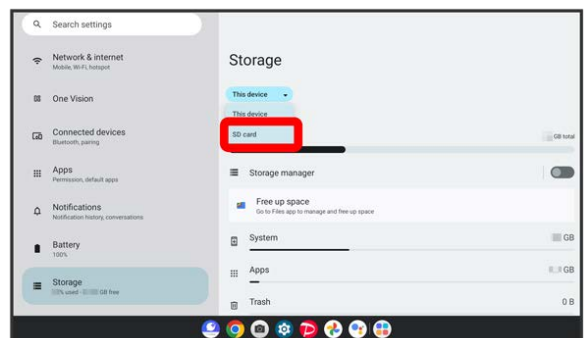


4

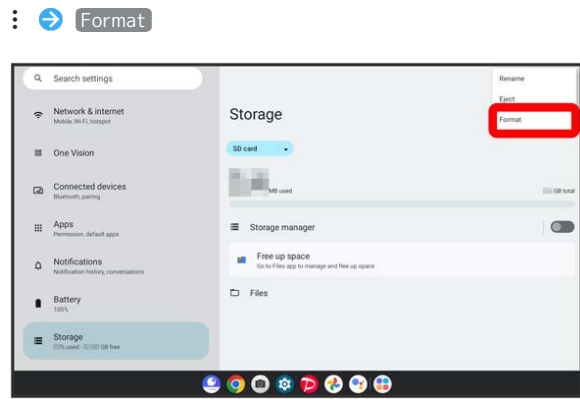


5

Select output file format → Next

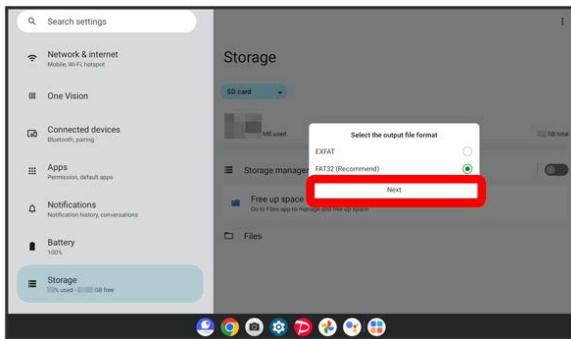


6

FORMAT

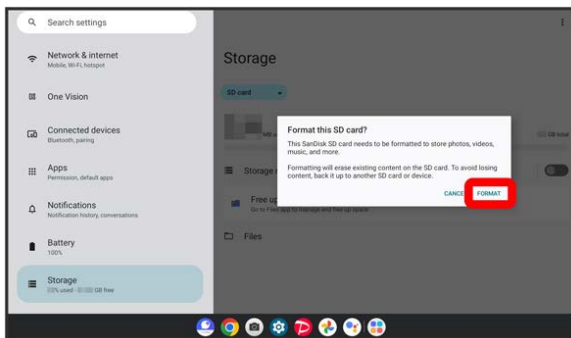

7

Done

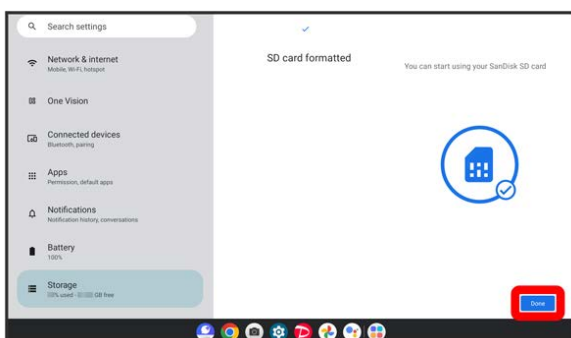

All data on SD Card is erased.

### Formatting SD Card Cautions


When using a new SD Card for the first time, always format it on tablet.


- Formatting erases all data on SD Card. Carefully check any SD Card that was used on another device before formatting.
- Charge Battery while formatting, or format with adequate battery charge.

## Unmounting SD Card

Always unmount SD Card before removing.


1

In Home Screen,  (Settings)

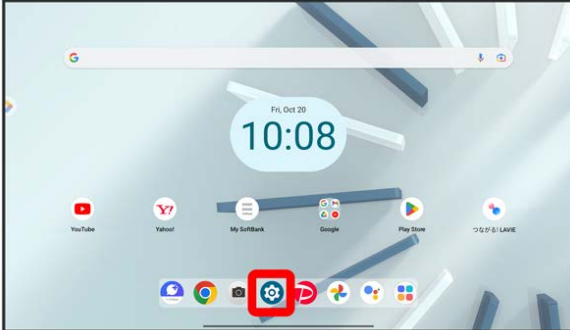


2

Storage

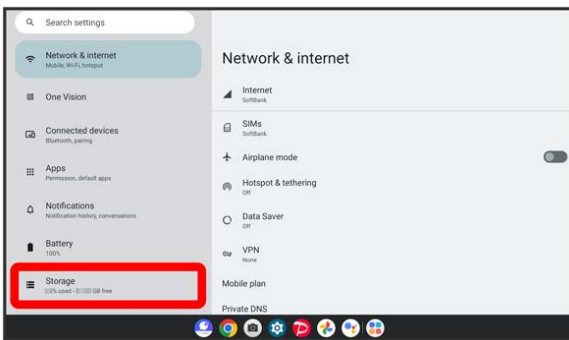


3

 
This device  SD card

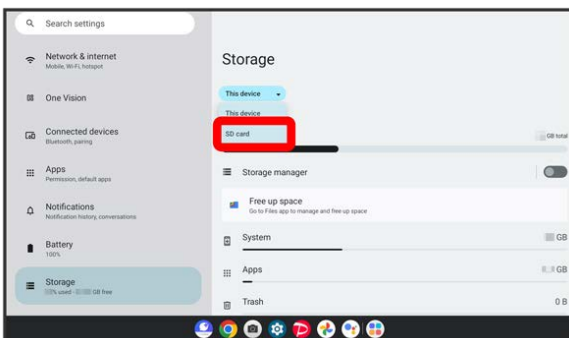

4

 Eject

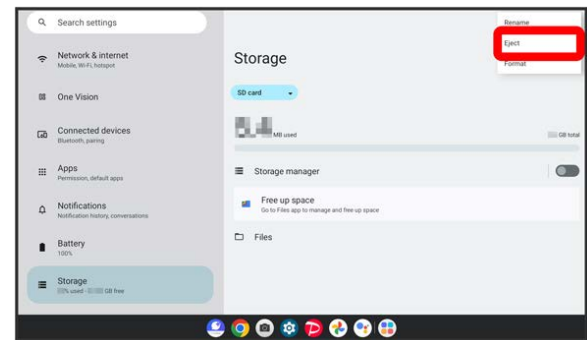


 SD Card is unmounted.

## Removing SD Card

 Always unmount SD Card and power off first.


1

Insert USIM/SD Card Removal Tool (complimentary sample) straight in hole in USIM/SD Card Tray

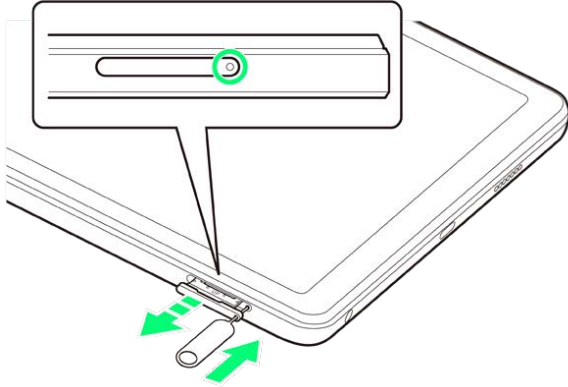


2

Pull USIM/SD Card Tray straight out

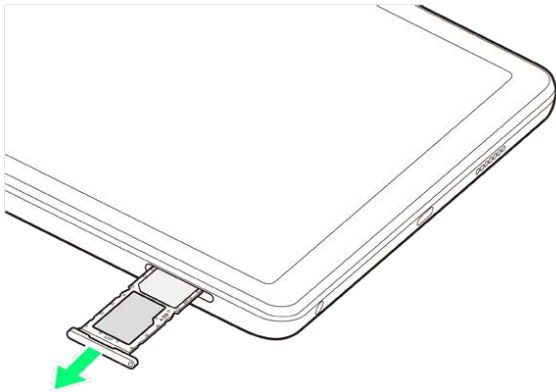


3

Remove SD Card from USIM/SD Card Tray

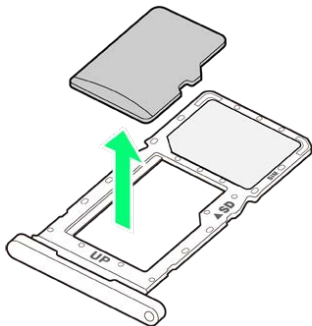

4

Insert USIM/SD Card Tray straight in USIM/SD Card Slot

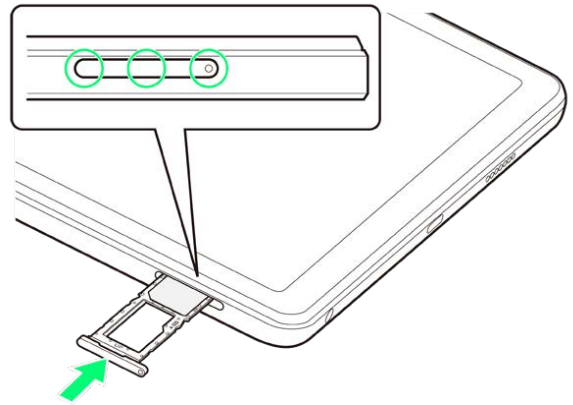

SD Card is removed.

- Press firmly where circled ○, and make sure there is no gap between tablet and USIM/SD Card Tray.

## Charging Battery

### 💡 Indications while Charging

Charging progress appears in lock screen.

- "Charging": normal charging
- "Charging rapidly": rapid charging
- "Charging slowly": low-speed charging

### ⚠️ Charging Cautions


Never connect USB Type-C plug while tablet or peripheral equipment is wet.

### Charging with AC Charger

AC Charger is an optional accessory. Be sure to use an AC Charger specified by SoftBank. For information on AC Charger and other peripheral devices, see SoftBank Website. Charging with AC Charger (USB Type-C™ rapid charging AC Charger with USB PD-PPS capability [ZSDBAV] (SB-AC22-TCPD)) is described as an example.


1

Insert USB Type-C plug of AC Charger into USB Type-C™ Port

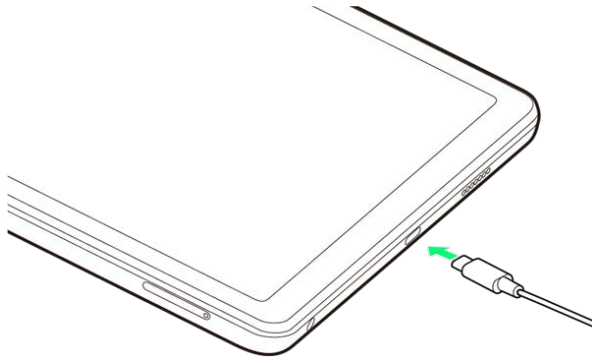

2


Raise plug on AC Charger and plug into household AC outlet

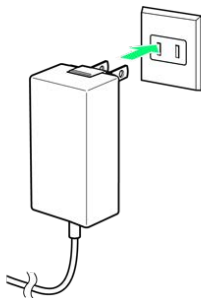

🚩 Charging Lamp lights up red when charging starts.  
Charging Lamp lights up green when Battery is charged.

3

After charging, unplug AC Charger from outlet and disconnect from tablet

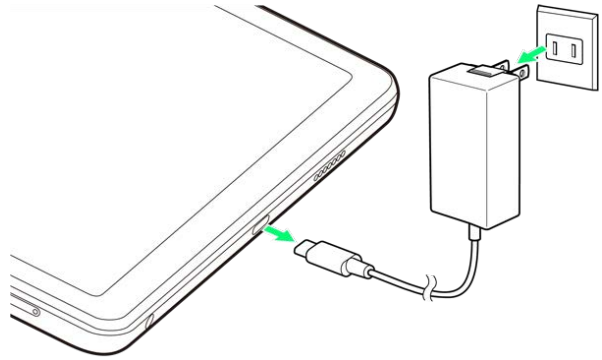

🚩 Charging ends.




# Power On/Off

## Powering On

1

Power Key (Long Press)

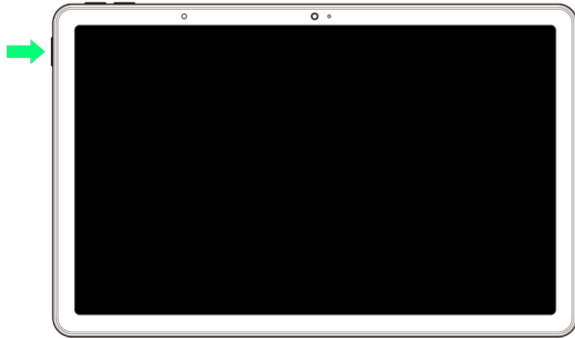

Lock screen appears.

- See "[Unlocking Screen](#)" to unlock the screen.
- Startup screen appears the first time tablet is powered on. See "[Making Initial Settings](#)" to make initial settings.

## Powering Off


1

Power Key (Long Press)




2

Power off

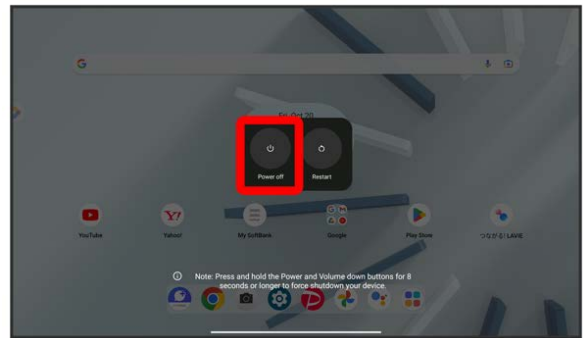

3

Tap to power off

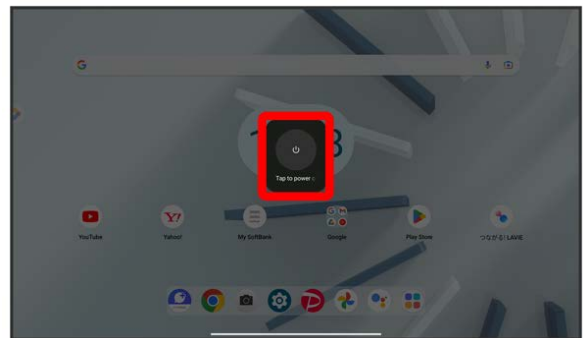

Tablet powers off.


## Making Initial Settings

 When powering on the first time, an initial settings wizard appears for optionally making Wi-Fi, Google™ account, and other settings. Follow onscreen instructions to set items. To use USIM Card, insert USIM Card before powering on tablet.

### Making Initial Settings


1

Select language then **Start**

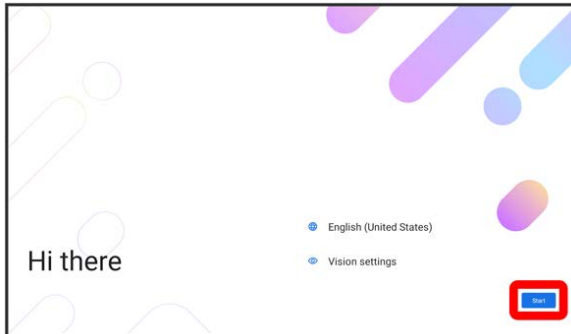


2

Check terms of usage, Tap  for "I have read and agreed to the terms detailed above." (  ) → **Next**

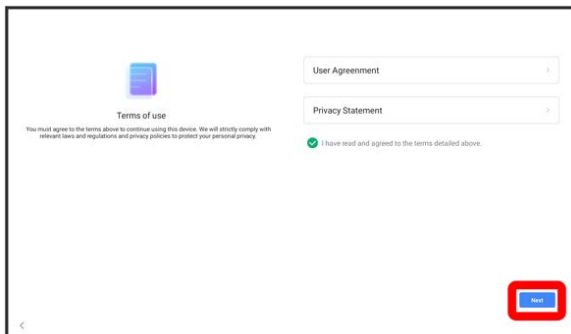

3

Follow onscreen prompts to set Wi-Fi

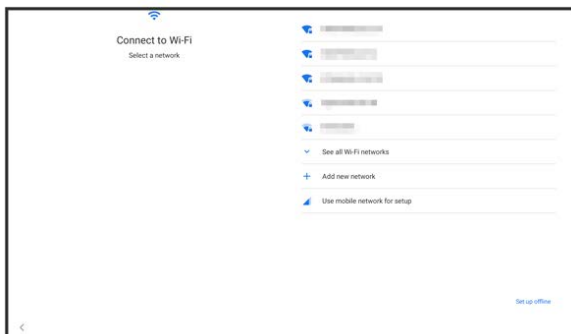

· To skip Wi-Fi settings, select **Use mobile network for setup** / **Set up offline** . Continue by following onscreen instructions.

4


Don't copy



· Tap **Next** to copy data from another mobile with Google account settings. Follow onscreen prompts.

5

Follow onscreen prompts to set a Google account

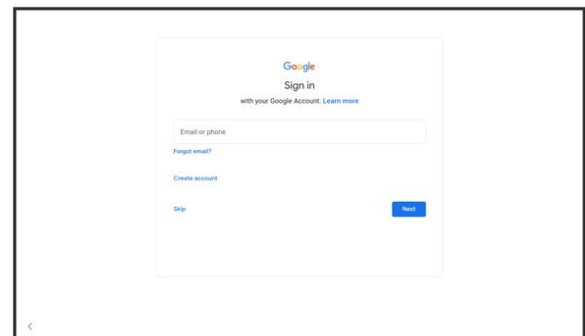


· For details on Google accounts, see "[Using a Google Account](#)."

· If not making Google account settings, Tap **Skip** → **Skip**


6

 Select items to set → **Accept**

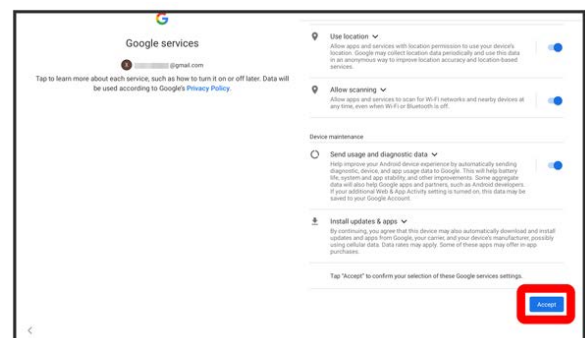

7


Follow onscreen prompts to set unlocking using password/ facial recognition

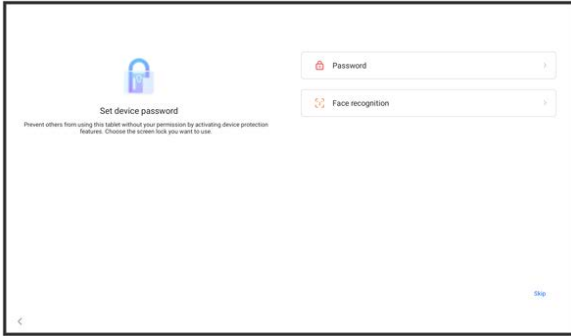

To not set password/facial recognition, Tap **Skip** .


8

**Continue**

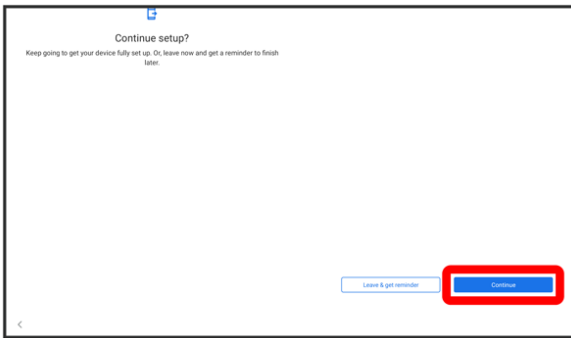

9

 Follow onscreen prompts to set Google Assistant

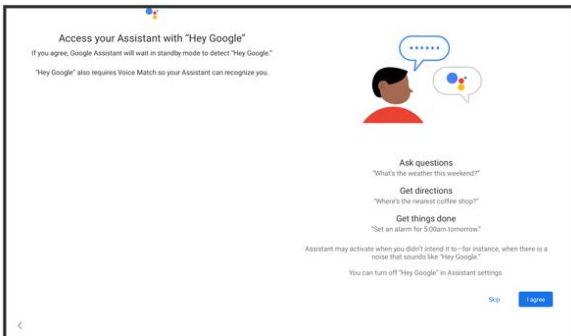

To not set Google Assistant, Tap **Skip** → **Skip** .

10


**Skip**



After Tapping **Add a card** follow onscreen prompts to save card information.


11

**Next**

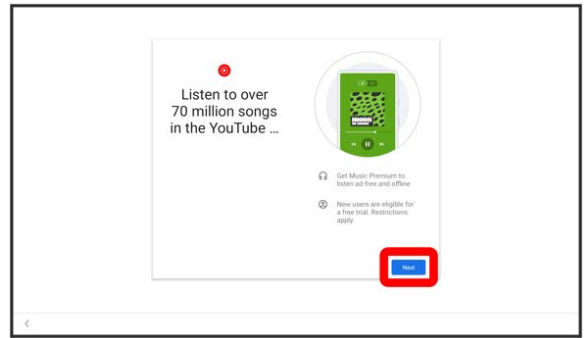

12


Set items → **Next**

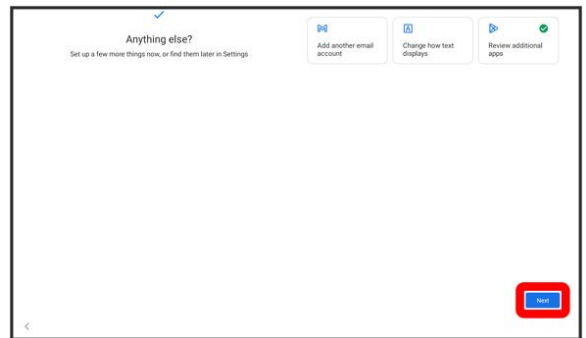

To not make other settings, Tap **No thanks** .

13

 
Next

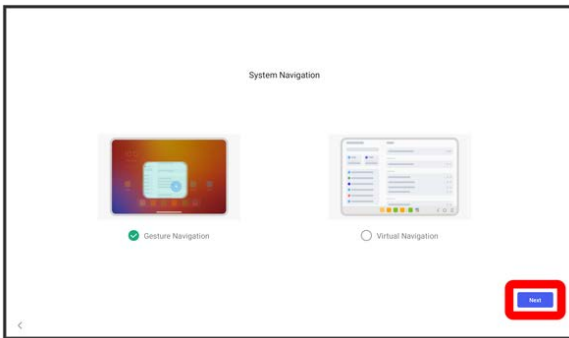

- To select "Virtual Navigation", Tap  for "Virtual Navigation" (✔).

14

 Start Experience

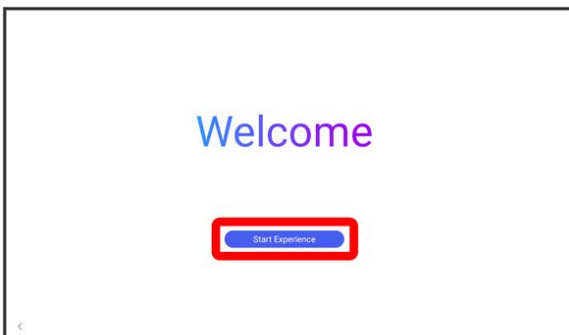

Settings are made.

## Using a Google Account

Use a Google account and get more convenience with Google services. A Google account is required to use some services or fully use some applications.

### ! Google Account Cautions

Be careful not to forget your Google account mail address or password.

## Creating a Google Account


1

In Home Screen, ⚙️ (Settings)




2

Passwords & accounts

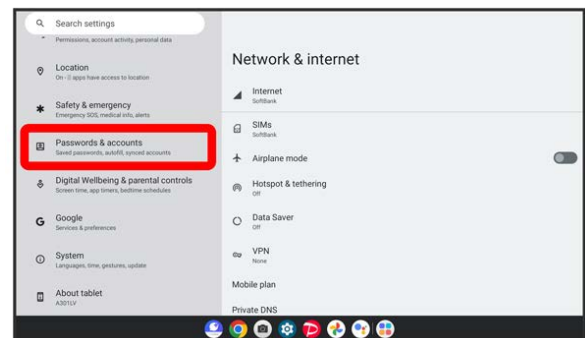


3

 Add account

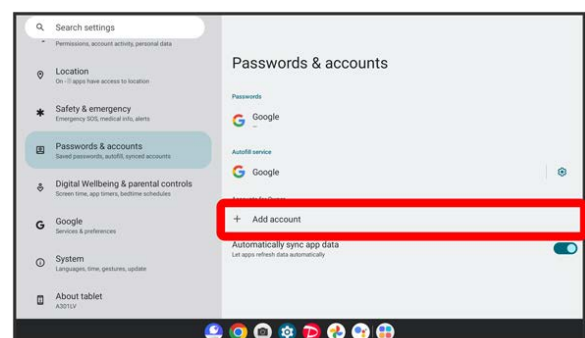

4


Google

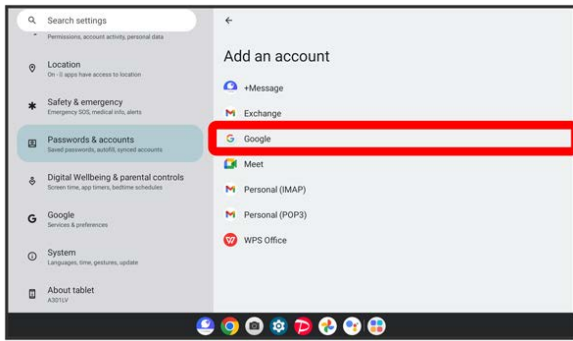

Window for logging in to a Google account opens.


5

 Create account

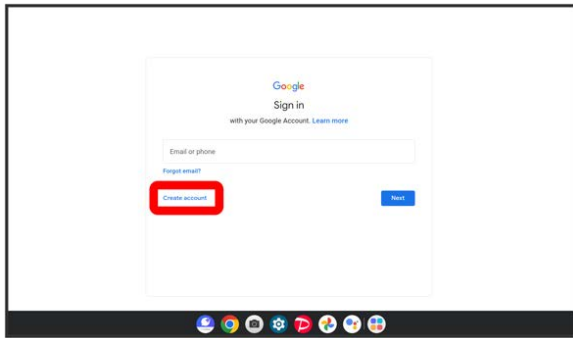


6

For my personal use

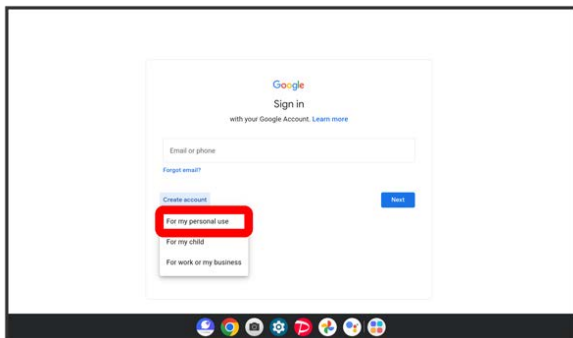


7

 Enter first name → Enter last name → Next

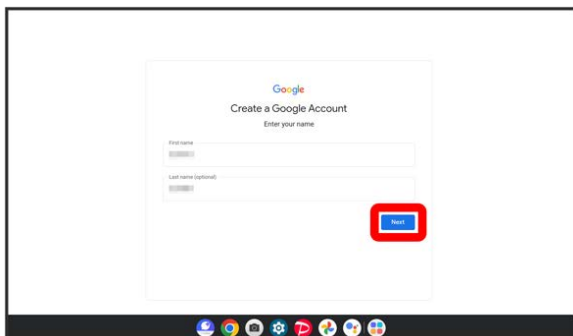


8

 Enter date of birth and gender → Next

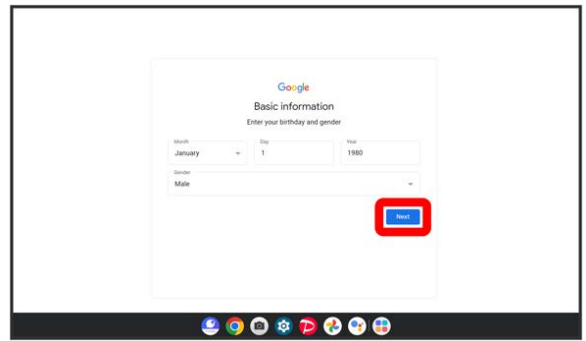

9


Select a mail address → Next

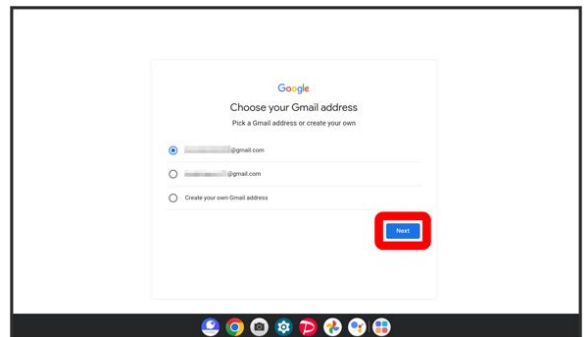

To create a Gmail™ address, Tap Create your own Gmail address → Enter username (mail address) → Next .

10


Enter password → Next

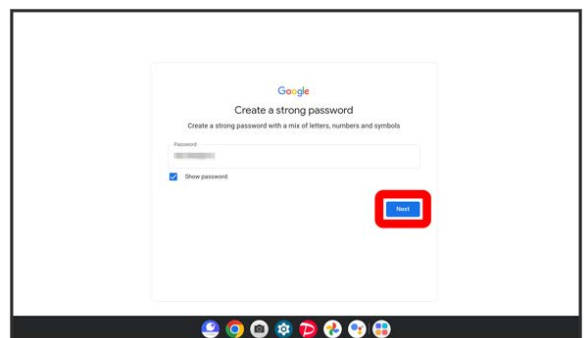

If confirmation appears, follow onscreen prompts.

11

 Yes, I'm in

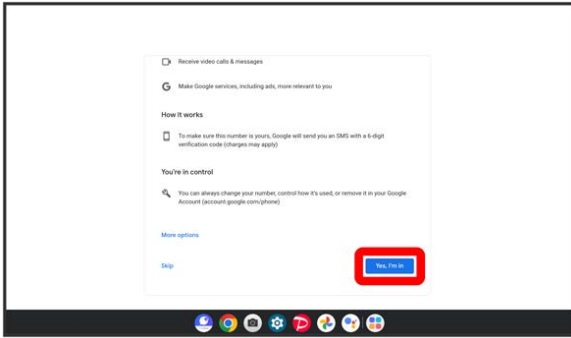


Code is entered automatically and screen proceeds.

- To not add a phone number, Tap **Skip**.
- To set a purpose when adding a phone number, Tap **More options**. Follow onscreen prompts.


12

 Next

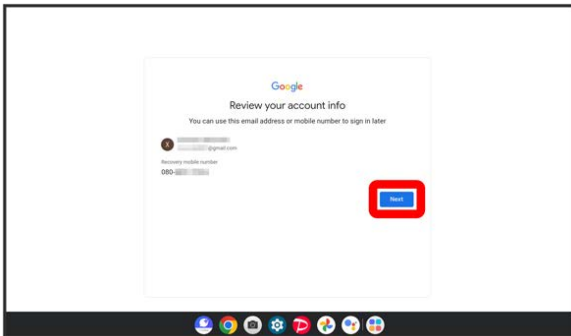


13

 Check the privacy policy and terms of usage, **I agree**

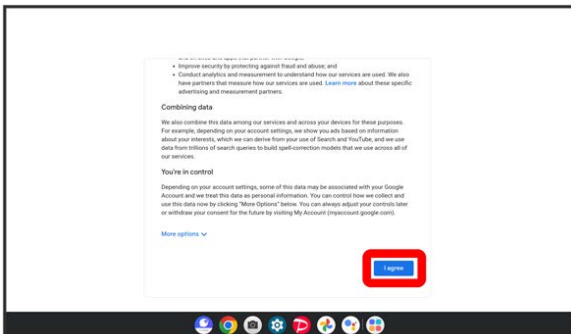

14

Accept

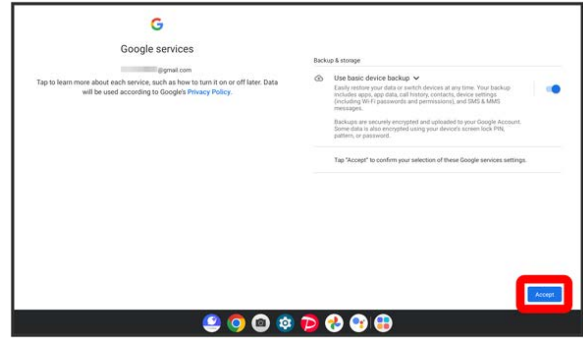


Account is created.

# Logging In with a Google Account


1

In Home Screen, (Settings)

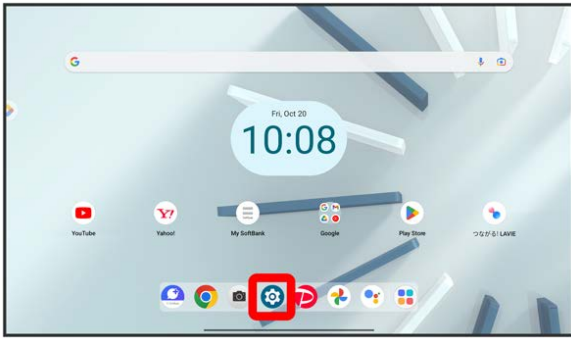


2

 Passwords & accounts

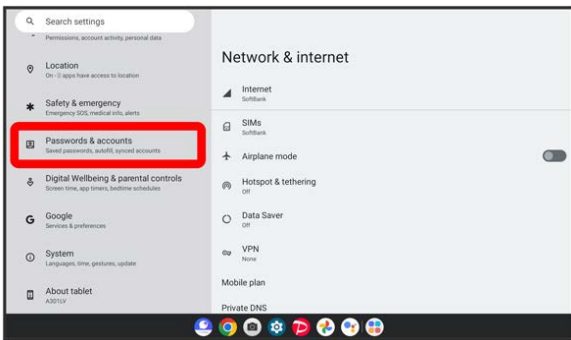


3

Add account

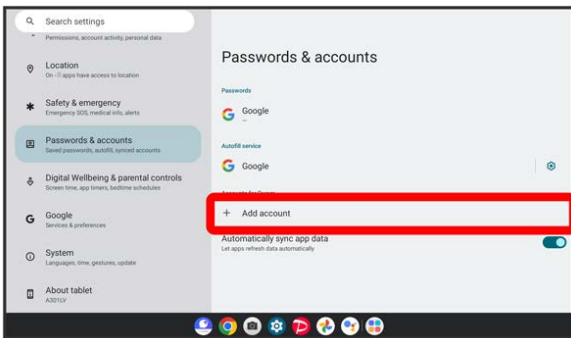

4


Google

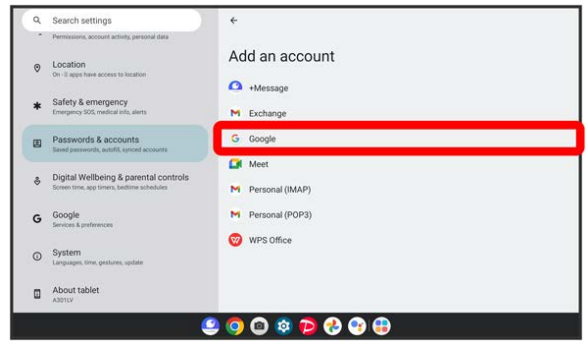

Window for logging in to a Google account opens.


5

Enter mail address Next

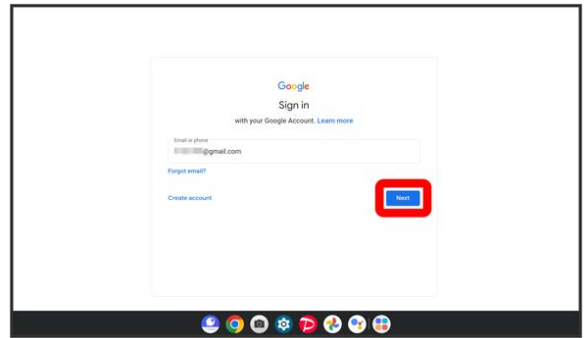


6

Enter password Next

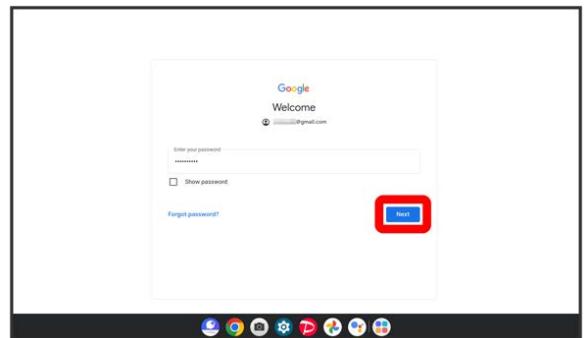



7

 I agree

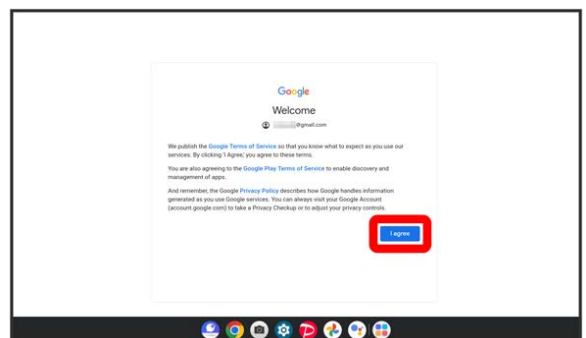

Accept

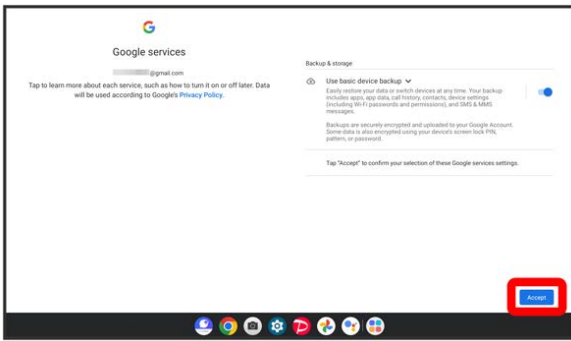

 You are signed in to your Google Account.

## Unlocking Screen

Display is locked after a set period of inactivity. Alternatively, Press Power Key for manual screen lock. This saves battery power and prevents accidental Touchscreen operation.

### Screen Lock

After a period of inactivity, Display turns off to save battery power (Screen lock active). Screen lock prevents accidental Touchscreen operation.



- Press Power Key while Display is on to lock screen manually.

### If Screen Lock Activates while Playing Music


Music continues to play. For operation, Press Power Key to open lock screen and use operation panel (operations may vary depending on application).



## Unlocking Screen

**1**


While screen is locked, Power Key

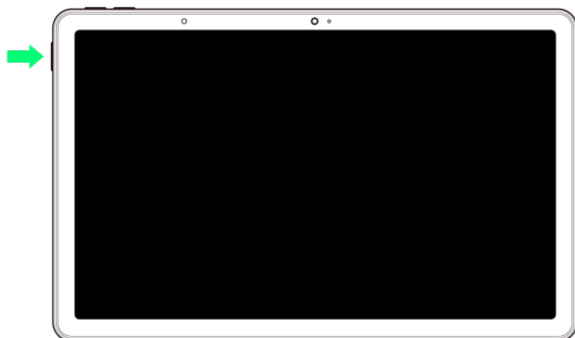

Lock screen appears.

**2**

Flick lock screen up

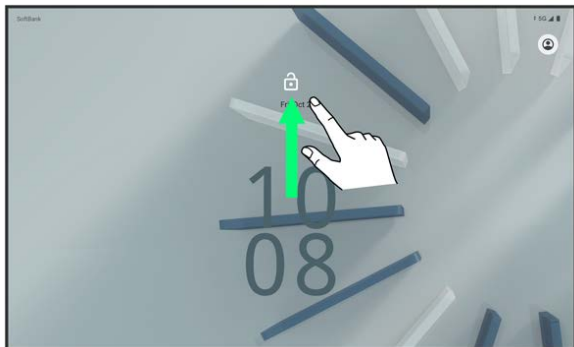

Screen is unlocked.

- The method for unlocking the screen can be changed. See "[Biometrics and Passwords Settings](#)" for the unlock method.



## Basic Operations


Basic Operation.....	26
Using Touchscreen.....	27
Silent Mode.....	28
Airplane Mode.....	29
Text Entry.....	30
Updating Software.....	31

## Basic Operation

### Selecting Options and Navigating Screens


Tap items, icons, onscreen keys, etc. to open assigned items.

- Flick left / right from the edge of the screen to go back to previous.

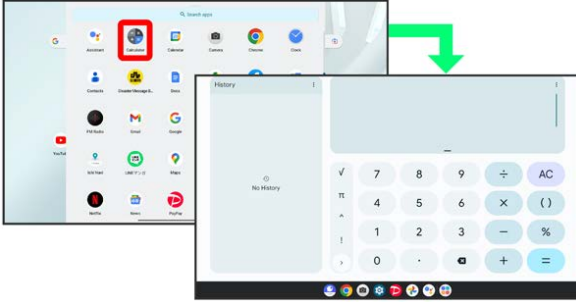


### Navigation to Home Screen

 
Flick up from the bottom of the screen to move to Home Screen.

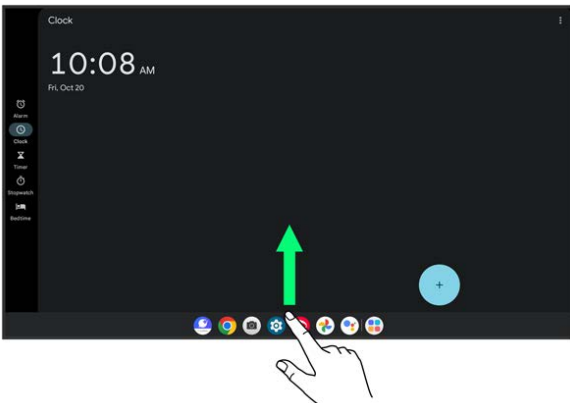

## Menu Operations


1

Tap  for available settings and items.

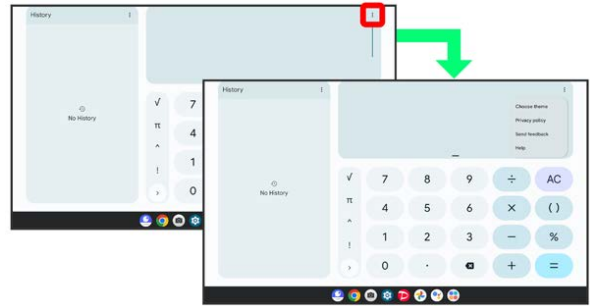

2

Screens may also have settings and items that are available by Touching & Holding Display.

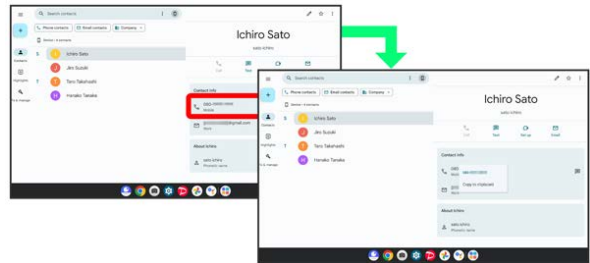


## Using Touchscreen

Tablet uses a touchscreen-type Display. Operate with your fingers on Display.


### Tap

Contact Display lightly and briefly.

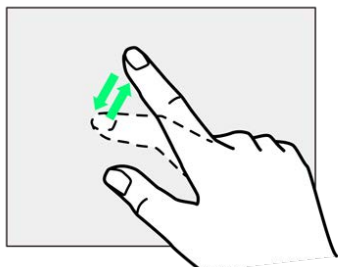


### Touch & Hold

Contact Display lightly; release finger when screen changes.

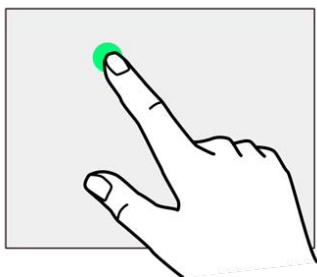


### Drag

Touch icon or other item lightly, move it where desired, and release finger.

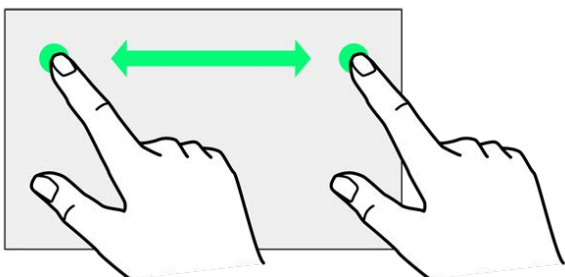


### Swipe/Flick

Contact Display lightly, then brush screen up/down or left/right.

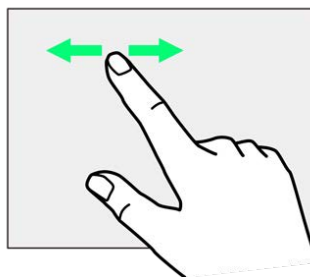

### Pinch/Spread

Contact Display lightly, then close/widen fingers.

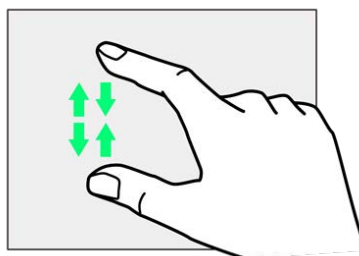

## Silent Mode

Mute ringtones and other tablet sounds to avoid disturbing others around you.

### ! Silent Mode Cautions

Camera shutter, video start/stop tones, Alarm and video/music audio sound even in Silent mode.

### Using Silent Mode (Vibration)

1

Press Volume Up/Down Key



2

On volume adjust bar,



3

while volume adjust bar is displayed



Icon on volume adjust bar changes to and tablet enters Silent mode (vibration).


## Using Silent Mode (Mute)

1

Press Volume Up/Down Key




2



On volume adjust bar, 



3

 while volume adjust bar is displayed



 Icon on volume adjust bar changes to , and tablet enters Silent mode (mute).

## Airplane Mode

Disable all functions that emit signals. Tablet remains powered on.

### Using Airplane Mode

1

 
Flick Status Bar down using two fingers



 Quick Settings open.

2

Airplane mode

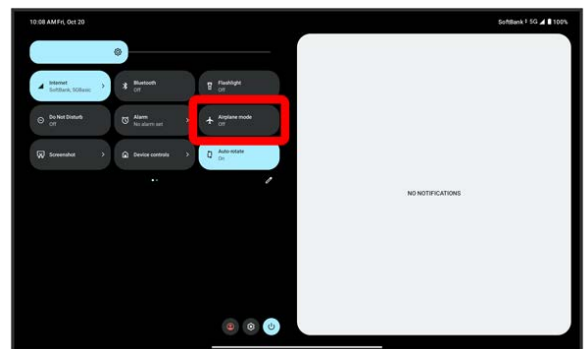


 Tablet is in Airplane mode.

• Use same operation again while in Airplane mode to cancel.







# Text Entry

## Keyboards

Use onscreen keyboards for text entry.

- To hide keyboard, Tap .

### + Setting Keyboard to Use

In a text entry window,   Languages  English  
  Select keyboard  Done

- Set several keyboards.


## QWERTY Keyboard Layout

 



- 1 Toolbar
- 2 Enter characters
- 3 Toggle case
- 4 Switch to number/symbol keyboard
- 5 Use voice input
- 6 Delete characters
- 7 Insert line break
- 8 Enter comma
- 9 Enter space
- 10 Switch to emoji/emoticon keyboard
- 11 Enter period. Touch & Hold for a set of other punctuation marks and symbols


## Switching Character Types (Entry Modes)

### 1

In a text entry window, Tap .

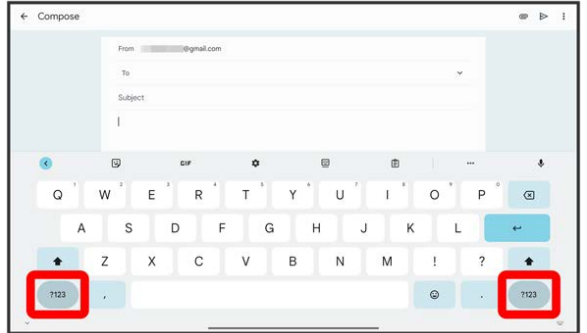

 Entry mode switches.

- Tap  to cycle through "alphabet" → "numbers".



# Updating Software

Check whether updates are required via the Internet, and update as required.  
 Checking and performing available software update is free.

## Before Updating Software

Saved data may be lost depending on condition of tablet (malfunctioning, damaged, water seepage, etc.). It is recommended that you back up important data before updating software. The company is not responsible for damages from loss of data.

## Software Update Cautions

**During Update**  
 Tablet cannot be used until software is updated. It may take time to update software. When a device is running software update, don't remove a USIM card from the device or turn its power off. Doing so can cause failure of the update and result in the device that may be inoperable or malfunction. If the device is inoperable or malfunctions, contact Customer Service.


**Signal during Update**  
 Operate tablet where signal reception is good and without changing location. Also operate with adequate battery charge. Signal becoming weak or Battery becoming low during an update may cause an update failure. An update failure may disable tablet.

**If Using Other Functions**  
 Other functions cannot be operated during a software update.

# Updating Software


1

In Home Screen, (Settings) System

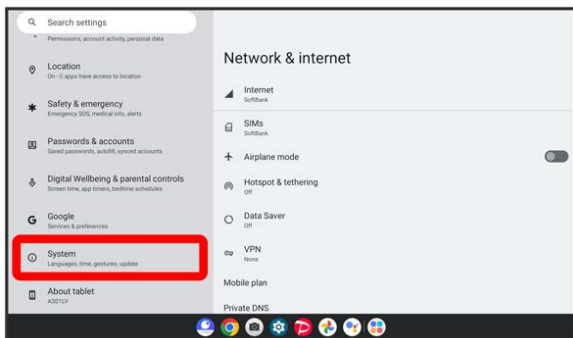


2

## System update

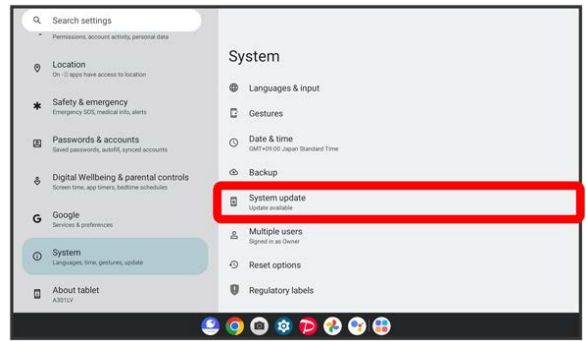

3

 Follow onscreen instructions

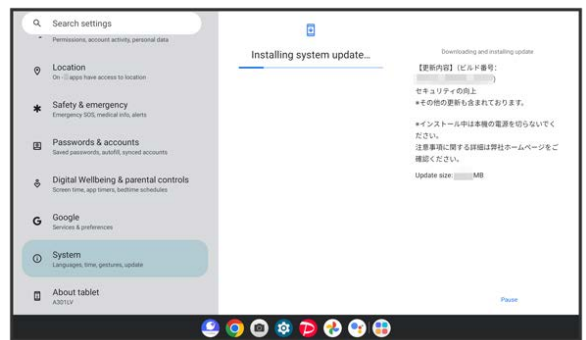

Software update starts.





## Tablet Interface

 Screens.....	34
Status Bar.....	35
Using Notifications Window.....	36
Using Quick Settings.....	36

## Screens

### Home Screen & App List

Most tablet operations start in "Home Screen" that appears after unlocking the screen, or in "app list". Flick Home Screen up for "app list".

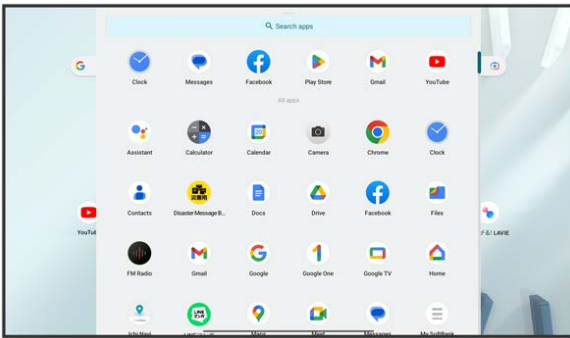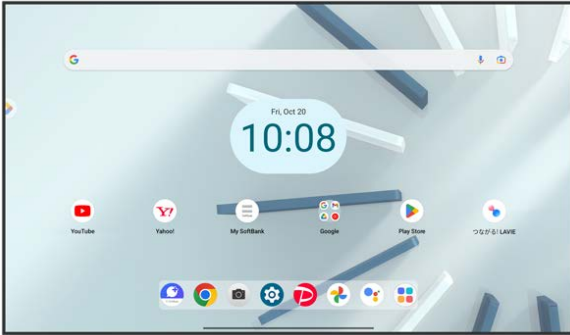

### Home Screen Layout



Item	Description
1 Status Bar	Flick down for Notifications Window.
2 Entertainment Space	Open Entertainment Space.
3 Taskbar (Favorites Tray)	Place application shortcuts, folders, etc. Appears even when Home Screen sheets toggled.
4 Customize Area	Place application shortcuts, folders, widgets freely.

### Toggling Home Screen Sheets


Flick Home Screen left/right to toggle sheets.



### Portrait Orientation & Landscape Orientation

The screen changes to portrait orientation when tablet is rotated sideways.


- Depending on the current screen, the orientation may not change even by changing tablet orientation.

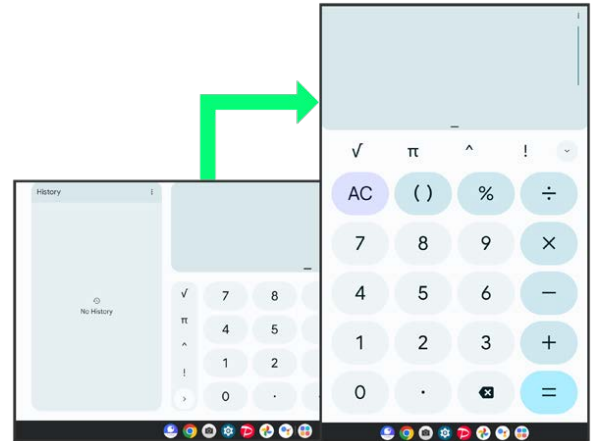

## Status Bar

Status Bar appears at the top of Display. Notification Indicators for new mail, etc. and Status Indicators for tablet appear here.
 
### Status Bar Layout

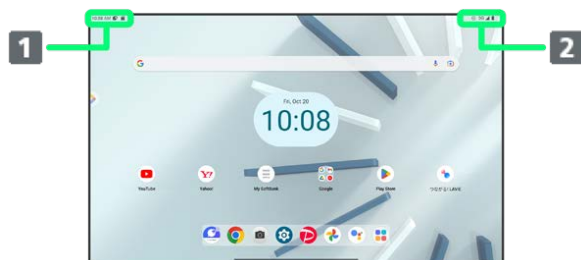

- 1 Notification Indicators
- 2 Status Indicators

### Main Notification Indicators

Notification Indicators appearing in Status Bar include the following.

Indicator	Description
	New Gmail
	New Text Message (SMS)/+Message
	Wi-Fi Open Network Available
	Calendar Event Notification
	Alarm Sounding/Snoozing/Unchecked Alarm/Next Alarm
	Timer Running
	Stopwatch Running
	Data Uploading
	Data Downloading
	Application Update Notification
	Application Installation(s) Complete
	Sharing File via Bluetooth®
	Battery level less than about 15%
	SD Card Detected/Mounting

### Main Status Indicators

Status Indicators appearing in Status Bar include the following.

Indicator	Description
	Bluetooth® Connected
	Do Not Disturb
	Do Not Disturb (Vibrate)
	Do Not Disturb (All Notifications Muted)
	5G Data in Use <sup>1</sup>
	4G LTE/4G Data in Use <sup>2</sup>
	3G Data in Use
	Wi-Fi Connected
	Signal Strength
	Roaming
	No Signal
	Airplane Mode On
	Charge Battery
	Battery Low
	Battery Charged
	Battery Charging
	Battery Saver On
	Obtaining Location
	Music Playing with Dolby Atmos

- 1 Although "5G" may appear in standby (top of Display), this may change to "4G" with data communication then being by the 4G network.
- 2 Tablet supports FDD-LTE (SoftBank 4G LTE) and AXGP (SoftBank 4G); indicator appears when tablet is connected to either. Tablet connects to SoftBank 4G first.

## Using Notifications Window

Flick Status Bar down to open Notifications Window. Open Notification Indicators to check details.

### Opening Notifications Window

1

Flick Status Bar down




Notifications Window opens.

Notifications Window appears at right, and Quick Settings at left.

### + Closing Notifications Window

Flick Notifications Window up

### Notifications Window Layout

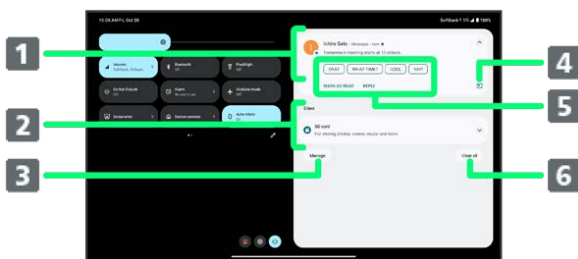

- 1 Show notifications (incoming messages, etc.) and active functions
- 2 Show silent notifications
- 3 Manage notifications
- 4 Show application as bubble (floating icon)<sup>1</sup>
- 5 Use notification details<sup>2</sup>
- 6 Delete all notifications and close Notifications Window<sup>3</sup>

1 Icon may not appear depending on application or notification.

2 Usable functions depend on the notification.

3 Some notifications may not be deleted.

## Using Quick Settings

Flick Status Bar down to access Quick Setting. Tap icons to toggle functions on/off, etc.

### Opening Quick Settings

1

Flick Status Bar down



Quick Settings open.

Notifications Window appears at right, and Quick Settings at left.

 
### + Quick Settings Operations

#### Closing Quick Settings


Flick Quick Settings up

#### Arranging Quick Settings


Add, delete, and change order of functions in Quick Settings.

In Quick Settings,   Follow onscreen instructions and Drag icon

## Quick Settings Layout

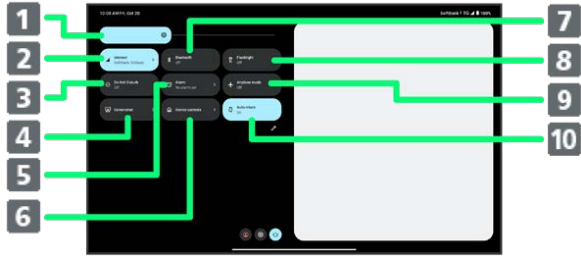 

 - 1 Adjust brightness
- 2 Show mobile data/Wi-Fi settings
- 3 Do Not Disturb on/off
- 4 Capture screenshot
- 5 Open Alarm settings
- 6 Open Device controls settings
- 7 Bluetooth® on/off
- 8 Flashlight on/off
- 9 Airplane mode on/off
- 10 Auto-rotate on/off

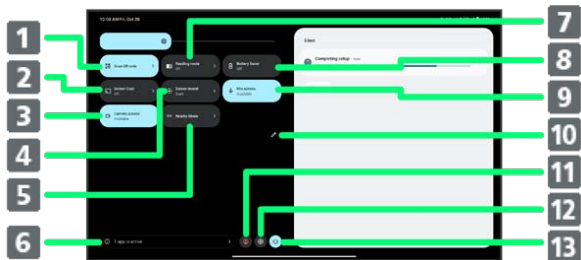

- 1 Open to scan QR code
- 2 Show cast screen
- 3 Set permission to access Camera
- 4 Screen record start/stop
- 5 Nearby Share on/off
- 6 Active applications<sup>1</sup>
- 7 Reading mode on/off
- 8 Battery Saver on/off
- 9 Set permission to access Mic
- 10 Edit Quick Settings
- 11 Switch users
- 12 Show tablet settings
- 13 Show power menu

<sup>1</sup> Show list of applications that are active and running, even if not being used. May not appear for some applications.





## Messaging

Sending Messages (+Message).....	40
Using Gmail.....	41

## Sending Messages (+Message)

### Sending New Messages


1

In Home Screen,  (+Message)




2

Message

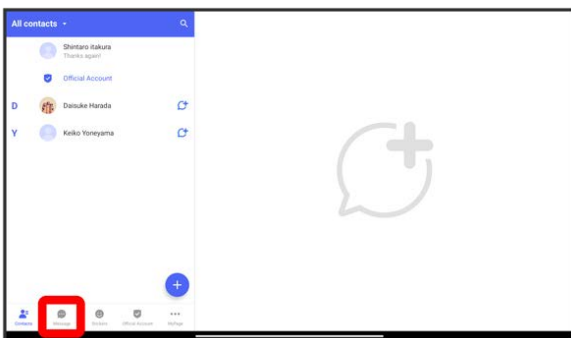


3



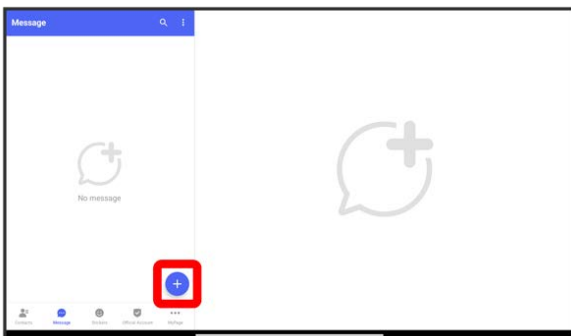


4

 
New message

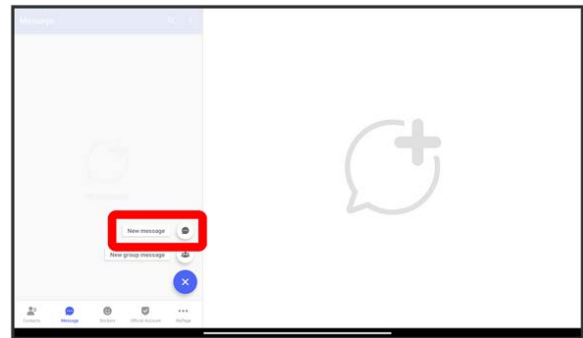


5

 Tap destination

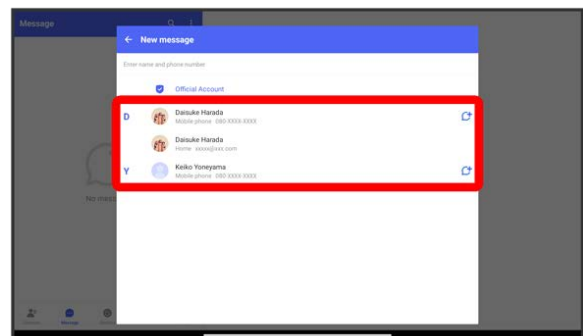


 Message window opens.

- To send to a phone number/email address not saved in contacts, enter phone number/email address in Enter name and phone number field  **Add** and create message.


6

 Tap message entry field

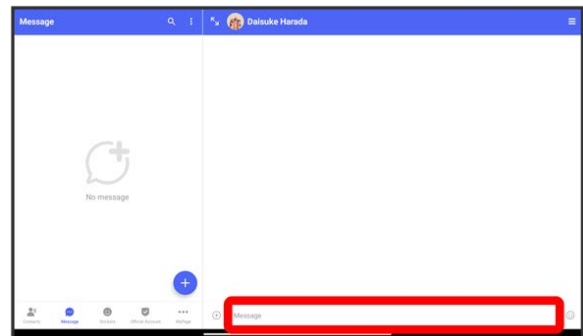

7

Enter message → →

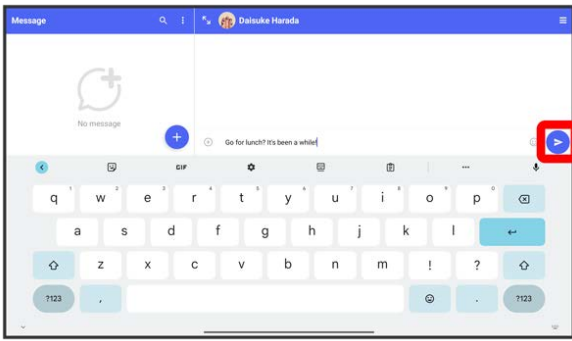

Message is sent.


# Using Gmail

Gmail is Google's webmail service. Use this service to exchange email.

## Creating/Sending Mail


1

In Home Screen, (Google)

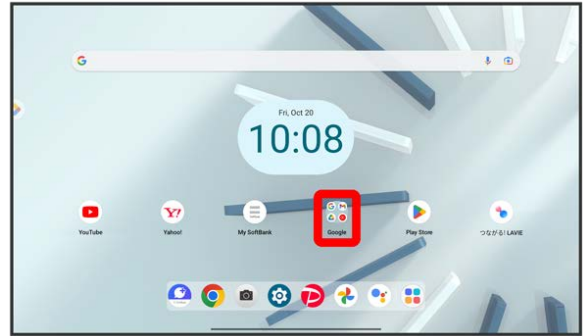

2

 
(Gmail)

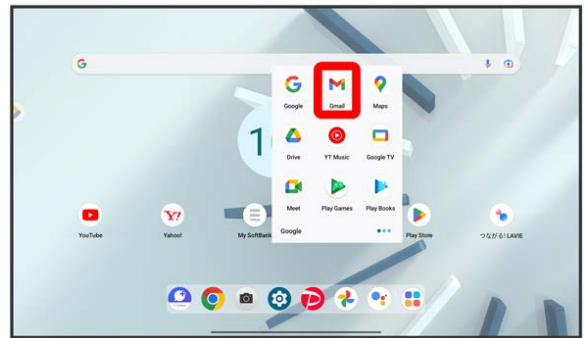

Mail list opens.

3


Compose

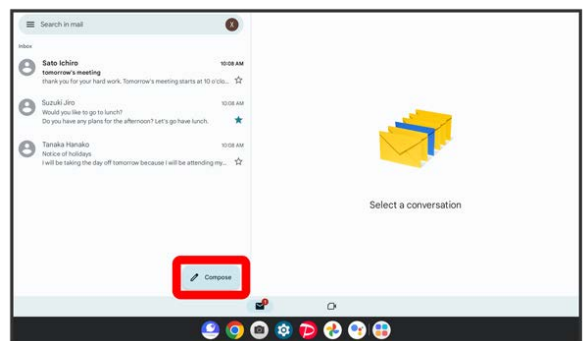

Mail composition window opens.

4

 Enter recipient/subject/mail text → ▶

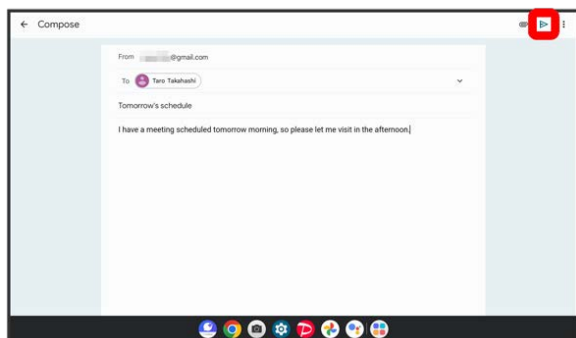

🚩 Mail is sent.

### + Operations when Composing Mail

#### Adding Cc/Bcc

In mail composition window, ▼ for recipient → Enter recipient

#### Attaching Files

In mail composition window, 📎 → Attach file →  
Select where file is saved → Select file to attach

#### Save Mail Being Composed as a Draft (Send Later)

In mail composition window, ⋮ → Save draft

#### Delete Mail Being Composed

In mail composition window, ⋮ → Discard

## Internet

Using Chrome..... 44

## Using Chrome

Use Chrome simply by entering words to search and URLs.

### TLS


TLS (Transport Layer Security) is a protocol for encrypting sent/received data. While in a screen connected by TLS, data is encrypted to safely send/receive private information, credit card numbers, corporate secrets, etc., and provide protection against online threats (eavesdropping, falsification, impersonation, etc.).


### TLS Cautions


When opening a secured page, users must decide as their responsibility whether or not to open the page with use of TLS. SoftBank Corp. and the Certification Authorities Symantec Website Security G.K. and Cybertrust make no guarantees whatsoever to users regarding security of TLS.

## Using Chrome

### 1

In Home Screen,  (Chrome)

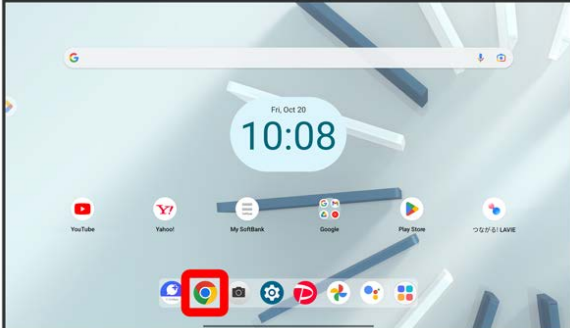


 Chrome opens.



· If confirmation appears, follow onscreen instructions.


### 2

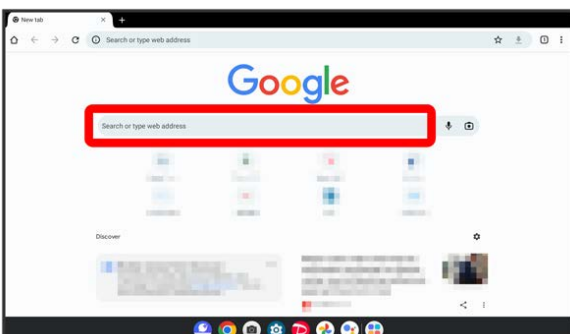 
Tap entry box at top



### 3

Enter search words or URL  

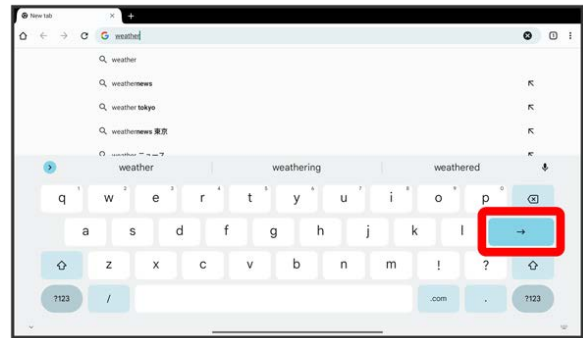

 Search results appear or a Web page opens.

### Opening New Tabs


Open several tabs to switch between Web pages easily.


In Chrome,   New tab


 New tab appears.

## Adding Bookmarks

1


In Home Screen,  (Chrome)

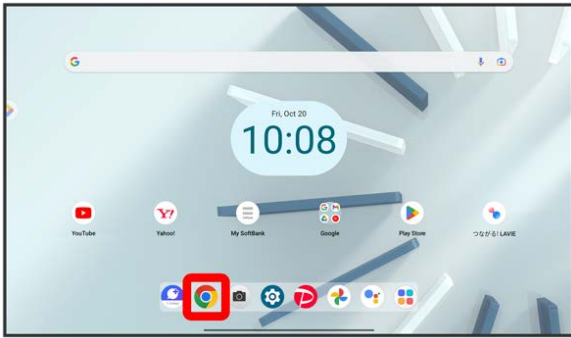


 Chrome opens.


2

 Show Web page to add

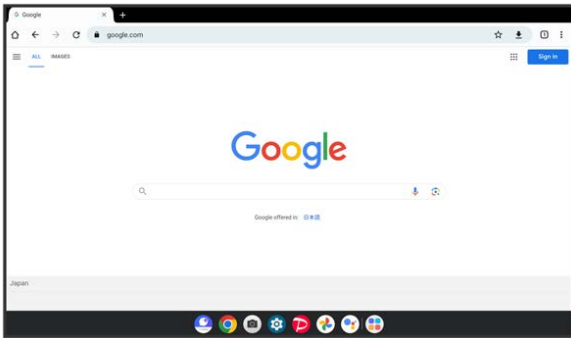



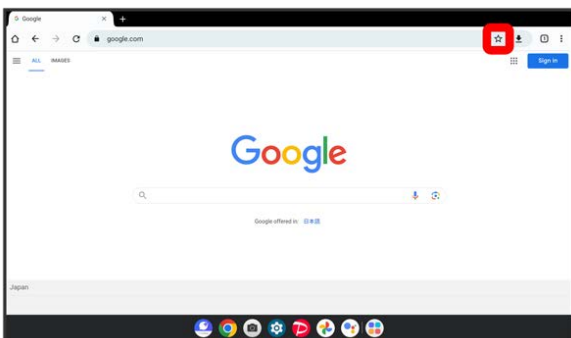

3






 Current Web page is added to Bookmarks.

## + Bookmark Operations

### Editing Bookmarks

In Chrome,   Touch & Hold target bookmark  Edit items 

### Deleting Bookmarks

In Chrome,   Touch & Hold target bookmark 





## Camera

Capturing Still Images/Videos.....	48
Viewing Captured Still Images/Videos (Photos).....	50

## Capturing Still Images/Videos

### 💡 Capturing Still Images/Videos

#### File Format for Still Images

File format for still images is JPEG.

#### File Format for Videos

File format for videos is MPEG-4.

#### HEVC Standard

This product supports digital video coding based on a specific version of the HEVC standard, and is covered by patents listed at [patentlist.accessadvance.com](https://patentlist.accessadvance.com) (<https://accessadvance.com/advance-patent-lists/>).



### ⚠️ Camera Cautions

#### If Lens Becomes Dirty

Fingerprints/smudges on lens prevent capturing of clear still images/videos. Wipe lens with a soft cloth beforehand.

#### Avoid Exposure to Direct Sunlight

Be careful not to expose lens to direct sunlight for long periods. May discolor color filter and affect color of images.


### 🚫 Mobile Light Warning

Do not shine Mobile Light close to eyes. Do not look directly at Mobile Light when shining. Do not shine Mobile Light at other people's eyes. May affect eyesight, etc.

## Capturing Still Images

1

In Home Screen, 📷 (Camera)

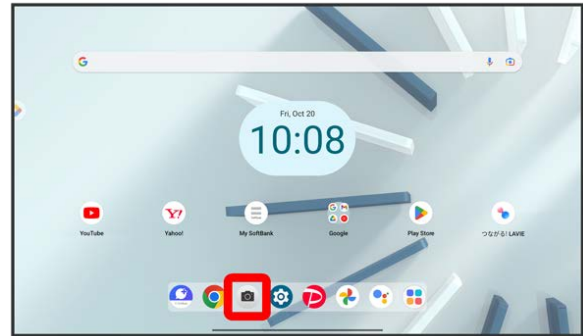

· If confirmation appears, follow onscreen instructions.

2

Photo




📷 Photo Viewfinder appears.

· Alternatively, Drag the shooting mode to switch.

3

Aim Camera at subject → ○

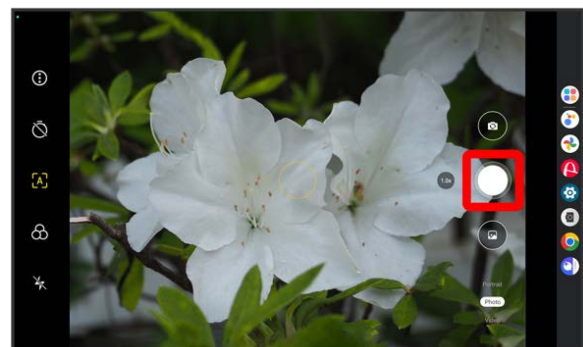

📷 Shutter clicks and still image is saved.

### + Still Image Capture Operations


#### Using Digital Zoom


In Photo Viewfinder, Pinch screen




## Capturing with Volume Up/Down Key

In Photo Viewfinder, Press Volume Up/Down Key


## Focusing and Adjusting Brightness

In Photo Viewfinder, Tap location to focus at → Drag  up or down

 Brightness is adjusted.

- When  appears in a round frame, Tap  to save still image.
- In Photo Viewfinder, Touch & Hold location to focus at,  appears in a round frame, allowing focus and brightness to be locked.


## Continuous Capture


In Photo Viewfinder, Touch & Hold 

- Continuously capture up to 20 still images.

## Capturing Videos

1

In Home Screen,  (Camera)

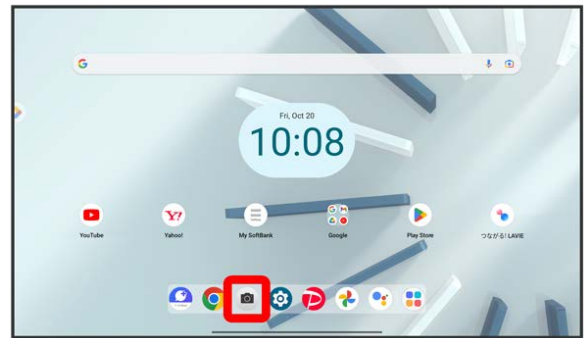

- If confirmation appears, follow onscreen instructions.

2


Video




 Video Viewfinder appears.

- Alternatively, Drag the shooting mode to switch.


3

Aim Camera at subject → 



 Video recording starts.

## 4

To stop recording, 



 Video recording stops and video is saved.

## + Video Capture Operations

### Using Digital Zoom



In Video Viewfinder/while capturing video, Pinch screen


### Capturing with Volume Up/Down Key


In Video Viewfinder, Press Volume Up/Down Key

- To end capture, while capturing video, Press Volume Up/Down Key.


### Focusing and Adjusting Brightness

In Video Viewfinder, Tap location to focus at  Drag  up or down

 Brightness is adjusted.

- In Video Viewfinder, Touch & Hold location to focus at,  appears in a round frame, allowing focus and brightness to be locked.

### Capturing Still Images while Capturing Video

While capturing video, 

## Viewing Captured Still Images/Videos (Photos)


View still images/videos saved in internal storage, on SD Card, and in Google online storage. Viewing after logging in to a Google account is described.


### Showing Still Images/Videos


Show captured or downloaded still images and videos.

Type	File Format
Still image	BMP, GIF, JPG, PNG, WebP, HEIF, ICO, WBMP
Video	3G2, AVI, FLV, TS/M2TS, MKV, WEBM, 3GP, MPEG-4, HEIC/HEIF, ASF/WMV, MOV

## 1

In Home Screen,  (Photos)

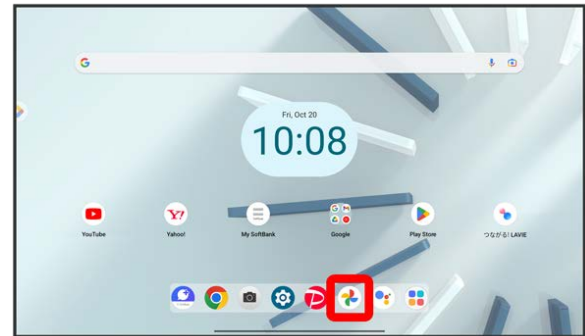


 Photos opens.

- If confirmation appears, follow onscreen instructions.

## 2

 Tap still image/video

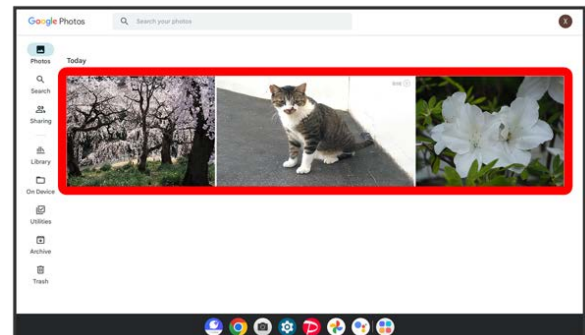

 Still image/video opens.

- Video plays after tapping the video.
- If confirmation appears, follow onscreen prompts.
- To show another still image or video, return to Photos and either Tap still image/video or Flick screen left/right while viewing still image/video.

## + Zooming In/Out on Still Images

While viewing still image window, Tap screen twice or Pinch.




## Application Basics

Applications.....	54
Adding/Deleting Application.....	55

## Applications


### Setting Required Permissions for Applications


Set the operation of applications when activating for the first time. The type and content of a confirmation differs with the application.

Activating  (Photos) for the first time is described as an example.

- An application may not function correctly if permission to use it was not set.


1


In Home Screen,  (Photos)

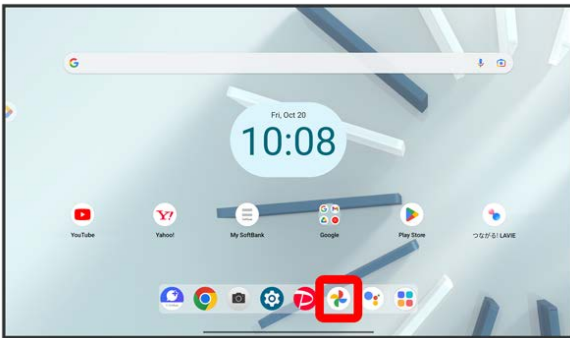

2

ALLOW

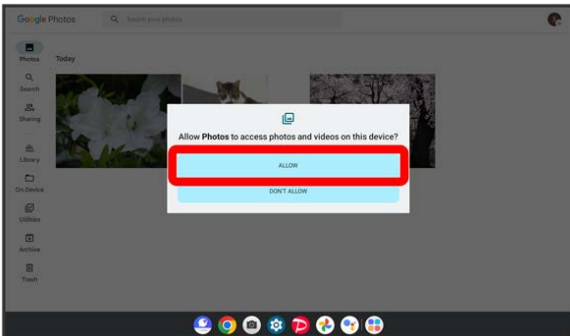




 




 Settings are complete.

- Shown setting items depend on the function having permission set.
- For several functions, continue in the same way.







### + Other Ways to Set Required Permissions for Applications
 
#### Setting Functions to Use for Each Application

In Home Screen,  (Settings)    
     


- Displayed items depend on the function.
- If confirmation appears, follow onscreen instructions.

#### Setting Applications with Permitted Usage for Each Function

 In Home Screen,  (Settings)   
   
 

- Displayed items depend on the function.
- If confirmation appears, follow onscreen instructions.



## Adding/Deleting Application

Download a variety of applications (free/paid) from Google Play. Change the setting of downloaded applications to enable manual or automatic updates. Log in to your Google account beforehand.


### ! Installing Applications

Many different kinds of applications can be installed on tablet from Google Play (provided by Google Inc.). The company is not responsible in any way for user-installed applications (quality, reliability, legality, fitness for a purpose, credibility, accuracy, etc.) or resulting malfunctions (viruses, etc.).

### Installing Free Applications

1

In Home Screen,  (Play Store)

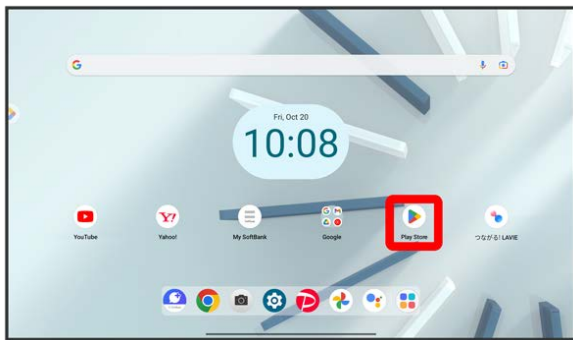


 Google Play appears.

· If confirmation appears, follow onscreen instructions.

2

 Tap free application

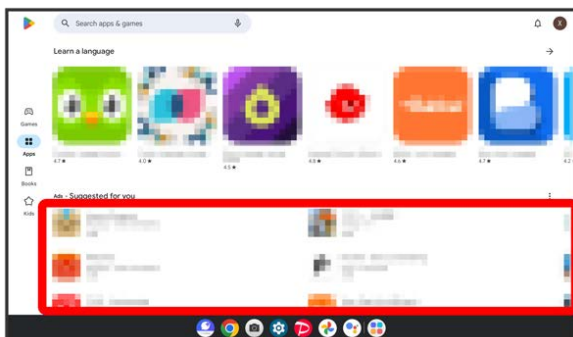

3


**Install**

 
 Application is downloaded and installed.

· If confirmation appears, follow onscreen instructions.

### Purchasing Paid Applications

1

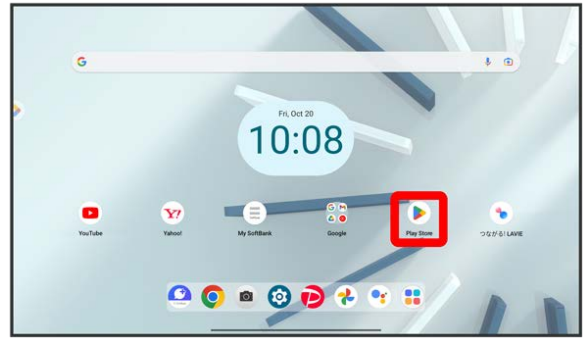

In Home Screen,  (Play Store)




 Google Play appears.

· If confirmation appears, follow onscreen instructions.

2

Tap paid application  Tap amount  Follow onscreen instructions

 Application is downloaded and installed.

### Purchased Applications

#### Payment






Pay only once. Redownloads of uninstalled applications are free of charge.

#### On Other Android Devices

Install an application on any Android device under the same Google account for free.

### Requesting Refunds

Refund is possible within a limited time. By requesting a refund, the application is deleted and the charge is cancelled. A refund request is valid only once per one application.

In Google Play, Tap account icon at top right  **Manage apps & device**  **Manage**  Tap application  **Refund**  **Request refund**


### ! Purchasing Applications

Purchase applications at your own risk. The company is not responsible for any disadvantage resulting for user or third parties.

## Updating Applications

1


In Home Screen,  (Play Store)

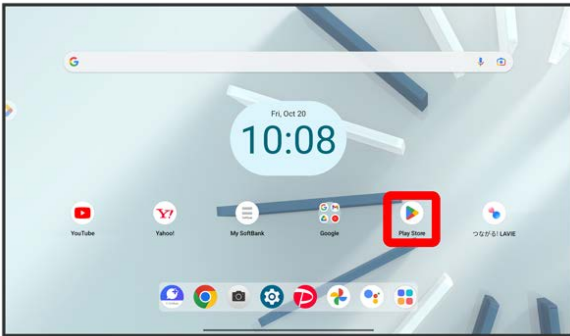


 Google Play appears.




· If confirmation appears, follow onscreen instructions.

 
2

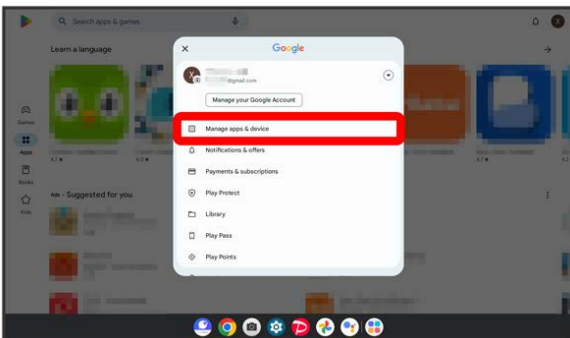Tap account icon at top right  **Manage apps & device**








3

**Manage**  **Updates available**  Tap application to update  **Update**






 The application is downloaded and installed.

### + Setting Application Updates

#### Setting Automatic Application Updates

In Google Play, Tap account icon at top right   
**Settings**  **Network preferences**  **Auto-update apps**  Set update method  **OK**

#### Setting Automatic Updates for Individual Applications

In Google Play, Tap account icon at top right  **Manage apps & device**  **Manage**  Tap application  **:**  
 **Enable auto update** (  )

· Automatic updates are unavailable for some applications.

## Bluetooth

Connecting by Wi-Fi.....	58
Using Bluetooth® Function.....	59


## Connecting by Wi-Fi

Tablet supports Wi-Fi (wireless LAN). Access the Internet via a household Wi-Fi connection environment.

### Connecting Selected Access Points


1

In Home Screen, (Settings)

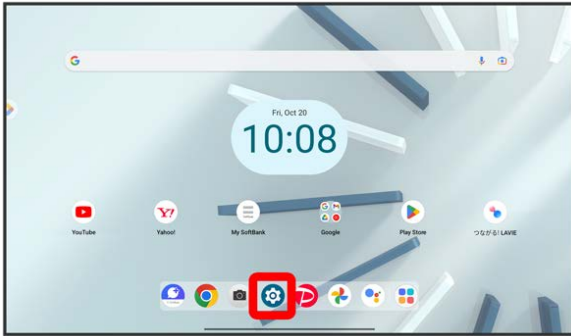


2

### Network & internet

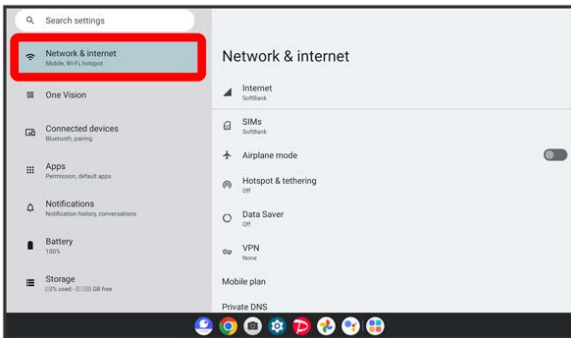 

3


### Internet

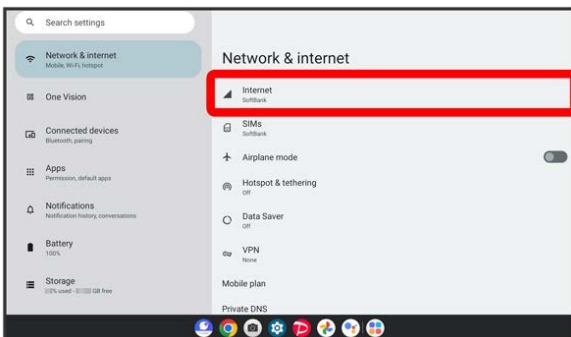 

Internet menu opens.

4

 Wi-Fi ( )

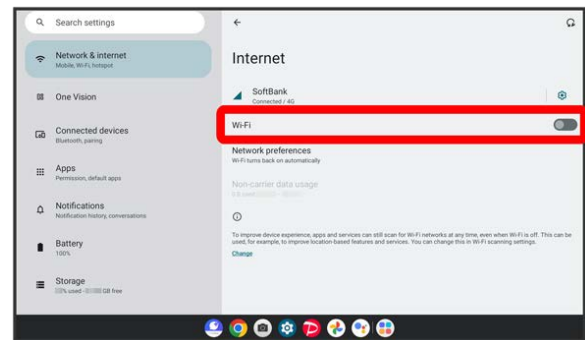


Wi-Fi is enabled.

- Access point search starts; available access points appear upon completion.
- Tap **Wi-Fi** to toggle on ( )/off ( ).

5

 
Tap access point

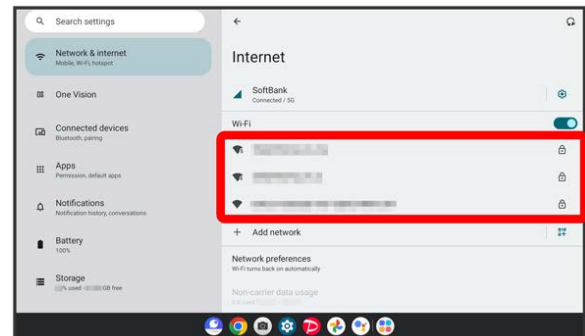

- Number at right in icon depends on the standard of the connected wireless LAN (Wi-Fi).

6

 Enter password → **CONNECT**

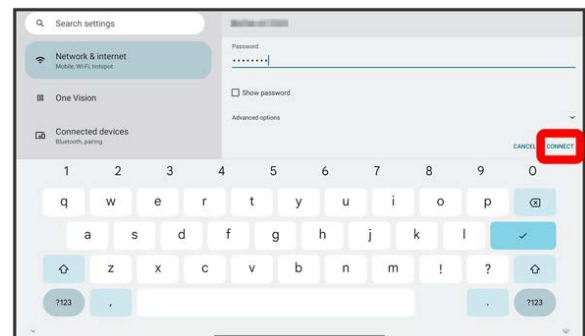

Tablet is connected.

- The password, for a household wireless LAN router, is sometimes found on a sticker on the router (WEP, WPA, KEY, etc.). Contact the router manufacturer for information. For password for a public wireless LAN, check with user's service provider.
- Entering a password is not required if an access point is not security protected.

**+** Wi-Fi Operations

Sharing Connected Access Points

In Internet menu, Tap access point with "Connected" appearing in Wi-Fi options → **SHARE** → Scan QR code on Display with other device

Setting Whether to Automatically Enable Wi-Fi

Set whether to automatically use Wi-Fi when a high-quality network is already saved (home network, etc.).

In Internet menu, **Network preferences** → **Turn on Wi-Fi automatically**

· Tap **Turn on Wi-Fi automatically** to toggle on (  )/ off (  ).

Setting Whether to Show Notifications for Available Public Networks

In Internet menu, **Network preferences** → **Notify for public networks**

· Tap **Notify for public networks** to toggle on (  )/ off (  ).

Installing Certificates

In Internet menu, **Network preferences** → **Install certificates** → Follow onscreen prompts

Checking MAC Address

In Internet menu, Tap access point with "Connected" appearing in Wi-Fi options

🚩 MAC address is shown in "Randomized MAC address" field.

Checking IP Address

In Internet menu, Tap access point with "Connected" appearing in Wi-Fi options

🚩 IP address is shown in "IP address" field.

Checking Access Point Activity while Connected

In Internet menu, Tap access point with "Connected" appearing in Wi-Fi options

🚩 Connection activity, signal strength, frequency, security, etc. appear.

Using Bluetooth® Function

Connect to a Bluetooth®-capable wireless phone, etc. for calls or to a hands-free device such as a headset.

**?** Hints

- Q. Cannot use Bluetooth®
- A. Is tablet in Airplane mode? If in Airplane mode, Bluetooth® function is disabled. Bluetooth® function can be enabled again after placing tablet in Airplane mode.

**!** Bluetooth® Function Cautions

Connection


Bluetooth® connection may not be possible with some Bluetooth® devices.


File Transfer

Information may not appear correctly on both devices depending on the transferred data.

Enabling Bluetooth® Function


**1**

In Home Screen,  (Settings)

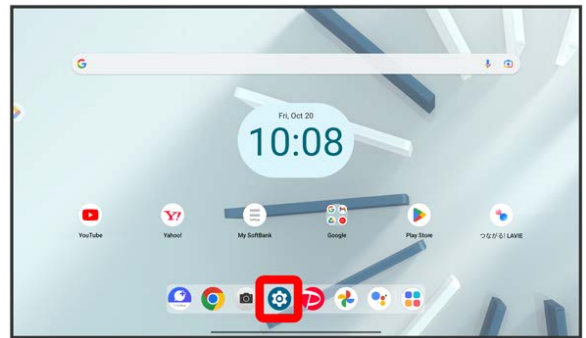


**2**

 Connected devices

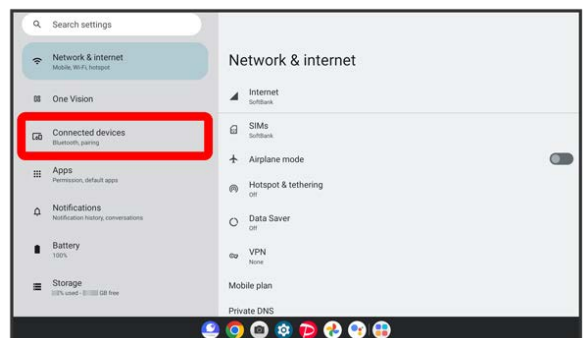


3

## Connection preferences

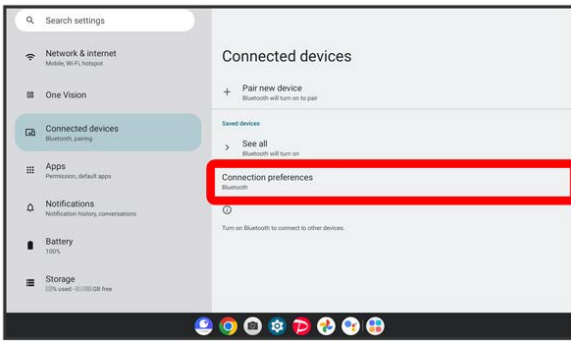


4

## Bluetooth

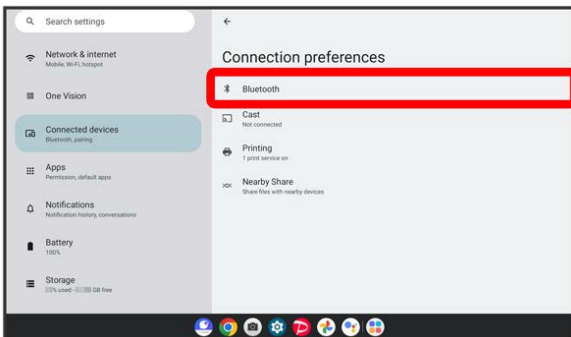

Bluetooth® menu opens.

 5

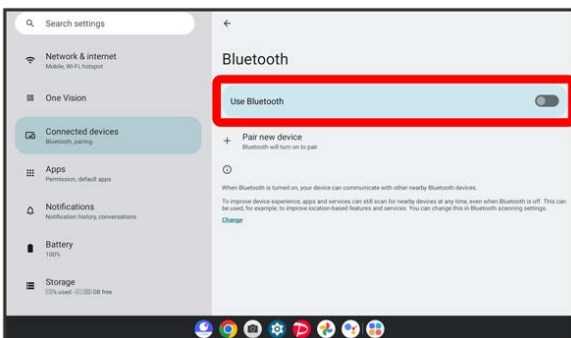Use Bluetooth (  )

Bluetooth® function is enabled.

· Tap **Use Bluetooth** to toggles on (  )/off (  ).

### + Renaming Tablet Name that Appears on Other Devices

In Bluetooth® menu, **Device name** → Enter name →

**RENAME**

· Available when **Use Bluetooth** is enabled.


## Tablet Settings

Tablet Settings.....	62
Data Usage Settings.....	63
Battery Settings.....	68
Sound & Vibration Settings.....	69
Display Settings.....	73
Biometrics and Passwords Settings.....	77
Safety & emergency Settings.....	84
System Settings.....	87
Other Settings.....	90

## Tablet Settings

The User Guide describes main setting options.


### Tablet Settings


In Home Screen,  (Settings) to customize operation of tablet functions.


Tablet settings include the following items.

Item	Description
Network & internet	Make network and Internet settings for Wi-Fi, mobile networks, data usage, etc.
One Vision	Supports Multi-Window switching according to purpose.
Connected devices	Make Bluetooth® connection and other settings.
Apps	Make application settings.
Notifications	Make notification settings.
Battery	Check Battery usage and make settings to save battery power.
Storage	Check internal and SD Card storage, mount SD Card, and delete SD Card data.
Sound & vibration	Make sound and vibration settings.
Display	Set Display brightness, design, etc.
Wallpaper & style	Make settings for wallpaper, icons, etc.
Accessibility	Set captions, magnification gestures, and other useful accessibility functions.
Biometrics and passwords	Make settings for how to unlock the screen and facial recognition.
Privacy	Make privacy settings such as application permissions and showing notifications in lock screen.
Location	Set options for location information.
Safety & emergency	Make settings for emergency information and calls.
Passwords & accounts	Make settings for managing saved passwords and creating, adding, etc. accounts.
Digital Wellbeing & parental controls	Manage time that tablet is used and set parental limitations on use.
Google	Make settings for Google services.
System	Check and make settings for language, input, date and time, backup, switching users, reset, and regulatory notices.
About tablet	Check device name, legal information, etc.

1


In Home Screen,  (Settings)

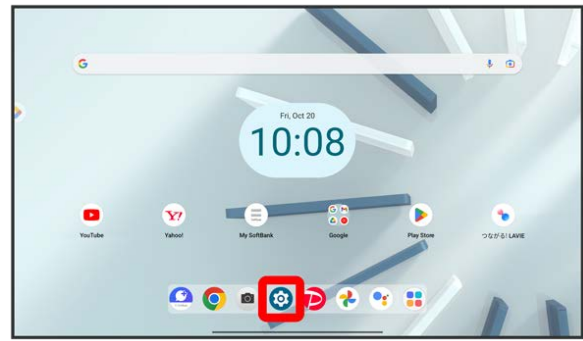

 Tablet settings open.

2

 Set items

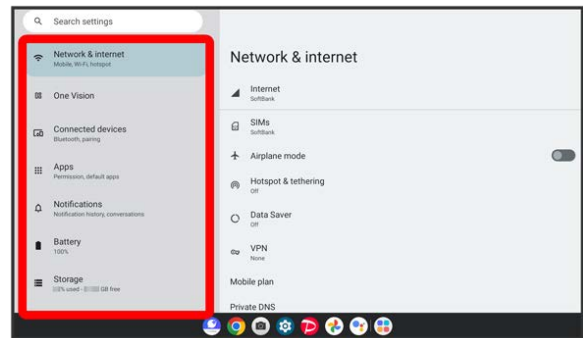

 Settings open.



# Data Usage Settings

Check amount of cellular data transfers and set limit on usage.

## + Data Usage Operations

### Set Data Saver

In Home Screen, (Settings) → Network & internet → Data Saver → Use Data Saver  
 · Tap Use Data Saver to toggle on (  )/off (  ).

### Set Functions Not Subject to Data Saver

In Home Screen, (Settings) → Network & internet → Data Saver → Unrestricted data → Tap applications not subject (  )  
 · Tap application to toggle on (  )/off (  ).

### Enable Cellular Data

In Home Screen, (Settings) → Network & internet → SIMs → Mobile data  
 · Tap Mobile data to toggle on (  )/off (  ).

 
### View Data Usage with Wi-Fi

In Home Screen, (Settings) → Network & internet → Internet → Non-carrier data usage

## Checking Application Data Usage


1

In Home Screen, (Settings) → Network & internet

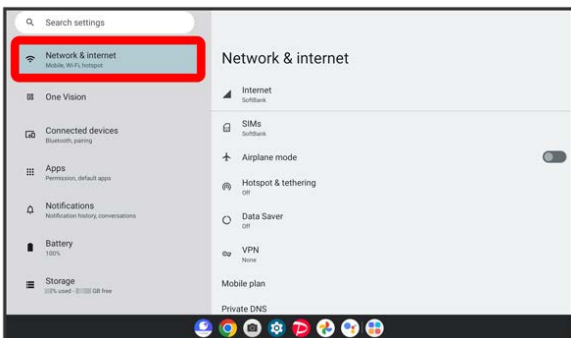


2

 SIMs

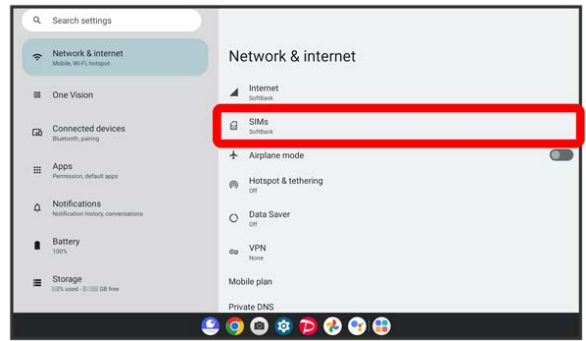

3

 App data usage

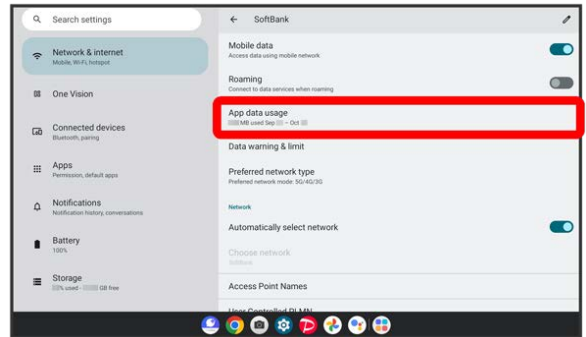


Check application data usage in Mobile data usage window.

# Setting Reset Date for Data Usage


1

In Home Screen, (Settings) → Network & internet

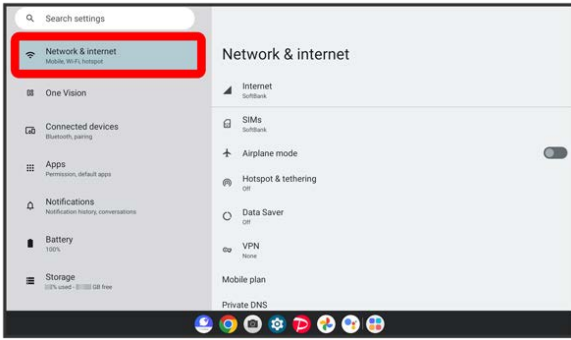


2

 SIMs

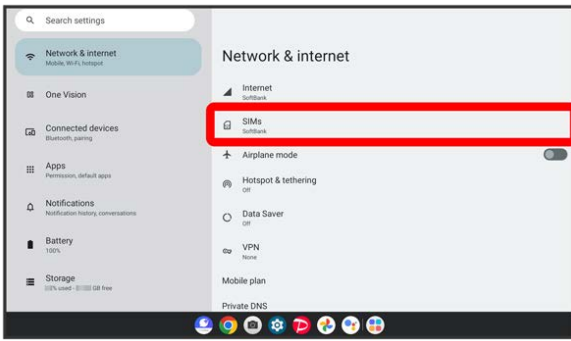


3

Data warning & limit

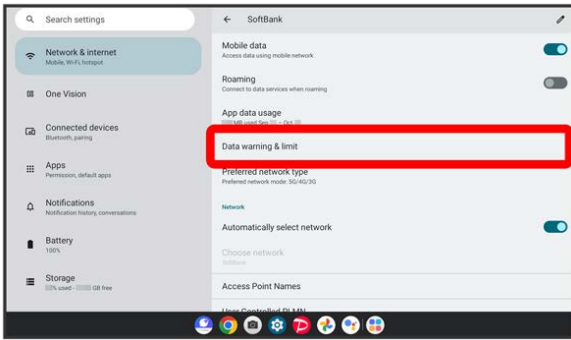


4

 Mobile data usage cycle

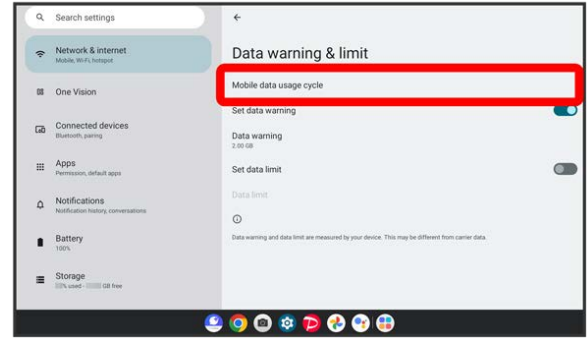

5

 Set reset date for each month → SET

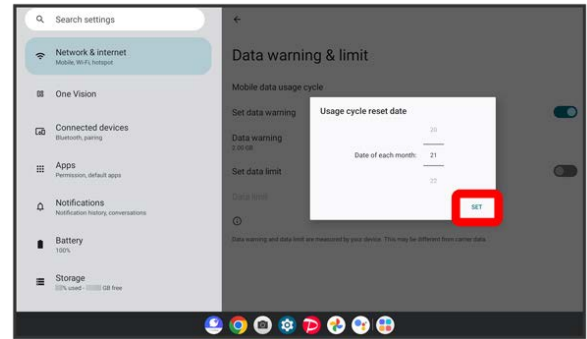


Reset date is set.

## Setting an Alert Amount for Increased Data Usage

 
1

In Home Screen, (Settings) → Network & internet

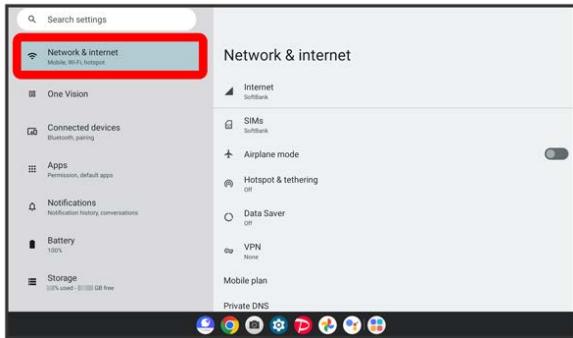


2

SIMs

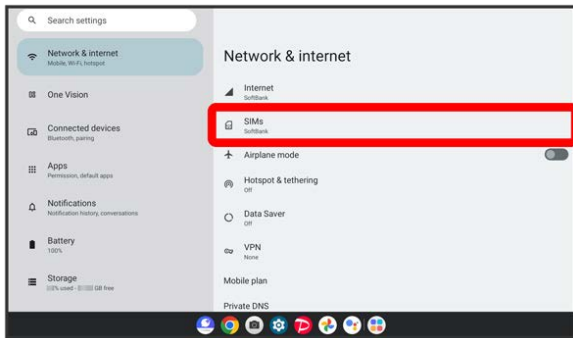


3

 Data warning & limit

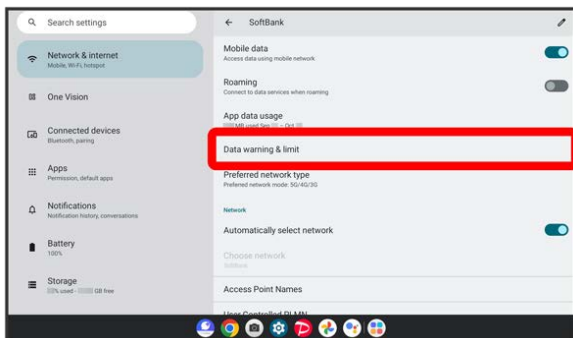


4

 Data warning

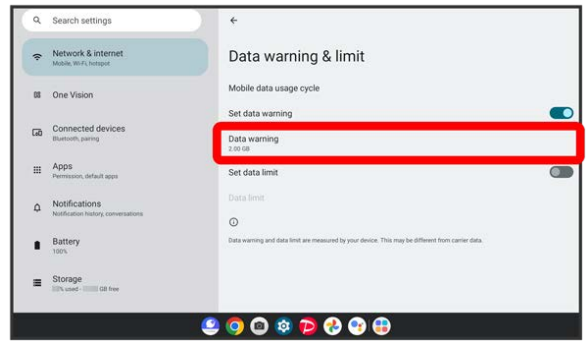

5

Enter amount for alert → SET

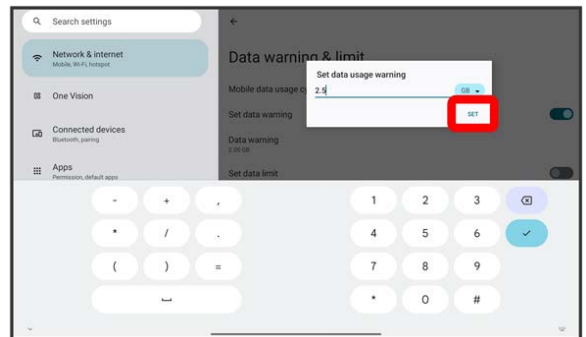

Amount for data alert is set.

- Data usages are approximate, and may differ from the actual data usage.

## Changing Automatic Data Communication & Sync Settings

Customize settings to automatically lower amount of data communication.


Change settings in the following ways.

Item	Description
Location	Disable location information. See " <a href="#">Location</a> " for details.
Automatic syncing	Disable automatic syncing of applications and data set in your account. See " <a href="#">Passwords &amp; accounts</a> " for details.
Background data communication	Restrict background data. See " <a href="#">Restrict Background Mobile Data</a> " for details.
Communication while abroad	Set tablet to not permit data while using tablet abroad. See " <a href="#">Changing Roaming Setting</a> " for details.

# Setting a Limit on Mobile Data Usage


1

In Home Screen, (Settings) → Network & internet

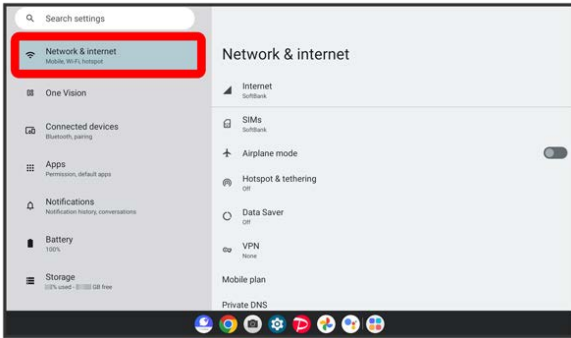


2

 SIMs

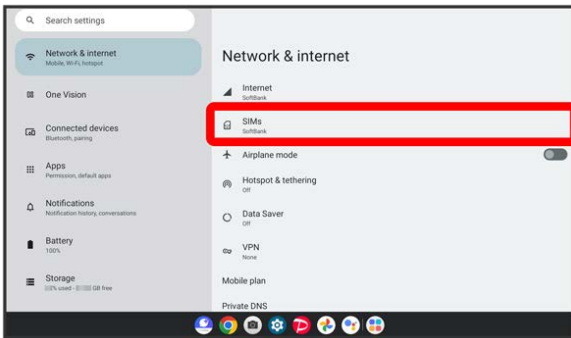


3

Data warning & limit

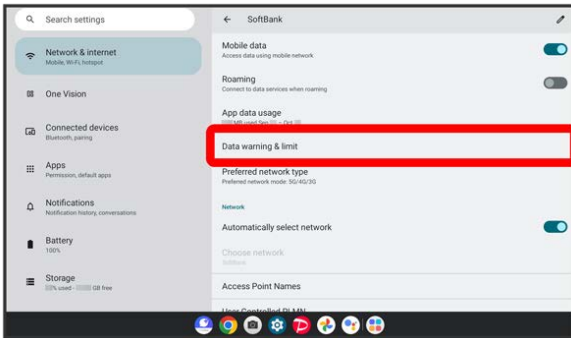


4

 Set data limit → OK

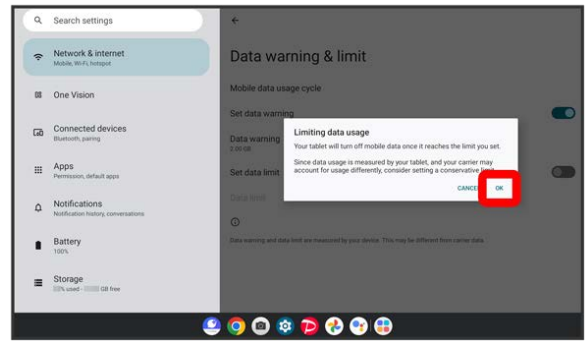


5

Data limit

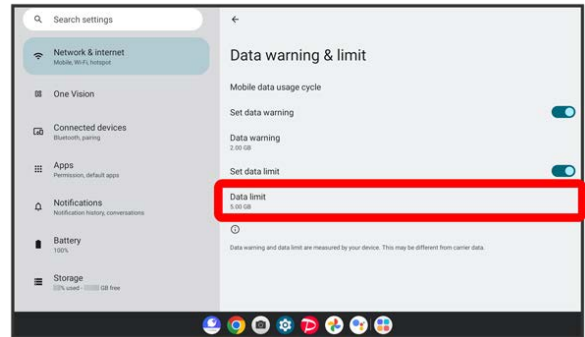

6

 Enter amount for limit → SET

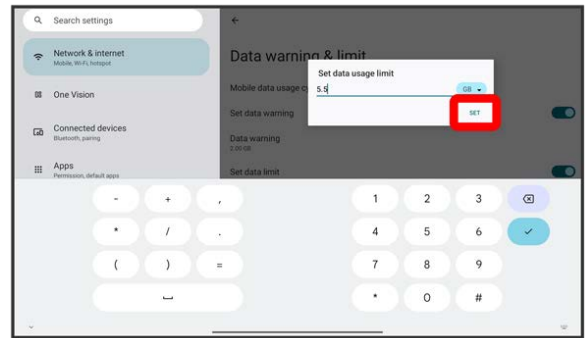


Limit on data is set.

# Restrict Background Mobile Data


1

In Home Screen, (Settings) → Network & internet

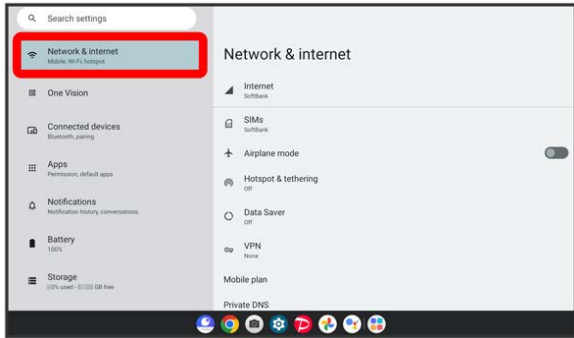


2

 SIMs

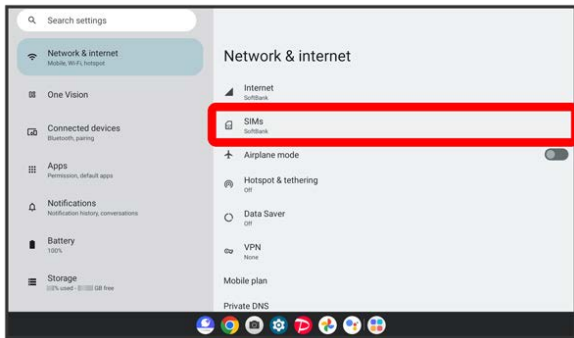


3

App data usage

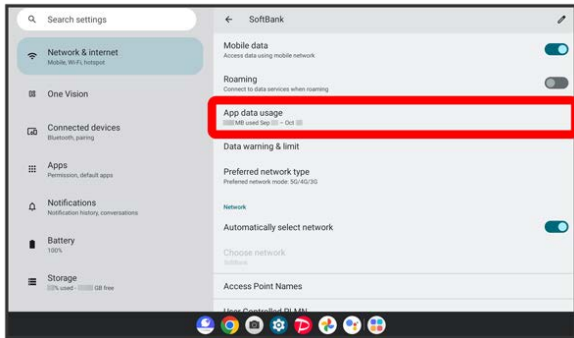


4

Tap application name

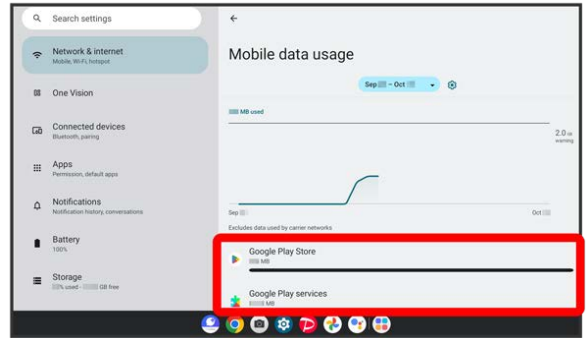

5

Background data ( )

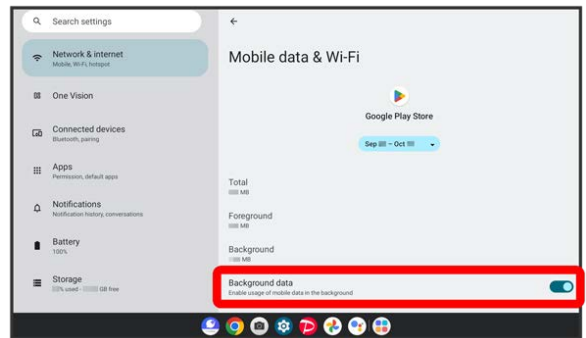

Restriction on background data is set.

## Battery Settings

Check Battery consumption settings and Battery usage.

### Battery Settings

Items that can be checked/set are the following.

Item	Description
Battery charge level and remaining time	Check battery charge level and remaining time.
Battery usage	Check battery usage.
Battery Saver	Make Battery Saver settings.
Battery optimization	Set Battery to not completely charge to reduce Battery deterioration.
Adaptive Battery	Set whether to limit battery usage of seldom-used applications.
Battery percentage	Set showing battery percentage in status bar.

### + Battery Operations

#### Setting Whether to Limit Battery Usage of Seldom-Used Applications

In Home Screen, (Settings) → Battery →

Adaptive Battery → Adaptive Battery

· Tap Adaptive Battery to toggle on (  )/off (  ).

#### Showing Battery Strength on Status Bar

In Home Screen, (Settings) → Battery →


Battery percentage

· Tap Battery percentage to toggle on (  )/off (  ).

## Using Battery Saver


1

In Home Screen, (Settings) → Battery

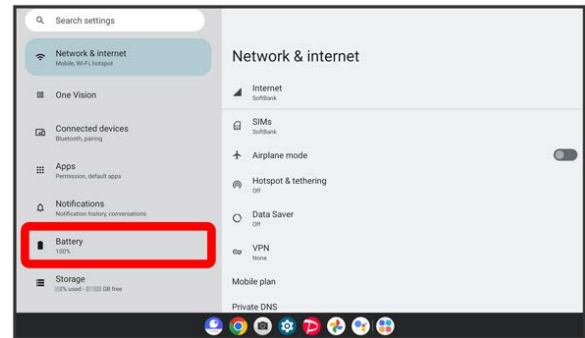


2

 Battery Saver

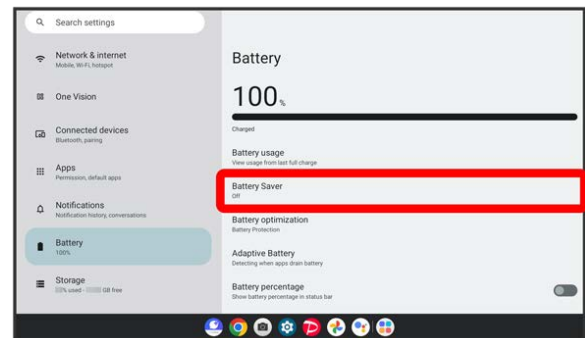

3

TURN ON NOW

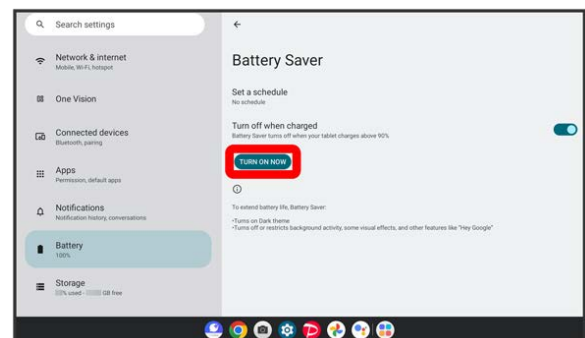

🚩 Battery Saver settings are complete.


- When Battery Saver is on, battery icon color changes.
- When Battery Saver is on, Dark theme is automatically enabled.
- Tap Set a schedule → Based on percentage to enable Battery Saver to turn on according to battery level.

## Sound & Vibration Settings

Make notification ringtone, operation tone, and other sound and notification settings.


### Sound & Vibration Settings


Settable items are the following.

Item	Description
	<ul style="list-style-type: none"> <li>· Dynamic</li> </ul> Dolby Sound recognizes the content and performs automatic adjustments to achieve the best sound.
	<ul style="list-style-type: none"> <li>· Movie</li> </ul> Realistic surround sound and clearer dialogue, allowing you to experience the full effect of movies and TV shows.
Dolby Atmos	<ul style="list-style-type: none"> <li>· Music</li> </ul> Full and delicate sound effects give moving power to every note and beat delivered.
Media volume	Set volume for music, videos, etc.
Alarm volume	Set volume for alarm.
Notification volume	Set volume for notification.
Do Not Disturb	Set Do Not Disturb.
Live Caption	This option automatically captions speech captured on the device.
Media	This option allows users to hide the media player after it completes media playing.
Vibration & haptics	Set whether tablet vibrates for notifications, when keys Tapped, etc.
Shortcut to prevent ringing	Set whether to mute notification ringtone by Pressing Power Key and Volume Up Key, etc.
Default notification sound	Set notification sound.
Default alarm sound	Set alarm sound.
Screen locking sound	Enable/Disable tone when Locking/Unlocking Screen.
Charging sounds and vibration	Set whether tone sounds and tablet vibrates when starting charging.
Touch sounds	Enable/Disable confirmation tones when tapping a Menu, etc.
Always show icon when in vibrate mode	Set whether to show  on Status Bar when in Silent mode (vibration).

## Setting Notifications


1

In Home Screen,  (Settings)

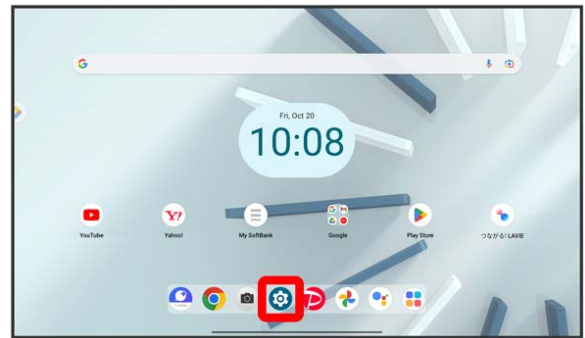


2

### Sound & vibration

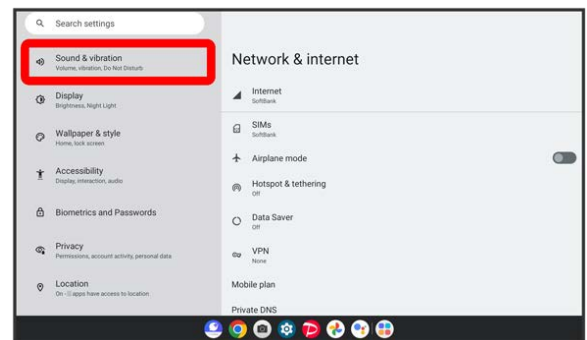 

3


### Default notification sound

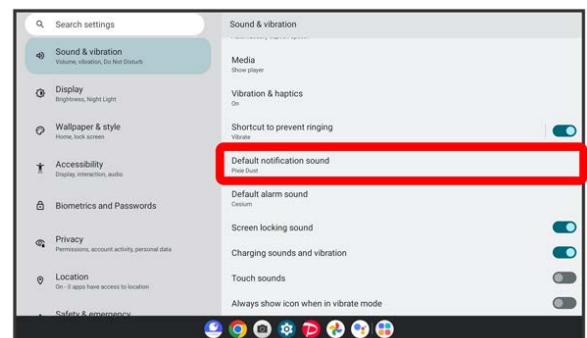



4

 
Tap notification ringtone to set

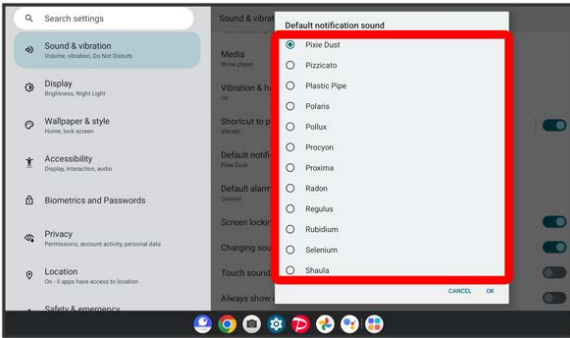

Notification plays.

5

OK

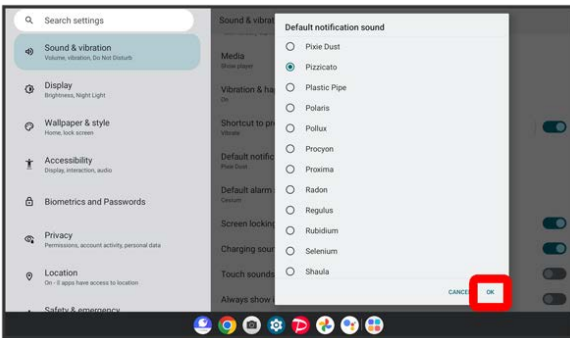


Setting is complete.

## Setting Volume for Notifications


1

In Home Screen, (Settings)

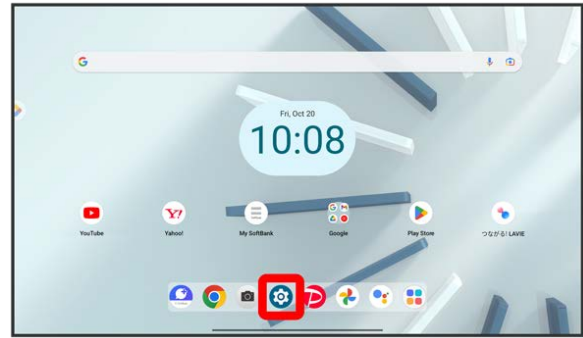


2

 Sound &amp; vibration

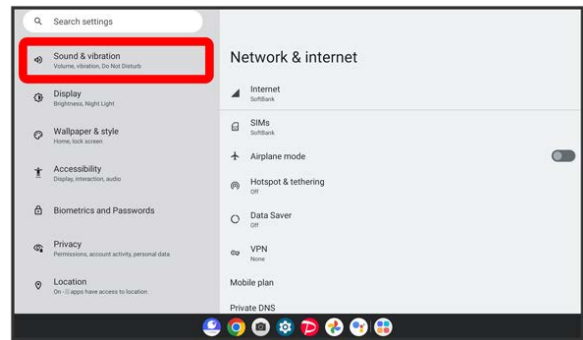

3

 Drag Notification volume left/right

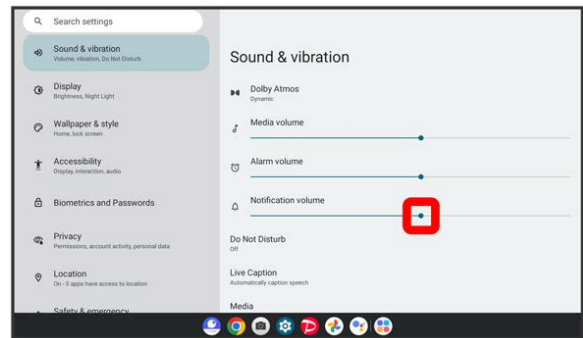


Notification plays to check volume.


• Drag right to increase volume, and left to decrease volume.



## Setting Volume of Music and Videos


1

In Home Screen,  (Settings)

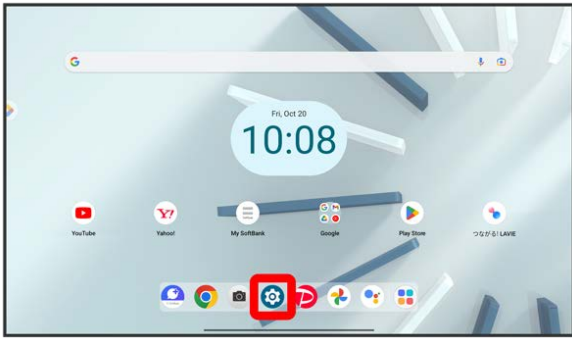


2


Sound & vibration

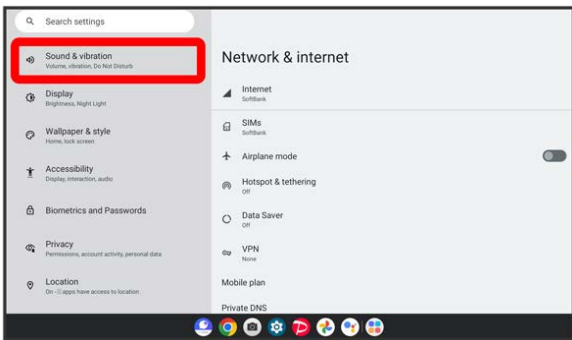

3


Drag **Media volume**  left/right

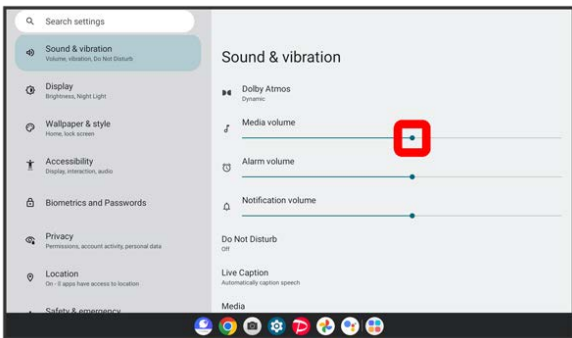


 Sample sound plays.

## Setting Alarm Volume

 
1

In Home Screen,  (Settings)

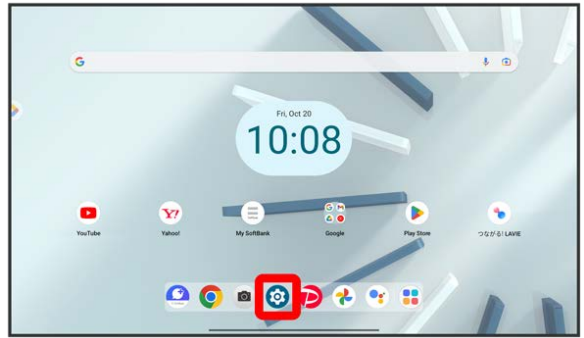


2


Sound & vibration

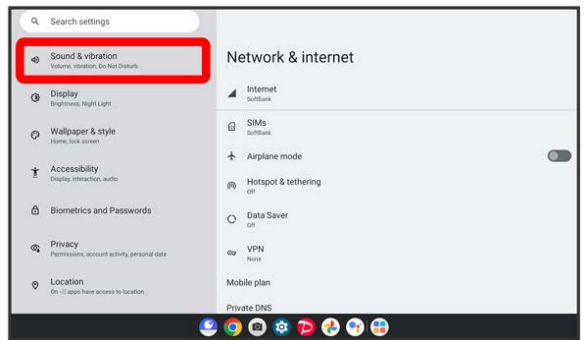

3

 Drag **Alarm volume**  left/right

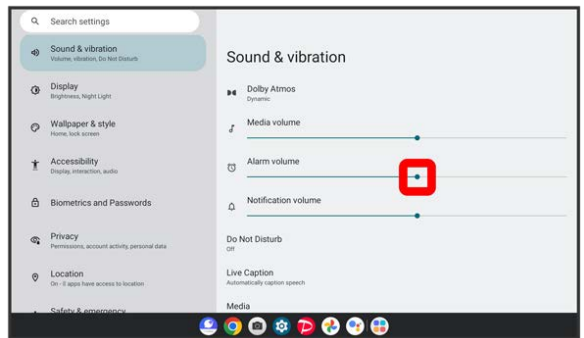


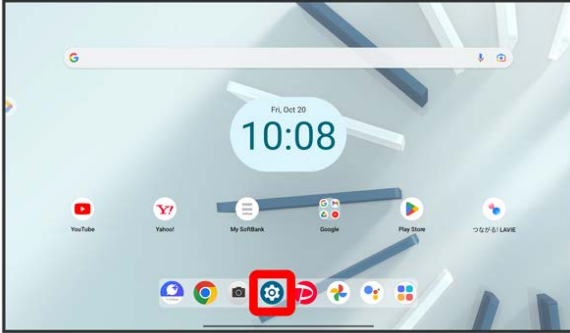 
 Alarm sound plays.

## Setting Vibration for Notifications

Set whether tablet vibrates for notification ringtone.


1

In Home Screen,  (Settings)




2

Sound & vibration

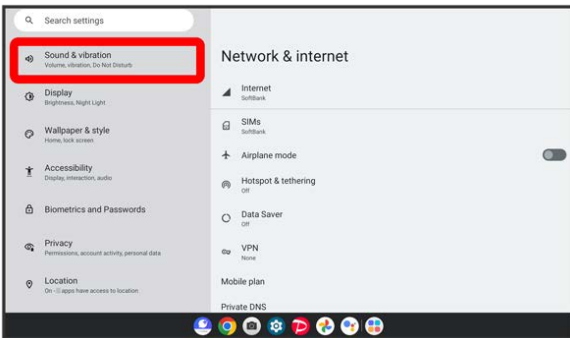


3

 Vibration & haptics

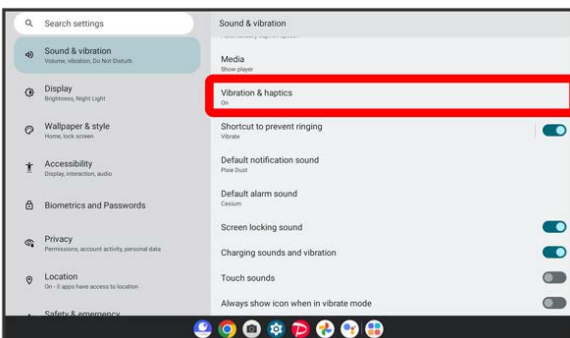


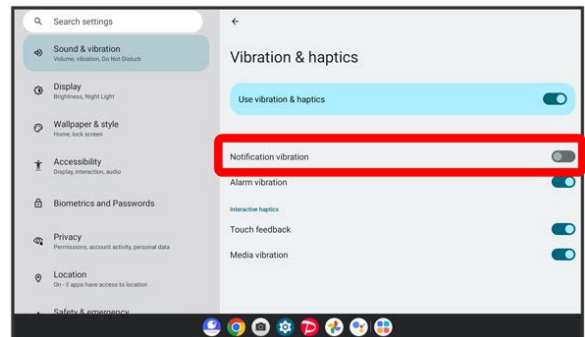 
4


Use vibration & haptics (  )

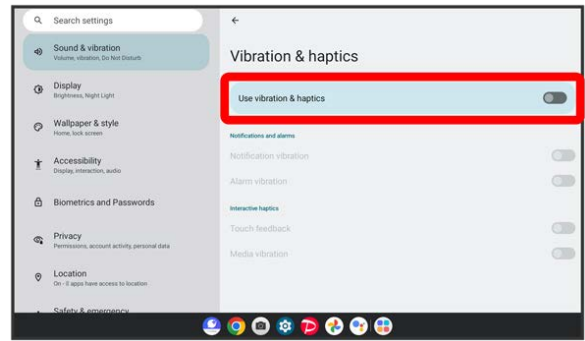

5

Notification vibration (  )



 Vibration for notifications is set.

## Display Settings

Make settings for Display brightness, Wallpaper, etc.



### Display Settings


Settable items are the following.

Item	Description
Brightness level	Set brightness of Display.
Adaptive brightness	Enable adjustment of brightness for surroundings.
Lock screen	Control how notifications show on lock screen.
Screen timeout	Set a period of inactivity after which Display turns off automatically.
Dark theme	Turn on or off Dark Theme and customize Schedule.
Display size and text	Set the size of text, images, icons, etc. in Display.
Night Light	Set whether Display blue light is reduced.
Reading mode	Set whether to enable Reading mode and make effects settings.
Color mode	Set colors on Display and make color temperature settings.
Auto-rotate screen	Set whether to rotate Display with tablet orientation automatically.
Screen saver	Set screensaver.
Lift to wake	Set whether lifting tablet wakes tablet from sleep while screen is turned off (screen lock).
Double Tap to Wake	Set whether Double Tapping wakes tablet from sleep while screen is turned off (screen lock).

## Setting Display Timeout


1

In Home Screen,  (Settings)  Display

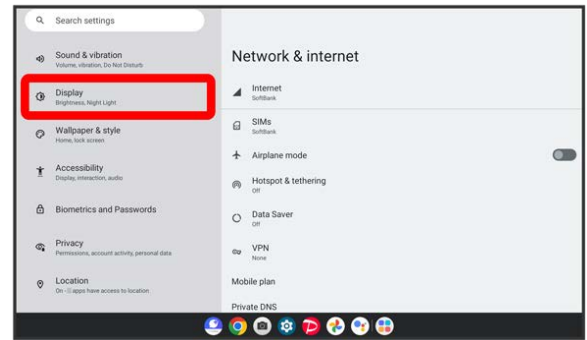


2


### Screen timeout

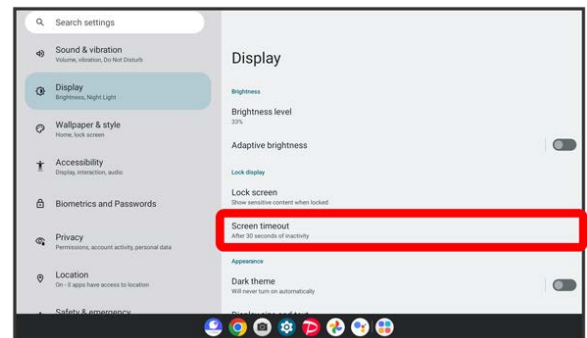

3

### Select time

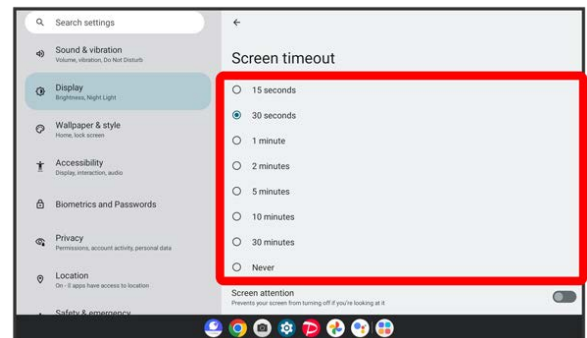 


 Set time until Display goes out.

# Setting Font Size

 
1

In Home Screen, (Settings)

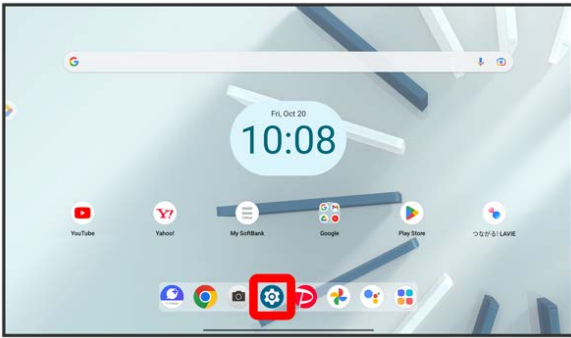


2

 Display

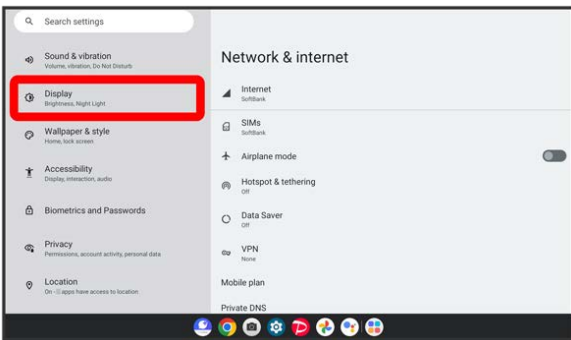


3

Display size and text

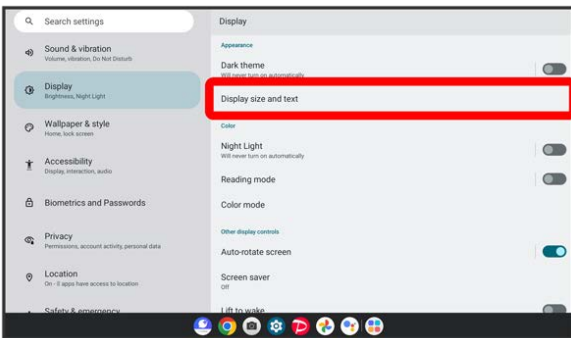

4

Drag "Font size" left/right

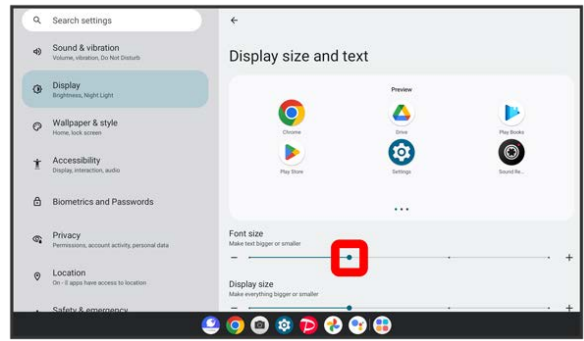


Font size setting is complete.

# Setting Size of Images and Icons


1

In Home Screen, (Settings)

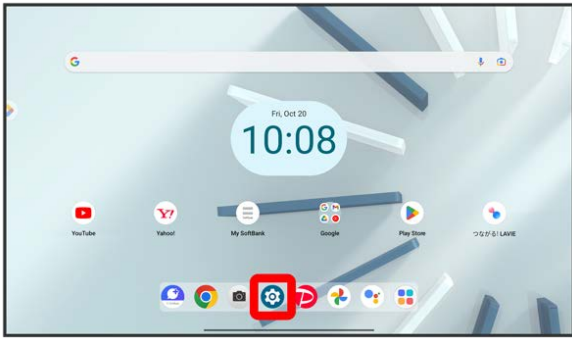


2

 Display

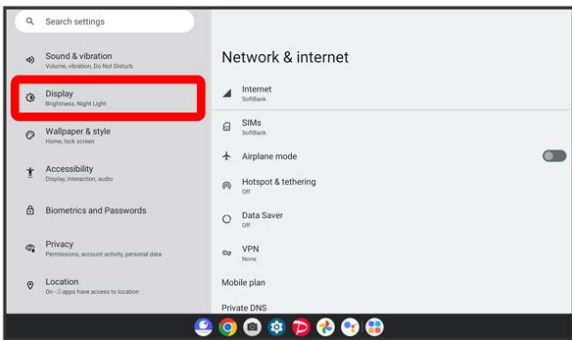

3

Display size and text

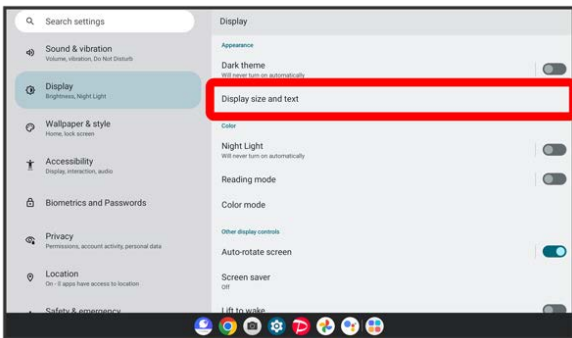

4

Drag "Display size" left/right

 

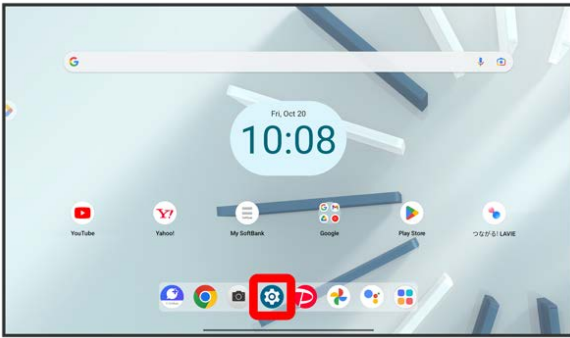


Image and icon size setting is complete.

## Setting Reading Mode

 
1

In Home Screen,  (Settings)

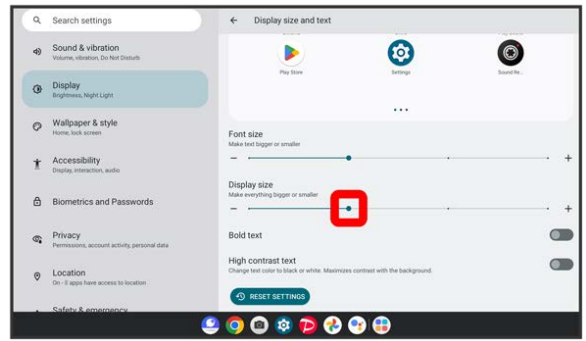


2

Display

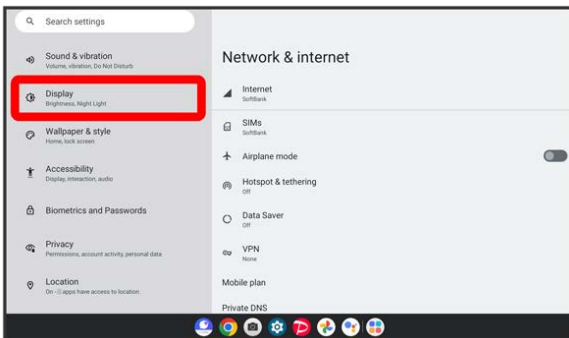


3

Reading mode

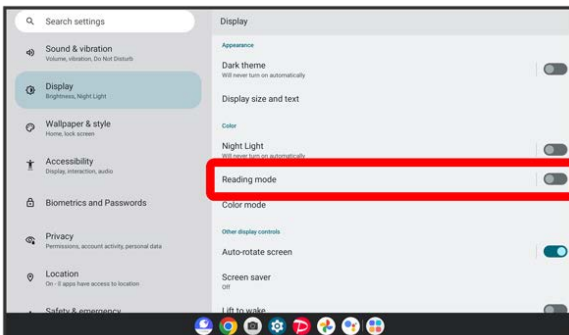

4

 
Reading mode (  )

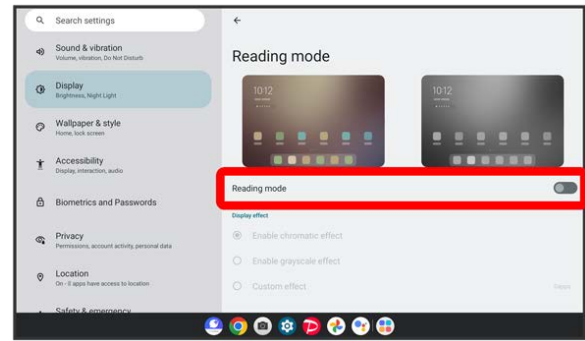


5

Enable chromatic effect / Enable grayscale effect /

 Custom effect

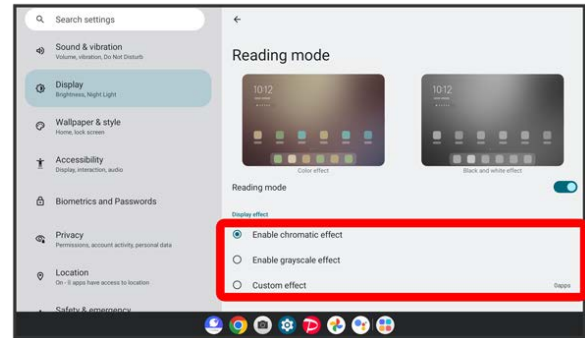

 Reading mode settings are complete.

- If **Custom effect** is selected, set effect for each application.

# Biometrics and Passwords Settings

Make settings for screen lock, facial recognition, etc.

## + Setting Screen Not to Lock

In Home Screen, (Settings) → Biometrics and Passwords → Password → None

- If method for unlocking screen is setting other than None or Swipe before changing setting, first Tap Password and unlock screen.

## Biometrics and Passwords Settings

Settable items are the following.

· Available items vary depend on settings.


Item	Description
Password	Set screen unlock option.
Facial recognition	Set facial recognition. See "Using Facial recognition" for details.
Make pattern visible <sup>1</sup>	Set whether to show pattern (traced with finger).
Show passwords <sup>2</sup>	Enable PIN or password to be visible as it is entered.
Smart Lock <sup>3</sup>	Enable tablet to check if it is being carried or for trusted device or place and unlock screen.

- 1 Appears when Password is set to Pattern .
- 2 Available when Password is set to PIN / Password .
- 3 Available when Password is set to Pattern / PIN / Password .

## Setting Screen to Unlock by Flicking Screen


1

In Home Screen, (Settings)

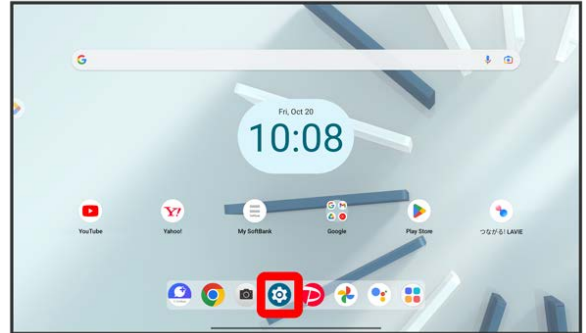


2

### Biometrics and Passwords

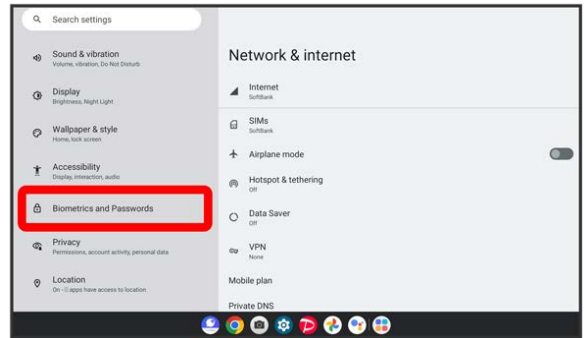

3


### Password

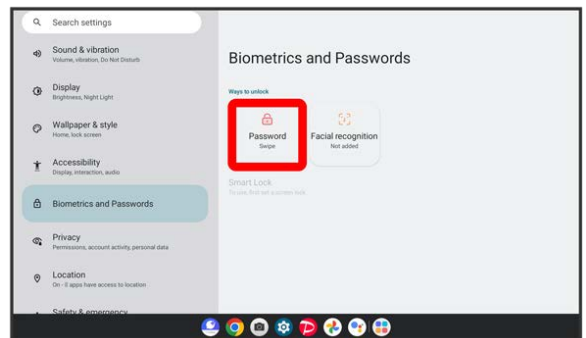

· If method for unlocking screen before change is setting other than None or Swipe , first unlock screen.

4

Swipe

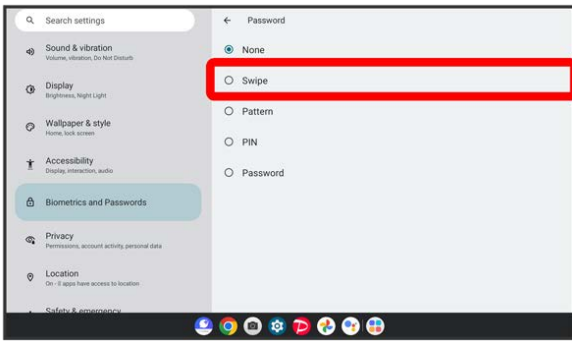


Setting is complete.

- If confirmation appears, follow onscreen prompts.

## Setting Screen to Unlock by Tracing Pattern


1

In Home Screen, (Settings)

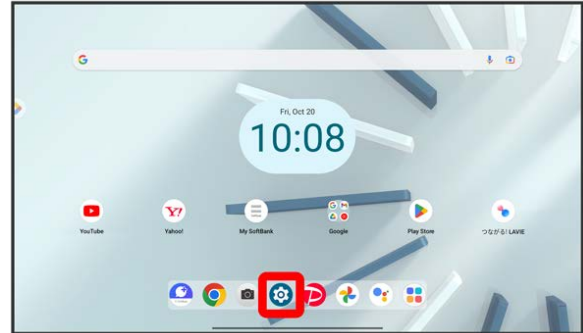


2

Biometrics and Passwords

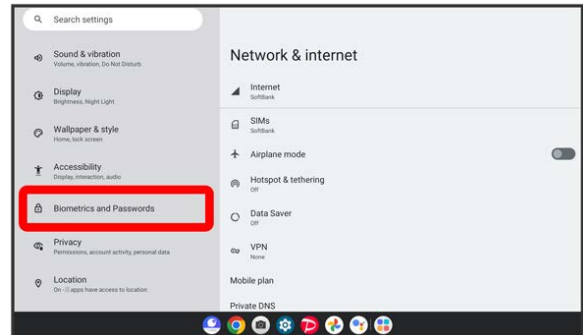

3

Password

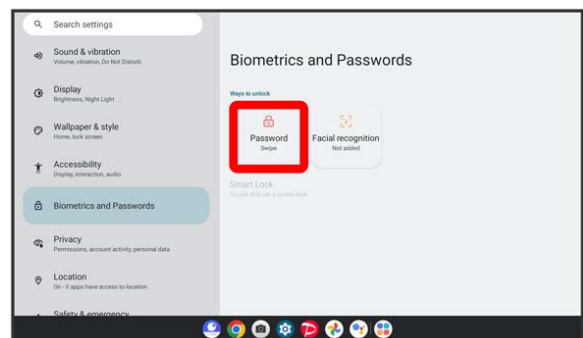


- If method for unlocking screen before change is setting other than **None** or **Swipe**, first unlock screen.




4

Pattern

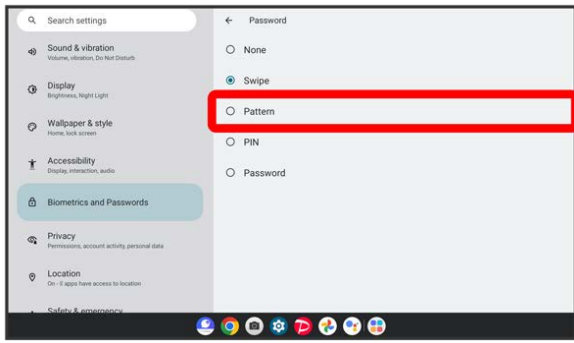


5

 Enter new pattern

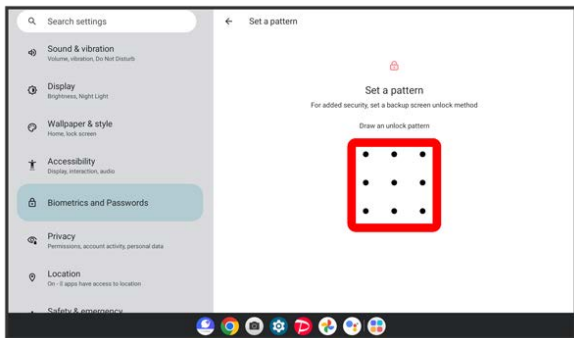


6

Enter new pattern again

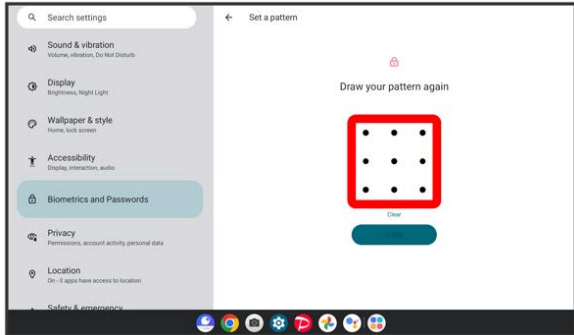


7

 DONE

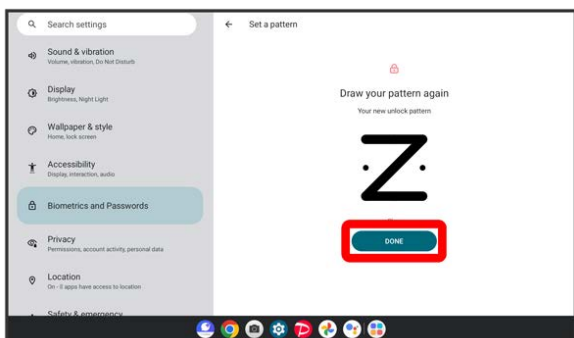


8

 Select method of notification display

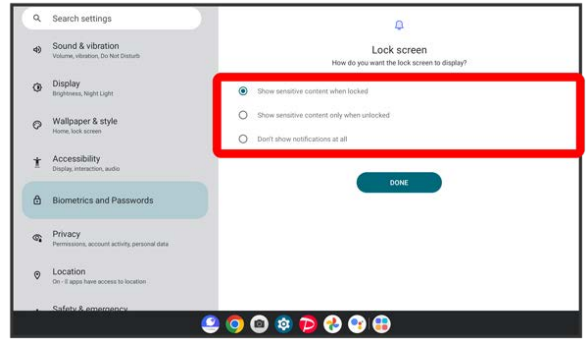

9


DONE

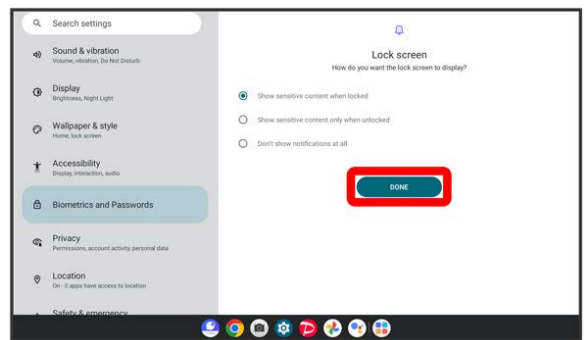


Setting is complete.

# Requiring PIN Entry for Unlocking Screen


1

In Home Screen,  (Settings)

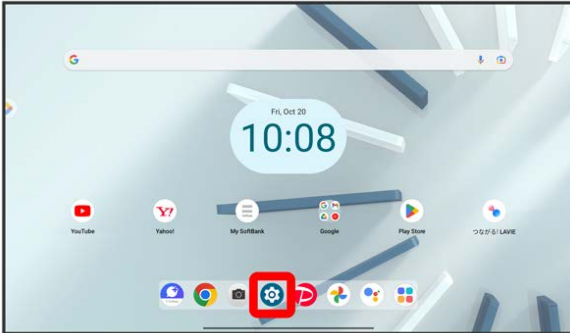


2

 Biometrics and Passwords

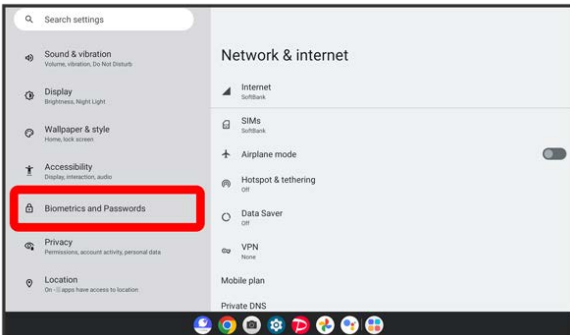

3


Password

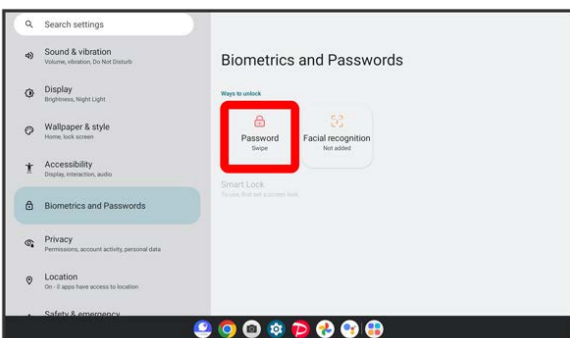

· If method for unlocking screen before change is setting other than **None** or **Swipe**, first unlock screen.


4

 PIN

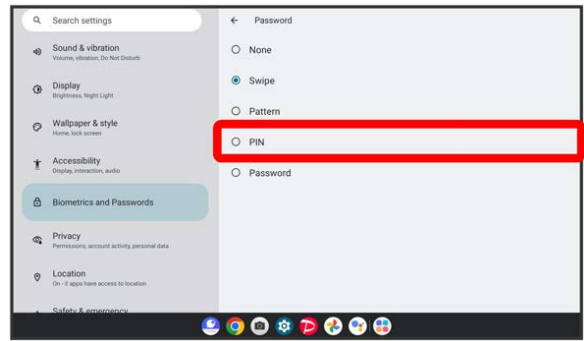


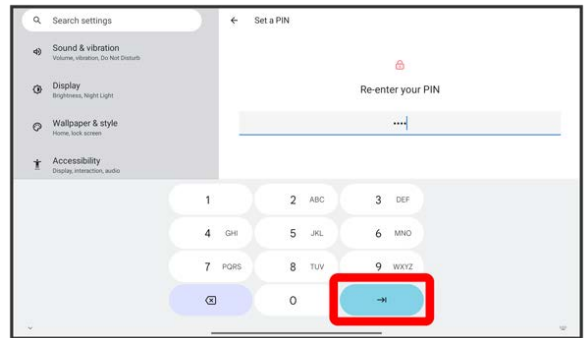
5

Enter new PIN 

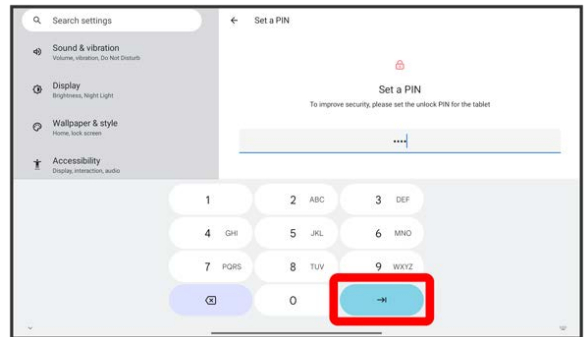

 
6

Enter new PIN again 




7

Select method of notification display

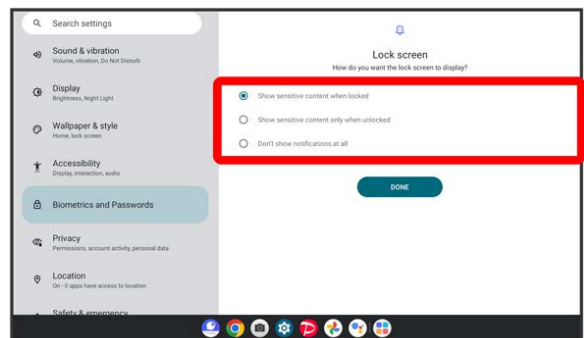

8

 DONE

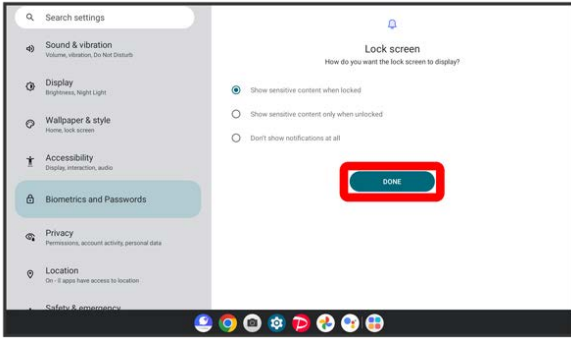


Setting is complete.

Setting Screen to Unlock with Password


1

In Home Screen, (Settings)

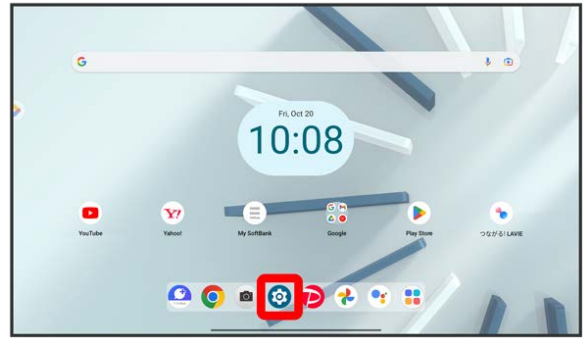


2

 Biometrics and Passwords

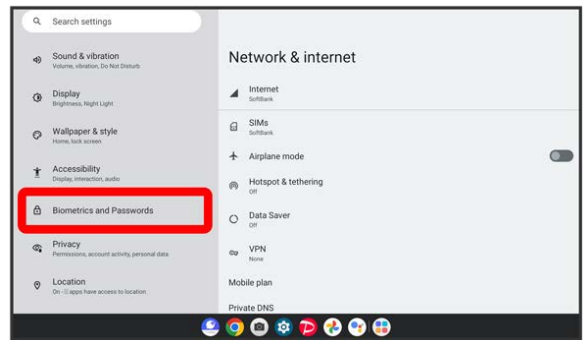

3


Password

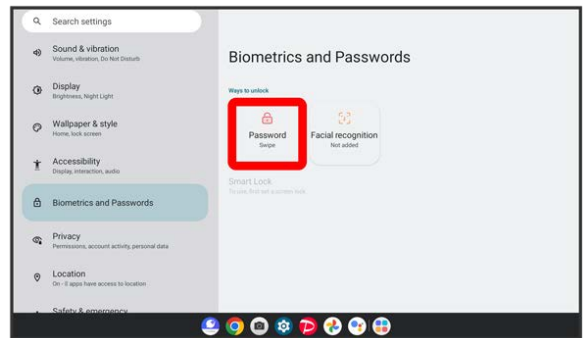

If method for unlocking screen before change is setting other than None or Swipe, first unlock screen.


4

Password

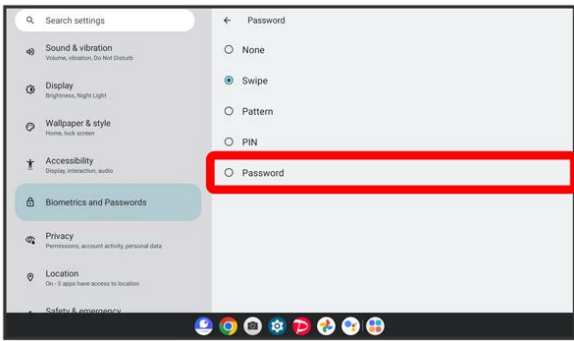


8

DONE

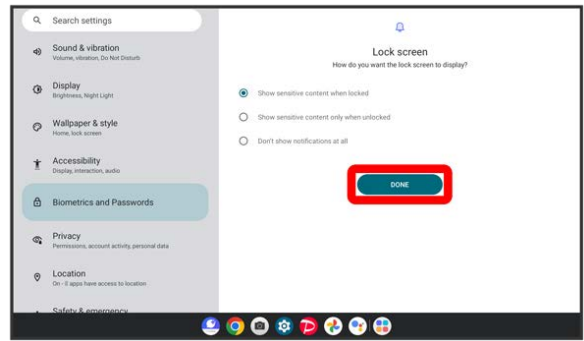


5

 Enter new password →

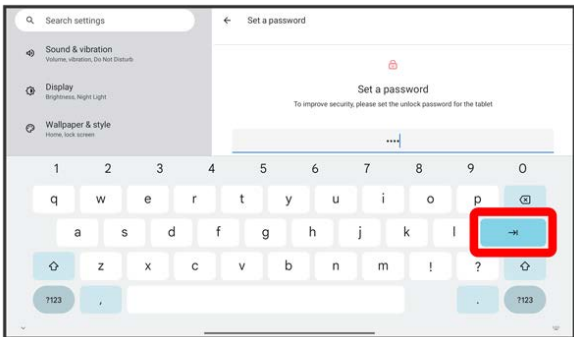


6

Enter new password again →

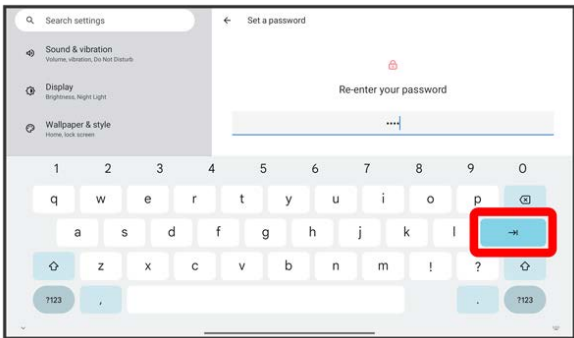

7

Select method of notification display

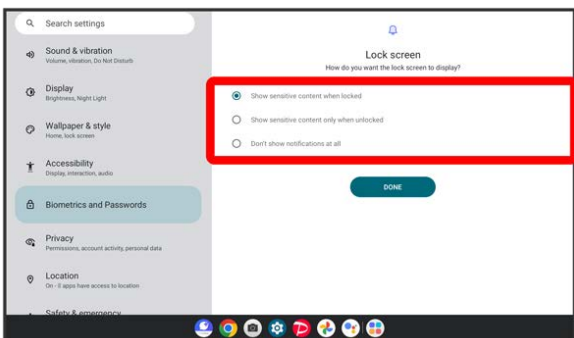


Setting is complete.

# Using Facial recognition


1

In Home Screen, (Settings)

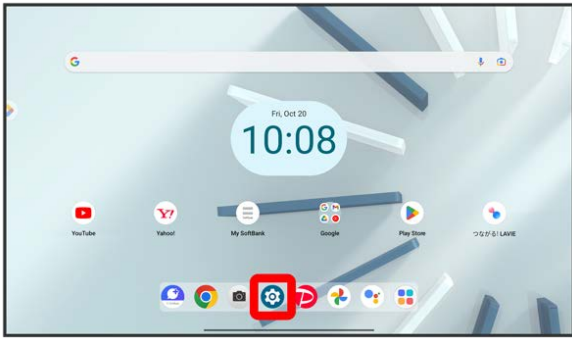


2

## Biometrics and Passwords

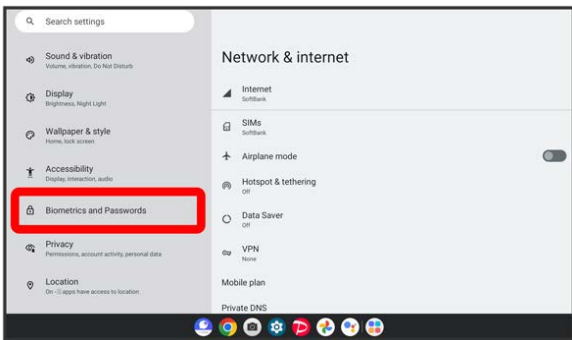

3


## Facial recognition

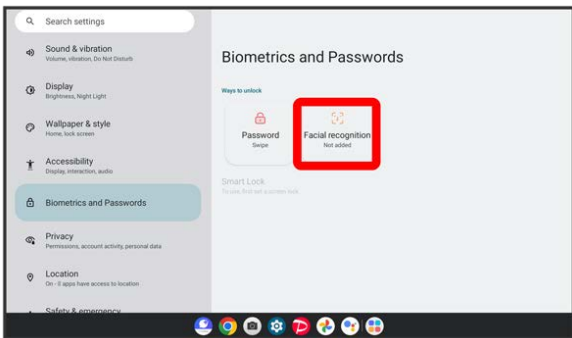 

· If method for unlocking screen before change is setting other than **None** or **Swipe**, first unlock screen.


4

Follow onscreen prompts and set pattern/PIN/password for unlocking screen

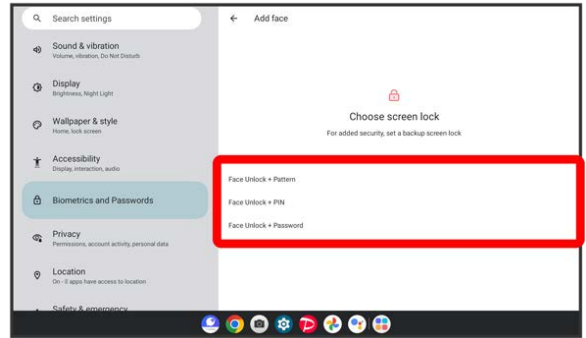


5

Check the "Important notes", **START ENTRY**

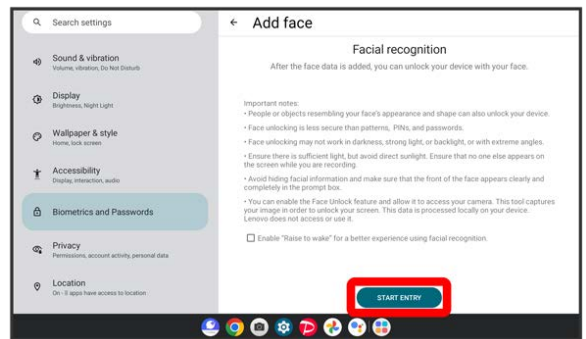


6

Align face from the front with onscreen circle

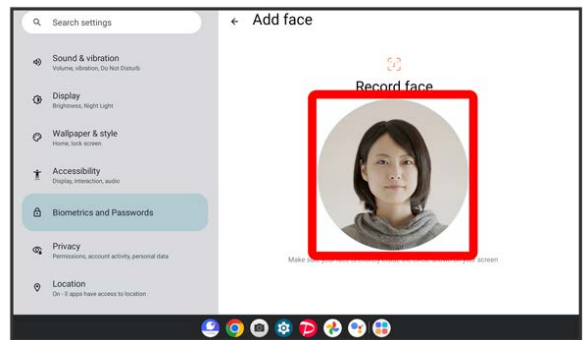


7

**DONE**

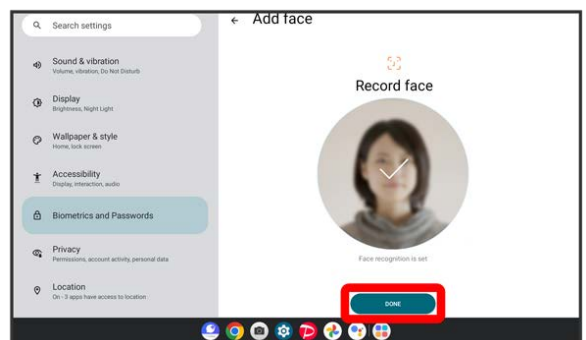

· If confirmation appears, follow onscreen prompts.

 Make settings for using "Unlocking with mask on"

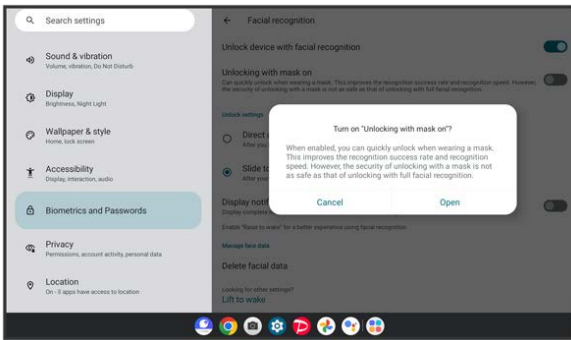

Setting is complete.

## Facial recognition Operations

### Setting Whether to Unlock Tablet with Facial Recognition

In Home Screen, (Settings) → Biometrics and Passwords → Facial recognition → Enter pattern/PIN/password → Unlock device with facial recognition

- Tap **Unlock device with facial recognition** to toggle on (  )/off (  ).

### Setting Whether to Unlock Tablet with Facial Recognition while Wearing Mask

In Home Screen, (Settings) → Biometrics and Passwords → Facial recognition → Enter pattern/PIN/password → Unlocking with mask on

- Tap **Unlocking with mask on** to toggle on (  )/off (  ).

### Selecting Operation after Facial Recognition

In Home Screen, (Settings) → Biometrics and Passwords → Facial recognition → Enter pattern/PIN/password → Direct unlock / Slide to unlock

### Setting All Notifications to Be Shown after Facial Recognition

In Home Screen, (Settings) → Biometrics and Passwords → Facial recognition → Enter pattern/PIN/password → Display notification content (  )

### Deleting Facial Data

In Home Screen, (Settings) → Biometrics and Passwords → Facial recognition → Enter pattern/PIN/password → Delete facial data → Delete

## Safety & emergency Settings

### Safety & emergency Settings

Make settings for emergency contacts and emergency alerts. Settable items are the following.

Item	Description
Medical information	Check and edit your medical information.
OPEN	
PERSONAL SAFETY	Make settings for Personal Safety.
Emergency contacts	Check and add your emergency contacts.
Crisis alerts	Set whether to receive notifications about nearby disasters, etc.
Emergency Location Service	Set whether to send location when making an emergency call.
Earthquake alerts	Set whether to sound alarm when an earthquake is detected near your current location. Not supported in Japan.
Wireless emergency alerts	Make settings for emergency alerts.
More security settings	Set Smart Lock, device admin applications, etc.

### Main Security Codes

The following are main security codes required for tablet use.

Code	Description
Center Access Code	A four-digit code set in subscription contract. See " <a href="#">Center Access Code</a> " for details.
SIM PIN	A code for USIM Card. See " <a href="#">Enabling USIM PIN</a> " for details.
PIN	A code for unlocking screen. See " <a href="#">Requiring PIN Entry for Unlocking Screen</a> " for details.

### Center Access Code

Center Access Code is a four-digit code set in subscription contract; necessary to use optional services from landlines, etc.

 
- Do not forget Center Access Code. If you forget the code, contact us for recovery. For details, contact [Customer Service](#).
- Be careful not to reveal security codes to others. If misused by others, SoftBank Corp. is not liable for any resulting damages.

## Enabling USIM PIN

When SIM PIN is enabled, a window for entering PIN appears to allow tablet use each time tablet is powered on with USIM Card installed.


1

In Home Screen, (Settings) → Safety & emergency

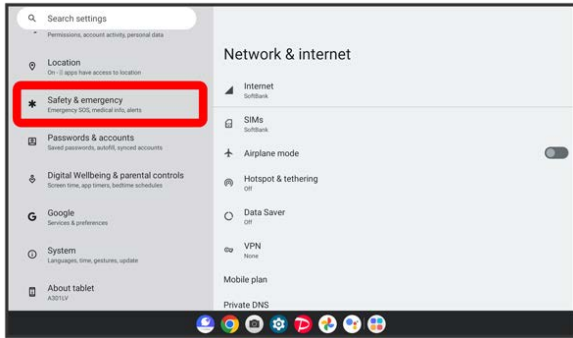


2

 More security settings

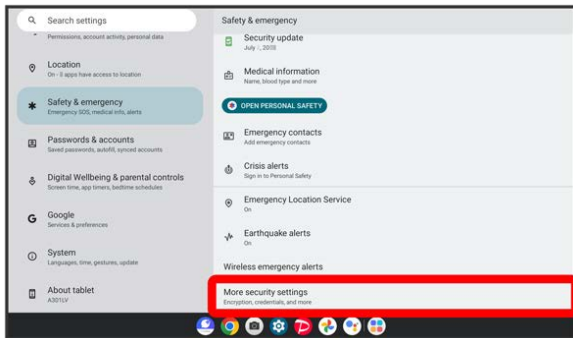


3

 SIM card lock

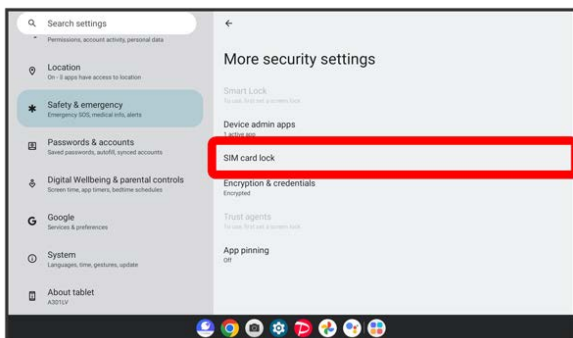

4

Lock SIM card → Enter SIM PIN → OK

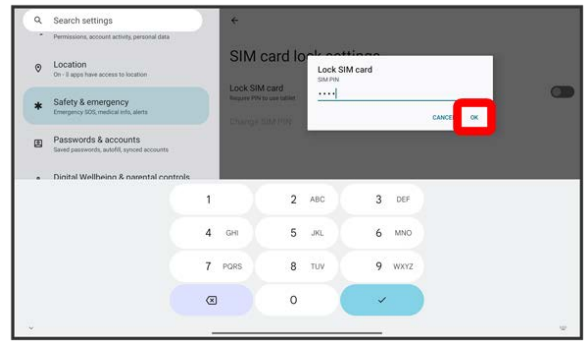

PIN is enabled.

### SIM PIN Cautions

Entering incorrect SIM PIN three consecutive times activates PIN Lock. To cancel, Personal Unblocking Key (PUK) is required; contact [Customer Service](#). Entering incorrect PUK ten consecutive times locks USIM Card, disabling tablet. For recovery, USIM Card must be reissued at a SoftBank (fees apply).




## Changing USIM PIN

First enable USIM PIN to change PIN.


1

In Home Screen, (Settings) → Safety & emergency

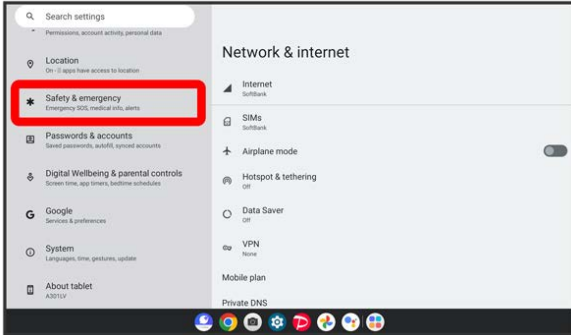


2

 More security settings

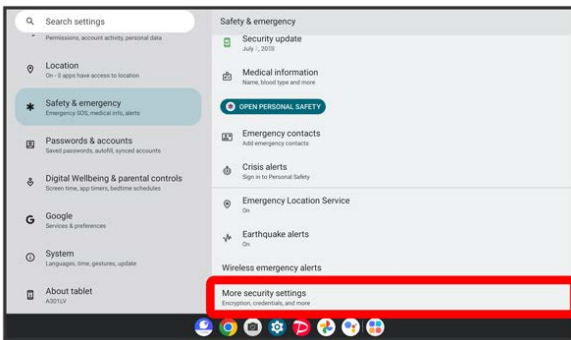


3


SIM card lock

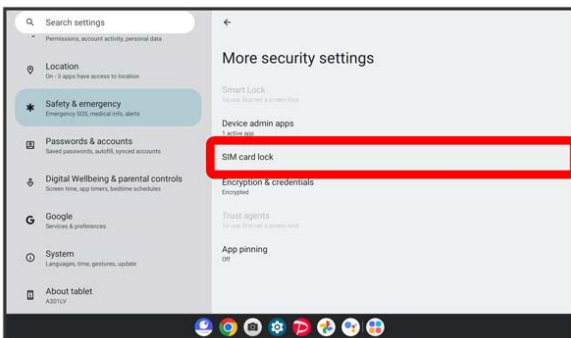

4

 Change SIM PIN → Enter current PIN → OK → Enter new PIN → OK → Re-enter new PIN → OK

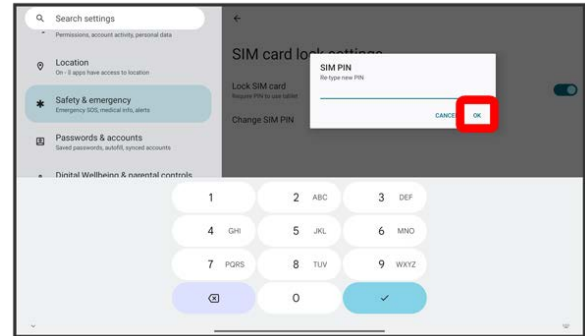

 PIN is changed.



## System Settings

Check and make system settings such as language, date and time, and reset.

### System Settings

Settable items are the following.

Item	Description
Languages & input	Make settings for display and text entry.
Gestures	Make gesture settings for opening Camera, system navigation, etc.
Date & time	Make settings for date and time.
Backup	Make settings for data backup functions.
System update	Check whether system update are required via the internet, and update manually as required. See " <a href="#">Updating Software</a> " for details.
Multiple users	Add and switch users.
Reset options	Reset network settings, application settings, and internal storage.
Regulatory labels	Check information on Technical Conformance Certification or Checking VCCI Information.

### + Languages & input Operation

#### Adding Languages Shown on Display

In Home Screen, (Settings) → System → Languages & input → Languages → Add a language → Tap language

#### Setting Language Shown on Display

In Home Screen, (Settings) → System → Languages & input → Languages → Drag = for language to top

#### Setting Voice Input

In Home Screen, (Settings) → System → Languages & input → On-screen keyboard →  /  for "Google Voice Typing"  
· Tap  to toggle On (  ),  to toggle Off (  ).

#### Setting Keyboard/Voice Input

In Home Screen, (Settings) → System → Languages & input → On-screen keyboard → Tap keyboard/voice input method → Tap item → Follow onscreen prompts

#### Making Text-to-Speech Settings


In Home Screen, (Settings) → System → Languages & input → Text-to-speech output → Tap item → Follow onscreen prompts


#### Setting Speed of Pointer for Mouse/Trackpad

In Home Screen, (Settings) → System → Languages & input → Pointer speed → Drag ● left/right → OK

## Setting 24-Hour Time Indication


1

In Home Screen,  (Settings)

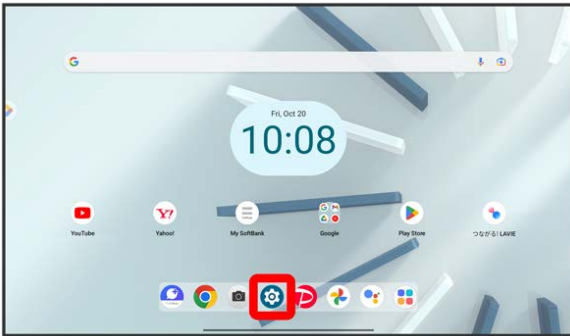


2

System

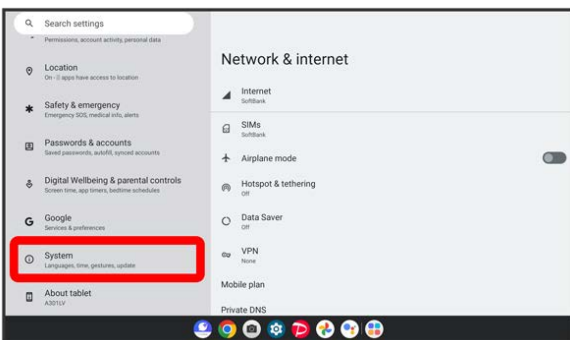


3

 
Date & time

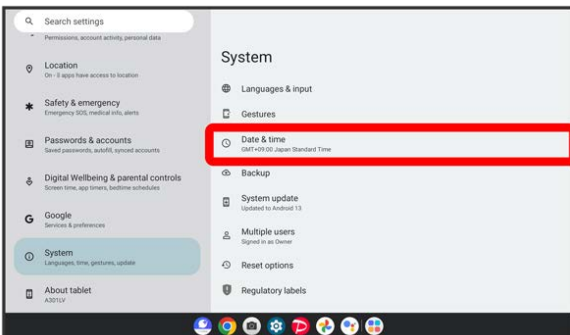





4

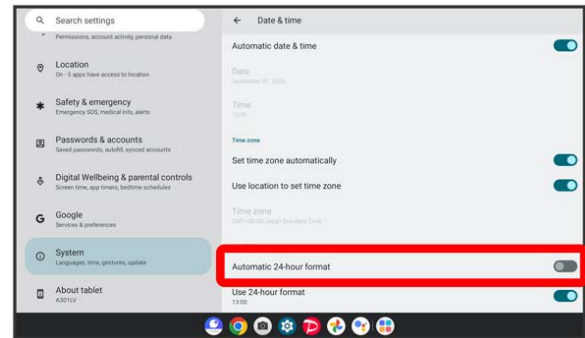Automatic 24-hour format (  )



 
 24-hour or 12-hour format is automatically set depending on your language and region.

- Tap **Automatic 24-hour format** to toggle on (  )/off (  ).
- When **Automatic 24-hour format** is disabled, Tap **Use 24-hour format** to toggle 24-hour format (  )/12-hour format (  ).

# Resetting Tablet

 
1

In Home Screen, (Settings)

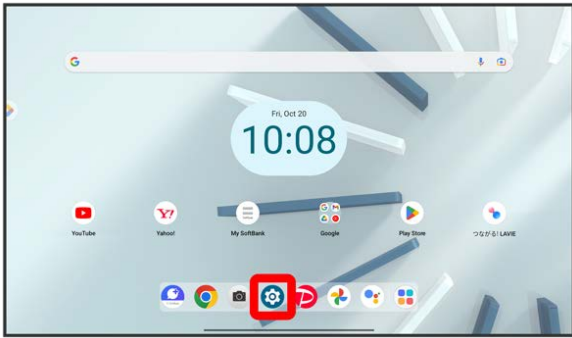


2

 System

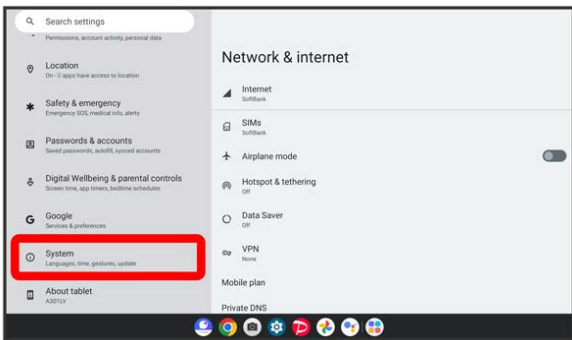


3

 Reset options

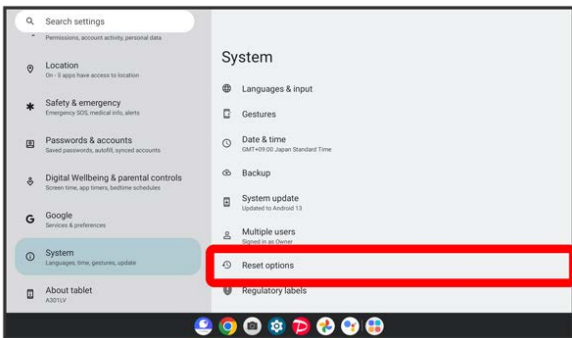


4

Erase all data (factory reset)

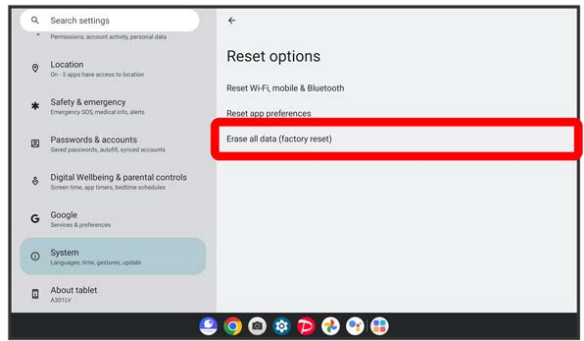

5


Erase all data

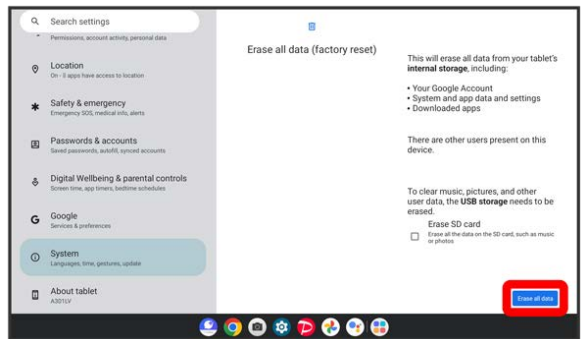

• Unlocks screen when unlock method is setting other than None or Swipe .

6

 Erase all data

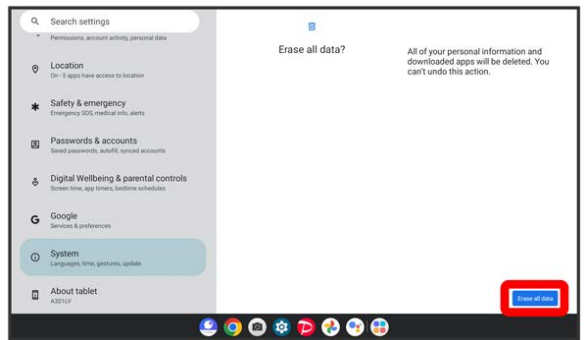

Tablet is reset.

## Other Settings

### Network & internet

Make settings for Wi-Fi, mobile network, data usage, Airplane mode, etc. Settable items are the following.

Item	Description
Internet	Make settings for using Wi-Fi connection and mobile network. See " <a href="#">Connecting by Wi-Fi</a> " for details on using Wi-Fi connection.
SIMs	Set preferred network type, etc. See " <a href="#">Before Using Tablet Abroad</a> " for details on network selection and roaming.
Airplane mode	Turn off device's all radio features without turning off the device.
Hotspot & tethering	Set tethering and portable Wi-Fi hotspots.
Data Saver	Turn off background data generated by some apps.
VPN	Add VPN destinations.
Mobile plan	Check your mobile plan, etc.
Private DNS	Make private DNS settings.

### Connected devices

Bluetooth® connection and other settings. Settable items are the following.

Item	Description
Connected device display <sup>1</sup>	Appears when any devices are connected.
Pair new device	Search for and pair nearby Bluetooth® devices.
Saved devices	Paired devices appear. Tap <a href="#">See all</a> for all paired Bluetooth® devices.
Connection preferences	<ul style="list-style-type: none"> <li>· Bluetooth Make Bluetooth® connection settings.</li> <li>· Cast View tablet screen on Google Cast™-capable device.</li> <li>· Printing Set printing from tablet to be possible with a printer.</li> <li>· Nearby Share Share files with nearby devices.</li> </ul>

<sup>1</sup> Shown screen depends on connected device.

### Apps

Make application settings. Settable items are the following.

Item	Description
Recently opened apps	Recently opened applications appear.
See all XX apps	Check and make settings for installed applications.
Default apps	Set applications used as default.
Screen time	View time spent in apps.
Unused apps	Open unused applications.
Special app access	Make settings for special application access.

## Notifications

Make notification settings. Settable items are the following.

Item	Description
App settings	Manage notifications per application.
Notification history	Set whether to show recent notifications and notifications set to snoozing.
Conversations	Check conversations set as high priority or with their settings changed.
Bubbles	Set whether to allow applications to show bubbles.
Device & app notifications	Manage applications and devices that can read notifications.
Notifications on lock screen	Set type of notifications to show in lock screen.
Sensitive notifications	Set whether to show sensitive notifications in lock screen when screen is locked.
Do Not Disturb	Enable/disable Do Not Disturb. Also make Do Not Disturb settings.
Wireless emergency alerts	Make settings for emergency alert.
Hide silent notifications in status bar	Set whether to hide silent notification on status bar.
Allow notification snoozing	Set whether to allow notification snoozing.
Notification dot on app icon	Set whether to show notification dot on application icon.
Blink light	Set whether to blink for notifications.
Enhanced notifications	Set whether notifications are reduced or silenced depending on type and usage of application that sent notifications.

### + Setting Applications that Have Notifications Blocked

Block all notifications from certain applications.

In Home Screen, (Settings) → Notifications → App settings → Most recent → All apps →  for application to have notifications blocked (  )

## Storage

Check memory space of internal storage, SD Card and USB drive, mount or unmount SD Card, erase data on SD Card, etc. Settable items are the following.

- Available items vary depending on SD Card and USB drive status.

Item	Description
This device	View information on internal storage usage.
SD card	Check data saved on SD Card.
USB drive name	Check data saved on USB drive.

## Wallpaper & style

Make settings for wallpapers and icons, etc. Settable items are the following.

Item	Description
CHANGE WALLPAPER	Set Wallpaper for Home Screen/lock screen.
Wallpaper colors	Set the color of icons and widgets to match Wallpaper.
Basic colors	Set the color of icons and widgets.
Dark theme	Set whether to enable Dark theme.
Themed icons <sup>1</sup>	Set whether to show application icons in monochrome.

- 1 Some icons do not change how they are shown.

## Accessibility

Set captions, magnification gestures, and other useful accessibility functions. Settable items are the following.

Item	Description
Select to Speak	Set whether to read out Tapped item on screen.
TalkBack	Set accessibility service (TalkBack) to read out screen information.
Display size and text	Make display and text settings such as font size, display size, and high-contrast text.
Color and motion	Make settings for color (color correction, color inversion, dark theme) and motion (animation, mouse pointer).
Extra dim	Set whether to dim screen darker than minimum screen brightness.
Magnification	Set whether to enable enlarged view by using a shortcut.
Accessibility Menu	Enable use of large menu.
Switch Access	Set whether tablet functions are assigned to keys.
Timing controls	Set time to hold down screen for Touch & Hold, to display messages for a short time, etc.
System controls	Make settings for system navigation and auto-rotate screen.
Vibration & haptics	Set whether tablet vibrates for notifications, when keys Tapped, etc.
Live Caption	Set whether to show captions for dialog in media, etc.
Caption preferences	Enable captions, as well as caption language, size, etc.
Audio description	Enable readout of onscreen content for compatible movies and programs.
Hearing aids	Pair hearing aids to tablet.
Audio adjustment	Set whether audio playback is monaural, and left/right balance of audio.
Accessibility shortcuts	Set size of shortcut button which opens Accessibility Menu and whether to enable shortcut from lock screen, etc.
Text-to-speech output	Set engine for text readout, as well as change readout speed and play sample.

## Privacy

Make privacy settings. Settable items are the following.

Item	Description
Privacy dashboard	Check applications that have recently used permissions.
Permission manager	Check/change application permissions.
Camera access	Set whether camera is accessible for applications.
Microphone access	Set whether mic is accessible for applications.
Notifications on lock screen	Make settings for showing notifications in lock screen.
Show media on lock screen	Set whether media player remains open in lock screen.
Android System Intelligence	Candidates appear based on users you have communicated with and applications/content you have used.
App content	Set whether to allow applications to send content to tablet Android system.
Show clipboard access	Enable notifications for applications that have accessed text, images, etc. copied to the clipboard.
Autofill service from Google	Set information saved to your Google account, such as passwords, to be entered by Tapping only once.
Activity controls	Select activities and information that are savable to Google.
Ads	Make settings for advertisements that appear.
Usage & diagnostics	Set whether to send tablet diagnostic and other information to Google automatically.

## Location

Make Location settings. Settable items are the following.

Item	Description
Use location	Set whether to use location information.
Recent access	Show applications that recently used location.
App location permissions	Set whether to permit use of location information per each application.
Location services	Make settings for location services such as Google Location History, Google Location Accuracy, Google Location Sharing, Earthquake alerts, and Emergency Location Service.

## Passwords & accounts

Make settings to create/add accounts, sync accounts. Settable items are the following.

Item	Description
Passwords	Manage passwords with a password manager.
Autofill service	Select and make settings for an autofill service.
Accounts for Owner	Added account appears on tablet.
Add account	Create and add accounts.
Automatically sync app data	Enable automatic updating of data for applications.

### + Setting Automatic Syncing

In Home Screen, (Settings) → Passwords & accounts → Automatically sync app data → OK

· Tap Automatically sync app data → OK to toggle on (  )/off (  ).

## Digital Wellbeing & parental controls

Check habit of tablet use, and make settings to limit usage frequency. Settable items are the following.

Item	Description
Dashboard	Check Screen time, Notifications received, and Times opened for tablet and each application.
Bedtime mode	Change Display to monochrome or enable Do Not Disturb at preset time.
Focus mode	Pause applications that might be a distraction.
Manage notifications	Set notifications on/off for applications that have recently sent notifications.
Do Not Disturb	Enable/disable Do Not Disturb. Also make Do Not Disturb settings.
Heads Up	Set whether to alert to be aware of surroundings when using tablet while walking.
Show icon in the app list	Set whether to show icons in app list.
Parental controls	Set controls on tablet usage as a parent/guardian.

## Google

Make settings for Google services together at the same time. Settable items are the following.

Item	Description
Manage your Google Account	Make settings for a Google account.
Ads	Make settings for your advertising ID.
Autofill	Set whether to autofill information saved to your Google account such as password, or your SMS verification code.
Backup	Make backup settings.
Devices & sharing	Set to whether to control directly from Notifications Window when playing media on TV or speaker equipped with Chromecast, etc. on the same Wi-Fi network, to set notifications about device near tablet, or to share files using Nearby Share.
Find My Device	Set whether location is shown if tablet is lost.
Mobile data & messaging	Set a phone number to allow you to reset your Google account.
Parental controls	Set controls on usage as a parent/guardian.
Personalize using shared data	Set whether to allow use of shared data.
Set up & restore	Make settings for work profile and nearby devices, and restore contacts from a backup.
Settings for Google apps	Make settings for recording walking and running activity, managing your weight, etc. with services such as Google Fit™ and Google Play Instant.

## About tablet

Check device name, legal information, etc. Settable items are the following.

Item	Description
Device name	Check tablet name.
Legal information	Check third-party licenses, Google terms of service, etc.
SIM status	Check USIM Card information.
Model	Check tablet model name, serial number, etc.
CPU	Check the processor name.
RAM	Check the total amount of RAM memory.
Storage	Check total space in internal storage.
Camera	Check the number of pixels for the Front Camera and Rear Camera.
IMEI	Check the tablet's IMEI (International Mobile Equipment Identity).
Android version	View the versions of Android OS and security patch level.
Android security update	Check the last Android security update.
Display	Check the screen size.
IP address	Check the IP address.
Wi-Fi MAC address	Check the Wi-Fi MAC address.
Device Wi-Fi MAC address	Check tablet Wi-Fi MAC address.
Bluetooth address	Check the Bluetooth® address.
Up time	Check tablet operation time since startup.
Baseband version	Check the baseband version.
Build number	Check the build number.
Hardware version	Check the hardware version.
Kernel version	Check the kernel version.
Software version	Check the software version.



## Global Services

Before Using Tablet Abroad.....	96
---------------------------------	----

 
# Before Using Tablet Abroad

Tablet is Global roaming Service eligible. Tablet connects to an appropriate cellular provide automatically be default. A specific carrier can also be selected manually. Change communications method and roaming settings as needed.

## Setting a Cellular Provider


1

In Home Screen, (Settings) → Network & internet

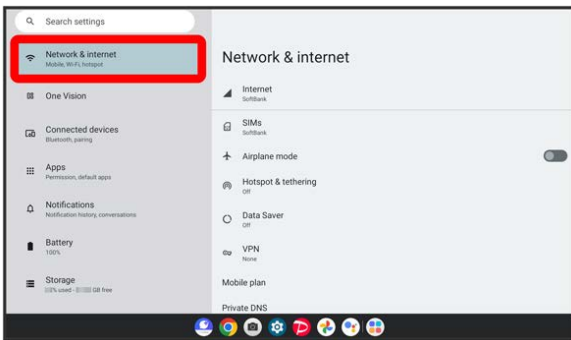


2

SIMs

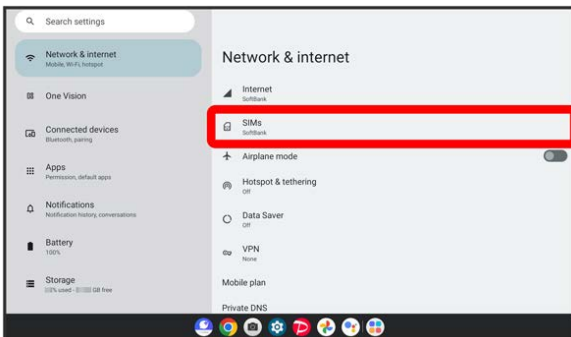

3


Automatically select network (  )

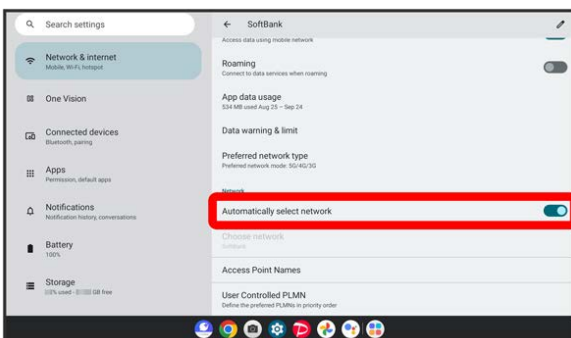

Disable (  ) to search for available networks.

4

 Tap provider

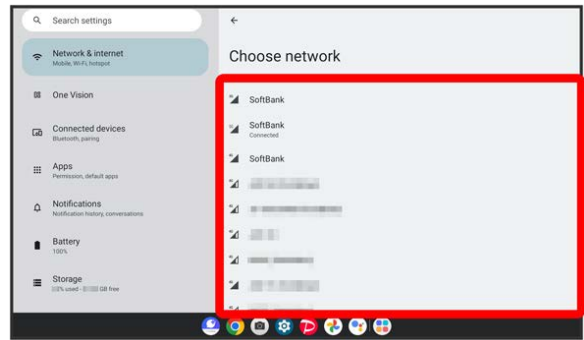


Cellular provider is set.

## Changing Roaming Setting


1

In Home Screen, (Settings) → Network & internet

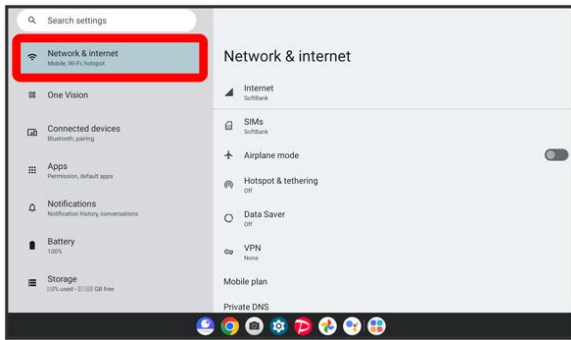


2

 
SIMs

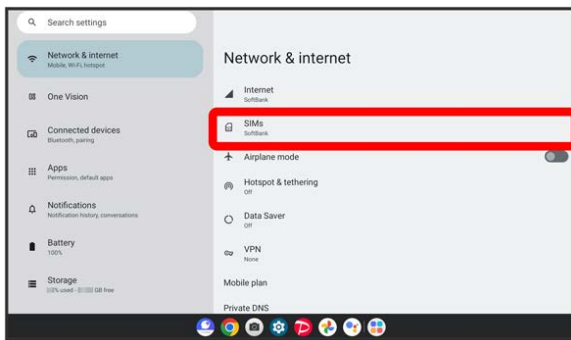

3

 Roaming (  )

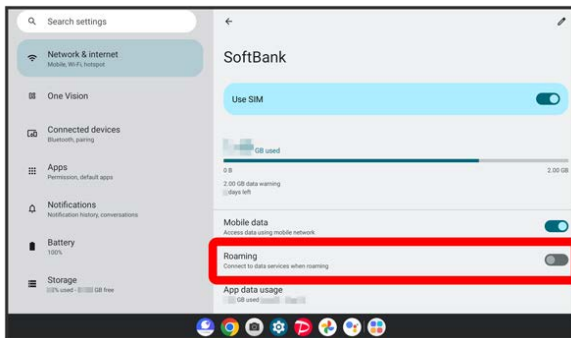

 Data roaming is enabled.

- Tap **Roaming** to toggle on (  )/off (  ).
- If confirmation appears, follow onscreen instructions.



## Warranty/Specifications/ Customer Services

Warranty & After-Sales Service.....	100
Specifications.....	100
Customer Service.....	101

## Warranty & After-Sales Service

### Warranty

- The warranty period is 1 year from the date of newly purchase.
- Repairs will be done based on terms of repair service. Terms of repair service is referred to SoftBank website. <https://www.softbank.jp/mobile/support/product/warranty/> (Japanese)
- Warranty covers only tablet. Accessories such as cables are not covered by terms of repair service.

### ! Cautions

#### Damages

SoftBank Corp. is not responsible for any damages for user or third party resulting from lost opportunities to engage in transmission, etc. due to breakage, malfunction, or trouble of product.

#### Accidents/Repair

Files and settings may be lost or altered due to accidents or repairs. Keep a copy of important files, etc. SoftBank Corp. is not liable for damages resulting from loss or alteration of files or settings due to accident or repair.

#### Disassembly/Modification

Disassembly/modification of tablet is prohibited under the Radio Law. Note that tablet cannot be accepted for repairs if modified.

### After-Sales Service

To request repair, contact your nearest SoftBank store or call your carrier's [Customer Service](#).

- During the warranty period, repairs are made under the terms of repair service.
- After the warranty period, if tablet can be repaired, repairs will be made at cost. The functional parts necessary to repair the tablet will be available for 4 years generally after the manufacture is discontinued. Repair may not be possible because of a shortage of repair parts even during the warranty period.

### 💡 Further inquiries

For more information on after-sales service, contact a nearby SoftBank Shop or [Customer Service](#).

## Specifications

### Tablet

Item	Description
Weight	Approx. 490 g
Continuous Standby Time	5G: Approx. 720 hours <sup>1</sup> 4G (AXGP): Approx. 803 hours 4G (FDD-LTE): Approx. 918 hours
Charging Time	AC Charger (USB Type-C™ quick charge AC Charger for USB PD-PPS [ZSDBAV] (SB-AC22-TCPD)): Approx. 180 minutes
Dimensions	Approx. 253 x 160 x 8.3 mm
Maximum Output	5G: 0.2 W 4G (AXGP): 0.4 W 4G (FDD-LTE): 0.2 W

1 This is the estimated time in a standalone environment.

### USIM/SD Card Removal Tool

Item	Description
Weight	Approx. 0.9 g
Dimensions	Approx. 36 x 8 mm

## Customer Service

---

If you encounter any difficulties or are unsure of anything, contact customer service.

### SoftBank Customer Support

- From a SoftBank handset, dial toll free at 157
- From a landline / IP phone, dial toll free at 0800-919-0157
- Business hours : Call 10:00am - 7:00pm / Chat 9:00am - 8:00pm

### Smartphone Technical Support Center

- From a SoftBank handset, dial toll free at 151
- From a landline/IP phone, dial toll free at 0800-1700-151
- Business hours : Mon. - Fri. 9:00am - 7:00pm / Sat., Sun., and Holiday 9:00am - 5:00pm/9:00am - 8:00pm (for general information)





## Safety Precautions




Safety Precautions.....	104
General Notes.....	112
Bluetooth®/Wi-Fi (Wireless LAN) Functions.....	115
Waterproofing/Dustproofing.....	116
Intellectual Property Rights.....	117
Radio Wave Exposure and Specific Absorption Rate (SAR) Information.....	119

## Safety Precautions

Read Safety Precautions before using tablet.  
Observe precautions to avoid injury to self or others, or damage to property.





 

### Safety Precautions

These labels indicate the degree of risk from improper use. Make sure you thoroughly understand their meanings before reading on.

Mark	Descriptions
 <b>DANGER</b>	Great risk of death or serious injury <sup>1</sup> from improper use
 <b>WARNING</b>	Risk of death or serious injury <sup>1</sup> from improper use
 <b>CAUTION</b>	Risk of minor injury <sup>2</sup> or damage to property <sup>3</sup> from improper use

- 1 Serious injury: This refers to loss of sight, injury, burns (high- and low-temperature), electric shock, broken bones, poisoning, etc. with remaining aftereffects, and injuries requiring hospital admission or long-term hospital visitation.
- 2 Minor injury: This refers to injuries, burns (high- and low-temperature), electric shock, etc. that do not require hospital admission or long-term hospital visitation.
- 3 Damage to property: This refers to extended damage to buildings, furniture, livestock, pets, etc.

These symbols indicate prohibited or compulsory actions. Make sure you thoroughly understand their meanings before reading on.

Mark	Descriptions
 Prohibited	Prohibited actions
 Do Not Disassemble	Disassembly prohibited
 Avoid Liquids Or Moisture	Exposure to liquids prohibited
 Do Not Use Wet Hands	Use with wet hands prohibited
 Compulsory	Compulsory actions
 Disconnect Power Source	Unplug AC Charger from outlet

Handling Tablet, AC Charger (Optional Accessory) , USIM/SD Card Removal Tool (Complimentary Sample) (Common)

### DANGER



Do not use, store or leave in locations subject to high temperatures or where heat collects (near a fire or a device such as a heating unit, in a kotatsu or futon, under direct sunlight, inside a vehicle on a hot day, etc.).

May cause fire, burns, injury, electric shock, etc.



Do not place inside or near cooking appliances such as microwave ovens, IH cooktops, or pressure cookers.

May cause fire, burns, injury, electric shock, etc.



Do not expose to or place directly on sand, dirt, or mud. Do not handle with dirty hands.

May cause fire, burns, injury, electric shock, etc.

For waterproofing and dustproofing, see "[Waterproofing/Dustproofing](#)."



Do not use charge when wet with water or other liquid (beverage, sweat, seawater, pet urine, etc.). Do not charge where exposed to water (bath room, near a humidifier, etc.).

For waterproofing, see "[Waterproofing/Dustproofing](#)."



Do not subject tablet to excessive force or break it. Particularly when carrying tablet, do not bump it or place it between objects.

Internal Battery breakage may cause fire, burns, injury, etc.

\* Examples of where to be careful

- Tablet becoming caught in a sliding door or vehicle door when in a totebag or ecobag
- Stepping on tablet when it is on something soft such as a sofa, bed, or futon or on the floor
- Tablet becoming caught in a seat on a train or bus



Do not disassemble or modify.

May cause fire, burns, injury, electric shock, etc.



Do not try to remove Internal Battery from tablet.

May cause fire, burns, injury, etc.



Back Cover on tablet is not removable. Do not try to remove. Also do not try to remove Back Cover or try to press it in if tablet is bulging, such as if Internal Battery is swollen.

May cause fire, burns, injury, etc.



Do not get wet with water or other liquid (beverage, sweat, seawater, pet urine, etc.).

May cause fire, burns, injury, electric shock, etc.

For waterproofing, see "[Waterproofing/Dustproofing](#)."



Do not allow water or other liquid (beverage, sweat, seawater, pet urine, etc.) to come into Charging Terminal, USB Type-C™ Port, or Headphone Port.

May cause fire, burns, injury, electric shock, etc.

For waterproofing, see "[Waterproofing/Dustproofing](#)."



Use optional accessories specified by SoftBank.

Using unspecified accessories or those of unknown manufacture, origin, or specification may cause fire, burns, injury, electric shock, etc.

## WARNING



Do not drop, step on, throw, or otherwise subject to strong force, impact, or vibration.

May cause fire, burns, injury, electric shock, etc.



Do not allow Charging Terminal, USB Type-C™ Port, or Headphone Port to contact conductive materials (anything metal, pencil lead, etc.), and do not allow dust to enter inside.

May cause fire, burns, injury, electric shock, etc.



Do not cover or wrap with bedding or other blanketing during use or while charging.

May cause fire, burns, etc.



When caring for equipment, ensure that no disinfectant or water enters gaps, Charging Terminal, USB Type-C™ Port, Headphone Port, Speaker, or Mic.

Tablet breakage may cause injury, electric shock, etc.



Stop charging if charging does not complete within a prescribed charging time.

Overcharging may cause fire, burns, injury, etc.



Always power off tablet or stop charging before entering anywhere flammable gas or dust may be generated.

May ignite flammable gases, etc. and cause explosion, fire, etc.



For use at a gas station or similar location, follow the instructions of the facility.

Do not charge at a gas station or similar location.

If using at a gas station or similar location, be careful not to drop, and in particular, do not use while filling.

May ignite flammable gases, etc. and cause explosion, fire, etc.



Compulsory

If there is abnormal odor/sound, smoke, overheating, discoloration, distortion, or other abnormalities during use, charging, or storage, do the following while exercising caution.

-Unplug from the outlet

-Power off tablet

Not doing so may cause fire, burns, injury, electric shock, etc.

**CAUTION**

Prohibited

Do not use damaged equipment.

May cause fire, burns, injury, etc.



Prohibited

Do not place on unstable surface (wobbling table, uneven surface, etc.). In particular, be careful if tablet is set to vibrate.

Tablet may fall and cause injury, etc.



Prohibited

Do not use or store in a humid, dusty, or high-temperature place.

May cause fire, burns, electric shock, etc.

For waterproofing and dustproofing, see "[Waterproofing/Dustproofing](#)."



Prohibited

If being used by a child, a guardian should show them the proper way to handle equipment, and do not allow improper use.

They may swallow parts, or may cause injury, electric shock, etc.



Prohibited

Do not leave within an infant's reach or where pets have access.

In particular, be careful where small parts are stored, such as USIM/SD Card Tray and USIM/SD Card Removal Tool (complimentary sample).

They may swallow parts, or may cause injury, electric shock, etc.



Compulsory

Use tablet with caution, as it may become hot with continued use or while charging. Be careful not to have unintended, continued contact with equipment such as by falling asleep, etc.

Tablet or AC Charger (optional accessory) may become hot after continued use of applications, data communication, video viewing functions, etc. or while charging. Continued and direct contact with hot portions of tablet may cause skin redness, itchiness, skin irritation, low-temperature burns, etc. depending on your physical condition.

## Tablet

**⚠ DANGER**

Prohibited

Do not throw into a fire or apply heat.

May cause fire, burns, injury, etc.



Prohibited

Do not pierce with a sharp object (nail, etc.), hit with a hard object (hammer, etc.), step on, or otherwise subject to excessive force.

May cause fire, burns, injury, etc.



Compulsory

If substance in tablet gets in eyes, mouth, etc., immediately rinse with clean water and promptly seek medical attention.

Substances in tablet may cause loss of sight or other physical harm.

**⚠ WARNING**

Prohibited

Do not shine or flash Light close to other people's eyes. In particular, keep adequate distance from infants.

May harm eyesight. May temporarily blind or startle others, causing injury or other accident.



Prohibited

Do not shine or flash Light toward a driver of a car.

May hinder driving and cause an accident, etc.



Prohibited

Do not look at a repeatedly blinking screen for a long time.

May cause convulsions, loss of consciousness, etc.



Prohibited

Do not let water or other liquids (beverage, sweat, seawater, pet urine, etc.) or a foreign object (anything metal, flammable material, etc.) enter USIM/SD Card Tray.

In addition, insert USIM Card and SD Card into correct opening in correct orientation.

May cause fire, burns, injury, electric shock, etc.



Prohibited

Do not expose Camera lens to direct sunlight, etc. for a long time.

Concentrated light may cause fire, burns, injury, etc.



Prohibited

Do not look into Brightness Sensor.

May affect eyesight or lead to an accident.



Compulsory

Power off tablet or place in Airplane mode before boarding an aircraft.

Use of tablet on board an aircraft is restricted. Follow instructions of the airline.

Radio waves may adversely affect an aircraft's electronic devices.

Prohibited use aboard an aircraft may be subject to penalty by law.



Compulsory

For use at a hospital, follow the instructions of the institution.

Power off tablet where its use is prohibited.  
Radio waves may affect electronic equipment or electronic medical devices.



Compulsory

Adjust to an adequate volume when using earphones or similar accessory to play games or play back videos/music.

Even in standby, alarm may sound suddenly.  
Listening to loud sound continuously for a long time may cause hearing impairment or other difficulty.  
In addition, not being able to hear surroundings may cause an accident.



Compulsory

Users with a heart condition should adjust vibration/ringtone volume as needed.

Tablet suddenly vibrating and ringing may startle and affect persons with heart conditions.



Compulsory

If wearing an electronic medical device or similar apparatus, check with the manufacturer or vendor regarding any effect that radio waves may have on it.

Radio waves may adversely affect electronic medical devices, etc.



Compulsory

Power off tablet near electronic equipment that uses precision control or faint signals.

Radio waves may cause electronic equipment to malfunction or may adversely affect operation.

\* Examples of devices to be careful near  
Hearing aids, implanted cardiac pacemakers, implanted cardioverter-defibrillators, other electronic medical devices, and other automatically controlled devices or equipment. If using an implanted cardiac pacemaker, implanted cardioverter-defibrillator, or other electronic medical device, check with the manufacturer or vendor regarding any effect that radio waves may have on it.



Compulsory

If Display or Camera lens breaks, be careful with broken parts and exposed tablet parts.

Touching broken or exposed parts may cause burns, injury, electric shock, etc.



Compulsory

If Internal Battery leaks or has an unusual smell, immediately stop using tablet, and keep away from fire.

Leaking fluid may ignite, causing fire, rupture, etc.



Compulsory

Do not allow pets, etc. to bite tablet.

Internal Battery igniting, rupturing, overheating, or leaking may cause fire, burns, injury, etc.

## ⚠ CAUTION



Prohibited

Before using the motion sensor, ensure safety around you, hold tablet firmly, and do not move it more than necessary.

May cause injury or other accident.



Prohibited

If Display is broken, do not allow leaking substance to come in contact with your skin (face, hands, etc.), clothes, etc.

May harm sight or skin.

If leaking substance gets in your eyes, mouth, etc. or on your skin or clothes, immediately rinse with clean water. If it gets in your eyes, mouth, etc., rinse and promptly seek medical attention.



Prohibited

Do not dispose of tablet together with ordinary trash.

May cause fire, burns, injury, etc. May also adversely affect the environment. Bring old tablet where accepted such as a SoftBank Shop, or follow municipal instructions for recycling.



Prohibited

If substance in Internal Battery leaks, do not let it get on your skin (face, hands, etc.) or clothes.

May harm sight or skin.

If leaking substance gets in your eyes, mouth, etc. or on your skin or clothes, immediately rinse with clean water. If it gets in your eyes, mouth, etc., rinse and promptly seek medical attention.



Prohibited

Be careful not to scratch yourself (finger, etc.) with the tip of USIM/SD Card Removal Tool (complimentary sample) when removing USIM Card.

Contact with the tip of USIM/SD Card Removal Tool (complimentary sample) may cause injury, etc.



Compulsory

Before using tablet in a car, check with the car manufacturer or dealer regarding any effect that radio waves may have on it.

Tablet radio waves may affect the vehicle's electronic equipment in some car models. In such case, cease using tablet.



Compulsory

If skin abnormalities develop during use, immediately stop using tablet and seek medical attention.

Tablet use may cause itching, a rash, eczema, etc. depending on your physical condition.



Compulsory

Tablet speaker and vibrator use magnetic parts; check that nothing metal (cutter blades, staples, etc.) is adhering.

Anything adhering may cause injury, etc.



Compulsory

View display in a well-lit place at an adequate distance.

Viewing in a dark place or too closely may affect eyesight, etc.

## AC Charger (Optional Accessory)

### **⚠ WARNING**



Prohibited

Do not use if the cord of AC Charger (optional accessory) is damaged.

May cause fire, burns, electric shock, etc.



Prohibited

Do not touch AC Charger (optional accessory) if you hear thunder.

May cause electric shock, etc.



Prohibited

Do not short-circuit Charging Terminal when it is connected to an outlet. Do not allow any part of yourself (hands, fingers, etc.) to come in contact with Charging Terminal.

May cause fire, burns, electric shock, etc.



Prohibited

Do not place heavy objects on the cord of AC Charger (optional accessory) or apply excessive force such as by pulling.

May cause fire, burns, electric shock, etc.



Prohibited

When plugging in/unplugging AC Charger (optional accessory), keep metal objects away.

May cause fire, burns, electric shock, etc.



Prohibited

Do not use a voltage converter (travel converter for overseas use, etc.) when charging with AC Charger (optional accessory).

May ignite, overheat, cause electric shock, etc.



Prohibited

Do not apply excessive force to where tablet and AC Charger (optional accessory) are connected.

May cause fire, burns, injury, electric shock, etc.



Do Not Use  
Wet Hands

Do not touch the cord of AC Charger (optional accessory), Charging Terminal, or power plug with wet hands.

May cause fire, burns, electric shock, etc.



Compulsory

Always use the specified power supply and voltage.

Also, use an AC Charger for overseas use when charging abroad.

Incorrect power supply and voltage may cause fire, burns, electric shock, etc.

AC Charger (optional accessory): 100 V AC (household AC power outlet only)

AC Charger for overseas use: 100 V to 240 V AC (household AC power outlet only)



Compulsory

Wipe off any dust on power plug.

Using while dusty may cause fire, burns, electric shock, etc.



Compulsory

Insert the power plug of AC Charger (optional accessory) in outlet firmly.

Not doing so may cause fire, burns, electric shock, etc.



Compulsory

When unplugging from an outlet, grasp AC Charger (optional accessory) body and do not pull cord or otherwise subject to excessive force.

Pulling cord of AC Charger (optional accessory) may damage it and cause fire, burns, electric shock, etc.



Compulsory

Insert or remove the connector of AC Charger (optional accessory) without bending or applying force such as pulling cord.

Not doing so correctly may cause fire, burns, injury, electric shock, etc.





Compulsory

Stop use immediately if Charging Terminal is bent or otherwise deformed. Also, do not repair Charging Terminal to use it.

Short-circuiting of Charging Terminal may cause fire, burns, injury, electric shock, etc.



Disconnect Power Source

When not in use, unplug from outlet.

Leaving plugged in may cause fire, burns, electric shock, etc.



Disconnect Power Source

If splashed with water or other liquid (beverage, sweat, seawater, pet urine, etc.), immediately unplug from outlet.

Splashing can cause short-circuiting, causing fire, burns, electric shock, etc.



Disconnect Power Source

Before caring for equipment, unplug from outlet.

Cleaning while still plugged in may cause fire, burns, electric shock, etc.

**CAUTION**



Prohibited

Do not touch AC Charger (optional accessory) continuously while plugged into outlet.

May cause burns, etc.

**Handling USIM Card**

**CAUTION**



Compulsory

Be careful not to scratch yourself (finger, etc.) with the edges when handling USIM Card.

Edges may be sharp and cause injury.

**Handling USIM/SD Card Removal Tool (Complimentary Sample)**

**WARNING**



Prohibited

Tip of USIM/SD Card Removal Tool (complimentary sample) is pointed. Do not use it pointed at yourself or others.

May allow it to strike yourself or others, causing injuries or loss of eyesight.

**CAUTION**



Prohibited

Do not leave within an infant's reach.

They may swallow it or choke, or may cause injury, etc.

## Handling near Electronic Medical Devices

### WARNING



Compulsory

If using an electronic medical device such as an implanted cardiac pacemaker or an implanted cardioverter-defibrillator, always carry or use terminal at least 15 cm away from your implant.

Radio waves may affect operation of electronic medical devices.



Compulsory

When using an electronic medical device (other than an implanted cardiac pacemaker/defibrillator) outside medical facilities, check with the device manufacturer, etc. regarding any effect that radio waves may have on it.

Radio waves may affect operation of electronic medical devices.



Compulsory

Disable tablet transmissions (e.g., Airplane mode) or power off tablet when it is difficult to keep a distance of at least 15 cm away from others such as in a crowd.

Someone nearby may be wearing an electronic medical device such as an implanted cardiac pacemaker or an implanted cardioverter-defibrillator. Radio waves may affect operation of electronic medical devices.



Compulsory

Observe a medical facility's instructions when using the terminal.

Radio waves may affect operation of electronic medical devices.

## General Notes

### General Use

- Do not expose to water.  
Tablet and AC Charger (optional accessory) are not waterproof. Do not use in high humidity (e.g., bath room) or where exposed to rain, etc. If carrying tablet on you, humidity from perspiration can corrode the tablet interior and cause malfunction. Tablet will not be covered by warranty and may not be repairable in some instances if malfunction is determined to be due to such water exposure. Since tablet is not covered by warranty in this instance, repairs will be made at cost if tablet is repairable.
- Avoid using tablet in extremely high or low temperatures, in high humidity, or where extremely dusty.  
Use within temperatures of 0°C to 35°C and humidity 35% to 85%.
- Do not use in these locations.
  - Where there is much humidity, dust, or vibration
  - Near a landline phone, TV, radio, etc.
- Note that tablet may become warm when used a long time, and particularly in warm surroundings.
- Stop using tablet a while if warm. Prolonged contact with tablet while warm may cause low-temperature burns.
- Avoid touching tablet USB Type-C™ Port and Headphone Port. Static electricity may affect internal components.
- Use a soft, dry cloth to clean any oil, splashing, or other hard-to-remove soiling. Do not operate with fingernails to prevent scratching Display. Wiping with alcohol, thinner, benzene, detergent, etc. may remove print or fade colors.
- Clean terminal occasionally with a dry cotton swab, etc.  
Soiling on terminal can cause a poor connection or tablet to power off and inadequate charging. Avoid damaging terminal when cleaning.
- Do not remove USIM Card when sending or saving data with tablet. May erase data or affect tablet.
- Be sure to read information on health and safety before using tablet. A flashing image when playing a game or viewing videos may cause dizziness or convulsions. If these symptoms are experienced, consult a doctor.
- Do not place tablet near magnetic stripe cards or other magnetic objects. Tablet magnetic field may corrupt information on a memory card or credit card.
- Metal is used in tablet. Tablet use may cause itching, a rash, skin irritation, etc. depending on your physical condition.
- Do not paint tablet. Paint may clog interior and affect operation.

## Internal Battery

- Battery is built in and is not removable.
- Internal Battery can recharge and discharge at least several hundred times, but will eventually wear out. Internal Battery should be replaced if usable time shortens noticeably even after ample charging. Replace Internal Battery.
- Tablet can be submitted for Internal Battery replacement at a fee at a "SoftBank Shop". Ask at a SoftBank Shop or [Customer Service](#). You should not try to replace Internal Battery yourself; risk of fire, explosion, etc.
- Functions that use communication such as Bluetooth® or Wi-Fi® and are enabled use more battery power. It is recommended to disable such functions when not in use.
- Brightening screen uses more battery power. Lower screen brightness with "Brightness level" setting to reduce battery power used.

## Lithium-Ion Polymer Battery

- Tablet uses a lithium-ion polymer battery. Lithium-ion polymer batteries are recyclable precious resources. Bring them to the nearest shop with the Mobile Recycle Network mark.



## Charging

- Charge using AC Charger (optional accessory) (USB Type-C™ rapid charging AC Charger with USB PD-PPS capability [ZSDBAV] (SB-AC22-TCPD)). Using any other charger may cause Internal Battery to leak, overheat, or cause a fire. The company is not responsible whatsoever for damages from any accident or trouble as a result of using any other charger.
- Do not force tablet and AC Charger (optional accessory) to connect if they cannot be connected easily.
- When using AC Charger (optional accessory), be careful of anything conductive (anything metal, pencil lead, etc.) touching the plug when plugging it in. May cause electric shock, short circuit, fire, etc.
- Plug AC Charger (optional accessory) directly in outlet. A power extension bar may overheat and cause a fire.
- When plugging AC Charger (optional accessory) in outlet, do not subject it to impact such as by getting caught on something. May cause injury or malfunction.
- Do not use AC Charger (optional accessory) if plug is damaged or sits loosely in outlet.
- Avoid charging in these locations.
  - Under direct sunlight
  - Where there is much humidity, dust, or vibration
  - Near a TV, radio, or other electric device

## For Safe Driving

- Use while driving is dangerous. Follow the laws and regulations of the country or region where using tablet. Before using tablet, first stop the vehicle in a location where it is safe to use tablet.
- Do not store tablet or accessories in the same location as liquids or flammable gas. Do not place tablet on top of where an airbag is stowed. May hinder airbag if airbag is activated.
- Electromagnetic fields, surroundings, or otherwise magnetic objects may affect compass accuracy. It should only be used as a reference.
- If you do not wish to disclose location information, do not use applications that record location information.
- When searching for locations, buildings, routes, or distances, do not rely only on map shown on tablet, and use it only as a reference. Maps, routes, and locations are provided by service providers, and information is constantly being updated. This functionality is not supported in some locations, and therefore map routes and compass are sometimes inaccurate, incomplete, and unsupported.

## Environment of Use

- When in a location where tablet use is prohibited, or where there is a risk of interference or danger, power off tablet.
- Radio wave interference may affect operation of other electronic equipment or cause other issues.
- Use of tablet in some vehicles can occasionally affect in-vehicle electronic equipment. Exercise safety and do not use tablet in such instances.
- Before connecting tablet or accessories to other devices, read the instructions for the device and be sure to understand safety information.
- Do not connect tablet to noncompatible products.

## Emergency Alerts

- When an emergency alert is received, tablet notifies user via message, alert, and by vibrating.
  - Emergency alerts are enabled by default (can also be disabled).
  - By default, alert sounds at maximum volume even when Silent mode is set, and vibration is enabled regardless of Silent mode setting (can be changed).
  - See "緊急速報メールを利用する" in the [取扱説明書](#) (Japanese) for details on emergency alert settings.
- Depending on usage/situation, tablet may receive emergency alerts for other areas or no emergency alerts.

## Display (Touchscreen)

- Touchscreen-type display, operate with your fingers on Display.
- The touchscreen is designed to be touched lightly. Do not press strongly with your fingers or with anything pointed (fingernails, ballpen, pin, etc.).
- The touchscreen may not respond to touch operation in these situations. Note that malfunction may occur.
  - Use with gloves
  - Use with fingernails
  - Use with an object on the touchscreen
  - Use with water droplets or condensation on Display
  - Use when your fingers are wet or sweaty
  - Use underwater
- Stop use immediately if Display is broken. Avoid touching or removing broken parts, and immediately contact a SoftBank Shop or [Customer Service](#).
- If Display has been exposed to liquid, metal dust, or other matter, immediately clean it.

## Volume

- Avoid listening to audio at a loud volume for a prolonged time.






## USIM/SD Card Removal Tool (Complimentary Sample)

- Do not insert USIM/SD Card Removal Tool (complimentary sample) in hole other than hole in USIM/SD Card Tray. May cause malfunction or damage.
- Do not apply excessive force. May cause malfunction or damage.
- Dispose of as separate waste according to local regulations.
- Do not use USIM/SD Card Removal Tool (complimentary sample) in other mobile terminals. May cause malfunction or damage to mobile terminal.

## Personal Information and Data Security

- Use of some functions and third-party applications on tablet may allow leakage of personal information, loss of data, or access by third parties. The company recommends that you take measures to protect personal information and sensitive information.
- Leave tablet in a safe location where it cannot be used unauthorized.
- It is recommended that you set a screen lock on tablet that requires a password, facial recognition, etc.
- Back up personal information to USIM Card, storage, or SD Card regularly. Before changing to another tablet, be sure to move or delete personal information from tablet.
- Any received messages or mail that do not appear familiar may be a risk of virus infection. Delete them immediately without opening them.
- When using tablet to search the Internet, avoid accessing websites that may be a security risk, to prevent your personal information from being stolen.
- Set passwords to Wi-Fi tethering and Bluetooth® to prevent unauthorized access. Set these functions off when not using them.
- Tablet initiates software updates regularly to enhance security. Always use the most recent software so as to maintain tablet safety. It is recommended that you run a virus scan regularly.
- Always obtain applications created by third parties from official sites. Be sure to run a virus scan when downloading applications.
- Some applications request that location information be sent, and share location information with creators of the application. In this instances, tablet may send any retrieved information and diagnostic information to third-party application providers.
- Third-party vendors use this information for product and service improvement.

## Radio Law Certification

- Tablet is certified as conforming to technical standards as a wireless device of a radio station in a low-power data transmission system based on the Radio Law, and its "technical conformity mark" can be viewed as follows.
- In the Home screen,  (Settings)  **System**  **Regulatory labels**
- Tablet is certified as conforming to technical standards, and therefore any disassembly/modification is subject to punishment by law.

## Bluetooth®/Wi-Fi (Wireless LAN) Functions

### Bluetooth®/Wi-Fi (Wireless LAN) Functions

- Connection/operation may not be possible with some Bluetooth®/Wi-Fi (wireless LAN) devices.
- Tablet is equipped with Bluetooth®/Wi-Fi (wireless LAN)-compliant security features for communication via Bluetooth®/Wi-Fi (wireless LAN). However, these may be inadequate depending on environment of usage and settings. Be aware when using Bluetooth®/Wi-Fi (wireless LAN).
- The company is not responsible for any data or information which may be leaked during communication via Bluetooth®/Wi-Fi (wireless LAN).

### Frequency Bands (2.4 GHz Band)

Frequency bands used by tablet Bluetooth®/Wi-Fi (wireless LAN) functions are as below.





2.4: Wireless facility using 2400 MHz band.

FH/DS/OF: FH-SS/DS-SS/OFDM modulation.

4: Expected maximum interference range of about 40 m.

8: Expected maximum interference range of about 80 m.

 : Utilizes 2,400 MHz to 2,483.5 MHz band without mobile device bandwidth differentiation.

 : Utilizes 2,400 MHz to 2,483.5 MHz band with mobile device bandwidth differentiation.

Usable channels depend on the country.

Before using aboard an aircraft, check with the airline beforehand.

### Frequency Bands (5 GHz Band)

Within the 5 GHz frequency band, tablet can use the 5.2 GHz (W52), 5.3 GHz (W53), and 5.6 GHz (W56) bands.

- 5.2 GHz band (W52/36, 40, 44, 48 ch)
- 5.3 GHz band (W53/52, 56, 60, 64 ch)
- 5.6 GHz band (W56/100, 104, 108, 112, 116, 120, 124, 128, 132, 136, 140, 144 ch)

Using a 5.2/5.3-GHz-band wireless LAN outdoors is prohibited by law (this does not apply to communication with access points/relay stations of high-output data communications systems operating in the 5.2 GHz band).

### Usage Cautions

Tablet Bluetooth®/Wi-Fi (wireless LAN) functions use the same frequency band used by household appliances (microwave ovens) and industrial/scientific/medical equipment as well as by in-place radio stations (requiring a license) and specific low-power radio stations (not requiring a license) for mobile identification as used in production lines, and by amateur radio stations (requiring a license).

1. Before using tablet Bluetooth®/Wi-Fi (wireless LAN) functions, check that no in-place radio stations for mobile identification, specific low-power radio stations, or amateur radio stations are in operation nearby.
2. If use of Bluetooth®/Wi-Fi (wireless LAN) functions causes interference with regard to an in-place radio stations for mobile identification, immediately change the usage frequency, or discontinue use and take measures to avoid interference (putting a partition in place, etc.).
3. If tablet is otherwise a cause of interference with regard to specific low-power radio stations for mobile identification or amateur radio stations and assistance is required, contact [Customer Service](#).

### Bluetooth® and Wi-Fi (Wireless LAN) Devices and Interference

Bluetooth® and Wi-Fi (IEEE 802.11 a/b/g/n/ac) use the same frequency band (2.4 GHz). Using Bluetooth® near a Wi-Fi (wireless LAN) access point or wireless LAN device may cause interference, resulting in lower communication speed and poor connection. In this instance, prevent interference difficulty such as by using tablet and the Bluetooth® device being connected at a distanced location, or powering off the Wi-Fi (wireless LAN) device.

### Wi-Fi (Wireless LAN)

Do not use Wi-Fi (wireless LAN) where there is an electromagnetic field such as near electrical appliances or AV/OA devices.

- Magnetic fields may increase electrical noise or may affect communication. Tablet may in particular be affected by a microwave oven.
- It may interfere with reception if near a TV, radio, etc., or the TV screen may become unviewable.
- If multiple Wi-Fi (wireless LAN) access points using the same channel are in proximity, tablet may not detect access points correctly.

## Waterproofing/Dustproofing

Tablet is rated by the IP Code (JIS C 0920) to IPX3<sup>1</sup> water resistance in daily use and IP5X<sup>2</sup> dust resistance when USIM/SD Card Tray is installed properly.

1 IPX3: maintains functionality as a tablet after exposure to water spray from both directions in a range up to 60 degrees from vertical.

2 IP5X: maintains functionality as a tablet and maintains its safety after being agitated in a test device with 75 µm or smaller particles for 8 hours.

- Never install/remove USIM/SD Card Tray with wet hands or while tablet is wet.
- Immersion or washing with water are not covered by warranty.

### When Using Tablet

- Before using tablet, install USIM/SD Card Tray securely and completely. For details on installation, see "USIM Card." Anything tiny (a minute fiber, a single hair, a grain of sand, etc.) caught in it may allow ingress of water.
- Do not use where water is used, in a bathing room, or in strong rain.
- Do not get wet with liquids other than normal-temperature water such as the following.
  - Soap / detergent / bath powder
  - Seawater
  - Pool water
  - Hot spring water
- If wet, wipe the surface gently with a soft cloth having isopropyl alcohol or with a general cleansing sheet (containing 70% isopropyl alcohol). Be careful not to let humidity or liquid in gaps or openings. Note that discoloration, fading, peeling, and deformation are possible, as well as accelerated deterioration if tablet coating is scratched.
- Do not subject tablet to strong impact and deform it. May affect water resistance in daily use/dust resistance.

### Important

- If tablet is exposed to liquids with USIM/SD Card Tray unsecured, they may enter tablet and cause electric shock or malfunction. Power off tablet and do not continue to use it, and contact a SoftBank Shop or [Customer Service](#).
- Do not leave wet. In a cold region, it may freeze and result in malfunction.
- To prevent condensation, let tablet adjust to room temperature before bringing it from a cold location to a bath room or other warm location.
- USIM Card and AC Charger (optional accessory) are not waterproof.
- Do not use in a sauna, or subject to hot airflow (from a hair dryer etc.).
- Do not place directly on sand, etc.
  - Sand may enter the Mic or Speaker holes and affect sound.
  - Allowing moisture, sand, etc. to remain may cause sound to crackle.
  - Anything tiny such as a grain of sand being caught between USIM/SD Card Tray and tablet body may allow ingress of water.
- Do not poke Mic or Speaker with a cotton swab or anything pointed. May affect water resistance in daily use/dust resistance.
- Do not leave wet. May short-circuit charging terminal or USB Type-C™ Port.
- Do not drop. Scratches, etc. can deteriorate water resistance in daily use/dust resistance.
- Do not allow moisture to remain in Mic, Speaker, etc. May cause misoperation or wet clothes/bag. In this instance, wipe away moisture with a dry, clean cloth.
- Do not connect headphones when tablet is wet. May cause malfunction.
- Do not use USB Type-C™ Port if wet or dirty/dusty. May affect water resistance in daily use/dust resistance, or may cause electric shock and short-circuiting, resulting in malfunction, burns, or fire.
- Do not leave in a humid location for a long time.
- Avoid bringing tablet from cold outdoors to a warm room suddenly; place in a room first to let it warm up before bringing it in.
- Touchscreen may not operate properly if the display has any water droplets on it.
- Operation is not guaranteed for all conditions of actual use. Tablet will not be covered by warranty if malfunction is determined to be due to incorrect customer handling.

### If Tablet Is Wet

If tablet has gotten wet, continued use may wet clothes, bag, etc.

Dry tablet as follows.

1. Wipe off any water on tablet well with a dry towel or cloth
2. Hold tablet firmly and shake until no more water splatters
3. Reverse tablet's up-down orientation, hold firmly and shake again until no more water splatters
4. Wipe off any water draining out of tablet well with a dry towel or cloth
5. Place a dry towel or cloth on a flat surface, and leave tablet on it for 2 to 3 hours to dry at normal temperature

## When Charging

AC Charger (optional accessory) is not waterproof. Always check the following when and after charging.

- Check that tablet is not wet. If it has gotten wet, wipe away moisture with a dry, clean cloth.
- Never charge tablet while it is wet.
- Never connect while tablet or AC Charger (optional accessory) is wet. Tablet is water-resistant in daily use/dust-resistant; however, if connected to while wet, and liquid (beverage, sweat, seawater, pet urine, etc.) or foreign matter on it or USB Type-C™ Port may cause electric shock or short-circuiting, resulting in malfunction, burns, or fire.
- Do not touch AC Charger (optional accessory) with wet hands. May cause electric shock.
- Use AC Charger (optional accessory) where not exposed to water. Do not use where water is used (bath room, shower, kitchen, sink, etc.). May cause fire or electric shock.

## To Maintain Water/Dust Resistance

Always check the following to maintain water/dust resistance.

- Insert USIM/SD Card Tray securely. Any debris (single hair, grain of sand, minute fiber, etc.) trapped between contacting surfaces may allow ingress of dust.
- Avoid poking Speaker, Mic, USB Type-C™ Port, Headphone Port, and USIM/SD Card Tray with anything pointed.
- Do not drop. Scratches, etc. can deteriorate water/dust resistance.
- USIM/SD Card Tray gasket is crucial for continued tablet water and dust resistance. Do not peel away or damage gasket. Do not allow any debris on gasket.
- To maintain water and dust resistance, it is recommended to replace parts every 2 years regardless of their condition. Tablet can be submitted for parts replacement at a fee. Contact [Customer Service](#) or a nearby SoftBank Shop.

## Intellectual Property Rights

### Copyrights/Portrait Rights

Copyrighted contents you recorded or obtained from websites using tablet by downloading or other means, such as documents, images, music data, software, are prohibited from reproduction, transformation and transmission over public lines without consent of the copyright holders, unless intended for personal use or any other purpose permitted by law.

Note that taking pictures or videos at demonstrations, performances, or exhibitions may be restricted even if only for personal use.

You should also refrain from taking a picture of other people and disclosing it by such means as posting it on a website without their consent because of possible infringement of their right of portrait.

## Trademarks

- SoftBank and the ソフトバンク name and logo are registered trademarks or trademarks of SoftBank Group Corporation in Japan and other countries.
- Yahoo!, ヤフー, the Yahoo! JAPAN logo, and the Y! logo are registered trademarks or trademarks of Yahoo Japan Corporation in Japan.
- Facebook and the Facebook logo are trademarks or registered trademarks of Meta Platforms, Inc..
- QR code is a registered trademark of Denso Wave Inc.
- Lenovo and the Lenovo logo are trademarks of Lenovo Corporation in the United States and other countries.
- Oracle and Java are registered trademarks of Oracle Corporation and its subsidiaries and affiliates in the United States and other countries. The names of companies and products in the guide may be trademarks or registered trademarks of the respective companies.
- Wi-Fi®, Wi-Fi Alliance®, Wi-Fi Direct®, and Wi-Fi Protected Access® (WPA) are registered trademarks of Wi-Fi Alliance®.
- WPA2™, WPA3™, and Wi-Fi Enhanced Open™ are trademarks of Wi-Fi Alliance®.



- Bluetooth® is a registered trademark of US Bluetooth SIG, Inc.



- USB Type-C™ is a trademark of USB Implementers Forum.
- Google, the Google logo, Android, the Android logo, Google Play, the Google Play logo, Gmail, the Gmail logo, Google Maps, the Google Maps logo, Google Calendar, the Google Calendar logo, YouTube, the YouTube logo, Google Drive, the Google Drive logo, Google Photos, the Google Photos logo, Google Lens, the Google Lens logo, the YouTube Music logo, Google Pay, the Google Pay logo, Google Assistant, the Google Assistant logo, Google Location History, Google Chrome, the Google Chrome logo, Google Search, the Google Search logo, Google News, the Google News logo, Google One, the Google One logo, Chromebook, Chromecast, the Files logo, Google Home, the Google Home logo, Google TV, the Google TV logo, Google Meet, the Google Meet logo, Google Podcast, and the Google Podcast logo are trademarks or registered trademarks of Google LLC.
- The microSD logo, microSDHC logo, and microSDXC logo are trademarks of SD-3C, LLC.



- OMRON and the オムロン name and logo are trademarks or registered trademarks of OMRON Corporation in Japan and other countries.
- Manufactured based on a license from Dolby Laboratories. Dolby, ドルビー, Dolby Atmos, and the double-D symbol

- are registered trademarks of Dolby Laboratories Licensing Corporation. Confidential unpublished work. Copyright 2012-2022 Dolby Laboratories. All rights reserved.
- Qualcomm, Snapdragon, Snapdragon Sound, Quick Charge, and MSM are the trademarks or registered trademarks of Qualcomm Incorporated in the United States and other countries.
- Windows is used throughout as an abbreviation for Microsoft Windows operating system.
- Netflix is a registered trademark of Netflix, Inc.
- The Satofull name, logo, and service name are registered trademarks or trademarks of Satofull Co., Ltd. in Japan.
- Amazon, Amazon.co.jp and its logo, Amazon Prime, and Alexa are trademarks of Amazon.com, Inc. or its affiliates.
- The TM and ® marks are sometimes abbreviated in this guide.
- The names of other companies, products, and services are trademarks or registered trademarks of the respective companies.



## Radio Wave Exposure and Specific Absorption Rate (SAR) Information

### Specific Absorption Rate (SAR) Information of This Product (for Japan)

This device [A301LV] complies with the Japanese technical regulations and international guidelines regarding exposure to radio waves.

This device was designed in observance of the Japanese technical regulations regarding exposure to radio waves\*1 and the limits of exposure recommended in the international guidelines, which are equivalent to each other. The international guidelines were set out by the International Commission on Non-Ionizing Radiation Protection (ICNIRP), which is in collaboration with the World Health Organization (WHO), and the permissible limits include a substantial safety margin designed to assure the safety of all persons, regardless of age and health conditions.

The technical regulations and the international guidelines set out the limits of exposure to radio waves as the Specific Absorption Rate, or SAR, which is the value of absorbed energy in any 10 grams of human tissue over a 6-minute period. The SAR limit for mobile phones including this device is 2.0 W/kg. The highest SAR value for this device when worn on the body is 1.290 W/kg\*2. There may be slight differences of the SAR values in individual product, but they all satisfy the limit.

The actual value of SAR of this device while operating can be well below the indicated above. This is due to automatic changes in the power level of the device to ensure it only uses the minimum power required to access the network.

By using accessories such as a belt clip holster that maintains a 2.8 cm separation with no metal (parts) between it and the body, this device is certified the compliance with the Japanese technical regulations.

The World Health Organization has stated that "a large number of studies have been performed over the last two decades to assess whether mobile phones pose a potential health risk. To date, no adverse health effects have been established as being caused by mobile phone use."

Please refer to the WHO website if you would like more detailed information.

<https://www.who.int/news-room/fact-sheets/detail/electromagnetic-fields-and-public-health-mobile-phones>

Please refer to the websites listed below if you would like more detailed information regarding SAR.

Ministry of Internal Affairs and Communications Website:  
<https://www.tele.soumu.go.jp/e/sys/ele/index.htm>

Association of Radio Industries and Businesses Website:

<https://www.arib-emf.org/01denpa/denpa02-02.html> (in Japanese only)

List of SAR information of smartphone/3G model of SoftBank  
<https://www.softbank.jp/mobile/support/sar/> (Japanese)

\*1 The technical regulations are provided in Article 14-2 of the Radio Equipment Regulations, a Ministerial Ordinance of the Radio Act.

\*2 Not including other radio systems that can be simultaneously used with 5G/LTE/3G (or LTE/3G or 3G).

### European RF Exposure Information

This mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by the international guidelines. The guidelines were developed by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) and include safety margins designed to assure the protection of all persons, regardless of age and health conditions. The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2.0 W/kg. The highest SAR value for this device when worn on the body at the separation distance of 0.0 cm from the body is 1.398 W/kg\*1. For electronic safety, maintain the separation distance with accessories containing no metal, that position handset a minimum of the above distance. Use of other accessories may not ensure compliance with the guidelines.

\*1 The tests are carried out in accordance with the international guidelines for testing.

Simplified Declaration of Conformity for [A301LV]  
Hereby, Lenovo PC HK Limited declares that the radio equipment type [A301LV] is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:  
<https://www.lenovo.com/us/en/compliance/eu-doc/#ideapadtablets>.

## FCC RF Exposure Information

This device is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limit for exposure to radio frequency (RF) energy required by the Federal Communications Commission (FCC). The limit is based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health conditions.

The exposure standard for mobile phones including this device employs a unit of measurement known as the Specific Absorption Rate (SAR). The SAR limit set by the FCC is 1.6 W/kg.

The tests are performed in positions and locations as required by the FCC. The highest SAR value for this device when tested for use worn on the body as shown below is 1.17 W/kg.

**Body-worn Operation:** This device was tested for typical body-worn operations with the separation distance of 2.8 cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain the above separation distance between the user's body and the device. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with the FCC RF exposure requirements and should be avoided.

The FCC has granted an equipment authorization for this device with all reported SAR levels evaluated as in compliance with the FCC RF exposure requirements. Filed SAR information of this device can be found by searching FCC ID O57TB360ZJ in the FCC ID Search webpage: <https://www.fcc.gov/oet/ea/fccid>.

Additional information on SAR can be found on the FCC website at <https://www.fcc.gov/general/radio-frequency-safety-0>.

## Lenovo TAB7 User Guide Index

### A

About the User Guide.....	3
Adding/Deleting Application.....	55
Airplane Mode.....	29
Applications.....	54

### B

Basic Operation.....	26
Battery Settings.....	68
Before Using Tablet Abroad.....	96
Biometrics and Passwords Settings.....	77
Bluetooth®/Wi-Fi (Wireless LAN) Functions.....	115

### C

Capturing Still Images/Videos.....	48
Charging Battery.....	14
Connecting by Wi-Fi.....	58
Customer Service.....	101

### D

Data Usage Settings.....	63
Display Settings.....	73

### G

General Notes.....	112
--------------------	-----

### I

Intellectual Property Rights.....	117
-----------------------------------	-----

### M

Making Initial Settings.....	16
------------------------------	----

### O

Other Settings.....	90
---------------------	----

### P

Parts & Functions.....	6
Power On/Off.....	15

### R

Radio Wave Exposure and Specific Absorption Rate (SAR) Information.....	119
---	-----

## S

Safety & emergency Settings.....	84
Safety Precautions.....	104
Screens.....	34
SD Card.....	9
Sending Messages (+Message).....	40
Silent Mode.....	28
Sound & Vibration Settings.....	69
Specifications.....	100
Status Bar.....	35
System Settings.....	87

## T

Tablet Settings.....	62
Text Entry.....	30

## U

Unlocking Screen.....	22
Updating Software.....	31
USIM Card.....	7
Using a Google Account.....	18
Using Bluetooth® Function.....	59
Using Chrome.....	44
Using Gmail.....	41
Using Notifications Window.....	36
Using Quick Settings.....	36
Using Touchscreen.....	27

## V

Viewing Captured Still Images/Videos (Photos).....	50
--	----

## W

Warranty & After-Sales Service.....	100
Waterproofing/Dustproofing.....	116



# Lenovo TAB7 User Guide

October 2023, First Edition  
SoftBank Corp.

Visit [SoftBank Shop](#) for assistance

Model : Lenovo TAB7  
Manufacturer : Lenovo PC HK Limited