

Introduction

Thank you for purchasing SoftBank 705P.

- For proper handset use, read this manual beforehand.
- Please keep this manual in a safe place for future reference.
- If this manual is lost or damaged, contact SoftBank Customer Centre, General Information (☎ P.18-32).
- Accessible services may vary by service area, subscription, etc.


SoftBank 705P is compatible with both 3G and GSM network technologies.

Note


- Unauthorized copying of any part of this manual is prohibited.
- Manual content is subject to change without prior notice.
- Efforts have been made to ensure the accuracy and clarity of this manual. Please contact SoftBank Customer Centre, General Information (☎ P.18-32) about unclear or missing information.
- Manuals with missing pages or incorrect collating will be replaced.

Package Contents


□ Handset

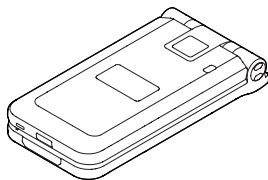


□ Battery (PMBAA1)

 

□ AC Charger (PMCAA1)

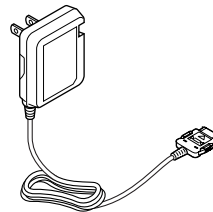

□ microSD™ Memory Card (64MB)★
microSD™ Memory Card Adapter★

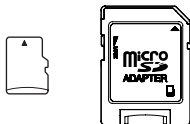

□ Operating Instructions
□ First Step Guide (Japanese Only)
□ Utility Software (CD-ROM)*

★ Complimentary Sample

* Utility software updates/upgrades may become available on SoftBank Website (<http://www.softbank.jp>) without prior notification. Please check for the newest versions of utility applications and download if required.



- For further information about accessories, please contact SoftBank Customer Centre, General Information (☎ P.18-32).
- Optional battery and AC Charger are available for separate purchase.
- microSD™ Memory Card is referred to as "Memory Card" in this manual.

Contents

Package Contents	i
Contents	ii
Using This Manual	x
Safety Precautions	xii
Handling Precautions	xxii
Copyrights	xxvi
Specific Absorption Rate (SAR)	xxviii

1. Getting Started

Function & Feature Preview	1-2
USIM Card	1-6
About USIM Card	1-6
Inserting & Removing USIM Card	1-7
USIM PINs	1-8
Handset Parts & Functions	1-9
Quick Keys	1-11
Display	1-12
Information Window	1-15
Battery & Charger	1-15
Before Charging	1-15
Battery Installation & Removal	1-18
AC Charger	1-19
Desktop Holder	1-20

In-Car Charger	1-21
Handset Power On/Off	1-22
Date & Time	1-23
Handset Menus	1-24
Main Menu	1-24
Menu Numbers	1-25
Passwords	1-26
Handset Code	1-26
Centre Access Code	1-26
Security Code	1-26

2. Basic Handset Operations

Making Voice Calls	2-2
Calling within Japan	2-2
Calling from Outgoing Call Log	2-3
Calling Abroad from Japan	2-4
Emergency Calls (110, 119, 118)	2-4
Answering Voice Calls	2-5
Calling from Incoming Call Log	2-6
Handling Incoming Calls	2-6
Hold	2-6
Reject	2-6
Forward	2-6
Answer Phone	2-7
Engaged Call Operations	2-8

Earpiece Volume	2-8
Voice Recorder	2-9
Handsfree Conversations	2-9
More Engaged Call Operations	2-10
Call Log	2-11
Using Call Log Records	2-12
Deleting Call Log Records	2-13
Call Time & Call Cost	2-13
Call Time	2-13
Service Charges	2-13
Show Charge	2-15
My Number	2-15
Calling while Abroad	2-16
Network Mode	2-16
Operator Settings	2-17
Making Calls while Abroad	2-18
Manner Mode	2-18
Minding Mobile Manners	2-18
Manner-related Features	2-19
Manner Mode	2-19
Activating Offline Mode	2-20

3. Text Entry

Text Entry	3-2
Text Entry Window & Character Input Modes	3-2

Key Assignments	3-3
Entering Characters	3-5
Entering Kanji, Hiragana & Katakana	3-5
Entering Alphanumerics	3-6
Symbols & Pictographs	3-7
Mail & Web Extensions	3-8
Templates	3-8
Character Code	3-8
Copying from Phone Book & My Details	3-8
Conversion Methods (Japanese Only)	3-9
Predictive Conversion	3-9
User's Dictionary	3-11
Editing Text	3-12
Deleting & Replacing	3-12
Copy/Cut & Paste	3-12

4. Phone Book

Overview	4-2
Saving to Phone Book	4-3
Phone Book Entry Items	4-3
Create New Entry	4-4
Saving from Call Log	4-5
Saving from Mail/SMS	4-6
Phone Book Memory Status	4-6
Group Settings	4-7

View Group/Group Members.....	4-7
Changing Group Name	4-7
Using Phone Book	4-8
Making Calls from Phone Book	4-8
Sending Phone Book Entries.....	4-10
Speed Dial	4-10
Phone Book Settings.....	4-11
View from.....	4-11
Save New Entry	4-11
Editing Phone Book Entries	4-12
Correction/Change.....	4-12
Deleting Phone Book Entries	4-12
Copying Phone Book Entries	4-13
Memory Card Backup	4-13
My Details	4-14
Editing My Details.....	4-14
Sending My Details	4-14

5. Video Call

Getting Started	5-2
Note.....	5-2
Video Call Window	5-2
Making Video Calls.....	5-3
Answering Video Calls.....	5-4
Video Call Operations.....	5-5

Video Call Settings.....	5-7
---------------------------------	------------

6. Camera

Before Using Camera.....	6-2
Image File Formats.....	6-2
Notes	6-2
Outside & Inside Camera.....	6-3
Camera Display Indicators	6-4
Pictures.....	6-6
Camera	6-6
Capturing Still Images.....	6-7
Videos.....	6-8
Video Camera.....	6-8
Recording Videos.....	6-9
Other Camera Functions	6-10
Continuous Shooting	6-10
Macro.....	6-10
Self-Timer	6-11
Photo Light.....	6-11
Camera Settings	6-12
Viewing Saved Images.....	6-14
Sending Images	6-14
Sending Pictures via Mail	6-14
Sending Video via Mail	6-15

7. Display & Sound Settings

Display Settings.....	7-2
Wallpaper	7-2
Date & Time	7-2
Main Menu Icons	7-4
Themes.....	7-5
Brightness.....	7-5
Backlight Time	7-6
Operator Name	7-6
Language Setting	7-6
Sound Settings	7-7
Ringtones	7-7
Ringer Volume	7-8
Vibration Alert	7-8
Warning Tone	7-8
Mode Settings.....	7-9

8. Other Functions

Illuminations	8-2
Key Settings	8-2
Key Tone.....	8-2
Key Backlight	8-3
Shortcut Keys	8-3
Call Settings	8-3
Any Key Answer	8-3

Active Flip.....	8-4
International Call Setting.....	8-4
Auto Answer.....	8-5

9. Entertainment

Media Player	9-2
Downloading Music/Video.....	9-3
Playback Window Indicators.....	9-4
Playing Music (Audio Player)	9-4
Playing Video (Video Player)	9-6
Playback Window Operations	9-8
Playback Mode	9-9
Playlist.....	9-9
ComicSurfing (Japanese Only).....	9-12
Near Chat (Japanese Only).....	9-13
Starting Near Chat	9-13
S! Loop (Japanese Only).....	9-14

10. Managing Files

Data Folder	10-2
Data Folder Structure	10-2
Supported File Formats.....	10-3
Viewing Data Folder.....	10-4
Memory Status	10-5
Opening Files	10-5

Data Folder.....	10-5
Viewing CCF Files	10-7
Options	10-7
Using Files	10-9
Wallpaper.....	10-9
Ringtone.....	10-9
Saving to Phone Book.....	10-10
Main Menu Icons.....	10-11
Sending Files	10-11
Editing Pictures.....	10-12
Resize.....	10-12
Trimming.....	10-13
Adding a Frame	10-14
Super Clear Shadow.....	10-14
Managing Folders & Files	10-15
Creating New Folders	10-15
Changing Folder & File Names	10-15
Deleting Folders & Files.....	10-16
Moving & Copying Files	10-16
Selecting Multiple Files	10-17
Templates	10-18
Saving a New Template	10-18
Editing a Template.....	10-18
Using Templates for Mail/SMS.....	10-18
Memory Card.....	10-19
Notes	10-19

Inserting & Removing Memory Card	10-20
Format Memory Card	10-21
Viewing Memory Card Files.....	10-21
Phone Book Backup.....	10-22
PC File Transfers	10-24

11. Connectivity

Infrared.....	11-2
Before Using Infrared	11-2
Infrared File Transfers.....	11-3
Bluetooth®	11-4
Before Using Bluetooth®	11-4
Bluetooth® File Transfers	11-8
Connecting Handsfree Devices	11-9
Bluetooth® Settings.....	11-9
USB.....	11-10
Web Connections.....	11-11

12. Handset Security

Changing Handset Code.....	12-2
USIM PINs.....	12-2
PIN Entry	12-2
Changing PIN1	12-3
Changing PIN2	12-3

Security Functions	12-4
Keyguard	12-4
Password Lock	12-4
Reject Incoming Calls	12-5
Rejecting Specific Calls	12-5
Rejecting Specific Numbers	12-5
Secret Mode Setting	12-6
Managing Content Keys	12-7
Reset	12-8
Reset Settings	12-8
All Reset	12-8

13. Tools

Calendar	13-2
Opening Calendar	13-2
Calendar Settings	13-3
Creating Calendar Events	13-4
Editing Calendar Events	13-6
Deleting Calendar Events	13-7
Sending Calendar Events	13-7
Alarms	13-8
Setting Alarm	13-8
Cancelling & Reactivating Alarm	13-9
Calculator	13-10
Voice Recorder	13-10

Recording	13-10
-----------------	-------

14. Optional Services

Overview	14-2
Call Divert	14-2
Activating Call Divert	14-2
Cancelling Call Divert	14-3
Checking Current Status	14-3
Voice Mail	14-4
Activating Voice Mail	14-4
Cancelling Voice Mail	14-4
Checking Current Status	14-5
Checking Voice Mail Messages	14-5
Call Waiting	14-6
Call Waiting ON/OFF	14-6
Using Call Waiting	14-6
Multiparty Call	14-7
Dialling New Number during a Call	14-7
Swap Calls	14-7
Conference Call	14-7
Call Barring	14-8
Restricting Outgoing Calls	14-8
Restricting Incoming Calls	14-9
Cancelling All Call Barring	14-9
Checking Call Barring Status	14-9

Changing Security Code	14-9
Caller ID	14-10

15. Messaging

Basics	15-2
Messaging Folders	15-3
Messaging Memory Status	15-4
Window Description	15-5
Customizing Handset Address	15-6
Sending Mail & SMS	15-6
Creating & Sending Mail Messages	15-6
Creating & Sending SMS Messages	15-9
Using Drafts	15-10
Receiving Mail & SMS	15-11
Opening New Messages	15-11
Retrieving Complete Mail	15-12
Using Server Mail	15-13
Using Messages	15-14
Checking Message Contents	15-14
Received Messages Folders	15-16
Replying to Messages	15-17
Forwarding Messages	15-17
Using Sender's Number/Address	15-18
Using Linked Information	15-19
Protecting Messages	15-20

Deleting Messages	15-21
Copying SMS	15-22
Additional Functions	15-23
Universal Settings	15-23
Mail Settings	15-25
SMS Settings	15-26

16. Web

Getting Started	16-2
Cache Memory	16-2
SSL/TLS	16-2
Mobile Internet	16-3
Opening Yahoo! Keitai Main Menu	16-3
Entering URL	16-3
Using URL History	16-4
Exiting Mobile Internet	16-4
Basic Operations	16-5
Using Information	16-7
Bookmarks & Saved Pages	16-7
Managing Bookmarks & Saved Pages	16-8
Saving to Data Folder	16-9
Using Number, Address or URL	16-10
Streaming	16-11
Option Menu Items	16-12
Additional Functions	16-12

Browser Settings	16-12
Security Settings.....	16-14

Warranty.....	18-31
After-Sales Service	18-31
Customer Service	18-32

17. S! Appli

Before Using S! Appli	17-2
Downloading S! Appli	17-2
Using S! Appli	17-3
Activating S! Appli	17-3
Terminate/Suspend & Resume	17-3
Managing S! Appli	17-4
Setting Security Level	17-4
S! Appli Settings	17-5

18. Appendix


Function List.....	18-2
Troubleshooting.....	18-8
Warning Signs.....	18-10
Software Update	18-11
Character Code List.....	18-13
Symbol List.....	18-21
Pictograph List	18-22
Memory List	18-23
Specifications	18-24
Index	18-25
Warranty & After-Sales Service	18-31

Using This Manual

In this manual, SoftBank 705P User Guide, SoftBank 705P is abbreviated as 705P.


Manual Symbols

Press the corresponding key to execute the function or operation indicated at the bottom of Display.

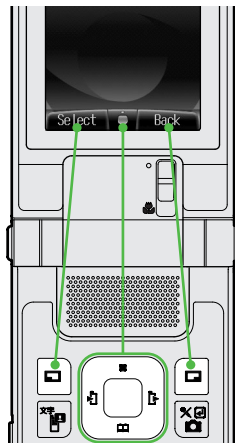





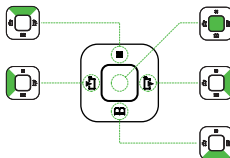






Multi Selector

Use Multi Selector to select items, navigate menus, etc. In this manual, Multi Selector operations are indicated as shown below.




Basic Multi Selector Operations

-  : Press  or 
-  : Press  or 
-  : Press , ,  or 

Softkeys

In this manual, Softkey operations are indicated as shown below.

Left Softkey:  [Select]

Right Softkey:  [Back]

- Indications [Select]/[Back] are examples.
They vary depending on screen display.

Screen Shots

Sample screen shots, etc. are provided for reference only. Actual handset windows, menus, etc. may differ in appearance.

Operation Descriptions


In this manual, most operations are described with handset open.

Vibration Alert

[Default] OFF

If active, 705P vibrates for incoming calls and messages.

Main Menu ► Settings ► Sound Settings
► Vibration Alert

1 *ON* or *OFF* → 



Note

Avoid placing 705P on unstable surface when Vibration Alert is active/while charging battery; cancel Vibration Alert before charging battery.



Default Setting


Abbreviated Steps

Main Menu operations expressed as shown here.
For more information, see Handset Menus
(☞ P.1-24).

Steps




Use     to select menu items.

Example:  to scroll to *ON* or *OFF* → 




- Alternatively, use Keypad to select items
(☞ P.1-25); press , Left Softkey or the key assigned to a menu item to select an item.

Safety Precautions

- Before use, read these safety precautions carefully and use your handset properly. Keep this manual in a safe place for future reference.
- These safety precautions contain information intended to prevent bodily injury to the user and to surrounding people, as well as damage to property, and must be observed at all times.
- These symbols indicate exposure levels to bodily harm from failure to observe cautions or improper usage:

	Danger	Great risk of death or serious injury from improper use
	Warning	Risk of death or serious injury from improper use
	Caution	Risk of injury or damage to property from improper use

■ Symbol Explanations

	Prohibited Action
	Disassembly Prohibited
	Avoid Moisture
	Always Dry Hands First
	Compulsory Action
	Disconnect Power Source

Handset, Battery & Charger



Danger



Use only the specified battery, charger and holder. The use of devices other than those specified may result in malfunction of handset or battery. Leaking, overheating, explosion or fire may occur. Battery PMBAA1, Desktop Holder PMEAA1, AC Charger PMCAA1, In-Car Charger PMJAA1



Do not get handset, battery and charger wet. If liquids such as water or pet urine get into battery and charger, they may cause overheating, electric shock or malfunction. Be careful where and how you use handset.



Do not disassemble or modify handset. May cause accidents such as fire, bodily injury, electric shock or equipment malfunction.



Warning



Do not place handset, battery or charger inside cooking appliances, such as microwave ovens or high-pressure containers. Battery may leak, overheat, explode or catch fire, and handset and charger may overheat, emit smoke or catch fire. The internal circuit may also be damaged.



Do not throw or otherwise subject to strong force or impacts. Battery may leak, overheat, explode, catch fire, or cause damage to handset.



Do not use or leave handset or related hardware in locations subject to high temperatures, such as near an open flame/heater, in sunlight or inside a car on an extremely hot day. Do not charge, leave, use, or be carrying handset or related hardware in a warm place or where heat collects, such as under a kotatsu (blanketed warming table) or electric blanket, next to a kairo (worn warming patch), etc. Battery may leak, overheat, explode, or ignite. Handset or related hardware may deform or malfunction. Part of the casing may also become hot and cause burns.



Do not use handset in locations such as petrol stations where there is a risk of explosion or fire. Use of handset in dusty environments or in locations where there are propane, petrol or other flammable gases may cause an explosion or fire.



Caution



Do not store handset in humid or dusty places, or in high temperature environments. May cause malfunction.



Keep handset out of the reach of young children. May be swallowed or cause other bodily injury.



If for use by child, guardian should teach proper handling and ensure handset is used as directed. May result in bodily injury.

Battery



Danger

See battery label to confirm battery type.

Label	Battery Type
Li-ion	Lithium-ion



Do not throw battery into fire.
Battery may leak, overheat, explode or catch fire.



Do not pierce battery with a nail or other sharp object, hit it with a hammer, or step on it.
Battery may leak, overheat, explode or catch fire.



Do not use excessive force to attach battery to handset even when you cannot attach it successfully. Also, check that battery is the right way round when you attach it.
Battery may leak, overheat, explode or catch fire.



Do not use or leave battery in places where it is exposed to high temperatures, such as near an open flame or heating appliance.
Battery may leak, overheat, explode or catch fire.



Do not touch terminals with metallic objects such as wires. In addition, do not carry or store battery with metallic necklaces, etc.
Battery may leak, overheat, explode or catch fire.



If battery fluid gets into eyes, do not rub them. Rinse with clear water and consult a doctor immediately.
Failure to do so may cause blindness.



Warning



If battery is not charged fully after the specified time, stop charging.
Battery may leak, overheat, explode or catch fire.



If battery leaks or emits an unusual odour, immediately stop use and move it away as far as possible from any flame or fire.
Battery fluid is flammable and could ignite, causing fire or explosion.



If battery leaks or emits an unusual odour, immediately remove it away from handset.
Battery may leak, overheat, explode or catch fire.



If battery fluid comes into contact with your skin or clothing, stop using handset immediately and rinse it off with clean water.
Battery fluid is harmful to your skin.



Caution



Do not dispose of used battery with ordinary refuse.
May cause fire and environmental damage. Place tape over the terminals to insulate battery, and take it to a SoftBank retailer or institution that handles used batteries in your area.

Handset



Warning



Keep USIM Card, microSD™ Memory Card and microSD™ Memory Card adapter out of the reach of young children.
May be swallowed or cause other bodily injury.



Do not use handset while driving a vehicle.
Doing so may interfere with safe driving and cause an accident. Stop your vehicle and park in a safe place before using handset. Drivers using handsets while driving are subject to prosecution.



Turn off handset near high-precision electronic devices or devices using weak electronic signals. Handset may possibly cause these devices to malfunction.

*Electronic devices that may be affected: Hearing aids, implantable cardiac pacemakers, implantable cardioverter defibrillators, other medical electronic devices, fire alarms, automatic doors and other automatically controlled devices.

If you are using an implantable cardiac pacemaker, implantable cardioverter defibrillator or any other electronic medical device, consult the manufacturer or retailer of the device for advice regarding possible effects from radio waves.



Do not point light directly at someone's eyes. May damage eyesight or cause accidents due to momentary sight loss or surprise.



Do not turn up the headphone volume to a level where you cannot hear the sounds around you while you are walking. Also, look out for the surrounding traffic and road surface conditions. May cause an accident.



Turn off handset in places where use of mobile phone is prohibited, such as in aircraft or hospitals.

Handset may interfere with the operation of sensitive devices and electronic medical equipment. Follow the instructions given by the respective medical facilities regarding the use of mobile phones on their premises. In addition, actions such as speaking on a mobile phone aboard aircraft are prohibited and may be punishable by law.



If you are using electronic medical equipment, do not put handset in your breast pocket or in the inside pocket of your jacket.

Using handset in close proximity to electronic medical equipment may cause the equipment to malfunction.



If you have a weak heart, take extra precautions when setting functions such as Vibration or Ringtone volume for incoming calls.



Do not aim the infrared port at eyes when using infrared communication.

Doing so may affect eyes. Also, aiming it towards other infrared devices may interfere with the operation of these devices.



Caution



Handset may become hot while in use. Avoid prolonged skin contact with handset that may result in burns.



Using handset in a vehicle may sometimes affect the electronic equipment in some vehicle models.

In such cases, stop using handset, as this could impede safe driving.



Do not swing handset by its strap, etc.

Handset may strike you or others around you, resulting in bodily injury or damage to handset or other property.



Do not place your ear too close to the speaker while the ringtone sounds or the melody is played back.

May cause hearing impairment.



Do not turn up the volume unnecessarily high when you use the headphones.

If you use the headphones continuously for hours with the sound turned up loud, it may cause hearing impairment, or your ears may be injured with the sudden emission of a loud sound.









Do not open handset by pressing One-push Open button near people around you or your face.

Handset may hit you or people around you, causing accidents and injuries.



Handset use may cause itching, rashes, eczema or other symptoms depending on the user's physical condition. In this case, immediately stop use and seek medical treatment.







Parts		Materials	Surface Finish
Outer case	Display side, keypad side, External Display side	PC resin	Acrylic UV cured coating
	Battery cover	ABS resin	Acrylic UV cured coating
Screw covers (battery cover side)		ABS resin	Acrylic UV cured coating
Screw covers (below display)		PET resin	-
Infrared Port		Acrylic resin	-
LED lens, Photo Light lens		Acrylic resin	-
Display window, External Display window		Base: PC resin, Surface: Acrylic resin	-
Outside Camera lens cover		Acrylic resin	-
Keys		Acrylic Urethane resin	-
Portrait/Macro Selector		POM resin	-
Earphone Port cover		PC resin / Elastomer resin	-
External Device Port cover		Elastomer resin	-
Hinge covers; around Outside Camera lens, above Battery cover side		ABS resin	Acrylic UV cured coating (sealer: stannum deposition on Noble Silver type)
Memory Card Slot cover		PC resin	Acrylic UV cured coating
One-push Open Button hinge		ABS resin	Chrome plating on nickel plating
Side Key		ABS resin	Chrome plating on nickel plating
Charging Terminals		Phosphor bronze	Gold plating on nickel plating
Mesh sheet		PET resin	Acrylic UV cured coating
Stop pads		Acrylic Urethane resin	-
Screws		SWCH16A (Aluminium killed steel)	Trivalent chromate treatment
Battery compartment		Stainless	-
Battery terminals	Connector	PPS resin	-
	Battery terminals	Beryllium copper	Gold plating on nickel plating
Battery	Battery	PC resin (label: PET resin)	-
	Terminals	Glass fiber reinforced epoxy board	Gold plating on nickel plating

	<p>If you hear thunder while using handset outdoors, immediately turn it off and move to a safe location.</p> <p>There is a risk of being struck by lightning and suffering electric shock.</p>
	<p>Do not place a magnetic card near or in handset. The stored magnetic data in cash cards, credit cards, telephone cards and floppy disks, etc. may be erased.</p>
	<p>Do not leave camera lens exposed to direct sunlight or other powerful light source for a long period of time.</p> <p>The lens may focus the beam, causing fire or malfunction.</p>
	<p>Do not touch broken glass if display or camera lens is broken.</p> <p>The display and the camera lens are designed not to be shattered when broken. However, it may cause injury if you mistakenly touch a cut surface.</p>
	<p>Take care not to close handset on fingers or objects, or get fingers caught in the hinge when opening handset.</p> <p>May result in injury or damage to display.</p>
	<p>Take care not to get fingers or objects caught between the hinge and Antenna when opening handset with One-push Open button.</p> <p>May result in injury or damage to display.</p>

Charger



Warning

	<p>Do not use if charger cord is damaged.</p> <p>May cause electric shock, overheating, or fire.</p>
	<p>Place charger and Desktop Holder on a stable surface during charging. Do not cover or wrap charger or Desktop Holder.</p> <p>May cause overheating, fire or malfunction.</p>
	<p>Do not use AC Charger or Desktop Holder in humid or steamy locations such as a bathroom.</p> <p>May result in electric shock.</p>
	<p>Do not handle charger cord/plug with wet hands.</p> <p>May result in electric shock.</p>
	<p>Always use the specified power supply/voltage. Using incorrect voltage may cause fire/malfunction.</p> <p>AC Charger: AC100V-240V In-Car Charger: DC12V, 24V (vehicles with a negative earth only)</p>
	<p>Do not touch handset or charger if you hear thunder.</p> <p>There is a risk of being struck by lightning and suffering electric shock.</p>



Take care not to short-circuit charging terminals. Also, take care not to allow any part of your body (fingers, etc.) to come into contact with charging terminals.

May result in fire, electric shock, equipment malfunction or bodily injury.



Use In-Car Charger in vehicles with a negative (-) earth. Do not use In-Car Charger if vehicle has a positive (+) earth.

May cause fire.



Avoid wires and other metal objects and secure the plug when plugging in AC outlet.

May cause electric shock, short-circuiting or fire.



Unplug AC Charger during long periods of disuse.

May cause electric shock, malfunction or fire.



If In-Car Charger fuse blows, always replace it with a fuse of the specified type.

Using the incorrect fuse may cause fire or malfunction. Refer to the respective manuals for information on the correct fuse specifications.



If liquid such as water or pet urine get into charger, unplug it immediately.

May cause electric shock, smoke emission or fire.



Wipe off any dust on the plug.

May cause fire.



Caution



Do not place heavy objects on charger cord.

May cause electric shock or fire.



Always unplug charger before cleaning it.

May result in electric shock.



Always grasp the plug to unplug charger. Do not pull on charger cord.

Pulling on the cord may damage the cord and cause electric shock or fire.



Do not charge battery if it is wet.

May cause battery to overheat, catch fire or explode.

Near Electronic Medical Equipment



Warning

Safety precautions detailed here conform to the guidelines drawn up by the Electromagnetic Compatibility Conference Japan, regarding the protection of electronic medical equipment from signals emitted by mobile phones.



If you use an implantable cardiac pacemaker or implantable cardioverter defibrillator, keep a handset (0.8 W transmission output) more than 22 cm away from the implant at all times. Similarly, keep a car phone and shoulder phone (2.0 W transmission output) more than 30 cm away from the implant. Radio waves from handset may affect the operation of implantable cardiac pacemakers or implantable cardioverter defibrillators.



Observe the following in hospitals or other medical facilities.

- Do not take handset into operating rooms, Intensive Care Units or Coronary Care Units.
- Turn off handset inside hospital wards.
- Turn off handset even when you are in an area outside hospital wards, such as a hospital lobby, since electronic medical equipment may be in use nearby.
- Where a medical facility has specific instructions prohibiting the carrying and use of mobile phones, observe those instructions strictly.



Turn off handset in crowded places such as rush-hour trains in case somebody nearby is using an implantable cardiac pacemaker or implantable cardioverter defibrillator.

Radio waves may affect the operation of implantable cardiac pacemakers and implantable cardioverter defibrillators.



If you need to use electronic medical equipment other than implantable cardiac pacemaker or implantable cardioverter defibrillator at home or outside medical facilities, check with the relevant medical electronic equipment manufacturer or vendor whether the operation may be affected by radio waves.

Handling Precautions

General Notes

- SoftBank is not liable for any damages resulting from accidental loss/alteration of handset data/data saved in Memory Card (such as phone Book, images, sound, etc.). Please keep backup copy of Phone Book data, etc.
- Handset transmissions may be disrupted inside buildings, tunnels or underground, or when moving into/out of such places.
- Use handset without disturbing others.
- Handsets are radios as stipulated by the Radio Law. Under the Radio Law, handsets must be submitted for inspection upon request.
- Handset use near landlines, TVs or radios may cause interference.
- Beware of eavesdropping.
Digital signals reduce interception, however transmissions may be overheard. Deliberate/accidental interception of communications constitutes eavesdropping.
"eavesdropping" means Radio communication is received by another receiver deliberately or accidentally.

Handling in Vehicles

- Do not use handset while driving.
- Do not park illegally to use handset.
- Handset use may affect vehicle electronic equipments.

Handling Aboard Aircraft

- Never use handset aboard aircraft. (Keep handset power off.) Handset use may impair aircraft operation.

Electromagnetic Waves

- For body worn operation, this mobile phone has been tested and meets RF exposure guidelines when used with an accessory that contains no metal and that positions the handset a minimum 15 mm from the body. Use of other accessories may not ensure compliance with RF exposure guidelines.

FCC Notice

- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

- Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

FCC RF Exposure Information

Your handset is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The guidelines are based on standards that were developed by independent scientific organisations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless handsets employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. The tests are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC for each model.

The highest SAR value for this model handset when tested for use at the ear is 0.641 W/kg and when worn on the body, as described in this user guide, is 0.445 W/kg.

Body-worn Operation; This device was tested for typical body-worn operations with the back of the handset kept 1.5 cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5 cm separation distance between the user's body and the back of the handset. The use of beltclips, holsters and similar accessories should not contain metallic components in its assembly.

The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided. The FCC has granted an Equipment Authorisation for this model handset with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. SAR information on this model handset is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID UCE206001A. Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) website at <http://www.phonefacts.net>.

European RF Exposure Information

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg and the highest SAR value for this device when tested at the ear was 0.795 W/kg*. As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user guide**. In this case, the highest tested SAR value is 0.366 W/kg. As SAR is measured utilizing the devices highest transmitting power the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network.

The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure then you can do so by limiting the length of calls or using a hands-free device to keep the mobile phone away from the head and body.

*The tests are carried out in accordance with international guidelines for testing.

** Please see General Notes (Electromagnetic Waves) on page xxii for important notes regarding body worn operation.

Declaration of Conformity

CE0168

We, Panasonic Mobile Communications Development of Europe Ltd., declare that SoftBank 705P conforms with the essential and other relevant requirements of the directive 1999/5/EC.

A declaration of conformity to this effect can be found at <http://panasonic.co.jp/pmc/products/en/support/index.html>

- This product is only intended for sale in Japan.
- The European RTTE and US FCC approval of this product is limited to the use of the SoftBank 705P handset with accessories Battery PMBAA1, AC Charger EB-CAX800 (Overseas), In-Car Charger PMJAA1.

Handset Care

- If handset is left with no battery or an exhausted one, data may be altered/lost. SoftBank is not liable for any resulting damages.
- Use handset within temperatures of 5°C to 35°C and humidity 35% to 85%. Avoid extreme temperatures/direct sunlight.
- Handset may become warm during use or charging. This is not malfunction.
- Exposing lens to direct sunlight may damage colour filter and affect image colour.
- Do not drop or subject handset to shocks.
- Soiled terminals may cause poor connection and loss of power. If the terminals are dirty, use a dry cloth or cotton swab to wipe them clean.
- Clean handset with dry, soft cloth. Using alcohol, thinner, etc. may damage it.
- Do not expose handset to rain, snow or high humidity.
- 705P is a radio communication device assembled with precision components. Never disassemble or modify handset.
- Avoid forceful rubbing or scratching handset displays.

- When closing handset, keep straps, etc. outside to avoid damaging the Display.
- Open-air type stereo headphones result in noise emission. Avoid disturbing others.
- 705P is not water-proof. Avoid exposure to liquids and high humidity.
 - Keep handset away from precipitation.
 - Cold air from air conditioning, etc. may condense causing corrosion.
 - Avoid dropping handset in damp places (toilet, bathroom, etc.).
 - On the beach, keep handset away from water and direct sunlight.
 - Perspiration may seep inside handset causing malfunction.
- Do not leave handset in a location subjected to excessive force. It may cause malfunction or bodily injury.
 - Do not sit down with handset in a back pocket.
 - Do not place heavy objects on handset in a bag.
- Do not remove nameplate. If removed, handset may not be repaired.
- Always turn off handset before removing battery. If battery is removed while saving or sending mail, data may be lost, changed or destroyed.
- Although LCD display is manufactured with highly precise technology, some pixels may be missing or constantly illuminated.
- Connect only specified products to Earphone Port.

Copyrights

Sounds, images, computer programmes, databases, other copyrighted materials, their respective works and copyright holders are protected by copyright laws. Duplicated materials are limited to private use only. If duplications (including conversion of data types), modifications, transfer of duplicates or distribution on networks are made without permission of copyright holders, this constitutes "Literary Piracy" and "Infringement of Copyright Holder Rights" and a criminal action for reparations and criminal punishment may be filed. If duplicates are made using handset, please observe the copyright laws. 705P is equipped with a camera. Materials captured with the camera are also subject to the above.

This product is licensed under the MPEG-4 patent portfolio license for the personal and non-commercial use of a consumer to

(i) encode video in compliance with the MPEG-4 Visual Standard ("MPEG-4 Video") and/or

(ii) decode MPEG-4 Video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a licensed video provider.

No license is granted or implied for any other use.

Additional information may be obtained from MPEG LA, LLC.



Java and all Java based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.



Aplix, microJBleed and JBleed, and all Aplix-or JBleed-related trademarks and logos are trademarks or registered trademarks of Aplix Corporation in the U.S., Japan and other countries.

ComicSurfing® is a trademark or registered trademark of CELSYS, Inc.



microSD™ is a trademark of the SD Card Association.

Chaku-Uta® and Chaku-Uta Full® are registered trademarks of Sony Music Entertainment (Japan) Inc.

Licensed by QUALCOMM Incorporated under one or more of the following United States Patents and/or their counterparts in other nations;

4,901,307 5,490,165 5,056,109 5,504,773 5,101,501
5,506,865 5,109,390 5,511,073 5,228,054 5,535,239
5,267,261 5,544,196 5,267,262 5,568,483 5,337,338
5,600,754 5,414,796 5,657,420 5,416,797 5,659,569
5,710,784 5,778,338



Bluetooth® is a registered trademark of the Bluetooth SIG, Inc.

The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Panasonic Mobile Communications Co., Ltd. is under license. Other trademarks and trade names are those of their respective owners.

Powered by MascotCapsule®

MascotCapsule® is a registered trademark of HI CORPORATION © 2006 HI CORPORATION. All Rights Reserved.

"SOFTBANK," SOFTBANK's equivalent in Japanese, and the SOFTBANK logo are trademarks or registered trademarks of SOFTBANK CORP. in Japan and in other countries.

Video call, S! Appli, S! Loop and Near Chat are trademarks or registered trademarks of SOFTBANK MOBILE Corp.

Yahoo! and the "Yahoo!" or "Y!" logos are trademarks or registered trademarks of Yahoo! Inc.

CP8 PATENT

The frequency band used for the Bluetooth® function of 705P is shared with other industrial, scientific or medical equipment (microwave ovens, etc.), and used at premises radio stations, amateur radio station, etc. (hereinafter "other radio stations").

- 1 Before using the Bluetooth® function, visually check that there are no other radio stations sharing the same frequency band nearby.
- 2 Should interference occur between 705P and other radio stations, move to another place or stop the Bluetooth® function (stop the transmission) immediately.
- 3 For additional information and support, contact us at the following number.

SoftBank Customer Centre;

From a SoftBank handset, call toll free at 157 for General Information.

From landlines, see ☞ P.18-32 "Customer Service".



This radio equipment operates in the 2.4 GHz band using the FH-SS modulation, and its maximum communication distance is 10m.

Other company and product names mentioned herein are trademarks or registered trademarks of their respective owners.

The software contained in 705P is copyrighted material; copyright, moral right and other related rights are protected by copyright laws. Do not copy, modify, alter, disassemble, decompile or reverse-engineer the software, and do not separate it from hardware in whole or part.

Specific Absorption Rate (SAR)

705P meets the government's requirements for exposure to radio waves.

These requirements are based on scientific basis to assure that radio waves emitted from mobile phones and other handheld wireless devices do not affect human health.

They require that the Specific Absorption Rate (SAR), which is the unit of measurement for the amount of radiofrequency absorbed by the body, shall not exceed 2 W/kg*. This limit includes a substantial safety margin designed to assure the safety of all persons, regardless of age or health, and meets the international standard set by International Commission on Non-Ionizing Radiation Protection (ICNIRP) in cooperation with World Health Organization (WHO).

The highest SAR value for 705P is 0.795 W/kg. Tests for SAR are conducted with handset transmitting at its highest certified power level, and follow the testing methods set by the government. While there may be differences between the SAR levels for various handsets, they all meet the governmental requirements for safe exposure. The actual SAR level of the handset while operating can be well below the highest value. This is because the handset is designed to operate at multiple

power levels so as to use only the power required to reach the Network.

Additional information on SAR can be obtained on the following Websites:

Ministry of Internal Affairs and Communications
(Protection from Radio Wave Environment)

<http://www.tele.soumu.go.jp/e/ele/index.htm>

Association of Radio Industries and Businesses (ARIB)

<http://www.arib-emf.org/index02.html> (Japanese only)

* Requirements are stipulated in Radio Law (Ordinance Regulating Radio Equipment, Article 14-2).

Getting Started

Function & Feature Preview

Mobile Telephony

Video Call

Enjoy mobile video calling with compatible handsets.



P.5-1

International Use

Use 705P number both in Japan and overseas.

P.2-16

Mobile Internet

Yahoo! Keitai

Access the Mobile Internet for image or sound files as well as information.



P.16-1

S! Applications

Enjoy Java™-based games and other apps designed to run on SoftBank handsets.



P.17-1

Image Capturing

Camera

Capture still images or record video clips.



P.6-1

Messaging

Mail

 
Exchange longer text messages with SoftBank & other e-mail compatible mobiles, PCs, etc. Attach multimedia files; download attachments.



P.15-2

SMS

Exchange short text messages with other SoftBank handsets.



P.15-2

Etiquette Functions

Manner Mode

Press one key to mute 705P tones and activate vibration for incoming transmissions.



P.2-19

Offline Mode

Disable 705P transmissions without turning power off.

P.2-20

Schedule & Alarms

Calendar

Add entries by dates and times; set reminder alerts.



P.13-2

Alarm

Set up to five Alarms for one time, daily or weekly events.



P.13-8

Handset Displays

Wallpaper

Customize 705P by setting image to appear in Standby.



P.7-2

External Display

Press Side Key for signal & battery levels, time & date, mail, etc. with 705P closed.



P.1-12

Main Menu Design

Change/customize Main Menu icons and background.



P.7-4

Language

Set 705P menus to appear in English or Japanese.

P.7-6

Home & Away Clock


Set clocks for two different time zones simultaneously.

P.7-3

Connectivity

Bluetooth®


Establish connections with Bluetooth® devices.

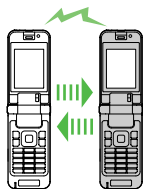

P.11-4

Infrared


Use infrared to transfer files between compatible devices.

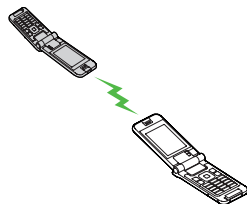

P.11-2

USB

Exchange files with compatible devices via USB cable.

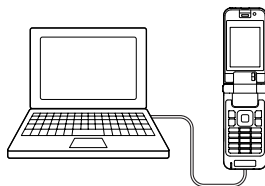

P.11-10

Entertainment

Media Player

Play music/video files saved on 705P/Memory Card.



P.9-2

ComicSurfing

Download and view Japanese E-Comics, Photo Books, etc.



P.9-12

Near Chat

Exchange text messages with Bluetooth® devices.

P.9-13

Active Flip

Accept with Open

Open 705P to answer calls.

P.8-4

End Call with Close

Close 705P to end calls.

P.8-4

File Management

Data Folder

Manage 705P files saved within Data Folder by file type.



P.10-2

Memory Card

Use Memory Card to extend 705P memory or back-up files, etc.



P.10-19

Onboard Recorders

Voice Recorder

Record up to 60 seconds of a call or a voice memo on 705P.

P.13-10

Answer Phone

Record caller messages for unanswered calls on 705P.

P.2-7

Security Features

Keyguard

Prevent unintentional key or 705P operations in Standby.

P.12-4

Password Lock

Require Handset Code entry each time 705P is turned on.

P.12-4

Optional Services

Call Divert

Divert calls to preset phone number automatically when 705P is off or out-of-range.

P.14-2

Voice Mail

Forward unanswerable calls; record caller messages when 705P is off or out-of-range.

P.14-4

Call Waiting
[Separate Subscription]
Place current line on hold to answer an incoming call.

P.14-6

Multiparty Call
[Separate Subscription]
Connect with up to five other parties during a single call.

P.14-7

Call Barring
Restrict incoming/outgoing calls by preset conditions.

P.14-8

Caller ID
Show or hide your phone number when making calls.


P.14-10

USIM Card

About USIM Card

Universal Subscriber Identity Module (USIM) Card is an IC card containing customer and authentication information, including handset number, and limited storage space for Phone Book entries and SMS messages. USIM Card must be inserted to use 705P. Always turn handset power off before inserting/removing USIM Card.

- Insert USIM Card into other compatible SoftBank handset to use information saved on USIM Card.
- Use SoftBank specified USIM Card only; non-specified USIM Cards may not function properly.
- Do not insert USIM Card into other IC card devices. SoftBank is not liable for any resulting damages.
- Keep IC portion clean.
- Remove dust/debris with a soft, dry cloth.
- Do not place labels, etc. on USIM Card; may cause failure.

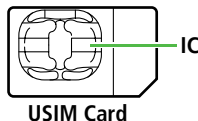

- If 705P is dropped/subjected to shock, **Restarting USIM** *Please wait* may appear; 705P returns to Standby. This is not malfunction. If **Insert USIM** appears, re-insert USIM Card properly then restart 705P.

Important

- USIM Card is the property of SoftBank.
- Return USIM Card to SoftBank upon service cancellation.
- USIM Card will be reissued for a fee if lost or damaged.
- If USIM Card/705P with USIM Card inserted is lost or stolen, contact SoftBank Customer Centre (☎ P.18-32).
- Back up USIM Card files. SoftBank is not liable for lost files.
- USIM Card specifications/performance may change without prior notice.
- Pre-installed S! Applications (ComicSurfing, Near Chat, etc.) may be unusable while a different or replacement USIM Card is inserted into 705P.
- Returned USIM Cards are recycled.




Some downloaded files may be inaccessible after upgrades/repairs, USIM Card/handset replacement.

Inserting & Removing USIM Card

- Remove battery (👉 P.1-18) then follow steps below.


Inserting

- 1 With IC chip down, slide in USIM Card

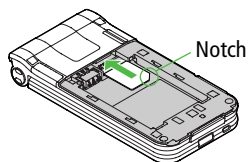

Removing

- 1 Slide out USIM Card as shown

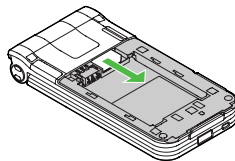

Note

- Do not force USIM Card into or out of 705P; may damage handset/USIM Card.
- Be careful not to lose the removed USIM Card.
- Avoid touching USIM Card terminals or IC chip; doing so may hinder performance/USIM Card recognition.

USIM PINs

There are two USIM Card security codes: *PIN1* & *PIN2*.

PIN1

[Default] 9999

4 to 8-digit code used to prevent unauthorized 705P use.

- PIN1 can be changed (☞ P.12-3).
- When PIN Entry is **Enable** (☞ P.12-2), PIN1 entry is required each time 705P is turned on (with USIM Card inserted).

PIN2

[Default] 9999

Required to clear Total Call Cost or set Cost Limit and Price/unit (☞ P.2-14).

- PIN2 can be changed (☞ P.12-3).

PIN Lock & Cancellation (PUK)

PIN1 Lock or PIN2 Lock is activated if PIN1 or PIN2 is incorrectly entered three times. Cancel PIN Lock by entering the Personal Unblocking Key (PUK) (☞ P.12-3).

- For information on PUK, contact SoftBank Customer Centre, General Information (☞ P.18-32).



- If PUK is incorrectly entered ten times, USIM Card is locked and handset is disabled. Write down PUK.
- For procedures required to unlock USIM Card, contact SoftBank Customer Centre, General Information (☞ P.18-32).
- When PIN Entry is **Enable** (☞ P.12-2), Emergency numbers (110, 119, 118) cannot be dialled without entering PIN1.






Handset Parts & Functions

Internal

Lights for incoming transmissions, charging, etc.

Illumination Light/ Charging Indicator

Multi Selector

Scroll up , down , left , right  to navigate menus and text. Press  to select a menu item, release shutter or start recording

Left Softkey

Execute Left Softkey function

Video Call/Input Mode Key

Initiate a Video Call or change text entry mode

Clear Key

Delete characters or highlighted items

Send/Redial & A/a Key

Initiate or answer calls; toggle upper/lower case roman letters in text entry windows

* /Symbol Key

Open Symbols/Pictographs in text entry windows

Microphone

Inside Camera

Use during Video Calls

Earpiece

Display

Portrait/Macro Selector

Speaker

Right Softkey

Execute Right Softkey function

Camera & Line Break/Mic Mute Key

Activate Camera in Standby or enter a line break in a text entry window
Mute Microphone


End/Escape & Power Key

Reject/end calls; return to Standby
Press and hold to turn power on/off


Keypad

/Manner Key

Press and hold to activate or cancel Manner mode

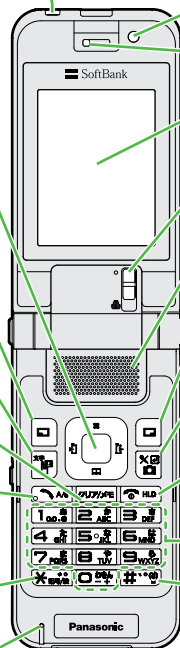


External

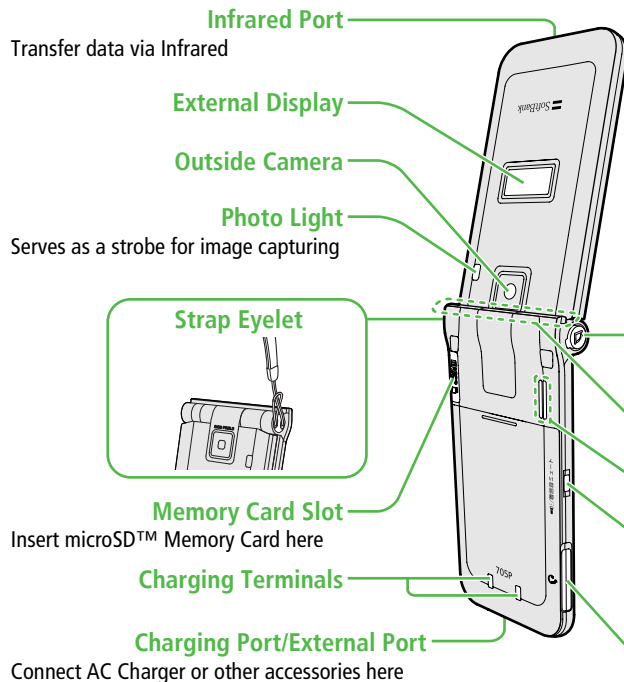

One-push Open Button


Press as shown below to open handset

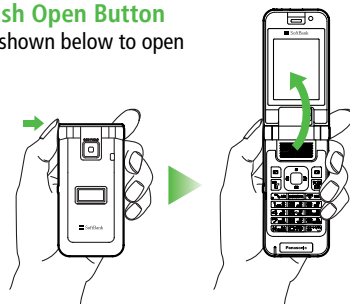

 - Close handset manually.
- Activate **Active Flip** to answer calls by opening handset and end calls by closing (☞ P.8-4).








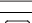

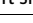
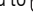
Earphone Port



Connect an optional earphone/microphone here








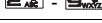
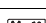




Quick Keys

In Standby






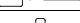

Short Press		Open Main Menu/ Release Keyguard
		Open Yahoo! Keitai menu list*
		Open Phone Book
		Open Incoming Call Log
		Open Outgoing Call Log
		Open Messaging menu list
		Access Yahoo! Keitai top menu
		Open All Calls History
		Open Answer Phone Message List
		Open Camera
	 (Left side)	Toggle External Display view when closed

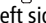* Function assigned to  can be changed (Shortcut Keys:  P.8-3)

In Standby (continued)


Long Press (more than one second)		Set Keyguard
	 / 	Open Volume settings
		Press and hold (more than two seconds) to turn handset power off
		Dial your voice mailbox
		Dial speed dial
		Enter + (International Code)
		Enter P (pause)
		Manner mode ON/OFF
		Answer Phone ON/OFF
	 (Left side)	Photo Light ON/OFF


During a Voice Call

Short Press	 / 	Increase volume
	 / 	Decrease volume
		Open optional menus
		End a call
	 (Left side)	Make voice memo


Display

Display Indicators

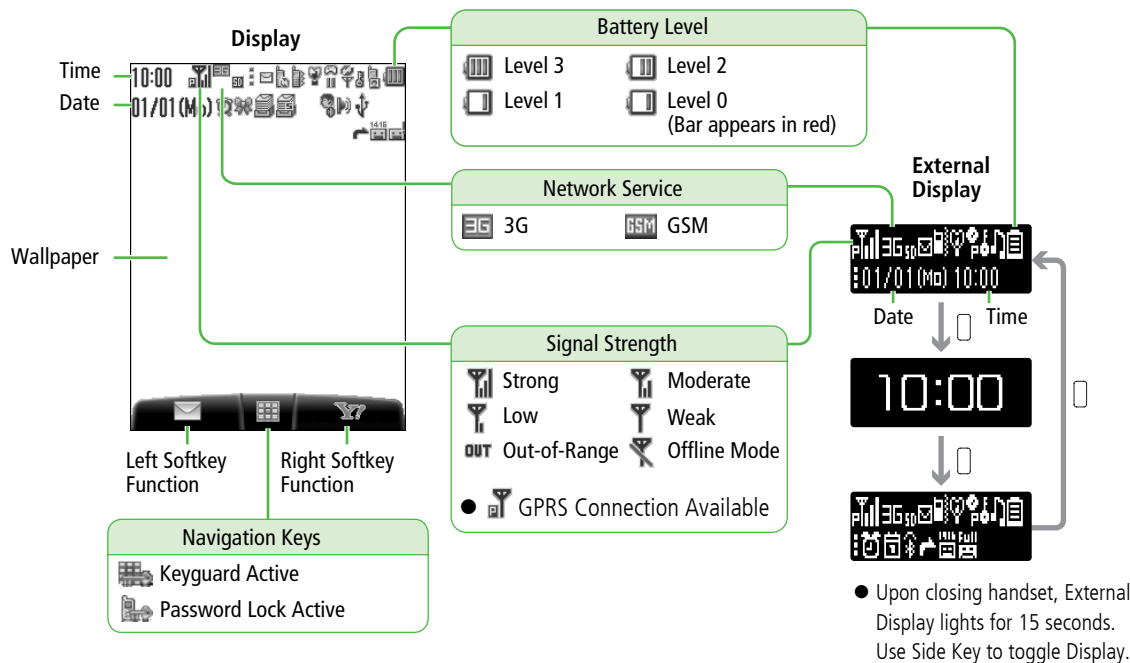

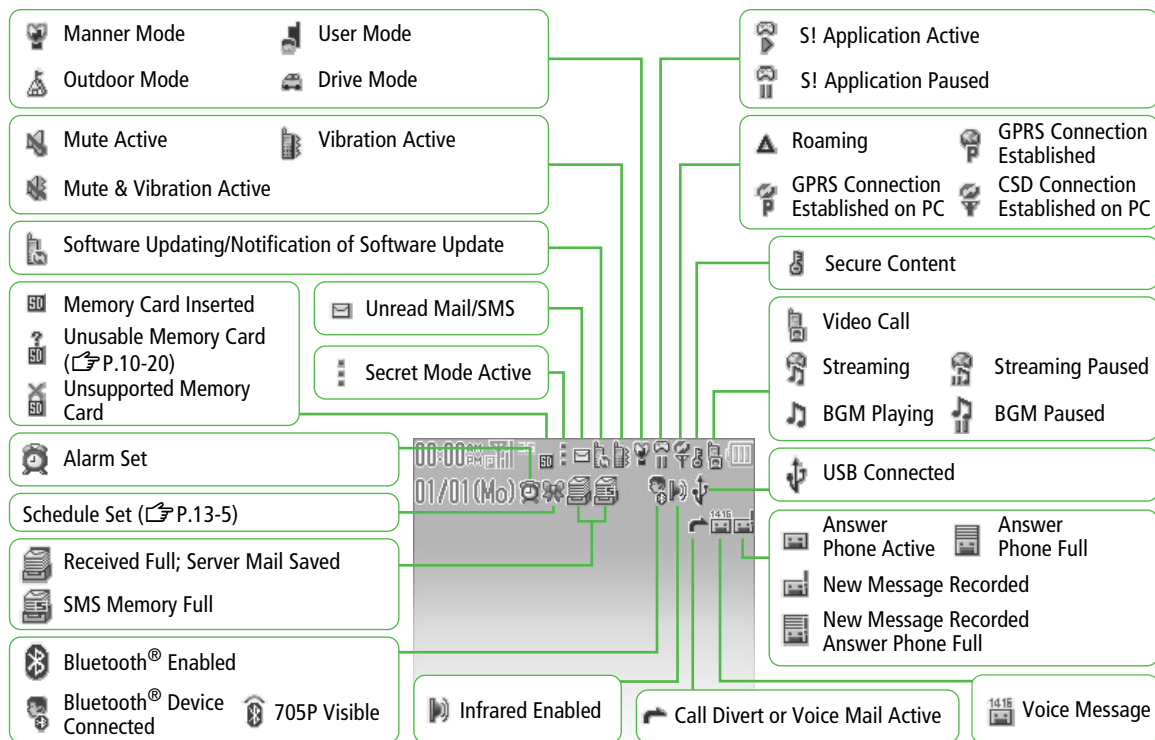

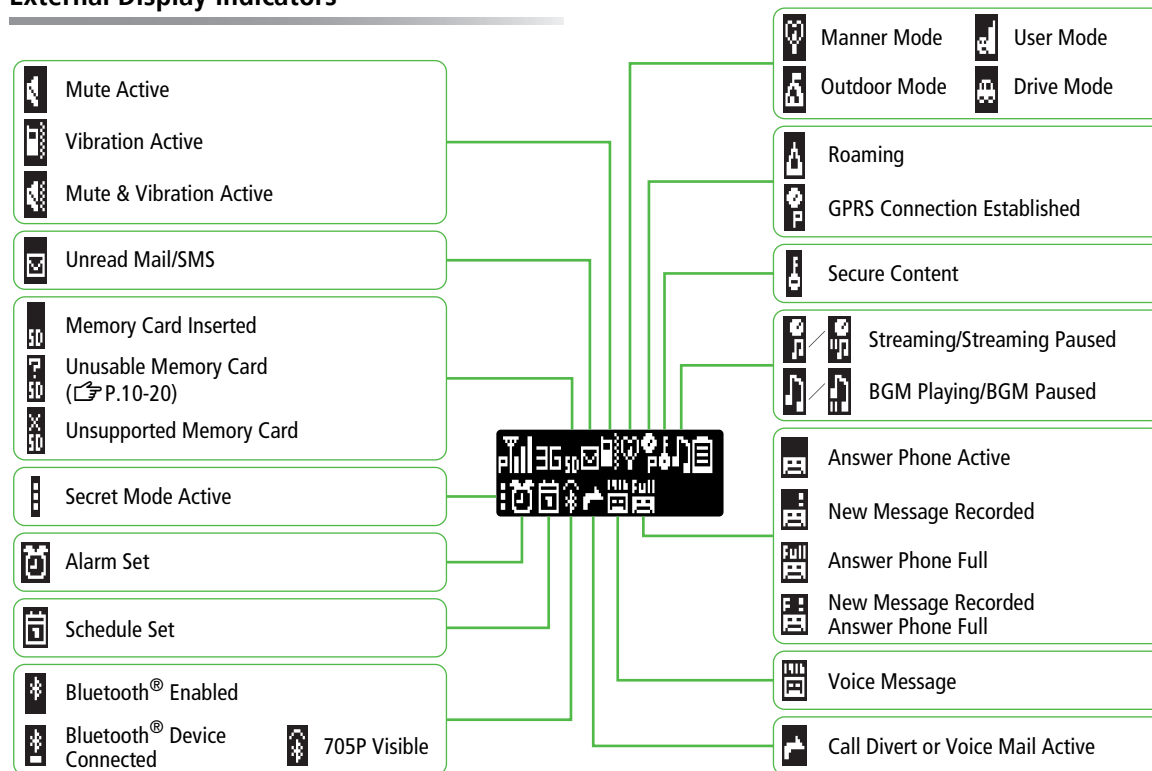


External Display Indicators





 
 
 
Information Window

In Standby, Information window opens for missed calls, Mail/SMS messages, Answer Phone messages, etc.

- 1  to select an item → 
or  [View]




- Information window opens for the following events:

Missed Call	Missed calls ( P.2-11)
Mail	Received Mail/SMS messages ( P.15-11)
Answer Phone	Recorded caller messages ( P.2-8)
Voice Mail	Unanswered call forwarded to Voice Mail Centre ( P.14-5)
Update Result	Received software update result ( P.18-12)

- While Information window is open, handset operations are unavailable. Press  [Exit],  or  to close it.



While Information window is open, Emergency numbers (110, 119, 118) can be dialed, however dialled numbers do not appear. If wrong number is entered, use  to re-enter.

Battery & Charger

Before Charging

Charge battery before use or after a period of disuse.

Charging Time & Operating Time

	3G Mode	GSM Mode
Charging Time	Approximately 160 minutes	
Standby Time	Approx. 350 hours	Approx. 290 hours
Voice Call Talk Time	Approx. 190 minutes	Approx. 200 minutes
Video Call Talk Time	Approx. 90 minutes	—

- Talk Time is an average measured with a new, fully charged battery, with stable signals.
- Standby Time is an average measured with a new, fully charged battery, with handset closed without calls or operations, in Standby with stable signals.
- Talk Time and Standby Time may vary by environment (battery status, temperature, etc.).

Battery Life

- Use or store battery between 5°C - 35°C.
- Use specified charger only. Battery may deteriorate, overheat or cause fire.
- Replace battery if operating time shortens noticeably.

Charging

- Battery must be installed to charge it.
- It may take longer for charging when handset is on.
- Do not use charger for other purposes.
- Battery may short-circuit, overheat or burst from contact with metal objects.
- Charger, battery and 705P may become warm during charging.
- Move charger away from TV/radio if interference occurs.

Precautions




- Clean 705P, battery & charger with dry cotton swab.
- Charge battery at least once every six months.
- Use a case when carrying battery separately.


Battery Time

- Using handset in poor conditions may shorten Battery Time.
 - Extreme temperatures
 - Impaired handset, battery or Charger terminals
 - Signal is weak/handset is out-of-range
 - Playing music or using S! Appli
- Extending battery time
Example:
 - Select shorter Display backlight time (☞ P.7-6).
 - Select **Silent** for Key Tone Volume (☞ P.8-2) and **OFF** or shorter time for Key Backlight (☞ P.8-3).

When Battery Runs Out

- Unless a Call is in Progress


A message appears and Warning Tone sounds. Warning Tone ends automatically after two minutes; press ,  or  to cancel Warning Tone manually. Charge or replace battery.

- If Manner mode is active/Warning Tone Off, nothing sounds.
- Begin charging battery within two minutes; otherwise, 705P will automatically shut down.
- When 705P is closed, press  (Side Key) to cancel Warning Tone.
- During a Call
A message appears and Warning Tone sounds via Earpiece or Speaker. After 90 seconds, call ends and 705P shuts down. Charge or replace battery.
 - To continue the call, charge battery within 90 seconds.

Battery Disposal

- Do not dispose of exhausted batteries with ordinary refuse. Tape over battery terminals before disposal, or bring them to a SoftBank shop. Follow local regulations regarding battery disposal.


Battery Strength Indicator

- Battery Strength indicator changes as remaining usage time decreases. Charge or replace battery when battery level is low ( P.1-12) or a message appears on Display and External Display.

Battery Installation & Removal


- Always turn off handset power before opening handset to remove battery.

1 Slide battery cover, then lift to remove

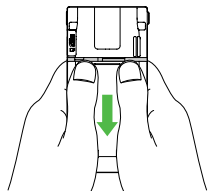


2 Insert Battery

Align battery contacts with handset pins.

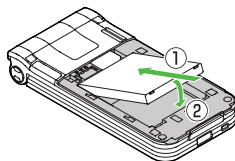


Remove Battery

Lift battery out as shown.

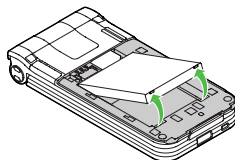

3 Replace battery cover

Cover should click into place.

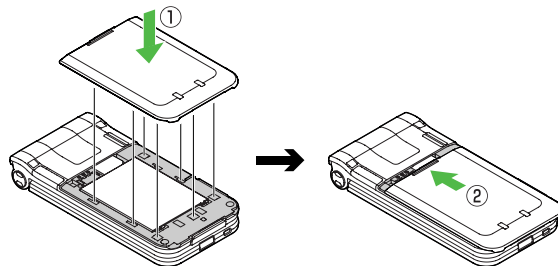

When battery is removed just after changing handset settings, changes may not affect settings.



Lithium-ion batteries are valuable and recyclable resources.

- Recycle used lithium-ion battery at a shop displaying the symbol shown to the right.
- To avoid fire or electric shock, do not:
 - Short-circuit battery
 - Disassemble battery




Li-ion

AC Charger

Use specified AC Charger only.

Charging Time: Approximately 160 minutes

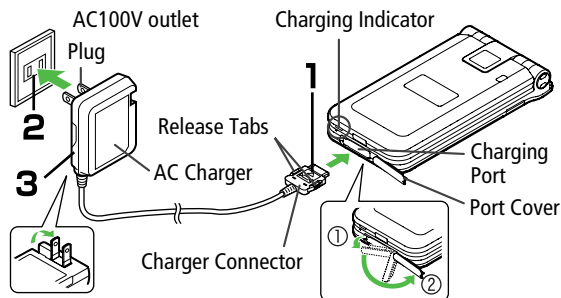

1 Connect AC Charger to handset

Gently pull Port Cover and rotate it as shown above.
Insert Charger Connector into Charging Port with the printed side up.

2 Plug AC Charger into AC outlet

Extend Charger Plug blades. (Fold back when not in use.)
Charging Indicator illuminates and charging starts.
When Charging is complete, Charging Indicator goes out.

3 When charging is complete, unplug AC Charger from AC outlet, and then disconnect AC Charger from handset

Squeeze Release Tabs to remove Charger Connector, and replace Port Cover.




- Do not pull, bend or twist AC Charger cord.
- AC Charger is compatible with household currents between AC 100V and 240V.
- SoftBank is not liable for problems resulting from charging 705P abroad.

Desktop Holder

Purchase Desktop Holder separately.
Use specified AC Charger only.

Charging Time: Approximately 160 minutes

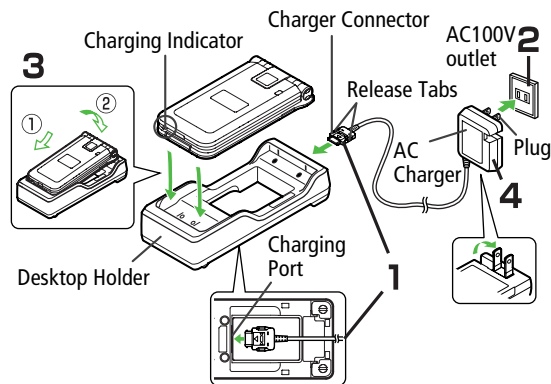

1 Connect AC Charger to Desktop Holder

Charger Terminal is located on the back of Desktop Holder. Insert Charger Connector into Charging Port with the printed top facing down.

2 Plug AC Charger into AC outlet

Extend Charger Plug blades. (Fold back when not in use.)

3 Insert 705P into Desktop Holder

Place 705P in Desktop Holder and push until it clicks.

Charging Indicator illuminates and charging starts.

Charging is complete when Charging Indicator goes out.


4 When charging is complete, remove 705P from Desktop Holder and then unplug AC Charger from AC outlet

Squeeze Release Tabs to remove Charger Connector.

In-Car Charger

Use specified AC Charger only.

Charging Time: Approximately 160 minutes

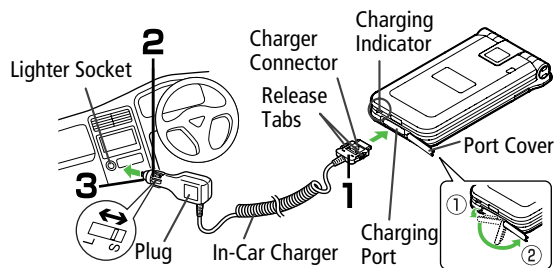

1 Connect In-Car Charger to handset

Gently pull Port Cover and rotate it as shown above.
Insert Charger Connector into Charging Port with the printed side up.

2 Plug In-Car Charger into lighter socket

If it does not fit, remove it and adjust plug size.
Start car engine.
Charging Indicator illuminates and charging starts.
Charging is complete when Charging Indicator goes out.


3 When charging is complete, unplug In-Car Charger from lighter socket

Squeeze Release Tabs to remove Charger Connector, and replace Port Cover.




- Use In-Car Charger in vehicles with a negative earth (DC12V/24V). Do not use if earth is positive.
- Disconnect In-Car Charger before leaving vehicle.
- Do not use In-Car Charger with Desktop Holder.
- Avoid charging battery inside extremely hot vehicles.


Handset Power On/Off

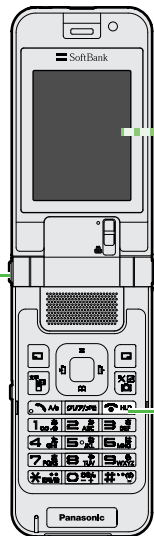

1 Open 705P

2 Press and hold
 for more than
 three seconds

Handset enters Standby.


3 Press and hold
 for more than
 two seconds

Handset shuts down.






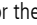
Standby

When 705P Power is First Turned On...

Setup window appears; enter date and time → 

- If unentered, **2006/01/01 00:00** is set by default.

Retrieving Network Information

When , , or  is pressed for the first time, 705P initiates Network Information retrieval;  to retrieve it.

- Update Network Information to use Messaging, Yahoo! Keitai, etc.

- Update Network Information manually: **Main Menu**

▶ **Settings** ▶ **Connectivity** ▶ **Retrieve NW Info**



- If **Insert USIM** appears, clean and properly re-insert USIM Card then restart 705P.
- To prevent unauthorized use, activate PIN Entry to require PIN1 entry each time handset is turned on (☞ P.12-2).
- After a period of inactivity, Display turns off automatically.
- Phone Book takes a moment to open just after turning 705P on. At this time, only phone number appears in Call Log, Mail/SMS lists, etc. even if name is saved in Phone Book. Return to Standby and try again later; name will appear.

Date & Time

Set date and time; appears on Display.

Main Menu ► **Settings** ► **Phone Settings**
 ► **Date & Time** ► **Home Clock** ► **Date & Time**

- 1 Enter date →
- 2 Enter time (24 hours) →
 Day of the week is set automatically.

Correcting Misentries


Move cursor and enter correct date/time.



- Clock Options
 - World Clock (☞ P.7-3)
 - Summer Time (☞ P.7-2, P.7-3)
 - Time & Date Formats (☞ P.7-4)
- Date & Time Settings effective on 705P: from 00:00 on 2006/01/01 to 23:59 on 2099/12/31

Handset Menus

Main Menu

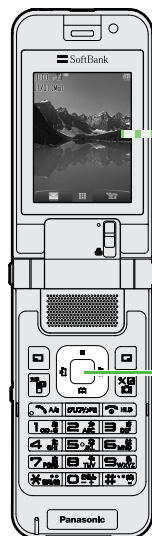

Main Menu

1 In Standby, 

Main Menu appears.

2  to select an icon →












Selected function menu appears.

To Return to Standby



Main Menu Icons

 S!Appli Use S! Applications	 Yahoo! Keitai Mobile Internet Use & Settings	 Camera Capture images or record video clips
 Messaging Create/view SMS or Mail messages	 Data Folder Open files saved on 705P/Memory Card	 Entertainment Use Media Player, ComicSurfing, etc.
 Tools Set Alarm or save Calendar entries...	 Phone Book Save entries to call or send messages...	 Settings Adjust/customize handset settings




Change Main Menu icons and background (☞ P.7-4).


Menu Numbers

Use keypad to select functions or menu items.

Unnumbered Menu Items


When numbers do not appear, select items as shown.

Example 1:  to select **Settings** from Main Menu

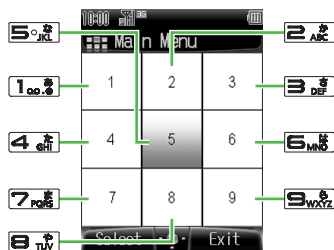

Main Menu Item Key Assignments


Example 2:  to select **Display Settings** after Example 1

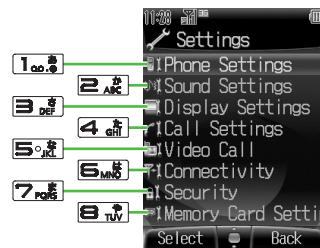

Numbered Menu Items

Press keys to select corresponding menu items.

Example 1: In Display Settings,  to select **Operator Name**

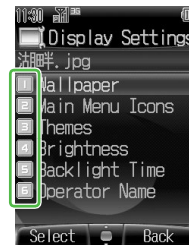

Passwords

Handset Code, Centre Access Code and Security Code are needed for 705P use.

Handset Code

9999 or the 4-digit number selected at initial subscription; required to use/change some handset functions.

- ✕ appears for each digit entered.
- Handset Code can be changed on 705P (👉 P.12-2).

Centre Access Code

The 4-digit number selected at initial subscription; required to access optional service via landlines or subscribe to fee-based information.

- Do not attempt to change Centre Access Code. For details, contact SoftBank Customer Centre, General Information (👉 P.18-32).

Security Code

The 4-digit number selected at initial subscription; required to restrict handset services. If Security Code is incorrectly entered three times, Call Barring settings are locked. To resolve, Security Code and Centre Access Code must be changed. For details, contact SoftBank Customer Centre, General Information (👉 P.18-32).

- Security Code can be changed on 705P (👉 P.14-9).



- Write down Handset Code, Centre Access Code and Security Code. If lost, contact SoftBank Customer Centre, General Information (👉 P.18-32).
- Do not reveal Handset Code, Centre Access Code and Security Code. SoftBank is not liable for misuse or damages.

Basic Handset Operations


Making Voice Calls

- Calling Abroad from Japan: ☎ P.2-4
- Calling Japan from Abroad: ☎ P.2-18
- Making Video Calls: ☎ P.5-3

Calling within Japan

Before Calling...




In Standby

- Confirm signal strength (☎ P.1-12)
- If any of these indicators appear
OUT  → calls cannot be made (☎ P.18-10)




1 Enter number with
area code


2 Confirm the number
then 


Show or Hide Caller ID

- Enter number,  [Menu] → *Notify My ID* →  →
Show or *Hide* → 

Correcting Misentries

- Use  to place cursor after digit(s) to delete, then press
 to delete.
Press and hold  to delete all digits; Standby returns.

3  **to end call**
Call Time appears.

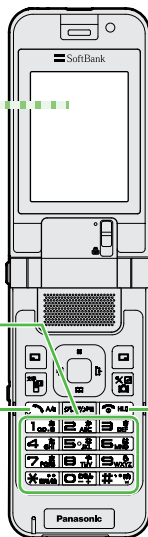



- Do not cover area around internal antenna (☞ P.1-10); may harm call quality.
- Call quality may be affected by location/environment.



- Close 705P to end calls (Active Flip: ☞ P.8-4).
- Confirm Total Call Cost (☞ P.2-14).
- Show Call Charge during or after a call (☞ P.2-15).
- Phone Book may be slow to open just after power is turned on. If a call is placed at this moment, number appears even if saved in Phone Book.

Calling from Outgoing Call Log

Up to 50 records appear in Outgoing Call Log. Call numbers directly from Call Log records.


1 In Standby,

Records appear newest first. If number is saved in Phone Book, name appears.

2 Select a phone number →



- To make Video Calls/
international calls, or to show/
hide Caller ID: ☞ From Step 2 on P.2-12

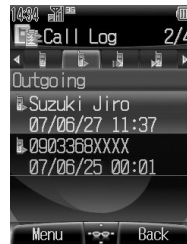

- When the same number is called more than once, only the most recent record appears.
- Call Log records remain after 705P is turned off.
- When 50 records are saved, oldest are deleted first.

Calling Abroad from Japan



- Requires separate subscription; contact SoftBank Customer Centre, General Information (☎ P.18-32).
- Call SoftBank handsets without entering country code.
- To make calls while abroad: ☎ P.2-18

1 Enter a phone number

2  [Menu] → **International Call** → 
Country Number List appears.





3 Select a country →  → 

Enter Country Code Directly

Press and hold  to enter + (International Code) → Enter country code → Enter number (omit first 0) → 

- International Code is set to **0046010** by default. Change as required (☎ P.8-4).
- Do not omit leading **0** to call to Italy (country code 39).

Add to Country Number List

In Step 3,  [Menu] → **Add** →  → Enter country name →  → Enter country code → .

Emergency Calls (110, 119, 118)

Call 110 (Police), 119 (Fire & Ambulance) or 118 (Coast Guard) even when some handset restrictions are active.

Emergency Numbers are Invalid When

- Offline mode is active (☎ P.2-20)
- PIN Entry window appears (☎ P.12-2)
- USIM Card is not inserted

 


Emergency numbers may not be diallable outside Japan depending on the network available or handset settings.

Answering Voice Calls


When a Call Arrives...

705P rings/vibrates; Illumination Light flashes.




If Caller ID is sent, number appears; if saved in Phone Book, caller's name appears.


1  **to talk**

2  **to end call**

Call Time appears.

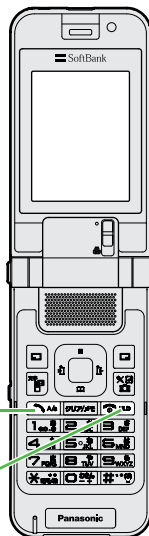


 







 
Mute Ringer

While 705P rings, press  (Side Key) to mute ringer.

Earpiece Volume

During a call, press  or  to adjust volume.



- Open 705P to answer calls (Active Flip:  P.8-4).
- When Any Key Answer is **ON** ( P.8-3), press any of these keys to answer calls: , , , , ,  or .
- When Caller ID is not sent, **Withheld** appears.
- Activate **Reject Incoming Calls** for **Withheld** to reduce nuisance calls. ( P.12-5)
- Phone Book may be slow to open just after 705P is turned on. If a call is received at this moment, number appears even if saved in Phone Book; Ringer and Illumination follow general settings and no picture appears.

Calling from Incoming Call Log


Up to 50 records appear in Incoming Call Log. Call numbers directly from Call Log records.

1 In Standby,

Records appear newest first. If a number is saved in Phone Book, name appears.

2 Select a phone number →



- To make Video Calls/
International calls, or to show/
hide Caller ID:  From Step 2 on P.2-12



- Call Log records remain even if 705P is turned off.
- When 50 records are saved, oldest is deleted first.

Handling Incoming Calls

Hold

Place a caller on hold when you cannot answer.

- 1 When a call arrives, Hold guidance is sent to the caller.
 - Call charges apply while on hold.

- 2 To answer the call,

Reject

- 1 When a call arrives, [Reject]

Forward


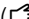
Activate Call Divert beforehand to automatically forward incoming calls to a preset number.

- For more about Call Divert:  P.14-2

- 1 When a call arrives, [Forward]
 - If Call Divert is not active, call is rejected.



Answer Phone

Record up to eight voice messages on 705P.


- When Answer Phone is active,  appears in Standby.
- Unavailable when handset is off, out-of-range or in Offline mode. Use Voice Mail ( P.14-4).

Setting/Cancelling Answer Phone

[Default] OFF

- 1 In Standby, press and hold 
 - To cancel: Press and hold  again

Redirecting a Call to Answer Phone

When a call arrives while Answer Phone is not active, press  to activate Answer Phone. Answer Phone remains active.




- Alternatively, set/cancel from **Main Menu** ► **Tools** ► **Answer Phone** ► **Settings** ► **ON/OFF**.
- When eight records are saved, information appears in Standby. Delete old messages.
- Answer Phone does not respond to Video Calls.

Answer Time

[Default] 8 seconds

Set time before which call is redirected to Answer Phone.


Main Menu ► **Tools** ► **Answer Phone**
 ► **Settings** ► **Answer Time**

- 1 Enter answer time (1-30 sec) → 

Answer Time Priority

- When Answer Phone and Voice Mail or Call Divert are both active, function with shorter answer time takes priority. For example, if Answer Phone Answer Time is **8 sec** and Optional Service is 15 seconds, Answer Phone responds first. (Priority may change depending on signal conditions.)
- Even if Answer Phone takes priority, call is forwarded to Voice Mail or forwarding number when Answer Phone is full.

Playing Messages

When a new message is recorded, Information window opens and  appears in Standby.

- For more about Information window:  P.1-15

1 In Information window, **Answer Phone** →



Answer Phone List appears.


2 Select a message →

Playback starts.

Calling Sender

Select a message →  [Menu] → **Call** → 

Deleting Messages

Select a message →  [Menu] → **Delete** or **Delete All** →

 →  [YES]

Saving to Phone Book

Select a message →  [Menu] → **Add to Phone Book** →




 Alternatively, in Standby, press  or **Main Menu**


▶ **Tools** ▶ **Answer Phone** ▶ **Message List.**

Engaged Call Operations

Show operations during Voice Calls.

- For operations during Video Calls:  P.5-5



During a call, Display turns off after approximately one minute to reduce power consumption. When Backlight is off, press  to end a call. Press any other key to activate Backlight (must be on to use engaged call operations).



Earpiece Volume

[Default] Volume 4

1 During a call, or to adjust the volume



- New setting remains valid after call ends.






To change Earpiece Volume in Standby, press and hold  or  to open Earpiece Volume window.

Voice Recorder





Record up to 60 seconds of a call.




- 1 During a call,  (Side Key)
Recording starts after a tone.
- 2  to stop recording
.amr file is saved to Sounds (Data Folder).

 Alternatively,  [Menu] → **Record** → .

Handsfree Conversations

Hear the other party's voice via Speaker.

- 1 During a call,  [Menu] → **Speaker ON** → 
Talk handsfree.
● To cancel:  [Menu] → **Speaker OFF** → 

 To change modes while using a Bluetooth® device:
 [Menu] → **Change to Bluetooth, Speaker ON (Phone)** or **Speaker OFF (Phone)** → 

More Engaged Call Operations

Sending Touch Tones

During a call, use keypad to send touch tones for voice mail or other touch tone activated services.

- 1 During a call, - , or

Creating a Text Memo

Enter up to 40 digits during a call. View after call ends, call entered phone numbers.

- Available keys: - , ,

- 1 During a call, enter a phone number, etc.
Entered digits appear in lower left of Display.

- 2 To end the call,
Entered digits appear.

- 3 **Make a Voice Call**



Make a Video Call



Opening Phone Book

- 1 During a call, [Menu] → *Phone Book* →



Phone Book opens.

 
Placing Call on Hold

When a call is put on hold, caller is informed.

- Call Waiting (P.14-6) or Multiparty Call (P.14-7) subscription required to use Hold.

- 1 During a call,


- To cancel: again



Call Log

Incoming and outgoing call records appear here.

1 In Standby,  →  to select a Call Log

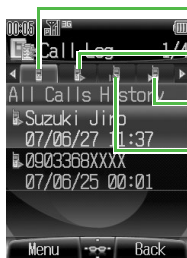

All Calls History: All dialed/received calls



Outgoing: All dialed calls (up to 50 records)

Incoming: All received calls (up to 50 records)

Missed Calls: All missed calls (up to 20 records)

2 To see record details,  to select one → 











- When a number is called more than once, only last record appears.
- Call Log records remain even if 705P is turned off.
- When the maximum number of records are saved, oldest is deleted first.
- Phone Book may take a moment to open just after power is turned on and phone number appears in Call Log even if saved in Phone Book. Return to Standby and reconfirm little while later.
- Call Log can also be opened from **Main Menu**
▶ **Phone Book** ▶ **Call Log**.
- In Standby, press  to open Outgoing Call Log or  to open Incoming Call Log directly.

2





Basic Handset Operations

Using Call Log Records

Making Calls

- 1  →  to select a Call Log
- 2  to select a record →  [Menu] → *Call* → 
- 3 *Voice Call, Video Call* or *International Call* → 
- 4 If International Call is selected in Step 3, select a country →  → 











Show or Hide Caller ID

In Step 3, select *Show Number* or *Hide Number* →  →  [Menu] → *Call* →  → *Voice Call* or *Video Call* → 

Creating Messages

- 1  →  to select a Call Log
 - 2  to select a record →  [Menu] → *Create Message* → 
 - 3 *Message* or *SMS* →  → Create Mail or SMS message (Mail:  From Step 2 on P.15-7/SMS:  From Step 2 on P.15-9)
- ### Saving to Phone Book
- 1  →  to select a Call Log
 - 2  to select a record →  [Menu] → *Add to Phone Book* → 
 - 3 *Create New Entry* or existing entry →  → ( From Step 1 on P.4-4)

Deleting Call Log Records

- 1  →  to select a Call Log
- 2 **Delete Individual Records**
 Select a record →  [Menu] → *Delete* →  → 
Delete All Records
 [Menu] → *Delete All* →  →  [YES]
 → Enter 4-digit Handset Code → 
 - Handset Code:  P.1-26

 
Call Time & Call Cost

Call Time

Total Call Time for outgoing calls appears.

Main Menu ► **Settings** ► **Call Settings**
 ► **Total Call Time**

1 Reset Total Call Time



Total Call Time remains even after 705P is turned off.

Service Charges

Viewing Remaining Cost

Remaining appears if Cost Limit is set ( P.2-14).

Main Menu ► **Settings** ► **Call Settings**
 ► **Service Charges** ► **Remaining**

Total Call Cost

Total Call Cost appears.

Main Menu ► **Settings** ► **Call Settings**
 ► **Service Charges** ► **Total Call Cost**

1 Reset Total Call Cost



Total Call Cost remains even after 705P is turned off.

Price/Unit

Enter currency denomination and price per unit of call time for calculation of call charges.

Main Menu ► **Settings** ► **Call Settings**
 ► **Service Charges** ► **Price/unit**



2 Enter three letter abbreviation for the designated currency →

3 Enter value →

Cost Limit

Set Cost Limit. When reached, outgoing calls are blocked.

Main Menu ► **Settings** ► **Call Settings**
 ► **Service Charges** ► **Cost Limit**

1 [Menu] → *Edit* →

● To cancel, select *Disable*.

2 Enter PIN2 →

3 Enter cost limit →

When Limit is Reached & Outgoing Calls Blocked

Reset Total Call Cost (Left) to allow outgoing calls.




- If Cost Limit is set below the value set in Total Call Cost, outgoing calls are blocked. Reset Total Call Cost (Left) or set Cost Limit to a higher value.
- Emergency numbers (110, 119, 118) are available even when the limit is reached.

Show Charge

[Default] OFF



Show or hide call charge during or after a call.

Main Menu ► Settings ► Call Settings
► Service Charges ► Show Charge ON/OFF

1 *ON* or *OFF* → 

My Number

Confirm handset phone number in My Details (☞ P.4-14). Also confirm data saved in My details: name, mail address, etc.

1 In Standby,  
My Details appears.

Calling while Abroad

Make Voice Calls while outside Japan.





- For details, contact SoftBank Customer Centre, General Information (☎ P.18-32).
- Separate subscription is required for this service.

Network Mode

[Default] 3G

Adjust Network mode for current country or region.

Automatic	3G/GSM service area in Japan or abroad. 705P selects an available network automatically using area (network condition).
3G	3G service area in Japan or abroad.  appears.
GSM	GSM service area abroad.  appears.

Main Menu ► **Settings** ► **Connectivity**
 ► **Network Settings** ► **Select Network**

1 *Automatic, 3G or GSM* → 



Operator Settings

Adding an Operator


Select network operator from the list. The order in the list indicates the search priority. The list can be edited.

- The number of operators which can be stored in the list depends on USIM Card.

Main Menu ► **Settings** ► **Connectivity**
 ► **Network Settings** ► **Select Operator**

1  [Menu] → **Add, Insert, Edit** or **Delete**
 → 

- **Add:** new network appears at the end of the list; place cursor the end of the list beforehand.
- **Insert:** new network appears above selected one.


 Available operators vary by network conditions.

Selecting Operator


[Default] Automatic

Select network automatically or manually.

Main Menu ► **Settings** ► **Connectivity**
 ► **Network Settings** ► **Select Auto/Manual**

1 **Automatic** or **Manual** → 


When **Manual** is Selected

When 705P is back within network coverage, it searches for an operator automatically. If the last one cannot be found, a list of valid operators appears. In Standby, select one and press .

Changing Operators



Depending on network coverage/roaming conditions, changing networks may improve calling condition.

Main Menu ► **Settings** ► **Connectivity**
 ► **Network Settings** ► **New Search**

1 Select an operator → 

Making Calls while Abroad


Calling Japan from Abroad

- 1 In Standby, press and hold  + (International Code) appears.
- 2 Enter a country code, area code (excluding 0) and a phone number → 
 - Do not omit 0 in area code if you are calling to Italy (country code 39).



- International Code is set to **0046010** by default. The number can be changed if required (☞ P.8-4).
- Country code used well can be added to the list (☞ P.8-5).

Calling Domestic Landlines & Mobiles Abroad

- 1 In Standby, enter a phone number → 

Manner Mode

Minding Mobile Manners

Please use your handset responsibly. Use these basic tips as a guide. Inappropriate handset use can be both dangerous and bothersome. Please take care not to disturb others when using your handset. Adjust handset use according to your surroundings.

- Turn it off in theatres, museums and other places where silence is the norm.
- Refrain from use in restaurants, lobbies, elevators, etc.
- Observe signs and instructions regarding handset use aboard trains, etc.
- Refrain from use that interrupts the flow of pedestrian or vehicle traffic.

Manner-related Features

Manner Mode (Right)	Press one key to mute 705P tones and activate vibration for calls/messages
Vibration Mode (P.7-8)	Activate in public places, meetings, etc. for silent call/message alerts
Ringer Volume	Mute call/message tones (P.7-8) or S! Appli sounds (P.17-5)
Offline Mode (P.2-20)	Temporarily suspend all calls/messages and incoming information while 705P is on
Answer Phone (P.2-7)	Use to handle incoming calls when inappropriate/unsafe to answer
Mode Settings (P.7-9)	Each one offers a combination of settings to suit a situation; activate as is or edit

Manner Mode

Press one key to mute 705P tones and activate vibration for incoming transmissions.

- When Manner mode is **ON**, and (Silent & Vibration ON) appear.

- 1 In Standby, press and hold
 - To cancel: Press and hold again




- Alternatively, **Main Menu** ► **Settings** ► **Phone Settings** ► **Mode Settings** ► **Manner**.
- Shutter Sound, Auto Answer tone, and incoming tone via Earphone (**Volume 1**) sound even in Manner Mode.
- Media Player files are initially muted in Manner Mode; adjust volume in Playback window.


Activating Offline Mode

[Default] OFF

Temporarily suspend all 705P transmissions; when active, all calls/messages and incoming information are blocked.

- When Offline mode is **ON**,  appears.

Main Menu ► Settings ► Phone Settings
► Offline

1 **ON** or **OFF** → 



- **Offline** disables Infrared/Bluetooth® transmissions.
- Bluetooth® devices are unusable in Offline mode.
- Emergency numbers (110, 119, 118) cannot be dialled.

Text Entry


Text Entry

Enter alphanumerics, hiragana, kanji, katakana, symbols and pictographs.


 

Text Entry Window & Character Input Modes

3

Text Entry

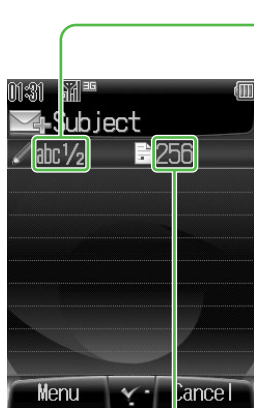


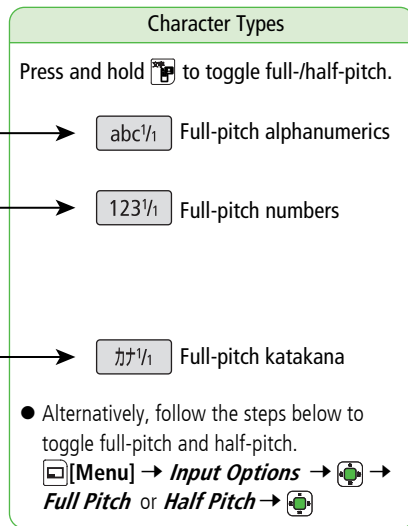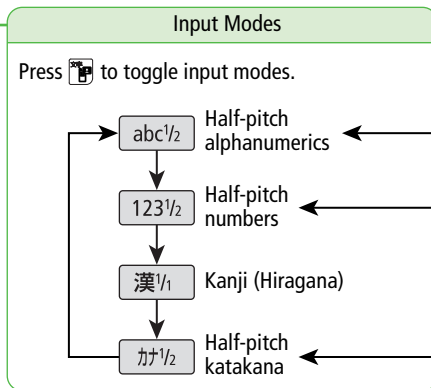


Text Entry Window



 
 

 
 
 
 
 


Key Assignments

Multiple characters are assigned to each key.







● For input modes and character type:  P.3-2

● Press and hold numeric keys ( to ) to enter half-pitch numbers assigned to each key, regardless of input mode. To enter +, press and hold  in half-pitch number mode.

Key	Input Modes			
	Kanji (Hiragana) [Full Pitch]	Katakana [Full/Half Pitch]	Alphanumerics [Full/Half Pitch]	Numbers [Full/Half Pitch]
	あいうえおあいうえお 1	アイウエオアイウエオ 1	. - @ _ / : ~ 1	1
	かきくけこ 2	カキクケコ 2	a b c A B C 2	2
	さしすせそ 3	サシスセソ 3	d e f D E F 3	3
	たちつてとっ 4	タチツテトッ 4	g h i G H I 4	4
	なにぬねの 5	ナニヌネノ 5	j k l J K L 5	5
	はひふへほ 6	ハヒフヘホ 6	m n o M N O 6	6
	まみむめも 7	マミムメモ 7	p q r s P Q R S 7	7
	やゆよやゆよ 8	ヤユヨヤユヨ 8	t u v T U V 8	8
	らりるれろ 9	ラリルレロ 9	w x y z W X Y Z 9	9
	わをんわー (Half-pitch Space) 0	ワランワ*1ー (Half-pitch Space) 0	(Half-pitch Space) 0	0
				[Press and hold] + *2

*1 っ is available only in full-pitch katakana mode.

*2 + is available only in half-pitch numbers mode.

Key	Input Modes			
	Kanji (Hiragana) [Full Pitch]	Katakana [Full/Half Pitch]	Alphanumerics [Full/Half Pitch]	Numbers [Full/Half Pitch]
	Symbol List/Pictograph List	ゝ 〃	Symbol List/ Pictograph List	✕
	[Press and hold] Template List		[Press and hold] Mail Address & URL List* ³	
	ゝ 〃 ! ?		, ! ? ¥ & () ✕ # " ' = ^ + ;	# - , ! ? ¥ & () " ' = ^ + ;
	Toggle Input modes			
		[Press and hold] Toggle half-pitch and full-pitch characters		
	Line Break/Scroll Backward* ⁴			Line Break
	Toggle upper and lower case characters* ⁵			
	Delete one character after cursor (Delete one character before cursor when cursor is at the end of a sentence)			
	[Press and hold] Delete all characters after cursor (Delete all characters before cursor when cursor is at the end of a sentence)			

*3 Parts of mail addresses or URLs appear

*4 Toggle characters in reverse order (When cursor is at **c** : c → b → a → 2 ...)


*5 Toggle upper and lower case characters at cursor

Entering Characters

Entering Kanji, Hiragana & Katakana

Example: Enter ネコの鈴


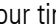
1 In alphanumerics mode,


 three times to switch to half-pitch katakana mode

● To enter full-pitch katakana:



Press and hold 







2 Press  four times →  five times
ネ is entered.

3  three times to switch to kanji (hiragana) mode






4  five times → 
の is entered.

5  three times →
 to move cursor* →
 three times → 

すす is entered.


* When the next character is on the same key, move cursor first.




6  →  to select 鈴 → 
鈴 is entered.

Predictive Conversion in Kanji (Hiragana) Mode

There are three types of word suggestion list: **All**, **Normal** and **Prediction** (P.3-9).

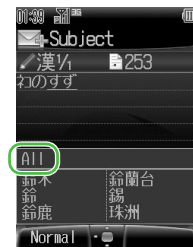

Toggling Assigned Characters in Reverse



Example: when cursor is at c, press  to toggle as follows:
c → b → a → 2...


3

Text Entry

Small Kana (っ, ッ, etc.)

Example: Enter small hiragana っ


Step	1	2
Key	 (3 times)	
Display	っ	っ

- Press  to fix the word.
- Alternatively, press a key repeatedly to enter an assigned small kana.


Adding ˆ or ˆ

Example: Enter hiragana ば or ぱ



Step	1	2	3	4
Key				
Display	ば	ぱ	ぱ	ば



- Press  to fix the word.
- In half-pitch katakana mode, ˆ and ˆ are counted as one half-pitch katakana.

Line Break

1  to insert line breaks in text


Space

Space at the end of text	
Space within text	Press  repeatedly until half-pitch space appears





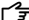

- Press  to fix the space within text in kanji (hiragana) mode.
- Alternatively, use Symbol List for full-pitch or half-pitch space ( P.3-7).
- Space cannot be entered within text in number mode.


Entering Alphanumerics

Enter full-pitch or half-pitch alphanumerics.

- For input modes and character type:  P.3-2

Example: Enter **Call** in alphanumerics mode

Step	1	2	3	4	5	6
Key	 (3 times)			 (3 times)	 *	 (3 times)
Display	c	C	Ca	Cal	Cal	Call

* When the next character is on the same key (example: entering a then b), press  first to move cursor.

Symbols & Pictographs




- 1** In kanji (hiragana) or alphanumerics mode,








Symbol List appears.

 to toggle Symbol List and Pictograph List.


Log List may appear first.




- 2  to select a list →  to select a symbol or pictograph → 

- Symbol List:  P.18-21
- Pictograph List:  P.18-22
- Alternatively, press  or  to toggle lists.

- 3  **[Close]** to close list

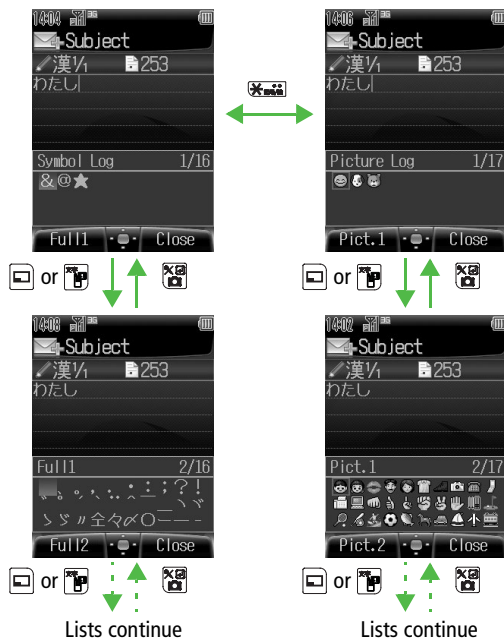Symbol & Pictograph Log Lists



Alternatively, follow the steps to open Symbol or Pictograph List: [Menu] → *Insert* →  → *Symbol* or *Pictograph* → 

Mail & Web Extensions

Open a list to quickly enter the followings, parts of mail address or URL.

.ne.jp	.or.jp	http://www.
.co.jp	.com	https://www.

- 1 In alphanumeric mode, press and hold
- 2 Select an extension →
Mail addresses and URLs are half-pitch.

Templates

Insert saved text into text entry windows.

- 1 In kanji (hiragana) or katakana (full-/half-pitch) mode, press and hold
- 2 Select a template →



- Alternatively, follow the steps to open Template List:
 [Menu] → *Insert* → → *Templates* →
- Save frequently used phrases to Templates folder
(👉 P.10-18).

Character Code

Use 4-digit character code (Kuten Code) to enter Kanji.

- 1 In a text entry window, [Menu] → *Input Options* →
- 2 *Kuten Code* → → Enter Kuten Code
(👉 P.18-13) →

Copying from Phone Book & My Details

Insert entry items into text entry windows.

- Select from Last/First Name, Phone Number 1-3, Email Address 1-3, Address and Note.
- 1 In a text entry window, [Menu] → *Insert* → → *Phone Book Data* or *My Details* →
 - When *My Details* is selected, go to Step 3.
 - 2 Select a Phone Book entry →
 - 3 Select an item →

Conversion Methods (Japanese Only)

Predictive Conversion

The following suggestion lists appear while entering text or after a word is fixed.

While Entering Text	
All	Show candidates likely to convert (Predictive Candidates) and matching candidates (Normal Candidates) Example for Predictive Candidates: わ → 私は, わかった, etc. Example for Normal Candidates: わ → 和, 輪, etc.
Normal	Show matching candidates Example: わ → 和, 輪, etc.
After a Word is Fixed	
Prediction	Candidates likely to follow entry Example: 私 is fixed → です, の, は, etc.

- Press [All]/[Normal] to toggle All List and Normal List.
- Log of candidates selected in Predictive Candidates can be cleared (P.3-10).
- Prediction List can be cancelled (P.3-10).

Using Predictive Conversion

Example: Enter 私の飴


- 1 In kanji (hiragana) mode,

わ is entered and All List appears.



- 2 to select 私 in All List →
私 is entered and Prediction List appears.

- 3 to select の in Prediction List →
の is entered and Prediction List appears.

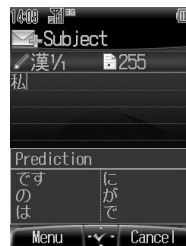

- 4 → four times
あめ is entered and All List appears.

- 5 [Normal]
Normal List appears.


3

Text Entry



- 6  to select 飴 in Normal List → 



If the Word is not Listed

Press  to return to hiragana, and segment hiragana to convert separately.

Example: Segment はるか into はる and か, then convert to 春香

1. Move cursor to る, then convert はる to 春 → 
2. Convert か to 香 → 

Using Previously Entered Words

Enter the first one or two hiragana to access previously entered words in the list.






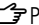
Entering Alphanumerics in Kanji (Hiragana) Mode

Enter hiragana and press  to open All List.

Example: To enter a,  →  to open All List →  to select a → 





Resetting Learned Words

Clear log of words selected in kanji conversion.

- 1 In a text entry window,  [Menu] → *Input Options* → 
- 2 *Reset Learned Words* → 
- 3  [YES]
- 4 Enter 4-digit Handset Code → 
 - Handset Code:  P.1-26

Activating/Cancelling Prediction List









[Default] ON

- 1 In a text entry window,  [Menu] → *Input Options* → 
- 2 *Context Prediction* →  → *ON* or *OFF* → 










User's Dictionary

Save frequently used words/phrases (up to 100 entries). Assign a reading (keyword) in hiragana to each entry. In text entry windows, enter a reading and convert. Saved words/phrases appear among word suggestions.

Adding Entries

- 1 In a text entry window,  [Menu] → *Input Options* → 
- 2 *User's Dictionary* → 
- 3  [New Entry]
 - When entries exist:  [Menu] → *New Entry* → 
- 4 Enter a word/phrase → 
 - Enter up to 20 characters including symbols and pictographs per word/phrase.
- 5 Enter a reading → 
 - Enter up to ten full-pitch hiragana.


Editing/Deleting Entries

- 1 In a text entry window,  [Menu] → *Input Options* → 
- 2 *User's Dictionary* →  → Select an entry →  [Menu]
- 3 **Edit**
Edit →  → Edit word →  → Edit reading → 
Delete
Delete One or *Delete All* →  → 


Editing Text

Deleting & Replacing


1 Delete Characters within Lines

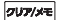Place cursor before a character → 


A character after cursor is deleted.

- Press and hold  to delete all characters after cursor.

Delete Characters from the End of Text

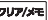Place cursor at the end of text → 







A character before cursor is deleted.

- Press and hold  to delete all characters before cursor.

2 Enter another character

Copy/Cut & Paste

Copy or cut and paste text into the same window or another.

- 1 In a text entry window,  [Menu] → *Copy* or *Cut* → 
- 2 Place cursor before (or after) text to copy/cut →  → Place cursor after (or before) text to copy/cut → 
- 3 Place cursor at target location to paste text →  [Menu] → *Paste* → 


Phone Book

Overview

Save frequently used phone numbers and mail addresses to Phone Book.

Supplement phone numbers and mail addresses with birthday, street address, an image or notes.

- Phone Book entries can be sent to other devices via Infrared (☞ P.11-2) or Bluetooth® (☞ P.11-4).

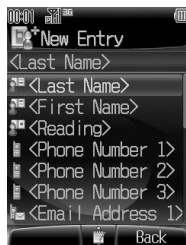

Service Dial


Saved on compatible USIM Cards; dial for services.

Main Menu ► **Phone Book** ► **Service Numbers**

► Select a service

- For details, contact the service providers.

Set tones/image for each entry.

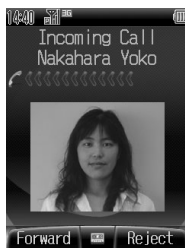

Sort entries into Groups.



Back-up Important Information

Keep a separate copy of Phone Book entry information. When battery is exhausted or removed for extended periods, entries may be lost. Handset damage may also affect information recovery. SoftBank is not liable for damages from lost/altered entries.

Saving to Phone Book

Phone Book Entry Items


Save up to 500 entries in Phone Book. Save phone numbers or mail addresses etc. in USIM Card Phone Book (maximum number of savable entries varies by card).


Item	Description	705P	USIM Card
Last Name/ First Name	Enter last name and first name. When saving to USIM Card, enter both last name and first name in Name .	<input type="radio"/>	<input type="radio"/>
Reading	Automatically entered when Last Name and First Name are entered. Reading can be edited. Search Phone Book by Reading.	<input type="radio"/>	<input type="radio"/>
Phone Number	Enter phone numbers	<input type="radio"/>	<input type="radio"/>
Email Address	Enter mail addresses	<input type="radio"/>	<input type="radio"/>
Birthday	Enter birth date	<input type="radio"/>	-
Address	Enter postal code, country, state/province, city, street address, additional information	<input type="radio"/>	-
Note	Add personal details	<input type="radio"/>	-
Voice Call Ringtone	Set incoming Voice Call ringtone	<input type="radio"/>	-
Video Call Ringtone	Set incoming Video Call ringtone	<input type="radio"/>	-
Message Ringtone	Set incoming message ringtone	<input type="radio"/>	-
Illuminations	Set incoming call/message light colour	<input type="radio"/>	-
Picture	Save a still image to appear for incoming calls ● Saved still image may not appear while using other functions	<input type="radio"/>	-
Group	Sort Phone Book entries by groups. Group names can be changed (☞ P.4-7).	<input type="radio"/>	<input type="radio"/>
Secret Setting	Restrict access to Phone Book entries by saving them as Secret Mode entries. When Secret Setting is set to Hide , activate Secret Mode to open Secret Mode entries (☞ P.12-6).	<input type="radio"/>	-

Create New Entry







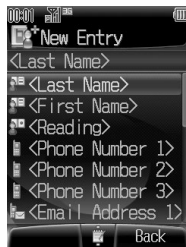



Phone Book Entries





















Main Menu ► Phone Book ► Create New Entry

1 Select an item → 



2 Follow the steps below

	Last Name* ¹	Enter up to 25 half-pitch alphanumerics* ² → 
	First Name* ¹	Enter up to 25 half-pitch alphanumerics* ² → 
	Reading	Entered automatically (up to 25 half-pitch alphanumerics)* ³ . To edit: Edit Reading → 
	Phone Number 1-3* ¹	Enter up to 40 digits* ⁴ each → 
	Email Address 1-3* ¹	Enter up to 48 alphanumerics each → 


	Birthday	Enter birth date → 
	Address	<i>Postal Code, Country, State, City, No./street</i> or <i>Additional Info</i> →  → Enter text →   [OK] to exit Address field
	Note	Enter up to 32 characters → 
	Voice Call Ringtone	<i>Follow General Setting</i> * ⁵ or select from <i>Sounds</i> or <i>Music</i> → 
	Video Call Ringtone	
	Message Ringtone	
	Illuminations	<i>Follow General Setting</i> * ⁶ or select a colour → 
	Picture	Select a still image → 
	Group	Select a Group → 
	Secret Setting	<i>Show</i> or <i>Hide</i> → 


*1 To save an entry, enter at least one of the fields

*2 12 full-pitch characters

*3 12 half-pitch katakana

*4 41 digits when including + (International Code)

*5  P.7-7 "Ringtones"


*6  P.8-2 "Illuminations"

3  [Save]











USIM Card Phone Book Entries

- Set **Save New Entry** to **USIM** or **Ask Each Time** beforehand (☞ P.4-11).

Main Menu ► Phone Book ► Create New Entry (► USIM)

1 Select an item → 

2 Follow the steps below

	Name* ¹	Enter up to 25 half-pitch alphanumerics* ² → 
	Reading	Entered automatically (up to 25 half-pitch alphanumerics)* ³ . To edit: Edit Reading → 
	Phone Number 1* ¹ -2	Enter up to 40 digits* ⁴ each → 
	Email Address* ¹	Enter up to 48 alphanumerics → 
	Group	Select a Group → 

*¹ To save an entry, enter at least one of the fields

*² 12 full-pitch characters

*³ 12 half-pitch katakana

*⁴ 41 digits when including + (International Code)

3  [Save]






Emergency numbers (110, 119, 118) cannot be saved in Phone Book.

Saving from Call Log


Save phone numbers from Call Log to Phone Book.

1 In Standby,  →  to toggle Call Logs

2 Select a record →  [Menu] → **Add to Phone Book** → 

3 **New Entry**
Create New Entry →  → Add name, etc.

Add to Existing Entry

Select a Phone Book entry → 

- If Phone Number fields are all filled, message appears asking whether to overwrite existing number.









To overwrite:  → Select a number → 

4  [Save]

Saving from Mail/SMS

Save phone numbers or mail addresses from received Mail/SMS to Phone Book.

Main Menu ► Messaging ► Received Messages


- 1 Select a folder → 
- 2 Select a message →  [Menu] → **Add Sender to Phone Book** → 
- 3 **New Entry**
Create New Entry →  → Add name, etc.
Add to Existing Entry
 Select an entry → 
 - If Phone Number/Email Address fields are all filled, message appears asking whether to overwrite existing number/mail address.
 To overwrite:  → Select a number/address → 
- 4  [Save]

Phone Book Memory Status

View number of savable Phone Book entries and existing Phone Book entries.

**Main Menu ► Phone Book
 ► Manage Phone Book ► Memory Status**

Example:

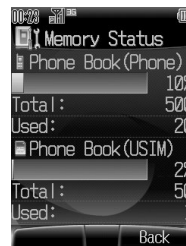


Group Settings

- Group name can be changed.
- Groups in Phone Book or USIM Card Phone Book appear according to View from setting (☞ P.4-11).





View Group/Group Members

Main Menu ► Phone Book ► Group

- 1 To view Group members, select a group → 

Changing Group Name

Main Menu ► Phone Book ► Group

- 1 Select a group →  [Rename]
 - When **View from** is set to **Phone & USIM** (☞ P.4-11): Select a group →  [Menu] → **Rename** → 
- 2 Enter a Group name → 

Switching Between 705P & USIM Card



When **View from** is set to **Phone & USIM** (☞ P.4-11), follow these steps to switch view.

 [Menu] → **Phone Groups** or **USIM Groups** → 


Using Phone Book


Making Calls from Phone Book


Phone Book opens in A-KA-SA-TA-NA search mode by default.

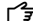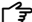
- To select Phone Book:  P.4-11
- To change search mode:  P.4-9

1 In Standby, 

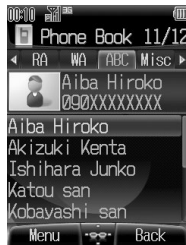





2  to select a page of the required reading.







3 Select an entry → 

4 Select a number → 

Making Video Calls/International Calls

After selecting a phone number in Step 4,  [Menu] → **Call** →  → **Video Call** or **International Call** →  → Select a country for international call → 

Making Calls after Setting to Show/Hide Your Number

After selecting a phone number in Step 4,  [Menu] → **Call** →  → **Show Number** or **Hide Number** →  →  [Menu] → **Call** →  → **Voice Call** or **Video Call** → 

Phone Book Search Method

[Default] A-KA-SA-TA...


Search for an entry using one of these search methods:
A-KA-SA-TA-NA, Reading or Group.

Main Menu ► Phone Book


► Phone Book Settings ► Search Method

1 **A-KA-SA-TA...**, *Reading* or *Group* → 



Searching Entries by Reading


In Standby,  → Enter a Reading →
Select an entry

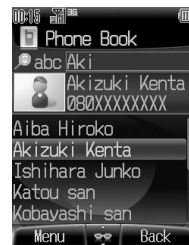- Entries beginning with designated character appear.



Searching Entries by Group

In Standby,  → Select a Group → 
→ Select an entry

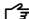- To change Group names:  P.4-7


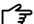






4

Phone Book

Sending Phone Book Entries

Send Phone Book entries to other compatible devices wirelessly via Infrared or Bluetooth®.

- Infrared:  P.11-2
- Bluetooth®:  P.11-4


- 1  → Select an entry
- 2  [Menu] → *Send* → 
- 3 *Infrared* or *Bluetooth* → 



The following data cannot be sent: Ringtone, Illumination, Picture, Secret setting, etc.






Speed Dial

Set phone numbers to Speed Dial for easy dialling.



- Voice Mail Centre number is preset to  and cannot be changed.

Saving Phone Numbers

Main Menu ► Phone Book
► Phone Book Settings ► Speed Dial

- 1 Select a key (2-9) →  [PhoneBook] → Select an entry →  → Select a number → 
 - To enter phone number directly: Select a key →  → Enter a number → 

Using Speed Dial

- 1 In Standby, press and hold  - 
When unassigned numbers are pressed, Entry window appears.


Phone Book Settings

View from

[Default] Phone

Select Phone Book to open.

Main Menu ► Phone Book
► Phone Book Settings ► View from


- 1 **Phone, USIM** or **Phone & USIM** → 
 - Select **Phone & USIM** to see entries in both.
 - Depending on the Save New Entry setting (☞ right), selecting **Phone** or **USIM** may prompt a **Change save location as well?** confirmation to appear.

Save New Entry

[Default] Phone







Select Phone Book memory for new entries.

Main Menu ► Phone Book
► Phone Book Settings ► Save New Entry

- 1 **Phone, USIM** or **Ask Each Time** → 
 - Select **Ask Each Time** to select target each time you save an entry.

Editing Phone Book Entries

Correction/Change



- 1 In Standby,  → Select an entry
- 2  [Menu] → *Edit* → 
- 3 Select an item →  → Edit → 
 - Repeat this step to edit other items.
- 4  [Save]

The entry is overwritten.

Deleting Birthday/Picture






In Step 3, select Birthday/Picture field →  [Menu] → *Delete* → 

Deleting All Items in Address

In Step 3, select Address field →  [Menu] → *Address All Clear* → 

Deleting Phone Book Entries




Deleting One by One

- 1 In Standby,  → Select an entry
- 2  [Menu] → *More* → 
- 3 *Delete* →  → 

Deleting All Entries

Main Menu ► Phone Book

► Manage Phone Book ► Delete All (Phone)

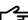





- 1  [Yes] → Enter 4-digit Handset Code → 
 - Handset Code:  P.1-26

Copying Phone Book Entries

Copy all or individual entries between 705P and USIM Card.

- Entry items unsupported by USIM Card are not copied.

Copying One by One

- 1 In Standby,  → Select an entry
- 2  [Menu] → *More* → 
- 3 **Copy from USIM Card to Handset**
Copy to Phone → 
Copy from Handset to USIM Card
Copy to USIM →  → 

Copying All Entries

Main Menu ► **Phone Book**

► **Manage Phone Book**

1 **Copy All from USIM Card to Handset**

Copy All from USIM →  → 

Copy All from Handset to USIM Card

Copy All to USIM →  → 

Memory Card Backup

Back up Phone Book on Memory Card; should Phone Book content be lost/alterd, restore it from Memory Card.

- For operations:  P.10-22



Restoring Phone Book deletes all current content.



My Details

Save phone number, mail address, street address, etc. in My Details; send to other handsets or PCs via Infrared or Bluetooth®.

Editing My Details




- Phone Number 1 cannot be edited or deleted.

Main Menu ► Phone Book ► My Details



1  [Menu] → *Edit* → 

2 Edit →  [Save]



Deleting Items Except Phone Number 1

In Step 1,  [Menu] → *Reset* →  → 

Sending My Details

- Infrared:  P.11-2
- Bluetooth®:  P.11-4

Main Menu ► Phone Book ► My Details

1  [Menu] → *Send* → 

2 *Infrared* or *Bluetooth* → 



Picture cannot be sent.


Video Call

Getting Started


Exchange video/sound with video call-compatible mobiles.

- Send Outgoing Image via Outside Camera.







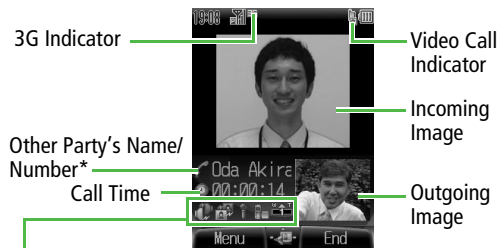















Note

- Only available within 3G network coverage ( appears).
- 705P is 3G-324M compliant; calls connected via different systems may be disconnected (charges apply).
- Increasing Speaker volume may cause interference. Decrease volume or use Headphone.
- Handset may become warm during Video Call. This is not malfunction.

Video Call Window



Indicators






 Incoming Sound OK	 Outgoing Image NG
 Outgoing Sound OK	 Incoming Image OK
 Outgoing Sound NG	 Incoming Image NG
 Incoming Sound NG	 Outgoing Image NG
 Outgoing Sound NG	 Microphone ON
 Incoming Sound OK	 Microphone OFF
 Incoming Sound NG	 Video ON
 Outgoing Sound NG	 Alternative Image ON
 Incoming Image OK	
 Outgoing Image OK	
 Outgoing Image NG	
 Incoming Image NG	 -  Zoom Level (1-25)

*  appears during a Bluetooth® handsfree call.

Making Video Calls

Before Calling...

In Standby

- Confirm signal strength (☞ P.1-12)
- Confirm  appears
- If any of these indicators appear
    → Video Calls cannot be made (☞ P.18-10)


1 Enter number with area code

2 Confirm the number, then


Outgoing image appears. When answered, incoming image appears. The other party's voice is transmitted via Speaker.

- Video Call Window: ☞ P.5-2
- Video Call Operations: ☞ P.5-5

3 to end call

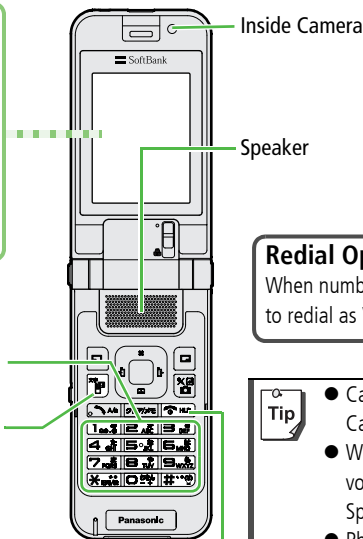

Redial Options

When number is busy, redial options appear; select to redial as Voice Call or Video Call and press .



- Call numbers in Phone Book (☞ P.4-8) or Call Log (☞ P.2-12).
- When Manner mode is active, other party's voice is transmitted via Earpiece. Activate Speaker (☞ P.5-5).
- Phone Book takes a moment to open just after turning 705P on; if a Video Call is made at this time, number appears even if saved in Phone Book.

Answering Video Calls

When a Video Call Arrives...

Caller's phone number or name appears on Display and External Display.




1 or

2 **Send Outgoing Image**

[YES]

Inside Camera Image is sent.

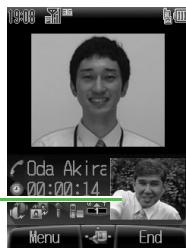

Send Alternate Image

[NO]

Alternative Image is sent.



3 to end call

Placing an Incoming Call on Hold

Press while receiving a Video Call.

The other party's image appears and Alternative Image is sent. To answer, press [Accept].



Rejecting Calls

Press [Reject].





- When no image is selected, Alternative Image is sent.
- When Manner mode is active, the other party's voice is transmitted via Earpiece. Activate Speaker (P.5-5).
- Phone Book takes a moment to open just after turning 705P on; if a Video Call is received at this time, number appears even if saved in Phone Book; Ringer and Illumination follow general settings and no picture appears.

Video Call Operations

Earpiece Volume




[Default] Level 4

- 1 During a call,  (increase) or  (decrease)
Volume level appears at lower left corner.

Speaker

Switch Speaker ON and OFF.

- 1 During a call,  [Menu] → **Speaker ON** or **Speaker OFF** → 

 When using a Bluetooth® handsfree device,  [Menu] → **Change to Bluetooth, Speaker ON (Phone)** or **Speaker OFF (Phone)** → 

Mute

Mute handset microphone.






- 1 During a call, 
 appears in Voice Call window.
● To cancel Mute:  again

Image & Sound Settings

[Default] All ON

Change outgoing image and sound settings.

- 1 During a call, 
- 2 Select a setting → 

All ON	Send live video image and sound
My Video OFF	Send Alternative Image and sound
Mute My Voice	Send live video image only
All OFF	Send Alternative Image only

Camera Zoom

Zoom outgoing image in or out.


- Zoom level: Inside Camera (1-3)/Outside Camera (1-25)

- 1 During a call,  (zoom in) or  (zoom out)

Camera Priority

[Default] Inside Camera

Toggle Inside Camera and Outside Camera.

- 1 During a call, 





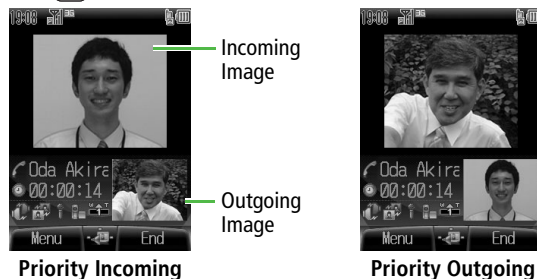


Image Priority

[Default] Priority Incoming

Toggle incoming image and outgoing image.

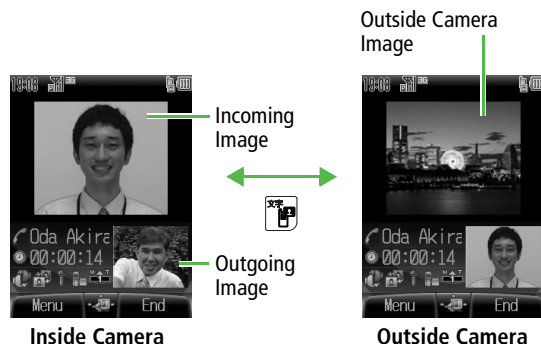



- 1 During a call,  [Menu] → **Switch Screens** → 
- 2 **Priority Incoming** or **Priority Outgoing** → 



White Balance

[Default] Automatic

Adjust outgoing image colour temperature.

- 1 During a call,  [Menu] → **Settings** → 
- 2 **White Balance** →  → **Automatic, Fine, Cloudy** or **Light Bulb** → 

Opening Phone Book

Open Phone Book during a call.

- Phone Book entries cannot be called or edited.

1  [Menu] → **View Phone Book** → 


- Phone Book:  P.4-1

Creating a Text Memo

Enter up to 40 digits during a call. View after call ends, call entered phone numbers.

- Available keys:  -   

1 During a call, enter a phone number, etc.
Entered digits appear in lower left of Video Call window.

2 To end call, 
Entered digits appear.

3 **Make a Voice Call**



Make a Video Call




Video Call Settings

Image & Sound Settings





[Default] All ON

Select outgoing image and sound settings.

Main Menu ► **Settings** ► **Video Call**
► **Video & Voice**

1 Select a setting → 

All ON	Send live video image and sound
My Video OFF	Send Alternative Image and sound
Mute My Voice	Send live video image only
All OFF	Send Alternative Image only

 To change settings during a call, press  or  [Menu] → **Video & Voice** → , then follow steps above.

5

Video Call




Backlight Settings

[Default] Brightness: Level 3
/Backlight Time: Always ON

Set Display backlight brightness and duration.

Main Menu ► Settings ► Video Call
► Backlight

1 Brightness




Brightness →  →  to adjust brightness
(Level 1-3) → 

Backlight Time

Backlight Time →  → *Always ON,*
Follow General Setting or *Always OFF* →



- Select **Follow General Setting** to apply Display Backlight setting (👉 P.7-6).

Tip To change settings during a call,  [Menu] → **Settings**
→  → **Backlight** → , then follow steps above.




Incoming Video Quality

[Default] Standard

Adjust incoming video image quality.

Main Menu ► Settings ► Video Call
► Incoming Video Quality

1 *Standard, Motion Prioritized* or *Quality Prioritized* →

Tip To change settings during a call,  [Menu] → **Settings**
→  → **Incoming Video Quality** → , then follow steps above.

Alternative Image

Select a file for Alternative Image.

Main Menu ► Settings ► Video Call
► Alternative Picture

1 Select a file →

Camera

Before Using Camera

705P features Two Mega Pixel CMOS Camera capable of capturing still images and videos. Send still images/videos via Mail, or use still images as wallpaper.

Image File Formats

Image Type	File Format	Save Location
Still images	JPEG (.jpg)	Data Folder (Pictures)
Videos	MPEG-4 (.3gp)	Data Folder (Videos)



- Save images directly to Memory Card (P.6-12).
- To confirm memory: P.10-5 "Memory Status"

Notes

- Remove dust/debris from lens cover with a soft cloth.
- Handset movement may blur images; hold 705P firmly.
- Capturing/saving images immediately after 705P has been left in a hot place may affect image quality.
- Exposing lens to direct sunlight may affect image quality.
- Illumination Light flashes when shutter is released, while preview window appears, etc.

Shutter Click

- Shutter click sounds even in Manner mode. Volume cannot be changed.
- Change shutter click sound (P.6-12).

Incoming Calls/Alarm/Low Battery while Using Camera


- Camera is not available when battery is low.
- Incoming calls, Alarm and low battery cancel Camera. Captured images are saved.


Auto Shut-off



- When left in preview or review mode for three minutes, Camera is cancelled and previous window returns.

Outside & Inside Camera

Select Outside Camera or Inside Camera. Inside Camera is useful for capturing self-portraits.

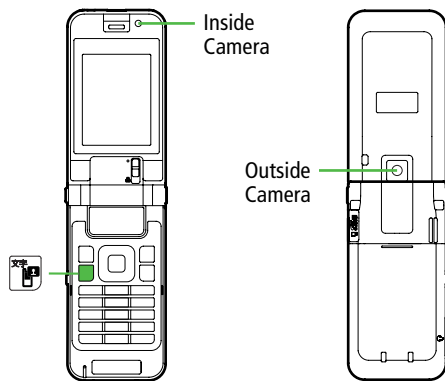Press  to toggle cameras; unless expressly noted, most Camera operations are described for Outside Camera.



- Inside and Outside Camera cannot be active simultaneously.
- Alternatively,  [Menu] → ***Toggle Inside/Outside Camera*** → 

Key Assignments

Press the designated key to execute the assigned function.

- Press  to open key assignment guide.

Keys	Camera	Video Camera
	Zoom In	
	Zoom Out	
	Activate Video Camera	Activate Camera
	Release Shutter	Start Recording
	Toggle Memory Location	
	Toggle Picture Size	Toggle Recording Time
	Toggle Quality	
	Activate Multi Shot	-
	Activate Self-Timer	
	Activate Night Mode	-
	Toggle Effect	
	Toggle White Balance	
	Help	
	Darken Image	
	Brighten Image	
	Toggle Inside/Outside Camera	
	Press and Hold to activate Photo Light	

Camera Display Indicators

Main Menu ► Camera ► Camera Tab

Picture Preview Window

Zoom (P.6-6)

W T - W T Level 1-25

to zoom in to zoom out

Save to

Phone Memory Card

1 to toggle setting

Picture Size (P.6-6)

1600 1200 UXGA	1280 960 SXGA
640 480 VGA	320 240 QVGA
160 120 QQVGA	Wallpaper

2 to change picture size

Quality

S FINE Super Fine	N Normal Normal
F FINE Fine	

3 DEF to toggle setting

Camera Tab



White Balance (P.6-12)

Automatic	Fine
Cloudy	Light Bulb

to change mode

Photo Light (P.6-11)

ON

Press and hold to turn ON/OFF

Brightness

Level -2 - +2

Darker Brighter

Effect (P.6-12)

to toggle setting

Night Mode (P.6-12)

ON

to toggle ON and OFF

Multi Shot (P.6-10)

ON

4 to toggle ON and OFF

Self-Timer (P.6-11)

5 seconds 10 seconds

to toggle setting

Video Preview Window

- Change settings before capture.

Zoom (P.6-8)

Level 1-25

to zoom in to zoom out

Save to

Phone Memory Card

to toggle setting


Quality (P.6-8)

Super Fine
Fine
Normal

- Available only when Recording Time is set to **Extended Video**.

to toggle setting

Video Camera Tab

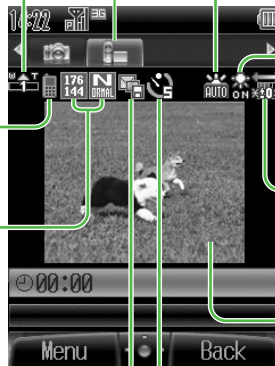

Recording Time (P.6-8)

Extended Video
For mail sending

to toggle setting

White Balance (P.6-12)

Automatic **Fine**
Cloudy **Light Bulb**

to change mode

Photo Light (P.6-11)

ON

Press and hold to turn ON/OFF

Brightness

Level -2 - +2

Darker **Brighter**

Effect (P.6-12)

to toggle setting

Self-Timer (P.6-11)

5 seconds

10 seconds

to toggle setting

Pictures

Camera

Camera	Picture Size	Zoom		Quality	Attachment	File Format	Storage
		Level	Ratio* ¹				
Outside	UXGA (1600x1200)	1 - 2	2.0x	Super Fine /Fine /Normal	Available (Up to 290 KB)	JPEG (.jpg)* ²	Approx. 400* ³
	SXGA (1280x960)	1 - 3	2.0x				
	VGA (640x480)	1 - 25	4.3x				
	QVGA (320x240)	1 - 25	6.0x				
	QQVGA (160x120)	1 - 25	9.7x				
	Wallpaper (240x320)	1 - 25	3.0x				
Inside	CIF (352x288)	1 - 2	2.0x				
	QCIF (176x144)	1 - 3	4.0x				

*1 All Zoom Ratio values are approximates.

*2 Files are automatically named "picture0001.jpg", "picture0002.jpg", etc. unless changed.

*3 Number of images captured in default settings (Picture Size, Quality) and saved to 705P.


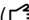



- Activate Night Mode when shooting in low light (P.6-12).
- Pictures folder shares memory with Videos, Sounds, S! Appli, etc. in Data Folder. Saved videos, S! Applications, etc. reduce available memory for still images.
- The number of images that can be saved to Memory Card depends on the capacity of the card in use.

Capturing Still Images

Main Menu ► Camera ► Camera Tab

Before Image Capture...

- Confirm active camera
(To toggle cameras: )
- Confirm settings ( P.6-4)

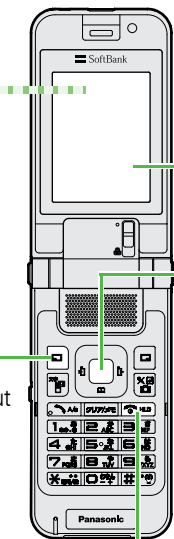

1 Frame subject

2  to capture the image

3 To save the image,





- To return to Preview window without saving the image:  [Delete]
- Attach image to Mail:  P.6-14

4  to exit

Return to Standby.



- When designated memory ( Save to: P.6-12) is full, image is saved to alternate location automatically. When memory is insufficient, Data Folder opens; delete unneeded files to make room for the image.
- When **Auto Save** is **ON** ( P.6-12), images are saved automatically.

Videos

Video Camera

Record longer clips (maximum size depends on Memory Card capacity) or short clips for Mail attachments.

Camera	Recording Time* ¹			Quality	Zoom		File Format	Storage Capacity
		Handset	Memory Card		Level	Ratio* ²		
Outside	For Mail Sending	30 seconds	30 seconds	Normal (176x144)	1 - 25	7.9x	MPEG-4 (.3gp)* ³	Approx. 40* ⁴
	Extended Video	160 seconds	60 minutes	Normal (176x144)	1 - 25	7.9x		
		85 seconds	60 minutes	Fine (176x144)	1 - 25	7.9x		
		30 seconds	45 minutes	Super Fine (352x288)	1 - 25	3.4x		
Inside	For Mail Sending	30 seconds	30 seconds	Normal (176x144)	1 - 3	4.0x		
	Extended Video	160 seconds	60 minutes	Normal (176x144)	1 - 3	4.0x		
		85 seconds	60 minutes	Fine (176x144)	1 - 3	4.0x		
		30 seconds	45 minutes	Super Fine (352x288)	1 - 2	2.0x		

*1 All Recording Times are estimates.

*2 All Zoom Ratio values are approximates.

*3 Files are automatically named "video0001.3gp", "video0002.3gp", etc. unless changed.

*4 Number of video files recorded in default settings (Outside, For mail sending) and saved to 705P.




- Record video in well-lit conditions.
- Videos folder shares memory with Pictures, Sounds, S! Appli, etc. in Data Folder. Saved still images, S! Applications, etc. reduce available memory for videos.
- The number of files that can be saved to Memory Card depends on the capacity of the card in use.

Recording Videos



- Confirm battery strength (☞ P.1-12) and memory (☞ P.10-5) before recording. When battery is low, video cannot be recorded.

Main Menu ► Camera ► Video Camera Tab

Before Image Capture...


- Confirm active camera
(To toggle cameras: )
- Confirm settings (☞ P.6-5)

4 To save the video clip, select *Save to Data Folder* →

- To return to Preview window without saving the image:  [Back]
- To review clip: *Playback* → 
- Attach file to Mail: ☞ P.6-15

5 to exit

Return to Standby.

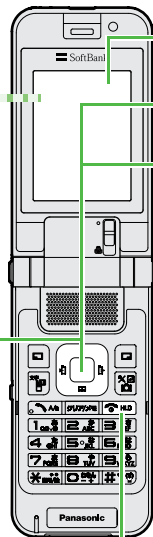


1 Frame subject

2 to start recording

3 to end recording

- Recording stops automatically at maximum recording time.




- Settings cannot be changed while recording.
- If *Save to* is set to **Memory Card** (☞ P.6-12), file is saved to Memory Card automatically. To delete the saved file, select *Delete* → .
- When designated memory (☞ Save to: P.6-12) is full, file is saved to an alternate location automatically. When there is not enough memory there, Data Folder opens; delete unneeded files to make room for the file.
- When **Auto Save** is **ON** (☞ P.6-12), files are saved automatically.



Other Camera Functions


Continuous Shooting


Capture a succession of 15 still images automatically with a single press.

- Picture size is fixed to **QVGA (320x240)** for Outside Camera and **QCIF (176x144)** for Inside Camera.
- In Multi Shot mode, press  to capture 15 images automatically at a fixed interval.
- When **Multi Shot** is **ON**, Night mode is set to **OFF** automatically.

Main Menu ► Camera ► Camera Tab


1  [Menu] → **Multi Shot** → 



2 **ON** → 

3 Frame subject → 


Captured images appear as thumbnails.

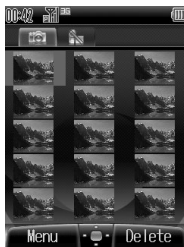- To stop capture:  [Cancel]



4 To view captured images,  to select an image → 




Full-size image appears.

-  to toggle full-size images.

5 **Save All Images**

 [Menu] → **Save All Pictures** → 

Save Individual Images

 to select an image →  [Menu] → **Save This One Only** → 

Return to Preview window; Multi Shot is OFF.

 
6  to exit

Macro

Capture images from as close eight centimetres.

1 Slide Portrait/Macro Selector to (📷)

- Return selector to (📷) after shooting.



Self-Timer

Main Menu ► Camera

► Camera or Video Camera Tab

1 [Menu] → *Self-Timer* →

2 *5 seconds* or *10 seconds* →

3 Frame subject →

After 5 or 10 seconds, shutter is released and recording starts.

- To end recording:

4 **Save a Still Image**

[Save]

Save a Video Clip

Save to Data Folder →


5 to exit



- When Self-Timer is active, [Cancel] to return to Preview window without cancelling Self-Timer.
- Incoming Calls or Alarm cancel image capture. Self-Timer is cancelled and previous menu returns.

Photo Light

Use as a strobe when capturing images.

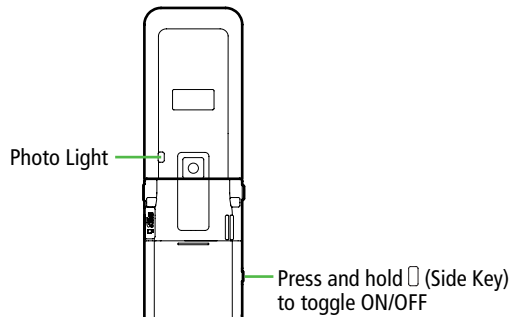

Do not direct Photo Light into people's eyes.



Alternatively, [Menu] → *Photo Light* → → ON or OFF →

Camera Settings

Available options vary by capture mode.

- Select options before capture; use Direct Keys (📖 P.6-3).

Item	Description	Default	
		Camera	Video Camera
Toggle Inside/Outside	Toggle cameras (📖 P.6-3)	Outside	Outside
Picture Size	Select image size (📖 P.6-6)	QVGA (320x240)	*
Quality	Select quality. For Video Camera, this setting is available only when <i>Recording Time</i> is <i>Extended Video</i> (📖 P.6-8).	Fine	Normal (176x144)
Recording Time	Select recording time (📖 P.6-8)	*	For mail sending
Photo Light	Turn Photo Light ON/OFF (📖 P.6-11)	OFF	OFF
Night Mode	Use in low light conditions	OFF	*
Multi Shot	Capture 15 images sequentially (📖 P.6-10)	OFF	*
Effect	Select colour for still images	Normal	Normal
White Balance	Adjust brightness	Automatic	Automatic
Self-Timer	Set Self-Timer (📖 P.6-11)	OFF	OFF
Shutter Sound	Change shutter click sound ● Volume is fixed.	Pattern 1	*
Save to	Select a save location	Phone	Phone
Auto Save	Select whether to save captured images automatically	OFF	OFF

* Not available

Item	Description	Default	
		Camera	Video Camera
Available Memory	The number of savable still images at the specified size and quality. For video, total recording time and maximum available recording time for one file at the specified recording time (<i>Extended Video</i> or <i>For Mail Sending</i>) and quality.	-	-
Reset Defaults	Reset current camera/video camera settings to defaults	-	-
Video Camera/Camera	Toggle Camera and Video Camera	-	-
Help	Open key assignment guide (P.6-3)	-	-

Main Menu ► Camera

► Camera Tab or Video Camera Tab

1 [Menu] → Select a menu item →

2 Follow the steps below

Toggle Inside/Outside	<i>Outside</i> or <i>Inside</i> →
Picture Size	Select a size →
Quality	<i>Super Fine</i> , <i>Fine</i> or <i>Normal</i> →
Recording Time	<i>Extended Video</i> or <i>For mail sending</i> →
Photo Light	<i>ON</i> or <i>OFF</i> →
Night Mode	<i>ON</i> or <i>OFF</i> →
Multi Shot	From Step 2 on P.6-10

Effect	<i>Normal</i> , <i>Sepia</i> , <i>Monochrome</i> or <i>Negative</i> (for Outside Camera only) →
White Balance	<i>Automatic</i> , <i>Fine</i> , <i>Cloudy</i> or <i>Light Bulb</i> →
Self-Timer	From Step 2 on P.6-11
Shutter Sound	<i>Pattern 1-5</i> →
Save to	<i>Phone</i> or <i>Memory Card</i> →
Auto Save	<i>ON</i> or <i>OFF</i> →
Available Memory	to select picture size ● [Quality] to toggle <i>Normal</i> , <i>Super Fine</i> and <i>Fine</i> .
Reset Defaults	
Video Camera/Camera	Toggle Video Camera and Camera
Help	Open key assignment guide


Viewing Saved Images

Main Menu ► Data Folder

1 Open Pictures

Pictures → 

Open Videos

Videos → 

2 Select a file →

Selected image appears.



Example: Pictures




6

Camera

Opening Pictures Saved on Memory Card

After Step 1, select **To DigitalCamera** () →  → PANA folder → 

Opening Videos Saved on Memory Card

After Step 1, select **To Video Camera** () →  → PRL folder → 

Tip

To edit saved pictures:  P.10-12 "Editing Pictures"

Sending Images

Sending Pictures via Mail

Capture and send pictures via Mail directly.


- Alternatively, attach pictures saved in Data Folder ( P.10-11).

1 Frame subject → →

Mail Composition window opens.

2 Complete and send Mail (From Step 1 on P.15-6)






Pictures over 290KB cannot be attached; resize ( P.10-12).

Sending Video via Mail

Record and send Videos via Mail directly.

- Recording Time must be set to ***For mail sending*** beforehand (☞ P.6-5).

- 1 Frame subject → 
- 2 To end recording, 
- 3 ***Send as Mail*** → 
- 4 Complete and send Mail (☞ From Step 1 on P.15-6)

Display & Sound Settings

Display Settings

Wallpaper

[Default] 湖畔.jpg

Set Data Folder images to appear in Standby. Use images downloaded via Yahoo! Keitai.

Main Menu ► Settings ► Display Settings
► Wallpaper

1 Select an image → [Decide]

- To enlarge: Select an image →



Copyrighted Files

- When a copyrighted image is set, license expiry or inserting a different USIM Card may reset default.
- Limited use files cannot be set as Wallpaper.



Some images may not be set or appear properly.

Date & Time

Set clock for two time zones; change time & date format.

- To set date and time: P.1-23

Home Clock

[Default] Home Area: Tokyo
/Summer Time: OFF

Set local time; activate Summer Time to advance set time by one hour.

Main Menu ► Settings ► Phone Settings
► Date & Time ► Home Clock

1 Home Area

Home Area → → Select a city →

Summer Time

Summer Time → → *ON* or *OFF* →

World Clock

[Default] Set Time Zone: Tokyo
/Summer Time: OFF



Set time for a second time zone; activate Summer Time to advance set time by one hour.

Main Menu ► Settings ► Phone Settings
► Date & Time ► World Clock

1 Time Zone

Set Time Zone →  → Select a city → 

Summer Time


Summer Time →  → *ON* or *OFF* → 

Select Clock

[Default] Home Clock

Select clock to appear in Standby.

Main Menu ► Settings ► Phone Settings
► Date & Time ► Select Clock

1 *Home Clock* or *World Clock* → 

Display Format

[Default] Time: 24 hour
/Date: YY/MM/DD

Change time and date format.

Main Menu ► Settings ► Phone Settings
► Date & Time ► Display Format

1 Time Format

Time →  → 24 hour or 12 hour → 

Green Date Format


Date →  → YY/MM/DD, MM/DD/YY or
DD/MM/YY → 


Main Menu Icons

Change Main Menu icons or background.

Changing Main Menu Icons

Main Menu ► Settings ► Display Settings
► Main Menu Icons

1 Select an icon → 

2 Select an image →
 [Decide]

- To enlarge: Select an image →



- To set images to other icons, repeat Step 2.



Changing Main Menu Background

Main Menu ► Settings ► Display Settings
► Main Menu Icons

1  [Menu] → *Change Full Image* → 

2 Select an image →

 [Decide]

- To enlarge: Select an image →



Reset Defaults

Main Menu ► Settings ► Display Settings
► Main Menu Icons


1  [Menu] → *Reset Defaults* → 

Themes

[Default] Black

Change Display colour scheme.

Main Menu ► Settings ► Display Settings
► Themes



1 *Black, White* or *Brown* → 

Brightness

[Default] Level 5

Adjust Display brightness.

Main Menu ► Settings ► Display Settings
► Brightness

1  to adjust brightness (*Level 1-5*) → 

Backlight Time

[Default] 15 seconds

Set Display backlight illumination time.

Main Menu ► Settings ► Display Settings
► Backlight Time

1 15 seconds, 30 seconds or 60 seconds →



Operator Name

[Default] Display Operator Name: OFF
/Display Position: Upper Centre

Show/hide operator name in Standby; change position.

Main Menu ► Settings ► Display Settings
► Operator Name

1 Display Operator Name

Display Operator Name → → ON or
OFF →

Display Position

Display Position → → Upper Centre,
Upper Left or Lower Left →

Language Setting

[Default] Automatic

Set menu language. *Automatic* applies USIM Card language.

Main Menu ► Settings ► Phone Settings
► 言語設定

1 Automatic, English or 日本語 →


Sound Settings


Ringtones


[Default] Voice Call, Video Call: ブザー .mmf
/Message: キラキラ .mmf

Set tones for incoming calls and messages.

Main Menu ► Settings ► Sound Settings
► Assign Ringtone ► Voice Call, Video Call or
Message ► Sounds or Music

1 Select a tone →  [Decide]

● To listen to the tone: Select a tone → 

 to adjust volume.



● Copy Protected Files

- License expiry or inserting a different USIM Card may reset Ringtone to default tone.
- Limited use files cannot be set as Ringtone.
- If a Voice Call is received while streaming/downloading, default ringtone may sound.



- Some music files cannot be set as Ringtone.
- Set unique tones for each Phone Book entry (☞ P.4-4).




Ringer Volume

[Default] Volume 3

Adjust volume of incoming call or message alerts.

- When set to ***Silent***, handset does not ring.
- ***Escalating Tone*** increases volume from 1 to 6 at 3-second intervals.

Main Menu ► Settings ► Sound Settings
► Ringer Volume ► Voice Call, Video Call or Message


- 1  or  to adjust volume (***Silent***, ***Volume 1-6***, ***Escalating Tone***) → 
Ringer sounds to confirm setting.

Vibration Alert

[Default] OFF

If active, 705P vibrates for incoming calls and messages.

Main Menu ► Settings ► Sound Settings
► Vibration Alert

- 1 ***ON*** or ***OFF*** → 




Avoid placing 705P on unstable surface when Vibration Alert is active/while charging battery; cancel Vibration Alert before charging battery.

Warning Tone

[Default] ON

If active, a warning tone sounds when battery is low.

Main Menu ► Settings ► Sound Settings
► Warning Tone

- 1 ***ON*** or ***OFF*** → 

Mode Settings


Change handset mode; each has a distinct combination of alerts, ringtones, etc.; Personalise individual mode settings. Manner mode settings cannot be changed.

Default Settings By Mode


Settings		Normal	Manner	User mode	Outdoor	Drive
Ringtone	Voice Call/Video Call	ブザー .mmf	-	ブザー .mmf	ブザー .mmf	ブザー .mmf
	Message	キラキラ .mmf	-	キラキラ .mmf	キラキラ .mmf	キラキラ .mmf
Ringer Volume	Voice Call/Video Call/ Message	Volume 3	Silent	Volume 3	Volume 6	Silent
Key Tone		Tone 1	-	Tone 1	Tone 1	Tone 1
Key Tone Volume		Volume 1	Silent	Volume 1	Volume 6	Silent
Warning Tone		ON	OFF	ON	ON	ON
Vibration Alert		OFF	ON	OFF	ON	OFF

Switching Modes

[Default] Normal

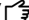- When **Manner**, **User mode**, **Outdoor** or **Drive** is set, an indicator appears in Standby ( P.1-13).





Main Menu ► Settings ► Phone Settings
► Mode Settings

- 1 Select a mode → 

Editing Mode

Main Menu ► Settings ► Phone Settings
► Mode Settings

Example: Cancelling Vibration Alert in Outdoor mode

- 1 **Outdoor** →  [Menu] → **Edit** → 
- 2 **Vibration Alert** →  → **OFF** → 


Other Functions


Illuminations

Set Illumination Light colour for the situations below.

Item	Description	Default
Voice Call	Flashes when receiving incoming Voice Calls	Marine Blue
Video Call	Flashes when receiving incoming Video Calls	Marine Blue
Message	Flashes when receiving messages	Lime
In Conversation	Flashes while on a Voice Call	Sky Blue
Flip Close	Flashes when 705P is closed	Violet
Data Transfer	Flashes while transferring data	ON (Marine Blue)

Main Menu ► Settings ► Phone Settings
► Illuminations

1 Select an item → 

2 Select a pattern → 

Illumination Light flashes to confirm setting.

- To deactivate illuminations: **OFF** → 



Phone Book entry Illumination (☎ P.4-4) takes priority over this setting.

Key Settings



Key Tone

[Default] Key Tone: Tone 1
/Key Tone Volume: Volume 1





Set key tone and key tone volume.

Main Menu ► Settings ► Sound Settings

1 Key Tone

Key Tone →  → Select a tone → 

Key Tone Volume

Key Tone Volume →  →  or  to adjust volume (**Silent**, **Volume 1-6**) → 


- When Key Tone Volume is **Silent**, tone does not sound.

Key Backlight

[Default] 15 seconds



Set key backlight illumination time.

Main Menu ▶ Settings ▶ Phone Settings
▶ Key Settings ▶ Key Backlight

- 1 Select **OFF** or backlight time → 
 - When selecting **OFF**, key backlight does not illuminate.


Shortcut Keys

[Default] Yahoo! Keitai Menu

Assign a specific menu to  (Up Arrow Key) so that you can access the menu directly from Standby. To access the assigned menu, press  in Standby.

Main Menu ▶ Settings ▶ Phone Settings
▶ Key Settings ▶ Shortcut (Up Arrow Key)

- 1 Select a function → 








 

 **Tip** *Pictures, Sounds, S!Appli, Music, Videos* and *Books* are Shortcut Keys to Data Folder folders.

Call Settings


Any Key Answer


[Default] OFF

Activate to make multiple keys valid to answer calls.

Any Key Answer	Valid Keys
ON	 ,  -  ,  ,  ,  ,  , 
OFF	

Main Menu ▶ Settings ▶ Call Settings
▶ Any Key Answer

- 1 **ON** or **OFF** → 

 **Tip** Any Key Answer cannot be used when a call is on hold.


Active Flip

Accept with Open

[Default] OFF

Answer a call by just opening 705P.

Main Menu ► Settings ► Call Settings
► Active Flip ► Accept with open


1 *ON* or *OFF* → 

End Calls with Close

[Default] OFF

End a call by just closing 705P.

Main Menu ► Settings ► Call Settings
► Active Flip ► End call with close

1 *ON* or *OFF* → 



- **End call with close** cannot be activated during a call using Bluetooth® or Earphone.
- Yahoo! Keitai cannot be cancelled by closing 705P even if **End call with close** is active.

International Call Setting


Set International Code and Country Number to make an International call.

- Calling Abroad from Japan: ☎ P.2-4
- Calling Japan from Abroad: ☎ P.2-18

International Code

[Default] 0046010


Set frequently used International Code.

- In Standby, press and hold  (+ appears) to enter International Code automatically. (+ indicates International Code.)

Main Menu ► Settings ► Call Settings
► International Setting ► International Code

1 Enter 4-digit Handset Code → 

- Handset Code: ☎ P.1-26

2 Enter International Code → 

Country Number List

Default country number list; edit, add or delete entries.





- For details, contact SoftBank Customer Centre, General Information (☎ P.18-32).

Main Menu ► **Settings** ► **Call Settings**
► **International Setting** ► **Country Number List**

1 Edit

Select a country →  → Edit country name
→  → Edit country number → 

Add

 **[Menu]** → **Add** →  → Enter country name →  → Enter country number → 

Delete


Select a country →  **[Menu]** → **Delete** →  →  **[Yes]**

Auto Answer

[Default] OFF

Activated automatically when headphones or a Bluetooth® handsfree device is attached; 705P beeps and call connects after seven seconds.

Main Menu ► **Settings** ► **Call Settings**
► **Auto Answer**

1 **ON** or **OFF** → 



- If Speaker is muted, beep sounds via attached headphones, etc. only.
- When Auto Answer and Answer Phone (☎ P.2-7) are active, one with shorter Answer Time takes priority.
- When Auto Answer and Voice Mail, All Incoming Calls (☎ P.14-4) are both active, Voice Mail takes priority.

Entertainment

Media Player

Play music (Audio Player) or video clips (Movie Player) saved on 705P/Memory Card. Create Playlists (☞ P.9-9).

Notes

- Files may not play due to file support issues or Memory Card status, etc.
- When battery is low, Media Player cannot play files.
- When playing files, illumination flashes.
- Playback stops for incoming calls or Alarm.
- If Mail/SMS is received while Media Player is active, illumination flashes and ☒ appears in Playback window, but ringtone does not sound.

Saving Music Files on PCs

When saving music files to Memory Card via PC or other devices for use with 705P, observe the following guidelines:

- Copyrighted Works
 - Do not infringe on third party/intellectual property rights.
 - Memory Card music files are limited to private use.
- Save files to specified Memory Card directory (☞ P.10-24).

For more information, see Utility Software User's Guide.

Downloading Music/Video

Access websites directly from Media Player to download music (Chaku-Uta[®]/Chaku-Uta Full[®]) or video files.

- View details (price, expiry date, etc.) on source website.

Main Menu ▶ Entertainment ▶ Media Player

1 Download Music (Chaku-uta[®]/Chaku-uta Full[®])

Audio →  → **Download Music** →  → 

Download Video

Video →  → **Download Video** →  → 

705P connects to Network and Download site appears.

- Follow onscreen instructions to download media files.

Music Search

Search by artist or title to download music files.

Main Menu ▶ Entertainment ▶ Media Player
▶ Audio ▶ Music Search

1



- Follow onscreen instructions to download music files.


Copy Protected Files

Copy protected files may not play, be saved or forwarded.

To play a copy protected file, obtain Content Key (☞ P.10-6).

Confirm file expiry date or usage limitations (☞ P.10-5).

Playback Window Indicators

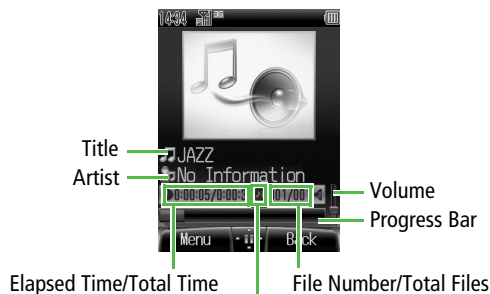

Playback Mode Indicators

- Play All
- Play One
- Repeat Track
- Continuous Play
- Random Play



If Total Files exceed 1000, 0000/-- appears.

Playing Music (Audio Player)

Supported File Formats

File Format	Extensions
AMR-NB	.3gp .mp4
AAC-LC	
aacPlus	
Enhanced aacPlus	

- Some files may not play even if format is supported.
- Copy protected files do not play after license expiry (Content Key: P.10-6).

Main Menu ► **Entertainment** ► **Media Player**
► **Audio**

1 Select an item →

All Music List	Select files from 705P & Memory Card
Music	Select files from Music folder
Ring Song	Select files from Sounds folder
Playlist	Select group of files saved to a Playlist

- to select files from Memory Card.


2 Select a file →

Selected file plays.

- Playback Window Operations:  P.9-8


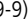
3 To end playback, or [Back] →

 [NO]

- Background Music:  Right

Changing Playback Mode

Before selecting a file in Step 2,  [Menu] → *Playback Mode*

→  → Select playback mode ( P.9-9) → 



Use headphones when listening to music.

Background Music

Listen to music while using other 705P functions.

- Background Music is only accessible via Media Player:

Main Menu ► **Entertainment** ► **Media Player**
► **Audio**, then select a file to play.

- Background Music pauses for incoming calls or Alarms and resumes upon operation completion.
- Video Calls, S! Applications, etc. are unavailable.


1 While music plays, or [Back] →

 [YES]





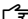

 appears.



While Background Music plays, volume level and playback mode settings cannot be changed.

To adjust volume or change playback mode: **Main Menu**
► **Entertainment** ► **Media Player** → Change the settings (Playback Window Operations:  P.9-8).


Cancelling Background Music

- In Standby,  →  [YES] or **Main Menu**
▶ **Entertainment** ▶ **Media Player**, then  or
 [Back] →  [NO]
- If an unavailable function is activated, *Stop background music?* appears;  [YES] to cancel Background Music.
- Background Music ends for Video Call or low battery.

Playing Video (Video Player)

Supported File Format

File Format	Extensions
MPEG-4	.3gp .mp4
H.263	

- 705P supports Sub-QCIF, QCIF, QVGA and CIF.
- Some files may not play even if format is supported.
- Copy protected files do not play after license expiry (Content Key:  P.10-6).

Main Menu ▶ Entertainment ▶ Media Player ▶ Video

1 Select an item →

List All	Select files from 705P & Memory Card
Video Folder	Select files from Videos folder
Playlist	Select group of files saved to a Playlist

-  to select Memory Card/Video Camera folder files.

2 Select a file →


Selected file plays.

- Playback Window Operations:  P.9-8



3 to exit

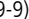

Changing Playback Mode


Before selecting a file in Step 2,  [Menu] → *Playback Mode*

→  → Select playback mode ( P.9-9) → 

Full Screen Playback

Press  to switch to Full Screen. To return to normal Playback window, press  again.

- Press  in Full Screen mode, to rotate Playback window 180°. To rotate again, press .

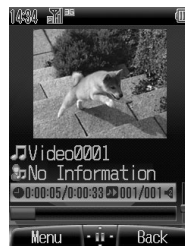

Use headphones for audio.

Playback Window Operations

Key Assignments

Item	Operation
Adjust Volume	(Increase) / (Decrease)
Replay Track	
Play Previous	twice
Play Next	
Rewind* ¹	Press and hold
Forward* ¹	Press and hold
Pause/Resume	
Stop	Music: twice or → Video: or
Show Full Screen* ²	

*¹ Rewind/Forward may not be available when using Media Player from other functions such as Data Folder. See Supported File Format (P.9-4/P.9-6).

*² Supports video playback only



Media Player activates at last used volume level.

Options

During playback, press [Menu] for options.


Playback/Pause	Play or pause music/video files
Playback Mode	Select playback mode (P.9-9)
Playlist	Select music/video files from Playlists
All Music List /List All	Select music/video files from 705P & Memory Card
Full Screen (Video) /Normal Screen* ¹	Select display size for video playback
Details	Show detailed information about files
Connect to URL* ²	Exit Media Player, and connect to the Network
Help	Open Playback window key assignments

*¹ Supports video playback only


*² May not be available for some files

Playback Mode

[Default] Play All

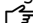- Confirm playback mode settings in Playback window (Playback Mode Indicators:  P.9-4).

Main Menu ► **Entertainment** ► **Media Player**
► **Audio or Video** ► **Playback Mode**

1 Select a mode → 


Play All	Play all files in selected folder/Playlist until the last file ends
Play One	Play selected file
Repeat Track	Repeat selected file
Continuous Play	Repeat all files in selected folder/Playlist
Random Play	Play files in selected folder/Playlist in random order



Media Player activates in last used mode.

Playlist


Use Playlists to organize Data Folder video/music files. Select Videos, Sounds or Music folder files to create Playlist links to each file in its original folder. Create up to 30 Playlists on 705P and Memory Card each. Add up to 99 files to a single Playlist.

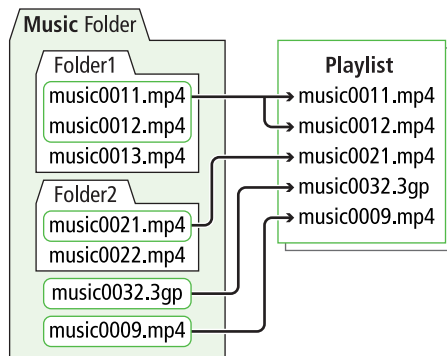

Creating New Playlists




Main Menu ► **Entertainment** ► **Media Player**
► **Audio or Video** ► **Playlist**

1  **[Menu]** → *Create Playlist* → 

2 Enter name → 

A new Playlist is added to top of list.

Changing Playlist Name

- In Step 1, select a Playlist →  **[Menu]** → *Edit Playlist*
Name →  → Edit name → 

Deleting Playlist

- In Step 1, select a Playlist →  **[Menu]** → *Delete* or
Delete All →  →  **[YES]**





A single Playlist cannot contain both music and video files, or files from both 705P and Memory Card.

Editing Playlists


■ Adding/Deleting files to Playlists

Main Menu ► **Entertainment** ► **Media Player**
► **Audio or Video** ► **Playlist**

1 Select a Playlist →  →  **[Menu]**

2 Add Files to Music Playlists

Add →  → *Music* or *Ring Song* → 

→ Select a file → 

Add Files to Video Playlists

Add →  → Select a file → 

Delete One File





Delete →  → Select a file → 

 **[OK]** →  **[YES]**

Delete All Files




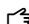
Delete All →  →  **[YES]**



- To delete multiple files, select a file → , then repeat as required. Checkmarks indicate files are selected. (To release checkmark, press  again.) When complete, [OK] → [YES].
- Some files may not be stored in Playlist.




■ Selecting Playback Mode


Main Menu ▶ Entertainment ▶ Media Player
▶ Audio or Video ▶ Playlist


- 1 Select a Playlist → [Menu] → **Playback Mode** → 
- 2 Select a mode → 
 - Playback Mode:  P.9-9

■ Changing Playlist Order

Main Menu ▶ Entertainment ▶ Media Player
▶ Audio or Video ▶ Playlist

- 1 Select a Playlist →  → Select a file → [Menu] → **Change Order** → 

- 2 Select new playback order
 → 

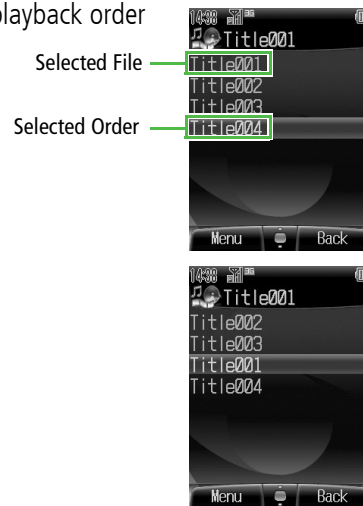

ComicSurfing (Japanese Only)

Activate this S! Application to view comics, photo books and other CCF files saved in Books (Data Folder).

- Download Content Keys to read CCF files.
- ComicSurfing is S! Application.





Main Menu ► Entertainment

1 *ComicSurfing* →

ComicSurfing top menu appears.

- For operational instruction, see ComicSurfing Help.



- When an S! Application is paused, ***End the S!Appli?*** appears;  **[YES]** to end it and launch ComicSurfing.
- Launch ComicSurfing via S! Appli, or select a file from Books in Data Folder and press .
- Compatible file titles appear in Books;  appears next to incompatible files.
- For Option menu details:  P.10-8



When purchasing a new handset, move CCF files via Memory Card and retrieve Content Keys to open the files. Some files may need to be re-downloaded.

Near Chat (Japanese Only)

Exchange text messages with other SoftBank handsets or compatible devices wirelessly via Bluetooth®.

Transmission/connection fees do not apply.

- Effective range is approximately ten metres.
- Near Chat range may vary according to ambient conditions.
- Parents who use Near Chat parental control feature should restrict access to Handset Code, which can be used to activate All Reset (☞ P.12-8) which cancels restrictions.
- For usage information, see guide within the application.



- When Bluetooth® is active, compatible Bluetooth® device names appear. Unsolicited device connection requests may be received; reject any unwanted connection requests.
- An error message may appear due to ambient conditions, etc. End Near Chat completely, then restart the application.

Starting Near Chat

Main Menu ► Entertainment

1 *Near Chat* →

Near Chat starts and confirmation appears.

- When Bluetooth® is **OFF**, activation confirmation appears.
- For usage information, see guide within the application.

2 To end Near Chat, → *Suspend* or *Terminate* →

- To resume: Start Near Chat → *Resume* →



- Near Chat can be activated from S! Appli.
- Activate Near Chat to receive requests from others.
- If Bluetooth® is activated before Near Chat, Visibility is set to **Always On**. After terminating Near Chat, Bluetooth® remains active, but Visibility returns that set before Near Chat was launched.

S! Loop (Japanese Only)

S! Loop is communication service.

Main Menu ► Entertainment ► S!Loop

705P connects to the Network and S! Loop appears.

- See S! Loop Help for usage information.


Managing Files

Data Folder

Save, play and manage still images/video clips captured with 705P Chaku-Uta® downloaded from Web, etc.

- Access websites directly from Pictures, Sounds, S! Appli, Music, Videos and Books folders, and download files to 705P.



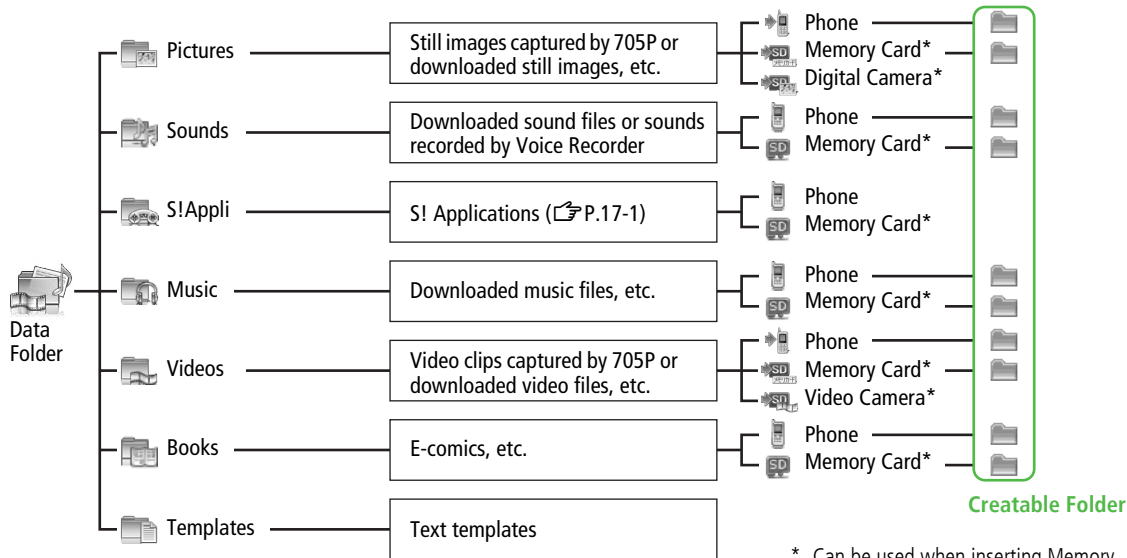

 
 



 



 
Data Folder Structure



Creatable Folder

* Can be used when inserting Memory Cards (P.10-19)




Supported File Formats

Folder	File Format	Icons
Pictures	JPEG (.jpg/.jpeg/.jpe/.jfif)	
	GIF (.gif)	
	BMP (.bmp)	
	WBMP (.wbmp)	
	PNG (.png)	
Sounds	SMAF (.mmf)	
	SP-MIDI (.mid/.midi)	
	AMR-NB (.amr)	
	MPEG-4 (.3gp/.mp4)	
	Mobile XMF (.mxmf)	
S!Appli	Java	
Music	MPEG-4 (.3gp/.mp4)	
Videos		
Books	CCF (.ccf)	
Templates	Text file (.txt)	

Using Copy Protected Files

Copying/forwarding/saving may be restricted and Content Key (P.10-6) may be required for usage.

See File Properties (P.10-5) to confirm restrictions such as expiry term or usage limitation.

-  or  (Silver) appears.  appears for expired files.
- Files downloaded on 705P cannot be used on PCs.
- Network setting may be required for usage.
- When Content Key is moved to Memory Card, file usage may require insertion of USIM Card in use at time of transfer.
- 705P holds up to 1000 Content Keys. Multiple Keys may be required to use a file. Expired Keys are deleted automatically.





Only MPEG-4 files in Sounds can be forwarded or rewinded.

Viewing Data Folder





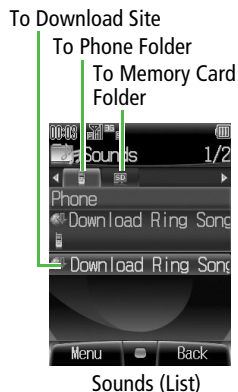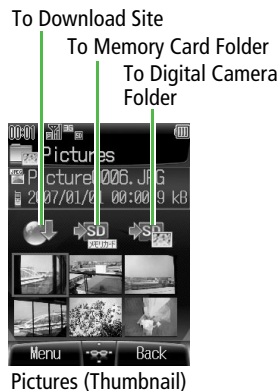


Main Menu ► Data Folder

1 Select a folder →

Pictures and Videos appear in Thumbnail view by default.



Changing Memory View

- In List view, press  to switch views, Phone, Memory Card, Digital Camera*¹ or Video Camera*².
- In Thumbnail view, select  (Memory Card),  (Digital Camera*¹) or  (Video Camera*²) and press . To return to handset memory, select  (Phone) and press .

*1 In Pictures folder only



*2 In Videos folder only



Changing Folder View

[Default] Thumbnail

Select Thumbnail or List for Pictures or Videos view.

Main Menu ► Data Folder ► Pictures or Videos

1  [Menu] → *More* → 

2 *Change View* →  → *Thumbnail* or *List*
→ 

Memory Status

Confirm current 705P or Memory Card memory status.

Main Menu ► **Data Folder** ► **Memory Status**
► **Phone or Memory Card**



Phone Memory



Memory Card



Actual Memory Card capacity is lower than indicated due to system files and temporary files.

Opening Files

Data Folder

Main Menu ► **Data Folder**

- 1 Select a folder →
 - Changing View: P.10-4
- 2 Select a file →

File appears/plays.

 - Opening a media file activates Media Player.

Playback Window Operations: P.9-8

File Properties

Confirm file name, size, forward lock, copyright information, etc.

- Available information varies by file.

Select a file in Step 2 → **[Menu]** → **More** → → **Details**
→

Content Key

If Content Key is expired or close to expiry, a message appears when the file is opened. To obtain a new Key press [YES]. 705P connects to Content Key site.

- Copy Protected Files: P.10-3
- or (Silver) appear by copy protected files. files are inaccessible. appears on images in Thumbnail view of expired files.



- Alternatively, obtain Content Key as follows:

[Menu] → *More* → → *Download Content Key* →

- Move Content Key to Memory Card (P.12-7).
- Depending on contents, some Content Keys may not be obtained from websites.
- When 1000 Content Keys have been saved a message appears. Delete old Keys; otherwise downloads may fail (connection fees apply).

Playing Music/Video files (Continuous Playback)

Use music files in Sounds as ringtones.

Main Menu ► Data Folder

► Sounds, Music or Videos

1 [Menu] → *Playback Method* →

2 Select a method →

Continuous Play	Selected tracks play repeatedly
Random Play	Tracks in selected folder play randomly
Repeat Track	Selected track plays

- Selected mode indicator appears in Playback window (Playback Mode Indicators: P.9-4).

Viewing CCF Files

View CCF-format e-comics or photo books saved in Books (☞ P.9-12).


Main Menu ► **Data Folder** ► **Books**

1 Select a CCF file → 

ComicSurfing starts.

- For operations, read Help on ComicSurfing.

Options

Highlight a file in Data Folder and press  [Menu] for the following operations.

Pictures

View	Open file
Send	Send files via Mail, Infrared or Bluetooth® (☞ P.10-11)
Set as	Set as wallpaper, Phone Book image, Main Menu Icons, etc. (☞ P.10-9)
Delete	Delete a file or all files saved in a folder (☞ P.10-16)
Edit	Resize/trim still images, adding frame, clearing shadow, etc. (☞ P.10-12)
Manage Files	Rename, move or copy files, create new folders, select multiple files, etc. (☞ P.10-15)
More	Obtain Content Key (☞ P.10-6), change view (☞ P.10-4), view file properties (☞ P.10-5), Memory Card folders, Digital Camera Folders

Sounds, Music, Videos

Play	Play files
Send	Send files via Mail, Infrared or Bluetooth® (P.10-11)
Set as*¹	Set ringtone (Voice Call, Video Call and messages) or save to Phone Book (P.10-9)
Playback Method	Select playback method (P.10-6)
Delete	Delete a file or all files saved in a folder (P.10-16)
Manage Files	Rename, move or copy files, create new folders, select multiple files, etc. (P.10-15)
More	Obtain Content Key (P.10-6), change view* ² (P.10-4), view file properties (P.10-5), Memory Card folders, Video Camera Folders* ²

*1 Sounds and Music only

*2 Videos only

Books

Play	Play files
Jump to Web	Connect to website from linked files
Send	Send files via Infrared or Bluetooth® (P.10-11)
Delete	Delete a file or all files saved in a folder (P.10-16)
Manage Files	Move or copy files, create new folders, select multiple files, etc. (P.10-15)
More	Obtain Content Key (P.10-6), view file properties (P.10-5), Memory Card folders

Using Files

Use Data Folder files as wallpaper, Phone Book picture, ringtone, etc. The files can be sent via Mail, infrared or Bluetooth®.



Copyrighted Files

- When copyrighted files are set to Wallpaper, Ringtones, Main Menu Icons or Phone Book entries, license expiry or inserting a different USIM Card may result default.
- Limited use files cannot be set as Wallpaper, Ringtones, Main Menu Icons or Phone Book entries.



Wallpaper

Main Menu ► Data Folder ► Pictures

- 1 Select a file →  [Menu] → *Set as* → 
- 2 *Wallpaper* → 

Ringtone

Main Menu ► Data Folder ► Sounds or Music

- 1 Select a file →  [Menu] → *Set as* → 
- 2 *Voice Call Ringtone, Video Call Ringtone*
or *Message Ringtone* → 

Saving to Phone Book








Save still image or sound files to Phone Book.

- Set **View from** to **Phone** or **Phone & USIM** (☞ P.4-11) beforehand; images/sounds cannot be saved to USIM Phone Book.

Saving a Still Image to a Phone Book Entry

Still images saved for Phone Book entries appear for calls from numbers saved in Phone Book.










Main Menu ► Data Folder ► Pictures

- 1 Select a file →  [Menu] → **Set as** → 
- 2 **Phone Book Picture** → 
Phone Book Entry window appears.
- 3 Select a Phone Book entry → 
 - Warning message appears when still image needs resizing.  → Enter file name →  → resized still image is saved in Data Folder.
- 4  [Save]

Saving a Music File to a Phone Book Entry

Set ringtones for numbers/addresses in Phone Book (☞ P.4-4).

Main Menu ► Data Folder ► Sounds or Music

- 1 Select a file →  [Menu] → **Set as** → 
- 2 **Add to Phone Book** → 
Phone Book Entry window appears.
- 3 Select a Phone Book entry → 
Current settings for Voice Call Ringtone , Video Call Ringtone  and Message Ringtone  appear.
- 4 Select a ringtone → 
- 5  [Save]

Main Menu Icons

Set still images to Main Menu icons.



Main Menu ► Data Folder ► Pictures

1 Select a file →  [Menu] → *Set as* → 

2 *Main Menu Icons* → 

Main Menu appears.

3 *Change Menu Icons*

 to select an icon → 

- To set the same image, repeat Step 3.

Change Background


 [Menu] → *Change Full Image* → 


4  [Back]

Return to Data Folder.


Sending Files

Send files via Mail, Infrared or Bluetooth® to other compatible devices such as mobile phones, PCs, etc.

● Infrared:  P.11-2

● Bluetooth®:  P.11-4

Main Menu ► Data Folder

1 Select a folder → 

2 Select a file →  [Menu] → *Send* → 

3 *Send via Mail*

Send via Mail →  → Enter information and send the Mail ( From Step 1 on P.15-6)

Send via Infrared

Infrared → 

Send via Bluetooth®

Bluetooth → 

Editing Pictures

Resize still images in Pictures to use for Wallpaper, Phone Book entries, etc. or add frames to them.


Image Size

The following sizes can be selected when resizing/trimming images.








Free Size*	As required
QQVGA (160x120)	Size for Phone Book image
Wallpaper (240x320)	Size for wallpaper
Main Menu Icon (80x76)	Size for Main Menu icons

* Unavailable for resizing

Resize

Zoom in or out of still images to resize ( Left).

Main Menu ► Data Folder ► Pictures

- 1 Select a file →  [Menu] → *Edit* →  → *Resize* → 
- 2 Select an image size → 
Resized image appears.
 - To start over:  [Back]
- 3  → Enter a new file name → 
Image is saved to Data Folder.

Trimming

Crop still images for size.

- Image Size: P.10-12

Trim to Preset Size

Main Menu ► Data Folder ► Pictures

- 1 Select a file → [Menu] → *Edit* → → *Trimming* →

- 2 *QQVGA (160x120)*, *Wallpaper (240x320)*
or *Main Menu Icon (80x76)* →

Rectangle appears on the image.

- 3 to specify the area →

Trimmed image appears.

- To start over: [Back]

- 4 → Enter a new file name →

Image is saved to Data Folder.

Trim to Free Size

Main Menu ► Data Folder ► Pictures

- 1 Select a file → [Menu] → *Edit* → → *Trimming* → → *Free Size* →

- 2 to move →

Rectangle appears.



- 3 to move the rectangle to specify the area →

Trimmed image appears.

- To start over: [Back]









- 4 → Enter a new file name →

Image is saved to Data Folder.



Adding a Frame







Main Menu ► Data Folder ► Pictures

- 1 Select a file →  [Menu] → *Edit* →  → *Add Frame* → 
- 2 *Frame 1-5* → 
Image with the selected frame appears.
 - To start over:  [Back] or press  to toggle frames.
- 3  → Enter a new file name → 
Image is saved to Data Folder.

Super Clear Shadow

Brighten shadow in still images.

Main Menu ► Data Folder ► Pictures

- 1 Select a file →  [Menu] → *Edit* →  → *Super Clear Shadow* → 
Processed image appears.
 - To end without saving:  [Back]
- 2  → Enter a new file name → 
Image is saved to Data Folder.












Managing Folders & Files

Creating New Folders

Create new folders within Pictures, Sounds, Music, Videos and Books.

- Create up to five new folders within each folder.
- Books and Memory Card folders do not support new folders/files with the same names of existing folders/files.
- Digital Camera, Video Camera, S! Appli, and Templates do not support new folders.






Main Menu ► Data Folder

- 1 Select a folder →  →  [Menu]
 - Alternatively,  [Menu] while cursor is at , , ,  or , then go to Step 3.
- 2 **Manage Files** → 
- 3 **New Folder** → 
- 4 Enter a new folder name → 

Changing Folder & File Names

- Only names of folders and files created on 705P can be changed.
- Files in a folder cannot have the same name.
- DCIM, S! Appli and SD-VIDEO folder names are fixed.










Main Menu ► Data Folder

- 1 Select a folder → 
- 2 Select a folder or file →  [Menu] → **Manage Folder** or **Manage Files** → 
- 3 **Rename** → 
- 4 Enter a new folder or file name → 

Deleting Folders & Files

- Only folders created on 705P can be deleted.


Main Menu ► Data Folder

- 1 Select a folder → 
- 2 Select a folder or file →  [Menu] → **Delete**
→ 
- 3 **Delete a Folder or File**
Delete One →  → 
Delete All the Files in a Folder
Delete All →  →  [YES] → Enter 4-digit
Handset Code → 
 - Handset Code:  P.1-26








When selecting **Delete All**, some files may not be deleted.

Moving & Copying Files

- Copy/forward protected files cannot be copied.
- Files in S! Appli cannot be moved.
- Only JPEG files saved in handset memory can be moved/copied to Digital Camera and Video Camera folders.
- Files may not be forwarded/copied depending on file format or data.
- Forward protected files may be moved to other folders by retrieving Network information ( P.1-22).

Main Menu ► Data Folder

- 1 Select a folder → 
- 2 Select a file →  [Menu] → **Manage Files**
→ 
- 3 **Move** or **Copy** → 
- 4 Select a folder → 



- Copy protected files may not appear in Thumbnail view after being moved/copied to 705P; open/play file once.
- After being copied/moved between 705P and Memory Card, some files may be unusable on other SoftBank handsets or PCs, etc.
- Actual Memory Card capacity is lower than indicated due to temporary files created by 705P.

Selecting Multiple Files

Select multiple files when deleting/moving/copying files.

- Some files cannot be deleted/moved/copied.

Main Menu ► Data Folder

- 1 Select a folder → → Select a file → [Menu] → **Manage Files** → → **Multi Select** →

- 2 Select a file →

Check box appears in the upper left of image.

- To cancel selection: Select a file with check box →

- 3 Repeat Step 2 as required

- To select all files: [Menu] → **Select All** →
- To cancel selection: [Menu] → **Unselect All** →



- 4 Delete selected files

[Menu] → **Delete** → → [YES]

Copy/Move selected files

[Menu] → **Copy** or **Move** → →




Select a folder → → [YES]

Templates

Use pre-installed text templates in messages, etc. Save frequently used phrases.



Saving a New Template

Main Menu ► Data Folder ► Templates








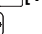

- 1  [Menu] → *New* → 
- 2 Enter text (up to 64 characters) → 
New template is added to the top of the list.

Editing a Template

Main Menu ► Data Folder ► Templates



- 1 Select a template → 
- 2 Edit text → 
Edited template is overwritten.

Deleting Templates

- To delete a template, in Step 1, select a template →  [Menu] → *Delete* →  → *Delete One* →  → 
- To delete all the templates, in Step 1,  [Menu] → *Delete* →  → *Delete All* →  →  [YES] → Enter 4-digit Handset Code (☞ P.1-26) → 

Using Templates for Mail/SMS

Main Menu ► Data Folder ► Templates

- 1 Select a template →  [Menu] → *Send* → 
- 2 *Send via Mail* or *Send via SMS* →  →
Enter information to send (Mail: ☞ From Step 1 on P.15-6/ SMS: ☞ From Step 1 on P.15-9)



Use templates for text entry: ☞ P.3-8 "Templates".

Memory Card

705P is compatible with microSD™ Memory card.

- microSD™ Memory Card is referred to as Memory Card.
- To learn how to save files to Memory Card, refer to pages of the functions.
- 705P is compatible with 32MB, 64MB, 128MB, 256MB, 512MB, 1GB and 2GB Memory Cards.
- Format new memory cards for use with 705P.

Notes

- Do not place labels or stickers on Memory Card; may affect Memory Card performance or result in lost data.
- Do not disassemble or modify the Memory Card.
- Do not expose Memory Card to strong impacts, pressure or liquids.
- Do not touch Memory Card terminals or expose to metal objects.
- Do not expose Memory Card to direct sunlight or excessive heat (e.g. inside vehicles, etc.).
- Keep Memory Card away from dust or high humidity.
- Do not use in the presence of corrosive gases.
- Avoid heat sources; do not dispose of in fire.
- Memory Card is a consumable item. Card performance deteriorates with usage.




- SoftBank is not liable for any damages resulting from accidental loss/alteration of information. Keep a copy of Phone Book entries, etc. in a separate place.
- microSD™ Memory Card does not have a write protect feature; there is a risk of accidental erasure/overwriting of files.
- Actual Memory Card capacity is lower than indicated due to system files and temporary files.

Inserting & Removing Memory Card




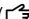
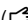
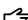
- Turn off handset before inserting/removing Memory Card.

Inserting

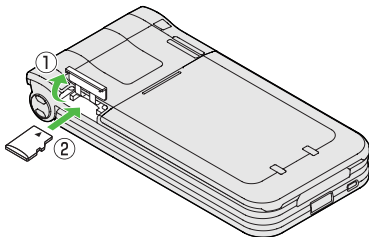- 1 Open cover. With IC chip down, insert Memory Card until it clicks




- 2 Close cover

- When Memory Card is installed correctly,  appears. If  appears, Memory Card cannot be used. Remove Memory Card from handset, and re-insert it. If  does not disappear, execute Memory Card Check ( P.10-22) or format Memory Card ( P.10-21). (Display Indicator:  P.1-13)


Removing

- 1 Open cover and gently push Memory Card in. Memory Card pops out with a light push.

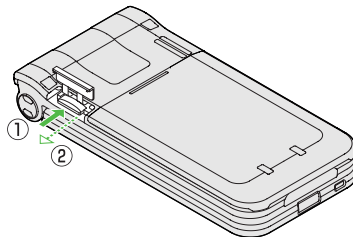

- 2 Remove card and close cover



- Do not remove Memory Card or battery while  flashes. Memory Card may be damaged or files lost.
- Memory Card may pop out when inserting/removing it.

Format Memory Card

- Formatting Memory Card deletes all saved files/data.

Main Menu ► Settings ► Memory Card Settings ► Format Memory Card

1  → Enter 4-digit Handset Code → 

- Handset Code:  P.1-26




If format fails, turn power off and remove Memory Card from 705P. Reinsert Memory Card and format it again.



- Do not remove Memory Card or battery while formatting; may damage handset or Memory Card.
- Memory Cards formatted on PCs or other devices may not be used in 705P. Format Memory Card on 705P before use.
- 705P cannot format Incompatible Memory Cards.

Viewing Memory Card Files

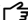
View files in Memory Card from Data Folder. To toggle memory views, see "Viewing Data Folder" ( P.10-4).



- View up to 1000 Memory Card files/folders on 705P.
To view hidden Memory Card files/folders, delete files, then turn 705P power off and restart it. Previously hidden files appear in equal number to those that were deleted.
- Files with names over 32 alphanumeric/extensions over six alphanumeric cannot be viewed.
- Unsupported files cannot be viewed.

Viewing Memory Status

View memory status.

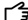- For operations:  P.10-5

Check Memory Card

Repair Memory Card data errors.

**Main Menu ► Settings ► Memory Card Settings
► Check Memory Card**

1 



- Do not remove Memory Card or battery during Check Memory Card. May damage 705P or Memory Card.
- Incompatible/improperly formatted Memory Cards are not checked.
- Unrecoverable data may be deleted.

Phone Book Backup

Back up Phone Book to Memory Card; restore Phone Book after accidental loss/alteration.





- Restoring Phone Book from Memory Card deletes existing Phone Book content.
- Backup is not available when battery is low. Change/charge battery before backup

Backup

- Check memory beforehand (📖 P.10-5).

**Main Menu ► Phone Book
► Manage Phone Book ► Memory Card Backup
► Backup**

1 

- 2** Enter 4-digit Handset Code →  → 
Offline mode is set. When backup is complete, Offline mode is cancelled.
- Handset Code: 📖 P.1-26



All the data for Phone Book entries can be backed up, and Secret settings are retained.

Restore

Main Menu ► **Phone Book**


► **Manage Phone Book** ► **Memory Card Backup**

► **Restore**

1 Enter 4-digit Handset Code →  → 

Offline mode is set.

- Handset Code:  P.1-26

2 Select a file → 


- Backup date serves as file name.

Example: "06121500.vcf" indicates that the file was backed up on 15 December 2006.

When backup is complete, Offline mode is cancelled.

3 

Deleting a Backup File

Select a file to be deleted in Step 2 →  [Menu] → *Delete* →



- When backup/restoration starts in Offline mode, Offline mode is not cancelled automatically even when backup/restoration is complete.
- Backup files created on other SoftBank handsets may not be usable on 705P.

PC File Transfers

Files moved or copied from 705P to Memory Card are managed as shown below:

File Type		From PC	From 705P
Still Images	Still images captured by 705P, etc.	DCIM - xxx_PANA (xxx:100 - 999)	Data Folder ► Pictures ► DigitalCamera
	Still images moved to Memory Card, or Downloaded still images etc.	PRIVATE - MYFOLDER - My Items - Pictures	Data Folder ► Pictures ► Memory Card
Video Files	Videos captured by 705P, etc.	SD_VIDEO - PRLyyy (yyy:001 - FFF)	Data Folder ► Videos ► Video Camera
	Videos moved to Memory Card, or Downloaded video files	PRIVATE - MYFOLDER - My Items - Videos	Data Folder ► Videos ► Memory Card
Sound Files	Sound files with .3gp/.mp4	PRIVATE - MYFOLDER - My Items - Music	Data Folder ► Music ► Memory Card
	Sound files with .3gp/.mp4/.mid/.midi/.amr/.mmf/.mxmf	PRIVATE - MYFOLDER - My Items - Sounds & Ringtones	Data Folder ► Sounds ► Memory Card
E-comics, etc.		PRIVATE - MYFOLDER - My Items - Book	Data Folder ► Books ► Memory Card
S! Applications		PRIVATE - MYFOLDER - My Items - Games and More	Data Folder ► S!Appli ► Memory Card
Phone Book Backup files		PRIVATE - MYFOLDER - Utility - Contacts - Contacts.BCK	Phone Book ► Manage Phone Book ► Memory Card Backup
Content Key Backup files		PRIVATE - MYFOLDER - Utility - Rights	Settings ► Security ► Content Key

To use files saved on Memory Card via PCs, save files in folders in PRIVATE - MYFOLDER - My Items, by file type. See "Using Files" (P.10-9) to learn how to use files on 705P.



705P temporary files are saved in Memory Card PRIVATE - MEIGROUP - PMC - FS_TEMP folder. All files in this folder are deleted each time Memory Card is inserted into 705P; do not save PC files/folders in this folder.

Connectivity

Infrared

Before Using Infrared

Transfer Phone Book/Schedule entries and Data Folder files wirelessly between 705P and compatible devices, including PCs and other mobile handsets.

- 705P infrared function is based on IrMC1.1, however, some IrMC1.1-based device transmissions may not be transmitted/received within specification.

Transferable Files


Phone Book Entries	Transfer one entry at a time ● Ringtone, Illumination, Picture, Group and other entry settings are lost in transfers.
Schedule Entries	Transfer one entry at a time ● Schedule Tone, Alarm, Illumination and other entry settings are lost in transfers. ● Entries with date/time that cannot be set on 705P are not saved.
Data Folder Files	Transfer one file at a time ● Copyrighted files may not transfer.



- Depending on their content, some incoming Phone Book/Schedule entries may not be received, or may be altered beyond the parameters listed left.
- 705P holds up to 100 Schedule entries and 500 Phone Book entries. If memory becomes full, remaining entries are truncated.

Notes

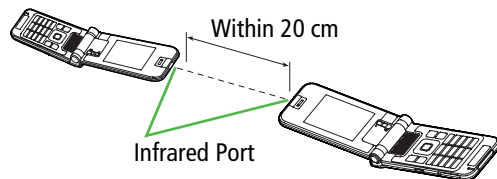


- Debris may inhibit infrared transfers; clean infrared ports with a soft cloth beforehand.
- Direct sunlight/fluorescent light may inhibit transfers.
- Infrared transfers are disabled while sending/receiving Mail/SMS or using Web.
- Align infrared ports within 20 cm of one another and make sure no object are placed between them. Do not move the devices until transfer is complete.



Infrared File Transfers







- Transferable Files:  P.11-2

Sending

- 1 Select an item →  [Menu] → *Send* → 
- 2 Prepare recipient device
- 3 *Infrared* → 
Transfer starts.

Receiving

Main Menu ► Settings ► Connectivity
► Infrared

- 1 *ON* → 
- 2  to return to Standby.
 appears in Standby.
● Acquire infrared transmission within three minutes.
- 3 When sender starts transfer, confirmation appears
File name and size appear.
- 4 
- 5 **Receive Data Folder Files**
Phone or *Memory Card* → 
Transfer starts.
Receive Phone Book/Schedule Entry
 [Save]



Tip

- 705P receives files only in Standby.
- Infrared is cancelled if no transmission within three minutes or handset power is off.

Bluetooth®

Transfer Phone Book/Schedule entries and Data Folder files wirelessly between 705P and Bluetooth® compatible devices, including PCs and other mobile handsets. Use Bluetooth® compatible handsfree devices with 705P.

Before Using Bluetooth®

Bluetooth® Specifications

Version	Bluetooth® specification Ver. 1.2
Supported Profiles* ¹	HSP (Headset Profile) HFP (Hands-Free Profile) OPP (Object Push Profile) SPP (Serial Port Profile)
Output	Bluetooth® Power Class2
Frequency Bands* ²	2.4 GHz (2.402GHz - 2.480GHz)
Communication Distance* ³	Approximately ten metres

*1 Bluetooth® connections are available with compatible devices supporting the same profile.

*2 Bluetooth® operates in the 2.4 GHz unlicensed frequency band. Depending on other devices in use in the spectrum, Bluetooth® connection may slow down/terminate, or range may decrease.

*3 Affected by distance between devices, obstructions, signal conditions, handset status, etc.

Transferable Files

Phone Book Entries	Transfer one entry at a time ● Ringtone, Illumination, Picture, Group and other entry settings are lost in transfers.
Schedule Entries	Transfer one entry at a time ● Schedule Tone, Alarm, Illumination and other entry settings are lost in transfers. ● Entries with date/time that cannot be set on 705P are not saved.
Data Folder Files	Transfer one file at a time ● Copyrighted files may not transfer.



Note

- Depending on their content, some incoming Phone Book/Schedule entries may not be received, or may be altered beyond the parameters listed above.
- 705P holds up to 100 Schedule entries and 500 Phone Book entries. If memory becomes full, remaining entries are truncated.


Notes

- 705P may not be able to establish a Bluetooth® connection with some Bluetooth® devices.
- Establish connections with certified Bluetooth® devices that meet the specification standards developed by Bluetooth SIG.
- Due to the unique characteristics/specifications of a certified Bluetooth® device, connections or transfers may fail; procedures, displayed results or operations may vary from those described in the manual.
- Noise may interfere with wireless or handsfree conversations depending on the status of connected devices or signal conditions.
- For details about headset/handsfree devices, see the device manuals.

Bluetooth® Connection

Activate Bluetooth® on recipient device. Connection completes when a connection request is authorized at recipient. Bluetooth® Passcode may be required.

Connection Flow Example:

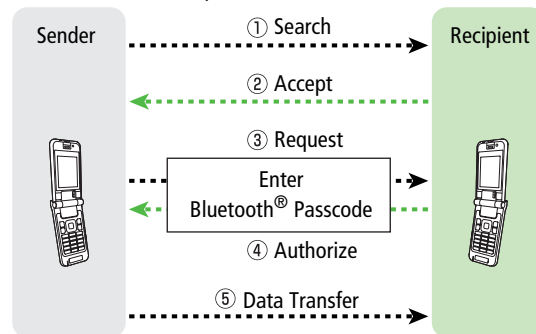

Bluetooth® Passcode

Bluetooth® Passcode (4 to 16 digits) is required to connect Bluetooth® devices; sender and receiver must input the same code to complete file transfers.

- Bluetooth® Passcodes are not necessary for paired devices.




Activate Visibility to accept a connection request (☞ P.11-7).


Activating Bluetooth®

[Default] OFF

Activate Bluetooth® to receive file transfers or connect a handsfree device, etc.

-  appears in Standby when Bluetooth® is *ON*.

Main Menu ► **Settings** ► **Connectivity**
 ► **Bluetooth** ► **Settings** ► **ON/OFF**

1 *ON* or *OFF* → 



705P accepts connection requests and receives files only in Standby; these functions are disabled when Password Lock/Keyguard is active or Software Update is in progress.

Searching & Pairing Devices

Search and connect other Bluetooth® devices. Paired devices automatically appear in Paired Device list.

- Bluetooth® Passcodes are not necessary for paired devices.
- Search up to 20 Bluetooth® devices at one time; pair with up to ten Bluetooth® devices.
- Activate Bluetooth® before pairing.

Main Menu ► **Settings** ► **Connectivity**
 ► **Bluetooth** ► **Paired Devices**

1 When No Paired Devices are Listed



When Previously Paired Devices are Listed



[Menu] → *Add New Device* → 

Device search starts and names of found devices appear.

- Device Indicators



PC



Headset



Mobile phone



Others

- To search again:  [Menu] → *Search* → 


- 2 Select a device → 
- 3 Enter Bluetooth® Passcode (4-16 digits) →



- Recipient must enter the same code within 30 seconds to complete pairing.
- For handsfree devices, enter specified Bluetooth® Passcode.


Device Indicator like  appears when pairing is complete.

Deleting a Device from Paired Device List

Select a device →  [Menu] → *Delete* →  → 

Accepting Connection Unconditionally with Trusted Devices

 [Menu] → *Make Trust* → 

- Device Indicator like  appears.
- When receiving data from the trusted device, receive confirmation appear without connection request.

Options

Select a device in Paired Device list and press  [Menu].

Add New Device	Search for Bluetooth® devices
Make Trust/ Make Untrust	Accept or unaccept connection unconditionally with selected device
Connect/ Disconnect	Connect or disconnect selected device
Rename	Rename selected device in Paired Device list
Delete	Delete selected device in Paired Device list
Supported Profile	View selected device properties

Visibility

[Default] Always On

Set 705P visibility to other Bluetooth® devices.

Main Menu ► Settings ► Connectivity
► Bluetooth ► Settings ► Visibility

- 1 *Always On, Activate Temporarily* or
Always Off → 

Bluetooth® File Transfers


- Transferable Files:  P.11-4

Sending


- 1 Select an item →  [Menu] → *Send* →  → *Bluetooth* → 

If Paired Device list is empty, device search starts.

- 2 Prepare recipient device


- 3 Select a device → 



Transfer starts.

- When selecting an unpaired device: Enter Bluetooth® Passcode (4-16 digits) →  → Recipient must enter the same code within 30 seconds to start transfers.


Receiving


Main Menu ► Settings ► Connectivity
► Bluetooth ► Settings ► ON/OFF

- 1 *ON* → 

- 2  to return to Standby
 appears in Standby.

- 3 When sender starts transfers, connection request appears

- 4  to accept to connection request
File name and size appear.

- 5  to start transfers

- 6 **Receive Data Folder Files**

Phone or *Memory Card* → 

Transfer starts.

Receive Phone Book/Schedule Entry

 [Save]



- Confirm Visibility setting if 705P cannot be searched or paired with by senders (☞ P.11-7).
- When receiving data from the trusted device (☞ P.11-7), connection request does not appear.
- 705P receives files only in Standby.

Connecting Handsfree Devices

- Pair with handsfree devices beforehand (☞ P.11-6).

Main Menu ► **Settings** ► **Connectivity**
 ► **Bluetooth** ► **Paired Devices**

1 Select a device → [Menu] → **Connect** →



When connected, Device Indicator appears.

- To disconnect: [Menu] → **Disconnect** →



- Activate Auto Answer when using handsfree devices (☞ P.8-5).
- In Standby, make calls from a handsfree device.

Bluetooth® Settings

Changing Device Name

[Default] 705P

Specify a device name for handset.

Main Menu ► **Settings** ► **Connectivity**
 ► **Bluetooth** ► **Settings** ► **Phone Name**

1 Enter name →




Pictographs are not available.

Handsfree Setting

[Default] Handsfree Mode

Activate to use handsfree device for calls.

Main Menu ► **Settings** ► **Connectivity**
 ► **Bluetooth** ► **Settings** ► **Handsfree Setting**

1 Select an item → 


Handsfree Mode	Talk handsfree
Private Mode	Talk with handset



Any call initiated via a handsfree device is automatically connected in Handsfree Mode.

USB

Connect 705P to PCs to activate the following functions.

Data Transfer	Back up Phone Book, music files or still images from 705P to PC. Transfer still images edited/created on PC to 705P. ● Savable File Format:  P.10-3
Data Communication	Use 705P as an external modem to access the Internet ● To set up Internet access, see User's Guide in Utility Software (CD-ROM). ● Terminate all 705P applications before Data Communication starts.

- Install "705P USB-Handset Manager" on PC before connecting 705P with PC. For PC hardware requirements or installing procedures, see Setup Guide in Utility Software (CD-ROM).
- While using USB, Bluetooth®/Infrared connection is not available.

Charging Battery via USB

Connect 705P to PC by USB to charge battery.

- Both PC and 705P must be turned on.
- Charging via USB may take longer and be less effective than charging with AC Charger.

Web Connections

Edit or delete Web Connections for Yahoo! Keitai access.

- Some profiles may not be edited.

Main Menu ► Settings ► Connectivity
► Web Connections



Changing these settings may disable Yahoo! Keitai access.

Handset Security




Changing Handset Code

[Default] 9999

Change Handset Code as required.

- For Handset Code details:  P.1-26

Main Menu ► **Settings** ► **Security**
► **Change Password**

- 1 Enter current 4-digit Handset Code → 
- 2 Enter new 4-digit Handset Code → 
- 3 Reenter new Handset Code → 

USIM PINs



- For further information about PINs:  P.1-8

PIN Entry

[Default] Disable

Activate to require PIN entry each time 705P is turned on.

Main Menu ► **Settings** ► **Security** ► **PIN Entry**
► **Enable/Disable**

- 1 *Enable* or *Disable* → 
- 2 Enter PIN1 → 






When PIN Entry is active, Emergency numbers (110, 119, 118) cannot be dialled without entering PIN1.

Changing PIN1

[Default] 9999

Activate PIN Entry before changing PIN1 (☞ P.12-2).




Main Menu ► **Settings** ► **Security** ► **PIN Entry**
► **Change PIN**

- 1 Enter current PIN1 → 
- 2 Enter new PIN1 → 
- 3 Reenter new PIN1 → 

Changing PIN2

[Default] 9999




Main Menu ► **Settings** ► **Security**
► **Change PIN2**

- 1 Enter current PIN2 → 
- 2 Enter new PIN2 → 
- 3 Reenter new PIN2 → 

PIN Lock & Cancellation (PUK)

PIN1 Lock or PIN2 Lock is activated if PIN1 or PIN2 is incorrectly entered three times. Cancel PIN Lock by entering Personal Unblocking Key (PUK).

- For information about PUK, contact SoftBank Customer Centre, General Information (☞ P.18-32).

- 1 In PIN lock mode, select the function which needs PIN1/PIN2 entry → Enter PUK → 
- 2 Enter new PIN1/PIN2 → 
- 3 Reenter new PIN1/PIN2 → 




- If PUK is incorrectly entered ten times, USIM Card is locked and handset is disabled. Write down PUK.
- For procedures required to unlock USIM Card, contact SoftBank Customer Centre, General Information (☞ P.18-32).



Security Functions

Keyguard




Lock handset keys to prevent accidental operation.

- While Keyguard is set,  appears in Standby.

Set Keyguard


- In Standby, press and hold 
- 

Unlock Keyguard

- When  appear in Standby, 
- 



Note

Emergency numbers (110, 119, 118) can be dialled even when Keyguard is active, however dialled numbers do not appear. If wrong number is entered, press , then re-enter.



Tip

- Alternatively, follow the steps to set Keyguard;


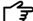
**Main Menu ► Settings ► Phone Settings
► Keyguard**

- When Keyguard and Password Lock are activated simultaneously, Keyguard takes priority. When Keyguard is deactivated, Password Lock becomes active after two minutes of inactivity in Standby.

Password Lock

[Default] OFF

If necessary, activate Password Lock to require Handset Code each time handset is turned on and after two minutes of inactivity in Standby.

- While Password Lock is set,  appears in Standby.
- Handset Code:  P. 1-26



Set/Unlock Password Lock



**Main Menu ► Settings ► Security
► Password Lock**

- ON** or **OFF** → 
- 

3 Enter 4-digit Handset Code →

Temporary Unlock

When  appears, enter 4-digit Handset Code → 

- When Information window appears in Standby,  does not appear even if Password Lock is active. Select items to confirm and delete.  appears.





Emergency numbers (110, 119, 118) can be dialed even when Password Lock is active.

Reject Incoming Calls

Rejecting Specific Calls

Reject specific incoming calls without Phone Book entries, withheld, etc.

Main Menu ► **Settings** ► **Call Settings**
► **Reject Incoming Calls**





- 1 **Unknown, Withheld, Payphone** or **Unavailable** → 
- 2 **ON** or **OFF** → 

Rejecting Specific Numbers

Add numbers to Reject Call Numbers List to reject specific incoming calls. Then set **Reject Call Numbers Setting** to **ON**.

Add Numbers to Reject Call Numbers List

Main Menu ► **Settings** ► **Call Settings**
► **Reject Incoming Calls** ► **Reject Call Numbers**
► **Edit Reject Call Numbers**

- 1  [Menu] → **Add** → 
- 2 **Phone Book, From Call Log** or **Direct input** → 
- 3 Select a number from Phone Book/Call Log, or enter a phone number directly → 

Editing/Deleting a Number in Reject Call Numbers List


Select a number in the list →  [Menu] → **Edit** or **Delete** →




Reject Call Numbers



[Default] OFF

Main Menu ► Settings ► Call Settings
 ► Reject Incoming Calls ► Reject Call Numbers
 ► Reject Call Numbers Setting

1 *ON* or *OFF* → 


When Receiving Calls from Rejected Numbers

Handset does not ring/vibrate, but Information window appears.
 Press  to confirm.


 **Tip** Set 705P to reject all incoming calls or incoming calls while abroad (Call Barring:  P.14-8).


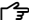
Secret Mode Setting

[Default] OFF

Activate Secret Mode to use Secret Phone Book entries.
 When Secret Mode is active  appears in Standby.

Main Menu ► Settings ► Security
 ► Secret Mode

1 *ON* or *OFF* → 


2 Enter 4-digit Handset Code → 
 ● Handset Code:  P.1-26

 **Tip** When Secret Mode is *OFF*, only numbers/mail addresses appear for incoming communications from Secret entries.

Managing Content Keys

Move downloaded Content Keys to Memory Card before submitting a handset for repairs/replacement.

Move Content Keys from Memory Card to a new, repaired or replacement handset to use the same downloaded applications on that handset.

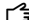
- To download Content Key:  P.10-6
- Some models may not support all downloaded applications.

Main Menu ► **Settings** ► **Security**
 ► **Content Key** ► **Move to Memory Card or**
Move from Memory Card

1 Enter 4-digit Handset Code → 

- Handset Code:  P.1-26



- Content Keys with expiration dates or usage limits cannot be moved to Memory Card.
- Some applications are made for use on specific models. Contact SoftBank Customer Centre, General Information ( P.18-32) for more information.
- USIM Card inserted when Content Keys were moved to Memory Card must be inserted to move Content Keys from Memory Card.
- After moving Content Keys to Memory Card, files requiring Content Keys cannot be opened. Move Content Keys from Memory Card to use them.
- Moving Content Keys to Memory Card creates a special file. If ***Move to Memory Card*** is performed again on the same Memory Card, the previous file is overwritten. Perform ***Move from Memory Card*** beforehand.

Reset

Reset Settings

Cancel custom settings and return handset functions to their default settings.

**Main Menu ► Settings ► Security ► Reset
► Reset Settings**



705P automatically turns off and restarts.

- Handset Code:  P.1-26

 
 


Some default settings may not be restored.

All Reset

Cancel custom settings and return handset functions to their default settings, and clear all Phone Book/Data Folder entries etc.


**Main Menu ► Settings ► Security ► Reset
► All Reset**



705P automatically turns off and restarts.

- Handset Code:  P.1-26



- Charge battery fully ( appears) before All Reset.
- All your Settings, History or downloaded S! Applications deleted by All Reset cannot be restored.
- Deleted pre-installed data (Music, Sounds, Pictures, Templates) in 705P cannot be restored by All Reset.
- Handset Code is reset to default.
- Saved data in USIM Card or Memory Card cannot be deleted.

Tools

Calendar

View by day, week or month; set Alarms for events.

Opening Calendar

Main Menu ► Tools ► Calendar

Current month appears.

- In month view, red indicates selected date, red frame the current date and light blue date with scheduled event(s). (Colour differs by Display Theme.)
- When a date with schedule events is selected, up to three events appear.



One Month View

Month View Key Assignments

Operation	Assigned Key
Move Cursor	
Show Previous Month	
Show Next Month	

View Format

[Default] One Month

Select One Week or One Month view; see daily schedules in week view.

Main Menu ► Tools ► Calendar

1 [Menu] → *View Format* →

2 *One Month* or *One Week*



- In week view, red indicates selected date, red underline the current date and light blue date with scheduled event(s). (Colour differs by Display Theme.)






One Week View

Week View Key Assignments

Operation	Assigned Key
Move Cursor	
Scroll Up/Down	
Show Next Time Block	
Show Previous Time Block	

Viewing Calendar Event Details

Main Menu ► Tools ► Calendar




- 1 Select a date → 
- 2 Select a schedule → 
Detailed schedule appears.
- 3  [Back] to exit



Event Details

Searching Specific Day





Main Menu ► Tools ► Calendar

- 1 In month or week view,  [Menu] → *Go to Date* → 
- 2 Enter a date → 
Cursor jumps to the date in Calendar.

Calendar Settings

Setting Week Start Day






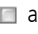

Main Menu ► Tools ► Calendar

- 1 In month or week view,  [Menu] → *Settings* → 
- 2 *Start Week From* → 
- 3 Select a day → 

Setting Day Off

Day Off dates appear in red.

Main Menu ► Tools ► Calendar




- 1 In month or week view,  [Menu] → *Settings* → 
- 2 *Set Day Off* → 
- 3 Select a day → 
 - ☒ appears by Day. Repeat Step 3 to select other days.
 - To cancel setting, press .  appears.
- 4  [OK]


Creating Calendar Events


Save up to 100 entries.

Item	Description	Default
Note	Enter up to 96 characters	-
Category	Select an event type; icon appears in Standby	No Category
Start Date & Time	Set date and time the calendar event starts	Current Date & Time
End Date & Time	Set date and time the calendar event ends	Current Date & Time
Repeat Type	Set entry to appear again at regular intervals	Once
Reminder	Set alarm time	OFF
Location	Enter up to 20 characters	-
Schedule Tone	Set schedule alarm ringtone	-
Schedule Volume	Set schedule alarm volume	Volume 4
Illumination	Set schedule alarm illumination colour	Sky Blue







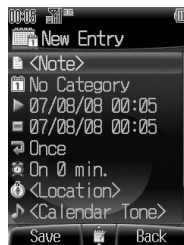





Main Menu ► Tools ► Calendar














1  to select a date →  [Menu] → **New Entry** → 

2 Select an item → 



3 Set the following as required




	Note	Enter title → 
	Category	Select category → 
	Start Date & Time	Enter date →  → Enter time → 
	End Date & Time	
	Repeat Type	<i>Once, Daily, Weekly, Monthly</i> or <i>Yearly</i> →  → Enter repeating time → 

	Reminder	<i>OFF, Start Time</i> or <i>5-90 min. ahead</i> → 
	Location	Enter location → 
	Schedule Tone	<i>Calendar Tone, Sounds</i> or <i>Music</i> →  → Select a file →  [Decide]
	Schedule Volume	Adjust volume by  or  → 
	Illumination	Select colour or <i>OFF</i> → 

4 [Save]

Schedule Icon

Selected icons in Category appears in Standby.

Example:  (Meeting),  (Anniversary),  (Birthday)


● If nothing selected,  appears.


Memory Status

In month or week view,  [Menu] → **Memory Status** → 







At Reminder Time

If Reminder is set, Schedule Tone sounds and Illumination Light flashes.

1 When Schedule Tone sounds,  Schedule Tone stops and Calendar List appears.

2  to view details

Cancelling Schedule Tone

-  or [**Stop**] to cancel Schedule Tone and return to Standby.
- Press any key except for , [**Stop**], [**View**] or  to cancel Schedule Tone without returning to Standby.









Schedule Tone does not sound in the following cases:

- During a call (Notification appears and 705P vibrates)
- In Manner mode (705P vibrates)
- When handset power is turned off

Editing Calendar Events

Main Menu ► Tools ► Calendar

- 1** Select a date → 
- 2** Select a calendar event → [Menu] → *Edit* → 
- 3** Select an item →  → Edit
 - To edit a calendar event:  P.13-5 "Creating Calendar Events"
- 4** [**Save**] to end

Deleting Calendar Events

Deleting Multiple Calendar Events

- When deleting the events on scheduled date or the past, repetitive entries cannot be deleted.

Main Menu ► Tools ► Calendar

1 Select a date → [Menu] → *Delete* →

2 **Delete Events on Scheduled Date**

Day → → →

Delete Events before Current Date

Past → → →

Delete All Events

All → → [YES] → Enter 4-digit

Handset Code →

- Handset Code: P.1-26

Deleting a Calendar Event

Main Menu ► Tools ► Calendar

1 Select a date →

2 Select a calendar event → [Menu] → *Delete* → →

Sending Calendar Events

Send Calendar events to compatible devices via infrared or Bluetooth®.

- Infrared: P.11-2

- Bluetooth®: P.11-4

Main Menu ► Tools ► Calendar

1 Select a date →

2 Select a calendar event → [Menu] → *Send* →

3 *Infrared* or *Bluetooth* →

Alarms

13 Tools


Setting Alarm


Set up to five alarms. Alarm Tone sounds at the specified time once, everyday or weekly as set.


-  appears in Standby when Alarm is set.

Item	Description	Default
Alarm ON/OFF	Activate or cancel Alarm	OFF
Time	Set Alarm time	00:00
Repeat Type	Select repetition	Once
Alarm Tone	Set Alarm Tone sound	Alarm Tone
Alarm Volume	Set Alarm Tone volume	Volume 4
Pictures	Select image to appear	-
Illumination	Select Illumination colour	Rose







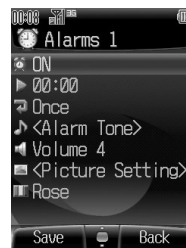











Main Menu ► Tools ► Alarms

1 Select an alarm → 

2 Select an item → 



3 Set the following as required

 / 	Alarm ON/OFF	ON or OFF → 
	Time	Enter time → 
	Repeat Type	Once, Everyday or Weekly → 
	Alarm Tone	Sounds or Music →  → Select a file →  [Decide]
	Alarm Volume	Adjust volume by  or  → 
	Pictures	Select a still image → 
	Illumination	Select colour or OFF → 

4  [Save]

At Alarm Time

Alarm Tone sounds/705P vibrates as set. Alarm Tone sounds for 30 seconds, repeating up to five times at five-minute intervals (Snooze).

- 1 Press a key except 

Alarm stops and confirmation window appears.

- Stops automatically after 30 seconds of inactivity.

2 Stop Snooze Function



Activate Snooze Function

 [Snooze]



Alarm Tone does not sound in the following cases:

- During a call (notification appears and 705P vibrates)
- In Manner mode (705P vibrates)
- When handset power is turned off

Cancelling & Reactivating Alarm

Activate a cancelled Alarm to apply previous settings.

Main Menu ► Tools ► Alarms

- 1 Select an alarm

 appears for set alarms;  for unset/cancelled ones.

- 2  [Menu] → *Alarm ON* or *Alarm OFF* →



13

Tools

Calculator

Complete basic mathematical calculations up to ten digits.

Main Menu ► Tools ► Calculator

Operation	Assigned key
Number (0 -9)	-
+	
-	
X	
÷	
=	
Decimal point	
Clear	/
Toggle + and -	



Entering Negative Numbers

Enter a number then press to toggle negative/positive value.

Example:

-17+28.5=11.5



Voice Recorder

Record voice memos of up to 60-seconds.

- Recording during a call: P.2-9

Recording

Main Menu ► Tools ► Voice Recorder



Recording starts.



- To play:



Recorded sounds are saved in Sounds folder.

Optional Services

Overview

- When **OUT** appears, 705P cannot access services.
- For details, contact SoftBank Customer Centre, General information (☎ P.18-32).


Call Divert (☎ Right)	Forward unanswerable calls to a preset number when 705P is off/out-of-range.
Voice Mail (☎ P.14-4)	Unanswered calls are forwarded to Voice Mail Centre as set or when 705P is off/out-of-range. <ul style="list-style-type: none"> ● Missed Call Notification SMS is delivered for calls missed while 705P was off, out-of-range, etc.
Call Waiting* (☎ P.14-6)	Place the current call on hold and answer a second, or alternate between calls.
Multiparty Call* (☎ P.14-7)	Call another party during a call and alternate between calls. Add other parties to talk on up to five lines simultaneously.
Call Barring (☎ P.14-8)	Restrict calls by condition.
Caller ID (☎ P.14-10)	Show or hide your number when calling.

* Separate subscription required






Call Divert

- Voice Mail and Call Divert cannot be set simultaneously.
- Call Divert is not available when **Bar All Outgoing Calls** or **Bar All Incoming Calls** is active.



Activating Call Divert

-  appears in Standby when Call Divert is active.

Main Menu ► **Settings** ► **Call Settings**
 ► **Diverts** ► **Voice&Video Call, Voice Call or Video Call**


- 1 **All Incoming Calls** or **Unanswered Calls**
 → [Menu]
 - For **All Incoming Calls**, 705P does not ring/vibrate.
 - For **Unanswered Calls**, 705P rings/vibrates for 15 seconds; press  to answer or [Forward] to forward call.
- 2 **ON** → 
 - To cancel Call Divert: **OFF** → 

3 Direct Entry

Direct input →  → Enter a number → 

Select From Phone Book

Phone Book →  → Select an entry → 

→ Select a number → 

Call Divert status appears.

Cancelling Call Divert

Main Menu ► **Settings** ► **Call Settings**
► **Diverts** ► **Cancel All Diverts & Voice Mail**

1 

Checking Current Status

Main Menu ► **Settings** ► **Call Settings**
► **Diverts** ► **Get Status**

Example:

Video Call, Unanswered Calls

Voice Calls will not be forwarded under any conditions.

Unanswered Video Calls are forwarded to 06xxxxxxxx




- Numbers with the prefixes below cannot be saved:
 - 1 (Public Service Numbers: 110, 119, 118, etc.)
 - 00 (International call numbers: 001, 0041, etc.)
 - 0120 (Toll-free numbers)
 - 0990 (Fee-based services: Dial Q2, etc.)
- Video Calls are diverted only to Video Call-compatible devices that comply with 3G-324M.
- When using Call Divert together with Answer Phone (P.2-7), the function with shorter ring time has response priority. (Priority may change depending on signal conditions.)

Voice Mail

- Calls are forwarded to Voice Mail Centre via Call Divert function; Voice Mail and Call Divert cannot be set simultaneously.
- Voice Mail is not available when **Bar All Outgoing Calls** or **Bar All Incoming Calls** in Call Barring is active.
- For details, contact SoftBank Customer Centre, General information (☎ P.18-32).
- Voice Mail is not available for Video Calls.


Activating Voice Mail



-  appears in Standby when Voice Mail is active.

Main Menu ► Settings ► Call Settings
► Voice Mail ► Voice Mail ON

1 **All Incoming Calls** or **Unanswered Calls**



- For **All Incoming Calls**, 705P does not ring/vibrate. When new messages are recorded, Information window and  appear in Standby.

- For **Unanswered Calls**, 705P rings/vibrates for 15 seconds; press  to answer or  [**Forward**] to forward call.

Voice Mail status appears.

Missed Call Notification

While 705P is off, out-of-range or unavailable to answer calls, Missed Call Notification records are stored at the Centre, then sent to 705P via SMS.

Cancelling Voice Mail

Main Menu ► Settings ► Call Settings
► Voice Mail ► Cancel All Diverts & Voice Mail



Checking Current Status


Main Menu ► **Settings** ► **Call Settings**
 ► **Voice Mail** ► **Get Status**

Example:

Voice Mail ON, All Incoming Calls

All Voice Calls are forwarded to Voice Mail Service Centre directly

705P does not ring/vibrate for 15 seconds before forwarding calls

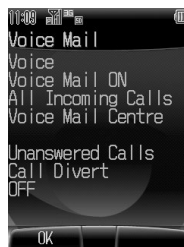



When using Voice Mail together with Answer Phone (P.2-7), the function with shorter ring time takes priority. (Priority may change depending on signal conditions.)

Checking Voice Mail Messages

Information window and  appear in Standby when new messages are recorded.

● Information window:  P.1-15

1 In Information window, **Voice Mail** → 

- Follow the voice guidance for further operations.
- Information window and  disappear after messages are checked.



Alternatively, follow the operations below to check Voice Mail messages.

- Press and hold  in Standby.
- **Main Menu** ► **Settings** ► **Call Settings**
 ► **Voice Mail** ► **Listen to Voice Mail**

Call Waiting



[Separate subscription]

- Call Waiting is not available for Video Calls.

Call Waiting ON/OFF

Main Menu ► Settings ► Call Settings
► Call Waiting


Call Waiting status appears.

- 1  [Menu] → **ON** or **OFF** → 
Current status appears.


Using Call Waiting

During a call, tone sounds in Earpiece and second caller's number appears on Display.

- Name appears if saved in Phone Book.

- 1 When tone sounds, 
First line is put on hold and second is connected.

Rejecting Calls

When tone sounds, press  [Reject].

Switching between Two Lines

Press .

Ending Both Calls at Once

Press . All lines are disconnected.

When Active Call Ends

Press  to re-engage the party on hold.




- When Voice Mail or Call Divert is active, unanswered calls are transferred to Voice Mail Centre or the forwarding number.
- When Voice Mail or Call Divert is set to **All Incoming Calls**, Call Waiting is disabled and calls are transferred to Voice Mail Centre or the forwarding number.

Multiparty Call

[Separate subscription]

- Multiparty Call is not available for Video Calls.



Dialling New Number during a Call

- 1 Enter a number during a call → 
The line switches. The other line is placed on hold.

Using Phone Book

During a call,  [Menu] → *Phone Book* →  → Select an entry →  [Recall] → 

Swap Calls



- 1 During a call, 
 - Press  to toggle lines.

 **Tip** Alternatively,  [Menu] → *Swap* → 




When Active Call Ends

Press  to re-engage party on hold.




Conference Call

- 1 While switching between two lines,  [Menu] → *Merge* → 
Connect up to five lines simultaneously.


Adding a New Party to a Call

1. Enter a phone number during a Conference Call → 
two lines can be switched.
2.  [Menu] → *Merge* → 
A new party is added to Multiparty Call.

Checking Members

 [Menu] → *Member* → 
Member list appears and members' phone numbers can be viewed. Member names appear if saved in Phone Book. To disconnect individual members, select a member from Member list and press  [End].

Ending Calls

Press  [End]. All lines are disconnected.
Parties may leave Conference Call without affecting others.

Call Barring

Restrict incoming/outgoing Voice Calls, Video Calls or SMS messages.

- **Bar All Outgoing Calls** and **Bar All Incoming Calls** for Voice Calls are disabled when Call Divert or Voice Mail is active.

Outgoing Calls	Bar All Outgoing Calls	Restrict all non-emergency calls
	Bar All International Calls	Allow only domestic calls
	Bar International Calls	Restrict all international calls except to Japan
Incoming Calls	Bar All Incoming Calls	Reject all calls
	Bar All If Roamed	Reject calls when outside Japan

- Security Code selected at initial subscription (☞ P.1-26) is required to change Call Barring settings.



If Security Code is incorrectly entered three times, Call Barring settings are locked. To resolve, Security Code and Centre Access Code must be changed. For details, contact SoftBank Customer Centre, General Information (☞ P.18-32).



- If call is attempted when Call Barring is active, warning message appears. It may take longer to appear in some areas. Check Call Barring settings if the message does not appear.
- To reject calls without Caller ID or from specific phone numbers: ☞ P.12-5

Restricting Outgoing Calls

Set or cancel restriction of outgoing calls. Check Call Barring status for outgoing calls.

Main Menu ► Settings ► Call Settings
► Call Barring ► Outgoing Calls

- 1 **Bar All Outgoing Calls, Bar All International Calls** or **Bar International Calls** → [Menu]
- 2 **ON, OFF** or **Status** →

When **Status** is set, current status appears.
When **ON** or **OFF** is set, go to Step 3.
- 3 Enter 4-digit Security Code →

Current status appears.






Emergency numbers (110, 119, 118) are available when Call Barring for outgoing calls is active.

Restricting Incoming Calls

Set or cancel incoming call restriction; confirm status.

Main Menu ► **Settings** ► **Call Settings**
► **Call Barring** ► **Incoming Calls**

- 1 **Bar All Incoming Calls** or **Bar All If Roamed** →  [Menu]
- 2 **ON, OFF** or **Status** → 
When **Status** is set, current status appears.
When **ON** or **OFF** is set, go to Step 3.
- 3 Enter 4-digit Security Code → 
Current status appears.

Cancelling All Call Barring

Main Menu ► **Settings** ► **Call Settings**
► **Call Barring** ► **Cancel All Barring**




- 1 Enter 4-digit Security Code → 

Checking Call Barring Status

Main Menu ► **Settings** ► **Call Settings**
► **Call Barring** ► **Get Status**

Changing Security Code

Main Menu ► **Settings** ► **Call Settings**
► **Call Barring** ► **Set Security Code**


- 1 Enter current 4-digit Security Code → 
- 2 Enter new 4-digit Security Code → 
- 3 Reenter new Security Code → 


Caller ID















[Default] Network Set

- **Network Set** Caller ID setting varies by subscription.

Main Menu ► Settings ► Call Settings
► Show My Number

1 Select **ON**, **OFF** or **Network Set** → 

 Alternatively, enter these numbers/Symbols before the phone number to show or hide Caller ID for the call:

Show	   or    
Hide	   or    

Messaging

Basics

Send messages via Mail or SMS.

Mail	Exchange longer text messages with SoftBank or e-mail compatible handsets, PCs, etc.; attach image/sound files.
SMS	Exchange short text messages with SoftBank handsets.

- For further information, contact SoftBank Customer Centre, General Information (☎ P.18-32).
- Separate subscription required to use Mail and to receive e-mail.

Available Entry Items & Character Entry Limits

15


Messaging

Item		Mail		SMS	
Address	E-mail address	<input type="radio"/>	Up to 246 half-pitch alphanumerics/ Up to 20 items	×	-
	Phone number	<input type="radio"/>		<input type="radio"/>	Up to 20 half-pitch alphanumerics/ one item
Subject		<input type="radio"/>	Up to 256 full-pitch or half-pitch alphanumerics	×	-
Text		<input type="radio"/>	Up to 5000 full-pitch or half-pitch alphanumerics	<input type="radio"/>	Up to 70 full-pitch or half-pitch alphanumerics
Attachment		<input type="radio"/>	Up to 20 files	×	-

- Send up to 300KB including subject, message text and attachment via Mail. Message text character limit differs by attachment size.
- Entry limit decreases when remaining memory falls below 20KB. Delete messages (☎ P.15-21).
- Enter SoftBank handset numbers in Address field.
- SMS messages can be converted to MMS (☎ P.15-9) but not vice versa.

Messaging Folders

Messages are organized in folders by message type.

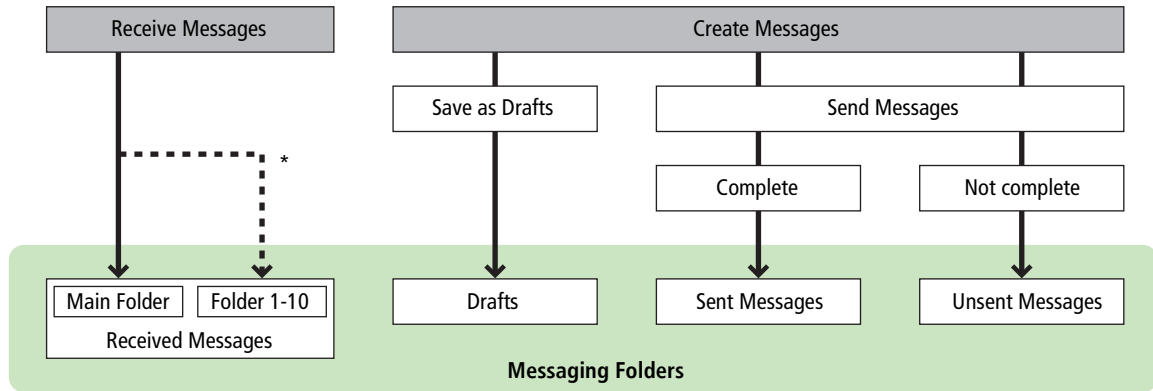


* Set Distribution Rule (📧 P.15-24) to sort received messages automatically.


Messaging Memory Status

Save up to 1000 Mail messages (approximately 5MB) and 500 SMS messages in Messaging folders.

When Mail Memory is Full


-  (Received Full/Server Mail Saved) appears in Standby and a warning appears for new incoming messages. Delete old messages (☞ P.15-21) then retrieve Server Mail: **Main Menu ► Messaging ► Check New Message.**  disappears when all Server Mail is retrieved.
- Mail message operations are unavailable when Mail Memory is low (under 10KB). Delete old messages (☞ P.15-21).

When SMS Memory is Full

- Save SMS to USIM Card automatically (USIM Card appears in Received Messages list). When 705P & USIM Card Memory are full,  (SMS Memory Full) appears in Standby and a warning appears for new incoming messages. Delete old SMS (☞ P.15-21).

Checking Mail/SMS Memory Status

Main Menu ► Messaging ► Memory Status
► Mail or SMS

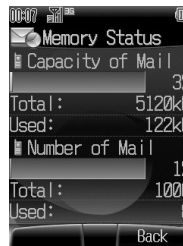

Example: Mail Memory Status

Window Description











Messaging Folder Contents

Received or Sent Date & Time, and Mail Subject or SMS Message Text




Example: Received Messages Main Folder

Message Type/Status

Message Type	Message Status
 /  Unread/Read Mail	 Attachments
 /  Unread/Read Mail Notice	 (Gold) Protected
 /  Unread/Read SMS	
 /  Unread/Read USIM Card SMS	

Message Contents

Sender/
Recipient
Subject

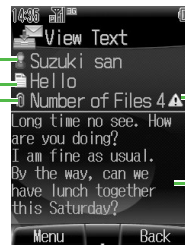

System Message
Icon (P.15-15)

Message Text


Number of Attachments

The number of files (images, sounds, videos, text, etc.) appears.

 appears for an HTML file.

Customizing Handset Address

Change your handset mail address (alphanumerics before @) to reduce the risk of receiving spam. Default Access Name is random alphanumerics.

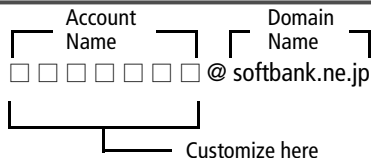

- For details, contact SoftBank Customer Centre, General Information (☞ P.18-32).
- Handset mail address cannot be changed in Offline mode.
- For operations while using web: ☞ P.16-5 "Basic Operations"

Main Menu ► Messaging ► Settings

1 *Email Address Settings* →

705P connects to the Network.
Follow onscreen instructions.

Sending Mail & SMS

Creating & Sending Mail Messages

- Available Entry Items and Character Entry Limits: ☞ P.15-2
- Character Input Modes: ☞ P.3-2

Main Menu ► Messaging ► Create Message



Mail Composition Window

- Enter an address**
Add Address → → Select a Phone Book entry → → Select a SoftBank handset number or mail address →

- To enter an address directly: **Add Address** → → **Enter Number** or **Enter Address** → → Enter a SoftBank handset number or mail address →
- To edit address list: P.15-8

2 Enter a subject

Add Subject → → Enter subject →

3 Enter a message

Input Text → → Enter text →

4 Attach a file

Add Attachment → → **Pictures**, **Sounds**, **Videos** or **Music** → → Select a file → **[Decide]**

The number of attachments appears.

- Data Folder: P.10-2
- To add more attachments: P.15-8

5 **Send** →

When Recipient Handset is Off or Out-of-Range

Messages are stored at the Centre, and delivered when recipient handset detects signal.

Delivery Report

When messages are sent with Delivery Report **On**, handset receives a Delivery Report from the Centre.

After Step 2, **[Menu]** → **Delivery Report** → → **ON** →

- To set Delivery Report always on: P.15-23

Unsent Messages

Number of unsent messages appears in parenthesis.




- **Send** appears in Mail Composition window after entering address.
- Some files may not be attached depending on the file format or size.
- Some copyrighted files may not be sent.






Editing Recipient List

■ Adding Recipients to To Field

Recipients entered in Add Address receive as To. Multiple recipients can be entered.



- 1 In Mail Composition window, **Add Address** → 



Recipient list appears.

- 2  [Menu] → **Add** →  → Select or enter a recipient → 
 - To delete a recipient:  [Menu] → **Delete** → 



■ Adding Recipients to Cc or Bcc Field





Recipients can be set to Cc (carbon copy) or Bcc (blind carbon copy). Other recipients cannot see numbers/address set to BCC.

-  appears for Cc and  appears for Bcc.

- 1 In Mail Composition window,  [Menu] → **Edit Cc** or **Edit Bcc** → 


Each recipient list appears.

- 2 **Add New** →  → Select or enter a recipient → 

- To add a recipient:  [Menu] → **Add** →  → Select or enter a recipient → 
- To delete a recipient:  [Menu] → **Delete** → 

- 3 To return to Mail Composition window,  [Back]

Adding Attachments

- 1 In Mail Composition window, **Add Attachment** → 

Attachment list appears.

- 2  [Menu] → **Add** → 
 - To delete a file:  [Menu] → **Delete** → 

- 3 **Pictures, Sounds, Videos** or **Music** → 


→ Select a file →  [Decide]

- 4 To return to Mail Composition window,  [Back]

Creating & Sending SMS Messages

- Available Entry Items and Character Entry Limits: P.15-2
- Character Input Modes: P.3-2

Main Menu ► Messaging ► Create New SMS

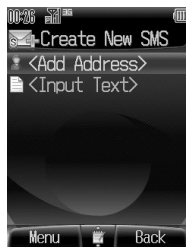

SMS Composition Window

1 Enter an address

Add Address → → Select a Phone Book entry → → Select a SoftBank handset number →

- To enter an address directly: **Add Address** → → **Enter Number** → → Enter a SoftBank handset number →

2 Enter a message

Input Text → → Enter text →

3 Send →

Automatic Mail Conversion

When more than 70 characters are entered, entry limit changes to Mail limit automatically; when message text entry is complete, Mail conversion option message appears.

Manual Mail Conversion

In SMS Composition window, [Menu] → **Switch Message Type** →

Delivery Report

When messages are sent with Delivery Report **On**, handset receives a Delivery Report from the Centre.

After Step 2, [Menu] → **Create Options** → → **Delivery Report** → → **ON** →

- To set Delivery Report always on: P.15-23

Setting SMS Expiry Time


Centre SMS are deleted at expiry time.

After Step 2, [Menu] → **Create Options** → → **Expiry Time** → → Select a limit →

- To set Expiry Time for all sent SMS: P.15-26

Unsent Messages

Number of unsent messages appears in parenthesis.

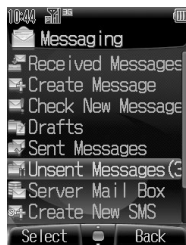

- **Send** appears in SMS Composition window after entering address.
- To set not to save sent SMS: P.15-26

Editing Recipient's Phone Number

- 1 In SMS Composition window, **Add Address**
→
- 2 → Edit a phone number →
- 3 To return to Mail Composition window,
 [Back]

Using Delete & Add New

After Step 2, **[Menu]** → **Delete** → → **Add New** →
 → Select an entry from Phone Book, or **Enter Number** →
 → Enter a SoftBank handset number →

Using Drafts

Save incomplete/unsent messages to Drafts to edit or send later.

Saving to Drafts

- 1 In Mail/SMS Composition window, **[Menu]**
→ **Save as Drafts** →

Sending from Drafts

Main Menu ► **Messaging** ► **Drafts**


- 1 To edit, select a message →
- 2 **[Menu]** → **Edit** → → Edit the message
- 3 **Send** →

Receiving Mail & SMS

Opening New Messages

When a new message is received, message tone sounds and Illumination Light flashes; Information window opens in Standby.

- Total number of Mail and SMS appear in Information window and Received Messages.

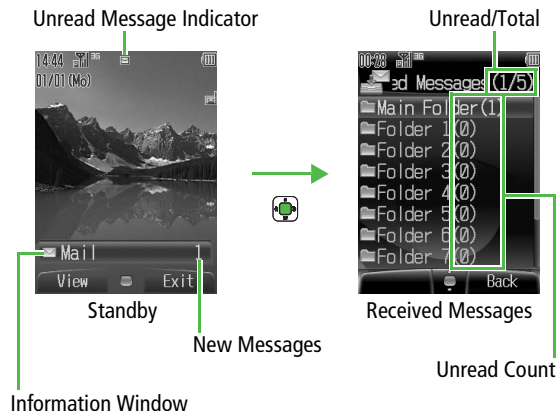

- 1 In Information window, **Mail** →
- Received Messages appears.

- 2 **Main Folder** →

- 3 Select an unread message →

- Window Description: P.15-5
- Retrieving Complete Mail: P.15-12
- Checking Message Contents: P.15-14

New Message Out of Standby

Message tone sounds, Illumination Light flashes, flashes, and Delivery Notice appears.

- During a call, two beeps sound from Earpiece; when 705P returns to Standby Information window opens.
- When Media Player is active, Illumination Light and flash.


Manual Confirmation of Server Mail

- Mail Messages saved while 705P was off/out-of range.
- Messages saved when Mail Memory is full (delete message first).






Main Menu ► Messaging ► Check New Message

Complete Mail message is retrieved regardless of Auto Download setting (P.15-25).






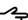
"Invalid SMS" cannot be opened. Delete SMS to cancel
 (Unread message icon).




- Customize message tone and illumination (Assigning Ringtone:  P.7-7/Illuminations:  P.8-2).
- Set ringtones for numbers/addresses in Phone Book ( P.4-4).
- Set Received Messages to automatically open when 705P is opened for the first time after a message is received (Active Folder for New Message:  P.15-23).
- Set Distribution Rule to sort received messages automatically ( P.15-24).

Retrieving Complete Mail


When the Centre sends the initial portion of Mail, retrieve the complete Mail.

-  (Unread) or  (Read) appears in Received messages. After retrieving complete Mail, the icon changes to .
- By default, complete Mail is automatically received when sent from SoftBank handset numbers. The setting can be changed ( P.15-25).

Main Menu ► Messaging ► Received Messages



1 Select a folder → 

2 **From List of Received Messages**

Select a Mail Notice →  [Menu] →

Retrieve → 

From Incomplete Message in Mail Notice

Select a Mail Notice →  → Select **There are sequels** at the end of message text → 





Delete Server Mail ( P.15-22).

Using Server Mail



Receive, forward or delete stored Mail messages at the Centre using Server Mail List.

Retrieving Mail List

Main Menu ► **Messaging** ► **Server Mail Box**
► **Mail List**

- 1  **[Update]** → 
Mail List appears.

Updating List

In Step 1,  **[Menu]** → *Update Mail List* → 

Receiving Server Mail

Receive Mail messages from Mail list. Retrieved Mail messages are deleted from Mail List and saved to Received Messages.







Main Menu ► **Messaging** ► **Server Mail Box**
► **Mail List**

- 1 Select a message →  **[Menu]** → *Retrieve*
→ 

Forwarding Server Mail

Forward Server Mail directly to other SoftBank handsets, PCs, etc. using Mail List. Forwarded Mails are not deleted from Mail List.

Main Menu ► **Messaging** ► **Server Mail Box**
► **Mail List**


- 1 Select a message →  **[Menu]** → *Forward Server Mail* → 
- 2 *Add Address* →  → Enter recipient's address or phone number → 
- 3  **[Menu]** → *Send* → 

Deleting Server Mail

Delete Server Mail from Mail List.

Main Menu ► Messaging ► Server Mail Box

1 Delete a Message

Mail List →  → Select a message →

 [Menu] → **Delete Server Mail** →  →




Delete All Messages


Delete Server Mail All →  →  [YES]

Using Messages




Checking Message Contents

Main Menu ► Messaging ► Received Messages, Drafts, Sent Messages or Unsent Messages

1 Select a message → 




- In Received Messages, select a folder then message.
- To open or save attachments:  P.15-15

Changing Font Size


In Message window,  [Menu] (→ **More** → ) → **Font Size** → 




Message Details

Check subject, sender (From), address (To, Cc, Bcc), Reply-to, date, size, message type, attachment, etc. Details differ by messaging folder and message type.

In message list or Message window,  [Menu] (→ **More** → ) → **Details** → 

System Message

 appears for incoming message problem (e.g., Attachments undelivered) right of attachment field in Message window.

In Message window,  [Menu] → **More** →  → **System Message** → 





Phone Book may take a moment to open just after 705P power is turned on and phone number or mail address appears even if saved in Phone Book. Return to Standby and reconfirm little while later.



Opening & Saving Attachments

- Supported File Formats:  P.10-3


1 In Message window,  [Menu] → **Attachment List** → 

2 Select a file → 



- If multiple files are attached, press  [Back] to return to Attachment List, then repeat Step 2.

3 To save the file,  [Save] → **Phone** or **Memory Card** → 

Content Key Indicator


 (Silver) appears with file requiring a Content Key. If Key has expired, warning appears after Step 2. Acquire new Key to open the file.

Viewing Attachments

In Message window,  [Menu] → **View Attachment** → 
The first music file is played back and all picture files are shown after the message text.

- The following file format can be played back or viewed.
Music file (SMAF, AMR, MIDI, SP-MIDI)
Picture file (JPG, GIF, PNG, BMP, WBMP)

Viewing HTML Mail

If HTML (Hyper Text Markup Language) Mail is received from PC, the icon in attachment field in Message window changes to .

In View Text window,  [Menu] → **HTML View** → 

- Supported file formats are as follows:
Music file (SMAF, AMR, MP4, MIDI, SP-MIDI)
Picture file (JPG, GIF, PNG, BMP, WBMP)
Some music files cannot be played back by the definition of HTML contents.



Image may appear upside down, etc.

Received Messages Folders

Received Messages contains Main Folder and ten sub folders. Edit folder names or move messages between them. Set Distribution Rule to automatically sort received messages into specific folders (👉 P.15-24).

Renaming Folders

- Main Folder name cannot be changed.

Main Menu ► Messaging ► Received Messages

- 1 Select a folder → 📁 [Rename]
- 2 Enter a folder name → 📱

Moving Messages

Main Menu ► Messaging ► Received Messages







- 1 Select a folder → 📱
- 2 Select a message → 📁 [Menu] → *Move* → 📱
 - To move an SMS: after Step 2, *Move to Folder* → 📱
- 3 Select a folder → 📱




SMS saved on USIM Card cannot be moved.

Replying to Messages





Main Menu ► Messaging ► Received Messages

- 1 Select a folder → 
- 2 Select a message →  [Menu] → **To Sender** → 
 - Step 2 is also available in Message window.
 - **Re:** appears before Subject of reply.
 - To reply to a Cc/Bcc Mail: **Reply** →  → **To Sender** or **Reply to All** → 
- 3 Complete message → **Send** → 

 **Tip** Quote original message text when replying via Mail messages (☞ P.15-25).


Forwarding Messages

Main Menu ► Messaging ► Received Messages

- 1 Select a folder → 
- 2 Select a message →  [Menu] → **Forward** → 
 - Step 2 is also available in Message window.
 - **Fw:** appears before Subject and > before quoted message text of forwarded messages.
 - Attachments are also forwarded.
- 3 Enter recipient's address and complete message → **Send** → 

Forwarding Mail Notice/Server Mail





In Step 2, select a Mail Notice →  [Menu] → **Forward** →  → **Forward** or **Forward Server Mail** → 

 **Tip** Messages with copy protected attachments may not be forwarded.

Using Sender's Number/Address






Making a Call to a Sender

Main Menu ► Messaging ► Received Messages

- 1 Select a folder → 
- 2 Select a message →  [Menu] → *Call* → 
 - Step 2 is also available in Message window.
- 3 *Voice Call* or *Video Call* → 

Saving to Phone Book

Main Menu ► Messaging ► Received Messages

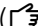
- 1 Select a folder → 
- 2 Select a message →  [Menu] → *Add sender to Phone Book* → 
 - Step 2 is also available in Message window.
- 3 *Create New Entry* or select a Phone Book entry →  → Complete other fields and save ( From Step 1 on P.4-4)

Using Linked Information

Using Phone Numbers

Use linked phone numbers within message text to make calls, send messages or add to Phone Book.





- Available phone numbers are highlighted.

1 In Message window, select a phone number → 




2 **Make Calls**

Call →  → *Voice Call* or *Video Call* → 

Send Messages

Create Message →  → *Mail* or *SMS* →  → Complete message and send (Mail:  From Step 2 on P.15-7/SMS:  From Step 2 on P.15-9)


Add to Phone Book

Add to Phone Book →  → *Create New Entry* or select a Phone Book entry →  → Complete other fields and save ( From Step 1 on P.4-4)

Using Addresses

Use linked addresses within message text to send Mail messages or add to Phone Book




- Available addresses are highlighted.

1 In Message window, select an address → 

2 **Send Mail Messages**


Create Message →  → Complete message and send ( From Step 2 on P.15-7)


Add to Phone Book

Add to Phone Book →  → *Create New Entry* or select an address →  → Complete other fields and save ( From Step 1 on P.4-4)

Using URLs


Use linked URLs within message text to access website or add to Bookmark.

- Available URLs are highlighted.
- Bookmarks:  P.16-7



1 In Message window, select a URL → 


2 **Access Website**

Connect to URL → 

- For operations while using web:  P.16-5 "Basic Operations"


Add to Bookmarks

Add to Bookmark →  → Edit title → 

→ Select a folder → 


Protecting Messages

Protect important messages in Received Messages and Sent Messages from unintentional deletion.

-  (Gold) is attached to protected messages.
- SMS in USIM Card cannot be protected.

Protecting/Unprotecting Received Messages

Main Menu ► **Messaging** ► **Received Messages**

1 Select a folder → 

2 Select a message →  [Menu] → **More** → 

3 **Protect/Unprotect** → 

Protecting/Unprotecting Sent Messages

Main Menu ► **Messaging** ► **Sent Messages**

1 Select a message →  [Menu] → **Protect/Unprotect** → 

Deleting Messages

Delete Mail messages, Mail Notice or SMS messages from messaging folders and Server Mail without retrieving.

Deleting a Message

- 1 In message list, select a message →
 [Menu] → **Delete** →

- 2 **Delete One** → →

Deleting a Message in Message Window

In Message window, [Menu] → **Delete** → →

Deleting Selected Messages

 
- 1 In message list, [Menu] → **Delete** →
→ **Delete Selected Items** →
- 2 Select a message →
The box at the left side of a message changes to ☒.
● Press again to clear the selection, and the box changes to ☐.
- 3 Repeat Step 2 to select more messages
- 4 [Delete] →

Deleting All Messages in a Folder

- 1 In message list, [Menu] → **Delete** →
- 2 **Delete All** → → [YES]
- 3 Enter 4-digit Handset Code →
● Handset Code: P.1-26

Deleting Server Mail

1 In Receiving Messages, select a Mail Notice →



2 *Delete Server Mail* →  → 




Protected messages and SMS saved on USIM Card cannot be deleted.

Copying SMS

Copy SMS between 705P and USIM Card.

●  /  indicate SMS copied to USIM Card.

Main Menu ► Messaging ► Received Messages

1 Select a folder → 

2 Select an SMS →  [Menu] → *Move* → 

3 *Copy to USIM* or *Copy to Phone* → 

Additional Functions


Universal Settings

Active Folder for New Message

[Default] OFF

If active, Received Messages automatically opens each time 705P is opened after a new message is received.

Main Menu ► Messaging ► Settings
► Universal Settings
► Active Folder for New Message

1 *ON* or *OFF* → 

Font Size

[Default] Normal

Change font size.

Main Menu ► Messaging ► Settings
► Universal Settings ► Font Size

1 *Large*, *Normal* or *Small* → 




Alternatively, change Font Size in Message window
(☞ P.15-14).

Delivery Report

[Default] OFF

Confirm Mail/SMS delivery.

Main Menu ► Messaging ► Settings
► Universal Settings ► Delivery Report

1 *ON* or *OFF* → 



Set Delivery Report for each message (Mail: ☞ P.15-7/
SMS: ☞ P.15-9).

15

Messaging

Distribution Rule



Set rules (sender address, subject) by folder to sort received messages automatically.




- Specify up to ten addresses or one Mail subject per folder.
- Distribution by Mail subject is available if the subject of received Mail includes the set subject characters. SMS cannot be sorted by subject.
- Folder names can be changed (📁 P.15-16).

Main Menu ► Messaging ► Settings
► Universal Settings ► Distribution Rule

1 Select a folder →  →  [Menu]

2 **Sort by Sender's Address**

Add Address →  → Select an address or phone number → 

- To enter address directly: **Add Address** →  → **Enter Number** or **Enter Address** →  → Enter address or phone number → 

Sort by Mail Subject

Add Subject →  → Enter a subject → 

Editing or Deleting Set Address/Subject

Select an address or subject →  [Menu] → **Edit** or **Delete** → 



Rules in folders with smaller numbers have higher priority.

Mail Settings

Auto Download

[Default]

Home Network: Allowed only from Phone Number
/Roam Network: Manual Download

Set complete message retrieval to auto or manual for Home/Roam Network.

- When ***Allowed only from Phone Number*** is set, only complete messages addressed to handset number are automatically retrieved.

Main Menu ► Messaging ► Settings
► Mail Settings ► Auto Download
► Home Network or Roam Network

1 Home Download

Auto Download, Allowed only from Phone Number or ***Manual Download***→



Roam Download

Auto Download or ***Manual Download***→



Auto Download may fail in the following scenarios; retrieve complete messages manually (☞ P.15-12):
During calls/while calls are being dialled; when messages are being sent/received; while Yahoo! Keitai is active or files are being downloaded; while an Alarm or Warning Tone sounds; or when 705P is otherwise not in Standby.

Quote Text

[Default] OFF

Quote original message text when replying.

Main Menu ► Messaging ► Settings
► Mail Settings ► Quote Text

1 **ON** or **OFF**→


SMS Settings

Save Sent SMS

[Default] ON

Select whether to store sent SMS at the Centre.

Main Menu ► Messaging ► Settings
► SMS Settings ► Save Sent SMS

1 *ON* or *OFF* → 

Expiry Time

[Default] Depends on USIM Card settings

Set a time limit to store SMS at the Centre.

Main Menu ► Messaging ► Settings
► SMS Settings ► Expiry Time

1 *1 hour, 12 hours, 1 day, 1 week* or
Maximum → 




- SMS are saved at the Centre for specified time limit.
- Set Expiry Time for individual SMS (☞ P.15-9).

Message Centre

[Default] Depends on USIM Card settings

Set SMS Centre number.

Main Menu ► Messaging ► Settings
► SMS Settings ► Message Centre

1 Enter SMS Centre number → 



Changing Message Centre number may disable SMS.

Web

Getting Started

Access the Mobile Internet via Yahoo! Keitai. Browse for image or sound files as well as information.



Address questions about Yahoo! Keitai to SoftBank Customer Centre, General Information (👉 P.18-32).

Cache Memory

Retrieved information is temporarily saved in Cache Memory. When full, oldest is deleted first.

- Previously viewed pages may load from Cache Memory. To view the latest, update information (👉 P.16-12).
- Cached items with expiry dates are deleted upon expiry.
- Information held in Cache Memory can be deleted (👉 P.16-13).
- Information remains in Cache Memory even after 705P is disconnected from the Network or handset power is turned off.

SSL/TLS

SSL (Secure Socket Layer) and TLS (Transport Layer Security) are encryption protocols for secure Internet transmissions of important/sensitive information such as credit card numbers. Electronic certificates are saved on 705P (👉 P.16-14).

Notes




When a security notice appears, subscribers must decide for themselves whether or not to open the page. Opening secure pages constitutes agreement to the terms of usage. SoftBank, VeriSign Japan, GeoTrust Japan, RSA Security, Betrusted Japan, SECOM Trust Systems and Entrust Japan cannot be held liable for any damages associated with the use of SSL and TLS.

Mobile Internet



Opening Yahoo! Keitai Main Menu

Select Yahoo! Keitai Main Menu items to access websites.

Main Menu ► Yahoo! Keitai

- 1** *Yahoo! Keitai* → 
705P connects to the Network.
- 2** Select a menu item → 
- 3** Repeat Step 2 as required
 - Basic Operations:  P. 16-5




Shortcut: In Standby, press  [].

Opening Secure Pages

Confirmation appears for SSL/TLS pages. Press  [OK] to open the secure page.

When Authentication is Required


Some pages require user authentication for access.

If required, enter user ID or password → .

Entering URL

Enter URLs (addresses beginning with "http://" or "https://") directly to access websites.


Main Menu ► Yahoo! Keitai ► Enter URL ► Direct input

- 1** Enter URL → 
Web page appears.



Some pages may not be viewable; images, layouts, etc. may differ from those viewed via PC.




URLs can be entered while viewing a web page (Enter URL:  P. 16-12).

Using URL History

Open previously viewed pages using URL History. Up to 20 access histories are stored; when full, oldest are deleted to make room for new ones.

**Main Menu ▶ Yahoo! Keitai ▶ Enter URL
▶ URL History List**

- 1 Select a URL → 
Web page appears.



To view the web page accessed last:

Main Menu ▶ Yahoo! Keitai ▶ Last Viewed Page

Editing URLs

**Main Menu ▶ Yahoo! Keitai ▶ Enter URL
▶ URL History List**

- 1 Select a URL →  [Menu] → *Edit* →  →
Edit the URL → 
Web page appears.

Deleting History

**Main Menu ▶ Yahoo! Keitai ▶ Enter URL
▶ URL History List**

1 Delete a History

Select a URL →  [Menu] → *Delete* → 
→ 

Delete All History

 [Menu] → *Delete All* →  → 

Exiting Mobile Internet



- 1  → 





Closing 705P does not affect active browser.



Basic Operations



Moving Cursor




Use cursor to select underlined menu items. Press  to move right, and  to move left.

Press  to move to next line, and  to previous line.


Scrolling Pages


Scroll bar appears on right side or at bottom of Display when page content continues beyond view. Press  or  to scroll.

To scroll page down by a screenful, press . To scroll page up by a screenful, press .

- To scroll continuously, press and hold ,  or .

Moving to previous page/next page

Previously viewed pages are temporarily saved in Cache Memory ( P.16-2).

To return to previous page: [Back]

To view next page: [Menu] → **Forward** → 




Some web pages may not appear after performing the steps above.

Text Entry & Item Selection

Enter text or select items to send information.



Actual web pages may differ in appearance.

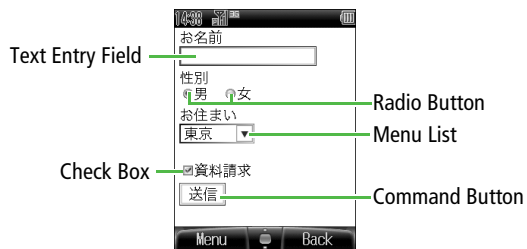

16 Web

Text Entry Field	Highlight field → → Enter text →
Menu List	Highlight field → Menu list appears. Highlight an item → When item is selected, <input type="checkbox"/> changes to <input checked="" type="checkbox"/> .
Radio Button	Highlight <input type="radio"/> → When selected, <input checked="" type="radio"/> appears.
Check Box	Highlight <input type="checkbox"/> → When selected, <input checked="" type="checkbox"/> appears.
Command Button	Highlight the button → Corresponding command is executed.

Using Information







Bookmarks & Saved Pages

Bookmark websites or save page content to Saved Pages.

Bookmarks	Save links to websites. 705P connects to the Network to access the websites. Create folders to organize Bookmarks.
Saved Pages	Save page content. 705P opens saved pages without connecting to the Network.

Saving Bookmarks & Saved Pages

Main Menu ► Yahoo! Keitai

- 1 **Yahoo! Keitai** → 
705P connects to the Network.
- 2 Open a web page →  [Menu]
- 3 **Bookmarks** or **Saved Pages** → 
- 4 **Add** → 
- 5 Edit Title → 
- 6 For Bookmarks, select a folder → 



Some copyrighted materials cannot be saved.

Viewing Bookmarks & Saved Pages

Main Menu ► Yahoo! Keitai

1 Display Bookmarks

Bookmarks →  → Select a folder → 

Display Saved Pages

Saved Pages → 

2 Select an item →

Managing Bookmarks & Saved Pages

Bookmarks

Changing Folder Names

Main Menu ► Yahoo! Keitai ► Bookmarks

- 1 Select a folder → [Menu] → **Rename** → → Edit title →

Deleting All Bookmarks

Main Menu ► Yahoo! Keitai ► Bookmarks

- 1 Select a folder → [Menu] → **Delete All Bookmarks** →
- 2 [YES] → Enter 4-digit Handset Code →

Options

Main Menu ► Yahoo! Keitai ► Bookmarks

- 1 Select a folder →

- 2 Select a title → [Menu] → Select an item → → Follow the steps below

Go to Page	Open a page
Add Bookmark	→ Enter title → → → → Enter URL → → [Save]
Edit	Edit titles/URLs → [Save]
Move to	Select a folder →
Delete	
Send Bookmark	Mail or SMS → → Enter information and send (Mail: From Step 1 on P.15-6/ SMS: From Step 1 on P.15-9)
Delete All in Folder	[YES] → Enter 4-digit Handset Code →







Panasonic site bookmark cannot be edited/deleted.

Saved Pages

Main Menu ► Yahoo! Keitai ► Saved Pages

- 1 Select a title →  [Menu] → Select an item →  → Follow the steps below







View	Saved page contents appears
Rename	Edit title → 
Delete	
Delete All	 [YES] → Enter 4-digit Handset Code → 

Saving to Data Folder

Save images, sounds, etc. to Data Folder.

Downloading Files

Main Menu ► Yahoo! Keitai

- 1 **Yahoo! Keitai** → 
705P connects to the Network.
- 2 Open a web page →  [Menu] → **Select & Save** → 
- 3 Select a file →  →  [Save] → Select a folder → 

Saving Linked Files

Select linked text →  [Save] → Select a folder → 



Do not remove or insert Memory Card while saving files to Memory Card.



- Do not turn handset power off while downloading or saving files. Files may be damaged.
- Some Copyrighted files may not be saved.

Using Number, Address or URL

Use linked numbers, addresses or URLs to make calls, send messages or access websites. Save them directly to Phone Book.

- Available only when number, address or URL is underlined.



Main Menu ► Yahoo! Keitai

1 **Yahoo! Keitai** →


705P connects to the Network.

2 Open a web page containing phone numbers, mail addresses or URLs



3 Phone Number

Select a phone number →  → **Voice Call**, **Video Call** or **Phone Book** → 

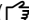
To make a call, select **Voice Call** or **Video Call**.

To save number to Phone Book, select **Phone Book**. Phone Book Entry window appears ( P.4-4).

E-mail Address

Select an address →  → **Mail**, **SMS** or **Phone Book** → 

To create message, select **Mail** or **SMS** (Mail:  P.15-6/ SMS:  P.15-9).

To save address to Phone Book, select **Phone Book**. Phone Book Entry window appears ( P.4-4).

URL

Select URL → 

705P connects to the Network.

Streaming

Enjoy video/sound clips while it downloads.

- Only compatible files support streaming.
- Streaming files cannot be saved.

Main Menu ► Yahoo! Keitai

1 **Yahoo! Keitai** →

705P connects to the Network.


2 Open a web page → Select a file →

Media Player activates and streaming starts.

- To pause:  →  to resume
- Playback Window Operations:  P.9-8

3 to exit






- Streaming requires a continuous Network connection. (Transmission fees apply.)
- Indicators for streaming and Network access condition appear on the upper right of Display ( P.1-13).



- Paused streams may stop after three minutes of inactivity.
- When roaming abroad, streaming may be unavailable or not be performed properly.

Changing Display Size

Press  to toggle Display size while streaming. When switching to Full Screen, Display rotates 90° to the right. To return to Normal Screen, Press  again.

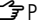- For key operations while streaming, see Playback Window Operations in Media Player ( P.9-8).

Incoming Voice Calls while Streaming

Incoming call pauses an active stream.

- Video Calls cannot be received while streaming.

Option Menu Items

In Yahoo! Keitai, press  [Menu] for the following options:

Forward	Go to next page
Bookmarks	View Bookmarks list or add a new bookmark to the list
Saved Pages	View Saved Pages list or add a new saved page to the list
Select & Save	View or play files, or save them to Data Folder (📁 P.16-9)
Reload Page	Update information
Yahoo! Keitai	Open Yahoo! Keitai Main Menu
More	Enter URL: Enter URL directly to access websites View Current URL: View URL Send Current URL: Send URL via Mail/SMS Server Certificate: View electronic certificates for a secure page

Additional Functions

Browser Settings

Font Size

[Default] Normal

Change character size.

Main Menu ► Yahoo! Keitai
► Browser Settings ► Font Size


1 *Large, Normal* or *Small* → 


Text Browsing

[Default] ON



Select whether to retrieve images and sounds from websites automatically or to view text information only. Retrieving either images or sounds can also be selected.

Main Menu ► Yahoo! Keitai
► Browser Settings ► Downloads

1 *Images* or *Music* → 

2 *ON* or *OFF* → 

Delete Cache & Cookies

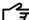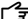- Cache Memory:  P.16-2
- Cookies:  P.16-14

Main Menu ► **Yahoo! Keitai**
► **Browser Settings** ► **Delete Cache&Cookies**






Browser Profiles

Add or edit Browser Profiles to change Browser start page if required.

- Some profiles may be uneditable.

Main Menu ► **Yahoo! Keitai**
► **Browser Settings** ► **Browser Profiles**

Browser Profile list opens.  indicates current profile.

- 1 Select a profile →  **[Menu]**
- To add a new profile: **Empty** →  → Enter information →  **[Save]**



- Browser Profile Settings is only for specific website access.
- Web access may become unavailable if Browser Settings are edited.

Security Settings

Manufacture Number

[Default] OFF

Select whether or not to send handset Manufacture Number automatically for authentication.

Main Menu ► Yahoo! Keitai
► Browser Settings ► Security
► Manufacture Number


1 *ON* (Send) or *OFF* (Not send) → 

Cookies

[Default] ON

Cookies are sent by a server for user identification. Select whether or not to allow Cookies to be stored on 705P.

Main Menu ► Yahoo! Keitai
► Browser Settings ► Security ► Cookies

1 *ON* or *OFF* → 




Cookies can be deleted (☞ P.16-13).

Root Certificates

View electronic certificates issued by Certificate Authorities saved on 705P.

Main Menu ► Yahoo! Keitai
► Browser Settings ► Security
► Root Certificates

1 Select an item → 
Root Certificate details appear.

S! Appli

Before Using S! Appli

S! Appli are Java™-based applications designed to run on SoftBank handsets. Download games and other real-time applications for use on 705P.

- Separate subscription required to use downloaded S! Applications (not required for pre-installed S! Appli).
- See each pre-installed S! Appli's Help menu for usage.



- For further information, contact SoftBank Customer Centre, Customer Assistance (☎ P.18-32).

Network S! Applications

Network S! Applications require Network connections.

- Connection fees apply.

License Information

Main Menu ► **S!Appli** ► **Information**

17

S! Appli

Downloading S! Appli

Download up to 100 S! Applications to 705P and Memory Card.

Main Menu ► **S!Appli** ► **S!Appli Library**

1 **Download S!Appli** →

705P connects to the Network, and the website providing S! Applications appears.

2 Select an S! Application →

Properties appear.


3 Follow onscreen instructions

4 **Phone** or **Memory Card** →

- Downloading may take some time.
- After downloading, S! Application is saved to Data Folder automatically.

5 **[YES]** to activate




Downloaded S! Application starts.

- To exit:  **[NO]**

Using S! Appli

Activating S! Appli

Main Menu ► S!Appli ► S!Appli Library

- 1 Select an S! Application → 
S! Application starts and  appears.
 - For operations, see application Help menu.
 - For a Memory Card S! Application,  to select **Memory Card** tab before Step 1.






- Activate an S! Application; **Main Menu ► Data Folder ► S!Appli ►** Select an S! Application
- Incoming transmissions pause S! Applications.
- An error message may appear while an S! Application using Bluetooth® is paused or due to ambient factors. End the application completely then restart it.
- To use a downloaded S! Application after handset upgrade/replacement, move Content Key to Memory Card beforehand (➔ P.12-7); USIM Card used when application was downloaded must be inserted.

Activate Network S! Application

Confirmation appears after Step 1.

Terminate/Suspend & Resume

Terminating/Pausing S! Appli

- 1 While running an S! Application, 
Confirmation appears.
- 2 **Terminate** or **Suspend** → 
 appears for a suspended application.

Resuming/Terminate Paused S! Appli

Main Menu ► S!Appli ► S!Appli Library

Confirmation appears.

- 1 **Resume** or **Terminate** → 
Resumed application starts from paused point.

Managing S! Appli

Viewing S! Appli properties

Main Menu ► S!Appli ► S!Appli Library

- 1 Select an S! Application →

[Menu] → **Details** →



Name, Contains, Version, Vender, Data size, etc. appear.



Moving S! Appli

Main Menu ► S!Appli ► S!Appli Library

- 1 Select an S! Application → [Menu] →

Move → → Select a folder → →



Some S! Application cannot be moved to Memory Card.

Deleting S! Appli

Main Menu ► S!Appli ► S!Appli Library

- 1 Select an S! Application → [Menu] → **Delete** → → →



Pre-installed S! Applications cannot be deleted.

Setting Security Level

Customize confirmation/operation method.

Main Menu ► S!Appli ► S!Appli Library

- 1 Select an S! Application → [Menu] → **Permission** → →

2 Select an item →

Network Access	Connect to network
Messaging	Send or receive messages
Auto Invocation	Activate S! Applications
Data Reading Access	Read Phone Book, Calendar events, etc.
Data Rewriting Access	Write Phone Book, Calendar events, etc.
Bluetooth	Use Bluetooth®

3 Select an item →

Always Allowed	No confirmation appears
Ask First Time	Confirmation appears the first time application is activated
Ask Every Time	Confirmation appears every time operation selected in Step 2 starts
Not Allowed	Reject operation selected in Step 2






Security Level cannot be set for some S! Applications.

S! Appli Settings

Volume

[Default] Level 4

Main Menu ► S!Appli ► S!Appli Settings
► Volume

1  or  to adjust volume (*Silent, Level 1 - 6*) → 




In Manner mode (P.2-19), volume set in Manner setting applies.

Backlight

[Default] Follow General Setting

Select a Backlight status for S! Applications.

Main Menu ► S!Appli ► S!Appli Settings
► Backlight

1 Select an item → 


Always ON	Backlight remains on while an S! Application runs.
Follow General Setting	Backlight Time setting (☞ P.7-6) applies
Always OFF	Backlight remains off while S! Application runs.

Vibration

[Default] ON

Activate Vibration for S! Applications.

Main Menu ► S!Appli ► S!Appli Settings
► Vibration


1 **ON** or **OFF** → 

Auto Suspend Timer

[Default] Not Suspend

Suspend S! Application after set period of inactivity.

Main Menu ► S!Appli ► S!Appli Settings
► Auto Suspend Timer

1 **Not Suspend, 15 minutes, 30 minutes, 1 hour, 2 hours** or **6 hours** → 

Synchronize Memory Card

Synchronize Memory Card used in another SoftBank handset or a PC, etc. to update S!Appli Library.


Main Menu ► S!Appli ► S!Appli Settings
► Synchronize Memory Card

Appendix

Function List

Press a keypad of a function number to select the function directly.

Example: To select the volume setting in S! Appli menu: **[1] (S!Appli)** → **[2] (S!Appli Settings)** → **[1] (Volume)**

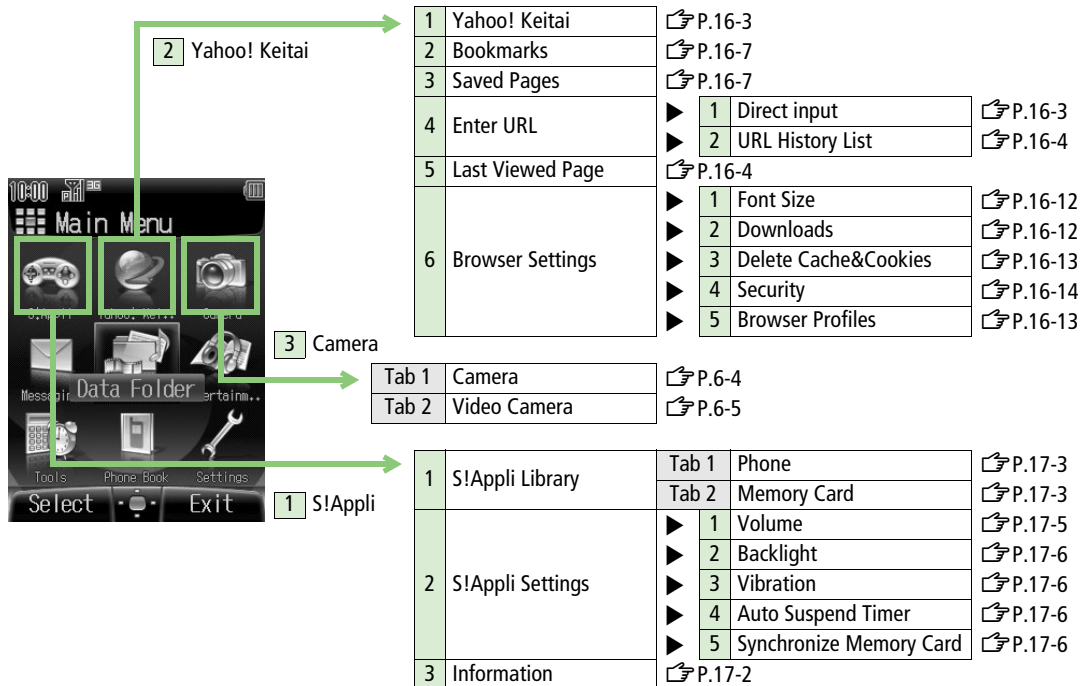

4 Messaging



1	Received Messages	☞ P.15-11
2	Create Message	☞ P.15-6
3	Check New Message	☞ P.15-11
4	Drafts	☞ P.15-10
5	Sent Messages	☞ P.15-3
6	Unsent Messages	☞ P.15-3

7	Server Mail Box	▶	1 Mail List	☞ P.15-13
		▶	2 Delete Server Mail All	☞ P.15-14
8	Create New SMS	☞ P.15-9		
9	Settings	▶	1 Email Address Settings	☞ P.15-6
		▶	2 Universal Settings	☞ P.15-23
		▶	3 Mail Settings	☞ P.15-25
		▶	4 SMS Settings	☞ P.15-26
		▶	1 Mail	☞ P.15-4
		▶	2 SMS	☞ P.15-4
✳	Memory Status	▶		

6 Entertainment

1	Media Player	▶	1 Audio	☞ P.9-2
		▶	2 Video	☞ P.9-2
2	ComicSurfing	☞ P.9-12		
3	Near Chat	☞ P.9-13		
4	S!Loop	☞ P.9-14		




5 Data Folder

7 Tools

1	Pictures	Tab 1	Phone*	☞ P.10-2
		Tab 2	Memory Card*	☞ P.10-2
		Tab 3	DigitalCamera*	☞ P.10-2
2	Sounds	Tab 1	Phone	☞ P.10-2
		Tab 2	Memory Card	☞ P.10-2
3	S!Appli	Tab 1	Phone	☞ P.10-2
		Tab 2	Memory Card	☞ P.10-2
4	Music	Tab 1	Phone	☞ P.10-2
		Tab 2	Memory Card	☞ P.10-2
5	Videos	Tab 1	Phone*	☞ P.10-2
		Tab 2	Memory Card*	☞ P.10-2
		Tab 3	Video Camera*	☞ P.10-2
6	Books	Tab 1	Phone	☞ P.10-2
		Tab 2	Memory Card	☞ P.10-2
7	Templates		☞ P.10-18	
8	Memory Status	▶	1 Phone	☞ P.10-5
		▶	2 Memory Card	☞ P.10-5

* Thumbnail view by default.

1	Alarms	☞ P.13-8
2	Calendar	☞ P.13-2
3	Answer Phone	▶ 1 Message List ☞ P.2-8
		▶ 2 Settings ☞ P.2-7
4	Calculator	☞ P.13-10
5	Voice Recorder	☞ P.13-10
6	Software Update	▶ 1 Start ☞ P.18-11
		▶ 2 Information ☞ P.18-12

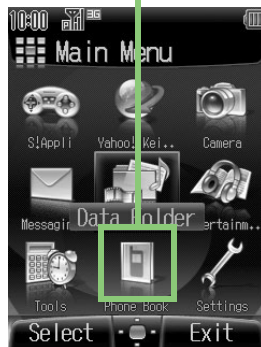

8 Phone Book

1	Phone Book	☞ P.4-8															
2	Create New Entry	☞ P.4-4															
3	Call Log	<table> <tr> <td>Tab 1</td> <td>All Calls History</td> <td>☞ P.2-11</td> </tr> <tr> <td>Tab 2</td> <td>Outgoing</td> <td>☞ P.2-11</td> </tr> <tr> <td>Tab 3</td> <td>Missed Calls</td> <td>☞ P.2-11</td> </tr> <tr> <td>Tab 4</td> <td>Incoming</td> <td>☞ P.2-11</td> </tr> </table>	Tab 1	All Calls History	☞ P.2-11	Tab 2	Outgoing	☞ P.2-11	Tab 3	Missed Calls	☞ P.2-11	Tab 4	Incoming	☞ P.2-11			
Tab 1	All Calls History	☞ P.2-11															
Tab 2	Outgoing	☞ P.2-11															
Tab 3	Missed Calls	☞ P.2-11															
Tab 4	Incoming	☞ P.2-11															
4	Group	☞ P.4-7															
5	My Details	☞ P.4-14															
6	Phone Book Settings	<table> <tr> <td>▶ 1</td> <td>View from</td> <td>☞ P.4-11</td> </tr> <tr> <td>▶ 2</td> <td>Save New Entry</td> <td>☞ P.4-11</td> </tr> <tr> <td>▶ 3</td> <td>Search Method</td> <td>☞ P.4-9</td> </tr> <tr> <td>▶ 4</td> <td>Speed Dial</td> <td>☞ P.4-10</td> </tr> </table>	▶ 1	View from	☞ P.4-11	▶ 2	Save New Entry	☞ P.4-11	▶ 3	Search Method	☞ P.4-9	▶ 4	Speed Dial	☞ P.4-10			
▶ 1	View from	☞ P.4-11															
▶ 2	Save New Entry	☞ P.4-11															
▶ 3	Search Method	☞ P.4-9															
▶ 4	Speed Dial	☞ P.4-10															
7	Manage Phone Book	<table> <tr> <td>▶ 1</td> <td>Memory Status</td> <td>☞ P.4-6</td> </tr> <tr> <td>▶ 2</td> <td>Copy All from USIM</td> <td>☞ P.4-13</td> </tr> <tr> <td>▶ 3</td> <td>Copy All to USIM</td> <td>☞ P.4-13</td> </tr> <tr> <td>▶ 4</td> <td>Memory Card Backup</td> <td>☞ P.10-22</td> </tr> <tr> <td>▶ 5</td> <td>Delete All (Phone)</td> <td>☞ P.4-12</td> </tr> </table>	▶ 1	Memory Status	☞ P.4-6	▶ 2	Copy All from USIM	☞ P.4-13	▶ 3	Copy All to USIM	☞ P.4-13	▶ 4	Memory Card Backup	☞ P.10-22	▶ 5	Delete All (Phone)	☞ P.4-12
▶ 1	Memory Status	☞ P.4-6															
▶ 2	Copy All from USIM	☞ P.4-13															
▶ 3	Copy All to USIM	☞ P.4-13															
▶ 4	Memory Card Backup	☞ P.10-22															
▶ 5	Delete All (Phone)	☞ P.4-12															
8	Service Numbers*	☞ P.4-2															

* Depending on USIM Card.

9 Settings








1	Phone Settings	▶ 1 Mode Settings	👉 P.7-9
		▶ 2 言語設定	👉 P.7-6
		▶ 3 Date & Time	👉 P.1-23, P.7-2
		▶ 4 Keyguard	👉 P.12-4
		▶ 5 Illuminations	👉 P.8-2
		▶ 6 Key Settings	👉 P.8-3
		▶ 7 Offline	👉 P.2-20
2	Sound Settings	▶ 1 Assign Ringtone	👉 P.7-7
		▶ 2 Ringer Volume	👉 P.7-8
		▶ 3 Warning Tone	👉 P.7-8
		▶ 4 Vibration Alert	👉 P.7-8
		▶ 5 Key Tone	👉 P.8-2
		▶ 6 Key Tone Volume	👉 P.8-2
3	Display Settings	▶ 1 Wallpaper	👉 P.7-2
		▶ 2 Main Menu Icons	👉 P.7-4
		▶ 3 Themes	👉 P.7-5
		▶ 4 Brightness	👉 P.7-5
		▶ 5 Backlight Time	👉 P.7-6
		▶ 6 Operator Name	👉 P.7-6
4	Call Settings	▶ 1 Total Call Time	👉 P.2-13
		▶ 2 Service Charges	👉 P.2-13
		▶ 3 Call Barring	👉 P.14-8
		▶ 4 Show My Number	👉 P.14-10
		▶ 5 Any Key Answer	👉 P.8-3
		▶ 6 Active Flip	👉 P.8-4
		▶ 7 Auto Answer	👉 P.8-5
		▶ 8 Diverts	👉 P.14-2



4	Call Settings (continued)		9 Voice Mail	P.14-4
			* Call Waiting	P.14-6
			0 Reject Incoming Calls	P.12-5
5	Video Call		# International Setting	P.8-4
			1 Video & Voice	P.5-7
			2 Backlight	P.5-8
			3 Incoming Video Quality	P.5-8
6	Connectivity		4 Alternative Picture	P.5-8
			1 Infrared	P.11-2
			2 Bluetooth	P.11-4
			3 Network Settings	P.2-16
7	Security		4 Web Connections	P.11-11
			5 Retrieve NW Info	P.1-22
			1 PIN Entry	P.12-2
			2 Change PIN2	P.12-3
8	Memory Card Settings		3 Reset	P.12-8
			4 Change Password	P.12-2
			5 Password Lock	P.12-4
			6 Secret Mode	P.12-6
			7 Content Key	P.12-7
			1 Format Memory Card	P.10-21
			2 Check Memory Card	P.10-22

Troubleshooting




Problem	Causes and Remedies
705P does not turn on	<ul style="list-style-type: none"> Was  pressed for more than three seconds? Is battery level sufficient? Is battery inserted properly? (👉 P.1-18)
Handset functions do not work after turning power on	<ul style="list-style-type: none"> Does PIN Entry window appear? PIN Entry is Enable. Enter PIN1. (👉 P.12-2)
Insert USIM or Invalid USIM appears when 705P is turned on or operations attempted	<ul style="list-style-type: none"> Is USIM Card inserted correctly? (👉 P.1-7) Unusable USIM Card may be inserted. (👉 P.1-6) USIM Card IC chip may be dirty. Wipe with a clean cloth, then insert USIM Card correctly.
Keypad does not respond	<ul style="list-style-type: none"> Does  appear in Standby? Keyguard is active. Press  to release it. Does  appear in Standby? Password Lock is active (👉 P.12-4). Enter 4-digit Handset Code (👉 P.1-26) to release it.
Calls or Video Calls cannot be connected or message and Web connections are not available	<ul style="list-style-type: none"> Does OUT appear in Standby? Is 705P out-of-range or in a location where signal is weak? Move to a location where signal is strong. Are you using handset overseas? You must select an operator and set international settings to use handset abroad. (👉 P.2-16) Does  appear in Standby? (👉 P.2-20)
Calls or Video Calls cannot be connected	<ul style="list-style-type: none"> Is area code entered? Is restricting outgoing calls in Call Barring? (👉 P.14-8)
Calls cannot be connected or busy signal sounds after dialling	<ul style="list-style-type: none"> Did you enter area code?

Problem	Causes and Remedies
Calls cannot be made via a Phone Book entry	<ul style="list-style-type: none"> Entry may be saved as Secret. Set Secret Mode ON. (☞ P.12-6)
Entry names do not appear in Call Log or Mail/SMS lists even if saved in Phone Book	<ul style="list-style-type: none"> This may occur just after turning 705P on. Return to Standby and retry later.
Handset does not respond as customized for incoming calls from numbers saved in Phone Book	<ul style="list-style-type: none"> This may occur just after turning 705P on.
Call is interrupted or disconnected	<ul style="list-style-type: none"> Does OUT appear in Standby? Is 705P out-of-range or in a location where signal is weak? Move to a location where signal is strong.
Cannot charge battery	<ul style="list-style-type: none"> Is AC Charger firmly connected to 705P or Desktop Holder? (☞ P.1-19, P.1-20) Is AC Charger securely plugged into an outlet? Is battery installed in 705P correctly? (☞ P.1-18) Is 705P correctly mounted in Desktop Holder? (☞ P.1-20) Make sure 705P, battery, Desktop Holder and AC Charger terminals are clean. Battery may not charge beyond +5°C and +35°C. Battery may need to be replaced.
705P/accessories feel warm	<ul style="list-style-type: none"> AC Charger/Desktop Holder may warm during charging. 705P may warm during long use. This is normal if you can hold it comfortably. Low temperature burns may occur if 705P is held against skin for long periods.
Battery Operating Time is greatly reduced	<ul style="list-style-type: none"> Battery Operating Time may be reduced by environmental factors such as temperature, charging conditions or signal strength, as well as by operations or settings. See "Charging Time & Operating Time" (☞ P.1-15) and "Battery Time" (☞ P.1-16).




If you did not find the remedy to your problem here, please contact SoftBank Customer Centre (☞ P.18-32).

Warning Signs

Problem	Causes and Remedies
 appears	Handset is out-of-range. Move to a location where signal is strong.
 appears	Keyguard is active. (👉 P.12-4) Release Keyguard for key operations. Pressing keys to answer incoming calls is available even if Keyguard is active.
 appears	Password Lock is active. (👉 P.12-4) Release Password Lock for handset operations. Pressing keys to answer incoming calls is available even if Password Lock is active.
Low battery message appears and battery alarm tone sounds	Battery is low. (👉 P.1-12) Charge or replace battery.

Software Update

Check for 705P software updates and download as required. Choose to begin update or schedule update.


- Connection fees do not apply to updates (including checking for updates, downloading and rewriting).
- Fully charge battery beforehand. Even if  appears, low battery message may appear. In this case, charge battery until Charging Indicator goes out.
- Select a place where signal is strong and stable.
- Do not remove battery during the update. Update will fail.
- Other functions are not available during Software Update.
- 705P is disabled until the update is complete. The update may take some time.

Main Menu ► Tools ► Software Update ► Start


1 Follow onscreen instructions


After download is complete, 705P automatically turns off and restarts before Software Update begins. (This process takes approximately 15 seconds.)

After Software Update is complete, 705P automatically turns off and restarts before information appears for successful update. (This process takes approximately 15 seconds.)

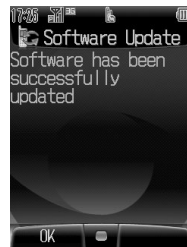

When Already Updated

No update required confirmation appears. Press  [OK] and proceed with use of 705P.

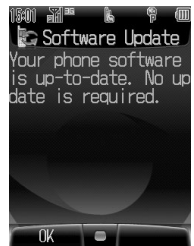


Update Result

In Information window, **Update Result**




- In Standby, **Main Menu** ► **Tools** ► **Software Update** ► **Information**

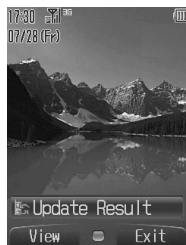


Scheduled Update

Follow onscreen instructions for setup.

Confirmation appears at scheduled update time. Press  or wait ten seconds for update to start.

- Software Update will not start while 705P is in use. Continuing handset usage for ten minutes or more cancels Scheduled Update.

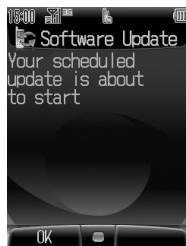

- Software Update failure may disable 705P. Contact SoftBank Customer Centre, Customer Assistance (☎ P.18-32).
- Software Update does not affect Phone Book entries, files saved in Data Folder or other content, but it is recommended that you create a backup, as appropriate, of any important information and data (note that some files cannot be copied).
- SoftBank is not liable for damages resulting from loss of data, information, etc.
- Update automatically cancels Keyguard.



For further information, visit SoftBank website (<http://www.softbank.jp>).

Character Code List

First Three Digits	Last Digit									First Three Digits	Last Digit									First Three Digits	Last Digit											
010	0	1	2	3	4	5	6	7	8	9	044	0	1	2	3	4	5	6	7	8	9	081	0	1	2	3	4	5	6	7	8	9
011	(Space)	.	°	、	∴	ˆ	˙	˚	˛	?	045	と	ど	な	に	ぬ	ね	の	は	ば	ぱ	082	十	十一	十二	十三	十四	十五	十六	十七	十八	十九
012	!	>	ゞ	//	全	々	メ	○	一	ゝ	046	ひ	び	ま	み	む	め	べ	べ	ぼ	083	一	二	三	四	五	六	七	八	九		
013	・	/	＼	（	〔	〕	…	〔	〕	・	047	ゆ	よ	を	らん	り	る	れ	や	わ	084	十	十一	十二	十三	十四	十五	十六	十七	十八	十九	
014	く	》	《	》	〔	〕	…	〔	〕	・	048	み	ゑ	を	らん	り	る	れ	や	わ	085	⑩	⑪	⑫	⑬	⑭	⑮	⑯	⑰	⑱		
015	+	—	±	×	÷	=	≠	<	>	≤	050		ア	イ	ウ	エ	オ				130	①	②	③	④	⑤	⑥	⑦	⑧	⑨		
016	≡	∞	∴	‰	‰	‰	‰	‰	‰	‰	051	オ	カ	キ	ク	ケ	コ				131	⑩	⑪	⑫	⑬	⑭	⑮	⑯	⑰	⑱		
017	\$	¢	£	¥	¥	¥	¥	¥	¥	¥	052	ゴ	サ	シ	ス	セ	ソ				132	②	③	④	⑤	⑥	⑦	⑧	⑨			
018	★	◆	◇	◎	△	▲	▼	※	〒		053	ゾ	タ	チ	ネ	ハ	デ				133	⑩	⑪	⑫	⑬	⑭	⑮	⑯	⑰	⑱		
019	→	↑	↓	⇄	⇒	⇐	⇑	⇒	⇓		054	ト	ダ	ナ	ニ	フ	ミ				134	②	③	④	⑤	⑥	⑦	⑧	⑨			
020	→	↑	↓	⇄	⇒	⇐	⇑	⇒	⇓		055	ヒ	ビ	ポ	ム	メ	ル				135	⑩	⑪	⑫	⑬	⑭	⑮	⑯	⑰	⑱		
021	→	↑	↓	⇄	⇒	⇐	⇑	⇒	⇓		056	ボ	ヨ	エ	ラ	リ	ル				136	②	③	④	⑤	⑥	⑦	⑧	⑨			
022	→	↑	↓	⇄	⇒	⇐	⇑	⇒	⇓		057	ユ	エ	ラ	リ	ル	カ				137	⑩	⑪	⑫	⑬	⑭	⑮	⑯	⑰	⑱		
023	→	↑	↓	⇄	⇒	⇐	⇑	⇒	⇓		058	ヰ	エ	ラ	リ	ル	カ				138	②	③	④	⑤	⑥	⑦	⑧	⑨			
024	→	↑	↓	⇄	⇒	⇐	⇑	⇒	⇓												139	⑩	⑪	⑫	⑬	⑭	⑮	⑯	⑰	⑱		
026	→	↑	↓	⇄	⇒	⇐	⇑	⇒	⇓		060		A	B	Γ	Δ	E	Z	H	Θ	I	160										
027	→	↑	↓	⇄	⇒	⇐	⇑	⇒	⇓		061	K	A	B	Γ	Δ	E	Z	H	Θ	I	161										
028	→	↑	↓	⇄	⇒	⇐	⇑	⇒	⇓		062	Y	Φ	X	N	Ω	β	γ	δ	ε	ζ	162										
029	→	↑	↓	⇄	⇒	⇐	⇑	⇒	⇓		063	θ	ι	κ	λ	μ	ν	ξ	ο	π	ρ	163										
031	→	↑	↓	⇄	⇒	⇐	⇑	⇒	⇓		064	σ	τ	υ	φ	χ	ψ	ω				164										
032	→	↑	↓	⇄	⇒	⇐	⇑	⇒	⇓		065											165										
033	→	↑	↓	⇄	⇒	⇐	⇑	⇒	⇓		070		A	B	Γ	Δ	E	Z	H	Θ	I	166										
034	→	↑	↓	⇄	⇒	⇐	⇑	⇒	⇓		071	И	Й	У	Ф	Х	Ц	Ч	Ш	Щ	Ъ	167										
035	→	↑	↓	⇄	⇒	⇐	⇑	⇒	⇓		072	Т	Б	В	Г	Д	Е	Ж	З	И	Й	168										
036	→	↑	↓	⇄	⇒	⇐	⇑	⇒	⇓		073	б	к	л	м	н	о	п	р	с	т	169										
037	→	↑	↓	⇄	⇒	⇐	⇑	⇒	⇓		074	в	г	д	е	ё	ж	з	и	й	у	170										
038	→	↑	↓	⇄	⇒	⇐	⇑	⇒	⇓		075	к	л	м	н	о	п	р	с	т	у	171										
039	→	↑	↓	⇄	⇒	⇐	⇑	⇒	⇓		076	ф	х	ц	ч	ш	щ	ъ	ы	ь	э	172										
040	→	↑	↓	⇄	⇒	⇐	⇑	⇒	⇓		077	ю										173										
041	→	↑	↓	⇄	⇒	⇐	⇑	⇒	⇓		078											173										
042	→	↑	↓	⇄	⇒	⇐	⇑	⇒	⇓																							
043	→	↑	↓	⇄	⇒	⇐	⇑	⇒	⇓		080	一	丨	乚	乚	乚	乚	乚	乚	乚	乚	173										

First Three Digits	Last Digit									First Three Digits	Last Digit									First Three Digits	Last Digit																		
	0	1	2	3	4	5	6	7	8		9	0	1	2	3	4	5	6	7		8	9	0	1	2	3	4	5	6	7	8	9							
174	曳	詠	銳	泳	洩	瑛	盈	穎	英	207	賈	雁	頑	顏	願	【き】	238	俟	倦	健	兼	券	劍	喧	圈	堅	嫌	239	侯	懣	懣	拳	犬	獻	研	硯	網	梟	梟
175	衛	詠	銳	泳	洩	瑛	盈	穎	英	207	賈	雁	頑	顏	願	【き】	240	建	倦	健	兼	券	劍	喧	圈	堅	嫌	241	侯	懣	懣	拳	犬	獻	研	硯	網	梟	梟
176	閱	樓	厭	洩	洩	瑛	盈	穎	英	208	基	奇	嬉	寄	岐	企	242	肩	懣	懣	拳	犬	獻	研	硯	網	梟	243	侯	懣	懣	拳	犬	獻	研	硯	網	梟	梟
177	掩	援	治	炎	炎	瑛	盈	穎	英	209	旗	既	期	棋	岐	企	244	嶺	懣	懣	拳	犬	獻	研	硯	網	梟	245	侯	懣	懣	拳	犬	獻	研	硯	網	梟	梟
178	艷	苑	園	【お】	【お】	瑛	盈	穎	英	210	紀	微	規	發	岐	企	246	絃	懣	懣	拳	犬	獻	研	硯	網	梟	247	侯	懣	懣	拳	犬	獻	研	硯	網	梟	梟
178										211	紀	微	規	發	岐	企	248	絃	懣	懣	拳	犬	獻	研	硯	網	梟	249	侯	懣	懣	拳	犬	獻	研	硯	網	梟	梟
179										212	紀	微	規	發	岐	企	250	絃	懣	懣	拳	犬	獻	研	硯	網	梟	251	侯	懣	懣	拳	犬	獻	研	硯	網	梟	梟
180										213	紀	微	規	發	岐	企	252	絃	懣	懣	拳	犬	獻	研	硯	網	梟	253	侯	懣	懣	拳	犬	獻	研	硯	網	梟	梟
181										214	紀	微	規	發	岐	企	254	絃	懣	懣	拳	犬	獻	研	硯	網	梟	255	侯	懣	懣	拳	犬	獻	研	硯	網	梟	梟
182										215	紀	微	規	發	岐	企	256	絃	懣	懣	拳	犬	獻	研	硯	網	梟	257	侯	懣	懣	拳	犬	獻	研	硯	網	梟	梟
182										216	紀	微	規	發	岐	企	258	絃	懣	懣	拳	犬	獻	研	硯	網	梟	259	侯	懣	懣	拳	犬	獻	研	硯	網	梟	梟
182										217	紀	微	規	發	岐	企	260	絃	懣	懣	拳	犬	獻	研	硯	網	梟	261	侯	懣	懣	拳	犬	獻	研	硯	網	梟	梟
183										218	紀	微	規	發	岐	企	262	絃	懣	懣	拳	犬	獻	研	硯	網	梟	263	侯	懣	懣	拳	犬	獻	研	硯	網	梟	梟
184										219	紀	微	規	發	岐	企	264	絃	懣	懣	拳	犬	獻	研	硯	網	梟	265	侯	懣	懣	拳	犬	獻	研	硯	網	梟	梟
185										220	紀	微	規	發	岐	企	266	絃	懣	懣	拳	犬	獻	研	硯	網	梟	267	侯	懣	懣	拳	犬	獻	研	硯	網	梟	梟
186										221	紀	微	規	發	岐	企	268	絃	懣	懣	拳	犬	獻	研	硯	網	梟	269	侯	懣	懣	拳	犬	獻	研	硯	網	梟	梟
187										222	紀	微	規	發	岐	企	270	絃	懣	懣	拳	犬	獻	研	硯	網	梟	271	侯	懣	懣	拳	犬	獻	研	硯	網	梟	梟
188										223	紀	微	規	發	岐	企	272	絃	懣	懣	拳	犬	獻	研	硯	網	梟	273	侯	懣	懣	拳	犬	獻	研	硯	網	梟	梟
189										224	紀	微	規	發	岐	企	274	絃	懣	懣	拳	犬	獻	研	硯	網	梟	275	侯	懣	懣	拳	犬	獻	研	硯	網	梟	梟
190										225	紀	微	規	發	岐	企	276	絃	懣	懣	拳	犬	獻	研	硯	網	梟	277	侯	懣	懣	拳	犬	獻	研	硯	網	梟	梟
191										226	紀	微	規	發	岐	企	278	絃	懣	懣	拳	犬	獻	研	硯	網	梟	279	侯	懣	懣	拳	犬	獻	研	硯	網	梟	梟
192										227	紀	微	規	發	岐	企	280	絃	懣	懣	拳	犬	獻	研	硯	網	梟	281	侯	懣	懣	拳	犬	獻	研	硯	網	梟	梟
193										228	紀	微	規	發	岐	企	282	絃	懣	懣	拳	犬	獻	研	硯	網	梟	283	侯	懣	懣	拳	犬	獻	研	硯	網	梟	梟
194										229	紀	微	規	發	岐	企	284	絃	懣	懣	拳	犬	獻	研	硯	網	梟	285	侯	懣	懣	拳	犬	獻	研	硯	網	梟	梟
195										230	紀	微	規	發	岐	企	286	絃	懣	懣	拳	犬	獻	研	硯	網	梟	287	侯	懣	懣	拳	犬	獻	研	硯	網	梟	梟
196										231	紀	微	規	發	岐	企	288	絃	懣	懣	拳	犬	獻	研	硯	網	梟	289	侯	懣	懣	拳	犬	獻	研	硯	網	梟	梟
197										232	紀	微	規	發	岐	企	290	絃	懣	懣	拳	犬	獻	研	硯	網	梟	291	侯	懣	懣	拳	犬	獻	研	硯	網	梟	梟
198										232	紀	微	規	發	岐	企	292	絃	懣	懣	拳	犬	獻	研	硯	網	梟	293	侯	懣	懣	拳	犬	獻	研	硯	網	梟	梟
199										232	紀	微	規	發	岐	企	294	絃	懣	懣	拳	犬	獻	研	硯	網	梟	295	侯	懣	懣	拳	犬	獻	研	硯	網	梟	梟
200										232	紀	微	規	發	岐	企	296	絃	懣	懣	拳	犬	獻	研	硯	網	梟	297	侯	懣	懣	拳	犬	獻	研	硯	網	梟	梟
201										232	紀	微	規	發	岐	企	298	絃	懣	懣	拳	犬	獻	研	硯	網	梟	299	侯	懣	懣	拳	犬	獻	研	硯	網	梟	梟
202										233	紀	微	規	發	岐	企	300	絃	懣	懣	拳	犬	獻	研	硯	網	梟	301	侯	懣	懣	拳	犬	獻	研	硯	網	梟	梟
203										234	紀	微	規	發	岐	企	302	絃	懣	懣	拳	犬	獻	研	硯	網	梟	303	侯	懣	懣	拳	犬	獻	研	硯	網	梟	梟
204										235	紀	微	規	發	岐	企	304	絃	懣	懣	拳	犬	獻	研	硯	網	梟	305	侯	懣	懣	拳	犬	獻	研	硯	網	梟	梟
205										236	紀	微	規	發	岐	企	306	絃	懣	懣	拳	犬	獻	研	硯	網	梟	307	侯	懣	懣	拳	犬	獻	研	硯	網	梟	梟
206										237	紀	微	規	發	岐	企	308	絃	懣	懣	拳	犬	獻	研	硯	網	梟	309	侯	懣	懣	拳	犬	獻	研	硯	網	梟	梟

First Three Digits			Last Digit							First Three Digits			Last Digit							First Three Digits			Last Digit									
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9			
271	鮪	捌	鎗	鮫	鮫	鮫	參	參	山	306	詳	象	賞	3	4	5	鍾	鐘	障	鞘	上	337	漕	燥	爭	3	4	5	6	7	8	9
272	慘	撤	散	鮫	鮫	鮫	參	參	山	307	文	丞	賞	3	4	5	鍾	鐘	障	鞘	上	338	草	壯	葬	3	4	5	6	7	8	9
273	讀	黃	酸	鮫	鮫	鮫	參	參	山	308	情	擾	賞	3	4	5	鍾	鐘	障	鞘	上	339	霜	騷	像	3	4	5	6	7	8	9
273										309	釀	錠	賞	3	4	5	鍾	鐘	障	鞘	上	340		臍	增	3	4	5	6	7	8	9
										310	蝕	丞	賞	3	4	5	鍾	鐘	障	鞘	上	341	捉	臍	像	3	4	5	6	7	8	9
										311	蝕	丞	賞	3	4	5	鍾	鐘	障	鞘	上	342	卒	臍	像	3	4	5	6	7	8	9
										312	蝕	丞	賞	3	4	5	鍾	鐘	障	鞘	上	343		臍	像	3	4	5	6	7	8	9
										313	蝕	丞	賞	3	4	5	鍾	鐘	障	鞘	上	344		臍	像	3	4	5	6	7	8	9
274										314	蝕	丞	賞	3	4	5	鍾	鐘	障	鞘	上	345		臍	像	3	4	5	6	7	8	9
275										315	蝕	丞	賞	3	4	5	鍾	鐘	障	鞘	上	346		臍	像	3	4	5	6	7	8	9
276										316												347		臍	像	3	4	5	6	7	8	9
277										317												348		臍	像	3	4	5	6	7	8	9
278										318												349		臍	像	3	4	5	6	7	8	9
279										319												350		臍	像	3	4	5	6	7	8	9
280										320												351		臍	像	3	4	5	6	7	8	9
281																						352		臍	像	3	4	5	6	7	8	9
282																						353		臍	像	3	4	5	6	7	8	9
283																						354		臍	像	3	4	5	6	7	8	9
284										320												355		臍	像	3	4	5	6	7	8	9
285										321												356		臍	像	3	4	5	6	7	8	9
286										322												357		臍	像	3	4	5	6	7	8	9
287										323												358		臍	像	3	4	5	6	7	8	9
288										324												359		臍	像	3	4	5	6	7	8	9
289										325												360		臍	像	3	4	5	6	7	8	9
290										326												361		臍	像	3	4	5	6	7	8	9
291										327												362		臍	像	3	4	5	6	7	8	9
292										328												363		臍	像	3	4	5	6	7	8	9
293										329												364		臍	像	3	4	5	6	7	8	9
294										330												365		臍	像	3	4	5	6	7	8	9
295										331												366		臍	像	3	4	5	6	7	8	9
296										332												367		臍	像	3	4	5	6	7	8	9
297																						368		臍	像	3	4	5	6	7	8	9
298										332												369		臍	像	3	4	5	6	7	8	9
299										333												370		臍	像	3	4	5	6	7	8	9
300										334												371		臍	像	3	4	5	6	7	8	9
301										335												372		臍	像	3	4	5	6	7	8	9
302										336												373		臍	像	3	4	5	6	7	8	9
303																						374		臍	像	3	4	5	6	7	8	9
304																						375		臍	像	3	4	5	6	7	8	9
305																						376		臍	像	3	4	5	6	7	8	9

First Three Digits	Last Digit									First Three Digits	Last Digit									First Three Digits	Last Digit											
	0	1	2	3	4	5	6	7	8	9		0	1	2	3	4	5	6	7	8	9		0	1	2	3	4	5	6	7	8	9
367	剝	貞	呈	堤	定	帝	底	庭	廷	弟	392	乃	廼	廼	之	【の】	囊	惱	濃	納	能	422	粉	糞	紛	霏	文	聞				
368	悌	抵	挺	提	梯	汀	碇	禎	程	締	393	腦	膿	農	視	蠶	囊	惱	濃	納	能	422	幣	平	弊	柄	並	蔽	丙	併	兵	摒
369	艇	訂	諦	蹄	通	鼎	泥	擢								【は】	巴	把	播	霸	杷	423	幣	壁	癖	碧	別	警	閉	陸	頁	
370	的	笛	適	鈞	鈞	溺	哲	徹	撒	滴	393	的	的	的	的	【は】	巴	把	播	霸	杷	424	幣	壁	癖	碧	別	警	閉	陸	頁	變
371	鉄	典	填	天	展	殿	店	田	電	貼	394	波	派	葛	破	婆	罵	播	霸	杷	425	幣	壁	癖	碧	別	警	閉	陸	頁	變	弁
372	転	顛	点	伝	殿		澱				395	波	派	葛	破	婆	罵	播	霸	杷	426	幣	壁	癖	碧	別	警	閉	陸	頁	變	弁
373				【と】							396	波	派	葛	破	婆	罵	播	霸	杷	426	幣	壁	癖	碧	別	警	閉	陸	頁	變	弁
374	堵	塗	妬	屠	徒	斗	杜	渡	兔	吐	397	爆	泊	白	梅	婢	罵	播	霸	杷	427	穗	保	鋪	鋪	圍	捕	步	甫	補	輔	
375	賭	途	都	屠	徒	斗	杜	渡	兔	吐	398	爆	泊	白	梅	婢	罵	播	霸	杷	428	穗	保	鋪	鋪	圍	捕	步	甫	補	輔	
376	怒	倒	党	冬	凍	斫	唐	塔	登	奴	400	爆	泊	白	梅	婢	罵	播	霸	杷	429	穗	保	鋪	鋪	圍	捕	步	甫	補	輔	
377	宕	島	湯	悖	凍	斫	唐	塔	登	奴	401	爆	泊	白	梅	婢	罵	播	霸	杷	430	穗	保	鋪	鋪	圍	捕	步	甫	補	輔	
378	答	陶	湯	悖	凍	斫	唐	塔	登	奴	402	爆	泊	白	梅	婢	罵	播	霸	杷	431	穗	保	鋪	鋪	圍	捕	步	甫	補	輔	
379	答	陶	湯	悖	凍	斫	唐	塔	登	奴	403	爆	泊	白	梅	婢	罵	播	霸	杷	432	穗	保	鋪	鋪	圍	捕	步	甫	補	輔	
380	鑑	董	湯	悖	凍	斫	唐	塔	登	奴	404	爆	泊	白	梅	婢	罵	播	霸	杷	433	穗	保	鋪	鋪	圍	捕	步	甫	補	輔	
381	懂	董	湯	悖	凍	斫	唐	塔	登	奴	405	爆	泊	白	梅	婢	罵	播	霸	杷	434	穗	保	鋪	鋪	圍	捕	步	甫	補	輔	
382	獨	陶	湯	悖	凍	斫	唐	塔	登	奴	406	爆	泊	白	梅	婢	罵	播	霸	杷	435	穗	保	鋪	鋪	圍	捕	步	甫	補	輔	
383	獨	陶	湯	悖	凍	斫	唐	塔	登	奴	407	爆	泊	白	梅	婢	罵	播	霸	杷	436	穗	保	鋪	鋪	圍	捕	步	甫	補	輔	
384	獨	陶	湯	悖	凍	斫	唐	塔	登	奴	408	爆	泊	白	梅	婢	罵	播	霸	杷	437	穗	保	鋪	鋪	圍	捕	步	甫	補	輔	
385	獨	陶	湯	悖	凍	斫	唐	塔	登	奴	409	爆	泊	白	梅	婢	罵	播	霸	杷	438	穗	保	鋪	鋪	圍	捕	步	甫	補	輔	
386	獨	陶	湯	悖	凍	斫	唐	塔	登	奴	410	爆	泊	白	梅	婢	罵	播	霸	杷	439	穗	保	鋪	鋪	圍	捕	步	甫	補	輔	
386	獨	陶	湯	悖	凍	斫	唐	塔	登	奴	411	爆	泊	白	梅	婢	罵	播	霸	杷	440	穗	保	鋪	鋪	圍	捕	步	甫	補	輔	
387	謎	灘	捺	鍋	奈	那	內	乍	阻	雍	412	肘	否	妃	庇	彼	悲	批	披	匪	441	蜜	湊	養	味	【み】	魅	巴	貧	岬	密	
388	軟	難	汝	二	奈	那	內	乍	阻	雍	413	肘	否	妃	庇	彼	悲	批	披	匪	442	蜜	湊	養	味	【み】	魅	巴	貧	岬	密	
388	軟	難	汝	二	奈	那	內	乍	阻	雍	414	肘	否	妃	庇	彼	悲	批	披	匪	443	蜜	湊	養	味	【み】	魅	巴	貧	岬	密	
388	軟	難	汝	二	奈	那	內	乍	阻	雍	415	肘	否	妃	庇	彼	悲	批	披	匪	444	蜜	湊	養	味	【み】	魅	巴	貧	岬	密	
388	軟	難	汝	二	奈	那	內	乍	阻	雍	415	肘	否	妃	庇	彼	悲	批	披	匪	444	蜜	湊	養	味	【み】	魅	巴	貧	岬	密	
388	軟	難	汝	二	奈	那	內	乍	阻	雍	415	肘	否	妃	庇	彼	悲	批	披	匪	444	蜜	湊	養	味	【み】	魅	巴	貧	岬	密	
388	軟	難	汝	二	奈	那	內	乍	阻	雍	415	肘	否	妃	庇	彼	悲	批	披	匪	444	蜜	湊	養	味	【み】	魅	巴	貧	岬	密	
388	軟	難	汝	二	奈	那	內	乍	阻	雍	415	肘	否	妃	庇	彼	悲	批	披	匪	444	蜜	湊	養	味	【み】	魅	巴	貧	岬	密	
388	軟	難	汝	二	奈	那	內	乍	阻	雍	415	肘	否	妃	庇	彼	悲	批	披	匪	444	蜜	湊	養	味	【み】	魅	巴	貧	岬	密	
388	軟	難	汝	二	奈	那	內	乍	阻	雍	415	肘	否	妃	庇	彼	悲	批	披	匪	444	蜜	湊	養	味	【み】	魅	巴	貧	岬	密	
388	軟	難	汝	二	奈	那	內	乍	阻	雍	415	肘	否	妃	庇	彼	悲	批	披	匪	444	蜜	湊	養	味	【み】	魅	巴	貧	岬	密	
388	軟	難	汝	二	奈	那	內	乍	阻	雍	415	肘	否	妃	庇	彼	悲	批	披	匪	444	蜜	湊	養	味	【み】	魅	巴	貧	岬	密	
388	軟	難	汝	二	奈	那	內	乍	阻	雍	415	肘	否	妃	庇	彼	悲	批	披	匪	444	蜜	湊	養	味	【み】	魅	巴	貧	岬	密	
388	軟	難	汝	二	奈	那	內	乍	阻	雍	415	肘	否	妃	庇	彼	悲	批	披	匪	444	蜜	湊	養	味	【み】	魅	巴	貧	岬	密	
388	軟	難	汝	二	奈	那	內	乍	阻	雍	415	肘	否	妃	庇	彼	悲	批	披	匪	444	蜜	湊	養	味	【み】	魅	巴	貧	岬	密	
388	軟	難	汝	二	奈	那	內	乍	阻	雍	415	肘	否	妃	庇	彼	悲	批	披	匪	444	蜜	湊	養	味	【み】	魅	巴	貧	岬	密	
388	軟	難	汝	二	奈	那	內	乍	阻	雍	415	肘	否	妃	庇	彼	悲	批	披	匪	444	蜜	湊	養	味	【み】	魅	巴	貧	岬	密	
388	軟	難	汝	二	奈	那	內	乍	阻	雍	415	肘	否	妃	庇	彼	悲	批	披	匪	444	蜜	湊	養	味	【み】	魅	巴	貧	岬	密	
388	軟	難	汝	二	奈	那	內	乍	阻	雍	415	肘	否	妃	庇	彼	悲	批	披	匪	444	蜜	湊	養	味	【み】	魅	巴	貧	岬	密	
388	軟	難	汝	二	奈	那	內	乍	阻	雍	415	肘	否	妃	庇	彼	悲	批	披	匪	444	蜜	湊	養	味	【み】	魅	巴	貧	岬	密	
388	軟	難	汝	二	奈	那	內	乍	阻	雍	415	肘	否	妃	庇	彼	悲	批	披	匪	444	蜜	湊	養	味	【み】	魅	巴	貧	岬	密	
388	軟	難	汝	二	奈	那	內	乍	阻	雍	415	肘	否	妃	庇	彼	悲	批	披	匪	444	蜜	湊	養	味	【み】	魅	巴	貧	岬	密	
388	軟	難	汝	二	奈	那	內	乍	阻	雍	415	肘	否	妃	庇	彼	悲	批	披	匪	444	蜜	湊	養	味	【み】	魅	巴	貧	岬	密	
388	軟	難	汝	二	奈	那	內	乍	阻	雍	415	肘	否	妃	庇	彼	悲	批	披	匪	444	蜜	湊	養	味	【み】	魅	巴	貧	岬	密	
388	軟	難	汝	二	奈	那	內	乍	阻	雍	415	肘	否	妃	庇	彼	悲	批	披	匪	444	蜜	湊	養	味	【み】	魅	巴	貧	岬	密	
388	軟	難	汝	二	奈	那	內	乍	阻	雍	415	肘	否	妃	庇	彼	悲	批	披	匪	444	蜜	湊	養	味	【み】	魅	巴	貧	岬	密	
388	軟	難	汝	二	奈	那	內	乍	阻	雍	415	肘	否	妃	庇	彼	悲	批	披	匪	444	蜜	湊	養	味	【み】	魅	巴	貧	岬	密	
388	軟	難	汝	二	奈	那	內	乍	阻	雍	415	肘	否	妃	庇	彼	悲	批	披	匪	444	蜜	湊	養	味	【み】	魅	巴	貧	岬	密	
388	軟	難	汝	二	奈	那	內	乍	阻	雍	415	肘	否	妃	庇	彼	悲	批	披	匪	444	蜜	湊	養	味	【み】	魅	巴	貧	岬	密	
388	軟	難	汝	二	奈	那	內	乍	阻	雍	415	肘	否	妃	庇	彼	悲	批	披	匪	444	蜜	湊	養	味	【み】	魅	巴	貧	岬	密	
388	軟	難	汝	二	奈	那	內	乍	阻	雍	415	肘	否	妃	庇	彼	悲	批	披	匪	444	蜜	湊	養	味	【み】	魅	巴	貧	岬	密	
388	軟	難	汝	二	奈	那	內	乍	阻	雍	415	肘	否	妃	庇	彼	悲	批	披	匪	444	蜜	湊	養	味	【み】	魅	巴	貧	岬	密	
388	軟	難	汝	二	奈	那	內	乍	阻	雍	415	肘	否	妃	庇	彼	悲	批	披	匪	444	蜜	湊	養	味	【み】	魅	巴	貧	岬	密	
388	軟	難	汝	二	奈	那	內	乍	阻	雍	415	肘	否	妃	庇	彼	悲	批	披	匪	444	蜜	湊	養	味	【み】	魅	巴	貧	岬	密	
388	軟	難	汝	二	奈	那	內	乍	阻	雍	415	肘	否	妃	庇	彼	悲	批	披	匪	444	蜜	湊	養	味	【み】	魅	巴	貧	岬	密	
388	軟	難	汝	二	奈	那	內	乍	阻	雍	415	肘	否	妃	庇	彼	悲	批	披	匪	444	蜜	湊	養	味	【み】	魅	巴	貧	岬	密	
388	軟	難	汝	二																												

First Three Digits	Last Digit									First Three Digits	Last Digit									First Three Digits	Last Digit								
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9
445	孟	毛	猛	盲	蒙	儲	木	默		469	漣	煉	簾	練	聯					502	甸	匍	匍	匍	匍	匍	匍	匍	匍
446	目	奎	勿	網	耗	貴	問	悶		470	蓮	蓮	連	鍊	聯					503	匍	匍	匍	匍	匍	匍	匍	匍	匍
447	紋	門	勿	尤	戾	粉														504	匍	匍	匍	匍	匍	匍	匍	匍	匍
				【や】	夜	爺	耶	野	弥	470				【呂】	魯	櫓	烙	路		505	匍	匍	匍	匍	匍	匍	匍	匍	匍
447			也	治	訖	躍	靖	柳	數	471	露	勞	婁	廊	呂	朗	榔	浪	漏	506	匍	匍	匍	匍	匍	匍	匍	匍	匍
448	矢	厄	役	約	葉	躍				472	牢	狼	籠	老	弄	聾	郎	麓	祿	507	匍	匍	匍	匍	匍	匍	匍	匍	匍
449	鏢									473	肋	錄	論							508	匍	匍	匍	匍	匍	匍	匍	匍	匍
				【ゆ】	癒	優	有	幽						【わ】	和	話	歪	賄	惑	509	匍	匍	匍	匍	匍	匍	匍	匍	匍
449		愉	愈	油	癒	湧	猶			473				倭	鰐	託	贖	槐		510	匍	匍	匍	匍	匍	匍	匍	匍	匍
450		諭	輸	唯	佑	湧	融			474	榨	腕	互	巨			贖			511	匍	匍	匍	匍	匍	匍	匍	匍	匍
451	悠	諭	輸	有	柚	郵				475	碗	腕					贖			512	匍	匍	匍	匍	匍	匍	匍	匍	匍
452	祐	裕	誘	遊	邑					476							贖			513	匍	匍	匍	匍	匍	匍	匍	匍	匍
				【よ】						477							贖			514	匍	匍	匍	匍	匍	匍	匍	匍	匍
452										478							贖			515	匍	匍	匍	匍	匍	匍	匍	匍	匍
453	余	與	譽	輿	預	幼	妖	容	庸	479							贖			516	匍	匍	匍	匍	匍	匍	匍	匍	匍
454	揚	搖	耀	躍	楊	洋	溶	溶	陽	480							贖			517	匍	匍	匍	匍	匍	匍	匍	匍	匍
455	養	慾	抑	欲	蓉	躍	躍	躍		481	乖	巧	丕	个	尹	井	父			518	匍	匍	匍	匍	匍	匍	匍	匍	匍
456				【5】						482	乖	亂	京	豫	事	井	父			519	匍	匍	匍	匍	匍	匍	匍	匍	匍
456										483	乖	亂	京	豫	事	井	父			520	匍	匍	匍	匍	匍	匍	匍	匍	匍
457	螺	裸	來	萊	賴	雷	落	羅		484	乖	亂	京	豫	事	井	父			521	匍	匍	匍	匍	匍	匍	匍	匍	匍
458	亂	卵	嵐	欄	濫	藍	覽	酪		485	乖	亂	京	豫	事	井	父			522	匍	匍	匍	匍	匍	匍	匍	匍	匍
				【b】						486	乖	亂	京	豫	事	井	父			523	匍	匍	匍	匍	匍	匍	匍	匍	匍
458										487	乖	亂	京	豫	事	井	父			524	匍	匍	匍	匍	匍	匍	匍	匍	匍
458										488	乖	亂	京	豫	事	井	父			525	匍	匍	匍	匍	匍	匍	匍	匍	匍
459	履	李	梨	理	璃	離	率	立		489	乖	亂	京	豫	事	井	父			526	匍	匍	匍	匍	匍	匍	匍	匍	匍
460		剌	裏	裡	流	琉	疏	僚		490	乖	亂	京	豫	事	井	父			527	匍	匍	匍	匍	匍	匍	匍	匍	匍
461	律	掠	略	劉	慮	琉	亮	僚		491	乖	亂	京	豫	事	井	父			528	匍	匍	匍	匍	匍	匍	匍	匍	匍
462	隆	竜	龍	劉	流	琉	亮	僚		492	乖	亂	京	豫	事	井	父			529	匍	匍	匍	匍	匍	匍	匍	匍	匍
463	兩	凌	寮	寮	梁	涼	瞭	僚		493	乖	亂	京	豫	事	井	父			530	匍	匍	匍	匍	匍	匍	匍	匍	匍
464	糧	良	諒	寮	梁	涼	瞭	僚		494	乖	亂	京	豫	事	井	父			531	匍	匍	匍	匍	匍	匍	匍	匍	匍
465	厘	林	淋	淋	琳	輪	麟	麟		495	乖	亂	京	豫	事	井	父			532	匍	匍	匍	匍	匍	匍	匍	匍	匍
				【る】						496	乖	亂	京	豫	事	井	父			533	匍	匍	匍	匍	匍	匍	匍	匍	匍
466	瑠	壘	淚	累	類					497	乖	亂	京	豫	事	井	父			534	匍	匍	匍	匍	匍	匍	匍	匍	匍
				【れ】	令	伶	冷	勵		498	乖	亂	京	豫	事	井	父			535	匍	匍	匍	匍	匍	匍	匍	匍	匍
466										499	乖	亂	京	豫	事	井	父			536	匍	匍	匍	匍	匍	匍	匍	匍	匍
467	嶺	伶	玲	禮	苓	零	靈	憐		500	乖	亂	京	豫	事	井	父			537	匍	匍	匍	匍	匍	匍	匍	匍	匍
468	齡	曆	歷	列	劣	烈	慄	憐		501	乖	亂	京	豫	事	井	父			538	匍	匍	匍	匍	匍	匍	匍	匍	匍

First Three Digits		Last Digit							First Three Digits		Last Digit										
	0	1	2	3	4	5	6	7	8	9		0	1	2	3	4	5	6	7	8	9
539	尹	屌	屏	屎	肩	屾	屾	屹	岌	576	掉	捉	掬	捫	振	掾	搆	揆	9	殒	笔
540	岑	屌	屏	屎	肩	屾	屾	屹	岌	577	掉	捉	掬	捫	振	掾	搆	揆	9	殒	笔
541	岑	屌	屏	屎	肩	屾	屾	屹	岌	578	掉	捉	掬	捫	振	掾	搆	揆	9	殒	笔
542	岑	屌	屏	屎	肩	屾	屾	屹	岌	579	掉	捉	掬	捫	振	掾	搆	揆	9	殒	笔
543	岑	屌	屏	屎	肩	屾	屾	屹	岌	580	掉	捉	掬	捫	振	掾	搆	揆	9	殒	笔
544	岑	屌	屏	屎	肩	屾	屾	屹	岌	581	掉	捉	掬	捫	振	掾	搆	揆	9	殒	笔
545	岑	屌	屏	屎	肩	屾	屾	屹	岌	582	掉	捉	掬	捫	振	掾	搆	揆	9	殒	笔
546	岑	屌	屏	屎	肩	屾	屾	屹	岌	583	掉	捉	掬	捫	振	掾	搆	揆	9	殒	笔
547	岑	屌	屏	屎	肩	屾	屾	屹	岌	584	掉	捉	掬	捫	振	掾	搆	揆	9	殒	笔
548	岑	屌	屏	屎	肩	屾	屾	屹	岌	585	掉	捉	掬	捫	振	掾	搆	揆	9	殒	笔
549	盧	屌	屏	屎	肩	屾	屾	屹	岌	586	掉	捉	掬	捫	振	掾	搆	揆	9	殒	笔
550	盧	屌	屏	屎	肩	屾	屾	屹	岌	587	掉	捉	掬	捫	振	掾	搆	揆	9	殒	笔
551	盧	屌	屏	屎	肩	屾	屾	屹	岌	588	掉	捉	掬	捫	振	掾	搆	揆	9	殒	笔
552	盧	屌	屏	屎	肩	屾	屾	屹	岌	589	掉	捉	掬	捫	振	掾	搆	揆	9	殒	笔
553	盧	屌	屏	屎	肩	屾	屾	屹	岌	590	掉	捉	掬	捫	振	掾	搆	揆	9	殒	笔
554	盧	屌	屏	屎	肩	屾	屾	屹	岌	591	掉	捉	掬	捫	振	掾	搆	揆	9	殒	笔
555	盧	屌	屏	屎	肩	屾	屾	屹	岌	592	掉	捉	掬	捫	振	掾	搆	揆	9	殒	笔
556	盧	屌	屏	屎	肩	屾	屾	屹	岌	593	掉	捉	掬	捫	振	掾	搆	揆	9	殒	笔
557	盧	屌	屏	屎	肩	屾	屾	屹	岌	594	掉	捉	掬	捫	振	掾	搆	揆	9	殒	笔
558	盧	屌	屏	屎	肩	屾	屾	屹	岌	595	掉	捉	掬	捫	振	掾	搆	揆	9	殒	笔
559	盧	屌	屏	屎	肩	屾	屾	屹	岌	596	掉	捉	掬	捫	振	掾	搆	揆	9	殒	笔
560	盧	屌	屏	屎	肩	屾	屾	屹	岌	597	掉	捉	掬	捫	振	掾	搆	揆	9	殒	笔
561	盧	屌	屏	屎	肩	屾	屾	屹	岌	598	掉	捉	掬	捫	振	掾	搆	揆	9	殒	笔
562	盧	屌	屏	屎	肩	屾	屾	屹	岌	599	掉	捉	掬	捫	振	掾	搆	揆	9	殒	笔
563	盧	屌	屏	屎	肩	屾	屾	屹	岌	600	掉	捉	掬	捫	振	掾	搆	揆	9	殒	笔
564	盧	屌	屏	屎	肩	屾	屾	屹	岌	601	掉	捉	掬	捫	振	掾	搆	揆	9	殒	笔
565	盧	屌	屏	屎	肩	屾	屾	屹	岌	602	掉	捉	掬	捫	振	掾	搆	揆	9	殒	笔
566	盧	屌	屏	屎	肩	屾	屾	屹	岌	603	掉	捉	掬	捫	振	掾	搆	揆	9	殒	笔
567	盧	屌	屏	屎	肩	屾	屾	屹	岌	604	掉	捉	掬	捫	振	掾	搆	揆	9	殒	笔
568	盧	屌	屏	屎	肩	屾	屾	屹	岌	605	掉	捉	掬	捫	振	掾	搆	揆	9	殒	笔
569	盧	屌	屏	屎	肩	屾	屾	屹	岌	606	掉	捉	掬	捫	振	掾	搆	揆	9	殒	笔
570	盧	屌	屏	屎	肩	屾	屾	屹	岌	607	掉	捉	掬	捫	振	掾	搆	揆	9	殒	笔
571	盧	屌	屏	屎	肩	屾	屾	屹	岌	608	掉	捉	掬	捫	振	掾	搆	揆	9	殒	笔
572	盧	屌	屏	屎	肩	屾	屾	屹	岌	609	掉	捉	掬	捫	振	掾	搆	揆	9	殒	笔
573	盧	屌	屏	屎	肩	屾	屾	屹	岌	610	掉	捉	掬	捫	振	掾	搆	揆	9	殒	笔
574	盧	屌	屏	屎	肩	屾	屾	屹	岌	611	掉	捉	掬	捫	振	掾	搆	揆	9	殒	笔
575	盧	屌	屏	屎	肩	屾	屾	屹	岌	612	掉	捉	掬	捫	振	掾	搆	揆	9	殒	笔

[illegible]

Pictograph List

Pictograph List 1-16



- Pictographs in are animated.
- Pictographs do not appear in mail or on incompatible SoftBank handsets.

- Pictographs may not appear as depicted in Pictograph List on some SoftBank handset models.
- Pictographs may not appear as depicted in Pictograph List when viewed on External Display.

Memory List

Messaging	Mail	Up to 1000 items/approx. 5 MB
	SMS	Up to 500 items

Data Folder	Pictures	Up to 1000 items/ approx. 12 MB* (One S! Appli corresponds to three to six items.)
	Sounds	
	S!Appli	
	Music	
	Videos	
	Books	
	Templates	

* Shared with S!Appli Library.

Web	Saved Pages	Up to 20 items/600 KB
	Bookmarks	Up to 50 items
	URL History	Up to 20 items
	Cache	Up to 600 KB

Schedule (Calendar)	Up to 100 items
----------------------------	-----------------

Phone Book	Up to 500 items
-------------------	-----------------

- The number of savable items varies depending on data amount.

Specifications

705P

Weight (including battery)		Approx. 103 g
Dimensions (closed)		Approx. 50 x 101 x 14.8 mm
Standby Time (closed)	3G	Approx. 350 hours
	GSM	Approx. 290 hours
Talk Time	3G	Approx. 190 minutes
	Video Call	Approx. 90 minutes
	GSM	Approx. 200 minutes
Charging Time	AC Charger	Approx. 160 minutes
	In-Car Charger	Approx. 160 minutes
Maximum Output	3G	0.25 W
	GSM	2.0 W

- Values above were calculated with battery installed
- Talk Time is an average measured with a new, fully charged battery, with stable signals.
- Standby Time is an average measured with a new, fully charged battery, with handset closed without calls or operations, in Standby with stable signals.
- Talk Time and Standby Time may vary by environment (battery status, temperature, etc.).
- Talk Time and Standby Time may decrease when a S! Application is active.

Battery

Voltage	3.7 V
Battery Type	Lithium-ion
Capacity	800 mAh
Dimensions	Approx. 35.5 x 4.5 x 46.3 mm

AC Charger

Power Source	AC 100 V - 240 V, 50/60 Hz
Input Current	0.12 A
Output Voltage/Current	DC 6.0 V / 650 mA
Charging Temperature	5°C- 35°C
Dimensions (excluding protrusions and cord)	Approx. 49 x 20 x 53 mm

- Specifications subject to change without notice.

Index

Numerics

3G 2-16

A

AC Charger 1-19
Accept with open 8-4
Active Flip 8-4
Active Folder for New Message 15-23
Add Attachment 15-8
Add Frame (editing pictures) 10-14
After-Sales Service 18-31
Alarms 13-8
Alarms (cancelling/reactivating) ... 13-9
All Calls History (Call Log) 2-11
All Reset 12-8
Alternative Picture 5-8
Answer Phone 2-7
Answer Time (Answer Phone) 2-7
Any Key Answer 8-3
Assign Ringtone 7-7
Attachment List 15-15
Audio Player 9-4

Auto Answer 8-5
Auto Download (Mail) 15-25
Auto Save
(Camera/Video Camera) 6-12
Auto Suspend Timer 17-6
Available Memory
(Camera/Video Camera) 6-13

B

Background Music 9-5
Backlight (S! Appli) 17-6
Backlight (Video Call) 5-8
Backlight Time (Display) 7-6
Backup 10-22
Battery 1-15, 1-18
Battery Level 1-12
Bluetooth® 11-4
Bluetooth® Passcode 11-5
Bookmarks 16-7
Books folder 10-2
Brightness (Camera) 6-4
Brightness (Display) 7-5
Brightness (Video Camera) 6-5
Browser Profiles 16-13

C

Calculator 13-10
Calendar 13-2
Calendar events (Schedules) 13-4
Call Barring 14-8
Call Divert 14-2
Call Log 2-11
Call Settings 8-3
Call Time 2-13
Call Waiting 14-6
Caller ID 2-2, 14-10
Calls (Making Video Calls) 5-3
Calls (Making Voice Calls) 2-2
Camera 6-2
CCF files 10-7
Centre Access Code 1-26
Change Password
(Handset Code) 12-2
Change PIN 12-3
Change PIN2 12-3
Change View (Data Folder) 10-4
Character Code (Kuten Code) 3-8
Character Code List 18-13
Character Input Modes 3-2
Charging Time 1-15

Check Memory Card	10-22
Check New Message (Mail)	15-4, 15-11
ComicSurfing	9-12
Conference Call	14-7
Content Key	10-6, 12-7
Continuous Shooting	6-10
Conversion Methods	3-9
Cookies	16-14
Copy Protected Files	10-3
Cost Limit	2-14
Country Number List	8-5
Customer Service	18-32

D

Data Folder	10-2
Date & Time	1-23, 7-2
Delete Cache&Cookies	16-13
Delivery Report	15-23
Desktop Holder	1-20
Display	1-12
Display Format (Date & Time)	7-4
Display Indicators	1-12
Display Settings	7-2
Distribution Rule	15-24

Download Music	9-3
Download S!Appli	17-2
Download Video	9-3
Downloads	16-12
Drafts (Mail/SMS)	15-10
Drive Mode	7-9

E

Earpiece Volume (Video Call)	5-5
Earpiece Volume (Voice Call)	2-8
Effect (Camera/Video Camera)	6-4, 6-5, 6-12
Email Address Settings	15-6
Emergency Calls (110, 119, 118)	2-4
End call with close	8-4
Escalating Tone	7-8
Expiry Time (SMS)	15-26
External Display	1-12
External Display Indicators	1-14

F

Font Size (Mail/SMS)	15-23
Font Size (Web)	16-12
Format Memory Card	10-21

Function List	18-2
---------------------	------

G

Group Settings	4-7
GSM	2-16

H

Handset Code	1-26
Handset Code (changing)	12-2
Handset Menus	1-24
Handset Power On/Off	1-22
Handset Security	12-1
Handsfree Conversations	2-9
Handsfree Mode	11-10
Handsfree Setting	11-10
Help (Camera/Video Camera)	6-13
Help (Media Player)	9-8
Hold (incoming Video Call)	5-4
Hold (incoming Voice Call)	2-6
Hold Call	2-10
Home Clock	7-2
HTML Mail	15-15
HTML View	15-15

I

Illuminations	8-2
In-Car Charger	1-21
Incoming (Call Log)	2-6, 2-11
Incoming calls (Video Call)	5-4
Incoming calls (Voice Call)	2-5
Incoming Video Quality	5-8
Information (S! Appli)	17-2
Information Window	1-15
Infrared	11-2
Inside Camera	6-3
International call (from abroad) ...	2-18
International Call (from Japan)	2-4
International Call Setting	8-4
International Code	8-4

K

Key Assignments	3-3
Key Backlight	8-3
Key Tone	8-2
Key Tone Volume	8-2
Keyguard	12-4
Kuten Code (Character Code)	3-8

L

Language	7-6
----------------	-----

M

Macro (Camera)	6-10
Mail	15-2
Mail Notice	15-12
Mail Settings	15-25
Main Menu	1-24
Main Menu Icons	7-4, 10-11
Manage Folders/Files (Data Folder)	10-15
Manner Mode	2-18, 2-19, 7-9
Manufacture Number	16-14
Media Player	9-2
Memory Card	10-19
Memory Card Backup	10-22
Memory List	18-23
Memory Status (Calendar)	13-5
Memory Status (Data Folder)	10-5
Memory Status (Mail/SMS)	15-4
Memory Status (Phone Book)	4-6
Menu Numbers	1-25
Messaging	15-2

Messaging (checking message contents)	15-14
Messaging (creating & sending Mail messages)	15-6
Messaging (creating & sending SMS messages)	15-9
Messaging (deleting messages)	15-21
Messaging (forwarding messages)	15-17
Messaging (protecting messages)	15-20
Messaging (receiving new messages)	15-11
Messaging (replying to messages)	15-17
Messaging Folders	15-3
Missed Call Notification	14-4
Missed Calls (Call Log)	2-11
Mobile Internet (accessing)	16-3
Mode Settings	7-9
Move to/from Memory Card (Content Key)	12-7
Multi Select	10-17
Multi Selector	x

Multi Shot	6-4, 6-10
Multiparty Call	14-7
Music folder	10-2
Mute	5-5, 5-7
My Details	4-14
My Number	2-15

N

Near Chat	9-13
Network operator	2-17
Network S! Applications	17-2
Network Service Indicators	1-12
Network Settings	2-16
Night Mode	6-4, 6-12
Normal Mode	7-9
Notify My ID	2-2

O

Offline Mode	2-20
One-push Open Button	1-10
Operator Name	7-6
Operator Settings	2-17
Outdoor Mode	7-9
Outgoing (Call Log)	2-3, 2-11

Outside Camera	6-3
----------------------	-----

P

Password	1-26
Password Lock	12-4
Permission	17-4
Phone Book	4-2
Phone Book (editing)	4-12
Phone Book (saving)	4-3
Photo Light	6-4, 6-5, 6-11
Pictograph List	18-22
Pictographs	3-7
Picture Preview Window	6-4
Picture Size	6-4, 6-6
Pictures (capturing)	6-7
Pictures (editing)	10-12
Pictures folder	10-2
PIN Entry	12-2
PIN Lock & Cancellation	12-3
Playback Method	10-6
Playback Mode	9-9
Playlist	9-9
Predictive Conversion	3-9
Price/unit	2-14
Private Mode	11-10

PUK	1-8, 12-3
-----------	-----------

Q

Quality (Camera)	6-4
Quality (Video Camera)	6-5
Quote Text (Mail)	15-25

R

Recording Time	6-5, 6-12
Reject Call Numbers Setting	12-6
Reject Incoming Calls	12-5
Remaining (cost)	2-13
Reminder	13-6
Reset Defaults (Camera)	6-13
Reset Defaults (Main Menu Icons)	7-5
Reset Learned Words	3-10
Reset Settings	12-8
Resize (editing pictures)	10-12
Retrieve NW Info	1-22
Ringer Volume	7-8
Ringtone	7-7, 10-9
Root Certificates	16-14

S

S! Appli	17-2
S! Appli (activating)	17-3
S! Appli (deleting)	17-4
S! Appli (moving)	17-4
S! Appli (terminating/suspending & resuming)	17-3
S! Loop	9-14
Save New Entry (Phone Book)	4-11
Save Sent SMS	15-26
Save to (Camera)	6-4
Save to (Video Camera)	6-5
Saved Pages	16-7
Schedule Icon	13-5
Schedules (Calender events)	13-4
Search Method (Phone Book)	4-9
Secret Mode	12-6
Security (Browser Settings)	16-14
Security (handset)	12-1
Security Code	1-26
Security Code (changing)	14-9
Select Clock	7-3
Select Network	2-16
Select Operator	2-17
Self-Timer	6-4, 6-5, 6-11
Server Mail Box	15-13
Service Charges	2-13
Service Dial	4-2
Set Security Code	14-9
Show Charge ON/OFF	2-15
Show My Number	14-10
Shutter Sound	6-12
Signal Strength	1-12
SMS	15-2
SMS Settings	15-26
Snooze	13-9
Softkeys	x
Software Update	18-11
Sound Settings	7-7
Sounds folder	10-2
Speed Dial	4-10
SSL	16-2
Streaming	16-11
Super Clear Shadow (editing pictures)	10-14
Swap	14-7
Switch Screens (Video Call)	5-6
Symbol List	18-21
Symbols	3-7
Synchronize Memory Card	17-6

System Message	15-15
----------------------	-------

T

Templates	3-8, 10-18
Templates folder	10-2
Text (editing)	3-12
Text (entering)	3-5
Text Entry Window	3-2
Text Memo	2-10, 5-7
Themes	7-5
TLS	16-2
Toggle Inside/Outside Camera (Camera/Video Camera)	6-3
Toggle Inside/Outside Camera (Video Call)	5-6
Total Call Cost	2-14
Total Call Time	2-13
Touch Tones	2-10
Trimming (editing pictures)	10-13

U

Universal Settings (Mail/SMS)	15-23
USB	11-10
User Mode	7-9

User's Dictionary	3-11
USIM (Phone Book)	4-5
USIM Card	1-6
USIM PINs	1-8

V

Vibration (S! Appli)	17-6
Vibration Alert	7-8
Video & Voice	5-7
Video Call	5-2
Video Call Settings	5-7
Video Player	9-6
Video Preview Window	6-5
Videos (recording)	6-9
Videos folder	10-2
View Attachment	15-15
View Format (Calendar)	13-2
View from (Phone Book)	4-11
Visibility	11-7
Voice Call	2-2
Voice Mail	14-4
Voice Recorder	2-9, 13-10
Volume (Earpiece Volume)	2-8, 5-5
Volume (Key Tone)	8-2
Volume (Ringtone)	7-8

Volume (S! Appli)	17-5
-------------------------	------

W

Wallpaper	7-2, 10-9
Warning Tone	7-8
Warranty	18-31
Web	16-2
Web Connections	11-11
White Balance (Camera)	6-4, 6-12
White Balance (Video Call)	5-6
White Balance (Video Camera)	6-5, 6-12
World Clock	7-3

Z

Zoom (Camera)	6-4
Zoom (Video Call)	5-6
Zoom (Video Camera)	6-5

Warranty & After-Sales Service

Warranty

Warranty is provided when you purchase a 705P.

- Check name of distributor and date of purchase.
- Read through contents and keep in a safe place.
- The warranty term is described in the warranty.

SoftBank is not liable for any damage resulting from use of this product.

After-Sales Service

See "Troubleshooting" (🔍 P.18-8) before contacting SoftBank for service or repairs. If you cannot find solutions or solve problems, contact SoftBank Customer Centre, Customer Assistance (🔍 P.18-32) in your subscription area and provide a detailed description of the problem.

- Repairs within warranty are performed under terms and conditions described.
- Out of warranty, any repairs are performed upon request at subscriber's expense.

Customer Service

If you have questions about SoftBank handsets or services, please call General Information.

For repairs, please call Customer Assistance.









SoftBank Customer Centres

From a SoftBank handset, dial toll free on
157 for General Information or
113 for Customer Assistance

SoftBank International Call Centre

From outside Japan, dial +81-3-5351-3491
(Please take care to dial the correct number.
International charges will apply to this call.)

Call these numbers toll free from landlines.

Subscription area	Service centre	Phone number
Hokkaido, Aomori, Akita, Iwate, Yamagata, Miyagi, Fukushima, Niigata, Tokyo, Kanagawa, Chiba, Saitama, Ibaraki, Tochigi, Gunma, Yamanashi, Nagano, Toyama, Ishikawa, Fukui	General Information	 0088-240-157
	Customer Assistance	 0088-240-113
Aichi, Gifu, Mie, Shizuoka	General Information	 0088-241-157
	Customer Assistance	 0088-241-113
Osaka, Hyogo, Kyoto, Nara, Shiga, Wakayama	General Information	 0088-242-157
	Customer Assistance	 0088-242-113
Hiroshima, Okayama, Yamaguchi, Tottori, Shimane, Tokushima, Kagawa, Ehime, Kochi, Fukuoka, Saga, Nagasaki, Oita, Kumamoto, Miyazaki, Kagoshima, Okinawa	General Information	 0088-250-157
	Customer Assistance	 0088-250-113

SoftBank 705P User Guide

March 2012, Second Edition

SOFTBANK MOBILE Corp.

For additional information, please visit a SoftBank shop.

Model: SoftBank 705P

Manufacturer: Panasonic Mobile Communications Co., Ltd.



モバイル・リサイクル・ネットワーク
携帯電話・PHSのリサイクルにご協力を。

Please help the mobile industry maintain high environmental standards. Recycle your old handsets, batteries and charger units (all manufacturers and brands). Before you recycle, please remember these important points:

- Handsets, batteries and chargers submitted for recycling cannot be returned.
- Always erase all data recorded on old handsets (Phone Book entries, call records, mail, etc.) before recycling.