Introduction

Thank you for purchasing the SoftBank 707SC ${\rm I\hspace{-.1em}I}$.

- Read this guide thoroughly before using 707SC II to ensure proper usage.
- After reading this guide, keep it for later reference.
- ●Should you lose or damage this guide, contact Customer Service (�P.25-25).
- Accessible services may be limited by contract conditions or service area.


707SC Π is compatible with both 3G and GSM network technologies.

Note

- Unauthorized copying of any part of this guide is prohibited.
- Contents are subject to change without prior notice.
- Not all functions and services described in this user guide are available in Japan.
- Steps have been taken to ensure the accuracy of descriptions in this guide. If you find inaccurate or missing information, contact Customer Service (�P.25-25).
- If there are any missing/misplaced pages in this manual, SoftBank will replace it.

Accessories

Make sure the following accessories are included in the package with handset. These accessories are also sold separately. For details on accessories or optional items, contact Customer Service (�P.25-25).

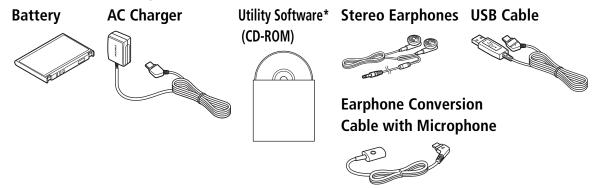

^{*}Utility Software updates/upgrades may become available via SoftBank Website (http://www.softbank.jp) without prior notification. Please check for the newest versions of Utility Software and download as required.

Tip

- For more about accessories, contact SoftBank Customer Service (�P.25-25).
- Battery and AC Charger are available for separate purchase.

Contents

Accessories i Contents ii About This Guide xii Safety Precautions xiv General Notes xxvi SAR Certification Information xxxiii FCC RF Exposure Information xxxiv European RF Exposure Information	Power On/Off. 1-17 Power On. 1-17 Power Off. 1-18 Time & Date. 1-18 Time & Date 1-18 Time Zone Updating. 1-19 Changing Home Time Zone. 1-20 707SC II Menus. 1-20
1 Getting Started	Main Menu. 1-20 Shortcuts 1-22
USIM Card.1-2General Information & Precautions.1-2Inserting & Removing USIM Card.1-3USIM PINs.1-5	Switch Bar 1-22 Options 1-23 Security Codes 1-23 Phone Password 1-23
Handset Parts & Functions 1-6 Handset. 1-6 Display Indicators. 1-8 Sub Display 1-10	Center Access Code
Battery & Charger1-11	2 Basic Handset Operations
Before Using Battery or Charger1-11	Initiating a Call
Inserting & Removing Battery 1-13 AC Charger 1-15 In-Car Charger (Optional) 1-16	Receiving a Call

Answer Machine	3 Manner Profile
Ringing Duration2-6 Sound Language2-6 Checking Recordings2-6 Engaged Call Operations2-7 Earpiece Volume2-7 Hold2-7 Speaker Phone2-7	Minding Mobile Manners3-2Manner Related Functions3-2Manner Profile3-3Changing Profile3-3Offline Mode3-4
Voice Recording	4 Entering Text
Call Log Records2-9Viewing Call Log Records2-9Calling from Call Log Records2-9Deleting Call Log Records2-10	Text Entry 4-2 Text Entry Window 4-2 Changing Text Entry Mode 4-2 Key Assignments 4-3
Call Log Options	Entering Characters. 4-4 Hiragana/Kanji
Call Manager 2-11 Data Counter, Call Costs, & Call Times .2-11 Edit Cost Limit .2-12 Display Call Cost during a Call .2-13	Katakana4-6Alphanumerics4-7Numbers4-8Symbols, Pictograms & Emoticons4-9
International Roaming2-13Changing Network Mode.2-13Network Setup.2-14Calling from Outside Japan.2-15Emergency Calls.2-16	Line Breaks. 4-10 Quoting Saved Text 4-10 Hangul 4-11 Editing Text 4-11 Deleting 4-11
	Copy/Cut, Paste & Undo
	iii

Jump	Copy to USIM & Copy to Phone
User Dictionary (Japanese)	6 Video Call
Saving to User Dictionary	Before Using Video Call 6-2
SMS Templates	Initiating a Video Call 6-2
5 Phonebook	Receiving a Video Call
	Engaged Video Call Operations
Saving to Phonebook5-2Phonebook Entry Items5-2Adding Entry Items5-4Saving from Call Log Records5-6Category Settings5-7New Category (USIM Card)5-7	Video Call Settings
Edit Category	7 Mobile Camera
Using Phonebook .5-9 Calling from Phonebook .5-9 Speed Dialing .5-12 Phonebook Options .5-13 Editing Phonebook Entries .5-14 Edit .5-14 Default Number .5-14	Before Using Mobile Camera7-2Mobile Camera Precautions7-2Rotating Camera7-2Using Display as Viewfinder7-3Capturing a Still Image7-4Camera Mode7-4Capturing Still Images7-5

Capturing Video .7-10 Video Mode .7-10 Recording Video .7-11 Machile Common Settings .7-13	Backlight Brightness & Duration8-7Adjusting Display Brightness8-7Backlight Duration8-7Sub LCD Light8-8	
Mobile Camera Settings.7-13Camera Settings.7-13Video Settings.7-14Viewing Images.7-15Viewing Still Images.7-15	Dialing Display	
Viewing Videos	9 Sound Settings	
Editing Video	Changing Profile Settings 9-2	
Create Flash®	10 Media Player	
Actaching images	Before Using Media Player 10-2	
8 Display Settings	Playing Music 10-3 Create Playlist 10-5	
Standby Display Settings 8-2 Wallpaper 8-2 Clock Display 8-4 Operator Name 8-5 Menu Display 8-5 Menu Style 8-5 Popup Menu 8-6 List Font Size 8-6	Changing Music Player Settings 10-6 Repeat Mode 10-6 Tone Volume 10-7 Audio Skin 10-7 Visualization Mode 10-7 Playing Video 10-8 Player Settings 10-11	
Zoom List	Repeat Mode	

Resolution	12 External Connections
11 Managing Files (Data Folder)	External Connections
Data Folder11-2Default Folders.11-2Saved Files.11-3Opening Files.11-3Using File Viewer.11-5Viewing Graphics/Animation with the SVG-T/Flash® Viewer.11-8Sorting Files.11-9Using Files.11-10	Bluetooth®
Using Image Files	Change Phone Password 13-2 PIN 13-2 Changing PIN/PIN2 13-2 PIN Lock 13-3 Resetting PIN Lock 13-3
Managing Files/Folders11-14Create Folder.11-14Changing a File Name/Folder Name.11-14Moving a File/Folder.11-15Copying Files/Folders.11-16Deleting a File/Folder.11-17Deleting a Content Key.11-18	USIM Lock13-4Handset Security13-5Phone Lock13-5Password Lock13-5Privacy Lock13-6Activate Secret Mode13-6Mobile Tracker13-7

World Clock 14-18 Viewing World Clock 14-18 Selecting Areas 14-18
Using Calculator
Converting Currencies or Units
Dictionary
Interpreter (Japanese)
Calling Functions 15-2 Auto Redial 15-2 International Dial 15-2 Earphone call 15-3 Handling Incoming Calls 15-5 Anykey Answer 15-5 Acoustic Shock 15-5 Active Folder 15-6 Side Key Silence/Reject 15-6
Side Key Lock

Memory Status	Caller ID.
16 Optional Services	Adding 186 or 184
Optional Services	17 Messaging
Call Forwarding	Getting Started 17-2
Cancel All 16-4 Check Status 16-4	Checking for New Messages
Voice Mail 16-5 Activating Voice Mail 16-5	Using Received Messages
Canceling Voice Mail	Procedures
Checking Settings	Address
Listening to Messages	Subject
Incoming Call Notification	Message 17-10 Sending a Message 17-11
Call Waiting*	Slide Show
Receiving a Second Call	Changing the Style of Message Field 17-12
Conference Call*16-9	Templates
New Call	Attaching/Inserting Files
Call Barring16-11	Creating & Inserting a File
Restrict Outgoing/Incoming Calls	Save to Drafts
Changing Network Password	Save as a Template

18 Messaging Folders Message Window Operations......18-5 19 Server Mail Sending from Unsent Messages 18-9 Deleting a Message18-9 Deleting All Messages from a Mailbox 18-11 Remote Forward 19-4 20 Other Message Settings Initiating a Call, Sending a Message, or Accessing the Web Customizing Handset Address.............. 20-2

3D Pictogram Settings	Opening a Saved Page
Reply with text	Changing a Title
. ,	Deleting a Saved Page
21 Mobile Internet	Saving Bookmarks
Getting Started21-2	Saving as a Bookmark
	Editing Bookmarks
Getting Online 21-3 Yahoo! Keitai Main Menu .21-3	Deleting a Bookmark
Enter URL	History
Page Window Operations21-4	Display Settings
Using Linked Info	Rendering
	Search Text22-13
22 Mobile Internet Files	Copy Text
	Reload
Using Image Files22-2	Page Details
Saving Images to Data Folder	Send URL
Using Set As22-3	Server Certificate
Using Sound Files	
Playing Sound	Encoding
Saving Sounds to Data Folder22-4	Information Window Options
Using Video Files22-6	
Playing a Video	23 Other Web Settings
Saving Videos to Data Folder	
Streaming	Preferences
Saving Pages22-8	Security
Saving a Page	Cookie Options23-2

Turning Java Script On/Off		
Text Size	<u> </u>	24-11
Manufacture Number	3eculity	24-12
Browser Information	23-3 CL Appli Cottings	
Certificates	Backlight	
Refresh Browser	.23-4 Application Volume	
Empty Cache/Empty Cookies	23-4 Vibration	
	S! Appli Sort	
24 S! Appli	Reset S! Appli Settings	
Getting Started		
S! AppliNetwork S! Appli		25-2
Downloading S! Appli		
Starting S! Appli		
Exit, Pause, & Resume		
Exiting or Pausing S! Appli		
Restarting a Paused S! Appli	24-4 Pictograms	
Managing S! Appli	.24-4 Memory List	
Details	24-4 Specifications	
Lock/Unlock		
Delete		
mPet		25-24
Selecting Pet	24-5 Customer Service	25-25
mPet Operations		
Other Operations	24-9	

About This Guide

In this guide, 707SC $\rm II$ refers to SoftBank 707SC $\rm II$. Instructions are described using mainly default settings. When settings are changed, screen shots or handset responses may differ from those depicted in this guide.

Screen Shots and 707SC II Illustrations

Screen shots appearing in this guide are for reference only and may differ from actual Display images. Product illustrations may vary from actual product appearances.

Confirmations & Warning Messages


Messages not described in this guide may appear; read all confirmations and warning messages carefully.

Symbols


In this guide, symbols represent 707SC II keys; see "Handset Parts & Functions" (�P.1-6). Softkey and Multi Selector operations are indicated as shown below.

Softkeys

Operation options appear at the bottom of Display. Press the corresponding Softkey to execute assigned functions.

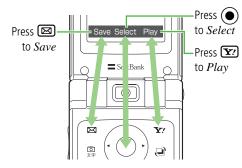


Softkey Operations

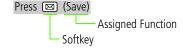

Multi Selector Operations

Use Multi Selector to select menu items, move cursor, and scroll, etc. In this guide, Multi Selector operations are indicated as shown below.

Basic Multi Selector Operations

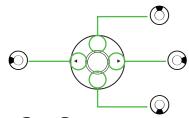

 \bigcirc : Press \bigcirc or \bigcirc

: Press or or

 \bigcirc : Press \bigcirc , \bigcirc , \bigcirc , or \bigcirc

Highlighting

In this guide, "to highlight" means to move cursor to an item.

Menu Operations

Menu/Options operations are simplified with arrows.


Main Menu

Press \bullet and select *Settings* \rightarrow Display settings \rightarrow Wallpaper

Highlight an item and press (●) (Select)

For details, see "707SC II Menus" (♦P.1-20).

Options

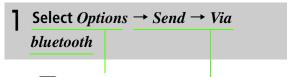

Press (Options) to open Options

Highlight an item and press (Select)



xiii

Safety Precautions

- Read these safety precautions before using handset.
- Observe all precautions to avoid injury to yourself and others, or damage to property.
- SoftBank is not liable for any damages resulting from use of this product.

Before Using Handset

Symbols

Make sure you thoroughly understand these symbols before reading on. Symbols and their meanings are described below:

<u> </u>	Great risk of death or serious injury from improper use	
Warning Risk of death or serious injury from improper use		
**Caution Risk of injury or damage to property from improper use		

	Prohibited Actions
0 €	Compulsory Actions
\triangle	Attention Required



Handset, Battery, & Charger

Use only specified battery and Charger (⊕P.i).



Using non-specified equipment may cause malfunctions, electric shock or fire due to battery leakage, overheating, or bursting.

Do not short-circuit Charger Port.



Keep metal objects away from the Charger Port.

Keep handset away from jewelry. Battery may leak,
overheat, burst, or ignite causing injury. Use a case to carry
handset.

Battery

If battery fluid gets into your eyes, do not rub them. Rinse with clean water and consult a doctor immediately.



Eyes may be severely damaged.

Prevent injury from battery leakage, breakage, or fire. Do not:



- Heat or dispose of battery in a fire.
- Disassemble, modify, or break battery.
- Damage or solder on to battery.
- Use a damaged or deformed battery.
- Use a non-specified charger.
- Force battery into handset.
- Charge or place battery near fire, heat sources or expose it to extreme heat (◆P.i).
- Use battery for other equipments.



Handset, Battery, & Charger

Do not insert foreign objects into handset.



Do not place metal or flammable objects in handset or Charger. This may cause fire or electric shock. Keep handset out of the reach of children.

Keep handset out of rain or extreme humidity.



Fire or electric shock may occur.

Keep handset away from liquidfilled containers.



Keep handset and Charger away from chemicals/liquids. Fire or electric shock may result.

Avoid sources of fire.



To prevent fire or explosion, do not use handset near gas or fine particles (Coal, dust, metal, etc.).

Keep handset and Charger away from microwave ovens.



Battery or handset may leak, burst, overheat, or ignite.

Do not disassemble or modify handset.



- Do not open the housing of handset or Charger; it may cause electric shock or injury. Contact the SoftBank Customer Center, Customer Assistance for repairs.
- Do not modify handset or Charger. Fire or electric shock may result.

If water or foreign matter gets inside handset:



Discontinue handset use to prevent fire or electric shock. Turn handset power off, remove battery, unplug Charger and contact the SoftBank Customer Center, Customer Assistance.

Do not subject handset to shocks.



Subjecting handset or Charger to shocks may cause malfunction or injury. Should handset break, remove battery and contact the SoftBank Customer Center, Customer Assistance. Discontinue handset use. Fire or electric shock may occur.

If an abnormality occurs:

Should there be any unusual sound, smoke, or odor, discontinue handset use to avoid fire or electric shock. Turn handset power off, remove battery, unplug the Charger, and contact the SoftBank Customer Center, Customer Assistance.

Handset

Preventing accidents

- For safety, never use handset while driving. Pull over beforehand. Mobile phone use while driving is prohibited by the revised Road Traffic Law (Effective 1 November 2004).
- Do not use headphones while driving or riding a bicycle. Accidents may result.
- Do not turn the volume up so high that ambient sounds cannot be heard, especially when walking in or around traffic to avoid accidents.

Do not swing handset by the strap.



Injury or breakage may result.

Turn handset power off before boarding aircraft.



Using wireless devices aboard aircraft may cause electronic malfunctions or endanger aircraft operation.

Ringtone & Vibration Settings



Select settings carefully if you have a heart condition or wear a pacemaker/defibrillator.

During thunderstorms, turn power off; find cover.



There is a risk of a lightning strike or electric shock.

Do not use handset with wet hands.



Doing so may lead to electric shock or damage to $707SC \ \square$.



Charger

Use only the specified voltage.



- Non-specified voltages may cause fire or electric shock.
- AC Charger: AC 100V-240V Input SoftBank is not liable for problems caused by charging handset abroad.
- In-Car Charger: DC 100V-240V Input

Do not use step up/down transformers.



Use of the AC Charger with step up/down transformers may cause fire, electric shock or damage.

Do not use In-Car Charger inside vehicles with a positive earth.



Fire may result. Use In-Car Charger only inside vehicles with a negative earth.

Do not touch plug blades with wet hands.



Electric shock may occur.

Do not use multiple cords in one outlet.



Excess heat or fire may occurs.

Do not bend, twist, pull, or set objects on the cord. Do not put heavy objects on the cords or heat or pull the cords.



Fire or electric shock may result.

Do not short-circuit Charger Port.



Keep the metal away from Port. Overheating, fire, or electric shock may result.

Do not use AC/In-Car Charger if the cord is damaged.



Fire or electric shock may be caused. Contact the SoftBank Customer Assistance to replace the cord.

Be sure to secure In-Car Charger.



Avoid injury or accidents.

During thunderstorms:



Unplug the Charger to avoid damage, fire, or electric shock.

Keep Charger out of the reach of children.



Electric shock or injury may occur.

Battery

If battery does not charge properly, stop charging.



Battery may overheat, burst or ignite.

If there is leakage or abnormal odor, avoid fire sources.



It may catch fire or burst.

If there is abnormal odor, excessive heat, discoloration, or distortion, remove battery from handset.



It may leak, overheat, or explode.

Handset Use & Electronic Medical Equipment

This section is based on "Guidelines on the Use of Radio Communications Equipment such as Cellular Telephones and Safeguards for Electronic Medical Equipment" (Electromagnetic Compatibility Conference, April 1997) and "Report of Investigation of the Effects of Radio Waves on Medical Equipment, etc." (Association of Radio Industries and Businesses, March 2001).

People with implanted pacemakers/ defibrillators should keep handset more than 22 cm away.



Implanted pacemakers/defibrillators may malfunction due to radio waves.

Turn handset power off in crowded places such as trains. People with implanted pacemakers/ defibrillators may be near.



Implanted pacemakers/defibrillators may malfunction due to radio waves.

Observe these rules inside medical facilities:



- Do not take handset into operating rooms or Intensive or Coronary Care Units.
- Keep handset off in hospitals.
- Keep handset off in hospital lobbies. Electronic equipment may be near.
- Obey rules regarding mobile phone use in medical facilities.

Consult the manufacturer of other electronic medical equipment about radio wave effects.





Handset, Battery, & Charger

Handset Care



- Place 707SC II on stable surfaces to avoid malfunction or injury.
- Keep 707SC II away from oily smoke or steam. Fire or accidents may result.
- Cold air from air conditioners may condense, resulting in leakage, or burnout.
- etc.) or heat sources. Distortion, discoloration, or fire may occur. Battery shape may be affected.
- Keep 707SC II out of extremely cold places to avoid malfunction or accidents.
- Keep 707SC II away from fire sources to avoid malfunction or accidents.

Usage Environment



• Excessive dust may prevent heat release and cause hurnout or fire



- Avoid using 707SC II on the beach. Sand may cause malfunction or accidents.
- Keep 707SC II away from credit cards, phone cards, etc. to avoid data loss.

Handset

Avoid leaving 707SC II in extreme heat (Inside vehicles, etc.).



Handset may heat up and lead to burns.

Volume settings



Keep handset volume moderate.

Excessive volume may cause damage to your hearing.

Headphones



- Do not unplug by pulling the cord; may damage the cord
- Keep the plug clean to avoid noise or malfunction.

Inside vehicles:



Handset use may cause other electronic equipment to malfunction.

Should skin irritation occur, discontinue handset use and consult a doctor.



Skin irritation, rashes, or itchiness may result depending on your physical condition.

Parts	Materials & Finishing
Housing (Display side)	Mg
Housing (Speaker part, Battery Cover side)	PC
Housing (Sub Display side)	PC + GF30%
Housing (Keys side)	PC+GF20%
Keypad	Mixture material
Charger & External Device Port Cover	Mixture material/
Charger & External Device Port Cover	UV coating
Battery Cover	PC
Sido kovs	Mixture material/
Side keys	UV coating

Parts	Materials & Finishing
Rotate Camera	PC/UV coating
Camera Ornament	PC/UV coating
Hinge Cap	Zinc Alloy/Nickel
	coating
Strap Eyelet	Zn+ABS resin
Strap Eyelet Cap	ABS resin +
	Urethane coating

Charger

Charger & In-Car Charger

 Grasp the plug (not the cord) to disconnect Charger. Otherwise, fire or electric shock may result.



- Keep the cord away from heaters. Exposed wire may cause fire or electric shock.
- Stop use if the plug is hot or improperly connected. Fire or electric shock may result.



• Keep In-Car Charger socket clean. If might overheat and cause injury.

Use only the specified fuse



A 1A fuse is specified for In-Car Charger. An improper fuse may cause damage or fire.

Always charge 707SC II in a wellventilated area.



Avoid covering/wrapping Charger; may cause damage or fire.

Do not use In-Car Charger when engine is off.



Start engine before use; may weaken car battery.

Disconnect AC/In-Car Charger during long periods of disuse.



Be sure to unplug AC/In-Car Charger after use.

Handset Maintenance



When cleaning, disconnect AC/In-Car Charger to prevent shock or injury.

Installing In-Car Charger



Properly position the cable for safe driving to avoid injury or accidents.

Battery

Keep battery out of the reach of children.



They may sustain injuries. And when using, do not let them remove battery from handset.

Do not leave battery in direct sunlight or inside vehicles.



Overheating or fire may occur and performance may be reduced.

Do not expose battery to liquids.



Performance may deteriorate.

If battery fluid makes contact with skin or clothes:



Rinse with clean water immediately.

Do not dispose of exhausted batteries with ordinary refuse.



Tape over battery terminals before disposal, or bring them to a SoftBank shop. Follow local regulations regarding battery disposal.

Do not throw or abuse battery.



Battery may overheat, burst, or ignite.

Charge battery within a range of 5°C - 40°C.



Battery may leak/overheat and performance may deteriorate.

If a child is using handset, explain all these instructions and supervise handset's usage.



If there is any abnormal odor or excessive heat, stop using battery and call the SoftBank Customer Center, Customer Assistance.

Do not leave battery uncharged. Charge at least once every six months.



General Notes

General Use

- SoftBank is not liable for any damages resulting from accidental loss/alteration of any data on handset. Please keep separate records of Phonebook entries, etc.
- Handset transmissions may be disrupted inside buildings, tunnels, or underground, or when moving into/out of such places.
- Use handset without disturbing others.
- Handsets are radios as stipulated by the Radio Law. Under the Radio Law, handsets must be submitted for inspection upon request.
- Handset use near landlines, TVs or radios may cause interference.
- Beware of eavesdropping.
 Because this service is completely digital, the possibility of signal interception is greatly

reduced. However, some transmissions may be overheard.

Eavesdropping

Deliberate/accidental interception of communications constitutes eavesdropping.

Inside Vehicles

- Never use handset while driving.
- Do not park illegally to use handset.
- Handset use may affect a vehicle's electronic equipment.

Aboard Aircraft

Never use handset aboard aircraft (Keep the power off). Handset use may impair aircraft operation.

xxvi

Function Usage Limits

- These functions are disabled after handset upgrade/replacement or service cancellation: Camera; Media Player; S! Applications.
- After a period of disuse, these functions may be unusable; establish a Network connection to restore usability.

Handset Care

- If handset is left with no battery or an exhausted one, data may be altered/lost.
 SoftBank is not liable for any resulting damages.
- Use handset between 5°C 40°C.
- Avoid extreme temperatures/direct sunlight.
- Exposing the lens to direct sunlight may damage the color filter and affect image color.
- Do not drop or subject handset to shocks.

- Clean handset with a dry, soft cloth. Using alcohol, thinner, etc. may damage it.
- Do not expose handset to rain, snow, or high humidity.
- Never disassemble or modify handset.
- Avoid scratching Display.
- When closing handset, keep straps, etc. outside to avoid damaging Display.
- When using headphones, moderate the volume to avoid sound bleed.
- Handset is not water-proof. Avoid exposure to liquids and high humidity.
 - · Keep handset away from precipitation.
 - · Cold air from air conditioning, etc. may condense causing corrosion.
 - · Avoid placing handset in damp places (Restrooms, bath/shower rooms, etc.).
 - On the beach, keep handset away from water and direct sunlight.

- · Perspiration may get inside handset causing malfunction.
- Heavy objects or excessive pressure should be avoided. This may cause malfunction or injury.
 - Do not sit down with handset in a back pocket.
 - Do not place heavy objects on handset in a bag.
- Insert only specified devices into Headphone Port. Malfunction or damage may result.
- Always turn power off before removing battery.
 If battery is removed while saving data or sending mail, data may be lost, changed or destroyed.

Copyrights

Copyright laws protect sounds, images, computer programs, databases, other materials for copyright holders. Duplicated material is limited to private use only.

Use of materials beyond this limit or without permission of copyright holders may constitute copyright infringement, and be subject to criminal punishment. Comply with copyright laws when using images captured with handset camera.

The software contained in 707SC II is copyrighted material; copyright, moral right, and other related rights are protected by copyright laws. Do not copy, modify, alter, disassemble, decompile, or reverse-engineer the software, and do not separate it from hardware in whole or part.

Trademarks

 Licensed by QUALCOMM Incorporated under one or more of the following United States Patents and/or their counterparts in other nations:

4,901,307 5,490,165 5,056,109 5,504,773 5,101,501 5,506,865 5,109,390 5,511,073 5,228,054 5,535,239 5,267,261 5,544,196 5,267,262 5,568,483 5,337,338 5,600,754 5,414,796 5,657,420 5,416,797 5,659,569 5,710,784 5,778,338

- Video Call, 3D Pictgram, S! Appli, S! Mail and Mail Art are trademarks or registered trademarks of SOFTBANK MOBILE Corp.
- "ComicSurfing®" is a trademark or registered trademark of CELSYS, Inc.

- "SOFTBANK," SOFTBANK's equivalent in Japanese, and the SOFTBANK logo are trademarks or registered trademarks of SOFTBANK CORP. in Japan and in other countries.
- Yahoo! and the "Yahoo!" or "Y!" logos are trademarks or registered trademarks of Yahoo! Inc.
- This product contains ACCESS Co., Ltd.'s
 NetFront Internet browser software.
 NetFront is a trademark or registered
 trademark of ACCESS Co., Ltd. in Japan and in other countries.
 ACCESS NetFront
- Part of the software in this product incorporates a module developed by the Independent JPEG Group.
- •THIS PRODUCT IS LICENSED UNDER THE MPFG-4 VISUAL PATENT PORTFOLIO

LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER FOR (i) ENCODING VIDEO IN COMPLIANCE WITH THE MPEG-4 VISUAL STANDARD ("MPEG-4 VIDEO") AND/OR (ii) DECODING MPFG-4 VIDFO THAT WAS FNCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NONCOMMERCIAL ACTIVITY AND/ OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED BY MPEG LA TO PROVIDE MPEG-4 VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION INCLUDING THAT RELATING TO PROMOTIONAL, INTERNAL AND COMMERCIAL USES AND LICENSING MAY BE OBTAINED FROM MPEG LA, LLC. SEE HTTP://WWW.MPEGIA.COM.

- Contains Macromedia[®] Flash[®] Flash Lite[™] technology by Adobe Systems Incorporated.
- Copyright[®] 1995-2005 Adobe Systems Incorporated. All rights reserved.
- Macromedia, Flash, Macromedia Flash, and Macromedia Flash Lite are trademarks or registered trademarks of Adobe Systems Incorporated in the United States and other countries.
- JBlend[™] is incorporated in this product.
 JBlend[™] is a Java[™] execution environment developed by Aplix Corporation for implementing advanced performance and fast operation on small-memory systems.
- Powered by JBlend[™] Technology.
 JBlend and JBlend logos are registered trademarks of Aplix
 Corporation in Japan and other countries.

- Powered by JBlend[™], ©1997-2006 Aplix Corporation.
 All rights reserved.
- JBlend and all JBlend-based trademarks and logos are trademarks or registered trademarks of Aplix Corporation in Japan and other countries.
- Chaku-Uta[®] and Chaku-Uta Full[®] are registered trade marks of Sony Music Entertainment Corp.
- Java and all Java-based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the United States and other countries.

 Bluetooth is a trademark of the Bluetooth SIG, Inc.

The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Samsung Electronics is under license. Other trademarks and trade names are those of their respective owners.

Bluetooth®

In the frequency band of the Bluetooth® functions of 707SC II, Industrial, scientific or medical equipments such as microwave ovens or in-house radio stations such as the ones used in production lines or by amateur radio stations (Referred to as "other radio stations" hereafter) are used. In order to prevent radio interference with other radio equipments, follow the points listed below in using handset.

1.Before using Bluetooth® functions, confirm there are no "other radio stations" operating near you.

- 2.In case there is a radio interference with "other radio stations," move to some other place or stop the Bluetooth® functions (Stop emitting the radio waves) immediately.
- 3.If you have any questions or problems with Bluetooth® emissions, contact SoftBank as listed below:

Contact: SoftBank Customer Center

From a SoftBank handset, dial 157 (toll free) for General Information. See "Customer Service" (�P.25-25) for landline numbers by service area.

707SC II transmits on the 2.4 GHz band, employing frequency-hopping spread spectrum (FHSS) modulation, with resistance to radio frequency interference between 1.5 - 5 meters, depending on usage environment.

SAR Certification Information

707SC II meets the technical standards of Ministry of Internal Affairs and Communications (MIC) regarding radio wave absorption by a human body.

These technical standards are established on a scientific basis to prevent radio waves emitted from wireless devices such as mobile phones that are used close to human head from affecting human health. These standards assure that the SAR (Specific Absorption Rate), an indicator of the amount of average energy absorbed in the side of a human head, must not exceed the permissive value of 2W/ kg*. This value includes a substantial safety margin designated to assure the safety of all persons, regardless of age and physical size. The value is equal to the international guideline recommended by International Commission on Non-Ionizing Radiation Protection (ICNIRP) that has a cooperative relationship with the World Health Organization (WHO).

The highest SAR value for 707SC II is 0.345 W/kg. This value is obtained in accordance with the MIC testing procedure with the mobile phone transmitting at its highest permitted power level. While there may be differences in the SAR levels depending on phones, they all meet the MIC's permissible value. Because mobile phones are designed to employ the minimum power level required for the communication with the base station, the SAR of the phone during a call is usually below the maximum value.

For further information about SAR, please see the following websites (Japanese only):

MIC: http://www.tele.soumu.go.jp/j/ele/index.htm ARIB: http://www.arib-emf.org/initiation/sar.html

*The guideline is defined by relevant laws and regulations associated with the Radio Law (No. 2 of Article 14 of Ordinance Regulating Radio Equipment.).

FCC RF Exposure Information

Your handset is a radio transmitter and receiver.

It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The guidelines are based on standards that were developed by independent scientific organisations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless handsets employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg.

The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model handset when tested for use at the ear is 0.178 W/kg and when worn on the body, as described in this user quide, is 0.357 W/kg.

Body-worn Operation; This device was tested for typical bodyworn operations with the back of the handset kept 1.5 cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5 cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly.

The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

The FCC has granted an Equipment Authorisation for this model handset with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. SAR information on this model handset is on file with the FCC and can be found under the Display Grant section of http://www.fcc.gov/oet/fccid after searching on FCC ID A3L707SC.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) website at http://www.phonefacts.net.

European RF Exposure Information

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg and the highest SAR value for this device when tested at the ear was 0.339 W/kg*. As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user guide. In this case, the highest tested SAR value is 0.104 W/kg.

As SAR is measured utilizing the devices highest transmitting power the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device

to ensure it only uses the minimum level required to reach the network.

The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure then you can do so by limiting the length of calls or using a hands-free device to keep the mobile phone away from the head and body.

* The tests are carried out in accordance with international guidelines for testing.



SAMSUNG ELECTRONICS

Declaration of Conformity (R&TTE)

We,

Samsung Electronics

declare under our sole responsibility that the product

GSM Mobile Phone: 707SCII

to which this declaration relates, is in conformity with the following standards and/or other normative documents.

SAFETY	EN 60950-1:2001 +A11:2004
EMC	EN 301 489- 01 V1.4.1 (08-2002) EN 301 489- 07 V1.2.1 (08-2002) EN 301 489- 17 V1.2.1 (08-2002) EN 301 489- 24 V1.2.1 (11-2002)
SAR	EN 50360 : 2001 EN 50361 : 2001
RADIO	EN 301 511 V9.0.2 (03-2003) EN 300 328 V1.6.1 (11-2004) EN 301 908- 1 V2.2.1 (10-2003) EN 301 908- 2 V2.2 (10-2003)

We hereby declare that [all essential radio test suites have been carried out and that] the above named product is in conformity to all the essential requirements of Directive 1999/5/EC,

The conformity assessment procedure referred to in Article 10 and detailed in Annex[$^{
m IM}$] of Directive 1999/5/EC has been followed with the involvement of the following Notified Body(ies):

Walton-on-Thames, Surrey, KT12 2TD, UK* BABT, Balfour House, Churchfield Road, Identification mark: 0168

Samsung Electronics QA Lab.

The technical documentation kept at :

CE0168

which will be made available upon request. (Representative in the EU)

Samsung Electronics Euro QA Lab. Blackbushe Business Park, Saxony Way, Yateley, Hampshire, GU46 6GG, UK*

Yong-Sang Park / S. Manager S. C. DONEZ

* It is not the address of Samsung Service Centre. For the address or the phone number of Samsung Service Centre, see the warranty card or contact the retailer where you purchased your phone.

(place and date of issue)

2007.03.09

(name and signature of authorised person)

Getting Started

USIM Card

General Information & Precautions

Universal Subscriber Identity Module (USIM) Card is an IC card containing customer and authentication information, including handset number and limited storage for Phonebook entries and SMS. Install USIM Card to use 707SC II; turn 707SC II power off to insert/remove USIM Card.



Insert USIM Card into another compatible handset to access SMS and Phonebook entries saved on USIM Card. Note the following precautions regarding USIM Card usage and care (see USIM Card User Guide for details):

 Avoid using excessive force when Inserting/removing USIM Card.

- SoftBank is not liable for damages resulting from inserting USIM Card into IC card readers or other third party devices.
- Always keep USIM Card IC chip clean.
- Clean USIM Card IC chip with a soft, dry cloth.
- Do not attach labels to USIM Card; malfunction may result.

Notes


- USIM Card is the property of SoftBank.
- If USIM Card is lost or damaged, you will be charged for reissuing it.
- Return USIM Card to SoftBank upon termination of subscription.
- Returned USIM Cards are recycled.
- USIM Card specifications may change without prior notice.
- If USIM Card or 707SC II with USIM Card inserted is lost or stolen in Japan or abroad, immediately contact Customer Service (◆P.25-25) to suspend service.
- Handset/USIM Card repairs, replacement or upgrades may deactivate Chaku-Uta®, Chaku-Uta Full®,
 S! Appli, or video files on handset.
- Inserting another USIM Card (not the included one) into 707SC II may deactivate preinstalled S! Appli or Comic Surfing files on handset.
- Back-up USIM Card files. SoftBank is not liable for lost files.

Inserting & Removing USIM Card


Always turn power off before opening 707SC II to remove battery, or insert/remove USIM Card.

Inserting

- Remove battery (⊕P.1-14)
- **2** With IC chip down, insert USIM Card into card slot

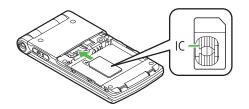


3 Push in USIM Card until it stops and locks

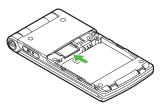

Removing

Remove battery (�P.1-14)

2 Press down on USIM Card and gently slide it out

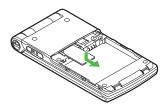

Note

- Inserting USIM Card with excessive force may damage it or 707SC II.
- Do not misplace a removed USIM Card.
- To prevent damaging it, avoid touching the IC chip when Inserting or removing USIM Card. Do not touch battery contacts.

9

USIM PINs

USIM Card features two (4- to 8-digit) security codes: PIN and PIN2.

PIN

Use PIN to prevent unauthorized use of 707SC ${\rm I\hspace{-.1em}I}$ by others.

- Modify PIN (♠P.13-2).
- When PIN lock is activated, PIN entry is required each time 707SC II is turned on or whenever USIM Card is reinserted (P.13-3).

PIN₂

PIN2 is required for Reset Call Cost or Edit Cost Limit, etc.

• Modify PIN2 (◆P.13-2).

Canceling PIN Lock (PUK/PUK2 Code)


Incorrectly entering PIN or PIN2 three consecutive times activates PIN Lock and limits 707SC II function access. Enter PUK (PIN Unlocking Key) Code to cancel PIN Lock. For more information, contact Customer Service (◆P.25-25).


Note

- Entering PUK or PUK2 incorrectly ten consecutive times locks USIM Card and deactivates 707SCII.
 Write down PUK and PUK2.
- Unlocking a locked USIM Card requires a special procedure. Contact Customer Service (♠P.25-25).

Handset Parts & Functions

Handset

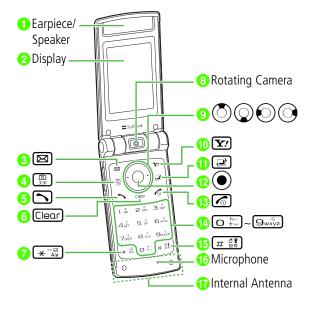

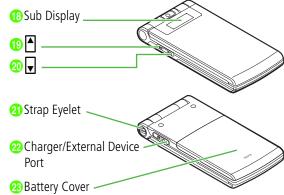

- 1 Earpiece/Speaker
- ② Display
- 3 Left Softkey/Mail Key

Open Messaging menu or execute Left Softkey command/ function.

Camera/Character Key

Activate Camera or select text entry mode.

Start Key

Initiate and receive Voice Calls.

6 Clear/Back Key

Delete entered text or return to the previous window.

★ Key

Enter line breaks in text entry windows. In Standby, press for 1+ seconds to open Phone Profiles.

Camera

Capture images or send video during a Video Call.

Multi Selector

Select menu items, move cursor, scroll window.

nght Softkey/Yahoo! Keitai Key

Access Yahoo! Keitai or execute Right Softkey command/function.

1 Switch Bar Key

Display Switch Bar (�P.1-22).

(2) Center Key

Open Main Menu or execute Center Softkey command/function.

Power/End Key

Turn power on/off or end operations.

Keypad

Enter numbers or characters and select menu items.

15 #/Manner Key

Toggle Symbols menus in text entry windows. In Standby, press for 1+ seconds to activate/cancel Manner Profile.

- 16 Microphone
- 17 Internal Antenna
- 18 Sub Display
- (Side Key)

Raise volume. During a Video Call, enlarge image size.

Lower volume. During a Video Call, reduce image size.

- Strap Eyelet
- **22** Charger/External Device Port

Connect Charger, Stereo Earphone Microphone, USB Cable, etc. here.

23 Battery Cover


Opened to insert/remove battery or USIM Card.

Tip

Internal Antenna

707SC II has no external antenna. 707SC II transmits and receives signals via Internal Antenna. Do not cover or place stickers, etc. over the area containing Internal Antenna. Voice quality may vary by where/how 707SC II is used.

Display Indicators

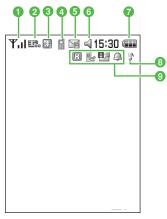

1 Y_{II} Signal Strength (more bars _{II} indicate stronger signal)

out Out-of-Range (outside service area or no signal when Language is set to English or 한국어) 圏外Out-of-Range (When Language is set to 日本語)

- 2 sa 3G (UMTS) network connected/roaming
 - GSM network connected/roaming
 - Web SSL connected
- (3) (Blue) Bluetooth® Active
 - (Flashing in Blue & Pink) Bluetooth® Transmission
 - Bluetooth[®] Packet Data transmission
 - R Call in Progress with Bluetooth® Active
 - (Blue) USB Connected
 - (Flashing in Orange & Yellow) USB Active

 - 🖱 S! Appli Paused
 - ♠ Packet Data transmission
- ← Voice Call in Progress
 - Video Call in Progress
- 6 Mew S! Mail
 - New SMS
 - New Voice Mail
 - Unheard Answer Machine Message
 - Software Update Required
- 6 Normal Profile
 - Manner Profile
 - Car Profile

- Meeting Profile
- Outdoor Profile
- 7 Battery Strong
 - Battery Moderate
 - Battery Low
 - (Flashing) Battery Weak (Charge Now)
- Sound settings: Other than Off for Voice Call in Ringtone volume Set; and On for Voice Call in Vibration Set
 - → Sound settings: Other than Off for Voice Call in Ringtone volume Set; and Off for Voice Call in Vibration Set
 - Sound settings: Off for Voice Call in Ringtone volume Set; and On for Voice Call in Vibration Set
 - ✓ Sound settings: Off for Voice Call in Ringtone volume Set and Vibration Set

- Roaming Active
 - Le Voice Mail/Call Forwarding Active
 - Answer Machine Active
 - S! Mail Memory Full
 - SMS Memory Full
 - Voice Mail Memory Full
 - Wake-up Alarm/Alarm Set

 When \(\psi\) (Red) appears, only packet data transmission and S! Mail sending are available;
 Voice Call, received S! Mail notification, and SMS sending/receiving are disabled.

Sub Display



- (more bars mindicate stronger signal)
- 2 A Wake-up Alarm/Alarm Set
- 3 New Message
- 4 Manner Profile Set; and On for Voice Call in Vibration Set
- 6 Eattery Strong
 - Battery Moderate
 - Battery Low
 - Battery Weak (Charge Now)

Battery & Charger

Before Using Battery or Charger

Charge battery before first use of 707SC II or after periods of disuse.

Charging Battery

- Long periods of disuse may affect battery's ability to hold a full charge.
- 707SC II uses a lithium-ion battery; charge battery in any state without damaging its ability to hold a charge.
- Do not charge battery under the following conditions:
 - In ambient temperatures beyond 5°C 40°C
 - In high levels of humidity, vibration or dust
 - Near a radio receiver (May cause feedback)
- 707SC II or Charger may warm while charging. This is normal, however, should they become very hot to the touch, stop charging and contact Customer Service (♠P.25-25).

- Charge battery at least once every six months while not in use. Otherwise, battery may become unusable.
- Battery is a consumable; replace it if operating time shortens noticeably.

Note

- · Use specified Charger only.
- Battery must be inside 707SC II to charge it.
- When not in use, unplug Charger from outlet or cigarette lighter socket.

Battery Life

Battery time/life may be reduced by any of the following:

- Environmental Factors
 - Storing/using 707SC II beyond 5°C 40°C
 - Using 707SC II when signal is poor/out-of-range
 - Debris on 707SC II , battery or Charger Port
- Operational Factors
 - Active S! Appli
 - Camera use
 - Media Player use
 - Excessive Keypad use (e.g. for gaming or messaging)
 - Bluetooth® transmissions
 - Frequently opening and closing 707SC II
- Settings
 - Using Slide Show
 - Setting Brightness higher or Backlight Time longer
 - Using Media Player with Backlight set to $Always\ on$

Battery Disposal

Do not dispose of exhausted batteries with ordinary refuse. Tape over battery terminals before disposal or take to a SoftBank shop. Follow any and all local regulations regarding battery disposal.

Lithium-ion batteries are recyclable.

When Battery Runs Out


When battery is weak, a warning appears and 707SC ${\rm II}$ beeps. Charge or replace battery; otherwise 707SC ${\rm II}$ will automatically turn off.

9


Inserting & Removing Battery

Inserting


Press Battery Cover and slide as shown

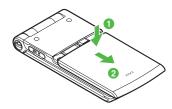


2 Fully remove Battery Cover as shown

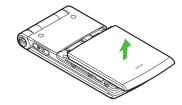

Align Battery Slots and 707SCII Tabs to insert battery as shown

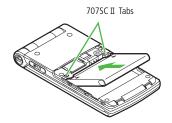

4 Insert Battery Cover Tabs into 707SC II Slots to attach Battery Cover as shown

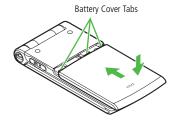

Note

- Remove battery cover with care; stress on tabs may damage them.
- Gently insert battery to avoid damaging 707SC II tabs.


Removing

Always turn 707SC II off before removing battery. Never remove battery while AC Charger or In-Car Charger is connected.


Press Battery Cover and slide as shown



2 Fully remove Battery Cover as shown

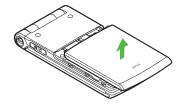


3 Lift battery up and remove as shown

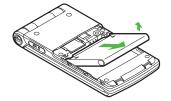


AC Charger

Use specified Charger only.


1 Open Port Cover and insert Charger Connector into the port

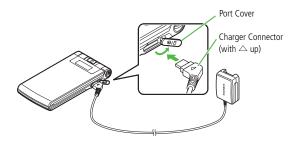

2 Plug Charger into an AC 100V outlet

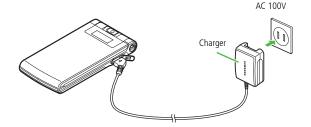

3 When battery is charged, unplug Charger, then disconnect 707SC II

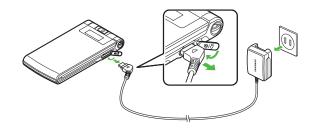

Battery Charged Confirmation

If 707SC II is on while Charger is connected, battery indicators flash when battery is fully charged. While charging, battery indicators change as follows:

If 707SC ${\rm I\!I}$ is off while Charger is connected, battery indicator and graphic appear full on Sub Display & *Battery full* appears above graphic on Display when battery is fully charged. Otherwise, *Charging...* appears above animation on Display.

Charging Time

An empty battery requires 120 minutes (approx.) to charge when power on and Display off (no operation). Longer when Display on. Charging time may vary by ambient temperature.

☐ Charging via PC USB Port


Battery will charge when 707SC $\rm II\,$ is connected to a PC via included USB cable.

- (1) Open Port Cover and insert USB Cable Connector
- 2 Insert USB Connector into a PC USB port
- When battery is charged, remove Connector from 707SC II and replace Port Cover, then remove USB Connector from the PC USB port


Charging via USB takes more time; charging time will vary by PC. A weak battery may not charge via a PC USB port.

In-Car Charger (Optional)


Open Port Cover and insert Connector Plug

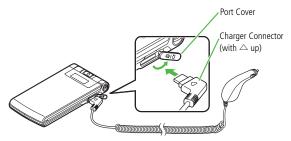

2 Insert Charger Connector into lighter socket

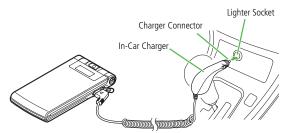

- 3 Start the car's engine
- 4 When battery is charged, disconnect handset (replace Port Cover), then unplug In-Car Charger

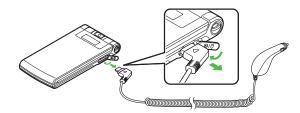

- Battery Charged Confirmation (♠P.1-16)
- Charging Time (�P.1-16)
- When using In-Car Charger See In-Car Charger manual. For safety, use In-Car Holder together with In-Car Charger.

lote

- Do not charge battery in ambient temperatures over 40°C (e.g. inside a closed automobile in direct sunlight, etc.).
- Use In-Car Charger in cars with a negative earth only (DC 12/24V).

Power On/Off

- Power On
 - **]** Open 707SC **I**I
- Press for 1+ seconds



- To confirm handset phone number
 - In Standby, press \bigcirc \rightarrow \bigcirc ; save or edit your information in My Phonebook Details including name and mail address (P.5-16).
- When PIN lock is activated PIN entry is required each time 707SC II is turned on.
- When 707SC II is left open without operations (P.8-7)

Display automatically shuts down to conserve power.

 Use both hands to open and close 707SC II; avoid using excessive force which could damage handset or lead to malfunctions.

- **Power Off**
- Press for 2+ seconds

Time & Date

Time & Date

- Default Setting Time format: 24H
 - Date format: YYYY/MM/DD

Some 707SC II functions cannot be used unless time and date are set. Open Time & Date to change Time Format or Date Format.

- Press lacktriangle and select $Settings \rightarrow$ Phone settings \rightarrow Time & date
- Adjust settings

To set time

Highlight Time field and enter the time (24-hour format)

To set AM/PM (for 12-hour format)

- (1) Highlight Time field and press () twice for AM/ PM option
- (2) Use (to toggle AM and PM

To set date

Highlight Date field and enter year, month, and day

To change time format

- (1) Select Time format field
- (2) Select the setting and press ()

To change date format

- (1) Select Date format field
- ② Select the setting and press (●)
- ? Press (Save)

Time Zone Updating

Default Setting Prompt first

Automatically update 707SC II Date & Time using server time zone information.

- Press \bullet and select *Settings* \rightarrow Phone settings \rightarrow Time & date
- **>** Select *Time zone updating* and perform operations to set
- **?** Press **□** (Save)

Tip

• Time zone updating Items

Manual only: Enter date & time manually.

Prompt first: Confirmation appears when 707SC II moves into a different time zone. This function is not available Japan.

Automatic: Time & Date updated according to server time zone information. This function is not available Japan.

Changing Home Time Zone

Default Setting

Home zone: GMT+9h

Daylight saving: Unchecked

Select the zone closest to your locality. Set Daylight saving time as required. Complete this setting before selecting Dual Clock in Clock Display (♠P.8-4).

- Press \bullet and select *Settings* \rightarrow Phone settings \rightarrow Time & date
- Select Home zone field
- Set time zone

To set home time zone

- 1) Use to specify a target area
- (**2**) Press (●)

To set daylight saving time

- (1) Check *Daylight saving*
- (2) Press (OK)

Press

☐ (Save) 1-20

₹ 707SC II Menus

Main Menu

In Standby, press (●)




Main Menu

→ Highlight an item and press
→ (Select)

3 Repeat Step 2 to open/activate the target function

<Example> Select *Display settings* → *Wallpaper*

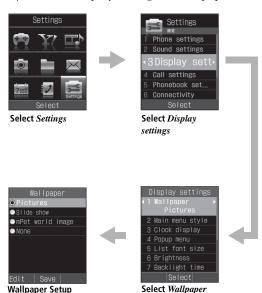

Pictures

Window appears

Tip

To end an operation

Press . Operation ends and 707SC II returns to Standby. When multiple functions are active, the next active operation window appears.

• To cancel/escape an operation

Press . Operation/function is canceled and 707SC II returns to Standby or the previous window appears. For some menus, a confirmation appears.

Menu operations (◆P.xiii)

⊕ When Popup Menu (�P.8-6) is On

Content is different (Step 2), however operations remain the same.

Selecting items with Keypad

When numbered items appear in menus, etc., use keypad to select them.

Shortcuts

In Standby, press a key to open the assigned shortcut.

Key	Corresponding Menu/Function
\boxtimes	Messaging
Y !	Yahoo! Keitai Main Menu
(1+ seconds)	Yahoo! Keitai Menu
(文字)	Mobile Camera (last used function)
	Switch Bar
	Idle shortcut*
	Phonebook list
\odot	Call Log (<i>Received</i>)
()	Call Log (<i>Dialled</i>)
\Box	Call Log (Current Contacts)
(1+ seconds)	Phone Profiles
# 🐉 (1+ seconds)	Activate/Cancel Manner Profile

^{*} Create shortcuts for frequently used functions in Idle shortcut (**♦** P.15-7).

Switch Bar

Initiate Call, Messaging, Yahoo! Keitai, or Media *Player*; use multiple functions concurrently (e.g., create a message while listening to music, or browse the Mobile Internet while talking on the phone).



- In Standby or an active function window, press 🖭
- Use to highlight a function and press (●) (Select)

To exit an active function

From the window of the function to exit, press



To exit all active functions

1) Press 🖃

② Use (to highlight *End all?* and press (Yes)



Tip

. When exiting all active functions

Exiting all active functions during message creation or voice/ video recording deletes created/recorded data.

Options

When *Options* appears at bottom-right of Display, press **Y**? to open *Options*. To execute an option, highlight the item and press (Select).

Tip

• See "Options" (◆P.xiii)

Security Codes

Phone Password. Center Access Code and Network Password are required to use 707SC II.

Phone Password

The 4-digit number (9999 by default) required to use/ change some handset functions.

- Entered digits are represented with*
- If incorrect, an error message appears; try again.
- Change Phone Password as required

Center Access Code

4-digit number specified at subscription; required to access Voice Mail via landlines/to subscribe to fee-based information.

Center Access Code cannot be changed on 707SC II; a special procedure is required. For details, contact Customer Service (♠P.25-25).

Network Password

4-digit number specified at subscription, required to restrict handset services. Entering Network Password incorrectly three consecutive times locks Call Barring settings. To resolve, Network Password and Center Access Code must be changed. For details, contact Customer Service (�P.25-25).

 Network Password can be changed on 707SC II (P.16-13).

Note

- Write down Phone Password, Center Access Code, or Network Password. If you forget any of these codes contact Customer Service (◆P.25-25).
- Do not reveal Phone Password, Center Access Code, or Network Password to others. SoftBank is not liable for damages caused by misuse of these codes by others.

Basic Handset Operations

Initiating a Call

See P.5-9 to call from a Phonebook entry or P.6-2 for Video Calls.

To use Speed Dialing (⊕P.5-12)

2 Confirm the number and press

3 Press to end the call

Tip

To correct entered digits

Press Clear to delete the last digit. Press Clear for 1+ seconds to delete all.

· When the line is busy

Press to end the call and try again later. If Auto Redial (P.15-2) is active, number is automatically redialed. Press (Cancel) or to cancel.

- When Stereo Earphone Microphone is connected Enter a number and press Stereo Earphone Microphone switch for 1+ seconds to initiate a call. When *Earphone call* is *On*, press switch for 1+ seconds to call specified number. Press switch for 1+ seconds to end a call.
- Engaged Call Operations (�P.2-7)

➡ Placing international calls from Japan

A separate subscription is required for international calls.

- 1 Enter a phone number
- (2) Options → International dial
- 3 Select country or Enter Code for direct entry
- Select Japan
- **(5)** Confirm the number and press
- ☐ Using a SoftBank handset overseas

 Enter handset phone number; country code is not required.
- ☐ Calling from overseas (♠P.2-15)

Options

Item	Description
Video call	Initiate a Video Call (�P.6-2).
Add to Phonebook	Save a number to Phonebook or USIM Card Phonebook (�P.5-6).
Create msg	Open a new message addressed to the number (�P.17-6).
Phonebook	Open Phonebook Search window.
Call log	Open Call Log.
International dial	Add international code and country code to a number (�P.2-2).
Hide/Show my ID	Hide or show your phone number when placing calls; select <i>None</i> to apply Caller ID (�P.16-13) settings.

Receiving a Call

- When 707SC II rings/vibrates, press or (Accept)
- 2 Press 6 to end the call

Tip

- When Anykey Answer (◆P.15-5) is On
 Press any key except ☒, ☒, ♠, or Side Key ♠ ▼ to answer Voice Calls.
- To mute ringer for an incoming call

 While 707SC II rings/vibrates, press ☒ (Mute); caller continues to hear ringback tone. To answer the call, press

 (Accept).
- To adjust ringer volume

 While 707SC II rings/vibrates, press Side Key A or ...
- When Stereo Earphone Microphone is connected When 707SC II rings/vibrates, press Stereo Earphone Microphone switch for 1+ seconds to accept a call. Press again for 1+ seconds to end the call.
- Engaged Call Operations (�P.2-7)

Ringtones

Specify ringtones for saved numbers by Phonebook entry or Category (�P.5-4, 5-7). When no ringtone is set, 707SC II rings according to Profile Settings (�P.9-2).

Under following conditions, 707SC II rings according to each Mode; Secret Mode is set to *Hide* and Phonebook(contains caller's number as an entry)'s Secret Mode is set to *On*.

☐ Incoming call window

If caller sends Caller ID, phone number appears; if saved in Phonebook, name appears. When an image is set in Phonebook or Category, image also appears (�P.5-4, 5-7). If caller hides Caller ID, *Withheld* appears.

Under following conditions, no name/image appears; Secret Mode is set to *Hide* and Phonebook(contains caller's number as an entry)'s Secret Mode is set to *On*.

H Missed call window

After an unanswered incoming call, Missed call window appears. Press ☑ (View), to open Missed Call Log (�P.2-9).

He When you cannot answer a call

Use Call Forwarding/Voice Mail to forward incoming calls to a specified number automatically/to save messages at Voice Mail Center. When Call Forwarding or Voice Mail is set to *No reply*, press (Busy) to forward an incoming call immediately (©P.16-3, 16-5).

Use Answer Machine to record caller messages. Up to 3 messages (15 seconds per message) can be recorded in 707SC II (�P.2-5).

Reject Incoming Call

Proactively disconnect an incoming call without answering it. The rejected call is recorded in *Missed*.

While 707SC II rings/vibrates, press

- When Side Key (�P.15-6) is set to *Reject* Press \blacksquare or \blacksquare for 1+ seconds to reject an incoming call.
- To reject call and send a busy message When neither Call Forwarding (♦P.16-2) nor Voice Mail (♠P.16-2) is active, press 🔀 (Busy) to proactively disconnect a call without answering it; "busy" message appears on caller's handset before call is disconnected. If caller's handset is incompatible, call is simply disconnected.
- To automatically reject a call (♠P.13-8)

Answer Machine

Record caller messages on handset. Up to 3 messages (15 seconds per message) can be recorded.

Activating & Canceling

Default Setting = Off

- Press (\bullet) and select *Settings* \rightarrow *Call* settings \rightarrow Answer machine \rightarrow Setting
- **>** Select the setting and press (Save)



- Answer Machine cannot be used when handset is off, out-of-range or in Offline mode. Use Voice Mail to record caller messages.
- If 707SC II shared memory (♠P.25-15) is below 600 KB, Answer Machine cannot be used.

☐ With Answer Machine set

In Standby, appears.

Ringing Duration

Default Setting ■ 18 seconds

- Press and select Settings → Call settings → Answer machine → Ringing duration
- 2 Select an item or *Other (0-60Secs)* to set a time
- 3 Press (Save)

Sound Language

Default Setting ■日本語

- Press and select Settings → Call settings → Answer machine → Sound language
- 2 Select the setting and press (Save)

Checking Recordings

When Answer Machine records caller messages, appears in Display.

- Press and select Settings → Call settings → Answer machine → Recordings
- Highlight the message to check and press (Play)

Tip

To delete messages

Highlight the message to delete, press (Delete) and select *Yes*.

Engaged Call Operations

Earpiece Volume

Adjust Earpiece or Earphone volume. Setting remains even after power off.

During a call, press Side Key A v or

Hold

When a call is put on hold, the party on hold hears a hold tone and neither party can hear the other's voice.

A subscription to Call Waiting (◆P.16-8) or Conference Call (◆P.16-9) is required to use this function. If you have not subscribed to any of these services, Hold function is not available.

1 During a call, press **△** (Hold)

Press ☒ (Retrieve) to reconnect the call

Speaker Phone

During a call, press () and select *Yes*

To cancel Speaker Phone Press () ()

Voice Recording

Record voice of a maximum of 2 minutes during a call.

- During a call, select *Options* → *Record*
- Press (Record)

3 Stop or pause

To stop and save

Press (Stop)

To pause and save

1 Press (Pause)

2 Press (Record) to restart recording; press

(Save) to end recording

Tip

• When a recording is made
Files are saved to Sounds & Ringtones folder in Data Folder.

- When another call arrives while recording
 If Call Waiting is subscribed, recording stops and incoming
 call window appears.
- When call is ended while recording

 Recording stops automatically and voice file is saved.

Engaged Call Options

Item	Description
Whisper on/off	With On , raise the volume of sent sounds.
Mute	Check <i>Voice</i> or <i>Key tone</i> and press (OK) to cancel sending no sounds or key tones.
New call	Enter a number and press (Call) to initiate another call; requires subscription to Conference Call (�P.16-9).
Phonebook	Open Phonebook Search window.
Add to Phonebook	Save number to Phonebook or USIM Card Phonebook (�P.5-6).
Create msg	Open a new message addressed to the number (◆P.17-6).
Send DTMF	Enter digits then press (Send).
Record	Record caller's voice during a call (�P.2-7).
Memo	Create and save text memos (◆P.14-10).
End call	Disconnect call.

Item	Description
Switch to headset/ Switch to phone	Appears when Bluetooth®-compatible headset is in use. Select headset or phone (handset).

Call Log Records

Viewing Call Log Records

Current contacts	All incoming and outgoing calls
Missed	All missed incoming calls
Received	All received incoming calls
Dialled	All outgoing calls

7 Press 🔾

2 Use to select a Call Log

To confirm phone number and call duration Highlight an item and press ((View)

□ Call Log Record Indicators

saved in Phonebook

: Call to/from a number saved in USIM Card Phonebook

: Voice Call to/from an unsaved number

: Video Call to/from a number saved in Phonebook Current Contacts (all incoming/outgoing calls) Indicators

🖫 : Received call - 🧏 : Rejected incoming call

☐ : Missed call ☐ : Dialled call

Tip

• While Secret Mode is set to *Hide*

Call Log records of numbers saved in Secret Phonebook entries do not appear.

Calling from Call Log Records

7 Press 🔾

2 Use to select a Call Log

3 Highlight a record and press 🗀

To initiate a Video Call

 $Options \rightarrow Video\ call$

Deleting Call Log Records

Deleting One Record

Delete one Call Log record.

7 Press 🔾

2 Use to select a Call Log

3 Highlight a record, select *Options* → *Delete* → *Selected* → *Yes*

Tip

- To delete individual calls from records
 - 1 Perform Steps 1 and 2
 - (View)
 - ③ Highlight a call, select Options → Delete → Selected → Yes

Deleting All Records

Delete all Call Log records at once.

Press to select *Current contacts*

? Select *Options* \rightarrow *Delete* \rightarrow *All* \rightarrow *Yes*

3 Enter Phone Password and press
(Confirm)

Call Log Options

Item	Description
Voice call	Initiate a Voice Call to the current number.
Video call	Initiate a Video Call to the current number (�P.2-9).
Add to Phonebook	Save number to Phonebook or USIM Card Phonebook (�P.5-6).
Create msg	Open a new message addressed to the current number (◆P.17-6).

Item	Description
Delete	Delete the current Call Log record (�P.2-10).
Add to black list	Add the number to Black List (P.13-9).
View phonebook details	Open Entry details for a number.
International dial	Add international code and country code to the number (P.2-2).
Hide/Show my ID	Hide or show your phone number when placing calls; select <i>None</i> to apply Caller ID settings.

🞜 Call Manager

Data counter	Confirm/reset incoming/outgoing data volume.
Call costs	Confirm/reset Total Costs, Last Call Cost or Cost Limit; change Call Costs currency unit.
Call times	Confirm/reset incoming/outgoing Voice/ Video Call Times.

Data Counter, Call Costs, & Call Times

- Press \bullet and select $Settings \rightarrow Call$ $settings \rightarrow Call \ manager$
- Select an item

To reset a Data Counter item

- 1 In Data counter, highlight an item, select *Options*
 - \rightarrow Reset
- ② Select Yes

To reset all Data Counter items

- 1 In Data counter, highlight an item, select *Options*
 - → Reset all
- ② Enter Phone Password and press (Confirm), and select *Yes*

To reset Call Costs

- ① In Call costs, select $Options \rightarrow Reset \ call \ cost$
- 2) Enter PIN2 and press (Confirm)

To reset Call Times

① In Call times, highlight an item, select *Options* → *Reset* → *Yes*

To reset all Call Times

- ① In Call times, highlight an item, select *Options* → *Reset all*

To change Call Costs currency unit

- 1 In Call costs, select $Options \rightarrow Setup \ currency$
- 2) Enter PIN2 and press (Confirm)
- (3) Highlight Price field to enter a price in Yen
- 4 Highlight Currency field and enter currency unit
- **⑤** Press **☒** (Save)

Edit Cost Limit

After reaching the call cost limit, only emergency calls (�P.2-16) can be initiated; messaging, web connections (fee-based operations) are disabled.

- Press and select $Settings \rightarrow Call$ $settings \rightarrow Call \ manager$
- **>** Select *Call costs*
- **3** Select *Options* \rightarrow *Edit cost limit*
- 4 Enter PIN2 and press (Confirm)
- 5 Enter limit

Display Call Cost during a Call

Default Setting Off

- Press and select Settings → Call settings → Call manager → Display call cost
- 2 Select setting and press (Save)

🎜 International Roaming

A separate subscription is required for international calls. Contact Customer Service for more information about international roaming.

Changing Network Mode

Default Setting = 3G

- Press lacktriangle and select *Settings* \rightarrow *Connectivity* \rightarrow *Network mode*
- **>** Select a Network mode

Tip

• Network mode Items

Automatic: Network is set automatically by location.

GSM 900/1800: Available overseas. *GSM 1900*: Available overseas.

3G: Available domestically and overseas.

Network Setup

Selecting a Network

Default Setting = Automatic

Select a network (operator) by location or use Automatic.

Press \bullet and select *Settings* \rightarrow *Connectivity* → *Network selection*

Select a Network

To select automatically

Select Automatic

To select a specific network

- (1) Select *Manual*
- (2) Select a network

Preferred Networks

Insert networks into Preferred Networks list or add them to the end. Select networks from Network List or create new network entries.

- Press \bullet and select *Settings* \rightarrow Connectivity → Preferred networks
- **Edit Preferred Networks**

To insert/add a network from Network List

- 1) When inserting, highlight insert position
- (2) Options \rightarrow Insert or Add \rightarrow Network list
- (3) Select a network and press () (Insert/Add)

To insert/add a new network

- 1) When inserting, highlight insert position
- **(2)** Options \rightarrow Insert of Add \rightarrow New network
- (3) Enter network settings and press (Insert/Add)

To delete a network from Preferred Networks

Highlight network to delete, select *Options* →

 $Delete \rightarrow Yes$

New Network Settings

Country code	Up to 3 digits	
Network code	Up to 3 digits	
Network name	Up to 20 single-byte alphanumerics	
Network type	GSM or 3G	

Calling from Outside Japan

To call an in-country landline or mobile phone
Proceed to Step 5

To enter country code, etc. directly

Press of the seconds to enter +, enter country code and phone number omitting the first 0 (except when calling landlines in Italy) and proceed to Step 5

- **2** Select *Options* → *International dial*
- **3** Select country or *Enter Code* for direct entry
- 4 Select Abroad
- **5** Confirm number and press **5**

Tip

 To change/add International code or country code (◆P.15-2)

Emergency Calls

Some emergency numbers (110 (Police), 119 (Fire), etc.) are available even when certain Call Barring settings are active. See details below.

707SCⅡ Status	Available Numbers
Offline mode (�P.3-4) is active.	None
Call Cost limit exceeded (�P.2-12).	110, 119, 118
707SC II is locked (◆P.13-5).	None
Required PIN not entered (P.13-3).	None
USIM Card cannot be authenticated (�P.13-4).	None
Outgoing Call Barring (�P.16-11) is active.	110, 119, 118

Note

 SoftBank can not guarantee connections in all countries and regions. Handset operations may vary by network, signal, or function settings.

Manner Profile

Minding Mobile Manners

Please take care not to disturb others when using 707SC II.

- Turn 707SC II off in theaters, museums, and other places where silence is the norm.
- Keep 707SC II off aboard airplanes, inside hospitals, or in other places where handset use is prohibited.
- Refrain from using 707SC II in places such as restaurants, hotel lobbies, or elevators.
- Observe announcements or posted instructions regarding handset use aboard trains, etc.
- Refrain from handset use that interrupts the flow of pedestrian or vehicle traffic.

Manner Related Functions

707SC II offers two manner-related profiles.

Manner Profile

Silence 707SC II sounds and activate Vibration for all alerts, tones, and alarms. Use Manner Key to activate or cancel Manner Profile.

Offline Mode

Temporarily suspend 707SC ${\rm II}$ transmissions; other 707SC ${\rm II}$ functions may still be used while Offline Mode is active.

Muting/vibrating 707SC II can be selected respectively for alert tone, ringtone, or alarm in Sound settings other than Manner Profile/Offline Mode.

Manner Profile

In Standby, press # CF for 1+ seconds

Tip

- When Manner Profile is active
 - appears.
- Even when Manner Profile is active, shutter click sounds for Camera.

Changing Profile

707SC II features five Profiles, including Manner Profile.

- In Standby, press (***) for 1+ seconds
- **?** Select a Profile
- 3 Press (Save)

Tip

➡ Profiles

Select a Profile by usage and edit settings as required (♠ P.9-2).

Profile	Description
← Normal	Normal sounds produced by 707SC II
Manner 💮	No sounds produced by 707SC II
ℰ Car	Set Automatic reception of Voice Calls and activation of Speaker Phone for use while driving
Meeting	Ringtone or Key tone preset to Vibration or Mute
🏃 Outdoor	Ringtone or Key tone preset to maximum sound volume

Offline Mode

Default Setting = Off

- Press and select Settings \rightarrow Call settings \rightarrow Offline mode
- **2** Select the setting and press **(Save)**

Tip

 When 707SC II is turned off while Offline mode is active


Offline mode activation confirmation appears the next time 707SC
☐ is turned on. Press
☐ (No) to select Normal Profile.

Entering Text

Text Entry

Enter kanji/hiragana/hangul, single- or double-byte katakana, alphanumerics, or symbols/pictograms/emoticons.

Text Entry Window

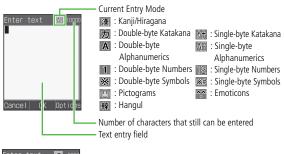



* Suggestions appear only in Kanji/Hiragana mode, when Prediction setting is *On*.

Number Only Text Entry Fields

Text entry windows do not appear for Phonebook Phone fields or Alarm Time fields; enter numbers directly.

Changing Text Entry Mode

Text Entry modes may be limited in some text entry fields or windows.

In a text entry window, press



→ Highlight entry mode and press (●)



Tip

To toggle symbols

In text entry windows, press # 29 to toggle Symbols, Pictograms, and Emoticons.

Key Assignments

Multiple characters are assigned to each key. Press a key repeatedly until the target character appears.

Key	Kanji/Hiragana	Katakana	Alphanumerics	Numbers
1 25	あいうえおぁぃぅぇぉ 1	アイウエオァィゥェォ 1	.@/: ^{~1}]	1
2 abc	かきくけこ2	カキクケコ2	abcABC2	2
∃ def	さしすせそ3	サシスセソ3	defDEF3	3
4ghi	たちつてとっ 4	タチツテトッ 4	ghiGHI4	4
5 jkl	なにぬねの5	ナニヌネノ5	jklJKL5	5
6 mno	はひふへほ6	ハヒフへホ6	mnoMNO6	6
7_{pqrs}^{\sharp}	まみむめも7	マミムメモ7	pgrsPQRS7	7
8 tuv	やゆよゃゅょ8	ヤユヨャュョ8	tuvTUV8	8
9wxyz	らりるれろ9	ラリルレロ9	wxyzWXYZ9	9
() +u	わをんゎ、。 $-\cdot \sim !?$ $\langle Space \rangle 0$	ワヲンヮ 2 、 $-\cdot\sim$!? $\langle Space \rangle$ O	!? 〈Space〉 0	0
★ *** ₩ A/a	Toggle upper/lower-case; add		Toggle upper/lower-case Enter Line Break	Enter Line Break
# 0章	Reverse toggle characters assigned to the same key before finalizing character selection Toggle Pictograms, Double-byte Symbols, Single-byte Symbols, Emoticons			Toggle Pictograms, Double- byte Symbols, Single-byte Symbols, Emoticons

¹ When double-byte, "~" cannot be used ("∼"appears on Display). 2 Single-byte "¬ " (lower case) cannot be entered.

Answer incoming calls without saving text first; disconnect call to return to text entry window. Similarly, close Alarm window to return to text entry window.

Entering Characters

Hiragana/Kanji

Enter hiragana/kanji with or without conversion predictions. When Prediction setting is *On*, Suggestions appear below text entry window.

Activate Kanji/Kana entry mode to enter hiragana



To add or or

Enter a valid character and press ***

To correct a misentry

Use Clear to delete the character then enter the correction

When key is pressed too many times

Press # \$\frac{\pi}{\pi}\$ to return to the previous character assigned to the same key

To enter consecutive characters assigned to the same key

Press to move cursor to the right

To enter unconverted hiragana

Press (Confirm)

2 Convert hiragana

To select a conversion from Suggestions

- 1 Press (to move between Suggestions
- ② Highlight a conversion and press ① (Confirm)



When target conversion does not appear

- 1 Press (Convert)
- ②Use O to change the conversion range
- 3 Press to move to Suggestions
- (Confirm)
- (5) Repeat steps (2) through (4) as required

Tip

- When characters do not convert to target Kanji
 Try entering different readings. When multiple Kanji do not convert together, try to convert them separately.
- To toggle predicted/conversion alternatives

 While predicted alternatives appear, press ☒ (Convert) for
 conversion alternatives. While conversion alternatives
 appear, press ☒ (Predict) for predicted alternatives.
- To set/release prediction entry function (◆P.4-13)
- To convert using *User dictionary* (♦P.4-14)
- To enter date/time
 - 1 Press a key to enter a key to which numbers are assigned
 - ② Press 🛂 (EngNum力力)
 - 3 Highlight a conversion alternative and press (Confirm)

□ Resetting Text Entry History

Previous kanji conversions appear first for predicted/ conversion alternatives. Follow these steps to restore defaults.

- ① Press ① and select Settings \rightarrow Phone settings \rightarrow User dictionary \rightarrow Reset learning
- **2** Enter Phone Password, press \bigcirc (Confirm) \rightarrow *Yes*

Katakana

In Katakana mode, press a key to enter the assigned character



To add "or "

Enter a Katakana to which a voiced or semi-voiced sound symbol should be added and press ***

To correct a misentry

Use Clear to delete character then correct

When key is pressed too many times

Press # to return to the previous character assigned to the same key

To enter consecutive characters assigned to the same key

Press (to move cursor to the right

• To enter Katakana in Kanji/Kana entry mode
For example, to convert "くも" to "クモ" or "クモ".



- 1 In Kanji/Kana entry mode, enter hiragana
- ② Press (Y!) (EngNum力力)
- (3) Highlight katakana conversion alternative and press (Confirm)

Alphanumerics

In Alphanumerics entry mode, press a key to enter the assigned character



To toggle upper and lower case

Enter a character and press *****

To correct a misentry

Use Clear to delete the character and press the correct key

When key is pressed too many times

Press # # to return to a previous character assigned to the same key

To enter consecutive characters assigned to the same key

Press to move cursor to the right

Tip

- - ① In Kanji/Kana entry mode, press key to which alphanumeric is assigned
 - ② Press 🖅 (EngNum力力)
 - (3) Highlight alphanumeric conversion alternative and press(b) (Confirm)

Numbers

In Number entry mode, press number keys



To correct a misentry

Use Clear to delete the entry, then enter correction

Tip

- To enter numbers in Kanji/Kana entry mode
 - ① In Kanji/Kana entry mode, press key to which number is assigned
 - ② Press **Y**! (EngNum力力)
 - (3) Highlight number conversion alternative and press (Confirm)

Symbols, Pictograms & Emoticons

In a text entry window, press # CF to toggle symbols

To toggle double-byte symbols and singlebyte symbols

Press while Suggestions for double-byte symbols and single-byte symbols appear

2 Highlight target character and press



To enter symbols, pictograms, or emoticons successively

Press (Continue)



Tip

 To enter symbols, pictograms, or emoticons in Kanji/ Kana entry mode

Enter hiragana like てん and press \square (Convert), symbols \cdot and \cdots appear among conversion alternatives. Similarly, convert はーと or でんわ to pictograms and わーい or えーん to emoticons.

Line Breaks

Enter a line break the same way in all text entry modes.

In a text entry window, press (* ***



Quoting Saved Text

Using Phonebook Entries

In a text entry window, use *Phonebook* via *Options* to search saved entries for inserting phone numbers or mail addresses into message text.

- In message text, select *Options* → **Phonebook**
- Select an entry and open details
- **?** Highlight an item and press (•) (Select)

SMS Template

In a text entry window, use SMS template via Options to quote saved text in SMS.

Save frequently used words/phrases as SMS templates beforehand (◆P.4-15).

- In message text, select $Options \rightarrow$ SMS template
- Select a template

Using Template


In a text entry window, use *Templates* via *Options* to save ".ne.jp" or "http://www" in Phonebook for one keystroke entry.

- In message text, select $Options \rightarrow$ **Templates**
- Select an item

Hangul

Select Hangul entry mode to enter Hangul characters.

- In a text entry window, press and select *Hangul*
- Press number keys to enter assigned character units that appear; combine several consonants and vowels

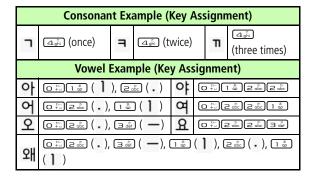

Editing Text



| Highlight character to delete and press Clear

When a space is highlighted

The character before cursor is deleted.

To delete all text on/after cursor

Press Clear for 1+ seconds

To delete all text

Place cursor at the end of text and press Clear for 1+ seconds

9

Copy/Cut, Paste & Undo

Copy/Cut

Select a range of characters to copy/cut. Paste copied/cut characters repeatedly to other locations.

- In a text entry window, select *Options*→ *Copy* or *Cut*
- 2 Use to highlight the first character in the range and press

(Start)
To copy/cut all

Press **Y**! (All)

3 Use to specify range and press (End)

Tip

 To copy text from Phonebook entries or My Phonebook Details

Options → *Copy item* (♠P.5-13, 5-17)

• Copied/cut items

Up to 10 copied/cut items can be saved. Content remains even power is turned off. With 10 items are already saved, oldest item is automatically deleted.

Paste

- Use to move cursor to paste location
- **2** Select *Options* \rightarrow *Paste*
- Select an item to paste and press

 (Select)

 To delete copied/cut items In Step 3, highlight item to delete, press (Delete) and select Yes.

Undo

Undo operations immediately after performing such as Cut, Paste, or Delete. Alternatively, undo converting operations immediately after character conversion; this operation can be performed in Kanji/Kana entry mode only.

In a text entry window, select *Options* $\rightarrow Undo$

Jump

In a text entry window, select *Options* \rightarrow Jump \rightarrow Top or End

Prediction (Japanese)

Select to show/hide Japanese kana conversion alternatives in Suggestions.

Default Setting = On

In a text entry window, select *Options*

→ Prediction On or Prediction Off

🧷 Learning (Japanese)

Default Setting =On

Select to save/discard entered character strings by Suggestions.

In a text entry window, select *Options*

→ Learning On or Learning Off

Font Size

Default Setting = Large

Change font size for SMS, S! Mail, or template text; available sizes vary.

In message text, select *Options* → Font Size

User Dictionary (Japanese)

Save frequently used words/phrases of up to 20 characters; entries appear in Suggestions when key characters are entered.

- Press (\bullet) and select *Settings* \rightarrow Phone settings \rightarrow User dictionary \rightarrow New entry
- Select Word field and enter text

- **?** Select Reading field and enter key characters
- ⚠ Press
 ☒ (Save)

Tip

- To edit User Dictionary entries
 - (1) Press (\bullet) and select *Settings* \rightarrow *Phone settings* \rightarrow *User dictionary* → *Edit entry*
 - (2) Select contents to edit
 - (Save)
- To delete one item
 - (1) Press (\bullet) and select *Settings* \rightarrow *Phone settings* \rightarrow *User dictionary* \rightarrow *Edit entry*
 - (2) Highlight item to delete, select *Options* → *Delete*
- To delete all items
 - (1) Press (\bullet) and select *Settings* \rightarrow *Phone settings* \rightarrow *User dictionary* \rightarrow *Delete all*
 - (2) Enter Phone Password, press (\bullet) (Confirm) $\rightarrow Yes$

Saving to User Dictionary

- In a text entry window, select *Options*→ *Word registration*
- 2 Use to move cursor to the first character, press (Start)

To open User Dictionary window to check saved content, etc.

Press 🛂 (UserDic)

- 3 Use to set the range, press (End)
- 4 Select Reading field and enter reading
- **5** Press **⊠** (Save)

Tip

- When the range contains a line break
 Character string before line break is saved to dictionary.
- To edit User dictionary

Press (UserDic) to select start point for Word registration; perform operations in "User Dictionary (Japanese)" (�P.4-14). Select *Edit entry* and registered entries appear.

SMS Templates

Save frequently used words/phrases of up to 70 characters.

- Press ☑ and select *Templates* → *SMS templates*
- Select Options → Add new
 When no SMS templates have been saved
 Press ☒ (Add new)
- 3 Press (Select) and enter text
- 4 Press

 ☐ (Save)

- To use an SMS template (�P.4-10)
- To edit an SMS template
 - 1) Press \square and select *Templates* \rightarrow *SMS templates*
 - (2) Highlight an item to edit and press () (Edit)
 - 3 Press () (Select) and edit the text
 - 4 Press (Save)
- To delete an SMS template
 - (1) Press \square and select *Templates* \rightarrow *SMS templates*
 - ② Highlight an item to delete, select Options → Delete → Selected → Yes

To delete all SMS templates, in Step ②, select $Delete \rightarrow All$, enter Phone Password, press $\textcircled{\bullet}$ (Confirm) and select Yes. To delete multiple items, select $Delete \rightarrow Multiple$ in Step 2, check items to delete, press $\textcircled{\boxtimes}$ (Delete) $\rightarrow Yes$.



Saving to Phonebook

Phonebook Entry Items

Save phone numbers, mail addresses, and more for up to 1,000 entries in Phonebook; USIM Card Phonebook capacity varies by card. Insert USIM Card into compatible SoftBank handsets to use USIM Card Phonebook entries. Each 707SC II Phonebook entry contains items listed below.

	Description	Availability (Quantity)	
Item		707SCII	USIM Card
Entry Number	a 3-digit number	Yes (000-999) ¹	Yes (000-0XX) ²
Name	Single-/double-byte characters	Yes (Up to 50 characters)	Yes ³
Reading	Single-byte characters	Yes	Yes ³
Phone Icon	Select one of six icons	Yes (Six Icons)	No

	Description	Availability (Quantity)	
Item		707SC II	USIM Card
Phone Number	Saved with area code	Yes (5 of up to 40 digits each)	Yes ^{2 3}
Email	Single-byte alphanumerics	Yes (4 of up to 256 characters each)	Yes ³ (1 address)
Email Icon	Select one of three icons	Yes	No
Category	Select one of twenty categories	Yes	Yes ²
Caller ID	Select incoming call image from Data Folder	Yes	No
Call Notice	Select incoming call ringtone from Data Folder	Yes	No

	Description	Availability (Quantity)	
Item		707SC II	USIM Card
Message Notice	Select incoming S! Mail/SMS ringtone from Data Folder	Yes	No
Blood Type	Select one of four blood types	Yes	No
Birthday	Enter the party's date of birth	Yes	No
Address	Enter up to 20 single- byte characters for postal code and up to 50 for address	Yes	No
Hobby	Up to 100 characters	Yes	No
URL	Up to 100 single-byte alphanumerics	Yes (2 URLs)	No
URL Icon	Select one of three icons	Yes	No
Notes	Up to 100 characters	Yes	No
Secret Mode	Select secret setting	Yes	No

- 1 Use speed dialing (◆ P.5-12) to initiate voice calls to primary number saved in Phonebook Entry Numbers 000 099.
- 2 The number of items that can be saved varies by the type of USIM Card.
- 3 The number of characters that can be saved varies by the type of USIM Card.

Note

Protect important information
 Phonebook entries may be lost/altered if battery is removed or left uncharged for an extended period; accidents/malfunctions may also affect entries.
 Back-up entries and store separately. SoftBank is not liable for damages from lost information.

Adding Entry Items

707SC
☐ assigns lowest available Entry Number; edit as required.



Phonebook Details

Select *Options* \rightarrow *Add to* \rightarrow *Phone* or USIM

Enter additional items as required

*Not available in USIM Card Phonebook

To change Entry number

Highlight Entry number field and enter a number

To save Name

- 1) Select Name field
- (2) Enter a name

To modify Reading Name

- (1) Select Reading Name field
- (2) Enter a reading name (use katakana to organize entries in Phonebook list)

To save Phone number

Highlight Phone number field and enter a number

To set Phone icon

- (1) Select Phone number field
- (2) Select an icon

To save Mail address

- (1) Select Mail address field
- **(2**) Enter an address
- (3) Select an icon

To set Category

- (1) Select Category field
- (2) Select a Category

To set Caller ID for a Voice Call or Video Call*

- (1) Select Caller ID field
- (2) Select *On*
- (3) Open Data Folder to select an image file, etc.

To set Call notice for a Voice or Video Call*

- 1) Select Call notice field
- (2) Select *On*
- **3** Open Data Folder to select a file

To set S! Mail/SMS Notice*

- 1 Select Message notice field
- ② Select *On*
- (3) Select sound

To save Blood type*

- 1 Select Blood type field
- Select blood Type

To save Birthday*

Highlight Birthday field and enter a date

To save Address*

- (1) Select Address field
- **2** Enter a postal code
- (3) Select Address field and enter an address
- 4) Press 🖾 (OK)

To save Hobby*

- 1 Select Hobby field
- **2** Enter text

To save URL*

- (1) Select URL field
- **2** Enter a URL
- 3 Select an icon

To save Memo*

- 1) Select Notes field
- **2** Enter text

To set Secret Mode*

- 1 Select Secret Mode field
- (2) Select On
- **3** Press **△** (Save)

Valid Phone Field Characters

Enter 0-9, #, *, P (Pause), and + (International Code). Press for 1+ seconds to enter P or press for 1+ seconds to enter +.

• Saving an Entered Phone Number

During a call, $Options \rightarrow Add$ to Phonebook

- 1 In Standby, enter a phone number
- (2) Options \rightarrow Add to Phonebook \rightarrow Phone or USIM
- (3) Select *New* or *Update* and select memory
- (4) Select a phone icon
- (5) Perform Steps 2 and 3

• Synchronizing Phonebook with Samsung PC Studio

Secret Mode entries cannot be synchronized or backed-up to a PC even if Secret Mode is active.

The entries with Secret Mode changed from $O\!f\!f$ to $O\!n$, cannot be synchronized and deleted immediately after the Secret Mode settings has been changed and tried synchronization.

For more information about Samsung PC Studio, see the User's guide in the attached CD-ROM.

Saving from Call Log Records

Save numbers from Call Log records to new or existing Phonebook entries.

- Press 🔾
- 2 Use \bigcirc to open a Call Log, highlight a record, select *Options* \rightarrow *Add to Phonebook* \rightarrow *Phone* or *USIM*

3 Select Phonebook entry type

To create a new entry

Select New

To save to an existing entry

- 1) Select *Update*
- ② Open the Phonebook entry (◆P.5-9)
- 4 Select a phone icon
- 5 Enter additional items as required

6 Press ☒ (Save)

Category Settings

Organize Phonebook entries among twenty Categories.

New Category (USIM Card)

- Press and select *Phonebook*
- **2** Select *Options* → *View from USIM*
- **3** Press ⊠ (Search) and select *Category* search
- **4** Select *Options* → *New category*
- **5** Enter a name

Edit Category

Customize Category names; add images/ringtones to appear/sound for incoming calls/messages from members.

- Press and select Phonebook
 To select a USIM Card Category
 After Step 1, select Options → View from USIM
- Press ☑ (Search) and select *Category* search
- 3 Highlight category to change, select Options → Category settings
- 4 Edit Category items

 To change Category name

 Select Category name field and enter a name

To set Category image

Select Category image field then select a file from Data Folder

To set incoming call ringtone

Select Call notice field then select a file from Data Folder

To set incoming S! Mail/SMS notice

Select Message notice field then select a ringtone

To restore Category defaults

Highlight item to restore and press **Y**? (Reset)

5 Press **図** (Save)

Tip

• Incoming Image & Ringtone Priority
Images and ringtones set for individual Phonebook entries
take priority over those set for a Category.

Add Member

- Press and select *Phonebook*To select Category on USIM Card
 After Step 1, select *Options* → *View from USIM*
- Press ☑ (Search) and select Category search
- 3 Select Category to which to add member
- \triangle Select *Options* \rightarrow *Add member*
- 5 Check the member to add and press
 ☑ (Add)

• To delete a member from a Category

Deleting a member from a Category does not affect member's Phonebook entry.

- 1 Perform Steps 1 and 2 in "Add Member"
- 2 Select Category from which to delete member
- ③ Highlight member to delete, select Options → Remove → Yes

Using Phonebook

Calling from Phonebook

Phonebook Search

Press (2)

If the correct search method appears first Proceed to Step 2, Part ②

To change method in active search window Press and proceed to Step 2

2 Press ⊠ (Search)

To search Phonebook list

- 1) Select Phonebook list
- ②Use o navigate Phonebook list

To search by Category

- 1 Select *Category search*
- 2 Select Category

To search by name

- 1 Select *Name search*
- **2** Enter any part of Name

To search by Reading

- **1** Select *Reading search*
- **2** Enter any part of Reading

To search by Entry Number

- 1) Select *Entry No. search*
- **2** Enter Entry Number

To search by Phone Number

- 1 Select Phone No. search
- **2** Enter any part of a phone number

To search by Mail Address

- (1) Select *Email search*
- **2** Enter any part of an mail address

3 Select an entry

To open Entry details

Press (Details/Select)

Tip

 To set Phonebook preference (Phonebook or USIM Card Phonebook)

- ① Press ② and select Settings → Phonebook settings → View phonebook from
- ② Select *Phone memory* or *USIM memory* and press (Save)
- When Secret Mode is set to Hide
 Secret Phonebook entries do not appear. Activate Secret
 Mode to search Secret entries.

Initiating a Call

Select an entry, press (Details) to view Details window



Entry Details

Select a number and initiate a call

To initiate a Voice Call

Press lacktriangle or select $Options \rightarrow Voice \ call$

To initiate a Video Call

Select $Options \rightarrow Video \ call$

To place a call from Phonebook list
Highlight an entry, select Options → Vo.

Highlight an entry, select *Options* → *Voice call* or *Video call*. When entry contains multiple numbers, Default Number is dialled if set; otherwise, first number listed is dialled. If Default Number is *Not assigned*, Call window appears; select a number.

☐ Calling from Simple Search or search result

Reading name corresponding to the Entry Number appears. Highlight a phone number, press \bigcirc or \bigcirc (Select) \rightarrow \bigcirc (Call) to initiate a Voice Call; $Options \rightarrow Video\ call$ for Video Call.

Enter 4-digit number to search and open entry name/phone number; this search for entries contains the entered number at the first/last part of the entry. When *Simple search* is *On* and an entry searched, press to switch search result between Phone No. search and *Simple search*. Highlight a phone number, press or (Select) → (Call) to initiate a Voice Call; select *Options* → *Video call* to call a Video Call.

Calling USIM Card Phonebook Entries

Use Entry Numbers as shortcuts to call numbers saved in the first 100 USIM Card Phonebook entries.

The Proof of the Proof of the

2 Press # 👯

If the correct entry is not highlighted
Use (to highlight it

3 Press **⊠** (Call)

To initiate a Video Call

Press **Y**! (V-Call)

Change Search Method

Default Setting = Phonebook list

Specify search window to appear first when () is pressed in Standby.

- Press \bullet and select *Settings* \rightarrow Phonebook settings \rightarrow Search type
- **>** Select the setting and press (Save)



Tip

Search Method Items

Phonebook list: Press () in Standby, list appears. Other settings: Search window appears.

Speed Dialing

Enter the last two Entry Number digits to call Voice Call Default Number in Phonebook entries 000 - 099.

Enter last two Entry Number digits

? Press () ()

Tip

• When *Simple search* is *On* (♠P.15-7) Enter Entry No. for names and phone numbers. After 5 seconds, search result disappears. When **f** appears, press (to dial.

Note

- Speed Dialing is invalid for an entry if Voice Call Default Number (\$P.5-14) is set to Not assigned.
- While Secret Mode is set to *Hide*, Secret Phonebook entries cannot be dialled.

Phonebook Options

Use the following options in Phonebook List or Entry details.

Item Description	
Add to ¹	Start the process of saving a new entry.
Voice call	Initiate a Voice Call to the highlighted number or Default Number (�P.5-10).
Video call	Initiate a Video Call to the highlighted number or Default Number (�P.5-10).
Create message	Open a new message addressed to the number saved as an entry (�P.17-6).

Item	Description	
Send	Send entry as a vFile; select <i>Via</i> message, to open a new message with entry attached (♠P.17-6), or <i>Via</i> bluetooth, to send entry to another device wirelessly (♠P.12-6).	
Delete	Delete an entry (�P.5-15).	
Save to Data Folder	Create a vFile and save it to <i>Other documents</i> in Data Folder.	
Copy to USIM/ Copy to phone	(◆ P.5-15)	
View from USIM/ View from phone ¹	Toggle Phonebook and USIM Phonebook.	
International dial	Add international code and country code to the number (�P.2-2).	
Hide/Show my ID	Show or hide your number when making calls; Select <i>None</i> to apply Caller ID setting.	
Print via bluetooth	Print highlighted Entry details (name, phone number information) using the printer via Bluetooth [®] connection.	
Memory status ¹	Check memory usage.	
Copy item ²	Copy highlighted entry item.	

Item	Description
Mark default number ²	(◆ P.5-14)

- 1 This item does not appear in Entry details.
- 2 This item does not appear in Phonebook list.

Editing Phonebook Entries

To search, list or Entry details, see "Phonebook Search" (P.5-9).

Activate Secret Mode to edit Secret Phonebook entries.

Edit

- **Open Entry details**
- Press

 (Edit)
- Edit entry items and press (Save)

Default Number

- Default Setting Voice call: First phone number
 - ■Video call: First phone number
 - Message: *Not assigned*

When an entry contains multiple phone numbers/mail addresses, set calling/messaging priorities by assigning to Default Number.

Resetting an item changes it to *Not assigned*.

- **Open Entry details**
- \triangleright Select *Options* \rightarrow *Mark default* number
- Set or reset options

To set

- (1) Select *Voice call, Video call,* or *Message*
- (2) Select a phone number or mail address

To reset

Highlight *Voice call, Video call,* or *Message* and press (Reset)

- 4 Press ☒ (Save)
- Copy to USIM & Copy to Phone
- Highlight entry or open Entry details
- **2** Copy the entry

From Phonebook to USIM Card Phonebook

Options \rightarrow Copy to USIM \rightarrow Selected or All \rightarrow Yes

From USIM Card Phonebook to Phonebook

Options \rightarrow Copy to phone \rightarrow Selected or All

Deleting Entries

Deleting a Single Entry

- | Highlight entry or open Entry details
- 2 Select Options → Delete → Selected → Yes

Deleting Multiple Entries at Once

| Highlight entries

Toggle Phonebook or USIM Card Phonebook

Options → View from Phone or View from USIM

- **2** Select *Options* \rightarrow *Delete* \rightarrow *Multiple*
- 3 Check an entry to delete
- 4 Repeat Step 3 to check all target entries

- 5 Press ☑ (Delete) and proceed to Step 7 when all are not checked
- 6 Enter Phone Password, press
 (Confirm)
- 7 Select Yes

Deleting All Entries at Once

Delete all Phonebook or USIM Card Phonebook entries.

- Highlight entries
 Toggle Phonebook and USIM Card Phonebook
 Options → View from USIM or View from phone
- **2** Select *Options* \rightarrow *Delete* \rightarrow *All*
- 3 Enter Phone Password, press

 () (Confirm) $\rightarrow Yes$

My Phonebook Details

Confirm handset phone number. Add your name, mail address, street address, and other information.

1 Press ● and Press □ ♣ □

To enter or edit other items

- 1 Press (Edit)
- ② Enter/edit items then press ☒ (Save)

⊕ Options

Item	Description	
Send my phonebook details	Send as a vFile; select <i>Via message</i> to create a message with vFile attached (◆P.17-6), or <i>Via bluetooth</i> to send vFile wirelessly (◆P.12-6).	
Delete	Delete entered owner information.	
Save to Data Folder	Create a vFile and save it to <i>Other documents</i> in Data Folder.	
Copy item	Copy highlighted entry item.	
Print via bluetooth	Print My phonebook details (name, phone number information) using printer via Bluetooth [®] connection.	

Video Call

🎜 Before Using Video Call

Exchange voice/video with compatible 3G handsets.

You may choose not to send your own image (P.6-6).

➡ Video Call Precautions

- Calls to incompatible handsets may be disconnected; charges apply.
- It may be difficult to use Speaker Phone (◆P.6-5) with earpiece volume raised; lower volume or use Stereo Earphone Microphone.
- Ambient noise may hamper voice quality; use Stereo Earphone Microphone.
- Using Speaker Phone in public may disturb others; please mind your mobile manners.

🗾 Initiating a Video Call

Call via Phonebook entries/Call Log records or dial directly.

Enter a phone number

2 Select *Options* → *Video call*

3 Press 6 to end the call

Tip

• Engaged Video Call Operations (�P.6-3)

Unavailable for a video call... appears; select Options → Voice call or Create message to contact the recipient, or View contact details to open Phonebook. Select Add to Phonebook to save the receiver's number to Phonebook or USIM Card Phonebook.

🥦 Receiving a Video Call

When 707SCII rings/vibrates, press



Loudspeaker on? appears;

Select Yes or No

Allow own picture to be shown? appears;

Select *Yes* or *No*

Press to end the call

Tip

• To adjust ringtone volume

While 707SC II is ringing, press \blacktriangle or \blacksquare .

- When a Stereo Earphone Microphone is connected
 Press Stereo Earphone Microphone switch for 1+ seconds to
 answer Video Calls. Press for 1+ seconds to end a Video
 Call.
- To disconnect a Video Call without answering it Press \(\overline{\mathbb{Y}} \) (Busy)
- To change or cancel outgoing image

 Set 707SC II to send Substitute Image beforehand

 (◆P.6-6). Alternatively, change to Substitute Image during a call (◆P.6-6).
- Send Your Image or Substitute Image
 After Step 1, Your Image appears. When confirmation appears, select Yes or No to send Your Image or Substitute Image. When Video Call connects Your Image or Substitute Image appears.
- Engaged Video Call Operations (♠P.6-5)

Engaged Video Call Operations

Perform operations from Video Call Menu or *Options*.



- 1 Large Display (Normally, the other party's image)
- 2 Small Display (Normally, your image)
- 3 The other party's name or phone number
- 4 Call duration
- 5 Meaning of the icon at cursor position
- 6 Video Call Menu Icons
- ♠ / ♠: Toggle Speaker Phone Off/On
- : Toggle Incoming Image Size
- ✓ I : Freeze or unfreeze outgoing image

- (Blue)/ (Gray): Toggle Your Image and Substitute Image
- / ☐: Freeze or unfreeze incoming image
- : Flip image
 - During Video Calls, select Video Call Menu or *Options* to adjust settings

To toggle Speaker Phone off/on

Highlight ♠ / ♠ and press ●

To select incoming image size

Highlight 🗗 and press 🔘 to select an item

To freeze or unfreeze outgoing image

Highlight 📕 / 🖹 and press 🔘

To freeze or unfreeze incoming image

Highlight **■** / **⊕** and press **●**

To flip outgoing image

Highlight 🗗 and press 🔘

To cancel Your Image/mic/key tones

- \bigcirc Options \rightarrow Mute
- ② Check item(s) to cancel and press (Save)
 When Camera (Your Image) is canceled, Substitute
 Image is sent.

To adjust outgoing image appearance/quality

- ① Options → Display options → Effects or Quality
- (2) Highlight an item and press (

To adjust outgoing image brightness

- \bigcirc Options \rightarrow Display options \rightarrow Brightness
- ② Use 🕥 to adjust brightness

Tip

- To adjust earpiece volume Press during a Video Call.
- To enlarge or reduce outgoing image Press ♠ or ▼ during a Video Call.
- When outgoing image is canceled 707SC II send caller Substitute Image.

Engaged Video Call Options

Item	Description
Normal/Speaker on	Toggle Speaker Phone off/on (♠P.6-4).
Mute	Cancel sending outgoing image/mic/ key tones (�P.6-4).
Display options	Adjust outgoing image appearance/ quality (�P.6-4).
Settings	Select Video Call settings (�P.6-6).
Phonebook	Open Phonebook Search window.
Add to Phonebook	Save number to Phonebook or USIM Card Phonebook (�P.5-6).
Send DTMF	Send push tones.
Memo	Create and save text memos (♠P.14-10).
Details	Open Phonebook Entry details.
Switch to headset/ Switch to phone	Appears when Bluetooth [®] - compatible headset is in use. Select headset or phone (handset).

Video Call Settings

Sending Your Image

Default Setting = Always ask

When *Always ask* is set, Choose between Your Image or Substitute Image as outgoing image each time a Video Call is received.

- Press and select Settings → Call settings → Video call → Show my picture
- 2 Select the setting and press (Save)

Selecting a Substitute Image

Default Setting Camera Off

Select an image to use as the outgoing image.

- Press and select Settings → Call settings → Video call → Select still picture
- **2** Press (Change)
- 3 Open Data Folder, select a file and press (Save)

Tip

- To restore Substitute Image to its default
 - 1 Perform Steps 1 and 2
 - ② Select any image file in Data Folder → Options → Reset

Retry Settings

Default Setting ■ Always ask

- Press \bullet and select Settings \rightarrow Call settings \rightarrow Video call \rightarrow Retry with
- 2 Select the setting and press (Save)

Tip

· Retry with Items

Always ask: Select an action from *Options*. **Voice call**: Redial number as a Voice Call.

Messages: Create a message.

None: Return to Standby after a failed Video Call. Automatic retry option changes by setting.

Voice Mute

Default Setting = Off

Set *Voice mute* to *On* to answer Video Calls with no sound sending to caller.

- Press and select Settings → Call settings → Video call → Voice mute
- **2** Select On and press \bigcirc (Save)

Tip

- To send sound
 - (1) During a Video Call, select $Options \rightarrow Mute$
 - (2) Uncheck Voice
 - ③ Press ☑ (Save)

Mobile Camera

Before Using Mobile Camera


Capture still images in JPEG or video in 3GP format.

Mobile Camera Precautions


- Use a dry soft cloth to remove debris from lens cover.
- Avoid camera shake; hold 707SC II steady or place it on a stable surface and use Timer.
- Mobile Camera employs high precision technology, however, some pixels may seem brighter or darker than others.
- Leaving 707SC II in a hot place for an extended period before image capture/save may affect image quality.
- Exposing lens to direct sunlight may affect color filter.


Rotating Camera

707SC II features Rotating Camera. To capture images or record video, rotate lens inward or outward; press (Side Keys) to flip image vertically/horizontally to suit lens orientation, etc.

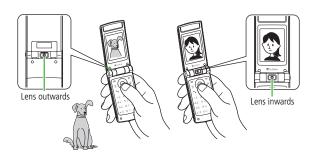

Using Display as Viewfinder

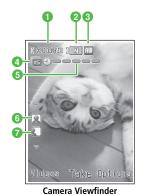

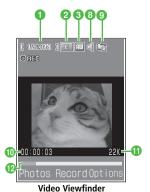

← Size

Still Image: [1500x1200], [1230x950], [640x430],
[320x240], [240x320], [240x132]
Video : [320x240], [175x144], [123x95]

Quality

SF: Superfine F: Fine N: Normal L: Low

E: Economy

White Balance

☐ : Auto ☐ : Fine ☐ : Cloudy ☐ : Fluorescent

4 Mode

No display : Single shot

(15 shots)

: Mosaic shot (2 x 2) : Mosaic shot (3 x 3)

Timer (When set)

6 Image Orientation (Vertical)

! Upright Image (Lens Outward)

T: Upright Image (Lens Inward)

7 Image Orientation (Horizontal)

Normal image

Mirror image

8 Audio Recording

☑ : On 📓 : Off

Recording Time

: Limit for S! Mail : 10 seconds : 30 seconds : Normal recording

- **(1)** Elapsed Recording Time
- 11 Total Data Size/Recording Time
- Progress Bar

Capturing a Still Image

Camera Mode

Select *Single shot* to capture single images, *Multishot* or *Mosaic shot* to capture multiple images. Save images in Pictures.

Mode	Description	Image size
		1600 x 1200
	Capture single images, select	1280 x 960
Single shot	size for purpose; attach images	640 x 480
Siligle Silot	to S! Mail, save as Wallpaper,	320 x 240
	etc.	240 x 320
		240 x 192
Multi-shot	Press shutter once to capture 6, 9 or 15 sequential images.	320 x 240

Mode	Description	Image size
Mosaic shot	Capture multiple images, one at a time; $707SC II$ automatically combines single images (4 for 2×2 or 9 for 3×3) into one composite image.	240 x 192

Tip

• When using Single shot mode with a frame Image size is automatically adjusted to 240 x 192.

Capturing Still Images

Single Shot

In Video mode

Press (Photos) to change to Camera mode

2 Select Options → Shooting mode → Single shot → Take & save

To save captured images without review Select *Automatic save*

- 3 Select *Options* and perform other actions as required (⊕P.7-6)
- 4 Preview image on Display

Zoom image in/out (invalid for 1600 x 1200)

Use O or to zoom out or in

Adjust brightness

Use or to lighten or darken image

5 Press (Take)

To cancel the image and capture another Press ☒ (Back)

Tip

- To activate/adjust Timer in image preview

 Press to toggle 3 seconds, 5 seconds, 10 seconds, and Off.
- To adjust viewfinder in image preview

 Press # # to toggle Full screen, Actual ratio, Full screen without indicator, and Full screen with grid.
- To send an image via S! Mail or Bluetooth®
 - 1 After Step 5, press (Send) and select send medium
 - **②** Send image (**③** P.12-6, 17-6)

☐ Preview Options

Available options may vary by mode and other settings.

Item	Description	
Shooting mode	Select Shooting mode and save setting for <i>Single shot</i> , or image count for <i>Multi-shot</i> or <i>Mosaic shot</i> (�P.7-5, 7-9).	
Effects	Select <i>Black & White, Sepia</i> or <i>Negative</i> effects filters. When an effect is active, select <i>None</i> to cancel.	
Frames	Add a frame to image in Single shot mode.	
Timer	Activate self-timer (◆P.7-5).	
Go to photos	Open Pictures folder.	
Camera settings Select image size, image quality, et (�P.7-13).		
Camera shortcuts	Open a function shortcuts graphic (◆P.7-10).	

☐ Review Options

Item	Description	
Delete	Delete the last image captured.	
Set as	Set image for Wallpaper, Phonebook entries, or Substitute Image.	
Edit photo	Edit an image in Pictures folder (◆ P.7-15).	
Dynamic Effect	Create Flash [®] images using Still images (�P.7-19).	
Rename	Change file name.	
mPostcard	Create a mobile postcard (P.7-7).	
Go to photos	Open Pictures folder.	
Lock/Unlock	Set/release file protection.	
Details	Confirm file size or format.	
	_	

Mobile Postcard

Use *Single shot*, *Multi-shot*, or *Mosaic shot* images. This function renders one of two images as line art, merging it with the other to create a stamped photograph.

- **Capture an image (⊕P.7-5, 7-8)**
- **2** Select *Options* \rightarrow *mPostcard*
- 3 Press (Add)
- 4 Add a second image

To select a still image from Data Folder

- 1 Select Open
- (2) Open Data Folder and select an image file

To capture an image

- 1 Select Take photo
- 2 Press (Take)
- (3) Press () (Add)

5 Press (Merge) and check result

To change image

- 1 Press Clear
- ② Highlight image to change, select *Options* → Change image
- Repeat Steps 4 and 5

To swap image positions

- 1 Press Clear
- **②** Options → Swap image
- 3 Perform Step 5

6 To edit line art, press 🔀 (Edit)

To change line art position

- \bigcirc Options \rightarrow Move
- ②Use Oto move image and press (Done)

To change line art size

- $\textcircled{1} Options \rightarrow Size$
- ②Use ① to adjust image and press 🖾 (Done)

To rotate line art

- \bigcirc Options \rightarrow Rotate
- ②Use to rotate image and press 🖾 (Done)

To change line art color

- ① Options → Change colour
- ②Use O to select color and press (Done)

To adjust line art shadow

- ① Options → Shadow on or Shadow off
- 2 Press (Done)
- 7 Press (Save) and enter a file name
 - To save and send image
 - 1 Press (S & S)
 - (2) Select medium and send (4) P.12-6, 17-6)

Multi Shot

Press (\$\text{\$\tilde{\pi}}\$)

In Video mode

Press (Photos) to change Camera mode

- 2 Select Options → Shooting mode → Multi-shot and select the number of images to capture
- 3 Select *Options* and perform other actions as required (⊕P.7-6)
- 4 Preview image on Display

Zoom in/out

Use \bigcirc or \bigcirc to enlarge or reduce image

Adjust brightness

Use or to lighten or darken image

5 Press (Take)

View captured still image(s)

To view still images individually

(1) Highlight the image and press () (View)

(2) Press Clear

To retake a still image

Press (Back)

Mosaic Shot

Press 🖫

In Video mode

Press (Photos) to change Camera mode

- \triangleright Select *Options* \rightarrow *Shooting mode* \rightarrow Mosaic shot to select the number of images to capture
- Select *Options* and perform other actions as required (
 P.7-6)

Preview image on Display

Zoom in/out

Use () or () to zoom in or out

Adjust brightness

Use (or () to brighten or darken image

- **5** Press () (Take) for each image
- View captured still images



Mosaic Mode (2 x 2)

To retake an image

Press (Back)

☐ Shortcut Key Operations

Press the assigned key to change item settings. Available shortcuts vary by mode or setting status.

Key	Item	Description
1 💩	Size	1600 x 1200, 1280 x 960, 640 x 480, 320 x 240, 240 x 320, 240 x 192
2 abc	Quality	Superfine, Fine, Normal, Low, Economy
3 def	Shooting mode	Single shot, Multi-shot (6, 9, 15 shots), Mosaic shot (2 x 2, 3 x 3)
4 ghi	White balance Auto, Fine, Cloudy, Incandescent, Fluorescent	
5 jkl	Timer	3 seconds, 5 seconds, 10 seconds
6 mno	Frames	Select from 9 types
7_{pqrs}^{\sharp}	Effects	Black & White, Sepia, Negative
O +u	Photo album	-
# c章	Screen mode	Toggle Full screen, Actual ratio, Full screen without indicator, Full screen with grid
M	Mode switch	-
A	Vertical inverse	-

Key	Item	Description
	Horizontal	
▼	inverse	-
	Zoom	-
0	Brightness	-

Capturing Video

Video Mode

Capture clips to attach to mail or save as mementos.

Alternatively, capture clips without sound. Files are saved in 3GP format to Videos folder in Data Folder.

Recording Video

Press 🖫

In Camera mode

Press (Videos) to open Video mode

- 2 Select *Options* and perform other actions as required (⊕P.7-11)
- 3 Preview image on Display

Zoom in/out

Use O or to enlarge or reduce image

Adjust brightness

Use or to lighten or darken image

- 4 Press (Record)
- **5** Press (Save) and end

After recording time elapses

Recording ends and clip is saved automatically.

6 Press (Play) to view clip

To continue recording

Press (Back)

Tip

• To activate/adjust Timer

In image preview, press 5 to toggle 3 seconds, 5 seconds, 10 seconds, Off.

Preview Options

Item	Description
	Select Black & White, Sepia, or
Effects	Negative effects filters. When an effect
	is active, select <i>None</i> to cancel.
Timer	Activate self-timer (♠P.7-11).
Go to videos	Open Videos folder.
Video cottings	Select image size, image quality, etc.
Video settings	(◆ P.7-14).
Camcorder	Open a function shortcuts graphic
shortcuts	(◆ P.7-12).

□ Review Options

Item	Description	
Edit	Edit Video files in Data Folder (P.7-17).	
Resolution	Select video display size while playing or paused.	
Send	Send file via S! Mail (♠P.17-6) or Bluetooth [®] (♠P.12-6).	
Set as	Set captured videos as Voice ringtone or Video ringtone.	
Delete	Delete the last video captured.	
Rename	Change file name.	
Go to videos	Open Videos folder.	
Lock/Unlock	Set/release file protection.	
Details	Confirm file size or format.	

➡ Shortcut Key Operations

Change settings by pressing key assigned to each item.

Key	ltem	Description
1 \$	Size	320 x 240, 176 x 144, 128 x 96
2 abc	Quality	Fine, Normal, Low, Economy

Key	Item	Description
3 def	Shooting time	Limit for S! Mail, 10 seconds, 30 seconds, Normal recording
4 ghi	White balance	Auto, Fine, Cloudy, Incandescent, Fluorescent
5 jki	Timer	3 seconds, 5 seconds, 10 seconds
€ wuo	Audio recording	On, Off
7 _{pqrs}	Effects	Black & White, Sepia, Negative
O +u	Record album	-
Ø	Mode switch	-
A	Vertical inverse	-
₩	Horizontal inverse	-
٥	Zoom	-
()	Brightness	-

Mobile Camera Settings

Adjust image size, quality, save location, etc.

Camera Settings

- Default Setting = Size: 240 x 320 = Quality: Normal
 - Viewfinder: Full screen
 - Shutter sound: Shutter 1
 - Multi-shot speed: High
 - Single shot mode: Take & save
 - White balance: Auto
 - Default name: Photo

Press 🚇

In Video mode

Press (Photos) to change to Camera mode

> Select *Options* → *Camera settings*

? Select an item and set

To set image size

- (1) Select *Size*
- (2) Select the setting and press () (Save)

To set image quality

- (1) Select *Quality*
- ② Select the setting and press (●) (Save)

To set Viewfinder

- **1**) Select *Viewfinder*
- ② Select the setting and press (●) (Save)

To set the shutter sound

- (1) Select *Shutter sound*
- ② Select the setting and press (●) (Save)

To set sequential shot speed

- (1) Select *Multi-shot speed*
- ② Select the setting and press (●) (Save)

To set the Single shot mode

- 1) Select *Single shot mode*
- ② Select the setting and press (●) (Save)

To set white balance

- (1) Select *White balance*
- (2) Select the setting and press () (Save)

To set file name

- (1) Select *Default name*
- **2**) Enter file name

Video Settings

- Default Setting Recording time: Limit for S! Mail
 - Size: 176 x 144
 - Quality: EconomyAudio recording: On
 - Default name: Video

Press 🚇

In Camera mode

Press (Videos) to change to Video mode

\triangleright Select *Options* \rightarrow *Video settings*

? Select an item and adjust settings

To set duration

- (1) Select *Recording time*
- (2) Select the setting and press () (Save)

To set size

- (1) Select *Size*
- (2) Select the setting and press () (Save)

To set image quality

- (1) Select *Quality*
- ② Select the setting and press (●) (Save)

To set voice recording

- (1) Select *Audio recording*
- ② Select the setting and press (●) (Save)

To set file name

- (1) Select *Default name*
- (2) Enter file name

Tip

- Video recording time
 For Normal recording, record up to one hour of video.
- When *Recording time* is set to *Limit for S! Mail* Size 320 x 240 is not selectable and Quality is *Economy*.

Viewing Images

View images/video clips saved in Data Folder.

Viewing Still Images

Press 🖫

In Video mode

Press (Photos) to change Camera mode

- **\triangleright** Select *Options* \rightarrow *Go to photos*
- 3 Highlight a file and press (View)

Viewing Videos

Press 🖺

In Camera mode

Press (Videos) to change to Video mode

- **2** Select *Options* \rightarrow *Go to videos*
- Highlight and select a file and press (Play)

🞜 Editing Still Images

Edit image files saved in Data Folder.

- Press , select *Data folder* and select an image to edit
- P Highlight a file and press (View)
- 3 Press (Edit)

4 Edit using *Options*

To change the size of an image

- 1 Select *Resize*
- 2 Select the setting
- (3) Enter Width or Height (If Customise is selected)
- 4 Press (Done)

To add effects to an image

- 1) Select *Effects*
- 2 Select the setting
- 3 Press (Done)

To add blur or correct red-eye

- ① Select Partial effects → Partial blur or Redeye repair
- (2) Options and select the suitable operation
- (3) Press (Done)

To adjust an image

- (1) Select $Adjust \rightarrow Brightness/Contrast/Colour$
- **2** Adjust the image
- ③ Press 🖾 (Done)

To add a frame

- (1) Select *Frames*
- 2 Use to select a frame
- 3 Press 🖾 (Done)

To add clip art to an image

- 1 Select *Cliparts*
- 2) Select a piece of clip art to add to an image
- ③ *Options* → Size and use \bigcirc to adjust clip art size
- (4) $Options \rightarrow Rotate$ and use () to turn clip art
- **(5)** Options → Move and use \bigcirc to move clip art
- ⑥ Press 🖾 (Done)

To add text to image (320 x 240 or above)

- 1) Select *Insert text*
- 2 Enter text
- ③ *Options* → *Size* and use \bigcirc to adjust text size
- **4** *Options* → *Rotate* and use \bigcirc to turn text
- **(5)** Options → Font size → Large/Normal/Small
- **(6)** Options → Colour and use **(2)** to adjust text color

7 Press 🖾 (Done)

To rotate image

- (1) Select *Rotate*
- ② Select $90^{\circ} R$ or $90^{\circ} L$
- ③ Press ☑ (Done)

To flip image

- 1 Select *Flip*
- 2 Select *Vertically* or *Horizontally*
- ③ Press ☑ (Done)

To crop image

- 1 Select *Crop*
- ② Options → Size and use \bigcirc to adjust trimming size
- ③ *Options* → *Shape* and use to select trimming shape
- **(4)** Options → Move and use \bigcirc to adjust trimming position
- \bigcirc Options \rightarrow Crop
- ⑥ Press 🖾 (Done)

- **5** Press (Save)
- **6** Enter a name for the image

🎜 Editing Video

Edit Video files in Data Folder.

- Press ●, and select *Data Folder* → *Videos*
- **2** Highlight a file, select *Options* \rightarrow *Edit*
- 3 Edit using Options

To cut video

- (1) Select Cut
- 2 Press (Play)
- ③ Press 🖾 (Start) at the start point
- 4 Press (End) at the End point
- (5) To cancel and retry, press (Reset) and repeat (2) to (4)
- (6) Press ☒ (Done)

To merge multiple videos

- 1) Select Merge
- 2 Check files to merge (Up to ten files)
- 3 Repeat 2 to check all target files
- 4 Press (Done)
- **5** Press (Merge)

To replace sound from other video/sound

- ① Select *Replace sound* → *From other video* or *From other sound*
- 2 Press (Open)
- ③ Select a file and press ☑ (Done)

4 Press (Save)

5 Enter a file name

Tip

• To confirm video before editing Press (Preview)

• To add files to merge videos

- ① After ⑤ in Step 3 in "To merge multiple videos," select **Options** → Add**
- ② Perform ② to ⑤ in Step 3 in "To merge multiple videos"

• To delete the file order for merging

- ① After ⑤ in Step 3 in "To merge multiple videos," use ① to highlight the file to delete
- (2) Options \rightarrow Delete \rightarrow Yes

. To change the file order for merging

- ① After ⑤ in Step 3 in "To merge multiple videos," use to highlight the file to move
- **2** Options → Change order
- ③ Use to highlight a personal folder or a file, highlight the file and press ●

Create Flash®

Create Flash[®] images using still images saved in Pictures folder, already created Flash[®] images saved in Other documents folder, or still images previewed immediately after shooting; newly created Flash[®] images are saved to Other documents folder in Data Folder.

- Press \bullet and Camera \rightarrow Dynamic effect list
- Select files
- **3** Perform creation operations

To add frame to image

- 1 Select [(Frame)
- 2 Select frame

To add icon to image

- 1 Select 🔞 (Icon)
- (2) Select icon

- ③ *Options* → *Size*, use \bigcirc to adjust size and press \boxtimes (Done)
- **4** Options \rightarrow Rotate and use \bigcirc to adjust angle
- ⑤ Use ② to adjust position and ☑ (Done)
- **6** Repeat **1** to **5** to add more icons

To add text to image

- 1 Select 🎉 (Text)
- 2 Enter text
- ③ Options → Font size and adjust size and press☑ (Done)
- ④ Options → Font color and use \bigcirc to adjust color and press \boxtimes (Done)
- ⑤ Use ② to adjust the position and ☑ (Done)
- ⑦ To add more text, select (Text), press⑥ (Insert) and repeat ② to ⑦

To add watch on image

- 1 Select (Watch)
- **(2)** Select the watch
- ③ Press 🖾 (Done)

To reset image during editing

- 1 Select 5 (Reset)
- Select Yes
- **4** Press **図** (Save)

5 Enter an image name

Tip

- To delete added frame/watch
 - 1 After Step 2, select (Frame) or (Watch)
 - 2 Press (Delete)
- To delete added icon(s)/text
 - 1 After Step 2, select (Icon) or (Text)
 - ② Use to highlight more icons/text to delete
 - 3 Press (Delete)
 - 4 Press (Done)
- Available icon/text to add

Up to 5 icons/texts can be added.

- To create Flash® images using Data Folder images
 - Highlight image saved in Data Folder and select *Options* → *Dynamic Effect*
 - (2) Perform Steps 1 to 3 (P.7-19) in "Create Flash "

Note

Created Flash[®] images cannot be sent as message.

Attaching Images

Attach captured image or recorded video to S! Mail.

After capturing, press lacktriangle (Send) ightarrow

As message

To send video

In image review, select $Options \rightarrow Send \rightarrow As$ message

Enter an address, subject, text, etc., and send

Tip

• To send a still image or video via Bluetooth® Select *Via bluetooth* in Step 1 (�P.12-6).

Display Settings

Standby Display Settings

Wallpaper

Default Setting Pictures

Set an image, animation, Slide Show or mPet world image to appear in Standby.

- Press and select Settings →
 Display settings → Wallpaper
- **2** Perform operations to set

To change settings

Select *Pictures, Slide show, mPet world image,* or *None*

To change the image

- ① Highlight *Pictures* and press ☑ (Edit)
- (2) Select a folder then a file
- 3 Press (Set)

To set/edit the image of Slide Show

- ① Select *Slide show* and press ☑ (Edit)
- ② Perform Steps 2 to 4 in "Slide Show" (�P.8-2) or perform Steps 2 and 3 in "Editing Slide Show" (�P.8-3)
- 3 Press (Save)

Tip

After setting mPet

mPet operations are enabled (�P.24-5). Press to show Standby as usual; various operations can be performed.

Note

 If no pet is selected in mPet, mPet world image cannot be set as Wallpaper.

Slide Show

Press \bullet and select $Tools \rightarrow Slide$ show 2 Press (Add)

3 Select a folder, check an image and press ☑ (Done)

To see preview

1) Press (Preview) and select *Yes* (cropped image) or *No* (original image)

2 Press Clear to close the preview

To set effect

① Use ② to highlight Effect field

② Use 💓 to toggle setting

To change the slide interval

① Use ② to highlight Duration field

②Use to highlight Effect field

4 Press (Set) and select *Yes* (crop sides) or *No* (show full image)

Tip

• To adjust slide size

For a larger image, select *Yes* in Step 4. For the original image, select *No*.

Editing Slide Show

Press ● and select *Tools* → *Slide*

2 Edit Slide image

To edit still images

 \bigcirc Options \rightarrow Replace

② Check a still image to set and press ☑ (Done)

To change image order

1 Highlight images to change and select *Options*

→ Change Order

② Use ③ to change order and press ⑤ (Save)

To delete a still image

Highlight image to delete, select $Options \rightarrow Delete \rightarrow Yes$

To add a still image

- (1) Highlight an empty slide and press **Y**? (Add)
- (2) Check a still image to add and press (Done)
- **3** Press (Set) and select *Yes* or *No*

Tip

 To adjust slide size Select Yes in Step 3 to enlarge the image.

Clock Display

Default Setting = Off

Set Digital clock, Dual clock or Calendar to appear in Standby. Alternatively, hide clock in Standby.

Press \bullet and select *Settings* \rightarrow Display settings \rightarrow Clock display

Select settings

Digital clock

- (1) Select *Digital clock*
- 2) Press (Edit) and use (to select clock type
- (3) Press ()

Dual clock

- (1) Select *Dual clock*
- (2) Press (Edit)
- (3) Perform Step 3 in "Changing Home Time Zone" (P.1-20)

To display calendar

Select Calendar

To hide clock

Select Off

? Press (●) (Save)

Tip

When Dual clock is set

Two clocks appear in Standby. Top time is that of the zone selected in "Changing Home Time Zone" (♠P.1-20) and bottom time is that of the zone set in Dual clock (P.8-4).

Operator Name

Default Setting ■Off

In Standby, show or hide operator name.

- Press \bullet and select *Settings* \rightarrow Display settings \rightarrow Operator name
- **>** Select the setting and press (Save)

🧷 Menu Display

Menu Style

Default Setting Black

Change menu appearance.

- Press \bullet and select *Settings* \rightarrow Display settings → Main menu style
- Perform operations to set

To set Bicycle

- (1) Select *Bicycle*
- ② Use () to change the type
- (3) Press (2) and Use (5) to change seasons

To set Amoeba or Slider

- (1) Select *Amoeba* or *Slider*
- 2) Use to change the type

To set Black

Proceed to Step 4

- 3 Press
- **4** Press **⋈** (Save)

Popup Menu

Default Setting = Off

When active, sub menus appear in a popup window when a menu item is highlighted.

- Press and select Settings →
 Display settings → Popup menu
- 2 Select the setting and press (Save)

Tip

 When an item with no sub menu is highlighted Nothing appears. Popup menus do not appear in Alarms.

List Font Size

Default Setting = Large

Set main menu item font size.

- Press and select Settings \rightarrow Display settings \rightarrow List font size
- **2** Select the setting and press **(Save)**

Zoom List

Default Setting = Off

When active, highlighted menu items appear larger.

- Press lacktriangle and select $Settings \rightarrow$ Display settings → Zoom list
- **>** Select the setting and press (Save)

Tip

Effective Range

Zoom list applies only to items in sub-sub menus or lower. For example, select *Settings* \rightarrow *Call settings* \rightarrow *Voice call* → Diverts. Voice call items appear zoomed.

Backlight Brightness & Duration

- **Adjusting Display Brightness**
 - Press \bullet and select *Settings* \rightarrow Display settings \rightarrow Brightness
- Use to adjust brightness and press (•) (Save)
- **Backlight Duration**

Set backlight time. Display becomes dimmer when time set in *On* elapses and turns off when time set in *Dim* elapses.

- Default Setting On: 15 seconds Dim: 5 seconds
- Press (\bullet) and select *Settings* \rightarrow Display settings \rightarrow Backlight time
- Select an item and set it

To set illumination time

- 1 Select On field
- 2 Select time and press

To set panel off time

- 1 Select Dim field
- 2 Select time and press
- 3 Press ☒ (Save)
- Sub LCD Light

Default Setting Power saving mode

- Press and select Settings → Display settings → Sub LCD light
- **2** Select the setting and press **(Save)**

Tip

• Sub LCD light settings

 ${\it On}$: Closing 707SC II illuminates Sub LCD; Clock appears for 3 seconds only; Sub Display indicators remain on.

Power saving mode: Closing 707SC II illuminates Sub LCD for 3 seconds.

Off: Sub LCD remains off.

Opening 707SC II automatically turns Sub LCD off.

🎜 Dialing Display

Default Setting Font type: Normal

Appears when dialing in Standby. When character type is set to Normal or Serif, select font size, color and background color.

Press ● and select Settings →

Display settings → Dialling display

Select an item and set it

To set font type

- (1) Select *Font type*
- ②Use to switch font type

To set the font size

- (1) Select *Font size*
- ②Use o to select the size

To set font color

- (1) Select *Font colour*
- ②Use () to select the setting
- 3 Use (to move cursor to Color selection field and use () to select a color (For *Monochrome* only)

To set background color

- (1) Select *Background colour*
- ② Use () to select the color

Greeting Messages

- - ■Sub LCD: No entry

Change power on message for Display.

- Press \bullet and select *Settings* \rightarrow Display settings \rightarrow Greeting message → Main LCD or Sub LCD
- Edit power on message text

Display Language

Default Setting ■日本語 (Japanese)

Set 707SC II user interface to appear in English, Japanese, or Korean.

- Press and select 設定 → 一般設定 → Language or 言語選択
- **2** Select *English* and press (保存/ Save/저장)

Sound Settings

Changing Profile Settings

Change 707SC ${\rm I\hspace{-.1em}I}$ incoming transmission response by profile.

In Car Profile, select Call answer mode.

- In Standby, press 🛈 for 1+ seconds
- Pighlight a profile and press (Edit)

To set Ringtone volume

- ① Select *Ringtone volume* and select item to set
- 2) Use to adjust volume
- ③ Press 🖾 (Play) to confirm volume and press
- 4 Press (Save)

To set Voice/Video Call ringtone

- (1) Select *Ringtone* and *Voice call* or *Video call*
- (2) Select the save location for files

- ③ Highlight a melody, select *Options* → *Play*
- 4 Press Y! (Select)
- ⑤ Press ☒ (Save)

To set S! Mail/SMS ringtone

- 1) Select *Ringtone* and *Messages*
- 2 Select setting
- ③ Press 🖾 (Play) to confirm ringtone and press
- 4 Press (Save)

To set vibration

- 1 Select *Vibration* and select items
- 2 Select setting and press (Save)

To set S! Mail/SMS ring duration

- 1) Select *Message ringtone duration*
- 2 Enter duration and press

To set sound effect or key tone volume

- 1 Select *Key tone volume*
- ② Use 💽 to adjust volume and press 🔘 (Save)

To set Phone sounds

- (1) Select *Phone sounds*
- (2) Check items to set and press (Save)

To set key tone

- (1) Select *Key tones*
- ② Select setting and press (Save)

To set Car Profile answering method

- (1) Select *Call answer mode*
- ② Select setting and press (Save)

Tip

- Ringtone volume
 - Select
 for step-up ringer.
- Acoustic shock

Reduces ringer volume to Level 1 for the first two seconds.

• Car Profile Call answer mode

If $Any\ key$ is set, press any key except \boxtimes , Υ , or Side Key $\$ or $\$

• To set Car Profile auto answer time

After ② in "To set Car Profile answering method" in Step 2, select *Automatic* and press 🖾 (Edit); edit answer time and press ⑥.

- To Voice recorder recording as ringtone
 After (2) in "To set ringtone" in Step 2, select amr file.
- To adjust the volume while 707SC II rings Press Side Key or while 707SC II rings.
- To turn ringer and vibration off
 Mute *Ringtone volume* and set *Vibration Off*; mute indicator (﴿) appears.

• To change ringtone title for S! Mail/SMS

- ① After ② in "To set ringtone for S! Mail/SMS" in Step 2, highlight *Data Folder* and press ∑? (Change)
- (2) Select location to save the file
- 3 Highlight the file, select $Options \rightarrow Play$
- (4) Press Y? (Select)
- ⑤ Press ☑ (Save)
- To adjust key tone volume

In Standby, press Side Key ▲ or ▼.

☐ Sound settings

Change Normal Profile sound settings here.

➡ Profile settings

Available items vary by Profile. Defaults are as listed below.

Item	Profile	Normal	Manner	Car	Meeting	Outdoor
Ringtone v	Ringtone volume					
Voice	call	Level 4	N/A	Level 4	Off	Level 5
Video	call	Level 4	N/A	Level 4	Off	Level 5
Mess	ages	Level 4	N/A	Level 4	Off	Level 5
Ringtone	Ringtone					
Voice	call	03 acapella.mmf	N/A	03 acapella.mmf	03 acapella.mmf	03 acapella.mmf
Video	call	Techno Dance.mp4	N/A	Techno Dance.mp4	Techno Dance.mp4	Techno Dance.mp4
Mess	ages	Pure	N/A	Pure	Pure	Pure
Vibration	Vibration					
Voice	call	On	On	On	On	On
Video	call	On	On	On	On	On
Mess	ages	On	On	On	On	On

Item Profile	Normal	Manner	Car	Meeting	Outdoor
Message ringtone duration	5 Seconds	N/A	5 Seconds	5 Seconds	5 Seconds
Key tone volume	Level 2	N/A	Level 4	Off	Level 5
Phone sounds	Several tones On	Alerts on call	Several tones On	Alerts on call	Several tones On
Key tones	Xylophone	N/A	Xylophone	Xylophone	Xylophone
Call answer mode	N/A	N/A	Normal	N/A	N/A
Answer machine	N/A	On	N/A	N/A	N/A

➡ Phone Sounds

Available items vary by Profile. Volume Level set in Key Tone Volume applies to all Phone Sounds.


Item	Description	
All	Check/uncheck all items.	
Popup box alerts	Sounds for confirmations/warnings.	
Minute minder	Sounds about once a minute during calls.	
Call connect tone	Sounds when calls connect before called phone rings.	
Call end tone	Sounds when a call ends.	
Power on	Sounds when power turns on.	
Open/close folder	Sounds when 707SC II is opened/closed.	
Alerts on call	Sounds for alarms/incoming transmissions.	

Media Player

Before Using Media Player

Play Data Folder sound/video files or stream online media.

- From Music or Video menu, select Download music or Download videos, to download files via Yahoo! Keitai.
- Use Stereo Earphone Microphone. Insert as shown below. Unplug Stereo Earphone Microphone to use Speaker.

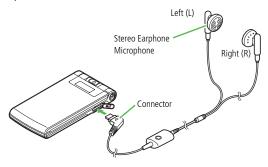

Use Stereo Earphone Microphone to accept Voice Calls.
 When 707SC II rings/vibrates, press switch for 1+ seconds to answer the call.

Playable File Formats

Player	File (Extension)
Music	MPEG4 Audio (mp4, aac, 3gp (Sound only))
Video	MPEG4 (mp4, 3gp)

Tip

• Other Playback Conditions

Media Player will only play files described above saved in Sounds & Ringtones in Data Folder; select directly from Data Folder.


Playing Music

1 Press ● and select *Media Player* → *Music*

> Select files

Select from *All music*, *Recent music* or *Most played music* and highlight a file. Play files from Playlist (�P.10-6)

3 Press (Play)

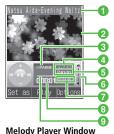

- 1 Artist's name and title (File name when title is unknown)
- Skin

- 3 Status: PLAY, PAUSE, STOP
- 6 File number/Total number of files
- 6 Playing volume
- **7** Total playing time
- 8 Elapsed playing time
- 9 Progress bar

Tip

- To end playback and return to Options
 Press Clear. In Options, press Clear to return to the previous menu or close Options menu.
- Incoming calls
 Playback pauses and 707SC II rings; after call ends playback remains paused.
- Incoming messages
 or appears and 707SC II vibrates.

Alarm times

Playback pauses, Alarm sounds and details appear. Press any key to cancel alarm and resume playback; press another key to reopen Media Player window.

• Saving files as Ringtone

Highlight a file in list or from pause or stop, press (Set as) and select a function. Only valid files can be saved.

• Using other functions

Use Switch Bar (♦ P.1-22).

All music

Lists all playable files (up to 9999 files).

☐ Download music

Shortcut to download site.

H Music search

Shortcut to *Music search*. site; search by genre or keyword.

☐ Recent music/Most played music

Most recently played file appears first in Recent music. Most frequently played file appears first in Most played music. Each list holds up to 100 records.

☐ Player Window & List Options

Available items vary by file type, etc.

	5 1 2
Item	Description
Send	Send file via S! Mail (�P.17-6) or Bluetooth [®] (�P.12-6).
Add	Add files to Playlist. Select <i>Playlist</i> to add all files contained in another Playlist. Select <i>Files</i> to add selected files to Playlist.
Move track in playlist	Change order of files in Playlist.
View bookmark	Access a page containing a streaming play link saved as a bookmark.
View history	Access a page containing a streaming play link already accessed.
Add to playlist	Files in <i>All music</i> are added to Play List. Choose <i>Selected file</i> to add highlighted file, or <i>Multiple file</i> to add multiple files to Playlist.
Play by	Play tracks by album, artist or genre.
Delete	Delete a highlighted file or all files.
Rename	Change file name.
Lock/Unlock	Set/release file protection.

Item	Description	
Details	Confirm file size, etc.	
Stop	End playback.	
Play via	In Player window, select Headphone or Speaker (♠ P.12-7) for sound output.	
Transfer to A/V headset/Transfer to Phone	Select Headphone or Speaker (♠P.12-7) as sound output source.	
Download content key	Purchase or acquire Content Key.	
Create playlist	Create new Playlist (◆P.10-5).	
Rename	Change Playlist name.	
Open playlist	Open Playlist.	
Player settings	Adjust Media Player settings (◆P.10-6).	

Tip

• When *Transfer to A/V headset* is set Raise/lower volume from A/V headset.

Create Playlist

Playing Files from Playlists

Create up to 20 Playlists, containing up to 100 files each.

- Press and select *Media Player* → *Music*
- **?** Select *Options* → *Create playlist*
- 3 Enter Playlist name
- **4** Select the created Playlist
- **5** Select *Options* \rightarrow *Add* \rightarrow *Files*
- 6 Check files to save and press
 ☑ (Save)

Tip

- To create a Playlist from tracks in an existing one:
 - (1) Perform Steps 1 to 3
 - (2) Options \rightarrow Add \rightarrow Playlist
 - (3) Select Playlist from which to add all melodies
- To change Playlist name
 - (1) Highlight Playlist, select *Options* → *Rename*
 - (2) Enter Playlist name
- To delete selected Playlist Options → Delete → Selected → Yes
- To delete all Playlists

(3) Select Yes

- (1) Highlight Playlist, select $Options \rightarrow Delete \rightarrow All$
- (2) Enter Phone Password and press () (Confirm)

Play

- Press (\bullet) and select *Media Player* \rightarrow Music
- **>** Select Playlist to play, select *Options* $\rightarrow Play$
- Changing Music Player Settings
- Repeat Mode

Default Setting **=**OFF

Play a single track repeatedly, all files in All music, or tracks from Playlist, randomly or repeatedly.

Press (\bullet) and select *Media Player* \rightarrow Music

- 2 Select Options → Player settings → Repeat mode
- 3 Select an item and press (Save)

Tone Volume

- Press and select *Media Player* → *Music*
- 2 Select Options → Player settings →
 Tone volume
- 3 Use to adjust the volume and press (Save)

Audio Skin

Default Setting Rainbow wave

Set one of two images to appear while music plays.

- Press and select *Media Player* → *Music*
- 2 Select Options → Player settings → Audio Skin
- **3** Select the setting and press (Save)

Visualization Mode

Visualization On/Off

Default Setting =On

Activate or cancel this setting to apply or cancel Skin, Controller and Backlight settings while playing MPEG4 AAC or AAC+ files.

Press ● and select *Media Player* → *Music*

- **\triangleright** Select *Options* \rightarrow *Player settings* \rightarrow $Visualization \rightarrow Visualization mode$
- **?** Select the setting and press (Save) Skin, Show Controller, & Backlight

- Default Setting Skin: Flowers
 - Show controller: Show
 - Backlight: Normal

Select one of ten skins to appear while music plays. Set Show controller to Hide for full screen view. Set Backlight to Always on to see skin with handset open.

- Press \bullet and select *Media Player* \rightarrow Music
- Select *Options* \rightarrow *Player settings* \rightarrow Visualization \rightarrow Skin, Show controller, or Backlight
- **?** Select the setting and press (Save)

Playing Video

- Press and select *Media Player* → Video
- Select files

From All Video

Select All Video and highlight the file

From Recent video


Select *Recent video* and highlight the file

From Most Played video

Select *Most Played video* and highlight the file

From Playlist (P.10-6)

3 Press (Play

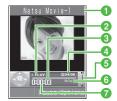

Video Player Window

- 1 Artist's name and title (File name when the video title information is unknown)
- Playing status : PLAY/PAUSE/STOP
- 3 Progress bar
- 4 File no./Total number of files
- 6 Playing volume level
- 6 Total playing time
- 7 Elapsed playing time

Tip

- Playlist
 - 1 After Step 1, select $Options \rightarrow Create playlist$
- (2) Perform Steps 2 to 5 in "Create Playlist" (P.10-5)

□ All Video

All (up to 9999) playable files appear.

₽ Download videos

Shortcut to download site.

☐ Recent video/Most Played video

Most recently played file appears first in Recent video. Most frequently played file appears first in Most Played Video. Each list holds up to 100 records.

☐ Player Window & List Options

Select *Options* in Player window or list and perform operations listed below. Available items vary by file type, etc.

Item	Description
Full screen view	Play video in full screen view.
Add	Add files to Playlist. Select Playlist to add all files contained in another Playlist. Select individual files to add to Playlist.
Move track in playlist	Change order of files in Playlist.
Stop	End video playback.
Edit	Edit video files (P.7-17).
Resolution	Set video display size.
Send	Send file via S! Mail (♠P.17-6) or Bluetooth [®] (♠P.12-6).
View bookmark	Access a page containing a streaming link saved as a bookmark.
View history	Access a page containing a streaming link already accessed.

Item	Description
Add to playlist	Add a file to Playlist in <i>All Video</i> . Select <i>Selected file</i> to add highlighted file to Playlist. Select <i>Multiple file</i> to add multiple files.
Delete	Delete a highlighted file or all files.
Rename	Change file name.
Lock/Unlock	Set/release file protection.
Details	Confirm file size, etc.
Play via	In Player window, select Headphone or Speaker (�P.12-7) for sound output.
Transfer to A/V headset/Transfer to Phone	Select Headphone or Speaker (◆P.12-7) as sound output source.
Create playlist	Create new Playlist (P.10-5).
Rename	Change Playlist name.
Player settings	Adjust Media Player settings (�P.10-11).

Player Settings

Repeat Mode

Default Setting Off

Play a file repeatedly or files in a folder randomly/ repeatedly.

- Press and select *Media Player* → *Video*
- Plighlight a file and press (Play)
- 3 Select Options → Player settings → Repeat mode
- 4 Select the setting and press (Save)

Tone Volume

- Press and select *Media player* → *Video*
- 2 Highlight a file and press (Play)
- 3 Select Options → Player settings →
 Tone volume
- 4 Use to adjust the volume and press (Save)

Resolution

Adjust video size during playback or while paused.

- Press and select *Media Player* → *Video*
- 2 Highlight a file and press (Play)
- 3 Select *Options* → *Resolution* and select a size


Managing Files (Data Folder)

🥦 Data Folder

707SC II files are organized in folders by file format.

Default Folders

Data Folder contains six default folders; new files are saved to the appropriate folder (see right). Create additional sub-folders in Default folders as required.

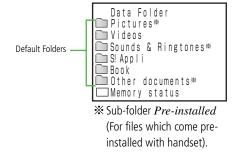

Folder	Description	File Formats ¹
Pictures	All still images	JPEG, BMP, GIF, WBMP, PNG, Animation GIF
Ⅳ Videos	All videos	MPEG4 (3GP, MP4)
Sounds & Ringtones	All sounds recorded with Voice Recorder, downloaded music, and other sound files	● SMAF/MIDI/SP-MIDI, → MPEG4 Audio, ■ AMR
S! Appli	S! Appli	JAVA
■ Book	Save downloaded electronic comic/ photo book files	CCF
Other documents	Documents, graphics/ animation requiring File Viewer for display; Flash [®] files, vFiles, etc. are saved here	SWF, SVG, vCard, vCalendar, PDF, DOC, TXLS, TXT, TXT, Unsupported files

¹ Copy or move sorted files to other folders as required.

Tip

Savable number of files/folders
 Up to 999 files/folders can be saved each Default Folder.

Hemory status

Select to view memory usage of each Data Folder. Alternatively, use setup menu to view memory status (�P15-8).

□ Download links

appears in Data Folder for download site shortcut. Select to connect to the download site.

Ph Download Book

In Data Folder, Use *Download Book* in Book Folder as a download site shortcut. Select it to open the site.

Saved Files

Opening Files

- 1 Press and select Data Folder
- Select the folder where a file is saved
- 3 Highlight a file and press (View/ Play/Select/Start)

Tip

- To use Slide Show
 - 1 Perform Steps 1 to 3 to display images
 - (2) Options → Slide show
- To enlarge or reduce image
 - (1) Perform Steps 1 to 3 to display an image
 - \bigcirc Options \rightarrow Zoom
 - ③ Press 🖾 (♠), 🛂 (♠), or 🕥 to enlarge, reduce, or scroll the image

After selecting *zoom*, press (\mathbb{Z}) (\mathbb{Q}) to open list window. Press (\mathbb{Z}) (\mathbb{Q}) to change window view; select another file.

(4) Press Clear to return to the previous window

• File List Indicators

w: Nontransferable

: Nontransferable & unusable

A: Protected

: Copy Protected file (Transferable, Content Key valid)

: Copy Protected file (Transferable, Content Key expired)

: Copy Protected file (Nontransferable, Content Key valid)

Copy Protected file (Nontransferable, Content Key expired)

: Set as Wallpaper (P.11-10)

. Set as Ringtone (♦ P.11-11)

- When another USIM Card is inserted into 7075C II Only preinstalled nontransferable/copy protected files are usable.
- To show image in Full screen view
 After Step 3, select Options → Full screen view. For partial image, use to change display area. Press (Rotate) to rotate the image. Press Clear to return to previous view.
- To view File Details

 Options → Details

Note

 Files over 3 MB cannot be opened. Files larger than 1600 x 1200 pixels cannot be edited or zoomed.
 Files over 1.3 MB cannot be set as Incoming image or Substitute Image.

→ Activating Camera or Voice Recorder from Data Folder

Select $Options \rightarrow Take\ photo$; activate Camera in Camera mode by highlighting the Pictures folder or an image file captured by 707SC II .

Select $Options \rightarrow Record\ video$; activate Camera in Video mode by highlighting the Videos folder or a video captured by 707SC II.

Select $Options \rightarrow Record\ sound$; activate Voice Recorder by highlighting the Sounds & Ringtones folder or sound file captured by 707SC II .

Using File Viewer

Open PDF, XLS, DOC, PPT, or TXT files saved in Data Folder; File Viewer activates automatically. Select Normal View or Full Screen View; navigate files via *Options* or shortcuts.





Press and select *Data Folder*

> Select file location then file

3 Select *Options*/navigation shortcuts to navigate

To scroll



To change Display appearance

Options → *Full screen view* or *Normal view*

To enlarge or reduce the image

- \bigcirc Options \rightarrow Zoom
- ② Press *In* or *Out* to enlarge/reduce

To fit document size to Display

Options → *Fit to screen*

To move a page

Options → *Go to* and select an item

To move to specified page

- ① $Options \rightarrow Go \ to \rightarrow Page$
- 2 Enter page number

To capture current screen image

Select Screen capture

To rotate image 90 degrees clockwise

- \bigcirc *Options* \rightarrow *Rotate*
- ② *Options* → *Rotate* to return to the previous window

To search words in the page

- \bigcirc Options \rightarrow Search
- **2** Enter words
- ③ Press (3) def to continue searching forward or press (1) to continue searching backward, for the same word

To view assigned shortcut keys

Options → *FileViewer shortcuts*

Tip

After capturing

Captured files are saved in *Other documents* in 707SC $\rm II$ Data Folder (Phone) as JPEG format.

File Viewer Settings

Default Setting Panning: 10 pixel Reflow: Off
Map on: On Controller: On
Name: Capture

- Press and select *Data Folder*
- Select save location and select the file
- **3** Select *Options* \rightarrow *Settings*
- 4 Perform operations to set

To assign scroll range per press of 🔇

- 1 Select *Panning*
- ② Select the setting and press (Save)

To fit text width to Display

- 1 Select *Reflow*
- ② Select On and press \bigcirc (Save)

To set Map (shows display position) on/off

- 1 Select Map on
- ② Select a setting and press (Save)

To set guide for shortcuts in Full screen view

- \bigcirc *Options* \rightarrow *Settings* \rightarrow *Controller*
- ② Select a setting and press (Save)

To change default file mane

- 1 Select *Name*
- 2 Enter a name

Tip

• When Reflow is On

Fit text width (such as doc. or txt.) to 707SC II window width. No need to scroll right/left to show the contents.

• When Map on is On

In bottom left of the window, map showing the current position/area in the whole page appears. The current position/area is indicated in red frame.

Navigation Shortcuts

Key	Description
Side Key 🚹	Zoom in
Side Key ▼	Zoom out
2 abc	Move to the first page
4 ghi	Move to the previous page
5 jkl	Rotate 90 degrees clockwise or cancel
6 mno	Move to the next page
8 tuv	Move to the final page
★ [*] A/a	Select Normal View or Full Screen View

☐ Confirmation Window & List Options

For items other than window operation options, see "Data Folder Options" (♠P.11-13).

Note

- If a document includes many pages or complicated designs, all pages of the document may not appear properly.
- If a file includes any language other than Japanese or English, that file may not appear properly.

Viewing Graphics/Animation with the SVG-T/Flash® Viewer

View SVG, SVGZ, and SWF formatted files in Data Folder. When one of these files is selected from Data Folder list, the SVG-T/Flash[®] Viewer is automatically launched.

View the graphics/animation on Normal View or Full Screen View. In either mode, *Options* and shortcut (Key operations) are available to control Display.



Normal View



Full Screen View

Press and select *Data Folder*

Select file location then file

3 Select *Options*/navigation shortcuts to navigate

To change Display appearance

Options → *Full screen view* or *Normal view*

To enlarge or reduce the image

- \bigcirc Options \rightarrow Zoom
- 2) Press ((a) to enlarge or Y! (a) to reduce
- ③ Use ② to scroll the window
- 4 Press to return to the previous window

To pause or restart an flash® image

Options → *Pause* or *Resume*

To select image quality

 $Options \rightarrow Quality$ and select an item

To rotate the screen 90 degrees clockwise or counterclockwise

Options → *Rotate* and select an item

Tip

• To set an image for Wallpaper

Press (Set as) on Normal View, or in *Options* of Full Screen View, select *Set as* and select *Wallpaper*.

☐ Confirmation Window & List Options

For items other than window operation options, see "Data Folder Options" (◆P.11-13).

Sorting Files

Sort files in various ways.

Select $Options \rightarrow Sort by$

> Select an item

To sort files in descending order of dates

Select *Date*

To sort files by file types

Select Type

To sort files by file names

Select Name

To sort files in ascending order of size

Select Size

To sort files by status of Content Key

Select Activation Status

Tip

· When folders are listed

Folders appear at the top of list.

• When sorted by Type

Files appear in alphabetical order by file extension (e.g., doc, ipg, swf, and such).

• When sorted by Name

Files appear by file name: numbers → alphanumerics → Japanese syllabary

• When sorted by Activation status

Files appear as follows:

Unrestricted → Nontransferable → Copy Protected (Content Key valid) → Copy Protected (Content Key expired) → Invalid Nontransferable

Using Files

Using Image Files

Use image files for Wallpaper, Phonebook entries, or Video Call Substitute Image.

│ Highlight a file and press (Set as)

To set while viewing an image

Highlight a file, press (View) and press (Set as)

Set File Use

To set as Wallpaper

Select *Wallpaper*, confirm and press (Set)

To set as Phonebook entry image

- 1) Select Caller ID
- 2 Search Phonebook and select an entry

To set as Video Call Substitute Image

- 1 Select Still picture
- 2 Press (Save)

Tip

- To edit a still image (◆P.7-15)
- To create a mobile postcard (�P.7-7)
- To print a still image (◆P.12-12)

Setting Sound File as Ringtone

Change ringtone settings in Normal profile (�P.3-3).

- Press , select *Data Folder* and select location to save the file
- 2 Highlight the file and press ☑ (Set as)
- 3 Set ringtone

To set ringtone for Voice Calls

Select *Voice ringtone*

To set ringtone for Video Calls

Select Video ringtone

To set ringtone for Phonebook entries

- 1) Select *Caller ringtone*
- **2** Search Phonebook and select an entry

To set ringtone for S! Mail/SMS

Select Message alert tone

Tip

• Player Restrictions

Only copy protected MPEG4 AAC, AAC+, or Enhanced AAC+ files are playable.

Setting Video File as Ringtone

Change ringtone settings in Normal profile (◆P.3-3).

- Press , select *Data Folder* and select location to save the file
- **⊃** Highlight the file and press 🖾 (Set as)
- **3** Set ringtone

To set video file as ringtone for Voice Call

Select *Voice ringtone*

To set video file as ringtone for Video Call

Select Video ringtone

To set ringtone for Phonebook entries

Select *Caller ringtone*

11

Tip

Restrictions

Only copy protected MPEG4 (mp4, 3qp) AAC, AAC+, or Enhanced AAC+ files can be set.

Setting Flash® file as Wallpaper

Press (ullet) and select *Data Folder* oOther documents

To set while viewing a Flash® image Highlight the file, press (View) and press

- Highlight the file, press ☒ (Set as)
- Select Wallpaper
- Check preview window and press (Set)

Saving a vFile

vFile is the standard format to exchange Phonebook data, etc. via the Internet. 707SC II uses vCard (extension: vcf) format for Phonebook data: also uses vCalendar (extension: vcs) format for Schedule/To Do data.

Save a vFile stored in Data Folder to Phonebook, calendar. or as a scheduled event.

- Press (●), select *Data Folder* and select save location for the vFile
- **>** Select a file and press **●** (Register)

Data Folder Options

Options vary by file or folder.

For File Viewer or SVG-T/Flash[®] Viewer, see "Using File Viewer" (�P.11-5) or "Viewing a Graphics/Animation with the SVG-T/Flash[®] Viewer" (�P.11-8).

Item	Doccrintion
iteiii	Description
Edit	Edit a still image or Videos (�P.7-15).
Dynamic Effect/	Create Flash [®] images using Still images
Dynamic effect list	(◆ P.7-19).
Full screen view	Display Still image in full screen (�P.11-5).
Playback	Playback video files. When playback display, select <i>Phone</i> to sound from speaker. Select <i>AVV headset</i> to sound from Bluetooth®-compatible devices (stereo headphone, etc.) (�P.12-7).
Transfer to A/V headset	Switch sound output to Bluetooth [®] -compatible devices (stereo headphone, etc.) (�P.12-7).
Register to Phonebook	Export a vCard file to Phonebook (�P.11-12).

Item	Description
Register to Calendar	Export a vCalendar file to Calendar (�P.11-12).
Send	Send file via S! Mail (�P.17-6) or Bluetooth [®] (�P.12-6).
mPostcard	Create a mobile postcard (�P.7-7).
Zoom	Enlarge or reduce still image being confirmed (�P.11-3).
Browser access	Access linked site included in electronic comic/photo book files.
Sort by	Sort files (◆P.11-9).
Move	Move files from/to 707SC II another folder.
Сору	Copy files and paste from/to 707SC II another folder.
Add to playlist	Add files to Playlist. Highlight <i>Selected</i> and select to add a file. Highlight <i>Multiple</i> and select to add multiple files at once.
Delete	Delete a file/files (◆P.11-17).
Delete folder	Delete a folder (�P.11-17).
Take photo	Activate Camera in Camera mode (�P.11-4).

Item	Description
Record video	Activate Camera in Video mode (�P.11-4).
Record sound	Activate Voice Recorder (�P.11-4).
Rename	Change file name (◆P.11-14).
Rename folder	Change folder name (�P.11-14).
Show/Hide file info	In List window for Picture Folder with thumbnail view, set to display folder/file name when highlighted.
View by	Select List window type for Picture Folder. Select <i>List</i> to show folder/file in list view. Select <i>Thumbnail view</i> to show folder/file in thumbnail view.
Create folder	Create a new folder (◆P.11-14).
Print via	Print Still images using the printer via USB/ Bluetooth [®] connection.
Lock/Unlock	Set/release file protection.
Download content key	Purchase or acquire Content Key.
Details	Confirm file/folder properties.
Content key info	Show the list of Content Keys for the files in Data Folder; manage them by selecting <i>Delete</i> to delete (P.11-18) or <i>Details</i> to check the details.

Managing Files/Folders

Create Folder

Create sub-folders in Default folders.

- Press and select Data Folder
- Select Default folder to create a sub-folder
- **3** Select *Options* \rightarrow *Create folder*
- 4 Enter a name

Changing a File Name/Folder Name

Change the name of a file or a created sub-folder.

Press and select Data Folder

- 2 Select Default folder and highlight a sub-folder or a file
- 3 Select *Options* → *Rename folder* or *Rename*
- 4 Enter a name

Tip

 When a file is locked You cannot change the file name.

Moving a File/Folder

Move a file/folder to another folder or a location outside folders.

- Press and select Data Folder
- 2 Select Default folder and highlight a sub-folder or a file

- **3** Select *Options* \rightarrow *Move*
- **4** Move file or folder

To move one file or all files in the same folder or all created sub-folders

Select Selected or All

To select and move multiple files or created sub-folders

- 1) Select *Multiple*
- ② Check files or created sub-folders to move and press ☒ (Move)
- 5 Select destination folder → *Move*here

Tip

- To check/uncheck all files or folders at once Press Y? (Mark all) or Y? (Unmark all)
- When a file is locked
 File cannot to be moved.

• When target file/folder with the same name exists Change file/folder name; enter new name in message text.

Note

 Downloaded files may not appear/play properly if moved to another device or when a different USIM Card is inserted in 707SCII.

Copying Files/Folders

Make a copy of a file or folder in another folder or a location outside folders.

Press and select *Data Folder*

2 Highlight a folder or a file, select Options → Copy

3 Copy file or folder

To copy one file or all files in the same folder or all folders

Select Selected or All

To select and copy multiple files or folders

- 1 Select *Multiple*
- Check files or folders to copy and press(Copy)
- 4 Select destination folder and select Paste here

Tip

- To check/uncheck all files or folders at once (P.11-15)
- When a copy of a file or folder is pasted to the same location as the original

The pasted file or folder is saved under another name, i.e., $_001$ is automatically added to the name.

When target file/folder with the same name exists
 Change file/folder name; enter new name in message text.

Note

Nontransferable/copy protected files cannot be copied.

Deleting a File/Folder

Delete

- Press
 and select Data Folder
- 2 Highlight a file, select *Options* → *Delete*
- 3 Delete the file

To delete one file

Select Selected → Yes

To delete all files from the same folder

- (1) Select *All*
- ② Enter Phone Password press (Confirm) and select *Yes*

To select and delete multiple files

- 1 Select *Multiple*
- ② Check files, press ☑ (Delete)
- (Confirm) (If all files are checked)
- 4) Select *Yes*

Tip

- To check/uncheck files or folders at once (♠P.11-15)
- If a file is set as Wallpaper or ringtone, or locked Confirmation appears; select Yes to delete file. When deleting multiple files, select No to delete unset/unprotected files only.
- When file has Content Key
 Confirmation appears; select *Yes* to delete file and Content
 Key.

Delete Folder

- Press and select *Data Folder*
- 2 Select Default folder and highlight a created sub-folder to delete, select Options → Delete folder
- 3 Enter Phone Password, press (Confirm) and select *Yes*

If no file saved in a sub-folder

Phone Password is not required.

Tip

 If a folder contains files set as Wallpaper, ringtones, or locked/copy protected files

A confirmation message appears. Select Yes to execute folder deletion. Select No to delete only files without designated uses or protection, leaving the folder undeleted.

• When file in a folder has Content Key

A confirmation message appears. Select ${\it Yes}$ to delete both the file and Content Key.

Deleting a Content Key

- Press and select Data Folder
- **2** Select *Options* → *Contents key info*
- **3** Perform operations to delete

To delete a Content Key

Select Selected

To delete all Content Keys

Select Delete all

External Connections

External Connections

Exchange files wirelessly with Bluetooth[®]-compatible devices, or connect to PCs or printers via USB cable.

Bluetooth®

Exchange files wirelessly with Bluetooth[®] devices or use a Bluetooth[®] handsfree device for calls. Use Bluetooth[®] to connect PCs and other devices for Internet access, etc.

Before Using Bluetooth®

Bluetooth $^{\circledR}$ transmissions require Bluetooth $^{\circledR}$ -compatible devices with the same profiles.

707SC II Bluetooth® specifications:

Item	Specification
Communication Standard	Bluetooth [®] Standard Version 1.2
Applicable profiles	Headset Handsfree Serial Port Dialup Networking File Transfer Object Push Advanced Audio Distribute Audio/Video Remote Control Basic Imaging ¹ Basic Printing
Output	Bluetooth [®] Power Class2
Line-of-signal distance ²	Approximately 10 meters or less

1	ltem	Specification
	Frequency band used	2.4 GHz

1 For Printing function only.

2 Varies by radio interference and other conditions.

Bluetooth® Precautions

- 707SC II may not work with all Bluetooth® devices.
- File transfers may not possible with some Bluetooth[®] devices. Operations, displays or actions vary by device.
- The 2.4GHz band used by Bluetooth[®] devices is used by other devices that may reduce transmission rates/ distance.
- Use of handsfree devices may create noise depending on connected devices/the environment.
- 707SC II does not support multiple Bluetooth[®] connections.
- USB and Bluetooth[®] cannot be used at the same time.
- Cancel Bluetooth[®] before connecting USB cable.

Tip

- To check Bluetooth® functions available
 - 1) Press \bullet and select *Settings* \rightarrow *Connectivity* \rightarrow *Bluetooth* \rightarrow *Bluetooth service*
 - 2 Select an item and view the contents
- To confirm the device address of 707SC II
 Press and select Settings → Connectivity → Bluetooth → My Information

12

Sending & Receiving Files

Send and receive Phonebook entries, My Phonebook details, Schedule information, Task information, still images, video, sound files, vFiles, and others.

Activation

Default Setting = Off

Activating Bluetooth[®] makes 707SC II visible to other devices; appears at the top of Display.

- Press and select Settings →

 Connectivity → Bluetooth →

 Activation
- **?** Select the setting

Search New Device

Save up to 10 devices to My devices list. Enter the same Passkey on both 707SC II and the device.

Activate Bluetooth® on device beforehand.

- Press and select Settings \rightarrow Connectivity \rightarrow Bluetooth \rightarrow My devices
- **?** Select Search new device
- 3 When devices appear, select device to save
- 4 Enter 4-16 digit Passkey and press
- Within 30 seconds, enter the same passkey on the other device

Tip

Passkey

The Passkey is a password used to connect Bluetooth[®]-compatible devices. When connecting to a handsfree device, enter the Passkey specified for it. You are not required to enter the Passkey again for a registered device.

- If authentication with the other device has failed A confirmation appears; select *Yes* to retry.
- If ten devices have already been registered
 A message indicating the device memory is full appears.
- To check Bluetooth[®] functions available for each device
 - ① Press ① and select Settings \rightarrow Connectivity \rightarrow Bluetooth \rightarrow My devices
 - **2** Highlight a device, select $Options \rightarrow Service \ list$
 - ③ Highlight an item, select Options → Help and view the contents
- To change the name of a registered device
- 1) Press \bullet and select *Settings* \rightarrow *Connectivity* \rightarrow *Bluetooth* \rightarrow *My devices*
- **②** Highlight a device, select *Options* → *Rename*
- (3) Enter a new name

- . To delete a device from My devices
 - ① Press ② and select Settings \rightarrow Connectivity \rightarrow Bluetooth \rightarrow My devices
 - ② Highlight a device, select *Options* → *Delete* → *Selected* or *All*
 - (3) Enter Phone Password, press (Confirm) (In the case of All only) and select Yes
- To search for or register a device from other Bluetooth[®]-compatible devices (P.12-10)

☐ My devices list Indicators

Device name is preceded by one of these indicators:

: Personal Computer

: Mobile phone

: Handsfree device/Headset

🖷 : Printer

📭 : Other

☐ When a connection request appears

If connection request appears, select Yes and enter valid Passkey within 30 seconds.

Connection requests from saved devices are connected automatically.

Sending Files

PDA:

Send via function Options menu. Transfer begins as soon as receiving device accepts it.

Select file to send

To send files from Data Folder

- (1) Highlight the data to send
- (2) In list window, select $Options \rightarrow Send \rightarrow Via$ bluetooth

To send files from other functions (except Data Folder)

- (1) In list window, highlight the data to send
- (2) Options \rightarrow Send \rightarrow Via bluetooth

Select receiving device

If receiving device has not been set

Select Service new device, search for that device and set it (♠P.12-4)

Tip

 Sending from Details or Playback windows Some functions allow sending option from Details/Playback window.

Receiving a File

When connection from the sender is approved, file reception starts and the received file is saved in Data Folder.

When confirmation window appears, select *Yes*

A/V Headset

Connect Bluetooth®-compatible headphones.

- Play files via Media Player (⊕P.10-3, 10-8)
- 2 Select Options → Transfer to A/V
 headset

3 Select receiver's device

To save device

Select *Search new device* and save device (**9**P.12-4)

Tip

- While Melody is stopped
 - ① In Melody Playback window, select *Options* → *Play via*→ *A/V headset*
 - ② Select the destination device or *Search new device* and search the device to register (◆P.12-4)

Print Data Folder Image Files

Connect Bluetooth®-compatible printer to 707SC II; print Still images/vFiles in Data Folder directly. Set paper size/number on 707SC II.

See printer User Guide for printer operations/settings.

- In Data Folder list window, highlight still image/vFile
- **2** Select *Options* \rightarrow *Print via* \rightarrow *Bluetooth*
- 3 Select receiver's device
 To register receiver's device

Select *Search new device* to search and register (◆P.12-4)

4 Perform operations to set

To set a paper size

Select Paper size and the setting

To set the number of copies

Select *Number of copies*, enter the number of copies (1 to 99) and press •

To set the number of pages to print on a sheet Select *Paper per sheet* and the setting (1 to 16)

To set whether or not to print the date

Select Date print and the setting

To set whether or not to print a frame

Select *Frame* and the setting

To set a print quality

Select Print quality and the setting

- 5 Press 🔀 (Preview)
- 6 Check the preview window and press
 (Print)

Accessing Connected Device Files

Access the shared folders and files of the other party's device. Alternatively, receive or delete data residing on the other device.

Select a device

3 Approve access on source device

Tip

• To receive an accessed file

After Step 3, select a file to receive.

➡ Locations of received files

Received files are automatically saved to Data Folder. The type of the folder that a file is saved to vary by file format; for example, JPEG and BMP files are saved to the *Pictures* folder and vFiles to the *Other documents* folder.

Connecting Handsfree

Save a handsfree device following the steps for "Search New Device" (P.12-4) beforehand.

Waiting Connection Request

In the steps given below, 707SC II is placed in mode waiting for a handsfree-device connection request.

- Press and select Settings \rightarrow Connectivity \rightarrow Bluetooth \rightarrow My devices
- 2 Select a handsfree-compatible device
 When Passkey entry window appears
 Enter the same Passkey as is set for the handsfree
 device

Answering Mode

Default Setting Normal

If the setting is changed to Automatic a call to 707SC II will be answered without the operation of any keys.

Press and select Settings →

Connectivity → Bluetooth →

Answering mode

2 Select the setting

Tip

To set the time (Seconds) before automatic reception

After Step 1, highlight Automatic, select $Options \rightarrow Edit$ and select the number of seconds to ring before answering.

Handsfree Mode

Default Setting = Handsfree Mode

Select answer settings for calls when handsfree devices connected.

Press ● and select Settings →

Connectivity → Bluetooth →

Handsfree Setting

2 Select the setting

Tip

• While Private Mode is set

Answer outgoing/incoming calls with 707SC $\rm II$ for calls made with 707SC $\rm II$; answer outgoing/incoming calls with handsfree devices for calls made with handsfree devices.

While Handsfree Mode is set
 Answer all outgoing/incoming calls with handsfree devices.

Changing Bluetooth® Settings

My Phone's Visibility

Default Setting =On

To activate search and saving from other Bluetooth®-compatible devices, make 707SC II visible.

- Press (\bullet) and select *Settings* \rightarrow Connectivity \rightarrow Bluetooth \rightarrow My phone's visibility
- **?** Select the setting Bluetooth® Name

Default Setting = 707SC2

Change 707SC II name appearing on other devices.

- Press \bullet and select *Settings* \rightarrow Connectivity \rightarrow Bluetooth \rightarrow My **Information**
- **Select** *Bluetooth Name*
- **?** Modify the name and press (•)

Secure Mode for Data Transfer

Default Setting =On

If On, a confirmation appears before transfer.

- Press \bullet and select *Settings* \rightarrow $Connectivity \rightarrow Bluetooth \rightarrow Secure$ mode
- Select the setting

USB Connection

Connect 707SC II to a PC via USB cable to transfer data between the devices. Alternatively, connect a printer to print still images.

Connecting to a PC

Perform the following:

- Transfer 707SC II Data Folder files to a PC
- Import PC files and save to Data Folder
- Perform packet data communications

Before Using USB Connection

Install USB driver and Samsung PC Studio beforehand. For more about installation, PC operating environment, etc., see attached CD-ROM User Guide.

Connecting to a Printer

Connect 707SC II to a PictBridge-compatible printer with a USB cable and print still images directly from Data Folder. Set a paper size, number of prints, and other items on 707SC II.

For more information about printer operations and paper setting, see the printer's User Manual.

Printing a Still Image from Data Folder

- Highlight an image file in Data Folder
- **2** Select *Options* \rightarrow *Print via* \rightarrow *USB*
- 3 Connect 707SCII to printer via USB cable
- **4** Select printer settings

To set paper size

Select Paper size and select the setting

To set number of prints

Select *Number of copies*, enter number (1 to 99) and press

To set the number of pages to print on a sheet

Select *Paper per sheet* and select the setting (1 to 16)

To set whether or not to print the date

Select *Date print* and select the setting

To set whether or not to print a frame

Select Border and select the setting

To set a print quality

Select *Print quality* and select the setting



6 Check the preview window and press



Note

Never disconnect the USB cable during printing.

Security

13

Change Phone Password

Default Setting = 9999

- Press \bullet and select $Settings \rightarrow$ Security → Change phone password
- **Enter current Phone Password and** press (Confirm)
- **Enter new 4-digit Phone Password** and press () (Confirm)
- **Enter new Phone Password again and** press () (Confirm)

PINs are security codes for USIM Card. For more information, see "USIM Card" (◆P.1-2).

Changing PIN/PIN2

- Press lacktriangle and select $Settings \rightarrow$ Security \rightarrow Change PIN code or Change PIN2 code
- **Enter current PIN or PIN2 and press** (Confirm)
- **?** Enter new PIN or PIN2 (4 to 8 digits) and press (Confirm)
- Enter new PIN or PIN2 again and press (Confirm)

 When PIN lock (♠P.13-3) is set to Disable, PIN cannot be changed.

PIN Lock

Default Setting Enable

To require PIN authentication each time the power is turned on, set this function to *Enable*.

- Press lacktriangle and select Settings \rightarrow Security \rightarrow PIN lock
- **2** Select the setting and press **(Save)**
- **?** Enter PIN and press (Confirm)

Resetting PIN Lock

If PIN or PIN2 is been incorrectly entered three consecutive times, PIN or PIN2 lock is set, restricting operations of 707SC II. Unlock PIN or PIN2 lock.

- In PUK Code entry window, enter PUK Code and press (Confirm)
- 2 Enter new PIN or PIN2 (4 to 8 digits) and press ()
- 3 Enter new PIN or PIN2 again and press

13

Note

- For more information about PUK and PUK2, contact Customer Service (♠P.25-25).
- If incorrect PUK Code is entered ten consecutive times, USIM Card is locked (turning 707SC II off does not reset count).
- A locked USIM Card cannot be unlocked. Contact Customer Service (◆P.25-25).

USIM Lock

Default Setting Disable

Activate to disable 707SC ${\rm I\hspace{-.1em}I}$ unless USIM password is entered whenever a different USIM Card is installed.

- Press and select Settings \rightarrow Security \rightarrow USIM lock
- 2 Select setting and press (Save)
- 3 Enter a USIM password (4 to 8 digits) and press (Confirm)

To set *Disable*

Setting is saved and operation complete.

To set *Enable*

Proceed to Step 4

4 Enter the USIM password again and press (Confirm)

Tip

USIM password

This is a password dedicated to USIM Card authentication. If USIM password matches, another USIM Card may be used in 707SC $\rm II$.

Change USIM password each time the USIM check setting is set to *Enable*.

• When you forget your USIM password Insert a USIM Card (with USIM lock set to *Enable*) in 707SC II and execute All reset (◆P.13-11).

Handset Security

Phone Lock

Default Setting Disable

Set *Phone lock* to *Enable*; then Phone Password entry is required each time the power is turned on.

Press and select Settings \rightarrow Security \rightarrow Phone lock

- **>** Select the setting and press (Save)
- 3 Enter Phone Password and press

 (Confirm)

Password Lock

Default Setting Disable

Set *Password lock* to *Enable*; Press any key in Standby; Phone Password entry window appears. Enter Phone Password to cancel Password lock; 707SC II operations are enabled.

- Press and select Settings →
 Security → Password lock
- 2 Select the setting and press (Save)
- Enter Phone Password and press

 (Confirm)

13

When Password lock is canceled

Password lock is automatically set to Disable.

Privacy Lock

Default Setting Unlock all

Activate to require Phone Password entry to open All. Messages, Data Folder, Phonebook, Call log or Calendar).

Press \bullet and select *Settings* \rightarrow Security \rightarrow Privacy lock

Check the functions to lock and press ☑ (Save)

? Enter Phone Password and press (Confirm)

Activate Secret Mode

Default Setting = Hide

Activate Secret Mode to hide Secret Phonebook entries.

- Press lacktriangle and select $Settings \rightarrow$ Security → Activate Secret mode
- Enter Phone Password and press (Confirm)
- **?** Select the setting and press (Save)

Tip

• Under following conditions, 707SC II turns the setting to Hide; Activate Secret mode is set to Show then 707SCII is powered on again.

Mobile Tracker

Default Setting = Off

Activate to receive notification whenever a different USIM Card is inserted. Enter up to two SMS addresses via which to receive notification.

- Press \bullet and select *Settings* \rightarrow *Security* → *Mobile tracker*
- **Enter Phone Password and press** (Confirm)
- Select Activation field
- Select On and press \bigcirc (Select)
- **5** Select Recipients field and enter an address

To select an address from Phonebook

- (1) Highlight To field and select *Options* → Phonebook
- (2) Search Phonebook and select an entry (◆P.5-9)
- (3) Highlight phone number and press () (Select)

To enter a phone number directly

- (1) Highlight To field and select $Options \rightarrow Direct$ input
- (2) Enter phone number
- Press

 ☐ (Done)
- Select Sender field and enter a sender's name
- Press

 ☐ (Save)
- Press (Accept) after checking the items

13

Tip

To delete an address

After Step 5, highlight the address, select $Options \rightarrow Delete$

If Mobile Tracker is on, SMS notification is sent to specified address when 707SC II is turned on; nothing appears on 707SC ∏.

Even if Mobile Tracker is off, notification is sent if Phone Password is incorrectly entered three consecutive times.

Rejecting Incoming Calls

Automatically reject calls with no Caller ID. Reject nuisance calls by saving phone numbers to Black List.

Reject Withheld

Default Setting Off

Press (ullet) and select $Settings \rightarrow Call$ settings \rightarrow All calls \rightarrow Reject incoming calls

Select Reject withheld field

 \mathbf{R} Select the setting and press (\bullet)



⚠ Press
☐ (Save)

Reject Unavailable

Default Setting Off

Reject/accept calls by callers who are unable to send caller ID, like International calls from overseas/transferred calls from landlines.

- Press and select Settings → Call settings → All calls → Reject incoming calls
- 2 Select Reject unavailable field
- 3 Select the setting and press
- ⚠ Press
 ☐ (Save)

Black List

- Press and select Settings → Call settings → All calls → Reject incoming calls
- Select Black list field
- **3** Set the phone number

To enter a phone number directly

- \bigcirc Options \rightarrow Add \rightarrow Direct input
- **2** Enter phone number

To select a phone number from Phonebook

- \bigcirc Options \rightarrow Add \rightarrow Phonebook
- (2) Search Phonebook and select an entry (◆P.5-9)
- 3 Select phone number

To enter a phone number using Call Log

- \bigcirc Options \rightarrow Add \rightarrow Call log
- (2) Select the log record
- ⚠ Press Clear and press
 ☐ (Save)

13

- To delete phone numbers from Black list
 - 1 Perform Steps 1 and 2
 - ② Highlight the phone number to delete, select Options → Delete → Selected or All → Yes

Reject Black List

Press igodots and select Settings \rightarrow Call settings \rightarrow All calls \rightarrow Reject incoming calls

- 2 Select Reject black list field
- 3 Select the setting and press
- ⚠ Press
 ☐ (Save)
- © Calls from phone numbers in *Black list*Calls are not connected. Caller hears a busy tone. *Missed call* appears in Standby. Press ☑ (View) to see Missed Calls.

Restoring Defaults

Clear Memory

Clear Data Folder, Messaging folders, Phonebook (Phone) entries, and Calendar entries each or all at once.

- Press and select Settings →
 Memory settings → Phone memory →
 Clear memory
- 2 Check items to reset and press (OK)
- 3 Enter Phone Password, press (Confirm) and select *Yes*

Reset Settings

Clear Saved contents/settings and restore defaults. However, the following contents are not restored.

Setting menu	Content not to be reset
Phone settings	Time and Date fields in Time & date
Display settings	Brightness
Call settings	All calls→Reject incoming calls→ contents saved in Black list Voice call/Video call→Diverts Voice call→Call waiting Call barring Voice mail
Phonebook settings	My phonebook details, Category settings
Connectivity	Preferred networks
Security	USIM lock, PIN lock, Change PIN code, Change PIN2 code

Press ● and select Settings →

Memory settings → Phone memory →

Master reset → Reset settings

2 Enter Phone Password, press (Confirm) and select *Yes*

Reset All

Restore 707SC II defaults and delete Phonebook (Phone), Messaging, and Data Folder contents/settings. Original files and S! Appli are restored.

- Press ●, select Settings → Memory settings → Phone memory → Master reset → Reset all
- 2 Enter Phone Password, press (Confirm) and select *Yes*

Tools

Alarms

Wake-up Alarm/Alarms

Save Wake-up alarm and up to four Alarm times. Add titles to appear at Alarm time. Use *Alarm activation* to activate or cancel alarm settings. Set alarms to repeat on specific days of the week or everyday.

- **1** Press \bullet and select *Tools* \rightarrow *Alarms*
- 2 Select an alarm from Wake-up alarm to Alarm4
- **3** Select Alarm activation field
- \triangle Select On and press \bigcirc

5 Select and set other items as required

Set a name (Wake-up alarm cannot be edited)

- 1) Select Alarm name field
- (2) Enter the name to set

Set Alarm time

Highlight Alarm time field and enter the time

Set an Alarm sound

- 1 Select Alert tone field
- ② Select the location of sound file, select an alarm sound and press •

Set Vibrator

- (1) Select Vibration field
- 2 Select the setting and press

Set Alarm volume

- (1) Select Alarm volume field
- ② Use O to adjust the volume
- ③ Press 🖾 (Play) to check the volume and press (Save)

Set whether to sound repeatedly or once

- (1) Select Repeat field
- (2) Select *Everyday* or *Once alarm* and press ()



Set days of the week for repeat alarm

- 1) Select Repeat field
- ② Select *Specify days* and press () (Edit)
- (3) Check the days to set and press (OK)

Set a snooze procedure

- (1) Select Snooze field
- ② Select the setting and press (●)

If you do not want to activate Alarm yet

- (1) Select Alarm activation field
- (2) Select *Off* and press ()



Tip

- When wake-up alarm/alarms are set appears.
- When wake-up alarm and/or multiple alarms have been set for the same activation time

Wake-up alarm takes priority over *Alarm1* to *Alarm4*. Among alarms, the last set one takes priority.

· Alarm volume settings

Select \triangleq to adjust volume step by step. Alarm volume become louder gradually.

Alarm sounds and a message appears. If set to mute (♠P.9-3), handset vibrates. Press any key once to stop Alarm sound and once more to clear the message.

Alarm sounds for one minute, up to six times at the specified interval, or until Snooze is canceled. If no handset operations take place, and , (End) are not pressed while alarm sounds, alarm is automatically reset to sound again at the specified interval. To cancel Snooze, press or 🔀 (End).

When 707SCII is engaged (Connecting... appears), a tone sounds and an indicator appears; uncheck Alerts on call (in Phone sounds setting) to cancel tone. When a call is being initiated (*Dialing* ··· appears), a tone sounds and an indicator appears. Press any key twice to clear indicator; if Snooze On, press Σ ? (End).

➡ While capturing video or recording sound Alarm sounds when image capturing or recording ends.



Default Setting Off

When this setting is active, 707SC II automatically turns on at Wake-up alarm or Alarm time.

- Press lacktriangle and select $Tools \rightarrow Alarms$ → Auto power
- \triangleright Select *On* or *Off* and press \bigcirc (Save)

Note

 Cancel Auto Power On near electronic devices employing high precision or low frequency signals, in places where mobile phone use is prohibited, like airplanes or hospitals.

➡ At Wake-up alarm/Alarm Time

707SC II automatically turns on and Alarm sounds. Press any key to cancel Alarm (�P.14-4). 707SC II returns to Standby.

🥦 Calendar

Displaying Calendar

Press \bullet and select $Tools \rightarrow Calendar$

Viewing Calendar

View Calendar in Monthly, Weekly or Daily view.



Monthly View Window

- : Highlighted position

 (Date in light blue): Current
- day (Date in light blue) : Current

Date in red: Holiday/Sunday



Weekly View Window

- " (In Yellow) : Anniversary registered
- (In Blue): Schedule registered
- (In Green) : Memo registered
 (In Red) : Task registered



Daily View Window

🕽 : Holiday

🔛 : Memo

☐ ☐ ☐ : Priority

∴ : Alarm set

: Repetition set

Tip

- To see previous or later months in Monthly view Press (* " / highlight Year/Month field and press
- To see previous or later weeks in Weekly view Press (* " / # control | # control | # | highlight Year/Month field and press
- To see previous or later days in Daily view Press (, * " , or # ##
- To view a particular month or week From Monthly view window or Weekly view window, change Display by specifying year, month, and day as follows.
 - (1) In the calendar window, select *Options* \rightarrow *Go to*
 - (2) Select Date, enter the year, month, and day and press

When Today is selected in Step (2), the current date is highlighted on the window of the current month or week.

Calendar Window Format

- Default Setting Starting day: Sunday
 - Default view mode: Monthly view

Set first day of the week to Sunday or Monday as well as the default Calendar window.

- Press \bullet and select $Tools \rightarrow$ Calendar
- \triangleright Select *Options* \rightarrow *Settings*
- Select settings

Set the first day of week

- **1**) Select *Starting day*
- ② Select the setting and press (●) (Save)

Set the default view mode

- (1) Select *Default view mode*
- ② Select the setting and press (●) (Save)

Tip

. When settings are changed

A change in *Starting day* is immediately reflected. Selecting the settings of *Default view mode* can be applied when you deactivate calendar and then reactivate it.

To temporarily change Display mode
 In the calendar window, select Options → View mode → Display mode

Saving New Entries to Calendar

Scheduled Events

Save a maximum of 100 items.

Press \bullet and select $Tools \rightarrow Calendar$

2 Select *Options* \rightarrow *Add new* \rightarrow *Schedule*

3 Select items and set

Set a title

Select Title field and enter a text

Set details

Select Details field and enter a text

Set a starting date

Highlight Start date field and enter a date

Set a starting time

Highlight Start time field and enter a time

Set an ending date

Highlight End date field and enter a date

Set an ending time

Highlight End time field and enter a time

Set an event location

Select Location field and enter a text

Set an alarm

- (1) Check Alarm field to select
- ③ Select Alert tone field, select a location of sound files and select an alert tone

Set Repeat

- 1 Check Repeat field to select
- ② Use to highlight Time cycle field and specify the time cycle unit
- (3) Highlight Value field and enter a value
- (4) Highlight Until date field and enter a year, month, and day to stop repetition

Set Expiry time for a Calendar Event

Use ot highlight Expiry field and switch the expiry limit

4 Press ☒ (Save)

Tip

• To simplify Start or Due data entry

Put cursor on the target date on Calendar window before Step 2 to show that date in Start date or End date field.

• When an event has expired

Event is automatically deleted from Calendar. For example, if expiry is *After 1 year*, and repetition is not set, it is deleted after one year from the event end date. With repetition set, it is deleted one year after the end date of the last repetition. To cancel automatic deletion, set *Disable* for expiry date.

Anniversary/Holiday

Register a maximum of 50 anniversaries and 50 holidays.

- Press \bullet and select $Tools \rightarrow Calendar$
- 2 Select *Options* \rightarrow *Add new* \rightarrow *Anniversary* or *Holiday*
- 3 Select items and set

Set a text

- 1 Select Text entry field
- (2) Enter text

Set a date

Highlight Date field and enter the date

Set an alarm (Anniversary only)

- (1) Check Alarm field to select
- ② Highlight Before field, enter an interval before the anniversary Alarm time, use ① to highlight Unit field and switch to an appropriate unit

- (3) Highlight Alarm time field, and enter a time
- Select Alert tone field, select the location of sound of files and select an alert tone

Set to repeat every year

Check Repeat every year field

4 Press ☒ (Save)

Tip

. To make it easier to enter a date

Put cursor on the target date on Calendar window before Step 2 to show that date in Date field.

Memo

Up to 20 memos can be registered. Memos can be registered even while talking (♠P.2-8, 6-5).

- Press \bullet and select $Tools \rightarrow Calendar$
- **2** Select $Options \rightarrow Add \ new \rightarrow Memo$
- 3 Select the memo text box and enter text

To set the date

Select Date and enter the date

⚠ Press
☐ (Save)

Tip

• To make it easier to enter a date (�P.14-9)

Tasks

Register a maximum of 100 time-limited items and manage them in a list.

- Press \bullet and select $Tools \rightarrow Calendar$
- **?** Select *Options* \rightarrow *Add new* \rightarrow *Task*
- 3 Select items and set

Set a title

- (1) Select Title field
- (2) Enter title

Set a description of the task

- (1) Select Task field
- 2 Enter text

To set the starting date

Highlight Start date field and enter the date

To set the due date

Highlight Due date field and enter the date

Set an alarm

- (1) Check Alarm field
- ② Highlight Before field, enter a value for how long before the task starts the alarm should sound, use to highlight field of units and select an appropriate unit
- (3) Highlight Alarm time field and enter the time
- (4) Select Alert tone field, select the location of sound files and select an alert tone

Set a priority level

Use to highlight Priority field and select a value

Press 🖾 (Save)

Tip

To make it easier to enter a Starting date or Due date

Put cursor on the target date on Calendar window before Step 2 to show that date in Starting date and Due date field.

□ Volume of Alarm sound

The volume follows the setting of *Tone volume* for Voice Calls; the setting of *Voice call* in *Vibration* for Vibrator.

Alarm sounds and a message appears. To stop Alarm, press any key. Press to cancel the message display. With no action to stop Alarm, a message appears indicating Missed alarm event. Press (View) to view the message.

⊕ When a call is being initiated or during a call

During a call or connection (*Connecting* ··· appears), 707SC II notifies with a short sound and indicator; uncheck *Alerts on call* (in Phone sounds setting) to notify only by an indicator. When an outgoing call is being Initiated (*Dialing* ··· appears), 707SC II notifies only by an indicator. Press ot clear an indicator.

Viewing Saved Calendar Entries

Press \bullet and select $Tools \rightarrow Calendar$

Open a window listing items

To check items of one day

Select a date on Monthly view window or Weekly view window, or use to change the date on Daily view window

To check registered contents by type $Options \rightarrow Event \ list$ and select a type

To check the message of a missed alarm Options → Missed alarm event

3 Select and view details

Tip

• To check calendar item status
Select *Options* in Calendar or registered contents list and *Memory status*; check the number of savings by type.

Editing Calendar Entries

Editing and Saving as New Entries

In addition to edit and update the entries, edit the entries and save them as new entries.

Press \bullet and select $Tools \rightarrow Calendar$

2 Open a window listing entries

To open a window listing entries for a single day

Select a date on Monthly view window or Weekly view window, or use to change the date on Daily view window

To view events by type

 $Options \rightarrow Event\ list\ and\ select\ a\ type$

3 Select an item to edit

4 Press (Edit)

- **5** Change the information as required
- 6 Press ☑ (Save) and select *New* or *Update*

Marking a Task as Completed

- Press \bullet and select $Tools \rightarrow Calendar$
- **2** Select *Options* \rightarrow *Event list* \rightarrow *Task*
- 3 Highlight a completed task, select Options → Completed

To remove the completion mark

Options → *To do*

Tip

• To sort tasks

In the Task window, select $Options \rightarrow Sort\ by$ and select a sorting type. Classify tasks into completed/uncompleted ones or sort them by due date or priority.

- Deleting Calendar Entries
- In Calendar window or saved contents list, select *Options* → *Delete*
- 2 Delete the entry

To delete only the highlighted entry

Select Selected → Yes

To delete all entries of current month or week Select *This month* or *This week* \rightarrow *Yes*

To delete only entries from a specific period of time

- 1 Select *Periods*
- (2) Enter the start and end dates
- ③ Press (Delete) and select *Yes*

To delete all entries or all before the highlighted date

- 1 Select All or All past data
- ② Enter Phone Password, press (Confirm) and select Yes

Tip

- To collectively delete multiple registered items
 Select registered unnecessary items from a list by type and delete them collectively.
 - (1) Press \bullet and select $Tools \rightarrow Calendar$
 - (2) $Options \rightarrow Event \ list$ and select the type
 - \bigcirc *Options* → *Delete* → *Multiple*
 - (Check the items to delete, press (Delete) and select Yes

Calendar Options

Perform the following operations from *Options* on a window listing Calendar entries:

Item	Description
Add new	Save a new Calendar entry (◆P.14-7).
Send schedule/ Send task	Send Calendar entry via S! Mail (�P.17-6) or Bluetooth [®] (�P.12-6).
View mode	Select a display mode (�P.14-7).
Go to	Display a particular month or week by changing Monthly/Weekly view window (�P.14-6).
Event list	View events listed by type (◆P.14-12).
Delete	Delete a Calendar entry (�P.14-13).
Completed/To do	Set or cancel the task completion mark (�P.14-12).
Sort by	Sort tasks (�P.14-13).
Save to Data Folder	Create a vFile and save it to <i>Other documents</i> in Data Folder.
Settings	Select Calendar Display settings (�P.14-6).


Item	Description
Missed alarm event	View the message of a missed alarm (�P.14-12).
Print via bluetooth	Print highlighted schedule event or task via Bluetooth $^{\textcircled{\$}}$ printer.
Memory status	Check memory usage for Calendar functions (�P.14-12).

Voice Recorder


Record up to 60 minutes; activate from Tools, during a call, via Data Folder or a Message creation window.

Voice Recorder Window

Control Voice Recorder with Softkeys and navigation key.

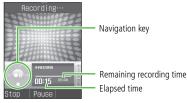

Recording Window

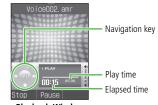

Playback Window

Recording Voice

Recorded voice is saved to *Sounds & Ringtones* Data Folder.

Press ● and select *Tools* → *Voice*recorder

To change the fixed recording time (�P.14-17)

- 2 Press (Record)
- 3 Press ☑ (Stop) or continue recording until the set time runs out
- 4 As required, press (Play) to replay

To pause

Press (Pause)

To resume

Select $Options \rightarrow Record$

To record voice from *Options* (�P.14-16)

Playing Voice

Replay a voice file saved in Data Folder.

- Press \bullet and select $Tools \rightarrow Voice$
- 2 Select Options → My sounds
- 3 Highlight the file and press (Play)

☐ Voice Recorder Options

Operate listed below from *Options* before and after recording. *Options's* selectable items vary by the conditions. For more information about available options after selecting *My sounds*, see "Data Folder Options" (�P.11-13).

Item	Description
Record	Start recording.
My sounds	Call up list of sound files saved in the My sounds folder.
Send	Send a file via S! Mail (◆P.17-6) or Bluetooth [®] (◆P.12-6).
Set as	Set voice for ringtone, etc.

Item	Description
Delete	Delete a recorded voice file.
Rename	Change file name.
Lock/Unlock	Set/release file protection.
Details	Confirm recorded sound file size, etc.
Record settings	Select the file name assigned automatically or the fixed recording time (�P.14-17).

Changing Voice Recorder Settings

Default Name

Default Setting = Voice

The voice recorded with Voice recorder is saved under a name such as "Voice 001." "Voice" can be changed to another word.

Press and select $Tools \rightarrow Voice$ recorder

- 2 Select Options → Record settings → Default name
- 3 Enter a name

Tip

• If the default name is changed

The naming rule is applied from the next recording.

Recording Time

Default Setting = 5 minutes

Press ● and select *Tools* → *Voice*recorder

- 2 Select Options → Record settings → Recording time
- 3 Select a duration and press (Save)

World Clock

World clock allows you to check the current time all over the world.

Viewing World Clock

Press \bullet and select $Tools \rightarrow World$ clock



Selecting Areas

Default Setting *Tokyo, Seoul* for both areas

When you save a second time zone, easily check the time at that area looking at World clock.

- Press \bullet and select $Tools \rightarrow World$ clock
- Use (to highlight area 1 and use to change city name

To set summer time

- (1) Press **Y**? (DST)
- (2) Check the area to set summer time and press **⊠** (Done)
- ? Press (Save)

Using Calculator

Arithmetic operations to a maximum of 13 digits can be performed.

Press ● and select *Tools* → Calculator

? Calculate

To enter numbers

Press keys

To enter +, -, \times , or \div Press \bigcirc , \bigcirc , \bigcirc , or \bigcirc

To display the calculation result

Press

To enter ., (, or)

Press ☑ (.()) to toggle symbols

To move cursor left or right

Press 🛨 " or # 🚓

To erase a symbol in a mathematical expression

Place cursor after a symbol to erase and press Clear

To erase both the mathematical expression and the calculation result


Press Clear for 1+ seconds

Converting Currencies or Units

Convert the currencies for various countries. Alternatively, convert the units of length, weight, etc.

Converting Currencies

Press \bullet and select *Tools* \rightarrow *Converter* \rightarrow *Currency*

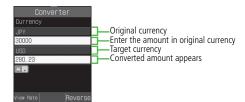

2 Select Original currency field and currency

To replace the original currency with the target currency

Press Y! (Reverse)

3 Select Original currency amount field and enter the amount

To enter a decimal point

Press (* "° P

- 4 Select Target currency field and currency
- 5 View result in the target currency To check the exchange rate
 - ① Highlight either of Currency fields and press <a> (View Rate)
 - 2) Press Clear to return to the Original window

To change the exchange rate

- ① Highlight either of Currency fields and press <a>S (View Rate)
- ② Select the base currency to change the rate, highlight the currency, select Options → Edit
- 3 Enter the rate and press (Save)


To add a currency unit

- 1 Press (View Rate)
- ② Options → Add Rate
- **3** Enter the currency unit/rate and press **(**Save)

Converting Units

Press ● and select *Tools* → *Converter*

2 Select Length, Weight, Volume, Area, or Temperature

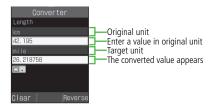

3 Select Original unit field and select the unit

To replace original unit with target unit
Press (Reverse)

4 Highlight Original unit value field and enter the value

To enter a decimal point

Press (* "A/a

To enter/delete "-" when converting temperature

Press # ੴ

- 5 Select target Unit field and select the unit
- 6 View result in Converted value field

 To clear the values

 Press ☒ (Clear)

Stopwatch

Use 707SC ${\rm I\hspace{-.1em}I}$ as a stopwatch; record up to ten lap times and total time.

- Press and select *Tools* → *Stopwatch*
- 2 Press (Start)

Press ● (Lap) to measure a lap time or ☑ (Stop) to stop time measurement

Dictionary

Look up English/Japanese dictionaries.

- Press and select *Tools* → *Dictionary*
- **2** Select a dictionary

To use English dictionary

Select *English dictionary*

To use Japanese dictionary

Select *Japanese dictionary*

- **3** Enter a word to search
- 4 Select a target word

🥦 Interpreter (Japanese)

Enter Japanese text or voice for common phrases used in airports and other places in English, Korean or Chinese.

- Press \bullet and select $Tools \rightarrow$ Interpreter
- Select the language
- Select an item

By voice

Speak the item in menu to 707SC II after the beep

By keys

Use to highlight the item and press



▲ Select the phrase

By voice

Speak the phrase for inquiry to 707SC II after the beep

By keys

Press \boxtimes ($\times = 1$) to select the item

5 Highlight the phrase and press



To listen the phrase

Press 図 (音を聴く)

To listen the phrase again

Press 図 (リピート)

Tip

- · To play voice prompts After Step 1, press 図 (ボイスオン)
- When もう一回言って下さい appears 707SC II could not recognize your voice. Speak clearly again or say another phrases.

Advanced Functions

Calling Functions

Auto Redial

Default Setting Off

Set to automatically disconnect a Voice/Video Call initiated to a party that is busy and redial the same party soon. Automatic redialing repeats up to 10 times until is pressed or 707SC II is closed.

- Press and select Settings \rightarrow Call settings \rightarrow All calls \rightarrow Auto redial
- 2 Select a value and press (Save)

Tip

- When Retry with is set for Video Call
 Automatic redialing settings take priority.
- When receiver has activated Voice Mail or Call Forwarding

The call is forwarded and automatic redialing is canceled.

International Dial

International Prefix

Default Setting = 010

Set the international code frequently used when initiating an international phone call.

- Press and select Settings→ Call settings → Voice call → International dial → Int'l prefix
- Enter an international code

Editing Country Codes

Default Setting = 1: Japan 2: KOR 3: GBR 4: ITA 5: CHE 6: ESP 7: DEU 8: PRT 9: NLD 10: FRA 11: MCO 12: USA 13: SWF 14: AUS 15: CHN 16: HKG 17: TWN 18 to 20: Unused

Add a country code or delete an unnecessary one.

- Press \bullet and select *Settings* \rightarrow *Call* $settings \rightarrow Voice\ call \rightarrow International$ dial → Country codes
- Perform operations to add, change, or delete

To add or change

- (1) Highlight the item to add or change and press (Change)
- (2) Select Country name field and enter the country name
- (3) Highlight Country code, enter code and press Save (Save)

To delete

Highlight item to delete, press (Delete) and select Yes

Earphone call

- Default Setting Earphone call activate: Off
 - Call number: No list

When $Earphone\ call\$ is On, press switch for 1+ seconds to call specified number.

Press lacktriangle and select $Settings \rightarrow Call$ settings \rightarrow Voice call \rightarrow Earphone call

- **?** Select *Earphone call activate*
- 3 Select the setting
- 4 Highlight *Call number* and perform operations to save phone number

To enter a phone number directly

- 1) Press (Select) and select *Direct input*
- 2 Enter phone number

To select a phone number from Phonebook

- 1) Press (Select) and select *Phonebook*
- (2) Search Phonebook and select an entry (◆P.5-9)
- (Select) 3 Highlight phone number and press

To enter a phone number using Call Log

- 1) Press (Select) and select *Call log*
- 2 Select the log record
- **5** Press **図** (Save)

Tip

- To delete a phone number
 - 1 Perform Step 1
 - 2 Press (Select) and select *Direct input*
 - 3 Press Clear for 1+ seconds press
- To change a phone number
 - 1 Perform Step 1
 - 2 Perform Step 4
 - 3 Press (Save)

Handling Incoming Calls

Anykey Answer

Default Setting = Off

Answer Voice Calls using keys other than () (Accept) or **5**.

- Press \bullet and select *Settings* \rightarrow Phone settings \rightarrow Anykey answer
- **>** Select On or Off and press \bigcirc (Save)

Tip

Answering a Voice Call when On is set (♠P.2-3)

Acoustic Shock

Default Setting ■On

Reduces ringer volume to Level 1 for the first two seconds.

- Press \bullet and select *Settings* \rightarrow *Call* settings \rightarrow All calls \rightarrow Acoustic shock
- **>** Select the setting and press (Save)

15

Active Folder

Default Setting Off

When On, open 707SC II to answer an incoming call.

- Press and select Settings \rightarrow Phone settings \rightarrow Active folder
- **2** Select On or Off and press \bigcirc (Save)

Side Key Silence/Reject

Default Setting = Silence

Use $lack or \lack or$ to mute ringer or reject an incoming call. Select from Reject (disconnect the call) or Silence (silence the incoming tone).

- Press and select Settings \rightarrow Phone settings \rightarrow Side key
- 2 Select a value and press (Save)

🎜 Side Key Lock

When On, Side Keys are locked. Avoid accidental key press when 707SC II is inside a bag, etc.

- Press \bullet and select Settings \rightarrow Phone settings \rightarrow Side key lock
- **2** Select On or Off and press \bigcirc (Save)

Simple Search

Default Setting Off

When Simple search is On, enter numbers in Standby to search Phonebook entries starting with Reading name corresponding each number. Then search result (entry names and phone numbers) list appears.

- Press \bullet and select *Settings* \rightarrow Phone settings → Simple search
- **2** Select the setting and press **(Save)**

Tip

• To initiate calls using *Simple search* (�P.5-11)

Idle Shortcuts

Up to nine frequently used functions can be saved; create own Shortcut Menu. In Standby, press () to access functions saved to shortcuts

- Press ()
- Highlight unsaved function entry box and press (Assign)
- **3** Select the function
- Repeat Steps 2 and 3 to save the function

Tip

To change functions

- ① In Step 2, Highlight the function, select *Options* → *Assign*
- (2) Select Yes and select the function

To sort functions

- ① In Step 2, Highlight the function, select *Options* → *Change Order*
- ② Use ③ to highlight the target function box and press (Select)

• To delete functions

In Step 2, Highlight the function, select $Options \rightarrow Delete \rightarrow Yes$

To restore defaults

In Step 2, Highlight the function, select $Options \rightarrow Reset \rightarrow Yes$

Memory Status

Check the following information:

- Available shared memory
- Status of SMS and S! Mail mailboxes
- Status of memory in Data Folder
- Status of Calendar items registered
- Status of Phonebooks (Handset and USIM Card)
 Alternatively, delete saved entries and/or files.
 - Press and select Settings →

 Memory settings → Memory status
- **2** Select an item to check

Tip

- To delete Data Folder, Calendar or Phonebook content
 - (1) Perform Steps 1 and 2
 - (2) Highlight an item, press (Select), select *Yes* and view an entry
 - ③ Check the fields to delete, press ☒ (Delete) and select Yes
- To delete all contents

After Step 3 in "To delete the contents," enter Phone Password, press \bigodot (Confirm) and select Yes

- To check/uncheck all contents at once
 After Step ③ in "To delete the contents," select Options →
 Mark all or Unmark all
- When the checked contents contain the contents that functions or locks are set in

After Step 3 in "To delete the contents" or the "To delete all contents" operations, the confirmation window appears. If you select *Yes*, the deletion is performed. If you select *No*, only files without functions or locks set are deleted.

Optional Services

Optional Services

The following optional services are available on 707SC ${\rm II}$:

Service	Description
Call Forwarding	When you know you will be unable to answer calls to 707SC $\rm II$, automatically divert calls to a specified number.
Voice Mail	Divert all or all unanswered calls to Voice Mail Center; access caller messages via 707SC II from within the service area or via a touchtone phone anywhere.
Call Waiting*	A tone sounds for incoming calls when the line is engaged. Put the line on hold to answer or alternate between lines.
Conference Call*	Open another line while one is engaged; toggle lines or talk on all simultaneously. Add new parties to an existing conference; talk on up to five lines simultaneously.
Call Barring	Restrict incoming or outgoing calls by condition.

Service	Description
Caller	Show or hide your own number when placing
Identification	calls.

^{*} This service requires a separate subscription.

Note

 When Out appears, access services from a touchtone landline. For details, contact Customer Service (♠P.25-25).

Call Forwarding

Set forwarding condition and number, by call type (Voice Call or Video Call), beforehand, to divert incoming calls to a specified number.

Forwarding Condition	Description
No reply	Unanswered calls are diverted after the specified ring time, or when the line is busy or 707SC II is out-of-range.
Always	707SC II does not ring/vibrate for incoming calls; calls are diverted automatically and Missed Call does not appear.

Note

- Call Forwarding and Voice Mail cannot be used at the same time.
- Activating Call Forwarding cancels Voice Mail.
- Call Forwarding is not available when All outgoing calls or All incoming calls in Call Barring is active (Call Barring takes priority over Call Forwarding).

Activating Call Forwarding

Specify a forwarding number beforehand.

- Press and select Settings → Call settings → Voice call or Video call → Diverts
- **2** Select *No reply* or *Always*; view the current settings

When the settings are acceptable

After viewing, press to return to the previous window

A Highlight Forwarding address field and enter a number

To select a phone number from Phonebook

- 1) Highlight forwarding Address field and select $Options \rightarrow Phonebook$
- (2) Select Phonebook, highlight a phone number and press () (Select)
- **4** For *No reply*, highlight Waiting time field and set a time
- **5** Press (**0**) (ON)

Tip

• When Call Forwarding (No reply) is active While 707SC II rings/vibrates, answer a call or press **Y**? (Busy) to forward it.

Cancel All

Cancel all Diverts services at once.

Press \bullet and select $Settings \rightarrow Call$ settings → Voice call or Video call → $Diverts \rightarrow Cancel\ all$

Tip

- To stop Call Transfer service for each forwarding condition
 - (1) Press (\bullet) and select Settings \rightarrow Call Settings \rightarrow Voice call or Video call → Diverts
 - (2) Select No reply or Always
 - (3) Press (OFF)

Check Status

Press (\bullet) and select *Settings* \rightarrow *Call* settings → Voice call or Video call → Diverts → Check status

Voice Mail

Forward an incoming Voice Call to Voice Mail Center or a specified number based on preset forwarding conditions (�P.16-3).

Note

- Voice Mail and Call Forwarding cannot be active at the same time.
- · Activating Voice Mail cancels Call Forwarding.
- Voice Mail is not available when All outgoing calls or All incoming calls in Call Barring is active (Call Barring takes priority over Voice Mail).

Activating Voice Mail

- Press and select $Settings \rightarrow Call$ $settings \rightarrow Voice\ mail$
- 2 Select No reply or Always
- **3** For *No reply*, highlight Waiting time field and set a time
- 4 Press (ON)

Tip

When Voice Mail (No reply) is active
 While 707SC II rings/vibrates, answer a call or press Y?
 (Busy) to forward it.

Canceling Voice Mail

Cancel all Voice mail services at once.

Press \bullet and select $Settings \rightarrow Call$ settings \rightarrow Voice mail \rightarrow Cancel all

Tip

- To cancel Voice Mail by forwarding condition
 - (1) Press (\bullet) and select *Settings* \rightarrow *Call settings* \rightarrow Voice mail
 - (2) Select No reply or Always
 - (3) Press (OFF)

Checking Settings

Press \bullet and select $Settings \rightarrow Call$ settings → Voice mail → Check status

Listening to Messages

When a caller saves a Voice Mail message, a notification appears in Standby and appears at the top of Display.



While Message Appears

Connect to Voice Mail Center as described below and follow voice prompts.

Press

☐ (Dial)

To check message details

Press () while message appears

Tip

- To access caller message from overseas
 - 1) Press of the for 1+ seconds and enter +
 - **2** Enter 819066514170 and press
- To delete a message without listening to it Press \(\mathbf{Y}\)? (End).

While No Message Appears

Tenter 1416 and press

Incoming Call Notification

SMS is delivered for calls unanswered because 707SC $\rm II$ is outside service area or off, or if a caller saves a message at Voice Mail Center while the line is engaged.

Incoming Call Notification

1 Enter 1414 and press

To set via landline in Japan (toll free)

Dial 090-665-1414 and press

To set overseas (charges apply)

Press ☐ ☐ for 1+ seconds, enter +, enter 81-90-665-14191 and press ☐

2 Follow voice guidance

Call Waiting*

* A separate subscription is required to use this service. This service is only available for Voice Calls.

Activating or Canceling

- Press \bullet and select $Settings \rightarrow Call$ settings → Voice call → Call waiting
- Activate or cancel the service

To activate

Press () (ON)

To cancel

Press ☑ (OFF)

Receiving a Second Call

When there is an incoming call during a call, you are notified with a specific interrupt sound and display. Place the current call on hold and answer the second call.

- When you hear the interrupt sound, press () (Accept)
- **Select** *Hold active call* To end current call and answer second call Select End active call
- **?** Press **□** (Swap) to toggle the calls
- To end the current call, press 🕜 To end the call on hold $Options \rightarrow End \rightarrow Held\ call$

To end both calls at once

Options \rightarrow *End* \rightarrow *All calls*, or close 707SC \mathbb{I}

Tip

- When one party ends a call with another on hold Press (Retrieve) to talk to the waiting party.
- When Call Transfer service or Voice Mail service is active

When the second call is not answered, it is forwarded to a forwarding destination or Voice Mail Center. When the forwarding condition is set to *Always*, the Call Waiting service is not available.

Conference Call*

* A separate subscription is required to use this service.

Talk with a maximum of six parties simultaneously.

New Call

When a new call is connected, first party is placed on hold.

During a call, select Options → New call and enter number

To use Phonebook

- 1) Press (Search) and select Phonebook
- ② Highlight the phone number and press
 - (Select)
- 2 Press (Call)

Engaged Conference Call Operations

- Call another party during a call (**P.16-9**)
- Press ☒ (Swap) to switch connected calls

Tip

To end the call on hold

During a call, select $Options \rightarrow End \rightarrow Held \ call$

To end all calls

During a call, select $Options \rightarrow End \rightarrow All \ calls$, or close 707SC Ⅱ

 When the connected party ends the call while using Conference Call service

A party on hold remains on-hold state. Switch to the on-hold party to talk.

Join

- During a call, initiate a call to another party (**○**P.16-9)
- \triangleright Select *Options* \rightarrow *Join*

Tip

To talk with only one person

During a call, select $Options \rightarrow Split$ and select a caller to talk to

To end the call for a specific caller

During a call, select $Options \rightarrow End \rightarrow Select$ participant, check callers to end and press (End)

To end the all calls

During a call, press

 When one party ends the call during Conference Call Continue talking with remaining parties.

Call Barring

Bar outgoing/incoming Voice/Video Calls or SMS by the conditions listed below.

Item		Description
Restrict outgoing calls	All outgoing calls	Deactivates initiating calls and SMS sending, except emergency calls.
	Outgoing Intl calls	Deactivates initiating international calls and SMS sending within your current location.
	Intl except home	Deactivates initiating international calls and SMS sending within your current location or except Japan.
Restrict incoming calls	All incoming calls	Deactivates reception of all calls and SMS receiving.
	Incoming when roaming	Deactivates reception of all calls and SMS receiving while outside of Japan.

Setting restrictions requires Network Password (The 4-digit number dedicated to Outgoing/incoming service specified at the subscription).

Note

- If incorrect Network Password is entered three consecutive times, Call Barring service is disabled. In this case, change Network Password and Center Access code. For more information, contact Customer Service (◆P.25-25).
- If Call Forwarding or Voice Mail is active, *All outgoing calls* or *All incoming calls* cannot be set.

Tip

If a call is attempted while restrictions are on
 A message appears indicating that outgoing call restriction is active. The message may appear after a while depending on service area.

Restrict Outgoing/Incoming Calls

Restrict outgoing calls and/or Restrict incoming calls for each type of call (Voice/Video Calls, SMS)/transmission.

- Press and select Settings \rightarrow Call settings \rightarrow Call barring
- 2 Select *Voice call, Video call,* or *SMS* and select a restriction type
- **3** Enter Network Password

4 Set or cancel call barring

To set

Press (ON)

To cancel

Press 🖾 (OFF)

Tip

To check settings

Perform Steps 1 and 2. After checking the settings, press Clear to return to the previous window.

Cancel All

Canceling outgoing and incoming call is available for each of call types (Voice and Video Calls, SMS)/transmission.

- Press and select Settings → Call settings → Call barring
- 2 Select *Voice call, Video call,* or *SMS*→ *Cancel all*

? Enter Network Password and press ●



Changing Network Password

- Press \bullet and select *Settings* \rightarrow *Call* $settings \rightarrow Call \ barring \rightarrow Change$ password
- Enter current Network Password in *Old* field and new Network Password (4 digits) in *New* and *Cnf* (Confirm) field, then press (Confirm)

Caller ID

Show or hide your own phone number when calling from 707SC II.

Show My Number

Default Setting = By network

- Press (\bullet) and select $Settings \rightarrow Call$ settings \rightarrow All calls \rightarrow Show my number
- Select setting and press (Save)

Tip

• When set to By network

Automatically set to Show/Hide your number by current network status.

Adding 186 or 184

Use 186 (Show ID) or 184 (Hide ID) prefixes to show or hide your number when calling from 707SC ${\rm II}$, regardless of the *Show my number* setting.

Enter Show ID or Hide ID Prefix

To show Caller ID

Press 1 5 8 tuv 6 mno

To hide Caller ID

Press 1 \$\display \B tuv 4 ghi

- **Enter phone number**
- Press 🔼

To initiate a Video Call

Options → *Video call*

Messaging

Getting Started

S! Mail

Use this service to send/receive long text messages, images, videos, other files, and sounds between S! Mail compatible SoftBank handsets and PCs via e-mail.

A separate subscription is required to use S! Mail and receive e-mail.

SMS

Use this service to send/receive short text messages between SMS-compatible SoftBank handsets using phone numbers.

Tip

· Retry function

If the other party's handset cannot receive a message because the power turned off or out-of-range, 707SC II keeps the message saved on Mail Server; then send to the other party after signal reception recovers stable.

Checking for New Messages

When a message is received in Standby mode, reception notification appears. The number of received messages, senders and reception dates/times appear.



Reception Notification Window

Press ☑ (View)



Received Message List

When multiple messages appear

Use to select the tab and press (View)

2 Select a new received message



SMS Window



S! Mail Text

Tip

- When a message is received (out of Standby)
 or appears at top of Display. When 707SC II is closed,
 appears on Sub Display (◆P.1-8, 1-10). The icon does not appear with Sub LCD light (◆P.8-8) set to Off.
- Received message count
 When there are unread messages, the total number of new and unread messages appears.

Sender information

A phone number or mail address appears. When the sender has been saved in Phonebook, you will see the name saved in Phonebook. When an incoming image has been saved in Phonebook or an incoming image has been set for the group, the image appears at the same time. While Secret Mode is set to *Hide* and Phonebook Secret Mode is set to *On* for message receiver/sender information; sender's name/image does not appear.

➡ SMS Operations

In SMS window, press Side Keys to enlarge/reduce text font size. Alternatively, press or for 1+ seconds to auto scroll. To stop auto scroll, press any key. Press or to adjust the scroll speed.

⊕ 3D Pictogram (�P.20-5)

If *3D pictogram* is set to other than *OFF*, when you check an incoming/unread message (Except S! Mail that is set for Slide Show or with an attachment), the message text appears in 3D Pictogram. After 3D Pictogram display ends or (Stop) is pressed, Message window appears. Perform various operations after Message window appears.

Retrieving Complete Messages

When *Home network* (♠P.20-3) or *Roaming* (♠P.20-3) is set to *Manual*, S! Mail is temporarily stored on Mail Server; part of the received message is sent to 707SC II as a reception notification. Retrieve complete messages from Mail Server.

Press ■ and select *Received msgs*

2 Select a message with the rest of it



Notification Details

- 3 Press (Retrieve)
- 4 Select complete message



Message Window

Tip

- Received Message list window indicators
 - 🔈: Unread reception notification (Priority: High)
 - : Unread reception notification (Priority: Standard)
 - .: Unread reception notification (Priority: Low)
 - : Read reception notification (Priority: High)
 - Read reception notification (Priority: Standard)
 - 🕾: Read reception notification (Priority: Low)
- To retrieve complete messages from Message list window (\$\infty\$P.19-2)

Message window for S! Mail with an attachment

The first page shows the file name for the attachment and the second and subsequent pages show the message. Use \bigcirc to read the message or select $Options \rightarrow Play$ to start Slide Show.

Select $Options \rightarrow Play$ to play the slide. During playing, press \bigcirc (Pause)/ \boxtimes (Stop) to pause/stop it. Use \bigcirc to manually select pages.

Message window for S! Mail with an inserted file (♠P.17-16, 17-18)

If an image is inserted, the image appears with the message. If sound is inserted, select $Options \rightarrow Play$ to play sound. If Slide Show is set, sound is played when the page with an inserted sound appears.

If video is inserted, select $Options \rightarrow Play$ and press (Video) to play video.

If Slide Show is set, *Video* appears at the lower right and pressing **Y**? (Video) plays sound when the page with video inserted appears.

appears on a page with an inserted file that you cannot view/play.

Select *Options* → *Download content key* to view/play the file.

Using Received Messages

Send a message directly to the sender.

1 Press ⊠ (Reply) on the Message window

Create a message and press (Send)



Tip

. Subject display of S! Mail for replies The subject of a replied S! Mail is prefixed with "RE:" automatically.

Creating Messages

Two types of messages are available on 707SC II: S! Mail and SMS. The number of characters that can be sent and entry items are different between these types (Shown below).

		S! Mail	SMS
Number of characters that can be sent		Approximately 10,000 single-byte/ double-byte characters Approximately 10,000 characters in one slide (Up to 300KB ³)	Maximum of 70 single- byte/double- byte, Katakana characters Maximum of 160 single-byte alphanumerics (Up to 140 bytes)
Entry items	Address	Yes	Yes
	Subject	Yes	No
	Attachment	Yes	No
	Message	Yes	Yes

Yes: Available

No: Not available


- 1 The number of characters that can be sent varies by the attachment size, etc.
- 2 Set a maximum of 20 slides in one message.
- 3 Total size of all kinds of messages (Including address, subject, text, and attachments).

□ Using Mail Art

In S! Mail window, view text/images consecutively like slides or with a background color (\$\infty P.17-12, 17-14, 17-18).

Procedures

Create messages in the flow shown below. Enter items other than *Destination* required.

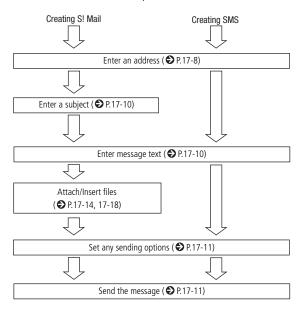

Tip

To set sending options beforehand (�P.20-2, 20-5)

☐ Automatic Change of Message Type

When message creation is started, the message type is set to SMS; it automatically changes to S! Mail when one of the following occurs:

- Entering mail address as a destination
- Entering a subject
- Entering characters exceeding the number of characters that can be sent by SMS
- Inserting files on Slide Show page
- Attaching or inserting a file
- Changing the address type to *Cc* or *Bcc*


When the message is modified to allow it to be sent as SMS, for example, by deleting an attached or inserted file or a subject, the message type automatically changes to SMS. Depending on message creation conditions, it may not automatically change type. If the mail type is not changed automatically, change it manually (�P.17-11).

9

Address

Enter a phone number or mail address for S! Mail or a phone number for SMS as a message address. Up to twenty addresses can be entered.

Press and select Create msg

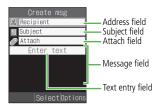

Message Creation Window

Enter an address

To select an address from Phonebook

- 1 Select Address field and select From Phonebook
- ② Search Phonebook and select an entry (◆P.5-9)
- (3) Highlight a phone number or mail address and press (Select)

To enter an address directly

- 1 Select Address field and select *Enter Recipient*
- **2** Enter phone number or mail address

To select an address from sent records Select Address field and select the record

To select an address from a Phonebook Category

- 1) Select Address field and select *From Category*
- Select a Category, with/without Address selection window, highlight an address to enter and press
 (Select)

3 To enter another address

To enter an address directly

- (1) Select Address field
- **2** Select Entry field and select *Enter Recipient*
- ③Enter phone number or mail address and press (Done)

To select an address from Phonebook

- ① *Options* \rightarrow *Add recipients* \rightarrow *Phonebook*
- (2) Search and select Phonebook
- (3) Highlight a phone number or mail address and press (Select)

To select an address from a Phonebook Category

- \bigcirc Options \rightarrow Add recipients \rightarrow Category
- ② Select a Category; with/without Address selection window, highlight an Address to enter and press (Select)

Tip

- To create a message using a template (♠P.17-14)
- To confirm the entered address
 In Step 3, select Options → Recipient list
- To add an address after confirming entered address
 - ① In Step 3, select *Options* → *View recipient list*
 - (2) Select Entry field and perform operation in the same way as Step 2
 - (3) Press (Done)
- To send a message after confirming entered address
 - (1) In Step 3, select *Options* \rightarrow *View recipient list*
 - (2) Options → Send
- To change the address type to To, Cc, or Bcc
 - ① In Step 3, select *Options* → *View recipient list*
 - ② Options, highlight an address → Change recipients → To, Cc, or Bcc
- To delete an address
 - ① In Step 3, select *Options* → *view recipient list*
 - ② *Options*, highlight an address \rightarrow *Remove*

- To copy, cut, or paste characters (�P.4-12)
- Viewing Address field

When multiple addresses have been saved, and the number of addresses appear in Address field on Message creation window.

Note

- If shared memory (◆P.25-15) is less than 464KB, you cannot create a message. To create a message, delete messages.
- If shared memory (◆P.25-15) becomes low while in a message creation, you may not be able to save the message in Drafts.
- A message created on 707SCII may not appear the same way on the other party's phone.
- Message sent with Subject/Text in Hangul, may appear as spaces or be deleted on the other party's phone.

Subject

- In Message creation window, select Subject field
- 2 Enter a subject

Tip

- To copy, cut, or paste characters (�P.4-12)
- To set/release the prediction entry function (♠P.4-13)

Message

In Message creation window, select Message field

When Slide Show is set (♠P.17-12) Select Text entry field

2 Enter the message

Tip

- To copy, cut, or paste characters (♠P.4-12)
- To use an SMS template or Phonebook entry (②P.4-10)
- To change the font size of characters being entered In Step 2, select *Options* → *Font Size* → *Small*, *Standard*, or *Large*
- To set/release the prediction entry function (P.4-13)
- To set Slide Show (◆P.17-12)
- To insert image files, etc. in a Message field (◆P.17-15, 17-18)
- To view the text in 3D Pictogram
 In Message creation window, highlight Message field, select
 Options → 3D Pict. Disp.

Sending a Message

In Message creation window, press (Send)


Tip

- To set sending settings for a message being created
 - ① In Message creation window, select *Options* → Sending options
 - ② Select an item and set it (◆ P.20-2, 20-5)
 - ③ Press ☒ (Apply) or ☒ (Save)
- To change the message type
 - ① In Message creation window, highlight all fields except Address field
 - ② Options → Change to S! Mail or Change to SMS → Yes

Slide Show

Open S! Mail window in Slide Show. Text messages, images, movies, and sounds can be inserted on each page of Slide Show. Set a maximum of 20 slide pages in one message.

In Message creation window, select $Options \rightarrow Insert \rightarrow Text$

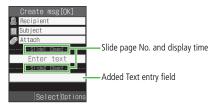

Message Creation Window

- 2 Select added Text entry field and enter a message
- 3 To add a Text entry field for Slide Show, perform Steps 1 and 2

Tip

- To insert *Image, Sound*, or *Video*Perform operations in "Inserting a File" (♠P.17-16).
 Alternatively, other files can be inserted in the same page.
 But image/video or sound/video cannot be displayed in the same page.
- To delete a Text entry field
 - 1 In Message creation window, highlight Text entry field
 - (2) $Options \rightarrow Remove \rightarrow Yes$
- To preview Slide Show before sending
 - ① In Message creation window, highlight a field other than Address field
 - ② Options → Preview
 - \bigcirc Options \rightarrow Play

Changing the Style of Message Field

Set the font color, font style, interval time for displaying Slide Show, background color, etc.

In Message creation window, highlight Message field

2 Set options as required

To set background color

- \bigcirc Options \rightarrow Edit style
- ② Highlight *Select page* and use ① to display *All pages*
- (3) Highlight *Background colour* and use (5) to highlight a color

Set the page display

- (1) Highlight a Character entry field to set
- 2 Options \rightarrow Edit style
- (3) Highlight Slide interval and enter a time

Set the font color

- \bigcirc Options \rightarrow Edit style
- (3) Highlight *Font colour* and use (5) to highlight a color

Set a font color for a single slide page

1 Highlight a Character entry field to set

- (2) Options \rightarrow Edit style
- (3) Highlight *Font colour* and use (5) to highlight a color

Set font size for all pages

- ① $Options \rightarrow Edit\ style$
- ② Highlight *Select page* and use ① to display *All pages*
- (3) Highlight *Font Size* and use () to display a size

To set font size for a single slide page

- 1) Highlight a Character entry field to set
- **2** Options \rightarrow Edit style
- ③ Highlight *Font Size* and use ① to display a size

To change the display order for text and images (Videos)

- ① *Options* \rightarrow *Edit style*
- (3) Highlight *Order item* and use (b) to display *Text-Top* or *Image* (*Video*)

3 Press (Save)

Tip

- To preview the style before sending
 - ① In Message creation window, highlight a field other than Address field
 - **②** *Options* → *Preview*
 - \bigcirc Options → Play

Note

• Edit style or Preview does not appear in SMS Options.

Templates

Create and send a message using S! Mail or SMS template.

- Press
 and select Templates → S! Mail templates or SMS templates
- 2 Highlight an S! Mail or SMS template

3 Select *Options* \rightarrow *Send*

4 Create a message and press **図** (Send)

Tip

- To use after viewing an S! Mail template
 - 1 Perform Steps 1 and 2
 - ② Options → View
 - **3** Options \rightarrow Play as required
 - **4** Options → Edit and send
- To register a template (�P.4-15, 18-19)

Attaching/Inserting Files

A file that can be attached/inserted to an S! Mail is limited in size to 294KB (except the message address, subject and message text size). Up to 20 files can be attached to one S! Mail.

Tip

To check the size of a message being created
 Select S! Mail as the Type of the message, the message size appears in the upper-right corner.

Note

- Note that some recipients may not be able to receive attachment or inserted files.
- Video files that cannot be sent by S! Mail (File size: over 294KB, Size: over 176 x 144, Quality: other than Economy, or etc.) are attached/inserted, the message indicating attaching/inserting failed appears.

Attaching/Inserting a File from Data Folder, etc. into Message Field

Attach images, video, and/or sounds saved in Data Folder to a message, as well as any contents saved in Phonebook and Calendar (converted as vCard format or vCalendar format). If you insert a file in Message field, display/play the file when you view the Message window.

Attaching a File

- In Message creation window, Select Attach field
- Attach file



Message Creation Window (File Attached)

To attach file

- (1) Select *Data Folder*
- (2) Select a file from Data Folder

To attach Phonebook data as vCard file

- 1) Select *Phonebook details*
- ② Search Phonebook and select an entry (◆P.5-9)
- (3) Press (Add)

To attach Calendar items as vCard file format

- 1) Select Calendar item
- (2) Select the items

Tip

To add a file

Perform Step 1 to 2 in "Attaching a file" (>P.17-15)

• To check an attachment

- ① In Message creation window, highlight a file in Attach field and select *Options* → *View attachment*
- (2) Select a file

· If you attach a file

File type indicator and file name appears in Attach field.

②: Image③: Sound③: vCalendar

a: vCard : File other than above

To replace a file

- ① In Message creation window, highlight a file in Attach field and select *Options* → *View attachment*
- (2) Highlight a file and select *Options* → *Replace*
- (3) Perform Step 2 in "Attaching a file" (P.17-15)

To delete a file

- ① In Message creation window, highlight a file in Attach field and select *Options* → *View attachment*
- ② Highlight a file and select Options → Remove → Selected

To delete all files

- ① In Message creation window, highlight a file in Attach field and select *Options* → *View attachment*
- **2** Options \rightarrow Remove \rightarrow All \rightarrow Yes

Inserting a File

In Message creation window, select Options → Insert

To insert a file with Slide Show set (�P.17-12)

- ①In Message creation window, highlight Text entry field to insert a file
- \bigcirc Options \rightarrow Insert

Select file to insert



Message Creation Window (File Inserted)

To insert an image

- 1) Select *Image*
- 2 Select an image from Data Folder

To insert sound

- (1) Select Sound
- (2) Select sound from Data Folder

To insert a video

- 1) Select Video
- (2) Select movie from Data Folder

Tip

To preview an inserted file

- (1) Options → Preview
- (2) Options → Play

· If you insert a file

In Message creation window, the icon indicating the file type, file name, and file size is displayed in Text entry field. If you inserted an image with no restrictions on its being displayed, the image will be shown in reduced size instead of the icon.

- : Images that cannot be displayed because of Content Key has not been purchased or otherwise obtained
- : Sound

To replace a file

- In Message creation window, highlight a file in Text entry field
- **2** Options → Replace
- (3) Select a file

To delete a file

- In Message creation window, highlight a file in Text entry field
- 2 Options \rightarrow Remove \rightarrow Yes

• To insert a file where another is inserted

A new Slide Show page is added automatically and the file is inserted. In case of an image file and sound file, both can be inserted on the same page.

Creating & Inserting a File

While creating a message, create a file and insert it. When Message window is opened, inserted file appears/plays.

In Message creation window, select

Options → Create & Insert

To insert a file with Slide Show is set

- (1) In Message creation window, highlight Text entry field where a file to be inserted
- ② Options → Create & Insert

2 Select a creation method and insert the file

To capture a photograph

- 1) Select *Take picture*
- 2 Press (Take)
- 3 Press (Add)

To record video

- 1 Select Record video
- 2 Press (Record)
- 3 Press (Save)
- 4 Options \rightarrow Add to message

To record sound

- 1 Select *Record sound*
- 2 Press (Record)
- 3 Press 🖾 (Stop)
- 4 Options \rightarrow Add to message

Tip

If you insert a file

707SC II works the same way as the file inserted from Data Folder to Text entry field (◆P.17-17).

• To insert a file where another file has already been inserted

707SC II works the same way as the file inserted from Data Folder to Text entry field (◆P.17-17).

- To replace or delete a file

 Perform operations the same way as the file inserted from

 Data Folder to Text entry field (�P.17-17).
- Operations activated before and after capturing a still image (\$P.7-6)
- Operations activated before and after recording video (♠P.7-11)
- Operations activated before and after recording sound (€)P.14-16)

Saving Created Messages

Save to Drafts

When message creation is interrupted before completion, etc., save the message being created to Drafts.

In Message creation window, select

Options → Save to Drafts

Tip

• When Clear / 6 / is pressed on Message creation window

When Clear, of, or is pressed after entering something or attaching or inserting a file, a message appears asking whether to finish creating the message. Select *Yes* to save the created message to Drafts.

Note

 Save to Drafts appears in Options after address, subject or text has been entered or a file is attached/ inserted.

Save as a Template

By saving a message with fixed contents, etc. as an S! Mail templates, new S! Mail can be easily created and sent.

- In Message creation window, highlight Attach or Text entry field
- **2** Select *Options* \rightarrow *Save as template*

Note

 Saved as template appears in Options only when a subject is entered or the message is longer than SMS, or when a file is inserted.

Messaging Folders

Viewing Messages

Five mailboxes are created on 707SC II.

Mailbox	Message type
Received msgs	Received messages.
Drafts	Message drafts saved before completion.
Unsent msgs	Messages unsent because of failure or cancellation, or waiting to be sent.
Sent msgs	Messages already sent.
Templates	S! Mail or SMS saved as templates.

Tip

- To check message memory status
 - 1 Press 🖾
 - **2** Select *Memory status*
 - 3 Select SMS, S! Mail (By count), or S! Mail (By size)
- To create a personal folder in Received msgs (P.18-15)

Note

 When adding a new SMS to Drafts, Unsent msgs, or Sent msgs cause the maximum number of allowed message to be exceeded, the oldest SMS is deleted automatically.

Message Lists

From list of *Received msgs* or *Unsent msgs*, view the messages.

Press ⊠

2 Select Received msgs or Unsent msgs



Received Message List

From a personal folder in Received msgs

Select a folder; then Phone Password entry window appears, enter Phone Password and press (Confirm)


3 Select a message

Tip

- In Message window, press (** "AB") or (# CF)
 Switch between previous and next window.
- When pressing Side Keys in SMS window Press Side Key to enlarge font size by two levels; press Side Key to reduce font size by two levels
- To view a sent message
 - 1 In Step 2, select Sent msgs
 - ② Highlight a message, select Options → View
- To view S! Mail details
 In Step 3, highlight a message, select Options → Details

Message List Window

The following information appears in lists for each Messaging folder.

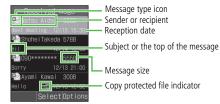

Received Message List

Tip

Received Message Indicators

■: Unread S! Mail (Priority: High)

□: Unread S! Mail (Priority: Standard)

: Unread S! Mail (Priority: Low)

: Unread S! Mail (Priority: High; Video and/or sound inserted)

: Unread S! Mail (Priority: Standard; Video and/or sound inserted)

: Unread S! Mail (Priority: Low; Video and/or sound inserted)

▶: Read S! Mail (Priority: High)▶: Read S! Mail (Priority: Standard)

: Read S! Mail (Priority: Low)

:: Read S! Mail (Priority: High; Video and/or sound inserted)

: Read S! Mail (Priority: Standard; Video and/or sound inserted)

Read S! Mail (Priority: Low; Video and/or sound inserted)

№: Unread reception notification (Priority: High)

■: Unread reception notification (Priority: Standard)

🕾: Unread reception notification (Priority: Low)

🛌: Read reception notification (Priority: High)

🗈: Read reception notification (Priority: Standard)

Read reception notification (Priority: Low)

: Read SMS (saved in USIM Card)

🚁 : Unread S! Mail Delivery Report

: Read S! Mail Delivery Report

🖦: Unread SMS Delivery Report

📸: Read SMS Delivery Report

: Receiving S! Mail

• Draft Message Indicators

.★: S! Mail (Priority: High)

🖳: S! Mail (Priority: Standard)

🔛 : S! Mail (Priority: Low)

:: S! Mail (Priority: High; Video and/or sound inserted)

: S! Mail (Priority: Standard; Video and/or sound inserted)

: S! Mail (Priority: Low; Video and/or sound inserted)

• Unsent Message Indicators

😹: S! Mail (Video and/or sound inserted)

: Sending S! Mail

Sent Message Indicators

≅: S! Mail

: S! Mail (Video and/or sound inserted)

Copy Protected file Indicators

Attached/inserted Copy protected file indicators

- ➡: Transferable, Content Key has already been purchased
- : Transferable, Content Key has not been purchased or otherwise obtained
- Nontransferable, Content Key has already been purchased
- : Nontransferable, Content Key has not been purchased or otherwise obtained

While Secret Mode is set to Hide

Phonebook Secret Mode is set to *On* for message receiver/ sender information; only the number or email addresses appear (instead of the name).

Message Window Operations

Saving to Phonebook

Save phone number/mail address of the sender/recipient to Phonebook while viewing Message window (Received)/ Reception notification window.

- In Message window, select $Options \rightarrow Add$ to $Phonebook \rightarrow Phone$ or USIM
- **?** Select *New* or *Update*

To save as a new entry

Select New

To save to an existing entry

- 1 Select *Update*
- ② Search Phonebook and select an entry (◆P.5-9)
- **3** Select an icon
- **4** Save other items (⊕P.5-4)

5 Press **図** (Save)

Note

 When an underlined phone number, mail address or URL is highlighted in a message window, Add to Phonebook does not appear in Options.

Saving as an S! Mail Template

Save received or sent S! Mail as an S! Mail template.

In Message window, select *Options* → *Save as S! Mail template*

Tip

- If a message appears indicating name duplication
 - 1 Press ()
 - 2 Press () (Select) and enter the name
 - 3 Press (Save)
- . When a name entry window has opened
 - 1) Press (Select) and enter the name
 - 2 Press (Save)

Note

While viewing S! Mail sent via PC, etc., Save as S!
 Mail template does not appear in Options.

Message Window Options

Item	Description
Play	Play Slide Show, inserted video, or sound (�P.17-5).
Retrieve	Receive subsequent part of the notified message.
Reply	Reply to the sender of the reception notification.
Reply to all	Send reply to all entered S! Mail recipients.
Forward	Forward received message.
Download content key	Purchase or acquire Content Key.
Delete	Delete displayed messages.
Save as S! Mail template	Add displayed S! Mail as an S! Mail template (�P.18-6).
Save items	Save files attached or inserted in an S! Mail to Data Folder (◆P.18-14).

Item	Description
Add to Phonebook	Save number or mail address to Phonebook or USIM Card Phonebook (�P.18-5).
Details	Confirm S! Mail size, etc.
3D Pict. Disp.	Display a message in 3D Pictogram (◆P.20-5).
Move to Phone/ USIM	Move an SMS received or being sent to handset or USIM Card (� ₱.18-18).

Replying to a Message

Press ■ and select *Received msgs*

2 Highlight message, select *Options* → *Reply*

To reply to all recipients entered in the S! Mail Highlight message, select $Options \rightarrow Reply \ to \ all$

3 Create a message and press
☑ (Send)

Tip

- Reply subject prefix
 - "RE:" automatically appears before S! Mail Reply subject.
- When Reply with text is On

Received message text automatically appears two lines below Reply text in Text entry field.

Not

 If shared memory (◆P.25-15) is less than 464KB, you cannot reply to a message. To reply to the message, delete messages.

Forwarding a Message

Forward a received or sent message to another recipient.

- Press ☑ and select *Received msgs* or Sent msgs
- 2 Highlight message, select *Options* → *Forward*
- Greate a message and press
 ☐ (Send)

Tip

The subject of forwarded messages
 The subject of a forwarded S! Mail is prefixed with "FW:" automatically.

Note

 If shared memory (♠P.25-15) is less than 464KB, you cannot forward a message. To forward the message, delete messages.

Sending from Drafts

- **Press** and select *Drafts*
- Highlight the message and press (Send)

When Send does not appear

- 1 Press (Edit)
- **②** Enter address and press **☒** (Send)

Sending from Unsent Messages

Send messages directly from Unsent Messages.

Press ■ and select *Unsent msgs*

Highlight the message and press (Send)

To send after modifying

- 1 Highlight the message, select $Options \rightarrow Edit$
- **②** Edit the message and press **☒** (Send)

Deleting a Message

Deleting Specified Message(s)

Delete multiple specified messages. Alternatively, specify and delete saved templates.

Press ⊠

> Select a mailbox

To delete a saved S! Mail or SMS templates
Select *Templates* → S! Mail templates or SMS
templates

3 Delete a Message or Template

To delete one message or template

- 1 Highlight the message or template
- (2) Options \rightarrow Delete \rightarrow Selected \rightarrow Yes

To delete multiple messages or templates

- (1) Options \rightarrow Delete \rightarrow Multiple
- (2) Check a message or template to delete
- ③ Repeat ② to check all of the target messages or templates
- ④ Press ☑ (Delete) and proceed to ⑥ when all are not checked
- **5** Enter Phone Password and press **(Confirm)**
- **(6**) Select *Yes*

- To view the contents of multiple messages or S! Mail templates while selecting them
 - (1) Repeat Steps 1 and 2
 - **2** Options \rightarrow Delete \rightarrow Multiple
 - ③ Highlight message or S! Mail template, select Options → View
- To collectively select/deselect multiple messages or S! Mail templates
 - 1 Repeat Steps 1 and 2
 - **2** Options \rightarrow Delete \rightarrow Multiple
 - (3) Options → Mark all or Unmark all
- To collectively select/deselect multiple SMS templates
 - 1 Perform Steps 1 and 2
 - **2** Options \rightarrow Delete \rightarrow Multiple
 - (3) Press **Y**? (Mark all) or **Y**? (Unmark all)

Note

 While highlighting an S! Mail template designated as default, Delete does not appear in Options.

- Designating & Deleting a Mailbox
 - Press ⊠ to select Settings → Delete
 all
- Check a mailbox to delete
- 3 Repeat Step 2 to check all target mailboxes
- 4 Press

 ☐ (Delete)
- **5** Enter Phone Password, and press (Confirm) to select *Yes*

Deleting All Messages from a Mailbox

Delete saved templates all at once.

- **Press** ⊠
- 2 Select a mailbox
 To delete an S! Mail or SMS template

Select *Templates* \rightarrow *S! Mail templates* or *SMS templates*

- **3** Select *Options* \rightarrow *Delete* \rightarrow *All*
- 4 Enter Phone Password, press
 (Confirm) and select Yes

Note

- Personal folders cannot be deleted by this operation. To delete Personal folders, select Messaging → Settings → Delete all
- You cannot delete the S! Mail template designated as the default.

Linked Information

If Message window or Notification details window contains an underlined number, mail address, or URL; save it to Phonebook or use it to place a call, send messages, save bookmark, or access the site.

As linked information, following number of characters can be recognized for each S! Mail Font size setting:

Maximum of 45 lines (1,035 characters) for *Standard*, 54 lines (1,026 characters) for *Large*, and 41 lines (1,025 characters) for *Small*.

Saving to Phonebook

In Message window, select a phone number, mail address, or URL and select Add to phonebook → Phone or USIM

2 Create a new entry or update an existing one

To save as a new entry

Select New

To save to an existing entry

- 1) Select *Update*
- ② Search Phonebook and select an entry (�P.5-9)
- **?** Select an icon
- **4** Save other items (⊕P.5-4)
- **5** Press **⊠** (Save)

Note

• If URL is selected, *USIM* is unselectable in Step 1.

Saving as a Bookmark

- In Message window, select a URL and select *Bookmark*
- Press (Select) to enter a subject and press 🖾 (Save)
- Initiating a Call, Sending a Message, or Accessing the Web

Use phone number/mail address/URL information in Message window or Notification details window.

In Message window, follow steps below

To initiate a Voice Call

Select a phone number and select *Voice call*

To initiate a Video Call

Select a phone number and select Video call

To send a message

- ① Select a phone number or mail address and select Create msg
- ② Create a message and press ☒ (Send)

To access the Web

Select URL and select Go to URL

Tip

Operations in Notification details window
 Phone number/mail address/URL information except in From (other party's phone number) can be used.

Using an Attachment

Viewing an Attachment

Open images/play sounds attached to S! Mail. For vCard/vCalendar, open Details to see contents.

Select a file and select *Open file*

Tip

- To save a file in Data Folder directly
 In Message window, select a file → Save items
- To save vCard/vCalendar to Phonebook/Calendar directly

In Message window, select a file \rightarrow Register to Phonebook or Register to Calendar

- To register vCard/vCalendar to Phonebook/Calendar after viewing
 - 1 Perform Step 1
 - 2 Press (Register)

- When a file requiring Content Key is attached
 After Step 1, a message appears and file does not open. To view the file, select Save items in Step 1 to save and purchase/obtain Content Key from Data Folder (P.11-13).
- When an attachment has a restriction (one play only)
 After Step 1, one play only message appears.

Saving Attachments to Data Folder

Save S! Mail attachment/inserted files to 707SC ${\rm I\hspace{-.1em}I}$.

- In Message window, select *Options* → Save items
- 2 Select file(s)

To select and save one file

- 1 Highlight a file
- ② Press \bullet (Select) or select *Options* \rightarrow *Selected*

To select and save multiple files

- \bigcirc Options \rightarrow Multiple
- (2) Check the files to save
- **3** Repeat **2** to check all target files
- 4 Press (Save)

To save all files

 $Options \rightarrow All$

Tip

- To select or deselect multiple files at once
 - 1 In Step 2, select $Options \rightarrow Multiple$
 - 2 Press Y (Mark all) or Y (Unmark all)
- If message appears indicating name already exists
 - 1 Press ()
 - 2 Press () (Select) and change the file name
 - ③ Press ☑ (Save)

Note

 When a file is highlighted in Message window, Save items does not appear in Options.

Managing Folders

Create personal folders in Received msgs; organize messages by message type. Active Security for personal folders.

Create Folder

- **Press** and select *Received msgs*
- **2** Select *Options* → *Create folder*
- 3 Enter a name

Edit Folder

Change personal folder names.

- **Press** and select *Received msgs*
- **?** Select *Options* \rightarrow *Edit folder*
- **?** Enter a name

Security ON/OFF

Activate Security to require Phone Password entry to open a personal folder.

- **Press ■** and select *Received msgs*
- Prince P
- 3 Enter Phone Password and press (Confirm), then select *Yes*

Tip

Secure Folders

appears.

When a Secure Folders is selected
 Select personal folders; Phone Password entry window appears. Enter Phone Password and press (appears); Message list window in the personal folder appears.

Moving Messages

- Press ☑ and select *Received msgs*To move messages from a personal folder

 Select that folder
- **2** Highlight message, select *Options* → *Move this*
- 3 Select the destination folder
 To return messages to Received msgs
 Select Received msgs

Delete Folder

- **Press** and select *Received msgs*
- **2** Highlight the personal folder, select *Options* \rightarrow *Delete folder* \rightarrow *Yes*

To open a secure folderEnter Phone Password and press (Confirm)

3 Select Yes

🎜 From Message List

- Saving to Phonebook
 - Press ☑ and select *Received msgs*, *Unsent msgs* or *Sent msgs*
 - 2 Highlight message, select *Options* → *Add to Phonebook*

- 3 Select a phone number or mail address and select *Phone* or *USIM*
- 4 Select saving method to create a new entry or update an existing entry

To save as a new entry

Select New

To save to an existing entry

- 1 Select *Update*
- ② Search Phonebook and select an entry (◆P.5-9)
- **5** Select an icon
- 6 Enter additional items as required (⊕P.5-4)
- **7** Press ⊠ (Save)

Sorting Messages

Available sorting types vary by Mailbox/Message list.

- In Message list window, select
 Options → Sort by
- Select an item

To sort in descending order of date

Select *Date*

To sort by sender

Select Sender

To sort by recipient

Select Recipient

To view read and unread messages separately

Select Unread to read or Read to unread

To view messages separately by type

Select *Message type*

To sort by subject

Select Subject

To sort in descending order of message size Select Size

Tip

- Listing order when selecting Message type
 SMS → S! Mail (Including message notification) → SMS saved in USIM Card.
- Sender, Recipient, or Subject list order
 Listed in the order of single-byte symbol → single-byte
 number → single-byte alphabet → single-byte Katakana →
 double-byte symbol → double-byte Hiragana → double byte Katakana → Kanji → double-byte number → double byte alphabet. But if Subject is selected, messages with no
 subject are listed at the top.

Move to Phone/Move to USIM

Move received SMS or sent SMS. Save up to ten messages to USIM Card.

- Press ☑ and select *Received msgs* or Sent msgs
- **2** Move messages

To move from USIM Card to 707SC II

- 1 Highlight an SMS saved on USIM Card
- **2** Options \rightarrow Move to phone

To move from 707SC II to USIM Card

- 1 Highlight an SMS saved in USIM Card
- **②** Options → Move to USIM

- Message List SMS Indicators

 - : Read SMS (USIM Card)

 - : Sent SMS (USIM Card)
- When moving received SMS from personal folders to USIM Card

A confirmation appears. Select *Yes* to complete the move.

Saving an S! Mail Template

For more information about saving an SMS template, see "SMS Templates" (�P.4-15).

- Press ☑ and select *Templates* → S! Mail templates
- **2** Select *Options* \rightarrow *Add new*

- 3 Select Subject field or Text entry field and enter a subject or message
- 4 Press ☒ (Save)

Tip

- To view an S! Mail template being created In Step 3, select *Options* → *Preview*
- To display and view an S! Mail template
 In Step 2, highlight S! Mail template, select *Options* → View
- To modify an S! Mail template
 - ① In Step 2, select a registered S! Mail template and perform modification operation
 - (2) Press (Save)
- To delete an S! Mail template

 Perform the same operation as for a message (◆P.18-9).
- To copy, cut, or paste characters (♠P.4-12)
- To use contents of an SMS template or Phonebook (♠P.4-10)

• To change font size

- ① In Step 3, select Text entry field, select $Options \rightarrow Font$ Size
- 2 Select any of *Small*, *Standard*, or *Large*
- To turn predictive entry on/off (♦ P.4-13)
- Setting Slide Show/inserting a file
 - ① In Step 3, select *Options* → *Insert* or *Create & Insert*
 - ② Perform setting, attaching, or inserting operation (⑤P.17-12, 17-16, 17-18)
- To view the text in 3D Pictogram
 In Step 3, highlight Text entry field, select *Options* → *3D Pict. Disp.*

Message List Options

Item	Description
Retrieve	Retrieve complete S! Mail from the Server.
Reply	Reply to the sender (P.18-7).
Reply to all	Send reply to all entered S! Mail recipients (�P.18-7).
Forward	Forward received message (P.18-8).

Item	Description
Move this	Move received mails to a personal folder (�P.18-16).
Create folder	Create a personal folder (◆P.18-15).
Edit folder	Change personal folder name (�P.18-15).
Security On/Off	With Security setting On , enter Phone Password to check mails in a personal folder (\bigcirc P.18-15).
Delete folder	Delete a personal folder (◆P.18-16).
View	Open sent messages or S! Mail templates (♠P.18-3, 18-19).
Edit	Edit unsent message (P.18-8).
Delete	Delete messages or templates (◆P.18-9, 18-11).
Move to phone/ Move to USIM	Move SMS between 707SC II and USIM Card (�P.18-18).
Sort by	Sort messages (�P.18-17).
Add to Phonebook	Save number or mail address to Phonebook or USIM Card Phonebook (�P.18-16).
Details	Check memory status in a personal folder or confirm S! Mail size, etc.

Item	Description
Cancel retrieving	Stop message retrieval from Mail Server.
Send	Send message using S! Mail template or SMS template (�P.17-14).
Add new	Save a new S! Mail template or SMS template (◆P.4-15, 18-19).

Server Mail

Message List

View Mail Server message list. Retrieve, forward, or delete messages.

Acquire Mail List

Press ■ and select *Server mail box*

2 Select Acquire Mail List

Tip

- To check Mail Server usage state
 - 1 Select Server mail volume in Step 2
 - ② Press (Update) and select *Yes* to update to the latest information

Download

- Press and select Server mail box
- **>** Select *Mail List*
- Highlight the message, select *Options*→ *Download*

Tip

• To receive all messages from Message list window In Step 2, select *Retrieve All Mail*

Delete

Press ■ and select *Server mail box*

> Select *Mail List*

? Delete unwanted messages

To delete one message

- 1 Highlight a message
- 2 Options \rightarrow Delete \rightarrow Selected \rightarrow Yes

To delete multiple messages

- \bigcirc Options \rightarrow Delete \rightarrow Multiple
- **2** Check a message to delete
- 3 Repeat 2 to check all target messages to delete
- 4 Press (Delete) and go to 6 if unmarking all
- **5** Enter Phone Password and press **(**Confirm)
- **6** Select *Yes*

To delete all messages

- \bigcirc Options \rightarrow Delete \rightarrow All
- **2** Enter Phone Password, press (Confirm) and select *Yes*

Tip

- To select/deselect multiple messages at once
 - 1 Perform Steps 1 and 2
 - **2** Options \rightarrow Delete \rightarrow Multiple
 - (3) Options → Mark all or Unmark all

Remote Forward

Forward a message from the Mail Server to another address. Contents except the address are sent without modification.

Press ■ and select *Server mail box*

> Select *Mail List*

3 Highlight message, select *Options* → *Remote Forward*

4 Enter an address

To directly enter an address

- 1 Select Entry field and select *Enter Recipient*
- **2** Enter a phone number or mail address

To enter an address using a log

Select Entry field and select a displayed log entry

To select an address from Phonebook

- 1) Select Entry field and select *From Phonebook*
- ② Search Phonebook and select an entry (◆P.5-9)
- ③ Highlight a phone number or mail address and press ☒ (Select)

To select an address via Phonebook Category

- 1) Select Entry field and select *From Category*
- Select a Category, with/without an Address selection window, highlight an address and press(Select)

5 Select *Options* \rightarrow *Send*

• Message subject

Forwarded message Subject is automatically prefixed with "FW:".

- To set other sending options for a message
 - (1) In Step 5, select $Options \rightarrow Sending options$
 - ② Select an item and perform operations to set (◆P.20-2)
 - ③ Press ☑ (Apply)
- To delete an address

In Step 5, highlight a recipient, select $Options \rightarrow Remove$

- To change address type to To, Cc, or Bcc
 - ① In Step 5, highlight a recipient, select *Options* → *Change recipients*
 - (2) Select any of To, Cc, or Bcc

Other Message Settings

Customizing Handset Address

Change your mail address (alphanumerics before @) used for sending and receiving S! Mail to/from PC, etc. The default account name consists of random alphanumerics.

- Press \square and select *Settings* \rightarrow S! Mail \rightarrow Mail Address setting
- **>** Follow onscreen instructions
- 🗷 S! Mail Settings
- **Sending Settings**

- Default Setting Priority: Normal Expiration: Maximum
 - Delivery: Immediately
 - Request delivery report: Unchecked

Set Sending options. Alternatively, set options for each S! Mail to send (♠P.17-11).

- Press \square and select *Settings* \rightarrow S! Mail \rightarrow Sending options
- Select an item and set

Message priority

- (1) Select *Priority*
- (2) Select a level and press (•)

Mail Server Retention Period (before expiry)

- (1) Select *Expiration*
- (2) Select an item and enter a time if you selected Custom time (Hour)
- (3) Press (•)

Mail Server Retention Period (before delivery)

- (1) Select *Delivery*
- (2) Select an item and press (•)

Delivery report request

Check Request delivery report

Press

(Save)

- When retention set in Expiration expires The S! Mail is deleted automatically from the Mail Server.
- When retention is set in *Delivery* When the specified time has elapsed, the S! Mail is sent from the Mail Server.
- When Request delivery report is checked When an S! Mail is sent from the Mail Server, a distribution report is sent to your handset.

Receiving Settings

Default Setting Home network: Auto download

■ Roaming network: Manual

Set receiving options.

Press \square and select *Settings* \rightarrow S! Mail \rightarrow Receiving options

Select a receiving method

To set the receiving method to use in Japan

- (1) Select *Home network*
- (2) Select an item and press ()

To set the receiving method while overseas

- **1**) Select *Roaming network*
- (2) Select an item and press (•)
- ? Press (Save)

Tip

• Home network and Roaming network Items Auto download: Receive automatically. Manual: Receive only reception notification.

Message Size

Default Setting = 300KB

Cancel outgoing messages exceeding specified size.

2 Select an item and press (Save)

Default Style

Set font color, font style, background color, and Slide Show time intervals. Alternatively, change display settings for each S! Mail sent (�P.17-12).

Press \square and select *Settings* \rightarrow *S! Mail* \rightarrow *Default style*

2 Set Options

Font color

- 1 Select *Font color*
- ② Use 🕥 to highlight a color and press 💽

To set a font size

- 1 Select Font Size
- Select an item and press

Background color

- 1 Select *Background color*
- ② Use ③ to highlight a color and press ④

Slide Show time intervals

- 1) Select Slide interval
- (2) Select an item, with *Custom time*, enter a time
- 3 Press
- **3** Press **⊠** (Save)

SMS Settings

- Default Setting Delivery report: Unchecked
 - Character support: Automatic

Set Sending options. Alternatively, set options for each SMS message (**♦** P.17-11).

Press \square and select $Settings \rightarrow SMS$

Set Options

Request a delivery report

Check *Delivery report*

Change character encoding

- (1) Select *Character support*
- (2) Select an item and press (•)
- Press ⊠ (Save)

Tip

• When Delivery report is checked

When an SMS is sent from the Mail Server, a delivery report is sent to your handset.

3D Pictogram Settings

- Default Setting Display type: OFF
 - Background: Pattern 1
 - Running Speed: Normal

Animate text, pictograms or emoticons in message text.

Activate/cancel 3D Pictogram; set background color/speed.

Press \square and select *Settings* \rightarrow 3D pictogram

20

Set Options

3D Pictogram

- (1) Select *Display type*
- ② Select an item and press (●) (Save)

Background & Font color

- (1) Select *Background*
- 2) Press (), select a pattern and press () (Save)

To set speed

- (1) Select *Running speed*
- (2) Select an item and press () (Save)

Tip

Display type Items

Always: Use 3D Pictogram when viewing every message. New mails only: Use 3D Pictogram only when viewing an unread message.

OFF: Not use 3D Pictogram.

 Mail attachments, such as slide shows, may not appear properly in 3D Pictogram.

Reply with text

Default Setting Off

Activate to include original message text in Reply.

- Press \square and select *Settings* \rightarrow *Reply* with text
- 2 Select an item and press (Save)

Tip

• Reply with text Items

On: Reply with text including received message text. *Off*: Reply with text not including received message text.



Getting Started

Web

Access Mobile Internet or Internet sites from 707SC $\rm II$. Browse sites or download image or sound files, etc. A separate subscription is required for Web service.

Accessing via Yahoo! Keitai Main Menu

Select Yahoo! Keitai main menu items to access various content.

Internet Accessing

Enter a URL and access pages.

SSL/TLS

Secure Sockets Layer (SSL) and Transport Layer Security (TLS) are encryption protocols for secure Internet transmissions of important/sensitive information (credit card numbers, etc.) and authentication. Confirm electronic certificates saved on 707SC II (�P.22-14, 23-4).

⊞ SSL/TLS Precautions

When a security notice appears, subscribers must decide for themselves whether or not to open the page. Opening secure pages constitutes agreement to the terms of usage. SOFTBANK MOBILE Corp., VeriSign Japan K.K., Betrusted Japan Co., Ltd., Entrust Japan Co., Ltd GeoTrust Japan Inc., RSA Security Inc. and SECOM Trust Systems Co., Ltd. are not liable for damages associated with SSL/TLS use.

Cache

Retrieved Mobile Internet pages are temporarily saved here. Cache remains even after a session ends or 707SC II is turned off. When full, oldest pages are automatically deleted to make room for new ones. When a saved page is opened again, it may open from Cache. For the latest version, reload the page (�P.22-13).

- To manually delete Cache contents (�P.23-4)
- When another USIM Card is inserted into 7075C II
 Cache contents are automatically deleted.
- When a page with an expiry date is saved Page is automatically deleted upon expiry.

🎜 Getting Online

Yahoo! Keitai Main Menu

Access Mobile Internet sites via Yahoo! Keitai main menu.

Press 🔀

> Select an item

Tip

When accessing Mobile Internet for the first time
 After Step 1, Time & date settings window appears; set time
 & date to display Information window.

Enter URL

- Press and select *Yahoo! Keitai* → *Enter URL*
- Select URL field and enter a URL
- **3** Press **△** (Go to)

Tip


- To save the entered URL as a bookmark
 - 1 In Step 2, check *Add bookmark*
 - (2) Select Title field and enter title
 - 3 Press (Go to)
- To access a page from the access history (◆P.22-11)

Page Window Operations

Operations on pages are as follows.

Scrolling

Scroll bar appears when page content extends beyond current view.

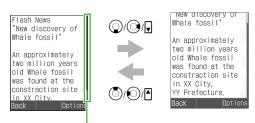

Scroll bar

Scroll down by one line

When a horizontal scroll bar appears, use of to scroll right


O/O: Scroll up by one line

When a horizontal scroll bar appears, use oto scroll left

Side Key ♥: Scroll page down by multiple lines Side Key ♠: Scroll page up by multiple lines

Moving Cursor

When selecting an item such as link, move cursor to that item.

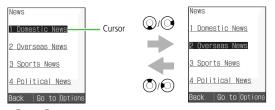

(in the street of the street o

When the page is already scrolled to the bottom, alternatively, press Side Key ↓ to move cursor down


(in the street of the street o

When the page is already scrolled to the top, alternatively, press Side Key 🚹 to move cursor up

- When items are listed in the same row Press to move cursor right or left.
- When you move cursor

The selected item is highlighted or enclosed in a frame of dotted lines if it is link to another page.

Previous or Next Page

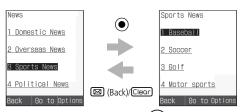

Highlight link, etc. and press

to open the next page

Alternatively, select *Options* → *Forward* to change the window


(Back) or Clear: Display the previous page

Tip

If (Back)/Clear is pressed with no previous page
 A message appears asking whether to terminate the Web
 connection; select Yes to terminate the Web connection.

Text Entry & Item Selection

An information window may show fields and items below.

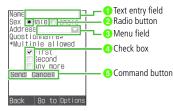

1 Text entry field

Enter data, certification passwords, etc.; highlight Text entry field, press () and enter text

Radio button

Select one item only. Highlight an item with
and press to select it (Appearing as
).

3 Menu field

Open a menu and select an item. Highlight a menu, press
to open it. Use to highlight an item and press
to select it. If multiple items are selectable, press

4 Check box

Select multiple items. Highlight an item with \square and press \bigcirc to select it (Appearing as \square). To deselect an item, highlight \square and press \bigcirc).

6 Command button

Perform operations assigned to a button such as *send* or *reset*. Highlight a command button and press to execute the operation.

Note

• Text entry and item selection varies by page.

Using Linked Info

Use embedded phone numbers, mail addresses, and URLs to initiate calls, create and send messages, or access web pages.

Available phone numbers, mail addresses, and URLs are underlined.

Using Page Links

- Open a page containing linked info
- Use the available links

To initiate a Voice Call

Select a phone number and select Voice Call

To create and send messages

- ① Select a phone number or mail address and select Create message
- ② Create messages and press ☒ (Send)

To access another page Select a URL

Saving to Phonebook

Open a page with linked number or address

- 2 Select a number or address and select

 Save Number or Save Address →

 Phone or USIM
- 3 Create a new entry or update an existing entry

To save as a new entry

Select New

To add to an existing entry

- 1 Select *Update*
- ② Search for an existing entry to modify (◆P.5-9)
- 4 Select an icon
- 5 Save the item (⊕P.5-4)
- 6 Press ⊠ (Save)

Mobile Internet Files

Using Image Files

Saving Images to Data Folder

Saving Linked Images

Download and save images from page links.

- Open a page containing an image link
- **?** Select link
- 3 Press

When details appear

Press

4 Press Clear

To open the image

Press (Launch)

To set saved image as Wallpaper

Press ☑ (Set as) and perform Step 3 in "Wallpaper" (�P.22-3)

Saving Page Images

Save a page image to Data Folder.

- **1** Open a page with an image
- **?** Select *Options* \rightarrow *Save* \rightarrow *Save image*
- Highlight the image and press

 (Save)
- ▲ Press Clear

To open the image

Press (Launch)

To set saved image as Wallpaper

Press ☑ (Set as) and perform Step 3 in "Wallpaper" (�P.22-3)

5 Press Clear to end the operation

To save another image

Repeat Step 3

- If the same file name exists
 - 1) Press () (Edit) and change the file name
 - (2) Press (Save)
- Viewing images
 - Press (Set as) to set Wallpaper. (♦ P.22-3).
 - Press () (Zoom) to enlarge or reduce the image. Press
 - Y! (Details) to view image details.
- When SVG-T/SWF format file is saved

Options appears on the save image confirmation window, then select *Options* and execute various operations (♠P.11-8).

Using Set As

Set a saved image as Wallpaper.

- Open image (⊕P.22-2)
- Press

 ☐ (Set as)
- Select an item

To set as Wallpaper

- (1) Select *Wallpaper*
- (2) Press () (Set)

To set as Phonebook entry image

- (1) Select *Caller ID*
- (2) Search Phonebook and select an entry (◆P.5-9)
- 3 Press (Set)

To set as Video Call Substitute Image

- (1) Select *Still picture*
- (2) Press (Save)

Note

For SVG-T/SWF format file, Settings does not appear.
 For Wallpaper, open Data Folder and open an image (◆P.11-8).

Using Sound Files

Playing Sound

Play sounds from page links.

1 Open a page containing link

Select link to sound

Saving Sounds to Data Folder

Download sound files from page links and save them to Data Folder.

- Open a page containing a sound link
- **>** Select link
- 3 Press

When details appear

Press

△ Select *Exit*

To play sound

Select Launch

Using Save Sound

Save background sound while viewing a page.

Open a page with sound

2 Select *Options* \rightarrow *Save* \rightarrow *Save sound*

3 Press Clear

To play sound

Press (Launch)

To set saved sound as Ringtone

Press ☑ (Set as) and perform Step 3 in "Setting Sound File as Ringtone" (�P.11-11)

Tip

- If same file name exists
 - 1) Press ((Edit) and change the file name (2) Press ((Save)
- To play sounds

Press ☑ (Set as) and set saved sound as Ringtone (�P.11-11). For other operations, refer to *Media Player* (�P.10-3).

Options

The items listed vary by the window status.

Item	Description
Stop	Stop playing.
View bookmark	Access a page containing a streaming play link saved as a bookmark.
View history	Access a page containing a streaming play link already accessed.
Details	Confirm sound size, etc.
Player settings	Select settings related to Media Player (�P.10-6).

Using Video Files

Playing a Video

Play video from a page link.

- Open a page containing a video link
- Select link

Saving Videos to Data Folder

Download and save videos from page links.

- Open a page containing a video link
- **>** Select link
- 3 Press

When details appear

Press

4 Press Clear

To play video

Press (Launch)

To set saved video as Ringtone

Press ☑ (Set as) and perform Step 3 in "Setting Video File as Ringtone" (�P.11-11)

Tip

- . If same file name exists
 - 1) Press () (Edit) and change the file name
 - 2 Press 🖾 (Save)
- To play video

Press ☑ (Set as) and set saved video as Ringtone (�P.11-11). For other operations, refer to *Media Player* (�P.10-8).

Options

The items listed vary by the window status.

Item	Description
Resolution	Set video display size while playing or paused.
View bookmark	Access a page containing a streaming play link saved as a bookmark.

Item	Description	
View history	Access a page containing a streaming play link already accessed.	
Details	Set video size while playing or paused.	
Player settings	Select settings related to Media Player (◆P.10-11).	

🞜 Streaming

Enjoy audio visual media while it downloads. Access compatible files via page links, etc. Downloaded content cannot be saved.

- Open a page containing a streaming video link
- 2 Select link

Tip

• To stream files
Operate the same as *Media Player* (◆P.10-3, 10-8).

Note

• Even if streaming is paused, data transfer continues and packet transmission fees apply.

□ Options

Selectable menu content varies by file.

Item	Description
Resolution	Set video size while playing or paused.
Add bookmark	Save current page containing a streaming play link as a bookmark.
View bookmark	Access a page containing a streaming play link saved as a bookmark.
View history	Access a page containing a streaming play link already accessed.

Saving Pages

Saving a Page

Save current page to open it at any time without accessing the Web. Save up to 50 pages.

- Open a page
- 2 Select Options → Saved pages → Save
- Opening a Saved Page
- Press and select *Yahoo! Keitai* → Saved pages
- **2** Select a page

Changing a Title

- Press and select Yahoo! Keitai → Saved pages
- 2 Highlight a page, select *Options* → *Rename*
- 3 Press (Edit) and change the name
- ⚠ Press
 ☐ (Save)

Deleting a Saved Page

Press ● and select Yahoo! Keitai → Saved pages

Delete as required

To delete one page

- 1 Highlight a page
- 2 Options \rightarrow Delete \rightarrow Selected \rightarrow Yes

To delete multiple pages

- \bigcirc Options \rightarrow Delete \rightarrow Multiple
- (2) Check a page to delete
- (3) Repeat Step (2) to check all target pages
- (4) Press (Delete) and select Yes

To delete all pages

- \bigcirc Options \rightarrow Delete \rightarrow All
- ② Enter Phone Password, press ☒ (OK) and select Yes

Tip

- To select/deselect multiple pages at once
 - 1 In Step 2, select $Options \rightarrow Delete \rightarrow Multiple$
 - **2** Options \rightarrow Mark all/Unmark all

Saving Bookmarks

Saving as a Bookmark

Bookmark frequently visited sites (URLs) for easier access. Save up to 30 Bookmarks.

- **Open a page**
- 2 Select Options → Bookmarks → Add to Bookmarks

3 Confirm Title and URL

To change the title/URL

- 1) Select Title or URL field
- (2) Change Title or URL
- **4** Press **図** (Save)

Tip

- To manually enter and save a bookmark
 - 1 Press \bullet and select *Yahoo! Keitai* \rightarrow *Bookmarks*
 - (2) Options → Add bookmark
 - (3) Select Subject field and enter a subject
 - (4) Select URL field and enter a URL
 - ⑤ Press ☒ (Save)

Opening a Bookmark

- Press and select *Yahoo! Keitai* → *Bookmarks*
- **?** Select a bookmark

Tip

- To send a bookmark URL via S! Mail
 - ① In Step 2, highlight a bookmark, select Options → Send URL
 - (2) Create a message and press (Send)

Editing Bookmarks

Modify the title or URL of bookmark.

- 2 Highlight a bookmark, select *Options*→ *Edit bookmark*
- 3 Select Title field or URL field, and modify the title or URL
- **4** Press **⋈** (Save)

Deleting a Bookmark

Press ● and select *Yahoo! Keitai* → *Bookmarks*

Delete as required

To delete one bookmark

- 1 Highlight a bookmark
- 2 Options \rightarrow Delete \rightarrow Selected \rightarrow Yes

To delete multiple bookmarks

- \bigcirc Options \rightarrow Delete \rightarrow Multiple
- (2) Check a bookmark to delete
- **3** Repeat **2** to check all target bookmarks
- (4) Press (Delete) and select Yes

To delete all bookmarks

- \bigcirc Options \rightarrow Delete \rightarrow All
- ② Enter Phone Password, press ☒ (OK) and select Yes

Tip

- To select/deselect multiple bookmarks at once
 - 1 In Step 2, select $Options \rightarrow Delete \rightarrow Multiple$
 - ② Options → Mark all/Unmark all

History

Holds up to 50 page URLs; open previously viewed pages.

- Press and select *Yahoo! Keitai* → *History*
- **2** Use History records

To open a History record

Select URL

To delete a History record

- 1 Highlight the URL
- (2) Options \rightarrow Delete \rightarrow Selected \rightarrow Yes

To delete multiple records

- \bigcirc Options \rightarrow Delete \rightarrow Multiple
- (2) Check a record to delete
- (3) Repeat (2) to check all target records
- (4) Press (Delete) and select *Yes*

To delete all records

- (1) Options \rightarrow Delete \rightarrow All
- (2) Enter Phone Password, press \square (OK) \rightarrow Yes

Tip

- To select/deselect multiple histories collectively
 - (1) In Step 2, select $Options \rightarrow Delete \rightarrow Multiple$
 - (2) Options → Mark all/Unmark all

Display Settings

Rendering

Default Setting = Standard

Set pages to match Display size or show only text.

- Open a page
- \triangleright Select *Options* \rightarrow *Rendering*
- Select an item

To open a page without changing its layout Select Wide

To fit page to Display

Select Standard

To show page text only

Select *Simple*

Search Text

- **Open Information window**
- **2** Select *Options* → *Search text*
- **3** Select Text entry field and enter text
- 4 Select search direction and press (Search)

Copy Text

- **1** Open Information window
- **2** Select *Options* \rightarrow *Copy Text*
- 3 In a text entry window, select *Options*→ *Copy*

- 4 Use to move cursor on the first character and press (Start)

 To copy all texts in text entry window
 - Press [\$\frac{\text{Y}}{2}\] (All) to copy
- 5 Use to specify the range and press (End)

Reload

-] Open a page
- **2** Select *Options* → *Reload*

22

Page Details

View current page information including URL and Title.

- **Open a page**
- 2 Select Options → Browser setting → Page details

Send URL

Attach current page URL to a message and send it.

- **Open a page**
- **2** Select *Options* \rightarrow *Send URL*
- **3** Create a message and press **△** (Send)

Server Certificate

View SSL/TLS server certificates.

- **Open a secure page**
- 2 Select Options → Browser setting → Certificates
- **3** Select *Server certification* and select a certificate

Tip

- When you open a page that uses SSL/TLS
 - appears at the top of Display.

Returning to Default Page

Return to the Yahoo! Keitai main menu.

- **]** Open a page
- 2 From any page, select *Options* → *Yahoo! Keitai*

Encoding

Default Setting = Auto

If page text appears garbled, change character encoding.

- **Open a page**
- 2 Select Options → Browser setting → Encoding
- 3 Select an option and press (Save)

Information Window Options

Item	Description	
Forward	Move to the next information window (�P.21-5).	
Bookmark	Add or open bookmarks (♠P.22-9).	
Saved pages	Save information windows to Saved pages. Display information window from Saved pages (♠ P.22-8, 22-8).	
Search text	Search text in information window (�P.22-13).	
Reload	Reload the information for a page (�P.22-13).	
Enter URL	Enter a URL to open another site/page (�P.21-3).	
Rendering	Change the displaying method for pages (�P.22-15).	
Copy text	Copy text in information window (�P.22-13).	
Save	Save images and sounds to Data Folder (♠P.22-2, 22-4).	
Send URL	Send URLs of a page in a message (�P.22-14).	

	Item	Description	
Hi	story	Access previously viewed pages (●P.22-11).	
Yahoo! Keitai		Return to Yahoo! Keitai main menu (♠P.22-15).	
Br	owser setting	Adjust Web Browser settings.	
	Text size	Adjust information window text size (�P.23-3).	
	Downloads	Set image/sound download settings (�P.23-2).	
	Empty cache	Delete all information in cache.	
	Empty cookies	Delete all cookies.	
	Cookie options	Activate or cancel cookies.	
	Certificates	View certificates (�P.22-14, 23-4).	
	Page details	View page details (�P.22-14).	
	Manufacture No.	Show or hide handset serial number.	
	Encoding	Change current page character encoding (�P.22-15).	
	Java Script	Turn Java Script on/off (�P.23-3).	

Item	Description	
About	View browser details.	
browser	view browser details.	

Other Web Settings

Preferences

Default Setting Display images: Checked

■ Play sound: Checked

Set 707SC II to disable embedded images/sounds when opening pages. Pages download more quickly without image and sound data.

- Press (●) and select *Yahoo! Keitai* → Browser settings \rightarrow Downloads
- Perform operations to set
 - To disable images
 - (1) Select *Display images*
 - (2) Select an item and press ☑ (Save)

To disable sounds

- (1) Select *Play sound*
- ② Select an item and press ☑ (Save)

Security

Cookie Options

Default Setting = Accept all

Allow or reject small data files created by Web servers and saved on handset. Cookies contain user information. allowing sites to recognize users and track preferences.

- Press and select *Yahoo! Keitai* → Browser settings → Cookie options
- **>** Select an item and press (Save)

Tip

· Cookie options Items

Accept all: Always accept Cookies. Reject all: Always reject Cookies.

Prompt: Confirm Cookies each time they appear.

Turning Java Script On/Off

Default Setting = Off

- Press lacktriangle and select Yahoo! Keitai \rightarrow Browser settings \rightarrow Java script
- 2 Select an item and press (Save)

Text Size

Default Setting Normal

Change the size of the page fonts.

- Press and select Yahoo! Keitai →
 Browser settings → Text size
- **>** Select an item and press (Save)

Manufacture Number

Default Setting =Off

Set 707SC II to automatically send handset serial number to Websites upon request for user identification.

- Press and select Yahoo! Keitai →
 Browser settings → Manufacture
 number
- 2 Select an item and press (Save)

Browser Information

Press ● and select Yahoo! Keitai →
Browser settings → About browser

Certificates

View electronic certificate saved on 707SC II.

- Open a page using SSL/TLS
- 2 Select Options → Browser setting → Certificates
- 3 Select *Root certificate* to view the certificate

Refresh Browser

Empty Cache/Empty Cookies

Delete information saved in Cache and Cookies.

- Press and select Yahoo! Keitai → Browser settings
- Delete as required

To delete Cache contents

Select *Empty cache* \rightarrow (Yes)

To delete Cookies

Select $Empty \ cookies \rightarrow \bigcirc$ (Yes)

S! Appli

Getting Started

S! Appli

Download 707SC II -compatible S! Appli, including games, 3D images, and information via Mobile Internet sites.

- Use only compatible S! Appli.
- To download S! Appli, separate subscription is required and communication fees apply.

Network S! Appli

Some S! Appli require network connection. Enjoy network gaming or access real-time information like stock prices.

- A separate subscription is required to download S! Appli or use those which require network connection.
- Connection fees apply.

🗾 Downloading S! Appli

- Press and select S! Appli \rightarrow S! Application list
- **2** Select *Download S! Appli*
- 3 Select S! Appli to download
- 4 Select Yes

When details appear Press (•)

5 Select Exit
To activate S! Appli

🖋 Starting S! Appli

- Press and select S! Appli \rightarrow S! Application list
- 2 Select S! Appli and press (Start)

Tip

When S! Appli is active
 appears.

Exit, Pause, & Resume

- Exiting or Pausing S! Appli
 - While an S! Appli is active, press 🜀
- **?** Choose to exit/pause

To exit S! Appli

Press (Exit)

To pause S! Appli

Press (Pause)

Tip

- When S! Appli is paused 707SC II returns to Standby and Appears.
- When 707SC II is closed while S! Appli is active S! Appli is paused.

Restarting a Paused S! Appli

- In Standby with S! Appli paused, press and select S! Appli
- 2 Press ☒ (Resume)

🗾 Managing S! Appli

Details

Open *Details* to confirm S! Appli properties.

- Press and select S! Appli \rightarrow S! Application list
- 2 Highlight a S! Appli, select *Options* → *Details*

Tip

S! Appli properties

Open *Details* to see following properties: Name, Description, Profiles, Certification, Size, Record Size, Version, and Vendor.

Lock/Unlock

Lock S! Appli to prevent accidental deletion.

- Press and select S! Appli \rightarrow S! Application list
- 2 Highlight S! Appli, select *Options* → *Lock*

Tip

- - In S! Appli list, 🗎 appears.
- To cancel lock
 In Step 2, highlight locked S! Appli, select Options →
 Unlock

Delete

Press and select S! Appli \rightarrow S! Application list

P Delete S! Appli

To delete one S! Appli

 $Options \rightarrow Delete \rightarrow Selected \rightarrow Yes$

To delete multiple S! Appli

- \bigcirc Options \rightarrow Delete \rightarrow Multiple
- 2 Check S! Appli to delete
- (3) Repeat Step (2) to check all target S! Appli
- (4) Press (Delete) and select Yes

To delete all S! Appli

- \bigcirc Options \rightarrow Delete \rightarrow All
- 2 Enter Phone Password, press (Confirm) and select *Yes*
- (3) Select *Yes* to delete all S! Appli or *No* to exclude locked ones

Tip

- . When all S! Appli are checked
 - In Step 2, perform ① to ③ in "To delete multiple S! Appli," press ② (Delete) in ④ and proceed the following procedures
 - ① Enter Phone Password, press ② (Confirm) and select Yes
 - ② Select Yes to delete all S! Appli or No to exclude locked ones
- To select/deselect multiple S! Appli at once
 - (1) In Step 2, select $Options \rightarrow Delete \rightarrow Multiple$
 - (2) Options → Mark all or Unmark all

mPet

With 707SC II mPet, raise your own virtual pet. Train or enjoy playing games with.

Selecting Pet

Press and select S! Appli \rightarrow S! Application list \rightarrow $mPet \rightarrow Yes$

2 Use to select the pet and press


To select pet after checking action

Select $Options \rightarrow animate$ and press \bigcirc (Select)

To select pet after checking direction Select $Options \rightarrow turn$ and press \bigcirc (Select)

3 Enter a name

4 Select Yes and press

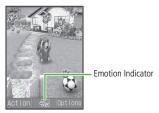

mPet Window

Tip

• After selecting your pet

Garden appears. Play Stanga, Train, Commend or Discipline pet, or change Location. Last active Location appears first.

· Pet behavior

If no action is performed, pet becomes impatient and barks; emotion text bubbles appear. If battery is low, pet crouches.

• To end mPet

Press Clear or 🐔

- To set mPet as Wallpaper (€P.8-2)
- mPet Help

Use mPet Help to see other operations. In mPet window, select $Options \rightarrow Help$ or press Σ while Help appears.

mPet Operations

Navigation Modes & Operations

Open *Options*, then select *Options* to set *Navigation*. When set to *Shortcut mode*, use number keys to move your pet. When set to *Walking mode*, use to move your pet. Available operations vary by location.

	Operation		
Location	Shortcut mode	Walking mode	Description
	1 🖔	Notes (Top Left)	Play <i>Ding Dong</i> game
Garden	2 abc	Front Door (Top Center)	Go to Living Room
	(3 def	Flower Bed (Top Right)	Go for a walk
	4 ghi	Ball (Bottom Right)	Play <i>Stanza</i> game

	Operation		
Location	Shortcut mode	Walking mode	Description
Living	1 🖔	Door (Top Left)	Go to Garden
Room	(5 apc)	Back Door (Top Right)	Go to Kitchen
	1 å	Back Door (Top Left)	Go to Living Room
	2 abc	Door (Top Right)	Go to Bed Room
Kitchen	3 def	Bowl (Bottom Right)	Feed Meal
	4 ghi	Today's Saying (Bottom Left)	Show Today's Saying
	5 jkl	Snacks (Top Center)	Feed Snacks
Bed	1 🕉	Door (Top Left)	Go to Kitchen
Room	2 abc	Laundry Basket (Top Center)	Bathe pet

	Operation		
Location	Shortcut mode	Walking mode	Description
	3 def	Dog House (Top Right)	Put Pet to Bed
Bed Room	4 ghi	Book (Bottom Right)	English Quiz
	5 jkl	Injector (Bottom Left)	Medicate pet

Action

In mPet window, press (Action) to *Train, Commend* or *Discipline* pet; its growth changes with experience.

Item		Description	
	Sit	Teach pet to sit down.	
	Roll	Teach pet to roll over.	
Train	Turn	Teach pet to turn around.	
	Bark	Teach pet to bark.	
	Paw	Teach pet to give you a paw.	
Commend	Praise	Praise pet for good behavior.	
Pet		Comfort pet for good behavier, etc.	

Item	Item Description		
Discipline	Warn	Command pet to behave.	
Discipilite	Punish	Punish pet for bad behavior.	

Tip

. When pet refuses to behave

Pet may disobey instructions depending on the number of times an instruction is given or the pet's condition. Instruct pet again or check its condition and remedy any problems.

After an action

Pet barks and responds; an emotion text bubble appears and status window opens. Check status by *Health*, *Fatigue*, *Fullness*, *Clean*, *Stress*, *Obedient* or *Intimacy*.

♣ Options

Item	Description
Location	Select from <i>Garden</i> , <i>Living room</i> , <i>Kitchen</i> or <i>Bedroom</i> .
Pet Inventory	Open for additional options for the specified pet (�P.24-9).
Pet Status	See pet's physical and emotional state.
Options	Select mPet sound/display settings (�P.24-10).
Help	See a basic mPet description.

Other Operations

Adopt a New Pet

Adopt up to five pets.

- In mPet window, select Options → Pet Inventory
- 2 Select Options → Adopt New pet

Perform Steps 2 and 3 in "Select Pet" (⊕P.24-5)

Pet Inventory

- In mPet window, select Options → Pet Inventory
- 2 Select a pet

Tip

Pet status

In Step 2, select *Options* → *View status*

- Rename your pet
 - 1 In Step 2, highlight the pet
 - **2** Options → Rename
 - (3) Enter a name

Say Goodbye

- In mPet window, select $Options \rightarrow Pet$ Inventory
- **→** Highlight pet and select *Options* → Say Goodbye
- ? Press ? (Yes)
- **△** Press

• Once given up, pet cannot be restored.

Sound & Navigation



- Default Setting Sound: Sound only
 - Navigation: Shortcut mode
 - ■Sound type: Voice
- In mPet window, select *Options* → **Options**
- Perform operations
 - To set pet sound
 - (1) Select Sound
 - (2) Select an item and Press ()
 - To set operation mode
 - (1) Select *Navigation*
 - Select an item and Press
 - To set action menu sound
 - **1**) Select *Sound type*
 - (2) Select an item and Press ()
- **?** Press (●)

Tip

· Sound Items

Sound & Vibrate: Pet barks and 707SC II vibrates simultaneously.

Sound only: Pet barks.

Vibrate: 707SC II vibrates with no pet barking. **No sound**: No vibration and with no pet barking.

• Navigation Items

Shortcut mode: Show available shortcuts indicators in mPet window to use assigned shortcuts keys.

Walking mode: Use to move locations with the pet.

• Sound type Items

Voice: Indicate the selected action operation by voice.

Melody: Indicate the selected action operation by melody.

Comic Surfing

コミックサーフィン is the file viewer for browsing electronic comic/photo book files (CCF files) saved in *Book* folder in Data Folder. Enlarge/reduce images, scroll page, browse images with sound/vibration effects.

To browse CCF files, acquire Content Key. No Content Key is required to browse the default sample files in 707SC $\rm II$.

Browsing Electronic Comic

Press ● and select S! Appli →
S! application list
→ コミックサーフィン

Tip

After starting

Refer to $\wedge \mathcal{N} \mathcal{J}$ in $\exists \exists y \not = \forall x \in \mathcal{J}$.

Security

- Default Setting Net Access: Per session
 - Application Autoinvocation: Per session
 - Local connectivity: Per session
 - Read user data access: Per access
 - Write use data access: Per access

Set access/confirmation condition for S! Appli.

- Press \bullet and select $S! Appli \rightarrow$ S! Application list
- → Highlight S! Appli, select Options → **Permissions**
- Select items

For Mobile Internet access

Select Net Access

For automatic activation

Select *Application Autoinvocation*

For external device connection

Select *Local connectivity*

For read user data access

Select Read user data access

For write user data access

Select Write user data access

▲ Select items and press (Save)



Tip

• Permissions Items

Select one item for each application; available options vary.

Always: Confirmation does not appear.

Per session: Confirmation appears once per session.

Per access: Confirmation appears each time application is

accessed.

Never: Confirmation does not appear.

To restore defaults

In Step 3, select $Reset \rightarrow Yes$

🗷 S! Appli Settings

Make S! Appli settings and restore defaults.

Backlight

Default Setting Normal settings

Set Display settings for the backlight.

Press lacktriangle and select $S! Appli \rightarrow$ S! Appli settings \rightarrow Backlight

Select the setting and press

Tip

· Backlight Items

Always On: Set the backlight always on. Always Off: Set the backlight always off.

Normal settings: Settings of *Backlight time* (♦ P.8-7) for

Display settings take priority.

Application Volume

Default Setting = Level 3

Adjust the volume of sounds.

- Press \bullet and select $S! Appli \rightarrow$ S! Appli settings \rightarrow Application Volume
- **2** Use to adjust volume and press

Vibration

Default Setting = ON

Activate to use vibration with compatible S! Appli.

- Press and select S! Appli \rightarrow S! Appli settings \rightarrow Vibration
- 2 Select an item and press

S! Appli Sort

Default Setting By Date

- Press \bullet and select S! Appli \rightarrow S! Appli settings \rightarrow S! Appli Sort
- **2** Select an item and press

Reset S! Appli Settings

Restore S! Appli settings to defaults.

- Press and select S! Appli →
 S! Appli settings → Reset S! Appli
 settings
- 2 Enter Phone Password, press (Confirm) and select *Yes*



Functions

Main Menu Item	Item	Page
CI Appli	S! Application list	P.24-2
S! Appli	S! Appli Settings	P.24-13
	Yahoo! Keitai	P.21-3
	Bookmarks	P.22-9
Yahoo! Keitai	Saved pages	P.22-8
falloo! Kellal	Enter URL	P.21-3
	History	P.22-11
	Browser settings	P.23-2
Madia Player	Music	P.10-3
Media Player	Video	P.10-8
	Take photo	P.7-5
	Record video	P.7-11
Camera	Go to photos	P.7-6
	Go to videos	P.7-12
	Dynamic effect list	P.7-19
	Video editor	P.7-17

Main Menu Item	Item	Page
Data Folder	Pictures	P.11-2
	Videos	P.11-2
	Sounds & Ringtones	P.11-2
	S! Appli	P.11-2
	Book	P.11-2
	Other documents	P.11-2
	Memory status	P.11-3
Messaging	Received msgs	P.17-4, 18-2
	Create msg	P.17-8
	Drafts	P.18-8
	Unsent msgs	P.18-9
	Sent msgs	P.18-8
	Templates	P.17-14
	Server mail box	P.19-2
	Settings	P.20-2, 20-5
	Memory status	P.18-2

Main Menu Item	Item	Page
Tools	Alarms	P.14-2
	Calendar	P.14-5
	Voice recorder	P.14-15
	World clock	P.14-18
	Calculator	P.14-19
	Converter	P.14-20
	Stopwatch	P.14-22
	Dictionary	P.14-22
	Slide show	P.8-2
	Interpreter	P.14-23
	Memory status	P.14-12
Phonebook	Phonebook list	P.5-9

Main Menu Item	Item	Page
Settings	Phone settings	-
	Sound settings	P.9-4
	Display settings	P.8-1
	Call settings	-
	Phonebook settings	P.5-1
	Connectivity	P.12-1
	Security	P.13-1
	Software update	P.25-10
	Memory settings	P.13-10, 15-8

🎜 Troubleshooting

- 707SCII does not turn on
 - ✓ Is battery empty?
 - → Replace or charge battery.
 - ✓ Is battery installed in 707SC II?
 - → Install battery correctly.
- When power is turned on, PIN entry window appears
 - ✓ Is *PIN lock* set to *Enable*?
 - → If *PIN lock* is *Enable*, enter PIN.
- When power is turned on, USIM password entry window appears
 - ✓ Is *USIM lock* set to *Enable*?
 - → If *USIM lock* is *Enable*, enter USIM password.

- Please insert USIM card or This card cannot be recognized appears when 707SCII is turned on or executing a function
 - ✓ Is USIM Card correctly installed?
 - Check to see if USIM Card is correctly installed. If the message appears even though USIM Card is correctly installed, it may be damaged.
 - ✓ Is an incorrect USIM Card used?
 - → Check to see if correct USIM Card is used. Use USIM Card specified by SoftBank.
 - ✓ Is there debris on USIM Card IC chip?
 - → Remove debris with a clean, dry cloth, and then install USIM Card correctly.

- Reading USIM Cannot operate or Reading USIM Card Cannot start appears
 - → USIM Card data is being read. Try again later.

A Busy tone continues after dialing

- ✓ Have you entered a phone number beginning with zero such as an area code?
- → Enter a phone number beginning with zero such as an area code.
- ☑ Is 707SC II set to *Offline mode*?
- → Change 707SC II to another mode such as *Normal*.

圏外 or Out appears and no calls can be initiated

- **✓** 707SC **I** is out-of-range.
- → Move to a place where the signal is stronger and try again.

Calls are interrupted or disconnected

- ☑ Does 圏外 or **Out** appear?
- → Move to a place where the signal is stronger and try again.
- ✓ Is battery empty?
- → Replace or charge battery.

Unable to initiate a call

- ✓ Is Call Barring set?
- → Deactivate Call Barring.

- Unable to open Phonebook entry, Data Folder, Call Log, Calendar, or Messaging
 - ✓ Is Privacy lock set?
 - → Cancel Privacy lock.
- Clicking noise is heard during a call
 - ✓ Noise may be generated when signal is weak or while moving between coverage areas.
- Unable to charge battery
 - ☑ Is AC Charger Connector securely inserted?
 - → Insert AC Charger Connector securely.
 - ☑ Is AC Charger plug securely inserted?
 - → Insert AC Charger plug securely.
 - ✓ Is battery installed in 707SC II?
 - → Install battery correctly.

- ✓ Are 707SC II terminals, battery terminals and AC Charger clean?
- → Clean contacts with a dry cotton swab.
- ✓ Was battery charged in ambient temperature below 5 °C or above 40 °C.
- → Charge battery in ambient temperature between 5 °C and 40 °C.
- ☑ Battery may need to be replaced.
- → Install a new battery.
- ✓ Does battery always lose its charge quickly after being charged?
- → Battery life has expired. Replace with a new battery.

- ✓ Does 707SC II or battery become very warm during charging?
- → If the temperature rises too much, charging may stop. After 707SC II and battery are cool, retry charging.

Devices become hot

- ☑ During charging, AC Charger may heat up.
- ☑ 707SC II may heat up during charging/long calls.
- → If 707SC II can be touched with your hand, it is normal. If it is too hot to touch, immediately stop charging and contact Customer Service (◆P.25-25).

Battery drains quickly

- ☑ Battery may drain quickly depending on the operating environment (Ambient temperature, charging conditions, or Signal Strength), operations, and settings.
- → Use 707SC II in an appropriate environment and reduce operations requiring high power (◆P.1-12).

Display flickers

- ✓ Is 707SC II used near a fluorescent light?
- → Use 707SC II as far away from a fluorescent light as possible.

Display is dim or unlit

☑ This may be due to the characteristics of Display and not a problem. The time (seconds) until Display is dimmed or unlit can be changed by adjusting the Backlight time.

- Unable to play music through speaker
 - ✓ Is Manner Profile set?
 - → Cancel Manner Profile.
 - ✓ Is the stereo earphone microphone connected?
 - → Disconnect the connector for the stereo earphone microphone from 707SC II.
- Too many applications are already running, thus unable to launch anymore appears
 - ✓ Memory is low or full.
 - → Delete unnecessary S! Mail messages. If multiple functions are active, close some.

- Unable to establish Bluetooth® or USB connections using Samsung PC Studio
 - ☑ Is the USB driver installed? (for USB connection)
 - → If communications are executed connecting to a personal computer with the supplied USB cable, installing the driver is required. Install the driver from the supplied CD-ROM.
 - ☑ Is the connection method set correctly on the personal computer?
 - → Set the connection method to *USB* or *Bluetooth* on the Connection Manager of Samsung PC Studio or the Connection Wizard for the communication in use.

- Are Bluetooth[®] or PC USB connection port and Samsung PC Studio the same?
- → Make sure port settings match those set for Samsung PC Studio Connection Manager or Connection Wizard.

Some Phonebook entries do not appear

- ☑ Is 707SC II set to *Hide* in Secret Mode?
- → Set to Show in Secret Mode.

Message cannot be created

- ✓ Shared Memory may be full.
- → Delete messages. If less than 464 KB, messages cannot be created.

Try again appears

- ✓ Signal conditions are poor.
- → Move for a stronger signal and try again.

Sending message failed or Unknown error appears

- ✓ Network connection failed.
- → Try again later.

All available connections are busy appears

- ✓ New S! Mail arrives while 707SC II is being used for packet data communications.
- → End the data communication and try again.

Service unavailable appears

- \blacksquare 707SC \blacksquare is outside the service area.
- → Send from within the service area.

No response appears

- ✓ Network/Server is busy.
- → Try again later.

- Change from flight profile to other profile for network service, created message will be saved in outbox appears
 - **✓** *Offline mode* is active.
 - → Cancel *Offline mode* and try again.
- Cannot download because of too large data appears
 - ☑ S! Appli memory is full.
 - → Delete unnecessary S! Appli and try again.
- Received invalid data. Quit download or Cannot download because of too large data appears
 - → File cannot be downloaded; cancel download.

Software Update

Check for 707SC II software updates and download as required. Choose to begin *Update* or *Schedule update*.

- Press and select Settings → Software update
- Press ☑ (Yes)
 707SC II connects to network.
- **Read Terms of Use and select** *Agree*Read through Terms of Use before selecting *Agree*.
- 4 Enter Center Access Code (⊕P.1-23) and press ●

Update Result appears.

5 Press

To update immediately

Select $Update\ now$ to start the update. When completed, 707SC II turns the power off and on again; then Notification window appears.



Notification Window

To schedule later update

- 1 Select *Schedule update*
- 2 Press (Yes)
- ③ Select schedule date and press (
- (4) Select schedule time and press (
- **(5)** Confirm schedule date & time and press **(•)**

Tip

Procedures

Find details on SoftBank Website (http://www.softbank.jp).

Connection fees

No fees are applied to update checks or downloads.

Scheduled update time

Notification appears. Press or wait ten seconds. Update will not start while 707SC II is in use. When operation ends, confirmation window appears. However if operation does not end within ten minutes of scheduled update time, scheduled update is automatically canceled.



Notification Window

• To cancel Schedule update

- 1 Perform Steps 1 to 5, select *Cancel schedule*
- 2 Press (Yes)

Note

- Charge battery beforehand; if low, update may fail.
- If Scheduled update time arrives while 707SC II is out-of-range, Software Update is canceled.
- Remain within strong, stable signal conditions.
- 707SC II Phonebook entries, media files, and other contents are not affected by software updates, but always back-up important information (note that some files cannot be copied). SoftBank is not liable for damages from lost information, etc.
- 707SC II transmissions are disabled during update.
- Update may take some time to complete.
- Update failure may disable 707SCII. Contact SoftBank Customer Center, Customer Assistance.

Symbols & Pictograms

Symbols

Double-byte Symbols

ΧΨ Ωαβγδεζηθικλμνξοπρστ υ φ χψ ω Α Б Β Γ Д Ε Ё Ж З И Й К Л М Н О П СТУФХЦЧШЩЪЫЬЭЮЯабвг ёжзийклмнопрстуфхцчшшъ V V V V V I V I X X ミュキュ ţ> トン スー

Single-byte Symbols

space> ! " # \$ % & ' () * + , - . / : ; < = > ?
@ [¥] ^ _ ` { | } ~ . 「 」 、 - * °

Symbol Conversions

Symbol Label	Symbol	Symbol Label	Symbol
あっと	@@	こめ	*
いこーる	==	ころん	: ;
えん	¥	さんかく	△▲▽▼
おんぷ	>	しかく	
かける	×	どう	ンルタ
かっこ	() [] [] () <>	ぱーせんと	%%
	[] ' ' " " () ()	ほし	☆★
	[] {} <> 《》	まる	$\bigcirc \bullet \bigcirc$
から	~	やじるし	→← ↑↓

Pictograms

				_					_							mare.		
- €	A	~	ø	9		EXP	20	2	K	OFF	8	0			_AII		0	0
3	4		(2)	*			100	Ξ.	1	A		×		23		₩	٨	Eg.
-	4	å.		(A)	*		×	4	MŽ.	2	60E	×		9		Щ	E	TM
4		<u> </u>	•	ď	A	#	101	5		W I		北	وره	*	曲	ń	<u>"</u>	
0	0	#I	25	-m/	(a)	જી	(1)	6	\triangleleft	× ×	B	?	ಶ್ವತಿ	₩.	2		á	
<u></u>	త	81	6	٩	Vs	00	75	7	W.	76	37	9	윤	6 0	åâ	111	4	
4	0	<u> </u>	۵	×	\$	87	V	В	41	Ÿ.	Ø	۱	€ુ	®	Ø:	00	49	
ō.	8	P.,	9	9 -	0	₩,/	Ġ.	9	100	® ₂ ;	J.		**	ð	69		4	
	ξ P	#	@	•	7	2	Tal		T	概		∌	£.	(7)II		À	13	
B	(b)	4	②	长	888	6	Ψ	得	8	奎		-	- 3	6-0	Ô	Ĭ.	795	
6	(P)	A.	8	Ø	777	BK	•	割	I	4	0	550	î.	Q	<u> </u>		G	
	(1)	4	45	39	1	000	•	Ħ	23	WC/	a	(8)	0	0	9		(g)	
•	0	ď		€.	<u> - 32</u>	•	4	ID	90	G	4	9	1	M	a		3	
8	(4	Ē	•	22	98	#	満	1112	4	Q	7		8	ST.		20	
4	0	71		₩	777	ŶÅ	ਰਦ	空	Ω	Ø.	وادو	₹	0.0	29	0		8	
6	0	'n	Ð		0	0	NEW	指		3	W	۵	7,4	<u> </u>	7	温度	a	
₩.	0	0	a	3		玉	₽	宮	Z	2	W	(m)	3	.ÿ.ğ.	9	-	₹2	
(4)	(<u></u>	<u></u>	9	(2)	BTM	A	45	٧S	0	99"	S.S.	ê <u>6</u> 6		2		25	
11	P	6	9	幽	A.	-	衝	4	***	Q	99	@	ĬaĬ	S	(iii)	*3	2	
1	(8	9	678	, z ²	24	無	Û	€	0	0	(4)	રે_રે	& [· 📤	(e)	87	
P.	0	0	0	235	99	[B]	圓	Ĵ	H	4	0	Ó	ř.š	2	0	@	4	
Æ	**			1	A	lil.	I	1	TÔP	-8	*	•	2,2		3	-	\$	
₫.	称	4		4	<u>~</u>		•	¥	ìĸ	ж	φ,	_	¥	4.	4	@	(49)	
•		B	₩	a	3	\$	F	→	(©)	(b)	★	(9)	葵		l-Mi	3	A	
I	華	**	49	,	4)	夾	0	+	R		= [0]	3	= 3		1.	*	B	
7	ð	%	M		A	_	1	7	\mathbb{Q}	<0	2	*	€,€		9	Q	AB	

- Pictograms with _____ are animated.
 Some pictograms and animated pictograms may not appear properly on some models of SoftBank handsets or other devices.

Memory List

Shared Memory						
S! Mail	Received msgs	Up to 500 messages				
	Drafts	Up to 10 messages				
	Unsent msgs	Up to 10 messages				
	Sent msgs	Up to 250 messages				
SMS	Received msgs	Up to 500 messages				
	Drafts	Up to 10 messages				
31013	Unsent msgs	Up to 10 messages				
	Sent msgs	Up to 250 messages				
	Pictures					
	Videos					
Data Folder	Sounds & Ringtones	Up to 999 items (files and subfolders) per folder				
	S! Appli					
	Book					
	Other documents					

Specifications

707SC II specifications may change without prior notice.

SoftBank 707SC II

Item	Specification
Weight	Approximately 95 g
Continuous Talk Time	Voice Call: Approximately 165 minutes (3G) Approximately 310 minutes (GSM) Video Call: Approximately 100 minutes (3G)
Continuous Standby Time (707SC II closed and sub Display OFF)	Approximately 255 hours (3G) Approximately 300 hours (GSM)
Dimensions (W x H x D)	Approximately 51.4 x 102.5 x 11.9 mm (707SC II closed)
Maximum Output	0.25 W

• 707SC II with battery installed.

- Battery Time is calculated by SoftBank under stable signal conditions. Calling in poor signal conditions or leaving 707SC II on out-of-range will consume more power and may reduce Battery Time by more than half.
- Frequent 707SC II operations requiring Backlight (e.g., Yahoo! Keitai) may reduce Continuous Talk Time and Continuous Standby Time.
- Using video for Wallpaper may significantly reduce Continuous Talking and Continuous Standby Times.
- Using S! Appli may reduce Continuous Talking and Continuous Standby Times.
- Continuous Talk Time is an average measured with a new, fully charged battery in stable signal conditions.
 Continuous Standby Time is an average measured with a new, fully charged battery with 707SC II closed without calls or operations, in Standby, in stable signal conditions. Alternating between usage and Standby shortens Continuous Talk Time and Continuous Standby Time. Talk Time/Standby Time may vary by environment (battery status, ambient temperature, etc.).

Battery

Item	Specification
Voltage	3.7 V
Туре	Lithium-ion
Capacity	880 mAh
Dimensions (W x H x D)	Approximately 46.3 x 36.9 x 5.2 mm (without protruding parts)

AC Charger

Item	Specification
Power Source	AC 100 V-240 V, 50/60 Hz (with power cable)
Output Voltage/ Current	DC 5 V/720 mA
Charging Temperature	5 to 40 °C
Dimensions (W x H x D)	Approximately 53 x 49 x 20 mm (without cables)
Cord Length	Approximately 180 cm

INDEX

Δ

Applicable Profiles for Bluetooth®
Attaching files
Auto redial15-2
В
Backlight
С
Cache21-2 Calculator14-19

Calendar	14-5
Calendar window format	14-6
Call answer mode	9-3
Call cost limit	2-12
Call Log Records	2-9
Call Transfer service	16-3
Call Waiting	16-8
Caller ID	16-13
Camera	7-2
Camera mode	7-4
Camera setting	7-13
Capturing continuous images	7-8
Capturing in Mosaic shot	7-9
Capturing mode	7-4
Capturing still images	7-5
Capturing videos	7-10
Category	5-7
Centre access code	1-23
Certificates22-	16, 23-4
Changing a file name	11-14
Changing a folder name 11-1	4, 18-15
Changing mail address	20-2
Changing phone password	13-2

Changing PIN13-2
Changing PIN213-2
Changing profile3-3
Changing settings of each profile
9-2
Changing to SMS17-11
Changing to S! mail17-11
Changing voice recorder settings
14-17
Charger Port1-8
Charging1-15, 1-16
Checking memory usage15-8, 18-2
Clear memory13-10
Clock Display8-4
Conference Call16-9
Connecting a Bluetooth®-compatible
device12-6, 12-9
Connection to another Bluetooth
devices12-6
Content key info11-14
Converting currency or unit14-20
Cookie setting23-2
Copy text22-13

Copying characters	4-12
Copying files	11-10
Copying folders	11-10
Copying items	5-1
Copying Phonebook	
Copyrighted file icons	18-
Country code	15-3
Creating a folder	
Creating a play list	
Creating messages	
Current contacts	
Cutting characters	
3	

D

Data folder7-15, 11-2	
Date and time setting1-18	
Default name14-17	
Default style20-4	
Deleting a bookmark22-11	
Deleting a file11-17	
Deleting a folder11-17, 18-16	
Deleting a Saved page22-9	
Deleting a S! Appli24-5	

Deleting access logs22-11
Deleting Cache23-4
Deleting Calendar items14-13
Deleting Call Log Records2-10
Deleting characters4-11
Deleting Cookies23-4
Deleting messages18-9
Deleting messages in server19-3
Deleting My devices12-5
Deleting Phonebook5-15
Deleting still images7-6
Deleting templates4-16, 18-9, 18-11
Dialed Call Log Records2-9
Dialing display8-8
Dictionary14-22
Display1-8
Display brightness8-7
Display mode14-7
Display Operator name8-5
Display rendering22-12
Display size of videos10-12
Displaying Slide show17-12
Download Content Key11-14

Downloading a S! Appli24-2	Entering characters4-2, 4-4	Н
Drafts18-2	Entering emoticons4-9	п
DTMF2-8, 6-5	Entering pictograms4-9	Holiday14-
Dynamic effect list7-19	Entering symbols4-9	Home zone1-20
	Entering URL21-3	
E	Entry mode for characters4-2	
Earphone call15-3	Event list14-12	Icons for attached files17-10
Editing bookmarks22-10	External Device Port1-8	Icons for files11-2, 11-4
Editing Calendar details14-12		Icons on Drafts list18-
Editing Phonebook5-14	F	Icons on My devices list12-
Editing still images7-15	File details11-14	Icons on Received messages list
Editing Style17-12	File Viewer11-5	18
Editing the title for a Saved page	Font size4-14, 8-6, 8-9, 23-3	Icons on Sent messages18-
22-8	Forwarding18-8	Icons on Unsent messages list18-
Editing Videos7-17	Forwarding Messages19-4	Image display23-2
Effect sound and keypad tone	Forwarding messages in server 19-4	In-car charger1-10
volume9-2	Frames7-6, 7-16	Initiating a call2-2, 2-1
Effect sound setting9-3, 9-7		Initiating a call overseas2-1
Effects7-12	G	Initiating a Video Call6-
Encode22-15	Greeting Messages8-9	Initiating an international call
Entering a number to select an item	Greening Messages	2-2, 2-1
1-21		Inserting/Removing USIM Card1-
Entering by quoting text4-10		Installing and removing battery 1-13

	mPostcard7-6
Locking/Unlocking S! Appli24-4	Multi Selectorxiii
	Mute2-3, 2-8, 9-3
M	My devices12-4, 12-8, 12-9
Mail art function 17-6 Mail Server 19-2 Mailbox 18-2 Main menu style 8-5	My phone's name12-11 My phone's visibility12-10 My phone's visibility for Bluetooth®12-10
	N
Maximum of message size20-4 Media Player10-2	Network mode2-13 Network password1-24, 16-13 Network Profile2-13
	Network selection2-14
Message details18-3	Network S! Appli24-2
_	0
Missed Call2-4, 2-9 Mobile Postcard7-7 Mobile tracker13-7 Modifying characters4-11	Offline Profile3-2 Opening Saved page22-8 Operating messages in server19-2 Operations available during a Video
	M Mail art function 17-6 Mail Server 19-2 Mailbox 18-2 Main menu style 8-5 Manner profile 3-2 Mark default number 5-14 Maximum of message size 20-4 Media Player 10-2 Memo 14-10 Message 17-2 Message details 18-3 Message List 19-2 Message type icon 18-3 Missed Call 2-4, 2-9 Mobile Postcard 7-7 Mobile tracker 13-7

Option menu1-23	Power ON/OFF1-17, 1-18	Receiving message in server19-2
Outgoing/incoming call barring	Predictive entry function ON/OFF	Receiving settings20-3
service16-11	4-13	Record settings14-17
Owner information5-16	Preferences23-2	Recording voice14-16
	Preferred network2-14	Registering an S! Mail Template
Р	Pre-installed11-2	18-19
Page Details22-14	Print via Bluetooth®12-7	Registering as S! Mail Template
Page Window21-4	Privacy Lock13-6	18-6
Password Lock13-5	Providing Manufacturer Number	Registering SMS templates4-15
Pasting characters4-12	23-3	Registering to bookmark22-9
Phone lock13-5	PUK Code1-5, 13-3	Registering to Phonebook5-4
Phonebook search5-9	Putting a call on hold2-7	Rejecting call reception15-6
PIN1-5	•	Rejecting incoming calls13-8
PIN authentication at power on	Q	Renaming a still image file7-6
1-5, 13-3	Quoting for entries4-10	Renaming My devices12-5
PIN lock13-3		Renaming sound files14-17
PIN21-5	R	Repeat mode10-6, 10-11
PIN2 lock unlocking code13-3	Received call log2-9	Reply17-5, 18-7
Player settings10-6, 10-11	Received messages18-2	Reply with text20-6
Playing melody10-3	Receiving a call2-3	Reset all13-11
Playing video7-15, 10-8		Reset settings13-11
Playing voice14-16	Receiving a Video Call6-2	Resetting a call cost2-11
Popup menu8-6	Receiving all messages19-2 Receiving data via Bluetooth®12-7	Resetting Call times2-11

Resetting PIN lock13-3	S
Resetting S! Appli settings24-14	S
Restarting paused S! Appli24-4	S
Retry function17-2	S
Retry with6-7	S
Ringtone for a Voice Call5-8	
	S
S	S

Saving a page22-8
Saving as a template17-20
Saving attached files18-14
Saving images22-2
Saving sounds22-5
Saving to Drafts17-19
Schedule14-7
Search text22-13
Search type5-12
Secure mode for data transfer12-11
Security24-12
Security Codes1-23
Selecting 3G or GSM2-13
Sending a bookmark URL22-10
Sending a message from Drafts18-8

Sending data via Bluetooth® 12-6
Sending from Unsent Messages 18-9
Sending settings17-11, 20-2, 20-5
Sending sound files14-16
Sending still images via Bluetooth®
12-6
Sending URL22-14
Sending videos via Bluetooth®
7-12, 12-6
Sending your image6-6
Sent messages18-2
Server Certification22-14
Server Mail Size19-2
Shortcut operations7-10
Shortcuts1-22, 15-7
Side Key15-6
Side Key Lock15-6
Simple Search Setting15-7
Skin10-8
Slide show8-2, 11-3
SMS17-2, 20-5
SMS templates4-10
Softkeyxii
•

Software Update25-1	0
Sort11-9, 14-13, 18-1	7
Sorting files11-	9
Sound file details14-1	7
Sound file setting14-1	6
Sound playback23-	2
Sound Settings9-	4
Speaker Phone call2-	7
Speed dialing5-1	2
SSL/TLS21-:	2
SSL/TLS certificate23-	4
Still image details7-	6
Stopping or Pausing S! Appli24-	3
Stopwatch14-2	2
Streaming22-	7
Sub LCD Light8-:	8
Substitute images6-	6
SVG-T/Flash [®] Viewer11-	8
Switching callers16-1	0
5! Appli24-:	2
S! Appli detailed information24-	4
S! Mail17-	2
S! Mail templates17-1	4

Task14-10 Templates4-10, 18-2 Timer7-11	Vibrator/Sound settings9-2 Video Mode7-10 Video settings7-14 Viewfinder7-3 Viewing a file11-3 Viewing attached files18-13	W W Ya
U	Viewing Call cost2-11	
Unsent messages18-2	Viewing Call Log Records2-9	
Updating information22-13 Updating mail list19-2	Viewing Call times2-11 Viewing Saved Calendar Entries	Zo
USB connection12-11	14-12	
User dictionary	Viewing your phone number (My Phonebook details)5-16 Visualization10-7 Voice Mail Service16-5 Voice Recorder14-15 Volume2-7, 9-2, 24-13	31
V	Wake-up Alarm14-2	
Various settings for Video Call6-6	Wallpaper	

Web access from a bookmark 22-10

Web connection from access logs
22-1
World clock14-1
Υ
Yahoo! Keitai22-1
Z
Zoom list8-
Numerics
3D Pictogram20-

Warranty & After Sales Service

Warranty

The purchased 707SC II comes with a Warranty.

- Check the shop and date of purchase.
- Read through the contents of the Warranty and keep it in a safe place.
- The warranty period can be found in the Warranty.

 SoftBank is not liable for damages to you or a third party from missed calls, etc. due to handset failure or malfunction, etc.

Repair Requests

Before submitting 707SC ${\rm I\hspace{-.1em}I}$ for repair, consult the "Troubleshooting" section.

for a solution. If a problem persists, contact Customer Service (�P.25-25) or the nearest SoftBank shop; be prepared to describe problem in detail.

- During the warranty period, repairs will be made under the terms and conditions described in the warranty.
- After the warranty period, repairs will be upon request; if said repairs can be made, you will be charged for them.

Note

- 707SCII files and settings may be lost or altered due to accidents or repairs. Keep a copy of important files, etc. like Phonebook entries. SoftBank is not liable for damages resulting from accidental loss or alteration of 707SCII files (Phonebook, Data Folder, etc.) or settings.
- Disassembling or modifying this product may be a violation of the Radio Law. Note that SoftBank will not accept repair requests for disassembled or modified products.

Customer Service

If you have questions about SoftBank handsets or services, please call General Information.

For repairs, please call Customer Assistance.

SoftBank Customer Center

From a SoftBank handset, dial toll free at 157 for General Information or 113 for Customer Assistance

SoftBank International Call Center

From outside Japan, dial **+81-3-5351-3491**(Please take care to dial correctly; international charges will apply.)

Call these numbers toll free from landlines.

Subscription Areas		Contact
Hokkaido, Aomori, Akita, Iwate, Yamagata, Miyagi, Fukushima, Niigata,	General Information	(Toll-free)
Tokyo, Kanagawa, Chiba, Saitama, Ibaraki, Tochigi, Gunma, Yamanashi, Nagano, Toyama, Ishikawa, Fukui	Customer Assistance	@ 0088-240-113 (Toll-free)
Aichi, Gifu, Mie, Shizuoka	General Information	© 0088-241-157 (Toll-free)
	Customer Assistance	(m) 0088-241-113 (Toll-free)
Osaka, Hyogo, Kyoto, Nara, Shiga, Wakayama	General Information	© 0088-242-157 (Toll-free)
	Customer Assistance	© 0088-242-113 (Toll-free)
Hiroshima, Okayama, Yamaguchi, Tottori, Shimane, Tokushima, Kagawa,	General Information	© 0088-250-157 (Toll-free)
Ehime, Kochi, Fukuoka, Saga, Nagasaki, Oita, Kumamoto, Miyazaki, Kagoshima, Okinawa	Customer Assistance	@ 0088-250-113 (Toll-free)

SoftBank 707SC II User Guide



February 2007 Version 1 SOFTBANK MOBILE Corp.

To help protect the environment and recycle valuable resources, mobile phone, and PHS shops displaying the above mark accept mobile phones, batteries, and chargers of all manufacturers.

*For more information, please visit your nearest SoftBank Shop.

- *Mobile phones, batteries, and chargers collected for recycling cannot be returned.
- *To protect your privacy, delete any personal information (telephone numbers, call log records, messages, etc.) beforehand.

Model name: SoftBank 707SC II

Manufacturer: Samsung Electronics

Co., Ltd.