Introduction

Thank you for purchasing the Vodafone 804SS.

- Read this guide thoroughly before using 804SS to ensure proper usage.
- After reading this guide, keep it for later reference.
- Should you lose or damage this guide, contact Customer Service (♠ P.28-19).
- Accessible services may be limited by contract conditions or service area.

804SS is compatible with both W-CDMA and GSM network technologies.

Note

- Unauthorised copying of any part of this guide is prohibited.
- · Contents are subject to change without prior notice.
- Steps have been taken to ensure the accuracy of descriptions in this guide. If you find inaccurate or missing information, contact Customer Service (◆ P.28-19).
- If there are any missing/misplaced pages in this manual,
 Vodafone will replace it.

Accessories


Make sure the following accessories are included in the package with handset. These accessories are also sold separately.

For details on accessories or optional items, contact Customer Service (P.28-19).


Battery




AC Charger

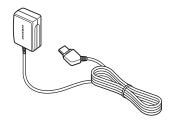


Utility Software (CD-ROM)

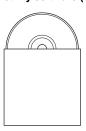

Stereo Earphone Microphone

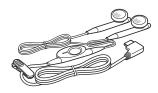

USB Cable

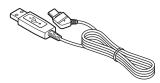

Contents

Accessories. i Contents ii	Time & Date
About This Guidexi Safety Precautionsxiii	Changing Home Time Zone
General Notes xxii SAR Certification Information xxvi	Main Menu
SAN GET UTICATION THIOTHAGUON	Shortcuts1-19
Basic	Switch Bar1-19
	Options
1 Getting Started	Security Codes 1-20 Phone Password 1-20
USIM Card 1-2 General Information & Precautions 1-2 Installing & Removing USIM Card 1-3	Centre Access Code
USIM PINs	2 Basic Handset Operations
Handset Parts & Functions1-5	Initiating Calls2-2
Handset 1-5 Display Indicators 1-7	Receiving a Call2-3
Sub Display Indicators	Reject Incoming Call2-3
Battery & Charger1-9	Engaged Call Operations2-4
Before Using Battery or Charger	Earpiece Volume
Installing & Removing Battery	Hold 2-4 Speaker Phone 2-4
AC Charger 1-13 In-Car Charger (Optional) 1-14	Engaged Call Options
Power On/Off	Call Log Records2-5
Power On	Viewing Call Log Records
Power Off	Calling from Call Log Records

Deleting Call Log Records	Symbols, Pictograms or Emoticons	4-7
Call Log Options2-6	Line Breaks	4-8
Call Manager2-6	Quoting Saved Text	4-8
Data Counter & Call Times	Editing Text	4-9
Edit Cost Limit	Deleting	
International Roaming2-7	Copy, Cut & Paste	4-9
Changing Network Mode	Prediction On/Off (Japanese Only)	4-10
Network Setup	Font Size	4-10
Calling from Outside Japan2-9	User Dictionary (Japanese Only)	
Emergency Calls2-9	SMS Templates	
3 Manner Profile	5 Phonebook	
Minding Mobile Manners		
Manner Related Functions	Saving to Phonebook	
Manner Profile	Adding Entry Items	
Changing Profile	Saving from Call Log Records	
gg	Category Settings	
4 Entering Text	New Category (USIM Card)	
•	Edit Category	
Text Entry .4-2 Text Entry Window 4-2	Add Member	5-6
Changing Text Entry Mode	Using Phonebook	5-7
Key Assignments	Calling from Phonebook	5-7
Entering Characters4-4	Speed Dialling	5-9
Hiragana/Kanji	Phonebook Options	5-9
Katakana	Editing Phonebook Entries	5-10
Alphanumerics	Edit	
Numbers	Mark Default Number	5-10

Copy to USIM/Copy to Phone	Video Settings
Deleting Entries	Viewing Images7-13
My Phonebook Details5-11	Viewing Still Images
	Viewing Video
6 Video Call	Editing Still Images7-13
Before Using Video Calls6-2	Attaching Images to a Message7-15
Initiating a Video Call6-2	O Dianley Cattings
Receiving a Video Call6-2	8 Display Settings
Engaged Video Call Operations6-3	Standby Display Settings8-2
Options	Wallpaper
Video Call Settings6-5	Clock Display
Sending Your Image	Operator Name
Selecting a Substitute Image6-5	Menu Display 8-4 Menu Style 8-4
Retry Settings	Popup Menu 8-4
7 Mahila Osmara	List Font Size
7 Mobile Camera	Zoom List
Before Using Mobile Camera	Backlight Brightness & Duration
Mobile Camera Precautions	Adjusting Display Brightness8-5
Using Display as Viewfinder7-2	Backlight Duration
Capturing a Still Image7-3	Sub Display8-6
Camera Mode	Dialling Display8-6
Capturing Still Images	Greeting Messages8-7
Capturing Video .7-9 Video Mode .7-9	Display Language8-7
Capturing Video	Siopia, Languago
Mobile Camera Settings	

	Viewing Graphics/Animation with the SVG-T/Flash Viewer	11-5
9 Sound Settings	Sorting Files	11-6
Changing Profile Settings	Using Files	
10 Media Player	Ringtone	
Before Using Media Player10-2	Saving a vFile	
Playing Music 10-2 Playing Melodies Using a Playlist 10-6	Managing Files/Folders	11-9
Changing Music Player Settings 10-7 Repeat Mode 10-7 Tone Volume 10-7 Audio Skin 10-7 Visualisation Mode 10-7	Changing a File Name/Folder Name Moving a File/Folder. Copying Files/Folders Deleting a File/Folder	11-9 11-9 11-10
Cover Keypad Lock	12 External Connections	
Playing Video10-9	External Connections	12-2
Player Settings 10-10 Repeat Mode 10-10 Tone Volume 10-10 Resolution 10-10 Streaming Settings 10-10	Bluetooth. Before Using Bluetooth Communications. Sending & Receiving Data. Connecting Handsfree or Other Devices. Changing Bluetooth Settings.	12-2 12-2 12-3
11 Managing Files (Data Folder)	USB Connection	
Data Folder 11-2 Default Folders 11-2	Connecting to a PC	12-8
Saved Files 11-3 Opening Files 11-3 Using File Viewer 11-4	Connections	12-9

10 Canada	Calendar Options	-11
13 Security	Voice Recorder	-11
Changing Phone Password13-2	Voice Recorder Window	-11
PIN	Recording Voice	
Changing PIN/PIN213-2	Playing Voice	
PIN Lock	Changing Voice Recorder Settings	
Resetting PIN Lock	World Clock14-	
USIM Lock13-3	Viewing World Clock	
Handset Security13-4	Selecting Areas	
Phone Lock	Using Calculator	
Privacy Lock	Converting Currencies or Units14-	
Rejecting Incoming Calls	Converting Currencies	
Reject Incoming Calls	Converting Units	
Black List	Stopwatch14-	-17
Restoring Defaults	Dictionary	-17
Clear Memory 13-6	Using Dictionary14	-17
Master Reset		
44= 1	15 Advanced Functions	
14 Tools	Calling Functions	5-2
Alarms14-2	Auto Redial	
Wake-up Alarm/Alarms	International Dial	5-2
Auto Power On	Handling Incoming Calls15	5-3
Calendar	Anykey Answer	5-3
Displaying Calendar	Active Folder	5-3
Saving New Entries to Calendar	Side Key Silence/Reject	5-3
Viewing Saved Calendar Entries	Cover Keypad Lock15	5-4
Editing Calendar Entries	Shortcuts15	5-4
Deleting Calendar Entries		

Memory Status	j-5
16 Optional Services	
Optional Services	ò-2
Call Forwarding 16 Activating Call Forwarding 16 Cancel All 16 Check Status 16	6-3 6-3
Voice Mail16Activating Voice Mail16Cancelling Voice Mail16Checking Settings16Listening to Messages16Incoming Call Notification16	6-4 6-4 6-4 6-5
Call Waiting*	6-6
Conference Call* 16 New Call 16 Engaged Conference Call Operations 16 Joining Conference Call 16	6-7 6-7
Call Barring	6-8 6-9
Caller ID. 16 Show My Number. 16 Adding 186 or 184. 16-	6-9

Vodafone live!

17 Vodafone live!	
Before Using Vodafone live!	
Customising Handset Address	17-3
18 Receiving Messages	
Checking for New Messages	18-3
19 Sending Messages	
Creating Messages. Procedures Address. Subject Message Sending a Message Silde Show Changing the Style of Message Field Templates	19-2 19-3 19-5 19-5 19-6 19-6
Attaching/Inserting Files	19-8

Saving Created Messages .19-11 Saving to Drafts .19-11 Saving a Message as a Template .19-12	Saving an MMS Template
	21 Server Mail
20 Messaging Folders	Message List
Viewing Messages 20-2 Message Lists 20-2 Message Window Operations 20-4	Retrieve Mail List
Replying to a Message	Remote Forward
Forwarding a Message20-6	20.011
Sending from Drafts	22 Other Message Settings
Sending from Unsent Messages20-6	MMS Settings
Deleting a Message 20-7 Deleting Specified Message(s). 20-7 Designating & Deleting a Mailbox 20-8 Deleting All Messages from a Mailbox 20-8 Linked Information 20-8	Sending Settings 22-2 Receiving Settings 22-3 MMS Connection Settings 22-3 Message Size 22-4 Default Style 22-4
Saving in Phonebook	SMS Settings
Using an Attached File20-9	23 Mobile Internet
Viewing an Attached File	Getting Started
From Message List 20-11 Saving to Phonebook 20-11 Sorting Messages 20-11 Move to Phone/Move to USIM 20-12	Getting Online .23-3 Vodafone live! Main Menu. .23-3 Enter URL .23-3 Page Window Operations .23-4 Using Linked Info .23-6

24 Mobile Internet Files

Using Image Files	24-2
Saving Images to Data Folder	24-2
Wallpaper	24-3
Using Sound Files	24-3
Playing Sound	
Saving Sound Files to Data Folder	24-3
Using Video Files	24-4
Playing a Video	
Saving Videos to Data Folder	24-5
Streaming	24-5
Saving Pages	
Saving a Page	
Opening a Saved Page	
Change Title	
Deleting a Saved Page	
Saving Bookmarks	24-7
Saving an Address as a Bookmark	
Opening a Bookmark	
Editing Bookmarks	
Deleting a Bookmark	24-8
History	24-9
Display Settings	24-10
Rendering	
Reload	24-10
Page Details	24-10
Send URL	24-10

Server Certificate
Returning to Default Page24-11
Encoding
Options

25 Other Web Settings

Preferences.....

0
Security25-2
Cookie Options
Activating/Deactivating JavaScript25-3
Text Size
Manufacture Number
Browser Information
Certificates
Refresh Browser25-4
Empty Cache/Empty Cookies

26 V-applications

Getting Started	26-2
Using V-applications	26-2
Network V-applications	26-2
Oownloading V-applications	26-2
Starting V-applications	26-2
xit, Pause & Resume	26-3
Exting or Pausing a V-application	26-3
Restarting a Paused V-application	00.0

Managing V-applications	
Viewing V-application Properties	
Lock/UnlockDelete	
Delete	20-
27 V-application Settings	
Security	27-
Backlight	27-
Application Volume	27-
Vibration	
Reset	27-
28 Appendix	
Functions	28-
Troubleshooting	28-
Basic Operations	
Vodafone live!	28-
Symbols & Pictograms	
Symbols	
Pictograms	
Memory List	
Specifications	
INDEX	28-1
Warranty & After Sales Service	28-1
Customer Service	28-1

About This Guide

In this guide, 804SS refers to Vodafone 804SS. Instructions are described using mainly default settings. When settings are changed, screen shots or handset responses may differ from those depicted in this guide.

Screen Shots and 804SS Illustrations

Screen shots appearing in this guide are for reference only and may differ from actual displays. Product illustrations may vary from actual products.

Confirmations/Warning Messages


Messages not described in this guide may appear; read all confirmations and warning messages carefully.

Symbols

In this guide, symbols are used to represent 804SS keys; see "Handset Parts & Functions" (◆ P.1-5). Softkey and Multi Selector operations are indicated as shown below.

Softkeys

Operation options appear at the bottom of Display. Press the corresponding Softkey to execute assigned functions.

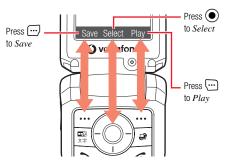


Softkey Operations



Multi Selector Operations

Use Multi Selector to select menu items, move cursor and scroll, etc. In this guide, Multi Selector operations are indicated as shown below.

Basic Multi Selector Operations

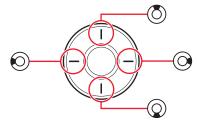

: Press O or O

: Press or or

: Press (), (), () or ()

Highlighting

In this guide, "to highlight" means to move cursor to an item.

Menu Operations

Menu/Options operations are simplified with arrows.

Main Menu



Highlight an item and press (Select)

For details, see "804SS Menus" (◆ P.1-17).

Options



Safety Precautions

- Read these safety precautions before using handset.
- Observe all precautions to avoid injury to yourself and others, or damage to property.
- Vodafone is not liable for any damages resulting from use of this product.

Before Using Handset

Symbols

Make sure you thoroughly understand these symbols before reading further. Symbols and their meanings are described below:

<u></u> Danger	Great risk of death or serious injury from improper use
⚠Warning	Risk of death or serious injury from improper use
⚠ Caution	Risk of injury or damage to property from improper use

	Prohibited Actions
0 6	Compulsory Actions
\triangle	Attention Required



Handset, Battery & Charger

Use only specified battery and Charger (€ P.i).

Using non-specified equipment may cause malfunctions, electric shock or fire due to battery leakage, overheating or bursting.



Do not short-circuit Charger Terminals.

Keep metal objects away from the Charger Terminals. Keep handset away from jewellery. Battery may leak, overheat, burst or ignite causing injury. Use a case to carry handset.



Battery

If battery fluid gets into your eyes, do not rub them. Rinse with clean water and consult a doctor immediately.



Eves may be severely damaged.

Prevent injury from battery leakage, breakage or fire. Do not:



- Heat or dispose of battery in a fire.
- · Disassemble, modify or break battery.
- Damage or solder on to battery.
- · Use a damaged or deformed battery.
- Use a non-specified charger.
- · Force battery into handset.
- Charge or place battery near fire, heat sources or expose it to extreme heat (P.i).
- Use battery for other equipments.



Handset, Battery & Charger

Do not insert foreign objects into handset.

Do not place metal or flammable objects in handset or Charger This may cause fire or electric shock. Keep handset out of the reach of children.



Keep handset out of rain or extreme humidity.

Fire or electric shock may occur.



Keep handset away from liquid-filled containers.

Keep handset and Charger away from chemicals/liquids. Fire or electric shock may result.



Avoid sources of fire.

To prevent fire or explosion, do not use handset in the presence of gas or fine particles (Coal. dust. metal. etc.).




Keep handset and Charger away from microwave ovens.

Battery or handset may leak, burst, overheat or ignite.



Do not disassemble or modify handset.

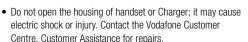



• Do not modify handset or Charger. Fire or electric shock may result.

If water or foreign matter gets inside handset:



Discontinue handset use to prevent fire or electric shock. Turn handset power off, remove battery, unplug Charger and contact the Vodafone Customer Centre. Customer Assistance.

Do not subject handset to shocks.

Subjecting handset or Charger to shocks may cause malfunction or injury. Should handset break, remove battery and contact the Vodafone Customer Centre, Customer Assistance. Discontinue handset use. Fire or electric shock may occur.

If an abnormality occurs:



Should there be any unusual sound, smoke or odour, discontinue handset use to avoid fire or electric shock. Turn handset power off, remove battery, unplug the Charger, and contact the Vodafone Customer Centre. Customer Assistance.

Handset

Preventing accidents

- For safety, never use handset while driving. Pull over beforehand. Mobile phone use while driving is prohibited by the revised Road Traffic Law (Effective 1 November 2004).
- Do not use headphones while driving or riding a bicycle. Accidents may result.
- Do not turn the volume up so high that ambient sounds cannot be heard, especially when walking in or around traffic to avoid accidents.

Do not swing handset by the handstrap.

Injury or breakage may result.



Turn handset power off before boarding aircraft.

Using wireless devices aboard aircraft may cause electronic malfunctions or endanger aircraft operation.



Adjust vibration and Ringtone settings:

Select settings carefully if you have a heart condition or wear a pacemaker/defibrillator.



During thunderstorms, turn power off; find cover.

There is a risk of a lightning strike or electric shock.



Do not use the phone with wet hands.

Doing so may lead to electric shock or damage to 804SS.



Charger


Use only the specified voltage.

Non-specified voltages may cause fire or electric shock.



- AC Charger: AC 100V-240V Input
 Vodafone is not liable for problems caused by charging handset abroad.
- In-Car Charger: DC 100V-240V Input

Do not use commercially available transformers.

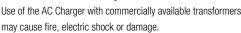



Do not use In-Car Charger inside vehicles with a positive earth.





Do not touch the cooling blades with wet hands.

Electric shock may occur.



Do not use multiple cords in one outlet.

Excess heat or fire may occurs.



Do not bend, twist, pull or set objects on the cord. Do not put heavy objects on the cords or heat or pull the cords.



Fire or electric shock may result.

Do not short-circuit Charger Terminals.

Keep the metal away from terminals. Overheating, fire or electric shock may result.



Do not use AC/In-Car Charger if the cord is damaged.



Fire or electric shock may be caused. Contact the Vodafone Customer Assistance to replace the cord.



Be sure to secure In-Car Charger.

Avoid injury or accidents.



During thunderstorms:

Unplug the Charger to avoid damage, fire or electric shock.



Keep the Charger out of the reach of children.

Electric shock or injury may occur.



Battery

If battery does not charge properly, stop charging. Battery may overheat, burst or ignite.



If there is leakage or abnormal odour, avoid fire sources.

It may catch fire or burst.



If there is abnormal odour, excessive heat, discolouration or distortion, remove battery from handset.



It may leak, overheat or explode.

Handset Use & Electronic Medical Equipment

This section is based on "Guidelines on the Use of Radio Communications Equipment such as Cellular Telephones and Safeguards for Electronic Medical Equipment" (Electromagnetic Compatibility Conference, April 1997) and "Report of Investigation of the Effects of Radio Waves on Medical Equipment, etc." (Association of Radio Industries and Businesses, March 2001).

People with implanted pacemakers/defibrillators should keep handset more than 22 cm away.



Implanted pacemakers/defibrillators may malfunction due to radio waves.

Turn handset power off in crowded places such as trains. People with implanted pacemakers/ defibrillators may be near.



Implanted pacemakers/defibrillators may malfunction due to radio waves.

Observe these rules inside medical facilities:



- Do not take handset into operating rooms or Intensive or Coronary Care Units.
- · Keep handset off in hospitals.
- Keep handset off in hospital lobbies. Electronic equipment may be near.
- Obey rules regarding mobile phone use in medical facilities.

Consult the manufacturer of other electronic medical equipment about radio wave effects.







Handset, Battery & Charger

Handset Care




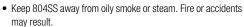


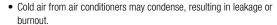

- Keep 804SS away from direct sunlight (Inside vehicles, etc.) or heat sources. Distortion, discolouration or fire may occur. Battery shape may be affected.
- Keep 804SS out of extremely cold places to avoid malfunction or accidents.
- Keep 804SS away from fire sources to avoid malfunction or accidents.

Usage Environment

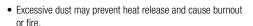

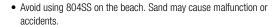

 Keep 804SS away from credit cards, phone cards, etc. to avoid data loss.

Handset

Avoid leaving 804SS in extreme heat (Inside vehicles, etc.).



Handset may heat up and lead to burns.

Volume settings

Keep handset volume moderate.



Excessive volume may cause damage to your hearing.

Headphones



- Do not unplug by pulling the cord; may damage the cord.
- Keep the plug clean to avoid noise or malfunction.

Inside vehicles:



Handset use may cause other electronic equipment to malfunction.

Should skin irritation occur, discontinue handset use and consult a doctor.




Skin irritation, rashes, or itchiness may result depending on your physical condition.

Parts	Materials & Finishing
Housing (Display side, Keys, Sub Display centre strip and Battery Cover side)	PC + gf (30%)/ Urethane coating
Housing (Sub Display ornament strips)	Titanium
Earpiece Ornament	SUS/Multi coating
Keypad Ornaments	Urethane film + Silicon
Side Keys, Cover Keypad, Camera Key	ABS/Plating
Charger Connector Terminal Cover	PC + Urethane rubber/Urethane coating
Charger Terminal	Phosphor bronze
Battery	Polyethylene

Charger

Charger & In-Car Charger

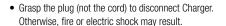



 Keep the cord away from heaters. Exposed wire may cause fire or electric shock.



· Stop use if the plug is hot or improperly connected. Fire or electric shock may result.



· Keep In-Car Charger socket clean. If might overheat and cause injury.

Use only the specified fuse



A 1A fuse is specified for In-Car Charger. An improper fuse may cause damage or fire.

Always charge 804SS in a well-ventilated area.



Avoid covering/wrapping Charger; may cause damage or fire.

Do not use In-Car Charger when engine is off.



Start engine before use; may weaken car battery.

Disconnect AC/In-Car Charger during long periods of disuse.



Be sure to unplug AC/In-Car Charger after use.

Handset Maintenance

When cleaning, disconnect AC/In-Car Charger to prevent shock or injury.



Installing In-Car Charger

Properly position the cable for safe driving to avoid injury or accidents.



Battery

Keep battery out of the reach of children.

They may sustain injuries. And when using, do not let them remove battery from handset.



Do not leave battery in direct sunlight or inside vehicles.

Overheating or fire may occur and performance may be reduced



Do not expose battery to liquids.

Performance may deteriorate.



If battery fluid makes contact with skin or clothes:

Rinse with clean water immediately.



Do not dispose of exhausted batteries with ordinary refuse.



Tape over battery terminals before disposal, or bring them to a Vodafone shop. Follow local regulations regarding battery disposal.

Do not throw or abuse battery.

Battery may overheat, burst or ignite.



Charge battery within a range of 5°C - 40°C.

Battery may leak/overheat and performance may deteriorate.



If a child is using handset, explain all these instructions and supervise handset's usage.



If there is any abnormal odour or excessive heat, stop using battery and call the Vodafone Customer Centre, Customer Assistance.



Do not leave battery uncharged. Charge at least once every six months.



General Notes

General Use

- Vodafone is not liable for any damages resulting from accidental loss/alteration of any data on handset. Please keep separate records of Phone Book entries, etc.
- Handset transmissions may be disrupted inside buildings, tunnels or underground, or when moving into/out of such places.
- Use handset without disturbing others.
- Handsets are radios as stipulated by the Radio Law. Under the Radio Law, handsets must be submitted for inspection upon request.
- Handset use near landlines, TVs or radios may cause interference.

• Beware of eavesdropping.

Because this service is completely digital, the possibility of signal interception is greatly reduced. However, some transmissions may be overheard.

Eavesdropping

Deliberate/accidental interception of communications constitutes eavesdropping.

Inside Vehicles

- Never use handset while driving.
- Do not park illegally to use handset.
- Handset use may affect a vehicle's electronic equipment.

Aboard Aircraft

Never use handset aboard aircraft (Keep the power off).

Handset use may impair aircraft operation.

Handset Care

- If handset is left with no battery or an exhausted one, data may be altered/lost. Vodafone is not liable for any resulting damages.
- Use handset between 5°C 40°C.
- Avoid extreme temperatures/direct sunlight.
- Exposing the lens to direct sunlight may damage the colour filter and affect image colour.
- Do not drop or subject handset to shocks.
- Clean handset with a dry, soft cloth. Using alcohol, thinner, etc. may damage it.
- Do not expose handset to rain, snow or high humidity.

- Never disassemble or modify handset.
- Avoid scratching Display.
- When closing handset, keep straps, etc. outside to avoid damaging Display.
- When using headphones, moderate the volume to avoid sound bleed.
- Handset is not water-proof. Avoid exposure to liquids and high humidity.
 - · Keep handset away from precipitation.
 - · Cold air from air conditioning, etc. may condense causing corrosion.
 - · Avoid placing handset in damp places (Restrooms, bath/ shower rooms, etc.).
 - On the beach, keep handset away from water and direct sunlight.
 - · Perspiration may get inside handset causing malfunction.
- Heavy objects or excessive pressure should be avoided. This may cause malfunction or injury.
 - ·Do not sit down with handset in a back pocket.
 - · Do not place heavy objects on handset in a bag.
- Connect only the specified equipment to the Headphone Connector. Malfunction or damage may result.

 Always turn power off before removing battery. If battery is removed while saving data or sending mail, data may be lost, changed or destroyed.

Copyrights

Copyright laws protect sounds, images, computer programmes, databases, other materials for copyright holders. Duplicated material is limited to private use only.

Use of materials beyond this limit or without permission of copyright holders may constitute copyright infringement, and be subject to criminal punishment. Comply with copyright laws when using images captured with handset camera

Trademarks

 Licensed by QUALCOMM Incorporated under one or more of the following United States Patents and/or their counterparts in other nations:

4,901,307 5,490,165 5,056,109 5,504,773 5,101,501 5,506,865 5,109,390 5,511,073 5,228,054 5,535,239 5,267,261 5,544,196 5,267,262 5,568,483 5,337,338 5,600,754 5,414,796 5,657,420 5,416,797 5,659,569 5,710,784 5,778,338

- This product contains ACCESS Co., Ltd.'s NetFront Internet browser software NetFront is a trademark or registered trademark of ACCESS Co., Ltd. in Japan and in other countries.
- Part of the software in this product incorporates a module developed by the Independent JPEG Group.
- THIS PRODUCT IS LICENSED UNDER THE MPEG-4 VISUAL PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER FOR (i) ENCODING VIDEO IN COMPLIANCE WITH THE MPEG-4 VISUAL STANDARD ("MPEG-4 VIDEO") AND/OR (ii) DECODING MPEG-4 VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NONCOMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED BY MPEG LA TO PROVIDE MPEG-4 VIDEO, NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION INCLUDING THAT RELATING TO PROMOTIONAL. INTERNAL AND COMMERCIAL USES AND LICENSING MAY BE OBTAINED FROM MPEG LA, LLC. SEE HTTP://WWW.MPEGLA.COM.

- Contains Macromedia® Flash® Flash Lite™ technology by Adobe Systems Incorporated.
- Copyright[®] 1995-2005 Adobe Systems Incorporated. All rights reserved.
- Macromedia, Flash, Macromedia Flash, and Macromedia
 Flash Lite are trademarks or registered trademarks of
 Adobe Systems Incorporated in the United States and other
 countries.
- JBlend™ is incorporated in this product. JBlend™ is a Java™ execution environment developed by Aplix Corporation for implementing advanced performance and fast operation on small-memory systems.
- Powered by JBlend™ Technology.
 JBlend and JBlend logos are registered trademarks of Aplix Corporation in Japan and other countries.



- Powered by JBlend™, ©1997-2006 Aplix Corporation.
 All rights reserved.
- JBlend and all JBlend-based trademarks and logos are trademarks or registered trademarks of Aplix Corporation in Japan and other countries.

- Chaku-Uta® and Chaku-Uta Full® are registered trade marks of Sony Music Entertainment Corp.
- Java and all Java-based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the United States and other countries.



 Bluetooth is a trademark of the Bluetooth SIG, Inc.



The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Samsung Electronics is under license. Other trademarks and trade names are those of their respective owners.

Bluetooth

In the frequency band of the Bluetooth® functions of 804SS, Industrial, scientific or medical equipments such as microwave ovens or in-house radio stations such as the ones used in production lines or by amateur radio stations (Referred to as "other radio stations" hereafter) are used. In order to prevent radio interference with other radio equipments, follow the points listed below in using handset.

- 1. Before using Bluetooth® functions, confirm there are no "other radio stations" operating near you.
- 2. In case there is a radio interference with "other radio stations", move to some other place or stop the Bluetooth® functions (Stop emitting the radio waves) immediately.
- 3. If you have any questions or problems with Bluetooth emissions, contact Vodafone as listed below:

Contact: Vodafone K.K. Customer Centre

From a Vodafone handset, dial 157 (toll free) for General Information. See "Customer Service" (◆ P.28-19) for landline numbers by service area.

804SS transmits on the 2.4 GHz band, employing frequency-hopping spread spectrum (FHSS) modulation, with resistance to radio frequency interference between 1.5 - 5 metres, depending on usage environment.

SAR Certification Information

804SS meets the technical standards of Ministry of Internal Affairs and Communications (MIC) regarding radio wave absorption by a human body.

These technical standards are established on a scientific basis to prevent radio waves emitted from wireless devices such as mobile phones that are used close to human head from affecting human health. These standards assure that the SAR (Specific Absorption Rate), an indicator of the amount of average energy absorbed in the side of a human head, must not exceed the permissive value of $2W/kg^*$. This value includes a substantial safety margin designated to assure the safety of all persons, regardless of age and physical size. The value is equal to the international guideline recommended by International Commission on Non-Ionizing Radiation Protection (ICNIRP) that has a cooperative relationship with the World Health Organization (WHO).

The highest SAR value for 804SS is 0.221 W/kg. This value is obtained in accordance with the MIC testing procedure with the mobile phone transmitting at its highest permitted power level. While there may be differences in the SAR levels depending on phones, they all meet the MIC's permissible value. Because mobile phones are designed to employ the minimum power level required for the communication with the base station, the SAR of the phone during a call is usually below the maximum value.

For further information about SAR, please see the following websites:

MIC: http://www.tele.soumu.go.jp/j/ele/index.htm

ARIB: http://www.arib-emf.org/initiation/sar.html

* The guideline is defined by relevant laws and regulations associated with the Radio Law (No. 2 of Article 14 of Ordinance Regulating Radio Equipment.).



USIM Card



General Information & Precautions

Universal Subscriber Identity Module (USIM) Card is an IC card containing customer and authentication information, including handset number and limited storage for Phonebook entries and SMS messages. Install USIM Card to use 804SS; turn 804SS power off to install/remove USIM Card.



Insert USIM Card into another compatible handset to access SMS messages and Phonebook entries saved on USIM Card. Note the following precautions regarding USIM Card usage and care (see USIM Card User Guide for details):

- Avoid using excessive force when installing/removing USIM Card.
- Vodafone is not liable for damages resulting from inserting USIM Card into IC card readers or other third party devices.
- · Always keep USIM Card IC chip clean.
- Clean USIM Card IC chip with a soft, dry cloth.
- Do not attach labels to USIM Card: malfunction may result.

Notes

- USIM Card is the property of Vodafone.
- If USIM Card is lost or damaged, you will be charged for reissuing it.
- Return USIM Card to Vodafone upon termination of subscription.
- · Returned USIM Cards are recycled.
- USIM Card specifications may change without prior notice.
- If USIM Card or 804SS with USIM Card inserted is lost or stolen in Japan or abroad, immediately contact Customer Service (♠ P.28-19) to suspend service.
- Handset/USIM Card repairs, replacement or upgrades may deactivate Chaku-Uta®, Chaku-Uta Full®, V-applications or video files.
- Back-up USIM Card files. Vodafone is not liable for lost files.



Installing & Removing USIM Card

Always turn power off before opening 804SS to remove battery, or insert/ remove USIM Card.

Installation

- Remove battery (© P.1-12)
- With IC chip down, insert USIM Card into card slot



3 Push in USIM Card until it stops and locks



Removal

- Remove battery (© P.1-12)
- Press down on USIM Card and gently slide it out



Note

- Inserting USIM Card with excessive force may damage it or 804SS.
- . Do not misplace a removed USIM Card.
- To prevent damaging it, avoid touching the IC chip when installing or removing USIM Card. Do not touch battery contacts.

USIM PINs

USIM Card features two (4- to 8-digit) security codes: PIN and PIN2.

PIN

Use PIN to prevent unauthorised use of 804SS by others.

- Modify PIN (◆ P.13-2).
- When PIN lock is activated, PIN entry is required each time 804SS is turned on or whenever USIM Card is re-inserted (◆ P.13-2).

PIN2

PIN2 is required for Reset Call Cost or Edit Cost Limit, etc.

• Modify PIN2 (◆ P.13-2).

Cancelling PIN Lock (PUK/PUK2 Code)


Incorrectly entering PIN or PIN2 three consecutive times activates PIN Lock and limits 804SS function access. Enter PUK (PIN Unlocking Key) Code to cancel PIN Lock. For more information, contact Customer Service (P.28-19).


Note


- Entering PUK or PUK2 incorrectly ten consecutive times locks USIM Card and deactivates 804SS. Write down PUK and PUK2.
- Unlocking a locked USIM Card requires a special procedure. Contact Customer Service (♠ P.28-19).

Handset Parts & Functions

Handset

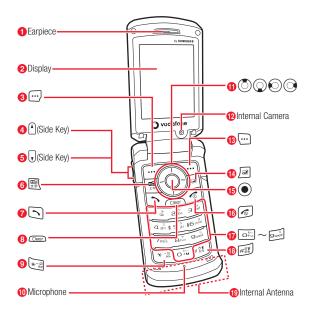

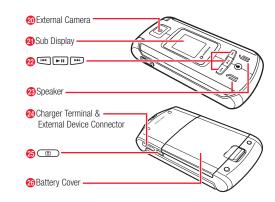

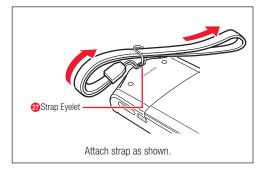

- 1 Earpiece
- ② Display
- 3 Left Softkey/Mail Key

Open Messaging menu or execute Left Softkey command/function.

4 (Side Key)

Raise volume. Alternatively, display Clock on Sub Display if pressed for 2+ seconds with 804SS closed.

(Side Key)

Lower volume. Alternatively, display Clock on Sub Display if pressed for 2+ seconds with 804SS closed.

6 Media Player/Character Key

Activate Media Player or select text entry mode.

Start Key

Initiate and receive voice calls.

3 Clear/Back Key

Delete entered text or return to the previous window.

Enter line breaks in text entry windows.

In Standby, press for 2+ seconds to open Phone Profiles.

- **Microphone**
- **Multi Selector**

Select menu items, move cursor, scroll text or execute functions (P.xii).

(1) Internal Camera

Used for capturing your own image or for Video Calls.

® Right Softkey/Vodafone live! Key

Access Vodafone live! or execute Right Softkey command/function.

Switch Bar Key

Display Switch Bar (P.1-19).

(1) Centre Key

Open Main Menu or execute Centre Softkey command/function.

16 Power/End Key

Turn power on/off or end operations.

WKeypad

Enter numbers or characters and select menu items.

#/Manner Key

Toggle Symbols menus in text entry windows.

In Standby, press for 2+ seconds to activate/cancel Manner Profile.

- 19 Internal Antenna
- @External Camera

Capture images or send video during a Video Call.

Sub Display

Camera viewfinder and Media Player window appears here.

External Media Keys
Operate Camera or Media Plaver.

Speaker

29 Charger Terminal & External Device Connector

Connect Charger, Stereo Earphone Microphone, USB Cable, etc. here.

Camera Key

Activate Camera or release shutter.

@Battery Cover

Opened to install/remove battery or USIM Card.


Strap Eyelet

Tip

• Internal Antenna

804SS has no external antenna. 804SS transmits and receives signals via Internal Antenna. Do not cover or place stickers, etc. over the area containing Internal Antenna. Voice quality may vary by where/how 804SS is used.

Display Indicators

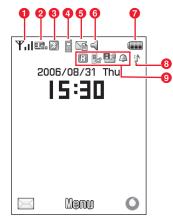

- ① Y_{II} Signal Strength (more bars _{II} indicate stronger signal) Out Out-of-Range (outside service area or no signal) 圏外 Out-of-Range (When *Language* is set to *日本語*)
- (Blue) Bluetooth Active
 (Flashing in Red & Blue) Bluetooth Transmission
 Bluetooth Transmission

- (Blue) USB Connected
- (Orange) USB Active
- (Colour) V-application Active
- (Black & White) V-application Paused
- 4 Voice Call in Progress
 - Video Call in Progress
- 6 New MMS
 - New SMS
 - Voice Mail
- 6 Normal Profile
 - Manner Profile
 - Car Profile
 - Meeting Profile
 - Outdoor Profile
 - Offline Profile
- Battery Strong
 - Battery Moderate
 - Battery Low
 - (Flashing) Battery Weak (Charge Now)
- 8 Roaming Active
 - Voice Mail/Call Forwarding Active
 - MMS Memory Full
 - SMS Memory Full
 - Voice Mail Memory Full
 - Wake-up Alarm/Alarm Set
- Vibration & Melody/Vibration & Increasing Melody

- ♪ Melody/Increasing Melody
- Vibration
- Mute & Melody/Mute & Increasing Melody

Tip

 When \(\psi\) (Red) appears, packet data transmissions and outgoing MMS are possible, however, other handset transmissions are disabled.

Sub Display Indicators



- 1 Signal Strength (more bars indicate stronger signal)
 - Out Out-of-Range (outside service area or no signal)
- Wake-up Alarm/Alarm Set
- - New SMS
 - Voice Mail
 - JE MMS Memory Full

- **SMS Memory Full**
- Voice Mail Memory Full
- 4 Vibration & Melody/Vibration & Increasing Melody
 - Melody/Increasing Melody
 - Vibration
 - Mute & Melody/Mute & Increasing Melody
- Battery Strong
 - Battery Moderate
 - Battery Low
 - (Flashing) Battery Weak (Charge Now)

Tip

• To display Clock with 804SS closed
Press Side Key 1 or 1 for 2+ seconds.

🥦 Battery & Charger

Before Using Battery or Charger

Charge battery before first use of 804SS or after periods of disuse.

Charging Battery

• Long periods of disuse may affect battery's ability to hold a full charge.

- 804SS uses a lithium-ion battery; charge battery in any state without damaging its ability to hold a charge.
- Do not charge battery under the following conditions:
 - Where the ambient temperature is below 5°C or above 40°C
 - Where there are high levels of humidity, vibrations or dust
 - Near a radio receiver (May cause feedback)
- 804SS or Charger may warm while charging. This is normal, however, should they become very hot to the touch, stop charging and contact Customer Service (P.28-19).
- Charge battery at least once every six months while not in use.
 Otherwise, battery may become unusable.
- Battery is a consumable; replace it if operating time shortens noticeably.

Note

- Use specified Charger only.
- · Battery must be inside 804SS to charge it.
- When not in use, unplug Charger from outlet or cigarette lighter socket.

Battery Life

Battery time/life may be be reduced by any of the following:

- · Environmental Factors
 - Storing/using 804SS in ambient temperatures outside 5°C 40°C
 - Using 804SS in when signal is poor/leaving it on out-of-range
 - Allowing debris to collect on 804SS, battery or charger terminals
- · Operational Factors
 - Active V-applications
 - Camera use
 - Media Player use
 - Excessive Keypad use (e.g. for gaming or messaging, etc.)
 - Bluetooth transmissions
 - Frequently opening and closing 804SS
- Settings
 - Using Slide Show
 - Setting Brightness higher or Backlight Time longer
 - Using Media Player with Backlight set to Always on

Battery Disposal

Do not dispose of exhausted batteries with ordinary refuse. Tape over battery terminals before disposal or bring to a Vodafone shop. Follow any and all local regulations regarding battery disposal.

Lithium-ion batteries are recyclable.

When Battery Runs Out


When battery is weak, a warning appears and 804SS beeps. Charge or replace battery; otherwise 804SS will automatically turn off.



Installing & Removing Battery

Installation

Slide Tab over and lift up Battery Cover as shown

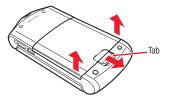

Fully remove Battery Cover as shown



3 Align Battery Slots and 804SS Tabs to insert battery as shown



4 Insert Battery Cover Tabs into 804SS Slots to attach Battery Cover as shown




Note

- · Remove battery cover with care; stress on tabs may damage them.
- · Gently insert battery to avoid damaging 804SS tabs.

Always turn 804SS off before removing battery. Never remove battery while AC Charger or In-Car Charger is connected.

Slide Tab over and lift up Battery Cover as shown

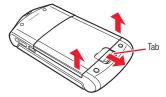

> Fully remove Battery Cover as shown



3 Lift battery up and remove as shown







AC Charger

Use specified Charger only.


Open Terminal Cover and insert Charger Connector to the connector

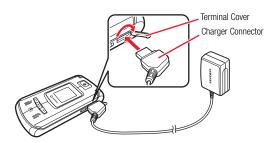

Plug Charger into an AC 100V outlet

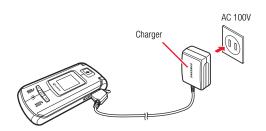

3 When battery is charged, unplug Charger from outlet, then from 804SS

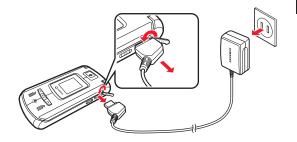

Tip

. Battery Charged Confirmation

When 804SS is on, battery indicators flash when battery is fully charged. While charging, battery indicators change as follows:

When 804SS is off, charging battery animation and *Charging*... appear. When battery is fully charged, full battery graphics and *Battery full* appear.

Charging Time

An empty battery requires approximately 140 minutes to charge when Display is off, longer when display is on. Charging time may vary by ambient temperature.

The Charging via PC USB Port

Battery will charge when 804SS is connected to a PC via included USB cable.


- 1) Open Terminal Cover and insert USB Cable Connector
- (2) Insert USB Connector into a PC USB port
- ③ When battery is charged, remove Connector from 804SS and replace Terminal Cover, then remove USB Connector from the PC USB port

Charging via USB takes more time; charging time will vary by PC. A weak battery may not charge via a PC USB port.


9

In-Car Charger (Optional)


1 Open Terminal Cover and insert Connector Plug

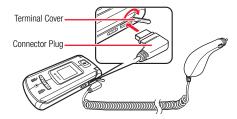

2 Insert Charger Connector into lighter socket

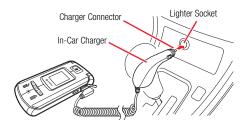

- 3 Start the car's engine
- 4 When battery is charged, remove In-Car Charger Connector, replace Terminal Cover, then remove Charger Connector from lighter socket

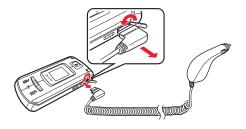

Tip

- Battery Charged Confirmation (P.1-13)
- Charging Time (P.1-13)
- . When using In-Car Charger

See In-Car Charger manual. For safety, use In-Car Holder together with In-Car Charger.

Note


- Do not charge battery in ambient temperatures over 40°C (e.g. inside a closed automobile in direct sunlight, etc.).
- Use In-Car Charger in cars with minus-earth only (DC 12/24V).

Power On/Off

Power On

Open 804SS

Press for 1+ seconds

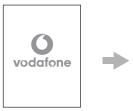



Standby

Tip

. To confirm handset phone number

In Standby, press (Menu) — [5]; save or edit your information in My Phonebook Details including name and mail address (P.5-11).

· When PIN lock is activated

PIN entry is required each time 804SS is turned on.

When 804SS is left open without operations
 Display automatically shuts down to conserve power.

Note

 Use both hands to open and close 804SS; avoid using excessive force which could damage handset or lead to malfunctions. Power Off

Press of for 2+ seconds and watch Display turn off

Time & Date

Time & Date

Default Setting ■ Time format: 24H ■ Date format: YYYY/MM/DD

Some 804SS functions cannot be used unless time and date are set. Open Time & Date to change Time Format or Date Format.

- Press () (Menu) and select Settings → Phone settings → Time & date
- 2 Adjust settings

To set time

Highlight Time field and enter the time (24-hour format)

To set AM/PM (for 12-hour format)

- ①Highlight Time field and press ② twice for AM/PM option
- ②Use 🔾 to toggle AM and PM

To set date

Highlight Date field and enter the year, month and day

To change time format

- (1) Select Time format field
- ②Select a setting and press (OK)

To change date format

- 1)Select Date format field
- ② Select a setting and press (OK)
- 3 Press ... (Save)

Changing Home Time Zone

Default Setting Home zone : GMT+9h
Daylight saving : Unchecked

Change time zone to the place you use handset. Daylight saving time can also be set

- Select Home zone field and make settings

To set the Home Time zone

- 1) Use to specify a target area
- (2) Press () (OK)

To set daylight saving time

- 1 Check Daylight saving
- 2 Press (OK)

3 Press (Save)






] In Standby, press (Menu)



Main Menu

- 2 Highlight an item and press (Select)
- Repeat Step 2 to open/activate the target function

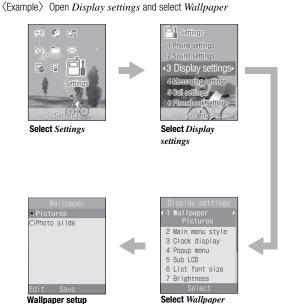

Pictures

window appears

Tip

· To end an operation

Press . Operation ends and 804SS returns to Standby. When multiple functions are active, the next active operation window appears.

· To cancel/escape an operation

Press . Operation/function is cancelled and 804SS returns to Standby or the previous window appears. For some menus, a confirmation appears.

Menu operations (

 P.xii)

Display is different (Step 2), however operations remain the same.

E Selecting Items with Keypad

When numbered items appear in menus, etc., use keypad to select them.

Simple Search

Use Keypad as a shortcut to menu items or Phonebook entries. Groups of letters are assigned to each key (◆ P.4-3). Press a key for a list of items or entries beginning with letters on that key.

- 1 In Standby, press a key
- 2 Press (Search)
- 3 Press to toggle between Phonebook and Menu



Press to toggle between Phonebook and Menu

Enter a different number for a different list of entries or items

(4) Select an entry or item

9

Shortcuts

In Standby, press a key to open the assigned shortcut.

Key	Corresponding Menu/Function		
(□)	Messaging		
··· (()	Vodafone live! Main Menu		
(1 + seconds)	Vodafone live! Menu		
四日 文字	Music Playlists		
(1+ seconds)	Music Player (last played track plays)		
	Switch Bar		
\odot	Edge Bar*		
	Phonebook List (last used Search Method)		
O	Received log		
()	Call Log (Dialled Records)		
	Call Log (Current Contacts)		
* (1+ seconds)	econds) Phone Profiles		
### (1+ seconds)	Activate/Cancel Manner Profile		
(1+seconds)	Mobile Camera (last used function)		

^{*} The function invoked using (can be changed (P.15-4).



Switch Bar

Initiate *Call, Massaging, Vodafone live!* or *Media Player*; use multiple functions concurrently (e.g., create a message while listening to music, or browse the Mobile Internet while talking on the phone).



- 1 In Standby or an active function window, press
 - Use to highlight a function and press (Select)

To exit an active function

From the window of the function to exit, press

To exit all active functions

- 1) Press 🖃
- ②Use O to highlight *End all?* and press O (Yes)

Options

When *Options* appears at bottom-right of Display, press \bigodot to open Options. To execute an option, highlight the item and press \bigodot (Select).

Tip

• See "Options" (♦ P.xii)

Security Codes

Phone Password, Centre Access Code and Network Password are required to use 804SS.

Phone Password

"9999" or the number specified at subscription; required to use/change some 804SS functions.

- · Entered digits are represented with *
- If incorrect, an error message appears; try again.
- Change Phone Password as required

Centre Access Code

The 4-digit number specified at subscription; required for Optional Services or to subscribe to fee-based Web information services.

Centre Access Code cannot be changed on 804SS; a special procedure is required. For details, contact Customer Service (♠ P.28-19).

Network Password

The 4-digit number selected at initial subscription, required to restrict handset services. Entering Network Password incorrectly three consecutive times locks Call Barring settings. To resolve, Network Password and Centre Access Code must be changed. For details, contact Centre Customer Service (P.28-19).

• Network Password can be changed on 804SS (P.16-9).

Note

- Write down Phone Password, Centre Access Code or Network Password. If you forget any of these codes contact Customer Service (♠ P.28-19).
- Do not reveal Phone Password, Centre Access Code or Network Password to others. Vodafone is not liable for damages caused by misuse of these codes by others.



Initiating Calls

See P.5-8 to call from a Phonebook entry or P.6-2 for Video Calls.

Enter a phone number

Confirm the number and press



Press **f** to end the call

Tip

· To correct entered digits

Press to delete the last digit. Press for 1+ seconds to delete all.

. When the line is busy

Press $\[\]$ to end the call and try again later. If Auto Redial is active, number is automatically redialled. Press $\[\]$ (Cancel) or $\[\]$ to cancel.

. When Stereo Earphone Microphone is connected

Enter a number and press Stereo Earphone Microphone switch to initiate a call. Press switch for 1+ seconds to end a call

Engaged Call Operations (♠ P.2-4)

Placing International Calls from Japan

A separate subscription is required for international calling.

- 1) Enter a phone number
- (2) Open Options and select International dial
- (3) Select a country or Enter Code and enter country code
- (4) Select Japan

(5) Confirm the number and press

☐ Calling a Vodafone Handset Overseas

Enter handset phone number; country code is not required.

☐ Calling from Overseas (© P.2-9)

4 Options

Item	Description
Video call	Initiate a video call.
Add to Phonebook	Save number to Phonebook or USIM Card Phonebook (� P.5-5).
Create message	Open a new message addressed to the number (♠ P.19-2).
Phonebook	Open Phonebook Search window.
Call log	Open Call Log.
International dial	Add International Code/Country Code (◆ P.2-2).

Receiving a Call

When 804SS rings/vibrates, press or (Accept)





Press **to end the call**

Tip

- . When Anykey Answer is active
 - Press any key except ..., ..., or Side Key 1 to answer voice calls.
- . To mute 804SS ringer for an incoming call While 804SS rings/vibrates, press . (Mute); caller continues to hear ringback
- . To adjust ringer volume While 804SS rings/vibrates, press Side Key (A) or (7).

+ one. To answer the call, press (Accept).

- When Stereo Earphone Microphone is connected When 804SS rings/vibrates, press Stereo Earphone Microphone switch for 1+ seconds to accept call. Press again for 1+ seconds to end the call.
- Engaged Call Operations (© P.2-4)

Ringtones

Specify ringtones for saved numbers by Phonebook entry or Category (P.5-3. 5-5). When no ringtone is set, 804SS rings according to Profile Settings (P.9-2).

Incoming Call Window

If caller sends Caller ID, phone number appears; if saved in Phonebook, name appears. When an image is set in Phonebook or Category, image also appears (P.5-3, 5-5), If caller hides Caller ID, Withheld appears,

Missed Call Window

After an unanswered incoming call, Missed Call window appears, Press (View), to open Missed Call Log (P.2-5).

➡ When You Cannot Answer a Call

Use Call Forwarding or Voice Mail to forward incoming calls to a specified number or Voice Mail Centre. When Call Forwarding or Voice Mail is set to No reply. press (...) (Busy) to proactively forward an incoming call (P.16-3, 16-4).

Reject Incoming Call

Proactively disconnect an incoming call without answering it. The rejected call is recorded in Missed.

While 804SS rings/vibrates, press ()

Tip

- . When Side Key is set to Reject
 - Reject an incoming call by pressing Side Key (1) or (1) for 1+ seconds.
- · To reject call and send a busy message

When neither Call Forwarding (P.16-2) nor Voice Mail (P.16-2) is active, press (...) (Busy) to proactively disconnect a call without answering it: "busy" message appears on the caller's handset before the call is disconnected. If the caller's handset is incompatible the call is simply disconnected.

To automatically reject a call (♠ P.13-5)

Engaged Call Operations

Earpiece Volume

Adjust Earpiece or Earphone volume. Setting remains even after power off.

During a call, press Side Key 🛕 or 🕡

Hold

When a call is put on hold, the party on hold hears a hold tone and neither party can hear the other's voice. A subscription to Call Waiting (◆ P.16-6) or Conference Call (◆ P.16-7) is required before calls can be placed on hold.

- During a call, press (Hold)
- Press (Retrieve) to reconnect the call
- Speaker Phone
- During a call, press () and select *Yes*

To cancel Speaker Phone

Press (🖺)

Engaged Call Options

Item	Description	
Mute	Mute 804SS microphone/keypad tones.	
New call	Enter a number and press (Call) to initiate another call; requires a subscription to Conference Call (P.16-7).	
Create message	Open new message addressed to the number (◆ P.19-2).	
Phonebook	Open Phonebook Search window.	
Add to Phonebook	Save number to Phonebook or USIM Card Phonebook (♠ P.5-3).	
Send DTMF	Enter digits then press (Send) to send tones.	
Memo	Create and save text memos (P.14-7).	
End call	Disconnect call.	
Switch to headset/Switch to phone	Appears when Bluetooth-compatible headset is in use. Select headset or phone (handset).	

Call Log Records

Viewing Call Log Records

Current contacts	All incoming and outgoing calls		
Missed	All missed incoming calls		
Received	All received incoming calls		
Dialled	All outgoing calls		

Press 🔾

Use to select a Call Log

To confirm number and call duration for a record

Highlight an item and press () (View)

Call Log Record Indicators

Noice call to/from a number saved in Phonebook

: Call to/from a number saved in USIM Card Phonebook

: Voice call to/from an unsaved number

: Video call to/from a number saved in Phonebook Current Contacts (all incoming/outgoing calls) Indicators

: Received call : Dialled call

Calling from Call Log Records

Press (O

Use to select a Call Log

Highlight a record and press



To initiate a video call

Open Options and select Video call

Deleting Call Log Records

Deleting One Record

Delete one Call Log Record.

Press (O

Use to select a Call Log

Highlight a record, open Options, select Delete → Selected and select Yes

Tip

To delete individual calls from records

1 Perform Steps 1 and 2

(2) Highlight a record and press (View)

(3) Highlight a call, open Options, select Delete → Selected and select Yes

Deleting All Records

Delete all Call Log records at once.

Press 🔾

Use to select Current contacts

2 Open *Options*, select *Delete* \rightarrow *All* and select *Yes*

3 Enter Phone Password and press (Confirm)

Call Log Options

Item	Description	
Voice call	Initiate a voice call to the current number.	
Video call	Initiate a video call to the current number (P.2-5).	
Add to Phonebook	Save number to Phonebook or USIM Card Phonebook (♠ P.5-5).	
Create message	Open a new message addressed to the current number (♠ P.19-2).	
Delete	Delete current call record (P.2-5).	
Add to reject list	Add the number to Black List (P.13-5).	
View phonebook details	Open Phonebook entry details for a number.	
Call manager	Confirm/reset call time/cost information (P.2-6).	
International dial	Add international code and country code to number (P.2-2).	

🥦 Call Manager

Data counter Confirm/reset incoming/outgoing data volume.				
Call costs	Confirm/reset Total Costs, Last Call Cost or Cost Limit; change Call Costs currency unit.			
Call times	Confirm/reset incoming/outgoing voice/video call times.			

Data Counter & Call Times

-] Press 🔾
- 2 Open Options and select Call manager
- 3 Select an item

To reset Data Counter/Call Times

- Highlight item to reset, open Options and select Reset or Reset all
- (2)Select Yes
- (Confirm)

To reset Call Costs

- (1) In Call Costs, open Options and select Reset call cost
- ②Enter PIN2 and press (Confirm)

To change Call Costs currency unit

- (1) In Call Costs, open *Options* and select *Setup currency*
- (2) Enter PIN2 and press (Confirm)
- (3) Highlight Price field to enter a price in Yen
- (4) Highlight Currency field and enter the currency unit.
- (5) Press (Save)

Edit Cost Limit

After reaching the call cost limit, only emergency calls (P.2-9) can be initiated. But Vodafone live! is not available.

- Press ()
- Open Options and select Call manager
- Select Call costs
- Open Options and select Edit cost limit
- Enter PIN2 and press (Confirm)
- Enter limit and press (Save)

International Roaming

A separate subscription is required for international calling. Contact Customer Service for more information about international roaming.

Changing Network Mode

Default Setting ■ 3G

Vodafone recommends setting Network Mode to 3G.

- Press (\bullet) (Menu) and select $Settings \rightarrow Connectivity$ → Network mode
- Select a setting

Tip

Available Network Modes:

Automatic: Network is set automatically by location

GSM 900/1800: available overseas GSM 1900: available overseas

3G: available domestically and overseas

2

Network Setup

Selecting a Network

Default Setting Automatic

Select a network (operator) by location or use automatic setting.

Press \bullet (Menu) and select Settings \rightarrow Connectivity

→ Network selection

Select a setting

To select automatically

Select Automatic

To select a specific network

(1) Select Manual

(2) Select a network

Preferred Network

Insert networks into Preferred Networks list or add them to the end. Select networks from Network List or create new network entries.

Press (\bullet) (Menu) and select $Settings \rightarrow Connectivity$

→ Preferred networks

Edit Preferred Networks

To insert/add a network from Network List

- 1) When inserting, highlight insert position
- (2) Open Options and select Insert or $Add \rightarrow Network \ list$
- (3) Select a network and press () (Insert/Add)

To insert/add a new network

- 1) When inserting, highlight insert position
- (2) Open Options and select Insert or Add \rightarrow New network
- (3) Enter network settings and press (Insert/Add)

To delete a network from Preferred Networks

Highlight network to delete, open *Options* and select *Delete* → Yes

Tip

New Network Settings

Country code	Up to 3 digits	
Network code	Up to 3 digits	
Network name	Up to 20 single-byte alphanumerics	
Network type	GSM or 3G	

Calling from Outside Japan

Enter phone number including area code

To call an in-country landline or mobile phone

Proceed to Step 5

To enter country code, etc. directly

Press of 1+ seconds to enter +, enter country code and phone number omitting the first 0 (except when calling landlines in Italy) and proceed to Step 5.

Open Options and select International dial

Select country or select Enter Code and enter code

Select Abroad

Confirm number and press



Tip

• To change or add International code or country code (♦ P.15-2)

Emergency Calls

Some emergency numbers (110 (Police), 119 (Fire), etc.) are available even when certain Call Barring settings are active. See details below.

804SS Status	Dialable Numbers	
Offline Profile (P.3-3)	None	
Call Cost limit exceeded (P.2-7)	110, 119, 118, 112, 911	
804SS is locked (◆ P.13-4)	112, 911	
Required PIN not entered (◆ P.13-2)	112, 911	
USIM Card cannot be authenticated (◆ P.13-3)	112, 911	
Outgoing Call Barring (P.16-8) is active	110, 119, 118, 112, 911	

Note

Vodafone can not guarantee connections in all countries and regions. Handset operations may vary by network, signal or function settings.



Minding Mobile Manners

Please take care not to disturb others when using your handset.

- Turn 804SS off in theatres, museums and other places where silence is the norm.
- Keep 804SS off aboard airplanes or inside hospitals or other places where handset use is prohibited.
- Refrain from using 804SS in places such as restaurants, hotel lobbies or elevators.
- Observe announcements or posted instructions regarding handset use aboard trains, etc.
- Refrain from handset use that interrupts the flow of pedestrian or vehicle traffic.

Manner Related Functions

804SS offers two manner-related profiles.

Manner Profile:

Silence 804SS sounds and activate Vibration for all alerts, tones and alarms. Use Manner Key to activate or cancel Manner Profile.

Offline Profile:

Temporarily suspend 804SS transmissions; other 804SS functions may still be used while Offline Profile is active.

Silence 804SS sounds or activate Vibration for each alert, tone or alarm individually in Sound Settings.

Manner Profile

In Standby, press ﷺ for 1+ seconds

Tip

- When Manner Profile is active
 - appears.
- Even when Manner Profile is active, shutter click sounds for Camera.

Changing Profile

804SS features six Profiles, including Manner Profile and Offline Profile.

- In Standby, press 📆 for 1+ seconds
- 2 Select a Profile
- 3 Press (Save)

Tip

- Turning 804SS Off with Offline Profile active
 - When turning on again, a confirmation for use of Offline Profile appears. Press ... (No) to select Normal Profile.
- To change 804SS Profile (P.9-2)

Profiles

Select a Profile depending on usage and edit settings as required (P.9-2).


Profile	Description		
√ Normal	Normal sounds produced by 804SS		
Manner Manner	No sounds produced by 804SS		
← Car	Set Automatic reception of voice calls and activation of the speakerphone for use while driving		
A Meeting	Ringtone or Key tone preset to Vibration or Mute		
* Outdoor	Ringtone or Key tone preset to maximum sound volume		
offline	Wave transmission/reception stopped		



Text Entry

Enter hiragana/kanji, single- or double-byte katakana, alphanumerics or symbols, pictograms and emoticons.

Text Entry Window

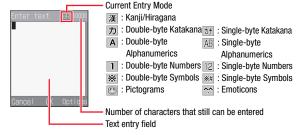



^{*} Suggestions appear only in Kanji/Hiragana mode, when Prediction On is active.

Number Only Text Entry Fields

Text entry windows do not appear for Phonebook Phone fields or Alarm Time fields; enter numbers directly into these fields.

Changing Text Entry Mode

Text Entry modes may be limited in some text entry fields or windows.

📘 In a text entry window, press 🛒



2 Highlight entry mode and press (OK)

Tip

• To toggle symbols

In text entry windows, press to toggle Symbols, Pictograms and Emoticons.



Key Assignments

Multiple characters are assigned to each key. Press a key repeatedly until the target character appears.

Press $\fbox{\ \ }$ to add $\ \ \ \$ or $\ \ \ \$ to kana or enter line breaks and $\r{\ \ }$ to toggle symbols.

Key	Kanji/Hiragana	Katakana	Alphanumerics	Numbers
1 8	あいうえおぁぃぅぇぉ 1	アイウエオァィゥェォ 1	.@/:~1	1
5 opc	かきくけこ2	カキクケコ2	abcABC2	2
∃ def	さしすせそ3	サシスセソ3	defDEF3	3
4 ghi	たちつてとっ 4	タチツテトッ 4	ghiGHI4	4
5 jkl	なにぬねの5	ナニヌネノ5	jklJKL5	5
6 mno	はひふへほ6	ハヒフへホ6	mnoMNO6	6
7 _{pqrs}	まみむめも7	マミムメモ7	pqrsPQRS7	7
8tuv	やゆよゃゅょ 8	ヤユヨャュョ 8	tuvTUV8	8
9w)@	らりるれろ9	ラリルレロ9	wxyzWXYZ9	9
O+n p	わをん、。-·~!?〈Space〉O	ワヲン、。-·~!? (Space) 0	,!? (Space) 0	0
*** Aa	Toggle between upper- and lower-case or add " or " to unfixed, convertible kana Toggle between upper- and lower-case Enter Line Break			Enter Line Break
# # E E	 Reverse toggle characters assigned to the same key before finalizing character selection Toggle Pictograms, Double-byte Symbols, Single-byte Symbols, Emoticons 			Toggle Pictograms, Double-byte Symbols, Single-byte Symbols, Emoticons

The When calls/alarms interrupt text entry

Answer incoming calls without saving text first: disconnect call to return to text entry window. Similarly, close Alarm window to return to text entry window.

Entering Characters

Hiragana/Kanji

Enter hiragana/kanji with or without conversion predictions. When Prediction On is active, Suggestions appear below text entry window.

Activate Kanji/Kana entry mode to enter hiragana



To add "or "

Enter a valid character and press



To correct a misentry

Use to delete the character then enter the correction

When key is pressed too many times

Press # to toggle characters in reverse

To enter consecutive characters assigned to a same key

Press (to move cursor to the right

To enter unconverted hiragana

Press () (Confirm)

Convert hiragana

To select a conversion from Suggestions

1) Press (2) to open Suggestions

(2) Highlight a conversion and press (Confirm)



When the desired conversion does not appear

- 1) Press (Convert)
- 2 Use to change the conversion range
- 3 Press to open Suggestions
- (Confirm)
- **5** Repeat steps **2** through **4** as required

Tip

. When characters do not convert to the intended Kanji

Try entering different readings of the Kanji. When multiple Kanji characters do not convert together, try to convert them separately.

 To switch the contents in Suggestions between a predicted/conversion alternatives

If you press (Convert) while predicted alternatives are displayed, conversion alternative will be displayed, and if you press (Predict) while conversion alternatives are displayed, predicted alternatives appear.

- To set/release the prediction entry function (P.4-10)
- To convert easily by using User dictionary (♠ P.4-10)

Resetting Text Entry History

As predicted or conversion alternatives, character strings or kanji converted in the past appear by priority. Restore the displayed contents to defaults.

- ① Press ② (Menu) and select Settings → Phone settings → User dictionary → Reset learning
- (2) Enter Phone Password, press () (Confirm) and select Yes



Katakana

In Katakana mode, press a key to enter the assigned character



To add " or "

Enter a Katakana to which a voiced or semi-voiced sound symbol should be added and press 💌

To correct a misentry

Use Clear to delete the character and press the correct key

When key is pressed too many times

Press #27 to return to the previous character assigned to the same key

To enter consecutive characters assigned to a same key

Press to move cursor to the right



• To enter Katakana in Kanji/Kana entry mode

For example, to convert "くも" to "クモ" or "クモ".



- 1 In Kanji/Kana entry mode, enter hiragana
- 2 Press (EngNumKana)
- (Confirm) (3) Highlight katakana conversion alternative and press

Alphanumerics

In Alphanumerics entry mode, press a key to enter the assigned character



To toggle upper and lower case

Enter a letter and press

To correct a misentry

Use to delete the character

When key is pressed too many times

Press # to return to a previous character assigned to the same key

To enter consective characters assigned to a same key

Press to move cursor to the right

Tip

· To enter alphanumerics in Kanji/Kana entry mode

Press key(s) assigned to alphanumerics as many times as it would take to enter same character(s) in Alphanumerics mode. While unconverted kana appear in a text entry window, press ... (EngNumKana) for alphanumeric conversion alternatives. Highlight one and press ... (Confirm).



Numbers

In Number entry mode, press number keys



To correct a misentry

Use to delete the entry, then enter correction.

Tip

- . To enter numbers in Kanji/Kana entry mode
 - ① In Kanji/Kana entry mode, press a key to which numbers are assigned
 - (2) Press (...) (EngNumKana)
 - (Confirm) Highlight a number conversion alternative and press



Symbols, Pictograms or Emoticons

- In a text entry window, press # to toggle symbols
- Highlight target character and press (OK)

To enter symbols, pictograms or emoticons successively Press (Continue)



Tip

• To enter symbols, pictographs or emoticons in Kanji/Kana entry mode Enter hiragana like てん and press … (Convert), symbols · and … appear among conversion alternatives. Similarly, convert はーと or でんわ to pictograms and カーい or えーん to emoticons.

Line Breaks

Enter a line break the same way in all text entry modes.

In a text entry window, press



Quoting Saved Text

Using Phonebook Entries

In a text entry window, open Phonebook entries via Options to insert phone numbers or mail addresses into text.

In message text, open *Options* and select *Phonebook*

Select an entry and open details

Highlight an item and press (Select)

Using SMS Templates

Save frequently used words/phrases as SMS templates beforehand (P.4-11).

In message text, open Options and select SMS template

Select a template

Using Templates

Enter frequently used words/phrases with fewer key strokes.

In message text, open Options and select Templates

Select an item

Editing Text

Deleting

Highlight character to delete and press Clear

When a space is highlighted

The character before cursor is deleted

To delete all text on/after cursor

Press For 1+ seconds

To delete all text

Place cursor at the end of text and press for 1+ second



Copy, Cut & Paste

Copying or Cutting Characters

Select a range of characters to copy or cut. Paste copied or cut characters repeatedly to other locations.

- In message text, open Options and select Copy or Cut
- 2 Use to highlight the first character in the range and press (Start)

To copy/cut all

Press (All)

3 Use **(** to specify range and press **(** (End)

Tip

To copy text from Phonebook entries or My Phonebook Details
 Open Options and select Copy item (♠) P.5-9. 5-11)

Pasting Characters

Use to move cursor to paste location

Open Options and select Paste

Prediction On/Off (Japanese Only)

Prediction On is restored each time power is turned on.

In message text, open Options and select Prediction Off or Prediction On

Font Size

Change font size for SMS, MMS or template text; available sizes vary.

In message text, open Options and select Font Size

User Dictionary (Japanese Only)

Save frequently used words/phrases of up to 20 characters; entries appear in Suggestions when key characters are entered.

- Press (\bullet) (Menu) and select $Settings \rightarrow Phone$ settings \rightarrow User dictionary \rightarrow New entry
- Select Word field and enter text
- Select Reading field and enter key characters
- Press (...) (Save)

Tip

- . To edit User Dictionary entries
 - Press (Menu) and select Settings → Phone settings → User dictionary → Edit entry
 - (2) Select contents to edit
- (Save) Edit a word or readings and press (Save)
- · To delete one item
 - (1) Press (●) (Menu) and select Settings → Phone settings → User dictionary → Edit entry
 - (2) Highlight item to delete, open *Options* and select *Delete*
- · To delete all items
 - Press (●) (Menu) and select Settings → Phone settings → User dictionary → Delete all
 - (2) Enter Phone Password, press () (Confirm) and select Yes

SMS Templates

Save frequently used words/phrases of up to 70 characters.

- Press () and select Templates → SMS templates
- Open Options and select Add new
 When no SMS templates have been saved
 Press (Add new)
- 3 Press (Select) and enter text
- ∠ Press (Save)

Tip

- To use an SMS template (♠ P.4-8)
- . To edit an SMS template
 - 1 Press $\overline{\cdots}$ ($\overline{}$) and select $\overline{}$ remplates $\overline{}$ SMS templates
 - 2 Highlight an item to edit and press (Edit)
 - 3 Press (Select) and edit the text
 - 4 Press (Save)
- . To delete an SMS template
 - 1 Press () and select *Templates* → *SMS templates*
 - (2) Highlight item to delete, open *Options* and select *Delete* → *Selected*
- To delete all SMS templates, in Step ②, select Delete o All, enter Phone
- Password, press \bigcirc (Confirm) and select *Yes*. To delete multiple items, select $Delete \rightarrow Multiple$ in Step \bigcirc , check items to delete, press \bigcirc (Delete) and



Saving to Phonebook



Phonebook Entry Items

Save phone numbers, mail addresses and more for up to 1,000 entries in Phonebook; USIM Card Phonebook capacity varies by card. Insert USIM into compatible Vodafone handsets to use USIM Card Phonebook entries.

Each 804SS Phonebook entry contains the items listed below.

Itom	Item Description Availability (Quantity)		(Quantity)
Itelli	Description	804SS	USIM Card
Entry Number	a 3 digit number	Yes (000-999) ¹	Yes (000-0XX) ²
Name	Single-/double-byte characters	Yes (Up to 50 characters)	Yes ³
Reading	Single-byte characters	Yes	Yes ³
Phone Icon	Select one of six icons	Yes (Six Icons)	No
Phone Number	Saved with area code	Yes (5 of up to 40 digits each)	Yes ^{2 3}
Email	Single-byte alphanumerics	Yes (4 of up to 100 characters each)	Yes ³ (1 address)
Email Icon	Select one of three icons	Yes	No

Item	Description	Availability	(Quantity)
iteiii	Description	804SS	USIM Card
Category	Select one of ten categories	Yes	Yes
Caller ID	Select incoming call image from Data Folder	Yes	No
Call Notice	Select incoming call ringtone from Data Folder	Yes	No
MMS Notice	Select incoming MMS ringtone from Data Folder		No
SMS Notice	Select incoming SMS ringtone from Data Folder	Yes	No
Blood Type	Select one of four blood types Yes		No
Birthday	Enter the party's date of birth	Yes	No
Address	Enter up to 20 single-byte characters for postal code and up to 50 for address	Yes	No
Hobby	Up to 100 characters Yes No		No
URL	Up to 100 single-byte Yes alphanumerics (2 URLs)		No
URL Icon	Select one of three icons	Yes	No
Notes	Up to 100 characters	Yes	No

¹ Use speed dialling (P.5-9) to initiate a voice call to phone numbers with memory Nos. 000 to 099 in Phonebook of handset.

² The number of items that can be saved varies by the type of USIM Card.

³ The number of characters that can be saved varies by the type of USIM Card.

Note

· Protect important information

Phonebook entry information may be altered or deleted when battery is removed or left uncharged for an extended period. Accidents or malfunctions may also affect Phonebook entries. Back-up Phonebook entry information and store sepereately. Vodafone is not be liable for damages resulting lost information.

9

Adding Entry Items

804SS assigns lowest available Entry Number; edit as required.



Phonebook Entry Details

Open Options, select Add to, then select Phone or USIM

Enter additional items as required

*Not available in USIM Card Phonebook

To change Entry Number

Highlight Entry Number field and enter a number

To save name

- 1 Select Name field
- 2 Enter a name

To modify Reading

- 1 Select Reading field
- ②Enter a reading (use katakana to organise entries in Phonebook List)

To save a phone number

Highlight Phone field and enter a number

To set Phone icon

- 1 Select phone number
- (2) Select an icon

To save a mail address

- 1) Select Mail Address field
- (2) Enter an address
- (3) Select an icon

To set Category

- 1) Select Category field
- Select a Category

To set Caller ID for a voice call or video call*

- (1) Select Caller ID
- (2)Select On

(3) Open Data Folder to select an image file, etc.

To set Call Notice for a voice call or video call*

- 1) Select Call Notice
- (2)Select On
- 3 Open Data Folder to select a file

To set MMS Notice*

- (1) Select MMS Notice
- Select On
- (3) Select sound

To set SMS Notice*

- 1) Select SMS Notice
- (2)Select On
- (3)Select sound

To save Blood Type*

- Select Blood Type
- Select a Blood Type

To save Birthday*

Highlight Birthday field and enter a date

To save Address*

- (1)Select Address field
- 2 Enter a postal code
- Select Address field and enter an address
- 4) Press (OK)

To save Hobby*

- (1)Select Hobby field
- 2 Enter text

To save URL*

- (1) Select URL field
- ②Enter a URL
- 3 Select an icon

To save Memo*

- 1) Select Notes field
- ②Enter text

3 Press (Save)

Tip

To save multiple numbers or addresses within an entry

Highlight an exiting Phone or Mail Address field, open *Options* and select *Add item* to create a new Phone or Mail Address field; enter the number or mail address.

. Phone number field characters

Save 0-9, #, *, P (Pause) and + (International Code) in Phone field. Press for 1+ seconds to enter P or press for 1+ seconds to enter +.

· To save after entering a phone number

Alternatively, during a call, open *Options* and select *Add to Phonebook*.

- 1 In Standby, enter a phone number
- (2) Open Options and select Add to Phonebook → Phone or USIM
- ③ Select New, or select Update and select memory location for saving the information
- (4) Select the phone icon
- (5) Perform Steps 2 and 3

Saving from Call Log Records

Save numbers from Call Log records to new or existing Phonebook entries.

- Press 🔾
- 2 Use to open a Call Log, highlight a record, open Options and select Add to → Phonebook → Phone or USIM
- 3 Select Phonebook entry type

To create a new entry

Select New

To save to an existing entry

- 1) Select Update
- (2) Open the Phonebook entry (P.5-7)
- ▲ Select a phone icon

- 5 Enter additional items as required
- 6 Press (Save)

Category Settings

Organise Phonebook entries among ten Categories; create group settings. Customise Category settings or create up to ten new ones on USIM Card.

New Category (USIM Card)

- Press (Menu) and select *Phonebook*
- 2 Open Options and select View from USIM
- Press (Search) and select Category Search
- 4 Open Options and select New category
- 5 Enter a name

Edit Category

Customise Category names, add Category image and ringtones to appear and sound for incoming calls or messages from Category members.

Press (Menu) and select *Phonebook*

To select a USIM Card Category

After Step 1, open Options and select View from USIM

Press (Search) and select Category Search

Highlight category to change and select Category setting

Edit Category items

To change Category Name

Select Category name field and enter a name

To save Category Image

Select Category image then select a file from Data Folder

To set incoming call ringtone

Select Call Notice then select a file from Data Folder

To set incoming MMS ringtone

Select MMS Notice then select a tone: to open Data Folder. highlight *Special tone* and press (...) (Change)

To set incoming SMS ringtone

Select SMS Notice then select a tone; to open Data Folder, highlight *Special tone* and press (...) (Change)

To restore Category defaults

Highlight item to restore and press (...) (Reset)

Press (Save)

Tip

- Alternatively, access Category Settings via Phonebook Settings and select a Category to edit.
- **Incoming Image & Ringtone Priority** Images and ringtones set for individual Phonebook entries take priority over those set for a Category.

Add Member

Press (Menu) and select *Phonebook*

To select Category on USIM Card

After Step 1, open Options and select View from USIM

- Press ... Search and select Category Search
- Select Category to which to add member
- Open Options and select Add member
- Check the member to add and press (...) (Add)

Tip

. To delete a member from a Category

Deleting a member from a Category does not affect member's Phonebook entry.

- 1) Perform Steps 1 and 2 in "Add Member"
- (2) Select Category from which to delete member
- (3) Highlight member to delete, open Options, select Remove and select Yes

Using Phonebook



Calling from Phonebook

Phonebook Search

Press (Q)

If the correct search method appears first

Proceed to Step 2. Part (2)

To change method from an active search window

Press () (OK) and proceed to Step 2

Press (...) (Search)

To search Phone Book List

(1) Select Phone Book List

(2) Use () to navigate Phone Book List

To search by Category

- 1) Select Category Search
- (2) Select a Category

To search by Reading

- 1) Select *Reading Search*
- (2) Enter a reading

To search by Entry Number

- 1 Select Entry Number Search
- (2) Enter Entry Number

To search by Phone Number

- 1 Select Phone Number Search
- (2) Enter any part of a phone number

To search by Mail Address

- (1) Select Email Search
- (2) Enter any part of an mail address

Select an entry

To open entry details

Press () (Details)

Tip

- To set Phonebook reference (Phonebook or USIM Card Phonebook)
 - (1) Press (●) (Menu) and select Settings → Phonebook settings
 - → View phonebook from
 - (2) Select *Phone memory* or *USIM memory* and press () (Save)



Initiating a Call

Select an entry, press (Details) to view the detail window



Entry Details

Select a number and initiate a call

To initiate a Voice Call

Press or open *Options* and select *Voice call*

To initiate a Video Call

Open Options and select Video call

Tip

To place a call from Phonebook List

Highlight an entry, open *Options* and select *Voice call* or *Video call*. When entry contains multiple numbers, Default Number is dialled if set; otherwise, first number listed is dialled. If Default Number is *Not assigned*, Call window appears; select a number.

The Calling from Simple Search

Use Simple Search (P.1-18) to open Phonebook entries by Reading. Press (Call) or (V-Call) call the first number listed in the entry.

Calling USIM Card Phonebook Entries

Use Entry Numbers as shortcuts to call numbers saved in the first 100 USIM Card Phonebook entries.

- Enter the last two digits of an Entry Number
- Press #\$\$

If the correct entry is not highlighted

Use (to highlight it

3 Press 🖭 (Call)

To initiate a video call


Press (V-Call)



Speed Dialling

Enter the last two digits of an Entry Number to call the Voice Call Default Number in Phonebook entries 000 - 099.

1 Enter the last two digits of an Entry Number

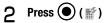

Tip

Speed Dialling is invalid for an entry if Voice Call Default Number
 (♦) P.5-10) is Not assigned.



Phonebook Options

Use the following options in Phonebook List or entry details.

Item	Description
Add to*1	Start the process of saving a new contact.
Voice call	Call highlighted number or Default Number (P.5-8).
Video call	Call highlighted number or Default Number (P.5-8).
Create message	Open a new message window (P.19-2).
Send	Send entry as a vFile; select <i>Via message</i> , to open a new message with entry attached (♠ P.19-2), or <i>Via bluetooth</i> , to send entry to another device wirelessly (♠ P.12-5).
Delete	Delete entry (P.5-11)
Save to Data Folder	Create a vFile and save it to Other documents.
Copy to USIM/Copy to phone	(② P.5-10)
View from USIM/View from Phone*1	Toggle between Phonebook and USIM Phonebook.
International dial	Add International Code/Country Code (P.2-2).
Memory status*1	Check memory usage.
Copy item*2	Copy highlighted entry item.
Mark default number*2	(P.5-10)

^{*1.} This item does not appear in entry details.

^{*2.} This item does not appear in Phonebook list.

Editing Phonebook Entries

To search, list or entry details, see "Phonebook Search" (P.5-7).

Edit

- Open entry details
- 2 Press (Edit)
- 3 Edit entry items and press (Save)

Mark Default Number

Default Setting
Video call : First phone number
Video call : First phone number
Message : Not assigned

When a Phonebook entry contains multiple phone numbers/mail addresses, set Default Numbers for calling and messaging priorities.

Resetting an item changes it to Not assigned.

- Open entry details
- 2 Open Options and select Mark default number

3 Set or reset options

To set

- (1) Select Voice Call, Video Call or Message
- Select a phone number or mail address

To reset

Highlight *Voice Call*, *Video Call* or *Message* and press (Reset)

4 Press (Save)

Copy to USIM/Copy to Phone

- Highlight entry or open entry details
- 2 Copy the entry

To copy from Phonebook to USIM Card Phonebook

- ① Open *Options* and select *Copy to USIM* \rightarrow *Selected* or *All*
- (2) Select Yes

To copy from USIM Card Phonebook to Phonebook

Open Options and select Copy to phone



Deleting Entries

Deleting a Single Entry

- Highlight entry or open entry details
- 2 Open Options, select Delete → Selected and select Yes

Deleting All Entries at Once

Delete all Phonebook or USIM Card Phonebook entries.

] Press 🔘

To move between Phonebook and USIM Card PhonebookOpen *Options* and select *View from USIM* or *View from Phone*

- 2 Open *Options* and select $Delete \rightarrow All$
- **3** Enter Phone Password, press \bigcirc (Confirm) \rightarrow Yes

My Phonebook Details

Confirm handset phone number. Add your name, mail address, street address and other information.

Press (Menu) and Press (Ptu)

To enter or edit other items

- 1) Press (Edit)
- ②Enter or edit items following the same procedures for Phonebook items; when finished. Then press (Save)

Options

Item	Description
Send my phonebook details	Send as a vFile; select <i>Via message</i> to create a message with vFile attached (♠ P.19-2), or <i>Via Bluetooth</i> to send vFile wirelessly (♠ P.12-5).
Delete	Clear owner info except numbers on USIM Card.
Save to Data Folder	Create a vFile and save it to Other documents.
Copy item	Copy highlighted item.



Before Using Video Calls

Exchange voice and video via video call-compatible 3G handsets. You may choose not to send your own image (P.6-5).

➡ Video Call Precautions

- Calls to incompatible handsets may be disconnected; charges apply.
- · It may be difficult to use Speaker Phone with earpiece volume raised; lower volume or use Stereo Earphone Microphone.
- · Ambient noise may hamper voice quality; use Stereo Earphone Microphone.
- · Using Speaker Phone in public may disturb other; please mind your manners.

Initiating a Video Call

Dial directly or from Phonebook entries or Call Log records. When connected, images appear; use Speaker Phone or Stereo Earphone Microphone.

- Enter a phone number
- Open Options and select Video call
- Press **6** to end the call

Tip

Engaged Video Call Operations (

 P.6-3)

When Video Call cannot be connected

Unavailable for a video call... appears; open Options and select Voice call or Create message to contact the recipient, or View contact details to open Phonebook

Initiating Calls (© P.2-2)

Receiving a Video Call

When a video call is received, choose to send Your Image or a Substitute Image. Use Speaker Phone or Stereo Earphone Microphone.

When 804SS rings/vibrates and Video call from... appears, press () (Accept)

Allow own picture to be shown? appears; Select Yes or No.

Press **6** to end the call

Tip

. To adjust ringtone volume

While 804SS is ringing/vibrating, press (or .

. When a Stereo Earphone Microphone is connected

Press Stereo Earphone Microphone switch for 1+ seconds to answer video calls.

Press for 1+ seconds to end a video call.

To disconnect a video call without answering it

Press (Busy)

. To change or cancel outgoing image

Set 804SS to send Substitute Image beforehand (P.6-5).

Alternatively, change to Substitute Image during a call (P.6-5).

. Send Your Image or Substitute Image during a video call

After Step 1, Your Image appears. When confirmation appears, select Yes or No to send Your Image or Substitute Image. When video call connects Your Image or Substitute Image appears.

• Engaged Video Call Operations (© P.6-4)

Engaged Video Call Operations

Perform operations from Video Call Menu or Options.



- ①Large display (Normally, the other party's image)
- 2 Small display (Normally, your image)
- 3 The other party's name or phone number
- 4 Call duration
- 6 Meaning of the icon at cursor position
- 6 Video Call Menu Icons
- ♠ / ♠: Toggle Speaker Phone Off/On

: Toggle Incoming Image Size

- (Blue)/ (Grav): Toggle Your Image and Substitute Image
- / ⊕: Freeze or unfreeze incoming image
- 📸 : Toggle Internal Camera and External Camera

During video calls, use Video Call Menu or Options to adjust Video Call settings

To toggle Speaker Phone off/on

Highlight •/ • and press

To select incoming image size

Highlight 🖶 and press 💽 to select an item

To freeze or unfreeze outgoing image

Highlight **■** / **■** and press **●**

To toggle Your Image and Substitute Image

Highlight 2 (Blue/Gray) and press

To freeze or unfreeze incoming image

Highlight **■** / → and press ●

To toggle Internal Camera and External Camera

Highlight is and press

To cancel Your Image/mic/key tones

- 1) Open Options and select Mute
- ②Check item(s) to cancel and press (Save)
 When Camera (Your Image) is cancelled, Substitute Image is sent.

To adjust outgoing image appearance/quality

- ① Open Options and select Display options → Effects or Quality

To adjust outgoing image brightness

- (1) Open *Options* and select *Display options* → *Brightness*
- ②Use O to adjust brightness

To enlarge or reduce outgoing image

- 1) Open Options and select Zoom
- ②Use ① to enlarge or reduce image size

Options

ш	Book Alleria
Item	Description
Normal/Speaker on	Toggle Speaker Phone off/on (◆ P.6-4).
Mute	Cancel outgoing image/mic/key tones
Wato	(♦ P.6-4).
Display options	Adjust outgoing image appearance/quality
Display options	(◆ P.6-4).
Zoom	Enlarge or reduce outgoing image (P.6-4).
Settings	Change Video Call settings (P.6-5).
Phonebook	Open Phonebook Search window.
Add to Phonebook	Save number to Phonebook or USIM Card
Add to Phonebook	Phonebook (P.5-5).
Send DTMF	Send push tones.
Memo	Create and save text memos (P.14-7).
Details	Open Phonebook entry details.
Switch to headset/	When a Bluetooth headset is in use, toggle
Switch to phone	between headset an 804SS.

Video Call Settings

Sending Your Image

Default Setting Always ask

When Always ask is set, Choose between Your Image or Substitute Image as outgoing image each time a video call is received.

- Press \bullet (Menu) and select Settings \rightarrow Call settings → Video call → Show my picture
- Select a setting and press (Save)

Selecting a Substitute Image

Default Setting Pre-Installed image

Select an image to use as the outgoing image (in place of Your Image).

- Press (\bullet) (Menu) and select Settings \rightarrow Call settings → Video call → Select still picture
- Press () (Change)
- Open Data Folder, select a file and press () (Save)

Tip

- . To restore Substitute Image to its default
 - (1) Perform Steps 1 and 2
 - (2) Select any image file in Data Folder, Open Options and select Reset

Retry Settings

Default Setting Always ask

- Press \bullet (Menu) and select Settings \rightarrow Call settings → Video call → Retry with
- Select a setting and press (Save)

Tip

Failed Video Call Retry Options

Automatic retry option changes by Retry setting:

Always ask: Select an action from Options.

Voice call: Choose whether or not to redial number as a voice call.

Messages: Choose whether or not to create a message.

None: Return to Standby after a failed video call.




🥦 Before Using Mobile Camera


Capture still images in JPEG format or video in 3GP format.

Mobile Camera Precautions

- · Use a dry soft cloth to remove debris from camera lens.
- Avoid camera shake; hold 804SS steady or place it on a stable surface and use Timer.
- Mobile Camera employs high precision technology, however, some pixels may seem brighter or darker than others.
- Leaving 804SS in a hot place for an extended period before capturing or saving images may affect image quality.
- Exposing camera lens to direct sunlight may affect colour filter.

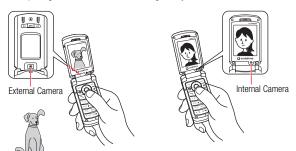

Using Display as Viewfinder

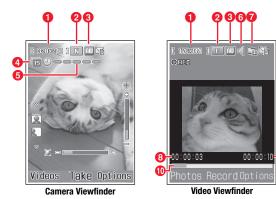

Size

[[230x024], [600x300], [640x460], [320x240], [240x160], [173x144], [126x36]

Quality

- SF:Superfine
- Fine:Low
- :Normal
 :Economy

3White Balance

- ™:Auto ∷Fine
 - ine 🔊 :Cloudy
- :Incandescent :: Fluorescent

Mode

No display: Single shot

(6 shots)

(9 shots)

Is :Multi-shot (15 shots)

Is :Mosaic shot (2X2)

:Mosaic shot (3X3)

6 Timer (When set)

6 Audio Recording

i :0n

ĭ :0ff

7 Recording Time

:Limit for MMS

10 seconds

30 seconds □:Normal recording
Blapsed Recording Time

19 Total Recording Time

10 Progress Bar

Capturing a Still Image

Camera Mode

Select Single shot to capture single images, Multishot or Mosaic shot to capture multiple images. Save images in Pictures.

Mode	Description	Image size
Single shot	Capture single images, select size for purpose; attach images to MMS, save as Wallpaper, etc.	1280X1024 800X600 640X480 320X240 240X180
Multi-shot	Press shutter once to capture 6, 9 or 15 sequential images.	320X240
Mosaic shot	Capture multiple images, one at a time; 804SS automatically combines single images (4 for 2x2 or 9 for 3x3) into one composite image.	240X180

Capturing Still Images

Single Shot

Press for 1+ seconds

In Video mode

Press (Photos) to change to Camera mode

2 Open Options, select Shooting mode → Single shot

→ Automatic save

To save captured images without review

Select Take & save

Open *Options* and perform other actions as required (♦ P.7-4)

4 Use Display to preview image

Zoom image preview in/out (invalid for 1280 X 1024 (External Camera) and 640 X 480 (Internal Camera))

Use O or to zoom out or in

Adjust brightness

Use or to lighten or darken image

5 Press (Take)

To cancel the image and capture another

Press (Back)

Tip

. To activate/adjust Timer in image preview

Press 5 to toggle 3 seconds, 5 seconds, 10 seconds and off.

• To toggle Internal Camera and External Camera

In image preview, open Options and select Switch camera.

· To adjust viewfinder in image preview

Press [##1] to toggle full screen, full screen without indicators, full screen with orid and full image.

· To send an image via MMS or Bluetooth

After Step 5

1) Press (Send) and select send medium

(2) Send image (4) P.12-5, 19-2)

Preview Options

Available options may vary by mode and other settings.

Item	Description
Switch camera	Toggle Internal Camera and External Camera (♠ P.7-4).
Shooting mode	Select Shooting mode and save setting for <i>Single</i> shot, or image count for <i>Multi-shot</i> or <i>Mosaic</i> shot (⑤ P.7-4, 7-7).
Effects	Select <i>Black & White</i> , <i>Sepia</i> or <i>Negative</i> effects filters. When an effect is active, select <i>None</i> to cancel.
Frames	Add a frame to image in Single shot mode.
Timer	Activate self-timer (◆ P.7-4).

Item	Description
Go to photos	Open Pictures folder.
Camera settings	Set image size, image quality, etc. (P.7-11).
Camera shortcuts	Open a function shortcuts graphic (P.7-8).

Review Options

Item	Description
Delete	Delete the last image captured.
Set as	Set image for Wallpaper or Phone Book entries.
Edit photo	Edit an image in Pictures folder (P.7-13).
Rename	Change file name.
mPostcard	Create a mobile postcard (P.7-5).
Go to photos	Open Pictures folder.
Lock/Unlock	Active/cancel file protection.
Details	Confirm file size or format.

Mobile Postcard

Use *Single shot*, *Multi- shot* or *Mosaic shot* images. This function renders one of two images as line art, merging it with the other to create a stamped photograph.

- **Capture an image (© P.7-4, 7-6)**
- 2 Open Options and select mPostcard
- 3 Press 🔘 (Add)
- 4 Add a second image

To select a still image from Data Folder

- 1 Select Open
- 2) Open Data Folder and select an image file

To capture an image

- 1) Select Take photo
- 2 Press (Take)
- 3 Press (Add)
- 5 Press (Merge) and check the merged result

To change image

- 1)Press Clear
- ②Highlight image to change, open Options and select Change image
- (3) Repeat Steps 4 and 5

To swap image positions

- 1)Press Clear
- 2 Open Options and select Swap image
- 3 Perform Step 5
- 6 To edit line art, press … (Edit)

To change line art position

- (1) Open Options and select Move
- ②Use ① to move image and press … (Done)

To change line art size

- 1) Open Options and select Size
- ②Use ① to adjust image and press … (Done)

To rotate line art

- 1) Open Options and select Rotate
- ②Use O to rotate image and press (Done)

To change line art colour

- (1) Open Options and select Change colour
- ②Use O to select colour and press O (Done)

To adjust line art shadow

- 1) Open Options and select Shadow on or Shadow off
- (2) Press (...) (Done)

7 Press (Save) and enter a file name

To save and send image

- 1 Press (S & S)
- (2) Select medium and send (4) P.12-5, 19-2)

Multi Shot

Press 📵 for 1+ seconds

In Video mode

Press (Photos) to change Camera mode

- 2 Open Options and select Shooting mode → Multishot and select the number of images to capture
- **3** Open *Options* and perform other actions as required (⊕ P.7-4)
- 4 Use Display to preview image

Zoom in/out

Use O or to enlarge or reduce image

Adjust brightness

Use or to lighten or darken image

5 Press (Take)

6 View captured still image(s)

To view still images individually

1) Highlight the image and press (View)

(2) Press Clear

To retake a still image

Press (Back)

Mosaic Shot

Press 📵 for 1+ seconds

In Video mode

Press (Photos) to change Camera mode

- 2 Open Options and select Shooting mode → Mosaic shot to select the number of images to capture
- Open *Options* and perform other actions as required (⊕ P.7-4)
- 4 Use Display to preview image

Zoom in/out

Use O or to zoom in or out

Adjust brightness

Use or to brighten or darken image

5 Press (Take) for each image

3 View captured still images



Mosaic Mode (2x2)

To retake an image

Press (Back)

Use Shortcuts to adjust camera settings

Available shortcuts vary by mode or setting status.

Key	Item	Description
1 %	Size	1280x1024,800x600,640x480,320x240, 240x180
2 abc	Quality	Superfine, Fine, Normal, Low, Economy
3 def	Shooting mode	Single shot, Multi-shot (6, 9, 15 shots), Mosaic shot (2x2, 3x3)
4 ghi	White balance	Auto, Fine, Cloudy, Incandescent, Fluorescent
5 jkl	Timer	3 seconds, 5 seconds, 10 seconds
6 mno	Frames	Select from 9 types
$\lambda^{bd_{k}}$	Effects	Black & White, Sepia, Negative
O+n p	Photo album	-
#### ###	Screen mode	Toggle full screen, full screen without indicators, full screen with grid, full image
	Mode switch	-
A	Vertical inverse	-
Ţ	Horizontal inverse	-
	Zoom	-
\odot	Brightness	-

Using Camera with 804SS Closed

Activate Camera and capture images or video without opening handset.

- 1) Press (B) for 1+ seconds
- ② Use I to toggle Camera mode and Video mode
- (3) Display the image to capture on the Sub Display
- (4) Press (8)
- (5) While capturing video, press (3) again to stop capturing

Press Side Key (to flip the image vertically or to flip horizontally.

Enlarge or reduce an image by zooming in the following steps after step ${\bf 3}$:

- 1) Move cursor to 📵 with 📂 and press 🖭
- 2) Press e or

Set the brightness in the following steps after step (3):

- 1) Move cursor to with and press
- (2) Press e or

Capturing Video

Video Mode

Capture videos suitable for attaching to mail or saving as a record.

Alternatively, capture videos without sound. Captured video is saved in 3GP format to the Videos folder of Data Folder.

Capturing Video

Press (8) for 1+ seconds

In Camera mode

Press ((Videos) to open Video mode

- 2 Open *Options* and perform other actions as required (⊕ P.7-10)
- 3 Use Display to preview image

Zoom in/out

Use O or to enlarge or reduce image

Adjust brightness

Use or to lighten or darken image

4 Press (Record)

5 Press (Save) and end

After recording time elapses, capturing automatically ends and captured video is saved automatically

- 6 Press (Play) to view captured video
 - To continue capturing

Press (Back)

Tip

• To activate/adjust Timer in image preview

In image preview, press 5 to toggle 3 seconds, 5 seconds, 10 seconds, off.

To toggle Internal Camera and External Camera

In image preview, open Options and select Switch camera.

Preview Options

Item	Description
Switch camera	Toggle Internal Camera and External Camera (P.7-9).
Effects	Select <i>Black & White, Sepia</i> or <i>Negative</i> effects filters. When an effect is active, select <i>None</i> to cancel.
Timer	Activate self-timer (P.7-9).
Go to videos	Open Videos folder.
Video settings	Set image size, image quality, etc. (P.7-12).
Camcorder shortcuts	Open a function shortcuts graphic (P.7-10).

Review Options

Item	Description
Resolution	Set video display size while playing back or paused.
Send	Send file via MMS (♠ P.19-2) or Bluetooth (♠ P.12-5).
Delete	Delete the last video captured.
Rename	Change file name.
Go to videos	Open Videos folder.
Lock/Unlock	Activate/cancel file protection.
Details	Confirm file size or format.
Player settings	Set playing volume.

➡ Shortcut Key Operations

Change the settings by pressing the assigned keys that Shortcut keys.

Key	Item	Description
1 8	Size	176x144,128x96
5 °pc	Quality	Fine, Normal, Low, Economy
m de de	Shooting time	Limit for MMS, 10 seconds, 30 seconds, Normal recording
4 gh	White balance	Auto, Fine, Cloudy, Incandescent, Fluorescent
5 %	Timer	3 seconds, 5 seconds, 10 seconds
6 mno	Audio recording	On, Off
Z ^{bdug} €	Effects	Black & White, Sepia, Negative
O+n p	Record album	-
···	Mode switch	-
ı	Vertical inverse	-
J	Horizontal inverse	-
٥	Zoom	-
(Brightness	-

Mobile Camera Settings

Make settings related to image capturing including the size, image quality. saving location, etc. of images.



Camera Settings

■ Size: 320X240 ■ Quality: Normal ■ Viewfinder: Full screen

■ Shutter sound : Shutter 1 ■ Multi-shot speed : High

■ Single shot mode : Take & save ■ White balance : Auto

■ Default name : Photo

Press (a) for 1+ seconds

In Video mode

Press (Photos) to change to Camera mode

Open Options and select Camera settings

Select an item and perform setting operation

To set image size

(1) Select Size

(2) Select a setting and press () (Save)

To set image quality

1) Select Quality

(2) Select a setting and press () (Save)

To set Viewfinder

(1) Select Viewfinder

②Select a setting and press () (Save)



To set the shutter sound

(1) Select Shutter sound

(2) Select a setting and press () (Save)

To set sequential shot speed

(1) Select Multi-shot speed

(2) Select a setting and press () (Save)

To set the Single shot mode

1) Select Single shot mode

②Select a setting and press (Save)

To set white balance

(1) Select White balance

(2) Select a setting and press () (Save)

To set file name

(1) Select *Default name*

(2) Enter file name

Video Settings

Default Setting

■ Recording time : Limit for MMS ■ Size : 176x144

■ Quality : Fine ■ Audio recording : On

■ Default name · Video

Press for 1+ seconds

In Camera mode

Press (Videos) to change to Video mode

Open Options and select Video settings

3 Select an item and adjust settings

To set duration

1) Select Recording time

②Select a setting and press (Save)

To set size

(1) Select Size

② Select a setting and press ① (Save)

To set image quality

1)Select Quality

2) Select a setting and press (Save)

To set voice recording

1 Select Audio recording

2) Select a setting and press (Save)

To set file name

- 1) Select Default name
- (2) Enter file name

Tip

· Video recording time

When the recording time is set to *Normal recording*, video with maximum of approximately one hour can be recorded in ordinary mode.

Viewing Images

View images/video clips saved in Data Folder.

Viewing Still Images

Press (8) for 1+ seconds

In Video mode

Press (Photos) to change Camera mode

Open Options and select Go to photos

3 Highlight a file and press • (View)

➡ Viewing Images with Mini Album

When Edge Bar (P.15-4) is set as a shortcut, activate it in Standby. Use Mini Album to view images.

- 1 Press () three times
- ② Use O to browse folders and images. To view images within a folder, select folder; press to close the folder.
- (3) Press () (View/Done) to select enlarged/ordinary display of the image
- 4 Press (Exit) to close Edge Bar

Viewing Video

Press for 1+ seconds

In Camera mode

Press (Videos) to change to Video mode

- 2 Open Options and select Go to videos
- 3 In list, highlight and select a file and press 🗨 (Play)

Editing Still Images

Edit image files saved in Data Folder.

- Press (Menu), select *Data folder* and select image to edit
- 2 Highlight a file and press 💽 (View)
- 3 Press (Edit)

4 Edit using Options

To change the size of an image

- 1)Select Resize
- Select a setting
- 3 Enter Width or Height (If Customise is selected)
- 4) Press (Done)

To add effects to an image

- 1 Select Effects
- Select a setting
- 3 Press (Done)

To add blur or correct red-eye

- (1) Select Partial effects → Partial blur or Redeye repair
- 2) Open Options and select the suitable operation
- 3 Press (Done)

To adjust an image

- ① Select Adjust → Brightness/Contrast/Colour
- Adjust the image
- 3 Press (Done)

To add a frame

- 1) Select Frames
- 2 Use to select a frame
- 3) Press (Done)

To add clip art to an image

- (1) Select Cliparts
- 2) Select a piece of clip art to add to an image
- ③Open *Options*, select *Size* and use ① to adjust the clip art size
- (4) Open *Options*, select *Rotate* and use (5) to turn the clip art
- (5) Open *Options*, select *Move* and use (5) to move the clip art
- 6 Press (Done)

To add text to image (320X240 only)

- 1)Select Insert text
- (2)Enter text
- ③ Open *Options*, select *Size* and use ① to adjust the text size
- 4) Open *Options*, select *Rotate* and use to turn the text
- 5 Open Options and select $Font\ size
 ightharpoonup Large/Normal/Small$
- **(6)** Open *Options*, select *Colour* and use **(C)** to adjust the text colour
- 7) Press (Done)

To rotate image

- (1) Select Rotate
- 2) Select 90° R or 90° L
- ③ Press ... (Done)

To flip image

- 1 Select Flip
- Select Vertically or Horizontally
- 3 Press (Done)

To crop image

- 1 Select Crop
- ②Open Options, select Size and use

 to adjust the trimming size
- 3) Open *Options*, select *Shape* and use to select the trimming shape
- Open Options, select Move and use
 to adjust the trimming position
- (5) Open Options and select Crop
- 6 Press (Done)
- 5 Press (Save)
- 6 Enter a name for the image

Attaching Images to a Message

Attach captured image or recorded video and send via MMS

After capturing, press (Send), open *Options* and select *As message*

To send video

In image review, open Options and select $Send \rightarrow As \ message$

2 Enter an address, subject, text, etc. and send

Tip

 To send a still image or video via Bluetooth Select Via bluetooth in Step 1 (P.12-5).



Standby Display Settings

Wallpaper

Default Setting ■ Pictures

Set *Pictures* that displays the saved still images or animations, or *Photo slide* that displays still images one by one.

- Press (Menu) and select Settings → Display settings → Wallpaper
- 2 Perform the operation to set

To switch to Pictures/Photo slide

Select setting

To change the image of Pictures

- (1) Highlight *Pictures* and press (Edit)
- (2) Select the saving location of files and select a file
- (Set)

To set/edit the image of Photo slide

- 1) Select *Photo slide* and press ... (Edit)
- ②Perform Steps 2 to 4 in "Setting Photo Slide" (◆ P.8-2) or perform Steps 2 and 3 in "Editing Photo Slide" (◆ P.8-3)
- 3 Press (Save)

Photo Slide

- Press \bigcirc (Menu) and select $Tools \rightarrow Photo slide$
- Press (Add)
- 3 Select the file saving location, check the image to set and press (Done)

To see preview

- 2 Press Clear to close the preview

To set effect

- ①Use ② to highlight Effect field
- 2)Use to toggle setting

To change the switching duration per still image

- ①Use ② to highlight Duration field
- ②Use to highlight Effect field
- 4 Press (Set) and select Yes (crop sides) or No (show full image)

Tip

· To adjust slide size

To display large in the window, select Yes in Step 4. To display in the original horizontal and vertical ratio, select No.

Editing Photo Slide

Press \bullet (Menu) and select $Tools \rightarrow Photo slide$

Perform editing operations

To edit still images

- (1) Open *Options* and select *Replace*
- (2) Check a still image to set and press (...) (Done)

To change order of still images

- (1) Highlight the still images to change order, open *Options* and select Change Order
- (2)Use (5) to change order and press (6) (Save)

To delete a still image

Highlight the still image to delete, open *Options*, select *Delete* and select Yes

To add a still image

- 1) Highlight any part where a still image is not set and press (bbA) (...)
- (2) Check a still image to add and press (Done)
- Press (Set) and select Yes or No

Tip

· Adjustment of the size of photo slide

To display large in the window, select Yes in Step 3. To display in the original horizontal and vertical ratio, select No.

Clock Display

Default Setting Digital clock 1

- Press (\bullet) (Menu) and select $Settings \rightarrow Display$ $settings \rightarrow Clock\ display$
- Use to switch setting and press (Save)

Operator Name

Show or hide operator name in Standby.

- Press (\bullet) (Menu) and select $Settings \rightarrow Display$ settings → Operator name
- Select a setting and press (Save)

🥭 Menu Display

Menu Style

Default Setting Bicycle

Change Display type of menu list (Except Vodafone live! menu)

- Press \bullet (Menu) and select $Settings \rightarrow Display$ settings → Main menu style
- Select an item
- Use to select settings and press (OK)
- Press (Save)

Popup Menu

Default Setting Off

Set whether to display minor items in balloon when highlighting a medium item of a menu.

- Press \bullet (Menu) and select $Settings \rightarrow Display$ settings → Popup menu
- Select a setting and press (Save)

Tip

. When you highlight a middle item that has no small item Menu balloons are not displayed. They are not displayed in *Alarms* in Tool Menu either.

List Font Size

Default Setting Large

Set main menu item font size.

- Press (\bullet) (Menu) and select $Settings \rightarrow Display$ settings \rightarrow List font size
- Highlight a setting and press (Save)

Zoom List

Default Setting ■ Off

Set whether to enlarge highlighted item of a menu in selection display.

- Press \bullet (Menu) and select Settings \rightarrow Display settings → Zoom list
- Select a setting and press (Save)

Tip

Applicable range of the zoom list setting

Zoom list setting is applied to the third layer menu and lower. For example, in a case you select Settings \rightarrow Call settings \rightarrow Voice call \rightarrow Diverts, the menu Voice call and lower menus are zoomed.

Backlight Brightness & Duration

- **Adjusting Display Brightness**
- Press (\bullet) (Menu) and select $Settings \rightarrow Display$ settings → Brightness
- Use to adjust brightness and press (Save)

Backlight Duration

Default Setting ■ On: 15 seconds ■ Dim: 5 seconds

Set Display backlight lighting time and make display settings. Display becomes dimmer when the time set in On has elapsed and Display goes Off when the time set in *Dim* has elapsed.

- Press \bullet (Menu) and select Settings \rightarrow Display settings → Backlight time
- Select the item and make settings

To set the time to light brightly

- (1) Select On field
- (2) Select the time to set and press () (OK)

To set the time till Display goes off

- (1) Select *Dim* field
- ②Select the time to set and press (OK)
- Press (Save)

Sub Display



- Press (\bullet) (Menu) and select $Settings \rightarrow Display$ $settings \rightarrow Sub\ LCD$
- Perform the operation to set

To edit the clock setting

- (1) Select *Clock* and press (Edit)
- (2) Use (5) to switch setting and press (6) (Save)

To edit the message to display

- (1) Select *Sub title* and press (Edit)
- (2) Press (Select), edit text and press (Save)

To edit Wallpaper

- (1) Select Wallpaper and press (Edit)
- 2 Press (Change), open Data Folder and select a file
- (3) As required, press (Zoom out)/((Zoom in) to adjust the
- (Crop)
- (Set)

Dialling Display

Default Setting Font type: Quill pen

Change Display to appear when dialling in Standby mode. When character type is set to either Normal or Serif, alternatively, change the font size, colour and/or background colour.

- Press \bullet (Menu) and select $Settings \rightarrow Display$ settings → Dialling display
- Select the item and make settings

To set font type

- (1) Select Font type
- 2)Use to switch font type

To set the font size

- (1) Select Font size
- 2) Use to select the size

To set font colour

- (1) Select Font colour
- (2) Use () to select setting
- (3) Use (5) to move cursor to Colour selection field and use (6) to select a colour (For Monochrome only)

To set background colour

- 1) Select Background colour
- ②Use to select the colour
- Press () (Save)

Greeting Messages

■ Main LCD: Welcome to Vodafone 3G Default Setting ■ Sub LCD: How are you?

Change power on message for Display and Sub Display.

- Press \bullet (Menu) and select $Settings \rightarrow Display$ settings → Greeting message → Main LCD or Sub **LCD**
- Edit power on messages

To set the Main Display

Fdit text

To set the Sub Display

Press (Select) and edit text

Press (Save)



Default Setting ■日本語 (Japanese)

Set 804SS user interface to appear in English or Japanese.

- Press (Menu) and select 設定 → 一般設定 → Language Or 言語選択
- Select English and press (保存/Save)



Sound Settings

Changing Profile Settings

Change 804SS incoming transmission response by profile.

In Car Profile, select a different method to answer calls.

In Standby, press for 1+ seconds

Highlight a profile and press (Edit)

To set tone volume

(1) Select Tone volume field

②Use ① to adjust the volume

(3) Press (Play) to check the volume and press (Select)

To set call alert type

1)Select Call alert type field

(2) Select a setting and press () (Select)

To set ringtone

(1) Select Voice call or Video call ringtone field

(2) Select the saving location of files

(3) Highlight a melody, open Options and select Play

(4) Press (...) (Select)

To set message alert type

1) Select Message alert type field

(2) Select a setting and press (OK)

To set a melody for message ringtone

1) Select MMS or SMS alert tone field

(2) Select a setting

③ Press (Play) to check the ringtone and press (OK)

To set sound effect or keypad tone volume

(1) Select Sound effect or Keypad tone volume check field

②Use ① to adjust the volume and press ② (Select)

To make sound effect

(1) Select Sound field

(2) Check an item to set and press (...) (OK)

To set keypad tone

1) Select Keypad tone field

(2) Select a setting and press () (OK)

To set the answering method (Only for Car Profile):

1 Select Call answer mode field

(2) Select the setting and press (OK)

Press (Save)

Tip

. Incoming call answering mode in Car Profile

With Any key set, answer an incoming call with any key except or Side Key ullet or ullet or ullet . With *Automatic* set, automatically answer it and talk with the speaker without performing key operations.

. To set the number of seconds till answering automatically in Car Profile After (2) of "To set the answering method" in Step 2, select *Automatic*, press (Edit), select the setting and press (OK) to set the answering method.

· To set a ringtone after recording with Voice recorder

- (1) After (2) in "To set ringtone" in Step 2, highlight an amr file, open Options and select Record sound
- (2) Make recording
- (3) Open Options and select Set as → Voice ringtone or Video ringtone (4) Press (6)
- . To adjust the volume while 804SS rings Press Side Key (or v while 804SS rings.

To deactivate notification with ringtone or vibration (Mute)

To mute notification of incoming calls or mails (That is, to notify with only indications), set the ringtone volume of call and alarm to level 0 and vibration or sound to Melody or Increasing Melody. While the ringtone is muted, appears. Even though you set *Mute*, you will be notified when alarm is activated.

• To change a tune of the special tone for MMS alert tone/SMS alert tone

- 1) Press (...) (Change) after (2) in "To set a melody for message ringtone" of Step 2
- 2 Select the melody to set from the folder and proceed to Step 3
- . To adjust the key tone volume in Standby

Press Side Key (or) in Standby.

Sound settings of Call alert type

Call alert type in Sound settings is a menu for changing the settings of Normal Profile. It cannot be changed about other modes.

Profile Settings

Some profiles include items that cannot be set. The defaults are as listed below.

-: Setting deactivated

Item Profile	Normal	Manner	Car	Meeting	Outdoor	Offline
Tone volume	Level 4	_	Level 4	Level 1	Level 5	Level 4
Call alert type	Vibration & Melody	Vibration	Melody	Vibration	Vibration & Melody	Vibration & Melody
Voice call ringtone	23 acapella.mmf	_	23 acapella.mmf	23 acapella.mmf	23 acapella.mmf	23 acapella.mmf
Video call ringtone	Techno Dance.mp4	_	Techno Dance.mp4	Techno Dance.mp4	Techno Dance.mp4	Techno Dance.mp4
Message alert type	Melody	Vibration	Melody	Vibration	Vibration & Melody	Melody
MMS alert tone	Pure	_	Pure	Pure	Pure	Pure
SMS alert tone	Pure	_	Pure	Pure	Pure	Pure
Key tone volume	Level 2	_	Level 4	Mute	Level 5	Level 2
Phone sounds	Several tones ON	Alerts on Call	Several tones ON	Alerts on Call	Several tones ON	Several tones ON
Key tones	Xylophone	_	Xylophone	Xylophone	Xylophone	Xylophone
Call answer mode	-	-	Normal	-	_	_



Some items cannot be set depending on the mode. The volume of these sounds follows the Key tone volume settings.


Item	Description
All	Set or unset all of the effect sound items.
Popup box alerts	Generate sound when a confirmation or warning
т орар вох ають	message appears.
Minute minder	Generate sound at approximately every minute
Williato Milliato	during a call.
	When a call is initiated, the call is connected before
Call connect tone	the ringtone sounds on other party's terminal and
our cormoc tone	you will be notified with a tone that the other party
	will be called from now.
Call end tone	Generate sound at the end of a call.
Power on	Generate sound when the power is turned on.
Open/close folder	Generate sound when opening or closing handset.
Alerts on call	Generate sound when alarm is activated or mail is
Albi to till ball	received during a call.



Before Using Media Player

Play sound or video files saved in Data Folder or stream online media.


- From Music or Video menu, select Download music or Download videos, to access Vodafone live! and download media files.
- Hear sound not only from the speaker, but also using the stereo earphone microphone. Insert the plug as shown in the figure below. When using the speaker, unplug the stereo earphone microphone from handset.

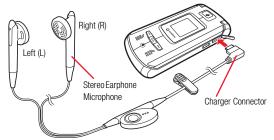

• Use the stereo earphone microphone not only for listening to music but also for initiating voice calls. When 804SS rings/vibrates while playing music using a stereo earphone microphone, press the switch on the stereo earphone microphone for 1+ seconds to answer the call.

Playing Music

- Press and select a playlist (All music by default)
- Highlight a file in list and press () (Play)

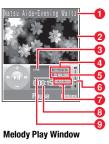

- 1 Artist's name and title (File name when the music title information is unknown)
- Skin
- Status: PLAY / PAUSE / STOP
- Repeat mode

 $_{\hat{\Box}}$ (Off) $/ \bigcirc 1 \bigcirc$ (One) $/ \bigcirc 5 \bigcirc$ (Shuffle) $/ \bigcirc 4 \bigcirc$ (All)

- 6 File number/Total number of files
- 6 Plaving volume

- 7 Total playing time
- 8 Elapsed playing time
- Progress bar

Tip

· To end the play and return to Options

Press Coo. However, if you press Coo while Options is displayed or you are operating Options. Options closes or you return to the previous menu.

- If 804SS is closed while Media Player is active
 Operate with Side Keys viewing the Sub Display (◆ P.10-4).
- · If there is an incoming call while playing

The play pauses and a ringtone sounds. After the call is ended, play restarts automatically. Note, however, that playing may not automatically start for some file formats.

• If 🖼 is received while playing

or appears on the top of Display and 804SS vibrates to notify you.

. When the time set for alarm has come while playing

Playing pauses, Alarm sounds and alarm details appears. Press any key to stop Alarm sound and restart playing. Press any key again to restore Media Player display.

· To set a melody file as a ringtone

While a file is highlighted in list or playing is paused or stopped, press (Set as) and choose how to use the file. However, a file that cannot be set to be a ringtone will not be set a ringtone.

• To use another function while listening to music

Use Switch Bar (♦ P.1-19).

To replay the last melody played easily

In Standby, press of 1+ seconds to play automatically.

Download music and Download videos

Download Music and Download Videos of Media Player are shortcuts to download sites. Be connected to a download site on the Web by selecting one of them.

Music search

Music search of Media Player is a shortcut to a music search site vodafone

Music Search. It allows you to search for music by music category or keyword.

Playback Window & List Options

Available items vary by file type, etc.

Item	Description
Send	Send file via MMS (② P.19-2) or Bluetooth (③ P.12-5).
View bookmark	Access a page containing a streaming play link saved as a bookmark.
View history	Access a page containing a streaming play link already accessed.
Add to playlist	Choose Selected file to add highlighted file, or Multiple file to add multiple files to a playlist.
Play by	Play tracks by album, artist or genre.
Delete	Delete a highlighted file or all files.
Rename	Change file name.
Lock/Unlock	Active/cancel file protection.
Details	Confirm file size, etc.
Stop	Stop playing.
Download content key	Purchase or acquire a Content key.
Create playlist	Select a file and create a new playlist (P.10-6).
Open playlist	Open a playlist.
Player settings	Change settings related to Media Player (♠ P.10-7).
Streaming settings	Change settings related to a streaming connection or create a new streaming connection (P.10-10).

Using Music Player with 804SS Closed

Open or close Music Player; select tracks from playlists.

Press Fi for 1+ seconds

To open a playlist

- 1)Press 🕲
- (2) Highlight a file to play with or I and press II
- (3) Press (B) to close the playlist

To pause/restart playing

Press 🖭

To exit Media Player, press Fill for 1+ seconds

Tip

- · Playback Operations
 - Playing previous or next track

(For 1+ seconds): Rewinding or fast feeding of the current track Side Key (Volume up/down

· To scroll a playlist

Press Side Key A or while viewing the playlist.


Press with 804SS closed.

Using Mini Player

When shortcut is set to Edge Bar, press in Standby to activate Edge Bar and open Mini Player (P.15-4).



Press (Play)

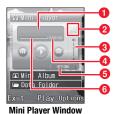

⊕ File name

2 Repeat mode

c s ∋(Shuffle) / c A⊋(Repeat)

- 3 Playing volume
- 4 Elapsed playing time
- Options
- 6 Progress bar

Tip

- · Actions available while playing/paused
 - : Play/Pause

: Play previous or next music (not from being paused)

Side Key () : Volume up/down

- : Open Options
- : Close Edge Bar

Clear: Close Edge Bar (When Options is displayed, close Options)

Play/Pause Options

Open Options and perform operations listed below.

Item	Description
Open list	Open a playlist and play a track or the playlist.
Shuffle	Play melodies at random from the playlist containing the selected file.
Repeat	Play melodies repeatedly in the file containing the selected Playlist.

10

9

Playing Melodies Using a Playlist

Creating a Playlist

Create a maximum of 20 playlists (Including *All Music*), each containing up to 100 files.

- Press , open Options and select Create playlist
- Enter a playlist name
- 3 Select the created playlist
- \triangle Open Options and select $Add \rightarrow Files$
- 5 Check every file to save and press ... (Save)

Tip

- . To create a new playlist by selecting all tracks in an existing playlist:
 - (1) Perform Steps 1 to 3
 - (2) Open Options and select Add → Playlist
 - 3 Select a playlist from which to add all melodies
- · To change the name of a playlist
 - 1 Highlight a playlist, open Options and select Rename
 - 2 Enter a playlist name
- · To delete an entire playlist
 - (1) Highlight the playlist, open *Options* and select *Delete* → *Selected*
 - (2) Select Yes
- . To delete all playlists
 - ① Highlight a playlist, open Options and select Delete → All
 - 2 Enter Phone Password and press (Confirm)
 - 3 Select Yes

Playing a Playlist

Press to highlight a playlist to play, open Options and select Play

Changing Music Player Settings

Repeat Mode

Default Setting ■ Off

Play a single track repeatedly, all files in All music, or tracks from a playlist, randomly or repeatedly.

- Press , open *Options* and select *Player settings*
- Select Repeat mode
- Select an item and press (Save)

Tone Volume

- Press , open *Options* and select *Player settings*
- Select Tone volume
- Use () to adjust the volume and press () (Save)

Audio Skin

Default Setting ■ Rainbow wave

Set one of two images to appear on Display while playing a melody.

- Press , open *Options* and select *Player settings*
- Select Audio Skin
- Select a setting and press () (Save)

Visualisation Mode

Visualization On/Off

Default Setting ■ On

Set whether to display the skin set from Visualization, to display the controller and to activate backlight settings on Display while playing music.

- Press , open *Options* and select *Player settings*
- **Select** Visualization
- Select Visualization mode
- Select a setting and press (Save)

Skin, Show Controller & Backlight



- Skin: Flowers
- Show controller: Show
- Backlight: Normal

Select one of 10 skins to display while playing a melody file. To display this skin on the whole window, set the Show controller to Hide. With the Backlight set to Always on, while handset is open, view the skin while listening to music.



Press , open *Options* and select *Player settings*

- Select Visualization
- Select Skin, Show controller or Backlight
- Select a setting and press (Save)



Cover Keypad Lock



When On, Cover Keypad is locked, preventing accidental activation.

For more information, see "Cover Keypad Lock" (P.15-4).

Tip


- When Cover keypad lock is On
 - appears on Sub Display while Media Player is active.
- . To temporarily activate/deactivate cover keys while Media Player is active

Press (B) for 1+ seconds with 804SS closed.

Playing Video

Press \bullet (Menu) and select *Media Player* \rightarrow *Video*

2 Highlight a file and press • (Play)

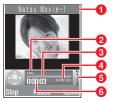

Video Player Window

- 1 Artist's name and title (File name when the video title information is unknown)
- 2 Playing status : PLAY/PAUSE/STOP
- 3 Progress bar
- 4 Total playing time
- 6 Playing volume level
- 6 Elapsed playing time

4 Options

Open Options in play window or list and perform operations listed below. Options displayed vary by the file type.

Item	Description	
Resolution	Set video display size while playing back or paused.	
Send	Send file via MMS (◆ P.19-2) or Bluetooth	
	(♦ P.12-5).	
View bookmark	Access a page containing a streaming play link saved as a bookmark.	
View history	Access a page containing a streaming play link	
VIEW HISTORY	already accessed.	
Delete	Delete a highlighted file or all files.	
Rename	Change file name.	
Lock/Unlock	Activate or cancel file protection.	
Details	Confirm file size, etc.	
Player settings	Change settings related to Media Player	
r layor ootarigo	(> P.10-10).	

Player Settings

Repeat Mode

Default Setting = Off

Set to play a file repeatedly or set to play all files in a folder at random or repeatedly.

Press lacktriangle (Menu) and select Media Player \rightarrow Video

2 Highlight a file in list and press (Play)

3 Open Options and select Player settings

4 Select Repeat mode

5 Select a setting and press (Save)

Tone Volume

Press lacktriangle (Menu) and select *Media player* ightarrow *Video*

2 Highlight a file in list and press (Play)

3 Open Options and select Player settings

▲ Select Tone volume

5 Use 🔘 to adjust the volume and press 🗨 (Save)

Resolution

Set the size of videos appearing on Display during play or pause.

Press (Menu) and select Media Player \rightarrow Video

Highlight a file in list and press (Play)

3 Open Options, select Resolution and select a size

Streaming Settings

Usually, you do not have to change the settings. Change them only when connecting to a special destination. Alternatively, register a new connection profiles.

Registering a Connection for Streaming

Default Setting RTSP Session

Press , open Options and select Streaming settings

Select a profile

Press (Save)

Creating a New Streaming Connection

Press , open *Options* and select *Streaming* settings

Open Options and select New

Select items (♥ P.12-9) and change them as required

Press (Save)

4 Options

The Option Menu displayed varies by the profile type and situation.

Item	Description	
Select/Save	Select or save the highlighted connection.	
Edit	Edit name, access name and other settings.	
New	Save a new connection.	
Delete	Delete a connection.	
Restore	Restore the profile to defaults.	

Profile Management

Alternatively, perform the saving/resetting operation of a connection profile from the Settings, Mail menu or Vodafone live! menu (P.12-9, 22-3, 23-3).


Managing Files (Data Folder)

Data Folder

804SS files are organised in folders by file format.

Default Folders

Data Folder contains five default folders; new files are saved to the appropriate folder (see right). Create additional folders as required.

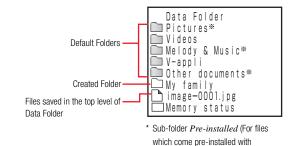

handset).

Memory Status

By selecting *Memory status*, view the memory usage of each Data Folder. Alternatively, use the setup menu to view this (**>** P15-5).

Download Links

, displayed in Data Folder, is a shortcut to a download site. If you select this shortcut, connect to a download site on the internet.

Folder Description **File Formats** JPEG. BMP. GIF. WBMP. PNG. Pictures All still images. Animation GIF **Videos** All videos. MPEG4 (3GP, MP4) All melodies, sounds recorded with Voice Recorder, Melody & MP3/MPEG4 Audio. Music downloaded music, and other ■ AMR sound files V-appli JAVA V-applications. Documents, graphics/animation vCard, vCalendar, SVG, Other requiring File Viewer or SVG-T/ SVGZ, SWF, PDF, XLS, Flash Viewer for display; vFiles, DOC. PPT. TXT. documents etc. are saved here. unsupported files

^{*} Copy or move files to other folders as required.

Saved Files

Opening Files

- Press (Menu) and select Data Folder
- Select the folder where a file is saved
- 3 Highlight a file and press (View/Play/Select)

Tip

- To use Slide Show
 - 1 Perform Steps 1 to 3 to display images
 - (2) Open Options and select Slide show
- . To enlarge or reduce image
 - 1 Perform Steps 1 to 3 to display an image
 - (2) Open Options and select Zoom
 - ③ Press ((), () or () to enlarge, reduce or scroll the image
 - (4) Press to return to the previous display
- File List Indicators
 - wx: Cannot be transferred
 - : Protected
 - : Copyrighted file (Transferable, Content key valid)
 - : Copyrighted file (Transferable, Content key expired)
 - : Copyrighted file (Not transferable, Content key valid)
 - : Copyrighted file (Not transferable, Content key expired)
 - : Wallpaper set (P.11-7)
 - . Ringtone set (♦ P.11-7)

· Viewing File Details

Open Options and select Details

Note

 A file that is larger than 3 MB cannot be displayed. Also, a file that is larger than 1.3MB or larger than 1280×1280 pixels cannot be edited or zoomed. These files cannot be set as Wallpaper or Phonebook Image.

🔁 Opening Data Folder file via Edge Bar

When a shortcut is set to Edge Bar (P.15-4), activate Edge Bar in Standby. Alternatively, view the contents of the five main folders from Data Folder.

- 1 Press twice
- ② Use 🕥 to highlight a folder and select it
- (3) Highlight a file in list and press () (View/Edit/Select)

Activating Camera or Voice Recorder from Data Folder

Activate Camera in Camera mode by highlighting the Pictures folder or an image file captured by 804SS by opening *Options* and selecting *Take photo*. In the same way, activate Camera in Video mode by highlighting the Videos folder or a video captured by 804SS by opening *Options* and selecting *Record video*. Activate Voice recorder by highlighting the Melody & Music folder or sound file captured by 804SS, opening *Options* and selecting *Record sound*.

9

Using File Viewer

Open PDF, XLS, DOC, PPT or TXT files saved in Data Folder; File Viewer activates automatically. Select Normal View or Full Screen View; navigate files via Options or shortcuts.





Normal View

Full Screen View

- Press (Menu) and select Data Folder
- Select file location then file
- 3 Use Options/navigation shortcuts to navigate

To scroll

Press 🔘

To change Display appearance

Open Options and select Full screen view or Normal view

To enlarge or reduce the image

Open Options and select Zoom

To fit document size to Display

Open Options and select Fit to screen

To move a page

Open Options, select Go to and select an item

To rotate image 90 degrees clockwise

- 1) Open Options and select Rotate
- ② Open Options and select Rotate to return to the previous display

To change the function of

Open Options and select Screen panning or Normal panning

To view assigned shortcut keys

Open Options and select FileViewer shortcuts

To show or hide navigation shortcuts (Full Screen View)

Open Options and select Hide controller or Show controller

Navigation Shortcuts

Key	Description
Side Key 🚹	Zoom in
Side Key 🔻	Zoom out
2 abc	Move to the first page
A ghi	Move to the previous page
5 声	Rotate 90 degrees clockwise or cancel

Key	Description	
6 mno	Move to the next page	
8 tuv	Move to the final page	
Select Normal View or Full Screen View		

Options from a List or Viewing Display

For items other than Options for display operations, see "Options" (P.11-8).

Note

- If a document includes many pages or complicated designs, all pages of the document may not be displayed.
- . If a file includes any language other than Japanese or English, that file may not be displayed correctly.

Viewing Graphics/Animation with the SVG-T/Flash Viewer

View SVG, SVGZ and SWF formatted files in Data Folder. When one of these files is selected from Data Folder list, the SVG-T/Flash Viewer is automatically launched.

View the graphics/animation on Normal View or Full Screen View. In either mode, Options and shortcut (Key operations) are available to control Display.







Full Screen View

- Press () (Menu) and select Data Folder
- Select file location then file
- Use Options/navigation shortcuts to navigate Open Options and select Full screen view or Normal view

To enlarge or reduce the image

- (1) Open Options and select Zoom
- (2) Press (4) to enlarge an image or (4) to reduce
- 3 Use to scroll the window
- (4) Press (•) to return to the previous display

To pause or restart an flash image

Open Options and select Pause or Resume

To select image quality

Open Options, select Quality and select an item

To rotate the screen 90 degrees clockwise or counterclockwise

Open Options, select Rotate and select an item

Tip

· To set an image for Wallpaper

Press (Set as) on Normal View, or in Options of Full Screen View, select *Set as* and select *Wallpaper*.

1 Options from a List or Viewing Display

For items other than options for screen operations, see "Options" (P.11-8).

Sorting Files

Sort files in list in various ways.

In list, open Options and select Sort by

Select an item

To sort files in descending order of dates

Select Date

To sort files by file types

Select Type

To sort files by file names

Select Name

To sort files in ascending order of size

Select Size

To sort files by status of content key

Select Activation Status

Tip

· When folders are contained in a list

Folders are placed at the top in any order.

· Sorting order when Type is selected

Files are sorted in the alphabetical order of the file extension (For example doc, iog. swf. and such).

• Sorting order when Name is selected

Files are sorted in the order of number \rightarrow alphanumerics \rightarrow Japanese character of the file names.

• Sorting order when Activation status is selected

Files are displayed in the following order:

Not-copyrighted or untransferable file \rightarrow Untransferable file \rightarrow Copyrighted file (Content key valid) \rightarrow Copyrighted file (Content key expired).

Using Files



Wallpaper

Set an image file as Wallpaper of Display or Sub Display or as an image in Phonebook to display with incoming calls.

Highlight a file in list and press (Set as)

To set while viewing an image

Highlight a file in list, press () (View) and press () (Set as)

Set the Use of the File

To set as Wallpaper on Display

Select *Wallpaper*, confirm the preview and press (Set)

To set as Wallpaper on Sub Display

- (1) Select Sub LCD
- ②Press : (Zoom out) or (Zoom in), as required, to adjust the size

To set as Phonebook image for use with an incoming call

- 1)Select Caller ID
- ②Search and select entry in which to place the image and press

 (Set)

Tip

- To edit a still image (\$\infty P.7-13)
- To create a mobile postcard (P.7-5)
- To print a still image (♠ P.12-8)

Ringtone

Use the following to change a ringtone setting for the current mode (© P.3-3).

- Press (Menu), select *Data Folder* and select the location of a file
- Highlight a file in list and press (Set as)
- 3 Set the use of the file

To set as a ringtone for voice calls

Select Voice ringtone

To set as a ringtone for video calls

Select Video ringtone

To set as a ringtone for Phonebook

- 1 Select Caller ringtone
- 2 Search and select an entry

Saving a vFile

Save a vFile stored in Data Folder to Phonebook, calendar, or as a scheduled event.

- Press (Menu), select *Data Folder* and select location for saving the vFile
- 2 Highlight a file in list and press (Save)

Options

Perform the following operations from Options in list or viewing windows. Options that appear vary by the type of file or folder. For Options used for the File Viewer or SVG-T/Flash Viewer, see "Using File Viewer" (P.11-4) or "Viewing a Graphics/Animation with the SVG-T/Flash Viewer" (P.11-5).

Item	Description		
Edit	Edit a still image (P.7-13).		
Register to phonebook	Export a vCard file to Phonebook (P.11-8).		
Register to Calendar	Export a vCalendar file to Calendar (P.11-8).		
Send	Send file via MMS (◆ P.19-2) or Bluetooth (◆ P.12-5).		
mPostcard	Create a mobile postcard (P.7-5).		
Zoom	Enlarge or reduce still image being confirmed (♠ P.11-3).		

Item	Description
Sort by	Sort files (P.11-6).
Move	Move a file to another folder or outside the current folder
IVIOVE	(> P.11-9).
Сору	Make a copy of a file (◆ P.11-10).
Delete	Delete a file (◆ P.11-11).
Delete folder	Delete a folder (♦ P.11-11).
Take photo	Activate Camera in Camera mode (P.11-3).
Record video	Activate Camera in Video mode (P.11-3).
Record sound	Activate Voice recorder (◆ P.11-3).
Rename	Change file name (◆ P.11-9).
Rename folder	Change folder name (◆ P.11-9).
Create folder	Create new folder (P.11-9).
Print	Prints a still image with a USB-connected printer
FIIIIL	(♦ P.12-8).
Lock/Unlock	Activate or cancel file protection.
Download content key	Purchase or acquire a Content key.
Details	Confirm file/folder size, etc.
Content key info	View details about a copyright.

Managing Files/Folders

Creating a Folder

Create a personal folder at the same level as the default folders or create sub-folders.

Press (Menu) and select Data Folder
To create a subfolder
Select a folder

2 Open Options and select Create folder

3 Enter a name

Changing a File Name/Folder Name

Change the name of a file or personal folder.

Press (Menu) and select Data Folder

2 Highlight a personal folder or a file in list, open Options and select Rename folder or Rename

3 Enter a name

Tip

· When a file is locked

You cannot change the file name.

 If a file set as Phonebook image, a caller ringtone or its folder is renamed

The settings are cancelled.

Moving a File/Folder

Move a file or personal folder to another folder or a location outside folders.

Press (Menu) and select Data Folder

2 Highlight a personal folder or a file in list, open Options and select Move

3 Move the file or folder

To move one file or all files in the same folder or all personal folders

(1)Select Selected or All

(2) Select a destination

To select and move multiple files or personal folders

1 Select Multiple

(2) Check files or personal folders to move and press (Move)

(3) Select a destination

Tip

· To all files or folders at once

Open Options and select Mark all or Unmark all.

· When a file is locked

You cannot move the file.

- When there is a file or folder with the same name at the destination
 You have to change the name of the file or folder to move. In message text, enter
 a new name
- When a file is set as Phonebook image or caller ringtone is moved
 A confirmation message appears. Select Yes to complete the move, cancelling
 the settings.

Copying Files/Folders

Make a copy of a file or folder in another folder or a location outside folders.

- Press (Menu) and select Data Folder
- 2 Highlight a personal folder or file in list, open *Options* and select *Copy*
- 3 Copy the file or folder

To copy one file or all files in the same folder or all folders

- 1) Select Selected or All
- (2) Select a destination

To select and copy multiple files or folders

- (1) Select Multiple
- (Copy)
- Select a destination

Tip

- To all files or folders at once (P.11-10)
- When a copy of a file or folder is pasted to the same location as the original

The pasted file or folder is saved under another name, i.e., _001 is automatically added to the name.

When there is a file or folder with the same name in the destination
 You have to change the name of the file or folder to paste. In message text, enter
 a new name.

Note

 The file that forwarding is impossible and the copyrighted file cannot be copied.

Deleting a File/Folder

Deleting a File

Press (Menu) and select Data Folder

Highlight a file in list, open Options and select Delete

3 Delete the file

To delete one file

Select Selected and select Yes

To delete all files from the same folder

(1)Select All

2 Enter Phone Password press (Confirm) and select Yes

To select and delete multiple files

1 Select Multiple

②Check files, press (Delete)

(3) Enter Phone Password and press (Confirm) (If all files are checked)

(4) Select Yes

Tip

- To check/uncheck files or folders at once (♦ P.11-10)
- If a file is set as Wallpaper or ringtone, or locked
 A confirmation message appears. Select Yes to execute deletion. To delete multiple or all files, select No to delete only those files without setting or protection.

Deleting a Personal Folder

Press (Menu) and select Data Folder

2 Highlight a personal folder in list, open *Options* and select *Delete folder*

Benter Phone Password, press (Confirm) and select Yes

Tip

If a folder contains files set as Wallpaper or ringtones or locked files
 A confirmation message appears. Select Yes to execute folder deletion. Select
 No to delete only files without designated uses or protection, leaving the folder
 undeleted.



External Connections

Send and receive data to/from a Bluetooth-compatible device, without any physical connection.

Alternatively, connect 804SS with various devices, like a Personal Computer or a printer and exchange or print out images via a USB cable.

Bluetooth

Exchange data among Bluetooth-compatible devices including mobile phones such as 804SS using signals. When a Bluetooth handsfree device is connected, converse without operating 804SS directly with your hands. Alternatively, use a dialup-connection devices, to access the Internet or for other purposes.

Before Using Bluetooth Communications

Bluetooth communications can be performed only with other using Bluetooth-compatible devices with the same profiles.

The Bluetooth specifications of 804SS are as listed below.

Item	Specification
Communication Standard	Bluetooth Standard Version 1.1
Stariuaru	

Item	Specification
Applicable profiles	Headset
	Handsfree
	Serial Port
	Dialup Networking
	File Transfer
	Object Push
Output	Bluetooth Power Class2
Line-of-signal distance*	Approximately 10 meters or less
Frequency band used	2.4GHz

^{*} This distance varies by radio interference and other conditions.

Precautions for Using Bluetooth

- · 804SS may not work with all Bluetooth-compatible devices.
- Exchanging data may be unavailable with some devices even if they are Bluetooth-compatible devices and they may have different operating procedures, displays or actions of 804SS, depending on their characteristics and/or specifications.
- The radio band (2.4GHz) used by Bluetooth-compatible devices is also used by various other devices. Therefore, the transmission rate or distance may be reduced or communications may be blocked due to the influences of other devices.
- Talking using wireless or handsfree mode may induce noise depending on the other connected devices and/or the communications environment.

- 804SS Bluetooth function does not allow multiple devices to connect at the same time.
- USB and Bluetooth functions cannot be used at the same time.
- · Set the Bluetooth function off before connecting a USB cable to handset.

Tip

- . To check Bluetooth functions available
 - ① Press (Menu) and select Settings → Connectivity → Bluetooth → Bluetooth service
 - (2) Select an item and view the contents
- . To confirm the device address of 804SS

Press igodeligable (Menu) and select Connectivity
ightharpoonup Bluetooth
ightharpoonup Address

9

Sending & Receiving Data

Send and receive Phonebook entries, My Phonebook details, Schedule information, Task information, still images, video, sound files, vFiles and others.

Activation

Default Setting

■ Off

Setting the Bluetooth function on activates connection with a Bluetooth-compatible device and causes 🔝 to appear at the top of Display.

- Press (Menu) and select Settings → Connectivity

 → Bluetooth → Activation
- 2 Select a setting

Search for New Device

Register a Bluetooth-compatible device to the My devices list. Register a maximum of 10 devices. When registering a device, the same authentication code must be entered into 804SS and the other device.

Activate the Bluetooth function of the other device beforehand.

- Press (Menu) and select $Settings \rightarrow Connectivity \rightarrow Bluetooth \rightarrow My devices$
- 2 Select Search for new device
- 3 When devices replying to the search have appeared, select the device to register

- 4 Enter an authentication code (4 to 16 digits) and press ... (OK)
- Within 20 seconds, enter the same authentication code on the other device

Tip

• Authentication Code

The Authentication Code is a password used to connect Bluetooth-compatible devices. When connecting to a handsfree device, enter the Authentication Code specified for it. You are not required to enter the Authentication Code again for a registered device.

- If authentication with the other device has failed
 - A confirmation message appears asking whether to try authentication again. Select *Yes* to retry.
- If ten peripheral devices have already been registered

A confirmation message appears asking whether to replace an existing device with the new one. To replace, select *Yes* and select an unnecessary device.

- . To check Bluetooth functions available for each device
 - Press (Menu) and select Settings → Connectivity → Bluetooth → My devices
 - (2) Highlight a device, open Options and select Service list
 - 3 Highlight an item, open Options, select Help and view the contents
- To change the name of a registered device
 - ① Press ② (Menu) and select Settings → Connectivity → Bluetooth → My devices
 - (2) Highlight a device, open Options and select Rename
 - 3 Enter a new name

· To delete a device from My devices

- ① Press ② (Menu) and select $Settings \rightarrow Connectivity \rightarrow Bluetooth \rightarrow My devices$
- (2) Highlight a device, open *Options* and select *Delete* → *Selected* or *All*
- ③ Enter Phone Password, press (Confirm) (In the case of *All* only) and select *Yes*
- To search for or register a device from other Bluetooth-compatible devices (♠ P.12-6)

Icons Displayed on the My Devices List

The device name is preceded by the following icons.

📲 : Personal Computer

: Handsfree device/Headset

📭 : PDA

📳 : Printer 🚇 : Other

Gonnection Request from Another Bluetooth-Compatible Device

If a message indicating that there is a connection request from another Bluetoothcompatible device appears, select *Yes* and enter the same Authentication Code as that of the other device within 20 seconds.

If there is a connection request from an already registered device, such as a handsfree device, 804SS will be automatically connected.

Sending a File

Send data from Options of function windows. After the receiving side approves a communication, sending is started. 804SS goes offline while transfering data.

In list of a function, select a file to send

2 Open *Options* and select $Send \rightarrow Via \ bluetooth$

3 Select the device of the receiver

When the receiver's device has not been registered

Select *Service for new device*, search for that device and register it (**②** P.12-3)

Tip

To send data after viewing the contents
 Some functions allow sending Options of a detail or play window.

Receiving a File

When connection from the sender is approved, file reception starts and the received file is saved in Data Folder.

When a confirmation window appears, select Yes

Accessing Connected Device Files

Access the shared folders and files of the other party's device. Alternatively, receive or delete data residing on the other device.

- Press (Menu) and select Settings → Connectivity
 → Bluetooth → My devices
- Select a device
- 3 Approve access on the side sharing the data

Tip

To receive an accessed file
 After Step 3. select a file to receive.

□ Locations of Received Files

Received files are automatically saved to Data Folder. The type of the folder that a file is saved to vary by file format; for example, JPEG and BMP files are saved to the *Pictures* folder and vFiles to the *Other documents* folder.

Connecting Handsfree or Other Devices

Register the handsfree device following the steps for "Search for and Register a Bluetooth-Compatible Device" (P.12-3) beforehand.

Search for New Device

In the steps given below, 804SS is placed in mode waiting for a handsfreedevice connection request.

- Press (\bullet) (Menu) and select $Settings \rightarrow Connectivity$ \rightarrow Bluetooth \rightarrow My devices
- When Authentication Code entry window appears Enter the same Authentication Code to 804SS as is set for the

Select a handsfree-compatible device

Answering Mode

handsfree device.

Default Setting Normal

If the setting is changed to Automatic a call to 804SS will be answered without the operation of any keys.

Press (\bullet) (Menu) and select $Settings \rightarrow Connectivity$ → Bluetooth → Answering mode

Select a setting

Tip

. To set the time (Seconds) before automatic reception After Step 1, highlight Automatic, open Options, select Edit and select the number of seconds to ring before answering.

Changing Bluetooth Settings

Activating Search and Saving from other Bluetooth-compatible Devices

Default Setting ■ On

To activate search and saving from other Bluetooth-compatible devices, you have to make your 804SS visible.

- Press (\bullet) (Menu) and select $Settings \rightarrow Connectivity$ \rightarrow Bluetooth \rightarrow My phone's visibility
- Select a setting

Changing the name assigned to 804SS

Default Setting ■ Vodafone 804SS

The displayed name shown on another device for your 804SS can be changed.

- Press (\bullet) (Menu) and select $Settings \rightarrow Connectivity$ \rightarrow Bluetooth \rightarrow My phone's name
- Modify the name and press (OK)

Secure Mode for Data Transfer

Default Setting ■ Off

If set On, a confirmation message appears before you sending data.

- Press (\bullet) (Menu) and select $Settings \rightarrow Connectivity$ → Bluetooth → Secure mode
- Select a setting

USB Connection

Connect 804SS to a PC via a USB cable to exchange data between the devices. Alternatively, connect a printer to print still images.

Connecting to a PC

Perform the following:

- Send files from Data Folder of 804SS
- · Receive files from the PC and saving them to Data Folder
- · Perform packet data communications

Before Using the USB Connection

Before connecting 804SS to a PC with a USB cable, you have to install the USB driver and the Samsung PC Studio. For more information about the installation procedure, operating conditions of a PC available, etc., see the User's guide in the attached CD-ROM.

Connecting a Printer

Connect 804SS to a PictBridge-compatible printer with a USB cable and directly print still images from Data Folder. Alternatively, set a paper size, number of copies and other items from 804SS.

For more information about printer operations and paper setting, see the printer's User Manual.

Printing a Still Image from Data Folder

Highlight a still image file in list of Data Folder

Open Options and select Print

Connect 804SS to a printer with a USB cable

Set the printer options

To set a paper size

Select Paper size and select setting

To set the number of copies

Select *Number of copies*, enter the number of copies (1 to 99) and press (OK)

To set the number of pages to print on a sheet

Select Paper per sheet and select a setting (1 to 16)

To set whether or not to print the date

Select Date print and select a setting

To set whether or not to print a frame

Select Border and select a setting

To set a print quality

Select Print quality and select a setting

Check the preview window and press (●) (Print)



Note

Never disconnect the USB cable during printing.

Connections

Register a new profile when Vodafone notifies you of any change in the connection point. Enter each item of the profile according to the contents of the notification. See P.22-3 and P.23-3 for more information about changing the destination.

- Press (Menu) and select Settings → Connectivity

 → Connections
- 2 Open Options and select New
- 3 Select items (♦ P.12-9) and change as required
- 4 Press ... (Save)

Tip

- . To edit the newly registered profile
 - (1) Perform Step 1
 - 2 Select the profile to edit
 - 3 Edit the contents and press (Save)
- · To delete the newly registered profile
 - 1 Perform Step 1
 - (2) Highlight the profile, open Options, select Delete and select Yes
- · To set the profile back to its default
 - 1 Perform Step 1
 - 2 Open Options and select Restore
 - (3) Enter Phone Password, press (Confirm) and select Yes

Profile Items

Register/set the items listed below.

Item	Description
Set name	Up to 40 single-byte (13 double-byte) characters
Access name	Up to 64 single-byte alphanumerics
Authorisation type	Select from among Normal/Secure/None
User ID	Up to 44 single-byte alphanumerics
Password	Up to 44 single-byte alphanumerics
Protocol	Select from among WAP/HTTP/Other
Home URL ^{1,2}	Up to 512 single-byte alphanumerics
Gateway address ¹	Enter the IP address
Secure connection ¹	Select from On/Off
Proxy address ²	Up to 58 single-byte alphanumerics
Port ²	1 to 65535
Log-in timeout (sec.) ^{1,2}	1 to 99999 seconds

- 1 This setting is activated when WAP is selected for the protocol.
- 2 This setting is activated when *HTTP* is selected for the protocol.

Profile Management

Alternatively, perform registering/resetting operation of connection profile from *Settings, Mail menu* or *Vodafone live!* menu (P.10-11, 22-3, 23-3).

Security

Changing Phone Password

Default Setting ■ 9999

- Press (\bullet) (Menu) and select $Settings \rightarrow Security \rightarrow$ Change phone password
- **Enter current Phone Password and press** (Oonfirm)
- Enter new Phone Password (4 digits) and press (Onfirm)
- **Enter new Phone Password again and press** (Confirm)

PIN

PINs are security codes for USIM Card. For more information, see "USIM Card" (P.1-2).

Changing PIN/PIN2

Press (\bullet) (Menu) and select $Settings \rightarrow Security \rightarrow$ Change PIN code or Change PIN2 code

- Enter current PIN or PIN2 and press (Confirm)
- Enter new PIN or PIN2 (4 to 8 digits) and press (Onfirm)
- Enter new PIN or PIN2 again and press (Onfirm)

Note

• When PIN lock (P.13-2) is set to Disable. PIN cannot be changed.

PIN Lock

Default Setting ■ Disable

To require PIN authentication each time the power is turned on, set this function to Enable.

- Press \bullet (Menu) and select $Settings \rightarrow Security \rightarrow$ PIN lock
- Select setting and press (Save)
- Enter PIN and press (Confirm)



Resetting PIN Lock

If PIN or PIN2 is been incorrectly entered three consecutive times. PIN or PIN2 lock is set, restricting operations of 804SS. Unblock PIN or PIN2 lock in the steps given below.

- With PIN lock unlocking code (PUK Code) entry window displayed, enter PUK Code and press (Confirm)
- Enter new PIN or PIN2 (4 to 8 digits) and press ()
- Enter new PIN or PIN2 again and press (

Note

- For more information about PIN and PIN2 lock unlocking codes (PUK and PUK2 Codes), contact Customer Service (P.28-19).
- If incorrect PIN lock unlocking code is entered ten consecutive times. USIM Card is locked (The count is not cleared when handset is turned off).
- . There is no way to unlock the locked USIM Card. Contact Customer Service (P.28-19).

USIM Lock

Default Setting ■ Disable

Set handset so that it is deactivated unless a USIM password is entered when another USIM Card is installed in handset.

- Press (\bullet) (Menu) and select $Settings \rightarrow Security \rightarrow$ USIM lock
- Select the setting and press (Save)
- Enter a USIM password (4 to 8 digits) and press (Confirm)

To set Disable

The settings are saved and the operation completes.

To set Enable

Proceed to Step 4

Enter the USIM password again and press (Onfirm)

USIM password

This is a password dedicated to USIM Card authentication. If the USIM password matches, the other USIM Card can also be used for 804SS. Change USIM password each time the USIM check setting is set to Enable.

. When you forget your USIM password Insert a USIM Card with USIM lock set to Enable to 804SS and execute All reset (P.13-6).

Handset Security

Phone Lock

Default Setting Disable

When phone lock is set to Enable, Phone Password entry is required at each time of the power is turned on.

- Press \bullet (Menu) and select Settings \rightarrow Security \rightarrow Phone lock
- Select the setting and press (Save)
- Enter Phone Password and press (Confirm)

Privacy Lock

Default Setting ■Unlock all

When Privacy lock is set, Phone Password must be entered each time the mail, Data Folder, Phonebook, call log or calendar functions are called up.

- Press \bullet (Menu) and select $Settings \rightarrow Security \rightarrow$ Privacy lock
- Check the functions to lock and press ... (Save)
- Enter Phone Password and press (Confirm)



Rejecting Incoming Calls

Reject calls from callers who do not send caller IDs. In addition, nuisance calls can also be rejected by registering the caller phone numbers to a Black list.



Reject Incoming Calls

Default Setting Off

- Press \bullet (Menu) and select $Settings \rightarrow Call \ settings$ \rightarrow All calls \rightarrow Reject incoming calls
- Select Reject withheld field
- Select the setting and press (OK)
- Press (Save)



Black List

- Press \bullet (Menu) and select $Settings \rightarrow Call \ settings$ \rightarrow All calls \rightarrow Reject incoming calls
- Select Reject black list field
- Open Options and select Add
- Enter the phone number and press [...] (Save)

Tip

- To delete phone numbers from Black List
 - (1) Perform Steps 1 and 2
 - (2) Highlight the phone number to delete, open Options, select Delete -Selected or All and select Yes
- To edit Black List numbers
 - (1) Perform Steps 1 and 2
 - (2) Highlight the phone number to edit, open Options and select Edit
 - (Save)

Activating/Deactivating Reception from Black List

Select Reject black list field

3 Select setting and press • (0K)

4 Press ... (Save)

The Calls from Black Listed Numbers

Calls are not connected. Caller hears a busy tone. *Missed call* appears in Standby. Press (...) (View) to see Missed Calls.

Restoring Defaults

Clear Memory

Clear Data Folder, Messaging folders, Calendar and Phonebook all at once.

Press (Menu) and select Settings → Memory settings → Phone memory → Clear memory

2 Check items to reset and press (OK)

3 Enter Phone Password, press (Confirm) and select Yes

Master Reset

Restoring Defaults

Clear Saved content and settings and restore defaults. However, the following contents are not restored.

Setting menu	Content not to be reset
Phone settings	Contents set in Time and Date fields for Time & date
Display settings	Contents set in <i>Brightness</i>
Messaging settings	3D Pictogram Settings (Delete all is not executed)

Setting menu	Content not to be reset
Call settings	All calls→Reject incoming calls→contents saved in Black list Voice call/Video call→contents saved/set in Diverts Voice call/Video call→contents set in Call barring, Call waiting
	Contents set in <i>Voice mail</i>
Phonebook settings	Contents saved/set in My phonebook details, Category settings
Connectivity	Preferred networks
Security	USIM lock, PIN lock, Change PIN code, Change PIN2 code

- Press (Menu) and select Settings → Memory settings → Phone memory → Master reset → Reset settings
- 2 Enter Phone Password, press (Confirm) and select *Yes*

Reset All

Restore 804SS defaults and delete Phonebook, Messaging and Data Folder content. Original files and V-applications are restored.

- 2 Enter Phone Password, press (Confirm) and select *Yes*

Tools

Alarms



Wake-up Alarm/Alarms

Register a Wake-up alarm and 4 other alarms. Each alarm can be named and the name given to Alarm appears when Alarm sounds. Once an alarm time is saved, it can only be set/reset by switching *Alarm activation* to *On* or *Off*. In addition to setting one time only alarm, set alarms to repeat on specific days of the week or everyday.

- Press \bullet (Menu) and select $Tools \rightarrow Alarms$
- **2** Select an alarm from Wake-up alarm to Alarm4
- 3 Select Alarm activation field
- 4 Select On and press \bigcirc (OK)
- 5 Select and set other items as required

Set a name (Wake-up alarm cannot be edited)

- 1) Select Alarm name field
- (2) Enter the name to set

Set Alarm time

Highlight Alarm time field and enter the time

Set an alarm sound notification by Alarm sound

- 1)Select Alert tone field
- 2) Select My tone and press ... (Change)
- ③ Select the location of sound file, select an alarm sound and press
 (OK)

Set Alarm to Vibrator

- 1) Select Alert tone field
- (OK) (OK)

Set whether to sound repeatedly or only one time

- 1) Select Repeat field
- (2) Select *Everyday* or *Once alarm* and press (0K)

Set days of the week for a repeated alarm to sound

- 1) Select Repetition field
- 2) Select *Specify days* and press (Edit)
- (OK) Check the days to set and press (OK)

Set a snooze procedure

- (1) Select Snooze field
- ②Select setting and press (OK)

If you do not want to activate Alarm yet

- 1)Select Alarm activation field
- ② Select Off and press ① (OK)
- 6 Press ... (Save)

Tip

. When wake-up alarm/alarms are set appears.

· When wake-up alarm and/or multiple alarms have been set for the same activation time

Wake-up alarm has precedence over Alarm1 to Alarm4. Among alarms, the one set the last has precedence.

Volume of Alarm Sound

The volume follows the settings of *Tone volume* for the current mode. However. if an alarm sound is set to mute (P.9-3), you are notified by the vibrator even when Alarm sound is not set to Vibrator in Step 5.

➡ When the Time Set for Wake-up alarm/Alarm Comes

Alarm sounds and a message appears. Press any key to stop Alarm sound and press any key again to clear the message.

H When Snooze Has Been Set On

Alarm sound is generated for approximately 1 minute followed by an intervals of approximately 5 minutes. The notification is repeated up to 6 times or until snooze is cleared

When no key is pressed or ... (Snooze) is pressed while Alarm is sounding, Alarm sound stops and starts again after 5 minutes.

To cancel snooze, press or ... (End) when an alarm sounds.

➡ When the Time Set Comes during a Call or While a Call is Being Initiated

During a call, you are notified with a short sound and display. When an outgoing call is being initiated, you are notified at the same time as establishment of the connection. Turn Display message off by pressing any key twice. When Snooze is set to On, press \cdots (End) to stop Alarm.

➡ When the Time Set Comes While Capturing Video or Recording. Sound

Alarm sound is generated as soon as capturing of recording finishes.

Auto Power On

Default Setting ■ Off

If you set this setting to on, even when the power is turned off, the power is automatically turned on at the time set for a wake-up alarm or alarm.

Press \bullet (Menu) and select $Tools \rightarrow Alarms \rightarrow$ Auto power

Select on or off and press (Save)

Note

Cancel Auto power settings near electronic devices that require highprecision control or handle weak signals or in places, such as airplanes or hospitals, where use of mobile phones is prohibited.

The When the Time Set for Wake-up Alarm Comes

The power is automatically turned on. Stop Alarm sound and set display message Off and cancel snooze in the usual way (P.14-3). When Alarm is deactivate and Display is set Off, handset remains turned off. Note that, when another alarm is set to activate within 15 seconds after clearing the indication, handset remains on waiting for the next alarm.

Calendar

Displaying Calendar

Press \bigcirc (Menu) and select $Tools \rightarrow Calendar$

Viewing Calendar

There are three modes for displaying Calendar. Select a date on Monthly or Weekly view window to display Daily view window for the selected day.



Monthly View Window

: Highlighted position (Date in light blue) : Current day Date in red: Holiday Date in red: Sunday



- (In Orange): Anniversary registered (In Blue): Schedule registered
- (In Green): Memo registered (In Red): Task registered



Daily view window



14

Tip

- To display the previous or next month on Monthly view window Highlight Year/Month field and press
- To display the previous or next week on Weekly view window Highlight Year/Month field and press .
- To display the previous or next day on Daily view window Press
- To view a particular month or week
 From Monthly view window or Weekly view window, change Display by specifying year, month and day as follows.
 - ① On the calendar window, open *Options* and select *Go to*② Select *Date*, enter the year, month and day and press ④ (Go)
 When *Today* is selected in Step ②, the current date is highlighted on the

Calendar Window Format

window of the current month or week.

Default Setting ■ Starting day: Sunday Default view mode: Monthly view

Set Calendar to begin with Sunday or Monday. Alternatively, set the window displayed when activating Calendar.

Press (Menu) and select $Tools \rightarrow Calendar$

Open Options and select Settings

? Change settings

Set the first day of week

- 1 Select Starting day
- ② Select setting and press (Save)

Set the default view mode

- 1 Select Default view mode
- 2 Select setting and press (Save)

Tip

. When settings are changed

A change in *Starting day* is immediately reflected. Changing the settings of *Default view mode* can be applied when you deactivate calendar and then reactivate it.

• To temporarily change display mode

On the calendar window, open Options, select $View\ mode$ and select Display mode.

Saving New Entries to Calendar

Scheduled Events

Save a maximum of 100 items.

- Press lacktriangle (Menu) and select $Tools \rightarrow Calendar$
- 2 Open Options, select Add new and select Schedule
- 3 Select items and make settings

Set a title

Select Title field and enter a text

Set details

Select Details field and enter a text

Set a starting date

Highlight Start date field and enter a date

Set a starting time

Highlight Start time field and enter a time

Set an ending date

Highlight End date field and enter a date

Set an ending time

Highlight End time field and enter a time

Set an event location

Select Location field and enter a text

Set an alarm

- (1) Check Alarm field to select
- ②Highlight Before field and enter a value for how long before the event Alarm should sound, and use 🕥 to highlight the row of units and switch to an appropriate unit
- ③Select Alert tone field, select a location of sound files and select Alarm tone

Set Repeat

(1) Check Repeat field to select

- ②Use to highlight Time cycle field and specify the time cycle unit
- (3) Highlight Value field and enter a value
- A Highlight Until date field and enter a year, month and day to stop repetition

Set Expiry time for a Calendar Event

Use to highlight Expiry field and switch the expiry limit

4 Press ... (Save)

Tip

. To make it easier to enter a Start date and/or End date

Put cursor on the target date on Calendar window before Step 2 to show that date in Start date or End date field.

· When an event entry has expired

An event is automatically deleted from Calendar when it expires. For example, if the expiration is set to *After 1 year*, and event repetition not set, the indication is deleted when one year has elapsed from the ending date of the event. With repetition set, it is deleted one year after the ending date of the last repetition. To deactivate automatic deletion, set the expiry to *Disable*.

Anniversary/Holiday

Register a maximum of 50 anniversaries and 50 holidays.

Press lacktriangle (Menu) and select $Tools \rightarrow Calendar$

2 Open Options and select Add new → Anniversary or Holiday

3 Select items and make settings

Set a text

- 1 Select Text entry field
- 2 Enter text

Set a date

Highlight Date field and enter the date

Set an alarm (Anniversary only)

- 1 Check Alarm field to select
- ②Highlight Before field, enter a value for how long before the anniversary Alarm should sound, use 🕥 to highlight the field of units and switch to an appropriate unit
- (3) Highlight Alarm time field, and enter a time
- (4) Select Alert tone field, select the location of sound of files and select an alarm tone

Set to repeat every year

Check Repeat every year field

4 Press ... (Save)

Tip

. To make it easier to enter a date

Put cursor on the target date on Calendar window before Step 2 to show that date in Date field.

Memo

Up to 20 memos can be registered. Memos can be registered even while talking (♠ P.2-4, 6-4).

- Press lacktriangle (Menu) and select $Tools \rightarrow Calendar$
- **2** Open *Options* and select $Add\ new \rightarrow Memo$
- 3 Select the memo text box and enter text

To set the date

Select Date and enter the date

4 Press (Save)

Tip

• To save effort to enter a date (\$\infty P.14-7)

Tasks

Register a maximum of 20 time-limited items and manage them in a list.

Press lacktriangle (Menu) and select $Tools \rightarrow Calendar$

Open Options and select Add new \rightarrow Task

3 Select items and make settings

Set a title

- 1)Select Title field
- 2 Enter title

Set a description of the task

- 1) Select Task field
- (2)Enter text

To set the starting date

Highlight Start date field and enter the date

To set the due date

Highlight Due date field and enter the date

Set an alarm

- (1) Check Alarm field
- ② Highlight Before field, enter a value for how long before the task starts the alarm should sound, use to highlight field of units and select an appropriate unit
- (3) Highlight Alarm time field and enter the time

Select Alert tone field, select the location of sound files and select an alarm tone

Set a priority level

Use to highlight Priority field and select a value

4 Press (Save)

Tip

. To make it easier to enter a Starting date or Due date

Put cursor on the target date on Calendar window before Step 2 to show that date in Starting date and Due date field.

➡ Volume of Alarm Sound

The volume follows the settings of *Tone volume* for the Normal Profile. However, if an alarm sound is set to mute (**②** P.9-3), you are notified by vibrator.

The When the Time Set for Alarm Comes

Alarm sounds and a message appears. To stop Alarm tone, press any key. Press (OK) to cancel the message display.

When Alarm is not stopped, a message appears indicating that Alarm was not noted. Press (...) (View) to view the Alarm message.

➡ When a Call is Being Initiated or During a Call

During a call or connection (Connecting···displayed), you are notified with a short sound and display. When an outgoing call is being Initiated (Dialling···displayed), you are notified on Display. When no checkmark is put on Alerts on call in Phone sounds, notification is made with only a window indicator as also during a call or connection. Reset Display by pressing (OK).

Viewing Saved Calendar Entries

Press lacktriangle (Menu) and select $Tools \rightarrow Calendar$

Open a window listing items

To check items of one day

Select a date on Monthly view window or Weekly view window, or use to change the date on Daily view window

To check registered contents by type

Open Options, select Event list and select a type

To check the message of a missed alarm

Open Options and select Missed event alarm

3 Select and view details

Tip

. To check calendar item status

Check the number of savings by type by opening *Options* in Calendar or registered contents list and selecting *Memory status*.

Editing Calendar Entries

Editing and Saving as New Entries

In addition to edit and update the entries, edit the entries and save them as new entries.

Press lacktriangle (Menu) and select $Tools \rightarrow Calendar$

2 Open a window listing entries

To open a window listing entries for a single day

Select a date on Monthly view window or Weekly view window, or use to change the date on Daily view window

To view events by type

Open Options, select Event list and select a type

- 3 Select an item to edit
- ⚠ Press (Edit)
- 5 Change the information as required
- 6 Press (Save) and select New or Update

14

Marking a Task as Completed

Press \bullet (Menu) and select $Tools \rightarrow Calendar$

Open *Options* and select *Event list* \rightarrow *Task*

Highlight a completed task, open Options and select Completed

To remove the completion mark

Open Options and select To do

Tip

To sort tasks

On the Task window, open *Options*, select *Sort by* and select a sorting type. Classify tasks into completed/uncompleted ones or sort them by due date or priority.

Deleting Calendar Entries

In Calendar window or in a list of saved contents. open Options and select Delete

Delete the entry

To delete only the highlighted entry

Select Selected and select Yes

To delete all entries of the current month or week

Select This month or This week and select Yes

To delete only entries from a specific period of time

(1) Select Periods

(2) Enter the start and end dates

(3) Press (Delete) and select Yes

To delete all entries or all before the highlighted date

(1) Select All or All past data

(2) Enter Phone Password, press () (Confirm) and select Yes



· To collectively delete multiple registered items

Select registered unnecessary items from a list by type and delete them collectively.

- (1) Press (lacktriangle) and select $Tools \rightarrow Calendar$
- (2) Open Options, select Event list and select the type
- (3) Open Options and select Delete → Multiple
- (4) Check the items to delete, press (...) (Delete) and select Yes



Calendar Options

Perform the following operations from Options on a window listing Calendar entries:

Item	Description
Add new	Save new Calendar entry (P.14-5).
Send schedule/Send	Send Calendar entry via MMS (P.19-2) or Bluetooth
task	(♦ P.12-5).
View mode	Select a display mode (◆ P.14-5).
Event list	View events listed by type (◆ P.14-9).
Delete	Delete a Calendar entry (P.14-10).
Completed/To do	Set or cancel the task completion mark (P.14-9).
Sort by	Sort tasks (♦ P.14-10).
Save to Data Folder	Create vFile and save it to Other documents.
Settings	Change Calendar Display settings (P.14-5).
Missed event alarm	View the message of a missed alarm (◆ P.14-9).

Item	Description
Memory status	Check memory usage for Calendar functions (P.14-9).

Voice Recorder

Voice recorder can record voice of a maximum of 60 minutes. Voice recorder can be started from the tool menu, as well as Options of Data Folder or mail creation window. Voice recording is deactivated during a call.

Voice Recorder Window


Control Voice Recorder with Softkeys and navigation key.



Navigation key

Remaining recording time Elapsed time

Recording Window

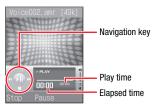

Playback Window

Recording Voice

The recorded voice is saved to Sounds & Ringtones Data Folder.

- 2 Press (Record)
- 3 Press (Stop) or continue recording until the set time runs out
- 4 As required, press (Play) to replay

To pause

Press (Pause)

To resume

Open Options and select Record

To record voice from Options (♦ P.14-12)

Pla

Playing Voice

Replay a voice file saved in Data Folder.

- Press lacktriangle (Menu) and select $Tools \rightarrow Voice\ recorder$
- 2 Open Options and select My sounds
- 3 Highlight the file and press (Play)

➡ Voice Recorder Options

Operate listed below from the Options before and after recording. The Options and selectable items vary by the conditions. For more information about the Options available after selecting the Options *My sounds*, see "Options" (P.11-8).

Item	Description
Record	Start recording.
My sounds	Call up list of sound files saved in the My sounds folder.
Send	Send contacts converted to vFile via MMS (P.19-2) or Bluetooth (P.12-5).
Set as	Set voice for ringtone, etc.
Delete	Delete a recorded voice file.
Rename	Change file name.
Lock/Unlock	Activate or cancel file protection.
Details	Confirm recorded sound file size, etc.
Record settings	Change the file name assigned automatically or the fixed recording time (P.14-13).

Changing Voice Recorder Settings

Changing Default Name

Default Setting ■ Voice

The voice recorded with Voice recorder is saved under a name such as "Voice 001." "Voice" can be changed to another word.

- Press \bullet (Menu) and select $Tools \rightarrow Voice recorder$
- Open Options and select Record settings \rightarrow Default name
- Enter a name

Tip

. If the default name is changed

The naming rule is applied from the next recording.

Changing the Fixed Recording Time

Default Setting ■5 minutes

- Press \bullet (Menu) and select $Tools \rightarrow Voice\ recorder$
- Open Options and select Record settings → Recording time
- Select a duration and press () (Save)

World Clock

World clock allows you to check the current time all over the world.

Viewing World Clock

Press \bullet (Menu) and select $Tools \rightarrow World \ clock$



Selecting Areas

Default Setting ■ Tokyo, Seoul for both areas

When you save a second time zone, easily check the time at that area looking at World clock.

-] Press lacktriangle (Menu) and select $Tools \rightarrow World \ clock$
- Use to highlight area 1 and use to change city name

To set summer time

- 1) Press (DST)
- 2 Check the area to set summer time and press (Done)
- 3 Press (Save)

Using Calculator

Arithmetic operations to a maximum of 13 digits can be performed.

-] Press lacktriangle (Menu) and select $Tools \rightarrow Calculator$
- Calculate

To enter numbers

Press keys

To enter +, -, \times or \div Press \bigcirc , \bigcirc , \bigcirc or \bigcirc

To display the calculation result

Press

To enter ., (or)

Press (.()) to toggle symbols

To move cursor left or right

Press * or ##

To erase a symbol in a mathematical expression

Place cursor after a symbol to erase and press Clear

To erase both the mathematical expression and the calculation result


Press For 1+ seconds

Converting Currencies or Units

Convert the currencies for various countries. Alternatively, convert the units of length, weight, etc.

Converting Currencies

Press (Menu) and select *Tools* → *Converter* → *Currency*

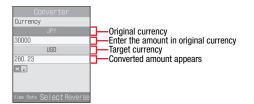

2 Select Original currency field and select the currency

To replace the original currency with the target currency

Press (Reverse)

3 Select Original currency amount field and enter the amount

To enter a decimal point

Press *:

- Select Target currency field and select the currency
- 5 View the result in the target currency

To check the exchange rate

- 1) Highlight either of Currency fields and press (View Rate)
- 2) Press Clear to return to the Original window

To change the exchange rate


- (1) Highlight either of Currency fields and press (View Rate)
- ②Select the base currency to change the rate, highlight the currency, open Options and select Edit
- 3 Enter the rate and press (Save)

To add a currency unit

- 1) Press (View Rate)
- (2) Open Options and select Add Rate
- (3) Enter the currency unit and rate and press () (Save)

Converting Units

- Press \bullet (Menu) and select $Tools \rightarrow Converter$
- 2 Select Length, Weight, Volume, Area or Temperature

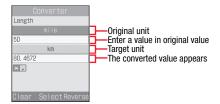

3 Select Original unit field and select the unit

To replace the original unit with the target unit

Press (...) (Reverse)

4 Highlight Original unit value field and enter the value

To enter a decimal point

Press 💌

To enter/delete "-" when converting temperature

Press ##

- 5 Select target Unit field and select the unit
- 6 View the result in Converted value field

To clear the values

Press (Clear)

Stopwatch

804SS can be used as a stopwatch for measuring a maximum of ten lap times plus the total time.

Press \bullet (Menu) and select $Tools \rightarrow Stopwatch$

Press (Start)

Press (Lap) to measure a lap time or (Stop) to stop time measurement

Dictionary

Using Dictionary

Look up English-Japanese and Japanese-English dictionaries.

Press lacktriangle (Menu) and select $Tools \rightarrow Dictionary$

Select a Text entry field and enter a word

3 Press (E→J/J→E)

Tip

· To further look up one of words displayed in transaction

(E→J).



15

Calling Functions

Auto Redial

Default Setting ■ Off

Set to automatically disconnect a voice or video call initiated to a party that is busy and redial the same party soon. Automatic redialling repeats up to 10 times until sis pressed or 804SS is closed.

- Press (\bullet) (Menu) and select Settings \rightarrow Call settings \rightarrow All calls \rightarrow Auto redial
- Select a value and press (Save)

Tip

- . When Retry with Voice is set for video call Automatic redialling settings have precedence.
- . When receiver has activated Voice Mail or Call Forwarding The call is forwarded and automatic redialling is cancelled.

International Dial

International Prefix

Default Setting ■0046010

Set the international code frequently used when initiating an international phone call. By default, 0046010 (International phone call ID code + 010) is registered.

- Press (●) (Menu) and select Settings → Call settings → Voice call → International dial → Int'l prefix
- Enter an international code

Editing Country Codes

Default Setting 1: Japan 2: KOR 3: GBR 4: ITA 5: CHE 6: ESP 7: DEU 8: PRT 9: NLD 10: FRA 11: MCO 12: USA 13: SWF 14: AUS 15: CHN 16: HKG 17: TWN 18 to 20: Unused

Add a country code or delete an unnecessary one.

- Press (\bullet) (Menu) and select $Settings \rightarrow Call \ settings$ → Voice call → International dial → Country codes
- To add, change or delete

To add or change

- 1) Highlight the item to add or change and press (Change)
- (2) Select Country name field and enter the country name
- (Save) (Save)

To delete

Highlight item to delete, press (...) (Delete) and select Yes

Handling Incoming Calls

Anykey Answer

Default Setting ■ Off

Answer voice calls using keys other than (Accept) or .

- Press \bullet (Menu) and select $Settings \rightarrow Phone$ settings \rightarrow Anykey answer
- Select On or Off and press \bigcirc (Save)

Tip

Active Folder

Default Setting ■ Off

When On, open 804SS to answer an incoming call.

- Press \bullet (Menu) and select $Settings \rightarrow Phone$ settings \rightarrow Active folder
- Select On or Off and press \bigcirc (Save)

Side Key Silence/Reject

Default Setting Silence

Use (A) or (v) to mute ringer or reject an incoming call.

- Press (\bullet) (Menu) and select $Settings \rightarrow Phone$ settings \rightarrow Side key
- Select a value and press () (Save)

Cover Keypad Lock

Default Setting ■ Off

With this function set On, the three keys on the front side of 804SS are locked. Avoid accidental key presses when 804SS is placed inside a bag, etc.

- Press \bigcirc (Menu) and select $Settings \rightarrow Phone$ settings → Cover keypad lock
- Select On or Off and press (Save)



Default Setting ■ Edge bar

In Standby, press () to access function saved to a shortcut.

- Press lacktriangle (Menu) and select $Settings \rightarrow Phone$ settings → Shortcuts
- Select an item and press (Save)

Edge Bar

Use Edge Bar to play music or view images.

Mini Player Play music using a playlist (♦ P.10-5).	
Mini Album View images saved to Picture folder (◆ P.7-13).	
Data Folder	Open five default folders in Data Folder (P.11-2).

Memory Status

- · Available shared memory
- · Status of SMS and MMS mailboxes
- · Status of memory in Data Folder
- · Status of Calendar items registered
- Status of Phonebooks (Handset and USIM Card)

Alternatively, delete saved entries and/or files.

Select an item to check

Tip

· To delete the contents

When the contents in Data Folder, Calendar or Phonebook are to be deleted

- (1) Perform Steps 1 and 2
- (2) Highlight an item, press () (Select), select *Yes* and view an entry
- (3) Check the fields to delete, press (...) (Delete) and select Yes
- . To delete all contents

After Step (3) in "To delete the contents", enter Phone Password, press

 
(Confirm) and select Yes

To check/uncheck all contents at once

After Step ③ in "To delete the contents", open *Options* and select *Mark all* or *Unmark all*.

 When the checked contents contain the contents that functions or locks are set in

After Step (3) in "To delete the contents" or the operation of "To delete all contents", the confirmation window appears. If you select Yes, the deletion is performed. If you select No, only files without functions or locks set are deleted.



Optional Services

The following optional services are available with 804SS:

Service	Description	
Call Forwarding	When you know you will be unable to answer calls to 804SS,	
	automatically divert calls to a specified number.	
Voice Mail	Divert all or all unanswered calls to Voice Mail Centre; access caller messages via 804SS from within the service	
VOICE IVIAII	area or via a touchtone phone anywhere.	
Call Waiting*	A tone sounds for incoming calls when the line is engaged.	
3	Put the line on hold to answer or alternate between lines.	
Conference Call* Open another line while one is engaged; toggle line on all simultaneously. Add new parties to an exist conference; talk on up to five lines simultaneously		
Call Barring	Restrict incoming or outgoing calls by condition.	
Caller Identification	ation Show or hide your own number when placing calls.	

^{*} This service requires a separate subscription.

Note

• When Out appears, access services from a touchtone landline. For details, contact Customer Service (P.28-19).



Call Forwarding

Set forwarding condition and number, by call type (Voice Call or Video Call), beforehand, to divert incoming calls to a specified number.

Forwarding Condition	Description	
No reply	Unanswered calls are diverted after the specified ring time, or when the line is busy or 804SS is out-of-range.	
Always	804SS does not ring/vibrate for incoming calls; calls are diverted automatically and Missed Call does not appear.	

Note

- · Call Forwarding and Voice Mail cannot be used at the same time.
- · Activating Call Forwarding cancels Voice Mail.
- Call Forwarding is not available when All outgoing calls or All incoming calls in Call Barring is active.

Activating Call Forwarding

Specify a forwarding number beforehand.

- 2 Select *No reply* or *Always* and view the current settings

When the settings are acceptable

After viewing, press to return to the previous window

3 Highlight Forwarding address field and enter a number

To select a phone number from Phonebook

- ①Open *Options*, highlight forwarding Address field and select *Phonebook*
- ②Select Phonebook, highlight a phone number and press (Select)
- For No reply, highlight Ringing time field and set a time
- 5 Press (ON)

Tip

• When Call Forwarding (No reply) is active

While 804SS rings/vibrates, answer a call or press ... (Busy) to forward it.



Cancel All

Cancel all services at once.

Press (Menu) and select Settings → Call settings

→ Voice call or Video call → Diverts → Cancel all

Tip

- To stop Call Transfer service for each forwarding condition
 - ① Press ② (Menu) and select Settings → Call Settings → Voice call or Video call → Diverts
 - (2) Select No reply or Always
 - (3) Press (···) (OFF)

Check Status

Press ● (Menu) and select Settings → Call settings
→ Voice call or Video call → Diverts → Check
status

Voice Mail

Forward an incoming voice call to Voice Mail Centre or a specified number based on preset forwarding conditions (P.16-2).

Note

- · Voice Mail and Call Forwarding cannot be active at the same time.
- Activating Voice Mail cancels Call Forwarding.
- Voice Mail is not available when All outgoing calls or All incoming calls in Call Barring is active.

Activating Voice Mail

- Press (\bullet) (Menu) and select Settings \rightarrow Call settings → Voice mail
- Select No reply or Always
- For No reply, highlight Ringing time field and set a time
- Press (ON)

Tip

. When Voice Mail (No reply) is active

While 804SS rings/vibrates, answer a call or press (...) (Busy) to forward it.

Cancelling Voice Mail

Cancel all optional services at once.

Press \bullet (Menu) and select $Settings \rightarrow Call \ settings$ \rightarrow Voice mail \rightarrow Cancel all

Tip

- To cancel Voice Mail by forwarding condition
 - Press () (Menu) and select Settings → Call settings → Voice mail
 - (2) Select No reply or Always
 - (3) Press (...) (OFF)

Checking Settings

- Press (\bullet) (Menu) and select Settings \rightarrow Call settings
 - → Voice mail → Check status

Listening to Messages

When a caller saves a message at Voice Mail Centre, in standby, a message appears.



While Message Appears

Connect to Voice Mail Centre as described below and follow voice prompts.

Press (Dial)

Tip

- · To access caller message from overseas
 - 1) Press of 1+ seconds and enter + (2) Enter 819066514170 and press
- To delete a message without listening to it Press ... (End).
- To clear

Voice Mail indicator disappears when messages are accessed via 804SS.

Call Voice Mail Centre

Enter 1416 and press



Incoming Call Notification

If there was a call that could not be answered because you were out of service area or handset was powered off, it is notified with SMS. It is also notified when a caller saves a message at Voice Mail Centre while you are talking to other party.

Incoming Call Notification

Tenter 1414 and press (Free of charge)

When setting from a general subscriber phone in Japan (Free of charge)

Dial 090-665-1414 and press

When setting in overseas (Charged)

Press of for 1+ seconds, enter +, enter 81-90-665-14191 and press

2 Perform operations following the audio prompts

Call Waiting*

* A separate subscription is required to use this service.

This service is only available for voice calls.

Activating or Cancelling

- Press \bullet (Menu) and select Settings \rightarrow Call settings → Voice call → Call waiting
- Activate or deactivate the service

To activate

Press (ON)

To deactivate

Press (OFF)

Receiving a Second Call

When there is an incoming call during a call, you are notified with a specific interrupt sound and display. Place the current call on hold and answer the second call.

- When you hear the interrupt sound, press () (Call)
- Select Hold active call

To end the current call and answer the second call Select End active call.

- Press (Swap) to toggle the calls
- To end the current call, press

To end the call on hold

Open Options and select $End \rightarrow Held\ call$

To end both calls at once

Open *Options* and select $End \rightarrow All\ calls$, or close 804SS

Tip

- When the other party ends the call and you have another call waiting Press (...) (Retrieve) to talk to the waiting party.
- . When the Call Transfer service or Voice mail service is active When the second call is not answered, it is forwarded to a forwarding destination or Voice Mail Centre. When the forwarding condition is set to Always, the Call Waiting service is not available.

Conference Call*

* A separate subscription is required to use this service.

Talk with a maximum of six parties simultaneously.

New Call

When the called party is connected, the party that has been connected is placed on hold.

During a call, open *Options*, select *New call* and enter number

To use Phonebook

- (1) Press (Search) and select Phonebook
- (2) Highlight the phone number and press (Select)

To use a log

Press , open logs and highlight the entry

Press (Call) and talk with the connected party

Engaged Conference Call Operations

- Call another party during a call (€ P.16-7)
- Press (Swap) to switch connected calls

Tip

· To end the call on hold

During a call, select $End \rightarrow Held \ call$.

· To end all calls

During a call, press 🚳.

 When the current caller ends the call while using Conference Call service

A warning alarm sounds and the call is switched to a party on hold.

Joining Conference Call

- During a call, initiate a call to another party (

 ₱ P.16-7)
- Open Options and select Join

Tip

· To call with only one person

During a call, open Options, select Split and select a caller to talk to.

• To end the call for a specific caller

During a call, open Options, select $End o Select\ participant$, check callers to end and press $\[\cdots\]$ (End).

To end the all calls
 During a call, press

• When one party ends the call during Conference Call

Continue talking with remaining parties.

Call Barring

Use this service to bar outgoing/incoming calls for voice calls or video calls under the conditions listed below.

Item		Description	
Restrict outgoing calls	All outgoing calls	Deactivates initiating calls, except emergency calls.	
	Outgoing Intl calls	Deactivates initiating international calls within your current location.	
	Intl except home	Deactivates initiating international calls within your current location or to Japan.	
Restrict incoming calls	All incoming calls	Deactivates reception of all calls.	
	Incoming when roaming	Deactivates reception of all calls while outside of Japan.	

When setting restrictions, you are required to enter Network Password (The 4-digit number dedicated to Outgoing/incoming service specified at the subscription).

Note

- If incorrect Network Password is entered three consecutive times, setting or canceling the Call Barring service is deactivated. Note that, in this case, change Network Password and Centre Access code. For more information, contact Customer Service (♠ P.28-19).
- When the Call Transfer service or Voice mail service is active, you
 cannot use All outgoing calls or All incoming calls (Call Transfer
 service or Voice mail service has precedence).

Tip

When an attempt is made to initiate a call while calls are restricted.
 A message appears indicating that outgoing call restriction is active. The message may appear after a while depending on the area where using 804SS.

9

Restrict Outgoing/Incoming Calls

Restrict outgoing calls and/or Restrict incoming calls for each type of call (Voice and video calls).

- Select *Call barring* and select a restriction type
- 3 Enter Network Password
- 4 Set or cancel call barring

To set

Press (ON)

To cancel

Press (OFF)

Tip

To check settings

Perform Steps 1 and 2. After checking the settings, press to return to the previous window.

Cancel All

Canceling outgoing and incoming call is available for each of call types (voice and video calls).

- Press (Menu) and select Settings → Call settings

 → Voice call or Video call
- **>** Select Call barring → Cancel all
- 3 Enter Network Password and press (OK)

Changing Network Password

- **Select** Call barring
- **3** Open Options and select Change password
- 4 Enter current Network Password in the current field and enter new Network Password (4 digits) in New and Confirmation fields and press ... (Confirm)

Caller ID

Show or hide your own phone number when calling from 804SS.

Show My Number

Default Setting By network

- Press (Menu) and select Settings → Call settings

 → All calls → Show my number
- Select setting and press (Save)



Adding 186 or 184

Use 186 (Show ID) or 184 (Hide ID) prefixes to show or hide your number when calling from 804SS, regardless of the Show my number setting.

Enter Show ID or Hide ID Prefix

To show Caller ID



To hide Caller ID



Enter phone number



To initiate a video call

Open Options and select Video call



.0

Before Using Vodafone live!



Vodafone live! Services

Vodafone live! provides communications services, beyond phone calls, available from Vodafone live! compatible handsets; it allows the use of mail, Web and V-applications.

Message

Use two types of messages: Multimedia Messaging Service (MMS) and Short Message Service (SMS). Exchange messages with parties in Japan or overseas (◆ P.19-2).

MMS

Use this service to send and receive long text messages, images and sounds to/from Vodafone handsets and PCs that can use e-mail.

A separate subscription is required to use MMS and receive e-mail.

SMS

Use this service to send and receive short text messages between SMS-compatible Vodafone handsets using phone numbers.

Tip

· Retry function

If the other party's handset cannot receive a message because it is turned off or out of range, your handset keeps retrying to resend the message until the other party receives it.

Using the Mail Art Function

When displaying an MMS message window, use mail art function to display text messages and/or images consecutively like slides or with a background colour (© P.19-6, 19-8, 19-10).

Web

From a handset, access to Vodafone live! and the Web to browse various sites or download images, sounds, etc. (P.23-2).

A separate subscription is required to use the Web.

Accessing from the Vodafone live! Main Menu

From the Vodafone live! main menu, select a menu items to access various contents.

Internet Accessing

Enter a URL and access pages.

V-application

Use various applications such as games and view 3D images by downloading them from the Web (� P.26-2).

Only V-applications specific to the Vodafone handset are available.

A separate subscription is required to download V-applications or use those which require network connection.

Downloading from Web

Use various V-application by downloading them from pages providing V-applications.

Network V-applications

Enjoy one on one games or acquire real-time information such as stock prices via a network.

V-applications Functions

Set a time to automatically activate V-applications. Available functions vary by the V-application downloaded.

Customising Handset Address


Change your mail address (alphanumerics before @) used for sending and receiving MMS to/from PC, etc. The default account name consists of random alphanumerics.

- Press () and select My Vodafone
- **夕** Select オリジナルメール設定・各種メール設定
- 3 Follow onscreen instructions

Receiving Messages

Checking for New Messages

When a message is received in Standby mode, reception notification appears. The number of received messages, senders and reception dates/ times appear.

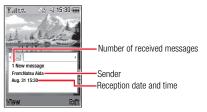

Reception Notification Window

Press (View)



Received Message List

When multiple messages appear

Use to select the tab and press (View)

Select a new received message





SMS Message Window

MMS Message Text

Tip

. When a message is received (out of Standby mode)

is or is appears on the top of Display. When 804SS is closed, an icon like is or is appears on the top of the Sub Display (♦ P.1-7, 1-8).

· Received message count

When there are unread messages, the total number of new and unread messages appears.

Sender information

A phone number or mail address appears. When the sender has been saved in Phonebook, you will see the name saved in Phonebook. When an incoming image has been saved in Phonebook or an incoming image has been set for the group, the image appears at the same time.

中 3D Pictogram (€ P.22-5)

By default, when you check an incoming or unread mail (Except MMS that is set for Slide display or with a file is attached), the message appears after a 3D pictogram. After Display of 3D pictogram ends or (Stop) is pressed, the message window appears. For executing various operations, operate them after the message window appears.

9

Retrieving Complete Messages

When *Home network* (♠ P.22-3) or *Roaming* (♠ P.22-3) is set to *Manual*, MMS messages are temporarily stored on Mail Server; part of the received message is sent to 804SS as a reception notification. Retrieve complete messages from Mail Server.

Press () and select Received message

Select a message with the rest of it



Notification Details

3 Press (Retrieve)

△ Select complete message



Message Window

Tip

Received Message List Indicators

🚴: Unread reception notification (Priority: High)

li₂: Unread reception notification (Priority: Standard)

 $\cite{Main} \ensuremath{\mathbb{R}} \ensuremath{\text{E}} : \ensuremath{\text{Read reception notification (Priority: High)}}$

🗟 : Read reception notification (Priority: Standard)

&: Read reception notification (Priority: Low)

To retrieve complete messages from message list (♥ P.21-2)

Message Window for MMS with a File Attached

The first page shows the file name for the attached file and the second and subsequent pages show the message. Use () to read the message or open Options and select Play to start a slide show.

Message Window for MMS with Slide Show Set

Open *Options* and select *Play* to play the slide. During play, press (Pause) to pause or (Stop) to stop it. Use to manually select pages.

Message Window for MMS with a File Inserted (© P.19-8, 19-10)

If an image is inserted, the image appears with the message. If sound is inserted, open Options and select Play to play sound. If the slide display is set, sound is played when the page with sound inserted appears. If a video is inserted. Open *Options*, select *Play* and press (...) (Video) to play sound. If the slide display is set, Video appears at the lower right window and pressing (Video) plays sound when the page with a video inserted appears.

Message Window with a File Requiring Purchasing/Obtaining **Content Key**

appears on a page with a file inserted that you cannot view/play. Open Options and select Download content key to view/play the file.

Using Received Messages

Send a message directly to the sender.

Press [...] (Reply) on the message window

Create a message and press ... (Send)

Tip

· Subject display of MMS for replies

The subject of a replied MMS is prefixed with "RE:" automatically.

Sending Messages

Creating Messages

Two types of messages are available on 804SS: MMS and SMS. The number of characters that can be sent and entry items are different between these types (Shown below).

		MMS	SMS
Number of characters that can be sent		Approximately 10,000 single-byte/double-byte characters ¹ Approximately 10,000 characters in one slide ² (Up to 300K bytes ³)	Maximum of 70 single- byte/double-byte, Katakana characters Maximum of 160 single- byte alphanumerics (Up to 140 bytes)
	Address	Yes	Yes
Entry	Subject	Yes	No
items	Attachment	Yes	No
	Message	Yes	Yes

Yes:Available

No: Not available


- 1. The number of characters that can be sent varies by the attachment size, etc.
- 2.Set a maximum of 20 slides in one message.
- 3. Total size of a message (Including address, subject, text and attachments).



Procedures

Mails should be created in the flow as shown below.

Items other than Destination should be entered as required.

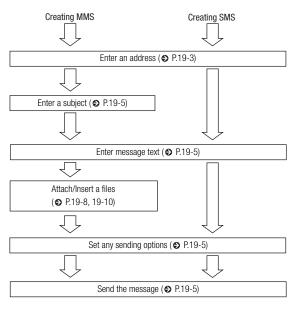

Tip

• To set sending options beforehand (\$\infty P.22-2, 22-5)

4 Automatic Change of Message Type

When message creation is started, the message type is set to SMS; it automatically changes to MMS when one of the following occurs:

- · Entering mail address as a destination
- · Entering a subject
- Entering characters exceeding the number of characters that can be sent by SMS
- · Setting slide show
- · Attaching or inserting a file


When the message is modified to allow it to be sent as SMS, for example, by deleting an attached or inserted file or a subject, the message type automatically changes to SMS.

Depending on message creation conditions, it may not automatically change type. If the mail type is not changed automatically, change it manually (� P.19-5).

Address

Enter a phone number or mail address for MMS or a phone number for SMS as a message address. Up to 20 addresses can be entered.

Press () and select Create message

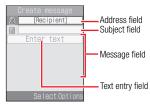

Message Creation Window

Enter an address

To enter an address from Phonebook

- 1) Select Address field and select From Phonebook
- (2) Search and select an entry
- (3) Highlight a phone number or mail address and press (...) (Select)

To enter an address directly

- 1) Select Address field and select Enter Recipient
- (2) Enter phone number or mail address

To enter an address from a Call Log record

Select Address field and select the call log

To select an address from a Category in Phonebook

- ① Select Address field and select *From Category*
- ②Select a Category, with/without Address selection window, highlight an address to enter and press (Select)

3 To enter another address

To directly enter an address

- 1)Select Address field
- (2) Select an Entry field and select Enter Recipient
- 3 Enter phone number or mail address and press (OK)

To select an address from Phonebook

- (1) Select Add recipients → Phonebook
- (2) Search and select Phonebook
- (3) Highlight a phone number or mail address and press
 (Select)

To select an address from a Phonebook Category

- ① Open Options and select Add recipients → Category
- ②Select a Category; with/without Address selection window, highlight an Address to enter and press (Select)

Tip

- To create a message using a template (€ P.19-8)
- · To confirm the entered address

In Step 3, open Options and select Recipient list

- · To add an address after confirming the entered address
 - (1) In Step 3, open Options and select View recipient list
 - (2) Select an Entry field and perform operation in the same way as Step 2
 - (3) Press (Done)

- · To send a message after confirming the entered address
 - (1) In Step 3, open Options and select View recipient list
 - (2) Open Options and select Send
- . To change the address type to To, Cc or Bcc
 - (1) In Step 3, open Options and select View recipient list
 - 2 Open Options, highlight an address and select Change recipients
 - (3) Select To, Cc or Bcc
- · To delete an address
 - (1) In Step 3, open Options and select view recipient list
 - 2 Open Options, highlight an address and select Remove
- To copy, cut or paste characters (♦ P.4-9)
- · Displaying Address field

When multiple addresses have been saved, **a** and the number of addresses appear in Address field on the message creation window.

Note

- If the free space of the shared memory (♠ P.28-10) on 804SS phone is less than 464K byte, you cannot create a message. To create a message, delete unnecessary messages.
- If the shared memory (© P.28-10) becomes low while in a message creation, you may not be able to save the message in Drafts.
- A message created on 804SS may not appear the same way on the other party's phone.

Subject

In message creation window, select Subject field

Enter a subject

Tip

- To copy, cut or paste characters (\$\infty P.4-9)
- To set or release the prediction entry function (\$\infty\$ P.4-10)

Message

In message creation window, select Message field

When slide show is set (♠ P.19-6)

Select Text entry field

Enter the message

Tip

- To copy, cut or paste characters (P.4-9)
- To use an SMS template or Phonebook entry (\$\infty\$ P.4-8)
- . To change the font size of characters being entered
 - 1 In Step 2, open Options and select Font Size
 - (2) Select Small, Standard or Large

- To set or cancel the prediction entry function (© P.4-10)
- To set a slide show (♠ P.19-6)
- To insert image files, etc. in a Message field (© P.19-8, 19-10)
- To view the text in 3D

In message creation window, highlight Message field, open *Options* and select *3D Pict. Disp.*

Sending a Message

In message creation window, press (Send)

Tip

- To set sending settings for a message being created
 - (1) In message creation window, open *Options* and select *Sending options*
 - (2) Select an item and make settings (P.22-2, 22-5)
 - 3 Press (Apply) or (Save)
- . To change the message type
 - 1 In message creation window, highlight all fields except Address field
 - (2) Open Options and select Change to MMS or Change to SMS
 - (3) Select Yes

Slide Show

Display MMS window to display as a slide show. Text messages, images. movies and sounds can be inserted on each page of the slide show. Set a maximum of 20 slide pages in one message.

In message creation window, open *Options* and select $Insert \rightarrow Text$



Message Creation Window

- Select added Text entry field and enter a message
- To add a Text entry field for the slide show, perform Steps 1 and 2
- Insert files as required (€ P.19-8, 19-10)

Tip

- · To delete a Text entry field
 - (1) In message creation window, highlight Text entry field
 - (2) Open Options and select Text → Remove
 - (3) Select Yes
- To preview a slide show before sending
 - 1 In message creation window, highlight a field other than Address field
 - (2) On the message creation window, Open Options and select Preview
 - (3) Open *Options* and press () (Play)

Changing the Style of Message Field

Set the font colour, font style, interval time for displaying a slide show. background colour, etc.

- In message creation window, highlight Message field
- Set options as required

To set background colour

- (1) Open *Options* and select *Edit style*
- ② Highlight *Select page* and use ① to display *All pages*
- (3) Highlight *Background colour* and use (5) to highlight a colour

Set the page display

- 1) Highlight a Character entry field to set
- (2) Open Options and select Edit style
- (3) Highlight Slide interval and enter a time

Set the font colour

- ① Open Options and select Edit style
- (2) Highlight Select page and use () to display All pages
- (3) Highlight *Font colour* and use (5) to highlight a colour

Set a font colour for a single slide page

- 1) Highlight a Character entry field to set
- ② Open Options and select Edit style
- (3) Highlight *Font colour* and use (5) to highlight a colour

Set font size for all pages

- 1) Open Options and select Edit style
- ② Highlight Select page and use ① to display All pages
- (3) Highlight Font Size and use () to display a size

To set font size for a single slide page

- 1) Highlight a Character entry field to set
- ② Open Options and select Edit style
- (3) Highlight *Font Size* and use (5) to display a size

To change the order of display for text and images (Videos)

- 1) Open Options and select Edit style
- (2) Highlight Select page and use () to display All pages
- (3) Highlight *Order item* and use (5) to display *Text-Top* or *Image* (*Video*)

3 Press (Save)

Tip

- · To preview the style before sending
 - $\begin{tabular}{ll} \begin{tabular}{ll} \beg$
 - 2 Open Options and select Preview
- 3 Open Options and select Play

Note

If the type of message being created is SMS, *Edit style* or *Preview* does not appear in Options.

Templates

Create and send a message using MMS or SMS template.

- Press () and select Templates → MMS templates or SMS templates
- Highlight an MMS or SMS template
- 3 Open Options and select Send

Tip

- . To use after viewing an MMS template
 - 1 Perform Steps 1 and 2
 - 2 Open Options and select View
 - (3) Open Options and select Play as required
 - 4 Open Options and select Edit and send
- To register a template (P.4-11, 20-12)

Attaching/Inserting Files

A file that can be attached or inserted to an MMS is limited in size to 294 bytes (except the message address, subject and message text size). The number of files that can be attached to one MMS is limited to 20

Tip

To check the size of a message being created
 Select MMS as the Type of the message, the message size appears in the upper-right corner of the window.

Note

 Note that some recipients may not be able to receive attached or inserted files.

Attaching/Inserting a File from Data Folder, etc. into Message Field


Attach images, video and/or sounds saved in Data Folder to a message, as well as any contents saved in Phonebook and calendar (Converted as vCard format or vCalendar format). If you insert a file in Message field, display/play the file when you view the message window.

In message creation window, open *Options* and select *Insert*

To insert a file with slide show set (© P.19-6)

- In message creation window, highlight Message field to insert a file
- 2 Open Options and select Insert

Select the file to attach or insert

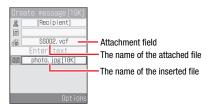

Message Creation Window (When a file is attached or inserted)

To insert an image

- Select Image
- (2) Select an image from Data Folder

To insert sound

- (1) Select Sound
- (2) Select sound from Data Folder

To insert a video

- (1) Select Video
- 2) Open Options and select a movie

To attach contents saved in Phonebook in vCard format

- 1) Select *Phonebook details*
- ②Search and select an entry (P.5-7)
- 3 Press (Add)

To attach calendar items in vCalendar format

- (1) Select Calendar item
- (2) Select the saved contents

To attach a file

- (1) Select Other Files
- (2) Open Options and select a file

Tip

. To view an attached file

On the message creation window, highlight Attachment field and press

- (Open).
- · To view an inserted file
 - (1) Open Options and select Preview
 - (2) Open Options and select Play

If you attach a file

Attachment field is added to message creation window, and an icon indicating the file type and the file name are displayed.

: Image

: Sound

: vCalendar

(品: vCard

: File other than above

· If you insert a file

In message creation window, the icon indicating the file type, and the file name and file size are displayed in Text entry field. If you inserted an image with no restrictions on its being displayed, the image will be shown in reduced size instead of the icon.

- : Images that cannot be displayed because of a content key has not been purchased or otherwise obtained
- Sound
- 9 : Video

· To replace a file

- ① On the message creation window, highlight a file in Attachment field or Text entry field
- 2 Open Options and select Replace
- 3 Select a file, an entry or a calendar item

· To delete a file

- ① Highlight a file in Attachment field or Text entry field on the message creation window
- 2 Open Options and select Remove
- (3) Select Yes

· To insert a file where another file has already been inserted

A new slide show page is added automatically and the file is inserted. In case of an image file and sound file, both can be inserted on the same page.

Creating & Inserting a File

While creating a message, create a file and insert it. The file inserted to Message field is displayed/played when Message Display is opened.

In message creation window, open *Options* and select *Create & Insert*

To insert a file while slide show is set

- ①In message creation window, highlight a Message field where a file to be inserted
- 2) Open Options and select Create & Insert

Select a creation method and insert the file

To capture a photograph

- 1) Select Take picture
- 2) Press (Take)
- 3 Press (Add)

To record video

- (1) Select Record video
- 2 Press (Record)
- (3) Press () (Save)
- (4) Open Options and select Add to message

To record sound

- (1) Select Record sound
- 2) Press (Record)

- 3 Press (Stop)
- (4) Open Options and select Add to message

Tip

· If you insert a file

It works the same way as the file inserted from Data Folder to a Message field (© P.19-10).

 When insertion operation is performed on a message already containing an inserted file

The action taken is the same as for a file inserted from Data Folder to a Message field (♠ P.19-10).

· To change or delete a file

Perform operations in the same way as for a file inserted from Data Folder to a Text entry field (P.19-10).

- Operations activated before and after capturing a still image (© P.7-4)
- Operations activated before and after recording video (P.7-10)
- Operations activated before and after recording sound (© P.14-12)

Saving Created Messages

9

Saving to Drafts

When temporarily stopping message creation to perform other operations, save the message being created to the Drafts.

In message creation window, open *Options* and select Save to Drafts

Tip

When for I is pressed on the message creation window
 When or or or is pressed after entering something or attaching or inserting a file, a message appears asking if you are finished creating the message. Select Yes to save the message you are creating to draft.

Note

 Only when any of addresses, subject or text is entered or a file is attached or inserted, Save to Drafts appears in Options.

0

Saving a Message as a Template

By saving a message with fixed contents, etc. as an MMS templates, new MMS can be easily created and sent.

- In message creation window, highlight Attachment field or Message text entry field
- **2** Open Options and select Save as template

Note

 Saved as template appears in Options only when a subject is entered or the message is longer than SMS, or when a file is inserted.



Viewing Messages

Five mailboxes are created on 804SS.

Mailbox	Message type
Received messages	Received messages.
Drafts	Message drafts saved before completion.
Unsent messages	Messages unsent because of failure or cancellation.
Sent messages	Messages already sent or waiting to be sent.
Templates	MMS or SMS saved as templates.

Tip

- . To check message memory status
 - (1) Press (...)
 - (2) Select Memory status
 - (3) Select SMS or MMS

Note

. When adding a new SMS to Drafts, Unsent messages or Sent messages cause the maximum number of allowed message to be exceeded, the oldest SMS is deleted automatically.

Message Lists

From list of *Received messages* or *Unsent messages*, view the messages.






Select Received messages or Unsent messages



Received Message List

Select a message

Tip

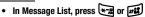


To see previous or next items

- . To view a sent message
 - 1) In Step 2, select Sent messages
 - (2) Highlight a message, open Options and select View
- . To view MMS message details

In Step 3, highlight MMS, open Options and select Details.

Message List Window

The following information appears in lists for each Messaging folder.

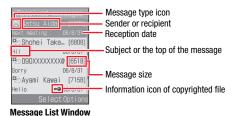

Tip

(Received Messages)

· Received Message Indicators

: Unread MMS (Priority: Standard)

💹: Unread MMS (Priority: Low)

: Unread MMS (Priority: High; Video and/or sound inserted)

: Unread MMS (Priority: Standard; Video and/or sound inserted)

: Unread MMS (Priority: Low; Video and/or sound inserted)

. Read MMS (Priority: High)

: Read MMS (Priority: Standard)

: Read MMS (Priority: Low)

: Read MMS (Priority: High: Video and/or sound inserted)

Read MMS (Priority: Standard: Video and/or sound inserted)

: Read MMS (Priority: Low; Video and/or sound inserted)

.: Unread reception notification (Priority: High)

: Unread reception notification (Priority: Standard)

🕾 : Unread reception notification (Priority: Low)

🚂: Read reception notification (Priority: High)

Read reception notification (Priority: Standard)

: Read reception notification (Priority: Low)

: Unread SMS

: Read SMS (saved in USIM Card)

💷 : Receiving MMS

· Draft Message Indicators

: MMS (Priority: Standard)

MMS (Priority: Low)

: MMS (Priority: High; Video and/or sound inserted)

: MMS (Priority: Standard; Video and/or sound inserted)

: MMS (Priority: Low; Video and/or sound inserted)

😭 : SMS

. Unsent Message Indicators

₱a: MMS

: MMS (Video and/or sound inserted)

Ea: Sending MMS

· Sent Message Indicators

™: MMS

: MMS (Video and/or sound inserted)

SMS : SMS

: SMS (saved in USIM Card)

Copyrighted file indicators

Attached/inserted copyrighted file indicators

- -: Transferable, contents key has already been purchased
- significantly : Transferable, contents key has not been purchased or otherwise obtained
- : Untransferable, contents key has already been purchased
- we: Untransferable, contents key has not been purchased or otherwise obtained

➡ Saving Destination of Received SMS

When 804SS receives SMS, it automatically saves it to USIM Card. After the maximum number of 10 SMS are saved in USIM Card, SMS starts being saved in handset. The SMS saved in USIM Card can be viewed even with another Vodafone handset. However, they may not display properly.

ø

Message Window Operations

Saving to Phonebook

Save the phone number or the mail address of the sender or recipient to Phonebook while displaying a Text entry field of a received message or detailed information window of a reception notification.

In message window, open Options and select Add to

Phonebook → Phone or USIM

Select New or Update

To save to a new entry

Select New

To save to an existing entry

- 1) Select Update
- 2) Search Phonebook and select an entry (P.5-6)
- 3 Select an icon
- 4 Save other items (⊕ P.5-3)
- 5 Press (Save)

Note

 When an underlined phone number, mail address or URL is highlighted on a message window, Add to Phonebook does not appear in Options.

Saving as an MMS Template

Save received or sent MMS as an MMS template.

In message window, open *Options* and select *Save as*MMS template

Tip

- . If a message appears indicating name duplication
 - 1 Press (OK)
 - 2 Press () (Select) and enter the name
 - 3 Press (Save)
- · When a name entry window has opened
 - 1) Press (Select) and enter the name
 - 2 Press (Save)

Note

• While displaying MMS messages sent from a PC or other devices, *Add* to MMS template does not appear in Options.

Options

Item	Description
Play	Play slide show or inserted video or sound (P.18-4).
Reply	Reply to the sender of the reception notification.
Reply to all	Send reply to all entered MMS recipients.
Forward	Forward received message.
Download content key	Purchase or acquire a Content key.
Delete	Delete displayed messages.
Save as MMS template	Add displayed MMS as an MMS template (P.20-4).
Item copy	Save files attached or inserted in an MMS to Data Folder (P.20-10).

Item	Description
Add to Phonebook	Save number or mail address to Phonebook or USIM Card Phonebook (2.20-4).
Details	Confirm MMS size, etc
3D Pict. Disp.	Display a message as a 3D pictogram (P.22-5).
Move to Phone/USIM	Move an SMS received or being sent to handset or USIM Card (� P.20-12).

Replying to a Message

- Press () and select Received messages
- 2 Highlight a message, open *Options* and select *Reply*To reply to all recipients entered in the MMS
 - Highlight a message, open Options and select Reply to all
- 3 Create a message and press (Send)

Tip

. The subject of message replies

The subject of an MMS reply is prefixed with "RE:" automatically.

Note

Forwarding a Message

Forward a received or sent message to another recipient.

Press () and select Received messages or Sent messages

2 Highlight the message, open *Options* and select *Forward*

3 Create a message and press (Send)

Tip

The subject of forwarded messages

The subject of a forwarded MMS is prefixed a

The subject of a forwarded MMS is prefixed with "FW:" automatically.

Note

 If free space of the shared memory (♠ P.28-10) on 804SS phone is less than 464K byte, you cannot forward a message. To forward the message, first delete unnecessary messages.

Sending from Drafts

Press () and select *Drafts*

 $\mathbf{2}$ Highlight the message and press $\overline{\mathbf{w}}$ (Send)

When Send does not appear

1 Press (Edit)

2) Edit the message and press ... (Send)

Sending from Unsent Messages

Send messages directly from Unsent Messages.

Press () () and select *Unsent messages*

2 Highlight the message and press (Send)

To send after modifying

① Highlight the message, open *Options* and select *Edit*

(2) Edit the message and press (...) (Send)

.0

Deleting a Message



Deleting Specified Message(s)

Delete multiple specified messages. Alternatively, specify and delete saved templates.

1 ...

Press ... ()

Select a mailbox

To delete a saved MMS or SMS templates

Select *Templates* → *MMS templates* or *SMS templates*

3 Delete a Message or Template

To delete one message or template

- (1) Highlight the message or template
- ② Select Delete → Selected → Yes

To delete multiple messages or templates

- (1)Open *Options* and select *Delete* \rightarrow *Multiple*
- (2) Check a message or template to delete
- 3 Repeat 2 to check all of the target messages or templates
- (4) Press (Delete) and proceed to (6) when all are not checked
- **5** Enter Phone Password and press **(Confirm)**
- (6) Select Yes

Tip

- To view the contents of multiple messages or MMS templates while selecting them
 - (1) Repeat Steps 1 and 2
 - (2) Open Options and select Delete → Multiple
 - 3 Highlight a message or MMS template, open Options and select View
- . To collectively select or deselect multiple messages or MMS templates
 - (1) Repeat Steps 1 and 2
 - (2) Open Options and select Delete → Multiple
 - 3 Open Options and select Mark all or Unmark all
- · To collectively select or deselect multiple SMS templates
 - (1) Perform Steps 1 and 2
 - (2) Open Options and select Delete → Multiple
 - (3) Press (...) (Mark all) or (...) (Unmark all)

Note

 While highlighting an MMS template designated as default, Delete does not appear in Options.

Designating & Deleting a Mailbox

Press $\overline{\cdots}$ ($\overline{}$) to select Settings \rightarrow Delete all

Check a mailbox to delete

3 Repeat Step 2 to check all target mailboxes

⚠ Press (Delete)

5 Enter Phone Password, and press (Confirm) to select *Yes*

Deleting All Messages from a Mailbox

Delete saved templates all at once.

Select a mailbox

To delete an MMS or SMS template

Select Templates → MMS templates or SMS templates

3 Open Options and select Delete $\rightarrow All$

4 Enter Phone Password, press (Confirm) and select Yes

Note

· You cannot delete the MMS template designated as the default.

Linked Information

When message text contains an underlined number, address or URL, save it to Phonebook or place a call, send messages, save bookmark, or access the site. 804SS recognises up to 3000 characters as linked info.

Saving in Phonebook

- In message window, select a phone number,
 mail address or URL and select Add to phonebook →
 Phone or USIM
- 2 Select to create a new or update an existing entry

 To save to a new entry

Select New

To save to existing entry

- (1)Select Add
- (2) Search Phonebook and select an entry (4) P.5-7)
- Select an icon
- Save other items (
 P.5-3)

5 Press ... (Save)

Note

• When you select a URL, you cannot select USIM in Step 1.

- Saving as a Bookmark
- In message window, select a URL and select Bookmark
- Press (Select) to enter a subject and press
 (Save)

- Initiating a Call, Sending a Message or Accessing the Web
- In message window, take procedures down below

To initiate a voice call

Select a phone number and select Voice call

To initiate a video call

Select a phone number and select Video call

To send a message

- ① Select a phone number or mail address and select *Create*message
- (2) Create a message and press (...) (Send)

To access the Web

Select URL and select Go to URL

Using an Attached File

Viewing an Attached File

Open images or play sounds attached to MMS. For vCard or vCalendar, open details to see contents.

Select a file and select Open file

Tip

. To save a file in Data Folder without review

Select a file on the message window and select Save items.

- To save vCard or vCalendar to Phonebook or Calendar directly
 Select a file on the message window and select Register to phonebook or
 Add to Calendar.
- To register a vCard or vCalendar to Phonebook or Calendar after viewing it
 - (1) Perform Step 1
 - ② Open Options and select any of Add to phonebook or Register to Calendar
- . To save a vCard or vCalendar to Data Folder after viewing it
 - 1 Perform Step 1
 - 2 Press (Save) or open *Options* and select *Add to Data Folder*
- . When a file requiring a content key is attached

If you perform Step 1, a message appears and you cannot open the file. To view the file, select *Save items* in Step 1 to save the file, and purchase or otherwise obtain the content key from Data Folder, then confirm (♠ P.11-8).

 When a file has a restriction of playing once is attached, display/play the file only once

When you perform Step 1, a messages appears notifying you that display/play the file only once.

Saving Attachments to Data Folder

Save a file attached or inserted to MMS to handset.

In message window, open *Options* and select *Save* items

Perform file selection operation

To select and save one file

- 1 Highlight a file
- ②Press (Select) or open *Options* and select *Selected*

To select and save multiple files

- 1) Open Options and select Multiple
- (2) Check the files to save
- 3 Repeat 2 to check all target files
- (4) Press (Save)

To save all files

Open Options and select All

Tip

- · To select or deselect multiple files at once
 - 1 In Step 2, open Options and select Multiple
 - (2) Press (...) (Mark all) or (...) (Unmark all)
- When a popup message appears indicating the file name is a duplicate while saving
 - 1 Press (OK)
 - 2 Press (Select) and change the file name
 - 3 Press (Save)

Note

 When a file is highlighted on a received message window, Save items does not appear in Options.

💌 From Message List

Saving to Phonebook

- Press () and select Received messages,
 Unsent messages or Sent Messages
- 2 Highlight a message, open *Options* and select *Add to Phonebook*
- 3 Select a phone number or mail address and select *Phone* or *USIM*
- ▲ Select to create a new or update an existing entry

To save to a new Phonebook

Select New

To save to an existing Phonebook

- 1)Select Update
- (2) Search for and select an entry (4) P.5-7).
- 5 Select an icon

- 6 Enter additional items as required (© P.5-3)
- 7 Press ... (Save)

Sorting Messages

Available sorting types vary by the message list of the mailbox to display.

- In message list, open Options and select Sort by
- Select an item

To sort in descending order of date

Select Date

To sort by sender

Select Sender

To sort by recipient

Select Recipient

To display read and unread messages separately

Select Unread to read or Read to unread

To display messages separately by message type

Select Message type

To sort by subject

Select Subject

To sort in descending order of message size

Select Size

Tip

• Listing order when selecting Sender or Recipient

They are listed in the order of symbol \rightarrow number \rightarrow alphabetic.

Listing order when selecting Message type
Listed in the order of SMS → MMS /Including message notification.

Listed in the order of SMS \rightarrow MMS (Including message notification) \rightarrow SMS saved in USIM Card.

• Order when selecting Subject

Displayed in the order of No subject \rightarrow single-byte symbol \rightarrow single-byte number \rightarrow single-byte alphabetic \rightarrow single-byte Katakana \rightarrow double-byte Katakana \rightarrow Hiragana/Kanji \rightarrow double-byte number \rightarrow double-byte symbol \rightarrow double-byte alphabetic.

Move to Phone/Move to USIM

Move received SMS or sent SMS.

Save up to ten SMS messages to USIM Card.

- Press () and select Received messages or Unsent messages
- 2 Move messages

To move from USIM Card to 804SS

- 1) Highlight an SMS saved on USIM Card
- 2) Open Options and select Move to phone

To move from 804SS to USIM Card

- 1) Highlight an SMS saved in USIM Card
- 2) Open Options and select Move to USIM

Tip

• Message List SMS Indicators

: Unread SMS

: Read SMS

 ${\color{red} \blacksquare}$: Unread SMS (USIM Card)

: Read SMS (USIM Card)

: Sent SMS

3 : Sent SMS (USIM Card)

Saving an MMS Template

For more information about saving an SMS template, see "SMS Templates" (© P.4-11).

- Press () and select Templates → MMS templates
- Open Options and select Add new
- 3 Select Subject field or Text entry field and enter a subject or message
- 4 Press (Save)

Tip

• To view an MMS template being created

In Step 3, open Options and select View

· To display and view an MMS template

In Step 2, highlight an MMS template, open Options and select View

- . To modify an MMS template
 - ① In Step 2, select a registered MMS template and perform modification operation
 - (2) Press (Save)
- . To delete an MMS template

Perform the same operation as for a message (P.20-7).

- To copy, cut or paste characters (P.4-9)
- To use contents of an SMS template or Phonebook (© P.4-8)
- . To change the font size of characters being entered
 - (1) In Step 3, select Text entry field, open Options and select Font Size
 - (2) Select any of Small, Standard or Large
- To set or cancel the prediction entry function (\$\infty\$ P.4-10)
- · Setting slide show or inserting a file
 - (1) In Step 3, open Options and select Insert or Create & Insert
 - (2) Perform setting, attaching or inserting operation (4) P.19-6, 19-8, 19-10)
- . To view the 3D pictogram display

In Step 3, highlight Text entry field, open Options and select Text o 3D Pict. Disp.



Options

	B 2 . P
Item	Description
Retrieve	Retrieve complete MMS from the Server.
Reply	Reply to the sender (P.20-5).
Reply to all	Send reply to all entered MMS recipients (P.20-5).
Forward	Forward received message (P.20-6).
Server Mail Box	Retrieve Mail List, etc. (P.21-2).
View	Open sent messages or MMS templates (◆ P.20-3, 20-13).
Edit	Edit unsent message (P.20-6).
Delete	Delete messages or templates (P.20-7, 20-8).
Move to phone/Move to USIM	Move SMS between 804SS and USIM Card (◆ P.20-12).
Sort by	Sort messages (◆ P.20-11).
Add to Phonebook	Save number or mail address to Phonebook or USIM Card Phonebook (P.20-11).
Details	Confirm MMS size, etc
Cancel retrieving	Stop message retrieval from Mail Server.
Send	Send message using MMS template or SMS template (♠ P.19-8).
Add new	Save a new MMS template or SMS template (� P.4-11, 20-12).

Server Mail

Message List

View messages stored on the Mail Server in a list form. Retrieve, forward or delete messages.

Retrieve Mail List

- Press () and select Received messages
- 2 Open Options and select Server Mail Box
- 3 Select Acquire Mail List

Tip

- . To check Mail Server usage state
 - 1 Select Server Mail Size in Step 3
 - 2 Press () (Update) and select *Yes* to update to the latest information

Download from Mail List

- Press () and select Received messages
- **Open** Options and select Server Mail Box
- 3 Select Mail List

4 Highlight the message, open *Options* and select *Download*

Tip

• To receive all messages from the message list In Step 3. select *Retrieve Mail List*.

Delete from Mail List

- Press () and select Received messages
- **Open** Options and select Server Mail Box
- 3 Select Mail List
- Delete unwanted messages

To delete one message

- 1 Highlight a message
- ② Open *Options* and select *Delete* \rightarrow *Selected* \rightarrow *Yes*

Deleting Multiple Messages

- (1) Open *Options* and select *Delete* → *Multiple*
- (2) Check a message to delete
- (3) Repeat (2) to check all messages to delete
- 4) Press (Delete) and go to (6) if unmarking all
- (Confirm)
- 6 Select Yes

To delete all messages

- ① Open Options and select Delete → All
- 2) Enter Phone Password, press (Confirm) and select Yes

Tip

- . To select or deselect multiple messages at once
 - 1 Perform Step 1 to 3
 - (2) Open Options and select Delete → Multiple
 - 3 Open Options and select Mark all or Unmark all

Remote Forward

Forward a message from the Mail Server to another address. Contents except the address are sent without modification.

- Press () and select Received messages
- 2 Open Options and select Server Mail Box
- 3 Select Mail List
- 4 Highlight a message, open *Options* and select *Remote Forward*

5 Enter an address

To directly enter an address

- 1) Select Entry field and select Enter Recipient
- ②Enter a phone number or mail address

To enter an address using a log

Select Entry field and select a displayed log entry

To select an address from Phonebook

- 1 Select Entry field and select From Phonebook
- ② Search and select an entry (◆ P.5-7)
- (3) Highlight a phone number or mail address and press(Select)

To select an address from a Category of Phonebook

- 1) Select Entry field and select From Category
- ②Select a Category, with/without an Address selection window, highlight an address and press (Select)
- Open Options and select Send

Tip

· Message subject

The subject of a forwarded message is prefixed with "FW:" automatically.

· To set other sending options for a message being created

- (1) In Step 6, open Options and select Sending options
- (2) Select an item and set it (4) P.22-2)
- 3 Press (Save)

· To delete an address

In Step 6, highlight a recipient, open *Options* and select *Remove*.

. To change the address type to To, Cc or Bcc

- ① In Step 6, highlight a recipient, open *Options* and select *Change recipients*
- (2) Select any of To, Cc or Bcc



22

Other Message Settings

MMS Settings



Sending Settings

Default Setting

■ Priority: Normal ■ Expiration: Maximum

■ Delivery : Immediately

Request delivery report : Unchecked

Set options related to sending MMS. Alternatively, set sending options separately for each MMS to send (P.19-5).

Press $\overline{\cdots}$ ($\overline{}$) and select $Settings \rightarrow MMS \rightarrow$ Sending options

Select an item and set

Message priority

(1) Select Priority

②Select a level and press (OK)

Retention period on the Mail Server

(1) Select Expiration

(2) Select an item and enter a time if you selected Custom time (Hour)

(3) Press ((OK)

Hold on the server for a delivery time

1) Select *Delivery*

②Select an item and press (OK)

Delivery report request

Check Request delivery report

Press (Save)

Tip

When the retention set in Expiration expires

The MMS is deleted automatically from the Mail Server.

. When retention is set in Delivery When the specified time has elapsed, the MMS is sent from the Mail Server.

• When Request delivery report is checked

When an MMS is sent from the Mail Server, a distribution report is sent to your handset.



Receiving Settings

Default Setting Home network : Manual

Roaming network: Manual

Set options related to receiving MMS.

Press \bigcirc (\bigcirc) and select $Settings \rightarrow MMS \rightarrow$ Receiving options

Select an item and set

To set the receiving method to use in Japan

- 1) Select Home network
- (2) Select an item and press (OK)

To set the receiving method while overseas

- (1) Select *Roaming network*
- ②Select an item and press (OK)
- Press (...) (Save)

Tip

• The contents of Home network and Roaming network are:

Auto download: Receive automatically Manual: Receive only reception notification



MMS Connection Settings

Default Setting ■ VFJP MMS

If you receive a notice from Vodafone that the Message Service Centre from address has changed, change the destination profile. Enter each item of the profile as directed in the change notice.

Usually, you do not need to change the connection setting of the Message Service Centre.

- Press \bigcirc (\bigcirc) and select $Settings \rightarrow MMS \rightarrow$ MMS profiles
- Open Options and select New

To change the profile already registered

Highlight the profile, open Options and select Edit

- Select an item (© P.12-9) and perform set options
- Press (Save)
- Select a profile and press (Save)

22

- · To delete a newly added profile
 - $\textcircled{1} \ \ \text{In Step 5, highlight a profile, open } \textit{Options} \ \ \text{and select } \textit{Delete}$
 - 2 Select Yes
- . To reset a profile to defaults
 - (1) In Step 5, open Options and select Restore
 - (2) Enter Phone Password, press (Confirm) and select Yes

Note

• You cannot change or delete the profiles registered by default.

Profile Management

Alternatively, perform registering/resetting operation of connection profile from Settings, Mail menu or Vodafone live! menu (◆ P.10-11, 12-9, 23-3).

Message Size

Default Setting ■300KB

Deactivate sending messages exceeding the specified size.

- Press $\overline{\cdots}$ ($\overline{}$) and select $Settings \rightarrow MMS \rightarrow Message size$
- 2 Select an item and press (Save)

Default Style

Default Setting Font colour: Black Font style: Large

Background colour: White Slide interval: (3 seconds)

Set font colour, font style, background colour and slide show time intervals.

Alternatively, change display settings for each MMS sent (\$\infty\$ P.19-6).

Press () and select Settings → MMS → Default style

2 Set options

Font colour

- 1) Select Font colour
- ②Use 🕥 to highlight a colour and press 🔘 (OK)

To set a font size

- 1) Select Font Size
- 2) Select an item and press (OK)

Background colour

- 1)Select Background colour
- ②Use 🔾 to highlight a colour and press 💽 (OK)

Slide show time intervals

- (1) Select Slide interval
- (2) Select an item, with Custom time, enter a time
- ③Press (OK)

3 Press (Save)

SMS Settings

Default Setting ■ Delivery report : Unchecked ■ Character support : Automatic

Set options related to sending SMS. Alternatively, set options for each SMS to send (◆ P.19-5).

Press $\overline{\cdots}$ ($\overline{}$) and select $Settings \rightarrow SMS$

2 Set options

Request a delivery report

Check Delivery report

Change the character set of fonts used in the text

1) Select Character support

3 Press (Save)

Tip

· When Delivery report is checked

When an SMS is sent from the Mail Server, a distribution report is sent to your handset.

3D Pictogram Settings

Default Setting Display type: New mails only Background: Pattern 1
Running Speed: Normal

3D Pictogram is a function that allows you to display 3D animation for words, pictographs or emoticons in message.

Activate or deactivate 3D pictogram or set the background colour and display rate.

Press () and select $Settings \rightarrow 3D \ pictogram$

2 Set options

Whether to use 3D pictogram

1) Select *Display type*

2 Select an item and press (Save)

Background pattern and font colours

1) Select Background

2 Press , display the pattern and press (Save)

To set a display speed

(1) Select Running speed

② Select an item and press ③ (Save)

Tip

• The contents of Display type are:

Always: Use the 3D pictogram display when viewing every message

New mails only: Use the 3D pictogram display only when viewing an unread message received

OFF: Not use the 3D pictogram display

Note

 Some MMS messages, such as those with a file attached or a slide show, may not be displayed with the 3D pictogram.



Getting Started

SSL/TLS

Secure Sockets Layer (SSL) and Transport Layer Security (TLS) are encryption protocols for secure Internet transmissions of important/sensitive information (credit card numbers, etc.) and authentication. Confirm electronic certificates saved on 804SS (P.24-10, 25-4).

SSL/TLS Precautions

When a security notice appears, subscribers must decide for themselves whether or not to open the page. Opening secure pages constitutes agreement to the terms of usage. Vodafone, VeriSign Japan K.K., Betrusted Japan Co., Ltd. and Entrust Japan Co., Ltd. are not liable for damages associated with SSL/TLS use.

Cache

Retrieved Mobile Internet pages are temporarily saved here. Cache remains even after a session ends or 804SS is turned off. When full, oldest pages are automatically deleted to make room for new ones. When a saved page is opened again, it may open from Cache. For the latest version, reload the page (§ P.24-10).

Tip

- To manually delete Cache contents (♠ P.25-4)
- When another USIM Card is inserted into 804SS
 Cache contents are automatically deleted.
- When a page with an expiry date is saved
 Page is automatically deleted upon expiry.

Getting Online

Vodafone live! Main Menu

Access Mobile Internet sites via Vodafone live! main menu

Press \cdots (🔾)

Alternatively, press ... () for 1+ seconds

Vodafone live! menu appears. Select *Vodafone live!* to open Vodafone live! main menu.

- Select an item
- Enter URL
- Press (Menu) and select $Voda fone \ live! \rightarrow Enter \ URL$
- Select URL field and enter a URL
- 3 Press (Go to)

Tip

- . To save the entered URL as a bookmark
 - (1) In Step 2, check Add bookmark
 - (2) Select Title field and enter title
 - 3 Press (Go to)
- To access a page from the access history (© P.24-9)

Connection Setting

Default Setting ■VFJP Web

If you receive a change notice reading the Web connection, change connection destination address. For more information about profile settings, see "Connections" (♠ P.12-9).

Usually, you do not need to change the Web connection address.

- Press (Menu) and select Vodafone live! →
 Browser settings → Connections
- 2 Select a profile and press (Save)

Tip

· Profile settings

Change the name and settings, delete a profile or restore the profile to defaults.

Profile Management

Alternatively, save or reset from Settings or Mail menu (P.10-11, 12-9, 22-3).

Page Window Operations

Operations on pages are as follows.

Scrolling

Scroll bar appears when page content extends beyond current view.



O/O: Scroll down by one line

When a horizontal scroll bar appears, use to scroll right.

C)/C): Scroll up by one line


When a horizontal scroll bar appears, use O to scroll left.

Side Key v: Scroll page down by multiple lines

Side Key (A): Scroll page up by multiple lines

Moving Cursor

When selecting an item such as link, move cursor to that item.

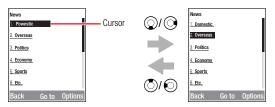

(2)/ (3): When items are listed vertically, move cursor down

When the page is already scrolled to the bottom, alternatively press Side $\text{Key} \left(\overline{\mathbf{r}} \right)$ to move cursor down.

(5)/(5): When items are listed vertically, move cursor up

When the page is already scrolled to the top, alternatively press Side Key $\widehat{\ }$ to move cursor up.

Tip


When items are listed in the same row

Press to move cursor right or left.

When you move cursor

The selected item is highlighted or enclosed in a frame of dotted lines if it is link to another page.

Previous or Next Page

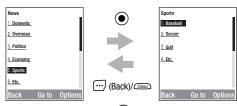

Highlight link, etc. and press : Display the next page

If you return to a previous page, alternatively open *Options* and select $Go \rightarrow Forward$ to go to the next window again.

(Back) or Clear: Display the previous page

Alternatively, open Options and select $Go \rightarrow Backward$ to change the window

Tip

If — (Back)/ is pressed with no previous page displayed
 A message appears asking whether to terminate the Web connection; select Yes to terminate the Web connection.

Text Entry/Item Selection

An information window may show fields and items given below.



1 Text entry field

Enter data, certification passwords, etc.. Highlight Text entry field, press

and enter text.

Radio button

Select only one of the selection items. Highlight an item with \bigcirc and press \bigcirc to select it (Appearing as \bigcirc).

Menu field

Display a menu and select an item. Highlight a menu, press
to display the menu. Use to highlight the item and press to select the item.

4 Check box

Select any number of selection items. Highlight an item with \square and press \bigcirc to select it (Appearing as \square). To deselect a selected item, highlight \square and press \bigcirc .

6 Command button

Perform operations assigned to a button such as *send* or *reset*. Highlight a command button and press to execute the operation.

Note

• The appearance of text entry or item selection varies by page opened.

Using Linked Info

Use phone numbers, mail addresses and URLs contained on an page to initiate calls, create and send messages, and access other pages.

Available phone numbers. mail addresses and URLs are underlined.

Using Page Links

- Open a page containing linked info
- Use the available links

To initiate a voice call

Select a phone number and select Voice Call

To initiate a video call

Select a phone number and select Video Call

To create and send messages

Select a phone number or an mail address and select Create message

②Create messages and press (Send)

To access another page

Select a URL

Saving to Phonebook

- Open a page with linked number or address
- 2 Select number or address and select Save Number or Save Address → Phone or USIM
- 3 Create a new entry or update an existing entry

To save to new entry

Select New

To add to an existing entry

- 1) Select Update
- (2) Search for an existing entry to modify (P.5-7)
- ▲ Select an icon
- Save the item (© P.5-3)
- 6 Press (Save)

Mobile Internet Files

Using Image Files



Saving Images to Data Folder

Saving Linked Images

Download and save images from page links.

- Open a page containing an image link
- Select link
- 3 Select Yes

Details appear

Press (OK)

▲ Select Exit

To open the image

Select Launch

Saving Page Images

Save a page image to Data Folder.

Open a page with an image

2 Open Options and select Save \rightarrow Save image

- 3 Highlight the image and press (Save)
- ▲ Select Exit

To open the image

Select Launch

5 Press 📼 to end the operation

To save another image

Repeat Step 3

Tip

- · If the same file name exists
 - 1 Press (Edit) and change the file name
 - 2 Press (Save)
- · Viewing images

Press (Set as) to set Wallpaper, etc. (P.24-3).

Press (Zoom) to enlarge or reduce the image. Press (Details) to view image details.

. When SVG-T/SWF format file is saved

Options appears on the save image confirmation display, then open *Options* and execute various operations (**②** P.11-5).



Wallpaper

Set a saved image as Wallpaper.

Open image to set as Wallpaper (♦ P.24-2)

Press (Set as)

3 Select an item

To set as Wallpaper

1) Select Wallpaper

2) Press (Set as)

To set as Sub Display Wallpaper

(1)Select Sub LCD

(2) Press (Zoom out) or (Zoom in) to adjust size as required

③Use ② to set trimming line and press ② (Crop)

4 Press (Set)

To set as an incoming image of an entry

1)Select Caller ID

(2) Search Phonebook and select an entry

(Set)

Note

For SVG-T/SWF format file, *Settings* does not appear. For Wallpaper, open Data Folder and open an image (© P.11-5).

Using Sound Files

Playing Sound

Play sounds from page links.

Open a page containing link

Select link to sound

Saving Sound Files to Data Folder

Download sound files from page links and save them to Data Folder.

Open a page containing a sound link

Select link

3 Select Yes

Details appear

Press (OK)

▲ Select Exit

To play sound

Select Launch

Saving Sound Being Played

Save sound played in the background while viewing a page.

Open a page with sound

ightharpoonup Open Options and select Save ightharpoonup Save sound

3 Select Exit

To play sound

Select Launch

Tip

- . If same file name exists
 - 1) Press (Edit) and change the file name
 - 2 Press (Save)
- To set saved sound as a ringtone (♦ P.11-7)
- Playing Sounds

Refer to Media Player (P.10-2).

4 Options

The items listed vary by the window status.

Item	Description
Stop	Stop playing.
View bookmark	Access a page containing a streaming play link saved as a bookmark.
View history	Access a page containing a streaming play link already accessed.
Details	Confirm sound size, etc
Player settings	Change settings related to Media Player (P.10-7).

Using Video Files

Playing a Video

Play video from a page link.

- Open a page containing a video link
- Select link



Saving Videos to Data Folder

Download and save videos from page links.

Open a page containing a video link

Select link

3 Select Yes

Details appear

Press (OK)

▲ Select Exit

To play video

Press Launch

Tip

- . If same file name exists
 - 1 Press (Edit) and change the file name
 - 2 Press (Save)
- To play video

Refer to Media Player (P.10-9).

4 Options

The items listed vary by the window status.

Item	Description
Resolution	Confirm video size, etc.
View bookmark	Access a page containing a streaming play link saved as a bookmark.
View history	Access a page containing a streaming play link already accessed.
Details	Set video display size while playing back or paused.
Player settings	Change settings related to Media Player (◆ P.10-10).

Streaming

Enjoy audio visual media while it downloads. Access compatible files via page links, etc. Downloaded content cannot be saved.

- Open a page containing a streaming video link
- Select link

Tip

· Streaming window

Operate in the same as *Media Player* (P.10-2, P.10-9).

24

Even when use of streaming is temporarily stopped, communications continue, so packet communication fees continue.

Options

Note

The items listed vary by the window status.

Item	Description
Resolution	Set video display size while playing or paused.
Add bookmark	Save a bookmark for the current page.
View bookmark	Access a page containing a streaming play link saved as a bookmark.
View history	Access a page containing a streaming play link already accessed.
Streaming settings	Change settings related to a streaming connection or create a new streaming connection (P.10-10).

Saving Pages

Saving a Page

Save a displayed page and open it at any time without accessing the Web. Up to 50 pages can be saved.

- Open a page
- **?** Open Options and select $Save \rightarrow Save \ web \ page$

Opening a Saved Page

- 2 Select a page

Tip

When (Back)/ is pressed on a page opened from Saved pages
 A message appears asking whether to terminate the Web connection; select Yes to return to the main menu.

Change Title

- Press (Menu) and select Vodafone live! → Saved pages
- 2 Highlight a page, open *Options* and select *Change* title
- 3 Press (Edit) and change the name
- 4 Press (Save)

9

Deleting a Saved Page

- Delete as required

To delete one page

- 1 Highlight a page
- ② Open Options, select Delete → Selected and select Yes

To delete multiple pages

- ① Open *Options* and select *Delete* → *Multiple*
- (2) Check a page to delete
- 3 Repeat Step 2 to check all target pages
- 4) Press (Delete) and select Yes

To delete all pages

- ① Open *Options* and select *Delete* → *All*
- (2) Enter Phone Password, press (OK) and select Yes

Tip

- · To select or deselect multiple pages at once
 - \bigcirc In Step 2, open *Options* and select *Delete* \rightarrow *Multiple*
 - (2) Open Options and select Selected/All

Saving Bookmarks



Saving an Address as a Bookmark

By saving the Web addresses (URLs) of frequently used pages as bookmarks, access those pages. Up to 30 URLs can be saved as bookmarks.

- Open a page
- **?** Open *Options* and select *Bookmark* \rightarrow *Add*
- 3 Check the title and URL

To change the title/URL

- 1) Select Title or URL field
- 2 Change a title or URL
- ⚠ Press (Save)

Tip

- · To manually enter and save a bookmark
 - Press (Menu) and select Vodafone live! → Bookmarks
 - (2) Open Options and select Add
 - (3) Select Subject field and enter a subject
 - (4) Select URL field and enter a URL
 - (5) Press (...) (Save)

Opening a Bookmark

- Press (Menu) and select Vodafone live! →
 Bookmarks
- Select a bookmark

Tip

- . To send a bookmark URL in a message
 - ① In Step 2, highlight a bookmark, open *Options* and select *Send URL* ② Create a message and press ... (Send)
- When : (Back)/ is pressed on a page opened from a bookmark
 A message appears asking whether to terminate the Web connection; select Yes
 to return to the main menu.

Editing Bookmarks

Modify the title or URL of bookmark.

- Press (Menu) and select Vodafone live! →
 Bookmarks
- 2 Highlight a bookmark, open Options and select Edit
- 3 Select Title field or URL field, and modify the title or URL
- 4 Press (Save)
- Deleting a Bookmark
 - Press (Menu) and select Vodafone live! →
 Bookmarks
 - Delete as required

To delete one bookmark

- 1) Highlight a bookmark
- 2) Open Options, select Delete → Selected and select Yes

To delete multiple bookmarks

- (1) Open *Options* and select *Delete* → *Multiple*
- 2) Check a bookmark to delete
- (3) Repeat (2) to check all target bookmarks
- 4 Press (Delete) and select Yes

To delete all bookmarks

- (1) Open *Options* and select *Delete* \rightarrow *All*
- (2) Enter Phone Password, press (OK) and select Yes

Tip

- . To select or deselect multiple bookmarks at once
 - (1) In Step 2, open Options and select Delete → Multiple
 - (2) Open Options and select Selected/All

History

The history records up to 30 URLs of accessed pages. Using the history, access pages previously accessed.

Press (Menu) and select Vodafone live! →
History

Use the history

To access a page from the history URL Select URL

To delete a history URL

- (1) Highlight the URL
- ② Open Options, select Delete → Selected and select Yes

To delete multiple histories

- ① Open *Options* and select *Delete* \rightarrow *Multiple*
- 2 Check a history to delete
- 3 Repeat 2 to check all target histories
- 4) Press (Delete) and select Yes

To delete all histories

- (1) Open Options and select Delete → All
- (2) Enter Phone Password, press (OK) and select Yes

Tip

- To select or deselect multiple histories collectively
 - 1 In Step 2, open *Options* and select *Delete* \rightarrow *Multiple*
 - 2 Open Options and select Selected/All
- When (Back)/ is pressed on a page opened from an access log
 A message appears asking whether to terminate the Web connection; select Yes
 to return to the main menu.

Display Settings

Rendering

Default Setting ■Standard

Set pages to match Display size or show only text.

- Open a page
- 2 Open Options and select Rendering
- 3 Select an item

To display a page without changing its layout

Select Wide

To display a page to fit Display

Select Standard

To display only page text

Select Simple

Reload

Open a page

Open Options and select Reload

Page Details

View current page information including URL and page title.

- Open a page
- Open Options and select Browser setting → Page details

Send URL

Attach the URL of the current page to a message and send it.

- Open a page
- **Open** Options and select Send URL
- 3 Create a message and press ... (Send)

Server Certificate

View server certificates of a page using a SSL/TLS connection.

- Open a secure page
- Open Options and select Browser setting →
 Certificates
- **3** Select Server certification and select a certificate

Tip

When you open a page that uses SSL/TLS
 appears on the top of Display.

Returning to Default Page

Return to the Vodafone live! main menu.

Open a page

2 From any page, open *Options* and select *Vodafone live!*

Encoding

Default Setting ■Auto

If page text appears garbled, change character encoding.

- Open a page
- 2 Open Options and select Browser setting → Encoding
- 3 Select an option and press (Save)



Options

Item	Description
Go	Move to the previous/next information window (P.23-5).
Bookmark	Add or open bookmarks (P.24-7).
Saved pages	Open previously saved pages (P.24-6).
Reload	Reload the information for a page (P.24-10).
Enter URL	Enter a URL to open another site/page (P.23-3).
Rendering	Change the displaying method for pages (P.24-11).
Save	Save images and sounds to Data Folder or save pages to Saved pages (P.24-2, 24-3, 24-5).
Send URL	Send URLs of a page in a message (P.24-10).
History	Access a page you have already visited (P.24-9).
Vodafone live!	Return to the Vodafone live! main menu (P.24-11).

	Item	Description		
Bro	wser setting	Make detailed settings for Web Browser.		
	Empty cache	Delete all information from the cache.		
	Empty cookies	Delete all cookies (tokens left by various Web sites on your handset).		
	Cookie options	Activate or deactivate cookies.		
	Preferences	Make settings for JavaScript or set image or sound acquisition or font size.		
	Certificates	View the certificate (◆ P.24-10, 25-4).		
	Page details	View the detailed information about a page (P.24-10).		
	Manufacture No.	Set whether to notify a Web site of your handset's serial number.		
	Encoding	Change the character codes set for the page currently displayed (◆ P.24-11).		
	About browser	View detailed information about the browser.		

Other Web Settings

Preferences

Default Setting Display images : Checked Play sound : Checked

Set 804SS to deactivate embedded images/sounds when opening pages. Pages download more quickly without image and sound data.

- Press (Menu) and select Vodafone live! →
 Browser settings → Preferences
- 2 Select an item to make changes

To deactivate images

Uncheck Display images

To deactivate sounds

Uncheck Play sound

3 Press (Save)

Security

Cookie Options

Default Setting Accept all

Activate or deactivate Cookies that allow information providers to automatically record information identifying handset user. User information, access date and other information are saved in Cookies.

- Press (Menu) and select Vodafone live! → Browser settings → Cookie options
- 2 Select an item and press (Save)

Tip

· Cookie Options

Accept all: Always accept Cookies.

Reject all: Always reject Cookies.

Prompt: Confirm Cookies each time they appear.

Activating/Deactivating JavaScript

Default Setting Unchecked

Press (\bullet) (Menu) and select *Vodafone live!* \rightarrow Browser settings → Preferences

Check or uncheck JavaScript

Press (Save)

Text Size

Default Setting ■ Normal

Change the size of the page fonts.

Press (●) (Menu) and select *Vodafone live!* → Browser settings → Preferences

Select the item of Text size

Press (Save)

Manufacture Number

Default Setting Off

Set 804SS to automatically send handset serial number to Websites upon request for user identification.

Press (●) (Menu) and select *Vodafone live!* → Browser settings → Manufacture No.

Select On and press \bigcirc (Save) Select *Off* and press (Save) to cancel

Browser Information

Press (●) (Menu) and select *Vodafone live!* → Browser settings \rightarrow About browser



View electronic certificate saved on 804SS.

- Open a page using SSL/TLS
- 2 Open Options and select Browser setting →
 Certificates
- 3 Select Root Cert. to view the certificate

Refresh Browser

Empty Cache/Empty Cookies

Delete information saved in Cache and Cookies.

- Press (Menu) and select *Vodafone live!* → *Browser settings*
- Delete as required

To delete Cache contents

Select Empty cache and select Yes

To delete Cookies

Select Empty cookies and select Yes

V-applications

Getting Started

Using V-applications

Download 804SS-compatible V-applications including games, 3D images and information via Mobile Internet sites.

- Use only compatible V-applications.
- · Communication fees apply to downloads.

Network V-applications

Some V-applications require network connection. Enjoy network gaming or access real-time information. Connection fees apply.

Downloading V-applications

- Press (Menu) and select *V-appli*
- 2 Select Download V-appli
- 3 Select a V-application to download
- ▲ Select Yes

V-application details appear

Press (OK)

5 Select Exit

To activate the V-application

Select Launch

Starting V-applications

- Press (Menu) and select *V-appli*
- Select a V-application and press (Start)

Tip

• When a V-application is active

In Standby, @ (Colour) appears.

Exit, Pause & Resume

Exiting or Pausing a V-application

Press while a V-application is being executed

Choose to exit/pause

To exit the V-application

Press (...) (Exit)

To pause the V-application

Press (Pause)

Tip

When V-application is paused

804SS returns to Standby and (black & white) appears.

 When 804SS is closed while a V-application is active V-application is paused.

Restarting a Paused V-application

In Standby, press (Menu) and select *V-appli*

Press (Resume)

Managing V-applications

Viewing V-application Properties

Open Details to confirm V-application properties.

Press lacktriangle (Menu) and select V-appli

2 Highlight a V-application, open *Options* and select *Details*

Tip

V-application Properties

Open Details to see properties:

Name, Description, Profiles, Certification, Size, Record Size, Version, and Vendor

Press () (Menu) and select *V-appli*

Highlight a V-application, open Options and select Lock

Tip

 Locked V-application Indicator In V-application list, \triangle appears.

To cancel lock

In Step 2, highlight locked V-application, open Options and select Unlock.

Delete

Press (Menu) and select *V-appli*

Delete a V-application

To delete one V-application

Open Options and select Delete \rightarrow Selected \rightarrow Yes

To delete multiple V-applications

- (1) Open *Options* and select *Delete* → *Multiple*
- (2) Check a V-application to delete
- (3) Repeat Step (2) to check all target V-applications
- (4) Press (...) (Delete) and select Yes

To delete all V-applications

- (1) Open Options and select Delete → All
- (2) Enter Phone Password, press (Confirm) and select Yes
- (3) Select Yes to delete all V-applications or No to exclude locked ones

Tip

. When all V-applications are checked

In Step 2, execute (1) to (3) in "To delete multiple V-applications", press (...) (Delete) in (4) and proceed the following procedures.

- 1 Enter Phone Password, press (Confirm) and select Yes
- (2) Select Yes to delete all V-applications or No to exclude locked ones
- To select/deselect all V-applications at once
 - (1) In Step 2, open Options and select Delete → Multiple
 - (2) Open Options and select Mark all or Unmark all

26

V-application Settings

Security



■ Net Access · Per session

Application Autoinvocation : Per session

Local connectivity : Per session

Set whether to allow V-applications to automatically use communication functions. Alternatively, set to display a confirmation message when activating V-applications or using communications.

- Press (●) (Menu) and select *V-appli*
- Highlight a V-application, open *Options* and select **Permissions**
- Select items to set

Web accessing functions

- (1)Select Net Access
- (2) Select an item and press () (Save)

Automatic starting functions

- (1) Select Application Autoinvocation
- ②Select an item and press (Save)

Connection functions to external devices

- (1) Select Local connectivity
- (2) Select an item and press () (Save)

Tip

· Settings of each item

Setting for each item are as follows. Settings vary by item

Always: Always allow the use of the function

Per session: After activating, V-application asks, for the first use, whether to allow the use of the function. Display this message only once

Per access: Every time you use a function, display a message for confirmation Never : Never allow the use of the function

· To restore defaults

In Step 3, select Reset and select Yes.





Set Display settings for the backlight.

- Press (Menu) and select V-appli
- Highlight a V-application, open Options and select V-appli settings \rightarrow Backlight
- Select a setting and press (OK)

Tip

. The contents of Backlight are:

Always On: Set the backlight always on Always Off: Set the backlight always off

Normal settings: Settings of Backlight time (P.8-5) for Display settings have priority

Application Volume



Adjust the volume of V-application sounds.

- Press (Menu) and select *V-appli*
- 2 Highlight a V-application, open *Options* and select *V-appli settings* → *Application Volume*
- 3 Use 🔇 to adjust the volume and press 🗨 (OK)

Tip

Sound volume in Manner Profile
 Sound volume follows the settings of the current Manner Profile.

Vibration



Set whether or not to active the vibration when using V-applications with vibrator.

- Press (Menu) and select *V-appli*
- Highlight a V-application, open *Options* and select *V-appli settings* → *Vibration*
- 3 Select an item and press (0K)

Reset

Restore V-application settings to defaults.

- Press (Menu) and select *V-appli*
- 2 Highlight a V-application, open *Options* and select *V-appli settings* → *Reset V-appli settings*
- 3 Enter Phone Password, press (Confirm) and select Yes



Functions

Main Menu Item	Item	Page			
V-appli	Download V-appli	P.26-2			
	Vodafone live!	P.23-3			
	Bookmarks	P.24-7			
Vodafone live!	Saved pages	P.24-6			
voualone live:	Enter URL	P.23-3			
	History	P.24-9			
	Browser settings	P.25-2			
Madia Dlavor	Music	P.10-2			
Media Player	Video	P.10-9			
	Take photo	P.7-4			
Camera	Record video	P.7-9			
Gainera	Go to photos	P.7-5			
	Go to videos	P.7-10			
	Pictures	P.11-2			
	Videos	P.11-2			
Data Folder	Melody & Music	P.11-2			
Data Folder	V-appli	P.11-2			
	Other documents	P.11-2			
	Memory status	P.11-2			

Main Menu Item	Item	Page		
	Received messages	P.18-3, 20-2		
	Create message	P.19-2		
	Drafts	P.20-6		
Messaging	Unsent messages	P.20-6		
iviessaging	Sent messages	P.20-6		
	Templates	P.19-8		
	Settings	P.22-2, 22-5		
	Memory status	P.20-2		
	Alarms	P.14-2		
	Calendar	P.14-4		
	Voice recorder	P.14-11		
	World clock	P.14-14		
Tools	Calculator	P.14-14		
10015	Converter	P.14-15		
	Stopwatch	P.14-17		
	Dictionary	P.14-17		
	Photo slide	P.8-2		
	Memory status	P.14-9		
Phonebook	Phone Book List	P.5-7		

Main Menu Item	Item	Page
	Phone settings	-
	Sound settings	P.9-3
	Display settings	P.8-1
	Messaging settings	P.22-1
Settings	Call settings	-
	Phonebook settings	P.5-1
	Connectivity	P.12-1
	Security	P.13-1
	Memory settings	P.15-5

Troubleshooting

Basic Operations

- 804SS does not turn on
 - ✓ Is battery empty?
 - → Replace or charge battery.
 - ✓ Is battery installed in 804SS?
 - → Install battery correctly.
- When power is turned on, PIN entry window appears
 - ✓ Is *PIN lock* set to *Enable*?
 - → If *PIN lock* is *Enable*, enter PIN.
- When power is turned on, USIM password entry window appears
 - ✓ Is *USIM lock* set to *Enable*?
 - → If *USIM lock* is *Enable*, enter USIM password

Please insert USIM card or This card cannot be recognized appears when 804SS is turned on or executing a function

- ✓ Is USIM Card correctly installed?
- → Check to see if USIM Card is correctly installed. If the message appears even though USIM Card is correctly installed, it may be damaged
- ✓ Is an incorrect USIM Card used?
- → Check to see if correct USIM Card is used. Use USIM Card specified by Vodafone.
- Are the IC contacts of USIM Card contaminated with fingerprints, etc.?
- → Wipe contamination off with a clean, dry cloth and install USIM Card correctly.

■ Reading USIM Cannot operate or Reading USIM Card Cannot start appears

→ USIM Card data is being read. Try again later.

Keys are inoperative

- \square Is the Cover keypad lock set to On?
- → Set the Cover keypad lock to Off.

A Busy tone continues after dialling

- Have you entered a phone number beginning with zero such as an area code?
- → Enter a phone number beginning with zero such as an area code.
- ☑ Is 804SS set to Offline Profile? (
 ☐ appears)
- → Change 804SS to another mode such as Normal Profile

■ 圏外 or Out appears and no calls can be initiated

- ✓ 804SS is out-of-range.
- → Move to a place where the signal is stronger and try again.

Calls are interrupted or disconnected

- ☑ Does 圏外 or Out appear?
- → Move to a place where the signal is stronger and try again.
- ✓ Is battery empty?
- → Replace or charge battery.

Unable to initiate a call

- ✓ Is Call Barring set?
- → Deactivate Call Barring.

Unable to open Phonebook entry, Data Folder, Call Log, Calendar or Messaging

- ✓ Is Privacy lock set?
- → Cancel Privacy lock.

Clicking noise is heard during a call

Noise may be generated when the signal is weak or while moving between coverage areas.

Unable to charge battery

- ✓ Is AC Charger Connector securely inserted into 804SS?
- → Insert AC Charger Connector securely.
- ☑ Is AC Charger securely inserted into an electric outlet?
- → Insert AC Charger securely.
- ✓ Is battery installed in 804SS?
- → Install battery correctly.
- Are the charging terminals of 804SS, battery or the connector plug of AC Charger clean?
- → Clean the contacts with a dry cotton swab, etc.

- ✓ Has battery been charged in a place with an ambient temperature lower than 5 °C or higher than 40 °C
- → Charge battery in an ambient temperature between 5 °C and 40 °C.
- ☑ Battery may need to be replaced.
- → Replace with a new battery.
- Does battery always lose its charge quickly after being charged?
- → Battery life has expired. Replace with a new battery.
- ☑ Does 804SS or battery become very warm during charging?
- → If the temperature rises too much, charging may stop. After 804SS and battery are cool, retry charging.

Devices become hot

- ✓ During charging, AC Charger may become hot.
- ☑ 804SS may become hot during charging or a long call.
- → If 804SS can be touched with your hand, it is normal. If it is too hot to touch, immediately stop charging and contact Customer Service (◆ P.28-19).

Battery drains quickly

- Battery may drain quickly depending on the operating environment (Ambient temperature, charging conditions or Signal Strength), operations and settings.
- → Use 804SS in an appropriate environment and reduce operations requiring high power (◆ P.1-10).

Display flickers

- ✓ Is 804SS used near a fluorescent light?
- → Use 804SS as far away from a fluorescent light as possible.

■ Display is dim or unlit

This may be due to the characteristics of Display and not a problem. The time (seconds) until Display is dimmed or unlit can be changed by adjusting the Backlight time.

Unable to play music through the speaker

- ✓ Is Manner Profile set?
- → Cancel Manner Profile.
- ✓ Is the stereo earphone microphone connected?
- Disconnect the connector for the stereo earphone microphone from 804SS.

Too many applications are already running, thus unable to launch anymore appears

- Memory is low or full.
- → Delete unnecessary MMS messages. If multiple functions are active, close some of them.

Unable to establish Bluetooth or USB connections using Samsung PC Studio

- ✓ Is the USB driver installed? (for USB connection)
- → If communications are executed connecting to a personal computer with the supplied USB cable, installing the driver is required. Install the driver from the supplied CD-ROM.
- Is the connection method set correctly on the personal computer?
- → Set the connection method to USB or Bluetooth on the Connection Manager of Samsung PC Studio or the Connection Wizard for the communication in use.
- Are the settings of Bluetooth or the USB connection port of the PC same as those for Samsung PC Studio?
- → Make sure port settings match those set for Samsung PC Studio Connection Manager or Connection Wizard.

Vodafone live!

Message cannot be created

- ☑ Shared Memory may be full.
- → Delete unnecessary messages. If available memory is less than 464 KB, messages cannot be created.

Try again appears

- Signal conditions are poor.
- → Move for a stronger signal and try again.

Sending message failed or Unknown error appears

- Network connection failed.
- → Try again later.

All available connections are busy appears

- New MMS arrives while 804SS is being used for packet data communications.
- → End the data communication and try again.

■ Service unavailable appears

- ∇ 804SS is outside the service area.
- → Send from within the service area.


No response appears

- ✓ Network/Server is busy.
- → Try again later.
- Change from flight profile to other profile for network service, created message will be saved in outbox appears
 - Offline Profile is active.
 - → Cancel Offline Profile and try again.
- Cannot download because of too large data appears
 - ✓ V-application memory is full.
 - → Delete unnecessary V-applications and try again.
- Received invalid data. Quit download or Cannot download because of too large data appears
 - → File cannot be downloaded; cancel download.


Symbols & Pictograms

Symbols

Double-byte Symbols

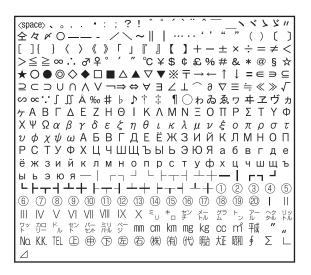

Single-byte Symbols

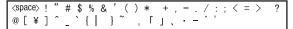

Symbol Conversions

Symbol Label	bol Label Symbol Symbol Label					
あっと	@@	こめ	*			
いこーる	==	ころん				
えん	¥¥	さんかく	△▲▽▼			
おんぷ	Þ	しかく	□■◇◆			
かける	×	どう	> // 々			
	0 [] [] () \Diamond	ぱーせんと	%%			
かっこ	[]''""()()	ほし	☆★			
	[] {} <> 《》	まる	\bigcirc			
から	~	やじるし	→← ↑↓			

Pictograms

3	A	₩	ø	9	7.77	EXP	220	2	K	OFF	8	0	088, 00	4	A	.0VE	0	0
3	4		(E)	*			10	3	M	Δ	1	X	9	U		8	۵	r ₉
4	4þ	å	哥	Æ	*		×	4	Ľ	0	€@	×	1	9	4	Щ		TM
49		A	€.	ďú	A	1	jej .	5	\triangleright			亩	్రం	*	<u> </u>		<u>A</u>	6
6		ij	111	,#j		<i>હી</i> ંક	0	6	4	**	A	?	5,3	₩.	2	*	Ä	9
1	৽	81	<u></u>	Q	WS	Ψ	75	7	DD	36	3	- Q	윤	₩	ââ	191	43	Ovodafone
A	ě	<u> </u>	a	×.	35	8,4	W	В	41	\$	Ø	9	€ુ	90	Œ:	000	4	
ō.	99	Ps.	@	-	0	9 //	Ġ	9	TÔI	<u></u>	T.	8	3 4	ð	60		4	
a	€₽	#	9	()	T	2	Tal	0	T	影		♦	€.	⊕a		À	13	
Ð	(1	&	长	88 8	<u></u>		得	8	予			- 6	6:0	Ø	á.	4	
	(b)	Į.	8	ø	777	BK	•	割	I	ull*	\$,50	Εξ	Q	4	•	-	
	(4	4	39	***	63	•	ザ	8	"	4	(8)	9	0	9		(3)	
•	(1)	₫		€.	<u></u>	0	4	ID	A	G.	4	9	0	M	<u>a</u>		3	
4	(A S		•	潤	98	#	満	1112	3	Q	7	-	8			20	
٩	•	71		₩	222	14	90	空	Ω	·0	坤	Ŧ	0 0	@@	6		***	
(E)	O	ħ	B		- (2)	0	NEW	指	III	∂ 3		٠	7.7	19	7		4	
€R.	0	0	9	3		긒	₽	(宮)	7	6	W	(m)	3	. Ÿ. Ÿ.	9		₹7	
*	(9	9	(2)	ATM	2 7	42	V3	0	99"	A STATE OF THE STA	ۇ ۇ ۋ		4		35	
	(P)	6	•	鑑	A.	1	有	4	***	Q	9	@	ĨaĬ	S	6	*3	Z	
	•	8	9	639	, z Z	24	無	÷	×	•	0)	(1)	^ફ ું	&b]	e 🗻	(e)	87	
P.	•	٥	•	225	99	J@L	月	Ġ	H.	N.	0	6	ř.š	2	ø		4	
A	r R			7	A	23	(H)	1	TÔP	-8	*	Ü	ŝŝ	4	<u>-</u>		\$	
<u>&</u>	Úž.	4		<i>₽</i>			0	↓	ìĸ́	米	-φ.	_	Œ,	1.		@	8	
•		3	₩	-	#	\$	E	→	0	1	★	۵	英		le III	8	A	
(Z)	奉	**	6	** **********************************	4))	庚	0	+	R	100	±@?	3	= =	-		**	B	
क्षि	8	80	W	=	A	<u>~</u>	1	7	\heartsuit	×0	2	#	કે,ુન્		8	Q	Æ	

Pictograms with are animated.

• Some pictograms and animated pictograms may not be received and displayed properly on some models of Vodafone handsets or other devices.

Memory List

	Shared Memory							
	Received messages	Up to 200 messages						
MMS	Drafts	Up to 10 messages						
IVIIVIO	Unsent messages	Up to 10 messages						
	Sent messages	Up to 100 messages						
	Received messages	Up to 500 messages						
SMS	Drafts	Up to 10 messages						
SIVIS	Unsent messages	Up to 10 messages						
	Sent messages	Up to 250 messages						
	Pictures							
	Videos	Up to 300 files/sub-folders						
Data Folder	Melody & Music	per folder						
Data Folder	Other documents							
	Folders or files you created	_*						
	V-appli	Up to 300 files						

^{*}Number of savable items varies by available shared memory.

Specifications

804SS specifications may change without prior notice.

Vodafone 804SS

Item	Specification
Weight	Approximately 98 g
Continuous Talk Time	Voice Call: Approximately 150 minutes (3G) Approximately 210 minutes (GSM) Video Call: Approximately 100 minutes (3G)
Continuous Standby Time (804SS closed, Sub Display off)	Approximately 290 hours (3G) Approximately 220 hours (GSM)
Dimensions (W \times H \times D)	Approximately $50.5 \times 90 \times 14.9 \text{ mm}$ (804SS closed)
Maximum Output	0.2 W

- · 804SS with battery installed.
- Battery Time is calculated by Vodafone under stable signal conditions.
 Calling in poor signal conditions or leaving 804SS on out-of-range will consume more power and may reduce Battery Time by more than half.
- Frequent 804SS operations requiring Backlight (e.g., Vodafone live!) may reduce Continuous Talk Time and Continuous Standby Time.

- Using video for Wallpaper may significantly reduce Continuous Talking and Continuous Standby Times.
- Using V-applications may reduce Continuous Talking and Continuous Standby Times.
- Continuous Talk Time is an average measured with a new, fully charged battery in stable signal conditions. Continuous Standby Time is an average measured with a new, fully charged battery with 804SS closed without calls or operations, in Standby, in stable signal conditions.
 Alternating between usage and Standby shortens Continuous Talk Time and Continuous Standby Time. Talk Time/Standby Time may vary by environment (battery status, ambient temperature, etc.).

Battery

Item	Specification
Voltage	3.7 V
Battery	Lithium-ion
Capacity	880 mAh
Dimensions (W×H×D)	Approximately 33.8 X 45 X 5 mm (without protruding parts)

AC Charger

Item	Specification
Power Source	AC 100V-240V, 50/60 Hz (with power cable)
Output Voltage/Current	DC 5V/700 mA
Charging Temperature	5 to 40 ℃
Dimensions (W \times H \times D)	Approximately 53 X 49 X 20 mm (without cables)
Cord Length	Approximately 180 cm



Α

AC Charger	.1-13
Activating a V-application	.26-2
Activating Bluetooth	.12-3
Active folder	.15-3
Add to playlist	.10-4
Adding Reject Black List	.13-5
Adjusting earpiece volume	2-4
Adjusting ringtone volume2-3, 6-3	3, 9-2
Adjusting volume level to play10-7,	10-10
Alarm volume	9-2
Alarms	.14-2
All music	.10-2
Anniversary	.14-7
Answering mode9-2	12-6
Anykey answer	.15-3
Applicable Profiles for Bluetooth	12-2
Attaching files	.20-9
Attaching to a message for sending still imag	ges
	.7-15
Attaching to a message for sending videos	
7-15	, 11-8
Attaching/Inserting a file	.19-8

Audio Skin	10-7
Authentication code	12-4
Auto power ON	14-3
Auto redial	15-2

В

Backlight	8-5, 10-8, 27-2
Battery	1-9, 1-11
Bluetooth	12-2
Bluetooth Address	12-3
Bluetooth service	12-3
Browser Information	25-3

C

Cache	23-2
Calculator	14-14
Calendar	14-4
Calendar window format	14-5
Call alert type	9-2
Call cost limit	2-7
Call Log Records	2-5
Call Transfer service	16-2
Call Waiting	16-6
Caller ID	16-9
Camera	7-2
Camera mode	7-3

Camera setting	7-11
Capturing continuous images	7-6
Capturing in Mosaic shot	7-7
Capturing mode	7-3
Capturing still images	7-4
Capturing videos	7-9
Category	5-5
Centre access code	1-20
Certificates	. 24-12, 25-4
Changing a file name	11-9
Changing a folder name	11-9
Changing mail address	17-3
Changing phone password	13-2
Changing PIN	13-2
Changing PIN2	13-2
Changing proffile	3-3
Changing recording time	14-13
Changing settings of each proffile	9-2
Changing to MMS	19-5
Changing to SMS	19-5
Changing voice recorder settings	14-13
Charger Terminal	1-6
Charging	1-13, 1-14
Checking memory usage	15-5
Clear memory	13-6
Clock Display	8-3
Conference Call	16-7

Connecting a Bluetooth-compatible device	Deleting a file11-11
12-5, 12-6	Deleting a folder11-11
Connection setting12-9, 23-3	Deleting a Saved page24-7
Connection to another Bluetooth devices12-5	Deleting a V-application26-4
Content key info11-8	Deleting access logs24-9
Converting currency or unit14-15	Deleting Cache25-4
Cookie setting25-2	Deleting Calendar items14-10
Copying characters4-9	Deleting Call Log Records2-5
Copying files11-10	Deleting characters4-9
Copying folders11-10	Deleting Cookies25-4
Copying items5-9	Deleting messages20-7
Copying Phonebook5-10	Deleting messages in server21-2
Copyrighted file icons20-4	Deleting My devices12-4
Country code15-2	Deleting Phonebook5-11
Cover keypad lock10-8	Deleting still images7-5
Creating a folder11-9	Deleting templates4-11, 20-7, 20-8
Creating a play list10-6	Dialled Call Log Records2-5
Creating messages19-2	Dialling display8-6
Current contacts2-5	Dictionary14-17
Cutting characters4-9	Display1-7
	Display brightness8-5
D	Display mode14-5
	Display Operator name8-3
Data folder7-13, 11-2	Display rendering24-10
Date and time setting1-16	Display size of videos10-10
Default name14-13	Displaying Slide show19-6
Default style22-4	Download content key11-8
Deleting a bookmark24-8	

Downle	oading a V-application26-2
Drafts	20-2
DTMF	2-4, 6-4

Ε

Edge Bar	15-4
Editing bookmarks	24-8
Editing Calendar details	14-9
Editing Phonebook	5-10
Editing still images	7-13
Editing Style	19-6
Editing the title for a Saved page	24-6
Effect sound and keypad tone volume .	9-2
Effect sound setting	9-2, 9-5
Effects	7-10
Encode	24-11
Entering a number to select an item	1-18
Entering by quoting text	4-8
Entering characters	4-2, 4-4
Entering emoticons	4-7
Entering pictograms	4-7
Entering symbols	4-7
Entering URL	23-3
Entry mode for characters	4-2
Event list	14-9
External Device Connector	1-6
External Media Keys	1-6

F	In-car charger1-14
File details 11-8 File Viewer 11-4 Font size 4-10, 8-4, 8-6, 25-3 Forwarding 20-6 Forwarding Messages 21-3 Forwarding messages in server 21-3 Frames 7-4, 7-14	Initiating a call
Greeting Messages8-7	Invoking a function with Switch Bar1-19 Invoking functions from Main menu1-17 Items to save to Phonebook5-2
Н	
	J
Holiday14-7 Home zone1-16	Java Script25-3
Holiday14-7	Java Script25-3
Holiday14-7 Home zone1-16	Java Script25-3
Holiday	Java Script25-3 K Key assignments4-3

Locking/unlocking files11	-8
Locking/Unlocking sound files14-1	12
Locking/Unlocking V-application26	-4

M

Mail art function	17-2
Mail Server	21-2
Mailbox	20-2
Main menu style	8-4
Manner profile	3-2
Mark default number	5-10
Maximum of message size	22-4
Media Player	10-2
Memo	14-7
Menu search	1-18
Message	17-2
Message alert type	9-2
Message details	20-3
Message List	21-2
Message type icon	20-3
Mini Album	7-13
Mini Player	10-5
Missed Call	2-3, 2-5
MMS	17-2
MMS connection setting	22-3
MMS Notice	5-2, 9-2
MMS templates	19-8

Mobile Postcard7-5	Owner information5-11	Putting a call on hold	2-
Modifying characters4-9			
Move to USIM20-13	P	Q	
Moving to SMS20-13			
mPostcard7-5	Page Details24-10	Quoting for entries	4-
Multi Selectorxii	Page Window23-4	_	
Mute2-3, 2-4, 9-3	Pasting characters4-9	R	
My devices12-3, 12-5, 12-6	Phone lock13-4	Book of collect	
My phone's name12-7	Phonebook search 5-7	Received call log	
My phone's visibility12-6	Photo slide 8-2	Received messages	
My phone's visibility for Bluetooth12-6	PIN1-4	Receiving a call	
, p	PIN authentication at power on1-4, 13-2	Receiving a video call	
N	PIN lock13-2	Receiving all messages	
N	PIN21-4	Receiving data via Bluetooth	
Network password1-20, 16-9	PIN2 lock unlocking code13-3	Receiving message in server	21-
Network Profile2-7	Player settings10-7, 10-10	Receiving settings	22-
Network selection2-8	Playing melody10-2	Record settings	14-1
Network V-applications17-3, 26-2	Plaving video7-13. 10-9	Recording voice	14-1
,, ,	Playing voice14-12	Registering an MMS template	20-1
0	Popup menu8-4	Registering as MMS template	20-
· ·	Power ON/OFF1-15, 1-16	Registering SMS templates	4-1
Offline Profile3-2	Predictive entry function ON/OFF4-10	Registering to bookmark	24-
Opening Saved page24-6	Preferences25-2. 25-3	Registering to Phonebook	5-
Operating messages in server21-2	Preferred network2-8	Rejecting call reception	15-
Operations available during a video call6-3	Pre-installed11-2	Rejecting incoming calls	13-
Operations during a call2-4	Privacy Lock	Renaming a still image file	7-
Option menu1-20		Renaming My devices	
Outgoing/incoming call barring service16-8	Providing Manufacturer Number25-3	Renaming sound files	
3	PUK Code1-4, 13-3	• • • • • • • • • • • • • • • • • • • •	

Repeat mode10-7, 10-10	Sending a message from Drafts20-
Reply18-4, 20-5	Sending data via Bluetooth12-
Reset13-6	Sending from Unsent Messages20-
Reset all13-7	Sending settings19-5, 22-2, 22-
Reset settings13-6	Sending sound files14-1
Resetting a call cost2-6	Sending still images via Bluetooth12-
Resetting Call times2-6	Sending URL24-1
Resetting PIN lock13-3	Sending videos via Bluetooth7-10, 12-
Resetting V-application settings27-3	Sending your image6-
Restarting V-application paused26-3	Sent messages20-
Retry function17-2	Server Certification24-1
Retry with6-5	Server Mail Size21-
Ringtone for a voice call5-6	Shortcut operations7-
	Shortcuts1-19, 15-
S	Side Key15-
	Skin10-
Saving a page24-6	Slide show11-
Saving as a template19-12	SMS17-2, 22-
Saving attached files20-10	SMS Notice5-
Saving images24-2	SMS templates4-
Saving sounds24-4	Softkey 8-x
Saving to Drafts19-11	Sort11-6, 14-10, 20-1
Schedule14-5	Sorting files11-

Sending a message from Drafts20-6	S
Sending data via Bluetooth12-5	S
Sending from Unsent Messages20-6	S
Sending settings19-5, 22-2, 22-5	S
Sending sound files14-12	S
Sending still images via Bluetooth12-5	S
Sending URL24-10	S
Sending videos via Bluetooth7-10, 12-5	S
Sending your image6-5	S
Sent messages20-2	S
Server Certification24-10	S
Server Mail Size21-2	S
Shortcut operations7-8	S
Shortcuts1-19, 15-4	S
Side Key15-3	S
Skin10-8	
Slide show11-3	
SMS17-2, 22-5	
SMS Notice5-2	T
SMS templates4-8	T
Softkey 8-xii	T
Sort11-6, 14-10, 20-11	
Sorting files11-6	
Sound file details14-12	U
Sound file setting14-12	U
Sound playback25-2	U
Sound Settings9-3	

Speaker Phone call	2-4
Speed dialling	5-9
SL/TLS	23-2
SL/TLS certificate	25-4
Still image details	7-5
Stopping or pausing V-application	26-3
Stopwatch	14-17
Streaming	24-5
Streaming settings	10-10
Sub Display	1-8
Sub Display setting	8-6
Substitute images	6-5
VG-T/Flash viewer	11-5
witching callers	16-7
witching cameras	7-4, 7-10

Task	14-8
Templates	4-8, 20-2
Timer	7-10

20-2
24-10
21-2
12-7

Secure mode for data transfer12-7

Security27-2

Security Codes1-20

Selecting 3G or GSM2-7

Sending a bookmark URL24-8

User dictionary4-10	Vodafone live!17-2, 24-11
USIM Card1-2	Voice Mail Service16-4
USIM lock13-3	Voice Recorder14-11
USIM password13-4	Volume2-4, 9-2, 27-3
Using a file11-7	
Using a template19-8	W
Using SMS templates4-11	
	Wake-up Alarm14-2
V	Wallpaper 8-2
	Web17-2
V-application17-3	Web access from a bookmark24-8
V-application detailed information26-3	Web connection from access logs24-9
Various settings for video call6-5	World clock14-14
vFile11-8	
Vibration9-4, 14-2, 27-3	Z
Vibrator/Sound settings9-2	
Video Mode7-9	Zoom list8-5
Video settings7-12	
Viewfinder7-2	Numerics
Viewing a file11-3	3D pictogram22-5
Viewing attached files20-9	02 p.000g.u
Viewing Call cost2-6	
Viewing Call Log Records2-5	
Viewing Call times2-6	
Viewing Saved Calendar Entries14-9	
Viewing your phone number	
(My Phonebook details)5-11	

Warranty & After Sales Service

Warranty

The purchased 804SS comes with a Warranty.

- Check the shop and date of purchase.
- Read through the contents of the Warranty and keep it in a safe place.
- The warranty period can be found in the Warranty.

Vodafone is not liable for damages to you or a third party from missed calls, etc. due to handset failure or malfunction, etc...

Repair Requests

Before submitting 804SS for repair, consult the "Troubleshooting" section for a solution. If a problem persists, contact Customer Service (P.28-19) or the nearest Vodafone shop; be prepared to describe problem in detail.

- During the warranty period, repairs will be made under the terms and conditions described in the warranty.
- After the warranty period, repairs will be upon request; if said repairs can be made, you will be charged for them.

Note

- 804SS files and settings may be lost or altered due to accidents or repairs. Keep a copy of important files, etc. like Phonebook entries. Vodafone is not liable for damages resulting from accidental loss or alteration of 804SS files (Phonebook, Data Folder, etc.) or settings.
- Disassembling or modifying this product may be a violation of the Radio Law, Note that Vodafone will not accept repair requests for disassembled or modified products.

Customer Service

If you have questions about Vodafone handsets or services, please call General Information.

For repairs, please call Customer Assistance.

Vodaf	one Cı	ustomer	Centre
-------	--------	---------	--------

From a Vodafone handset, dial toll free at 157 for General Information or 113 for Customer Assistance

Vodafone International Call Centre

From outside Japan, dial +81-3-5351-3491

(Please take care to dial correctly; international charges will apply.)

Call these numbers toll free from landlines.

Subscription Areas	Col	ntact
Hokkaido, Aomori, Akita, Iwate, Yamagata, Miyagi, Fukushima, Niigata, Tokyo, Kanagawa, Chiba,	General Information	0088-240-157 (Toll-free)
Saitama, Ibaraki, Tochigi, Gunma, Yamanashi, Nagano, Toyama, Ishikawa, Fukui	Customer Assistance	0088-240-113 (Toll-free)
Aichi, Gifu, Mie, Shizuoka	General Information	(Toll-free)
	Customer Assistance	0088-241-113 (Toll-free)
Osaka, Hyogo, Kyoto, Nara, Shiga, Wakayama	General Information	0088-242-157 (Toll-free)
	Customer Assistance	0088-242-113 (Toll-free)
Hiroshima, Okayama, Yamaguchi, Tottori, Shimane	General Information	0088-259-157 (Toll-free)
	Customer Assistance	0088-259-113 (Toll-free)
Tokushima, Kagawa, Ehime, Kochi	General Information	0088-247-157 (Toll-free)
	Customer Assistance	0088-247-113 (Toll-free)
Eukuaka Caga Magaaki Oita Kumamata Miyazaki Kagaahima Okingya	General Information	©: 0088-250-157 (Toll-free)
Fukuoka, Saga, Nagasaki, Oita, Kumamoto, Miyazaki, Kagoshima, Okinawa	Customer Assistance	0088-250-113 (Toll-free)

Vodafone 804SS User Guide

February 2006 Version 1





To help protect the environment and recycle valuable resources, mobile phone and PHS shops displaying the above mark accept mobile phones, batteries and chargers of all manufacturers.

*Mobile phones, batteries and chargers collected for recycling cannot be returned.

*To protect your privacy, delete any personal information (telephone numbers, call log records, messages, etc.) beforehand.

*For more information, please visit your nearest Vodafone Shop.

Model name: Vodafone 804SS

Manufacturer : Samsung Electronics Co.,Ltd.