

004SH , 004SH PJ , 002SH , 001SH , 945SH , 945SH G , 944SH , 943SH ,
942SH , 942SH KT , 941SH , 940SH , 936SH , 935SH , 934SH , 933SH , 932SH ,
931SH , 930SH , 923SH , 922SH , 921SH , 920SH , 920SH YK , 913SH G ,
913SH , 912SH , 911SH , 831SH KT , 831SH , 825SH , 824SH , 823SH , 822SH ,
821SH , 820SH

待受画面   TV  デジタルTV   (メニュー)

 チャンネル設定  エリア切替  チャンネルを再設定したいリストに
カーソルを合わせる

  (メニュー)  チャンネル更新  全更新



保存されている
テレビ局を消去して、
更新を行ないます。
よろしいですか？

 はい