

# MediaPad T2 Pro

## User Guide

## Contents

<b>1 About This Guide .....</b>	<b>5</b>
<b>2 Getting Started .....</b>	<b>6</b>
Installing USIM Card/microSD Card .....	6
Initial settings .....	7
Locking and unlocking the screen.....	7
Main Notification and Status Icons.....	7
Frequently used buttons .....	8
Home Screen operations .....	8
Dual window gestures.....	10
USIM Card .....	10
Handling USIM Card.....	10
SIM-unlocking tablet .....	11
Security codes .....	11
Center Access Code .....	11
USIM PIN.....	12
<b>3 Text Entry .....</b>	<b>14</b>
Editing text .....	14
Selecting an input method .....	14
<b>4 Network Connection .....</b>	<b>15</b>
Connecting to a Wi-Fi network.....	15
Connecting to a Wi-Fi network (WPS) .....	15
<b>5 Applications .....</b>	<b>17</b>
Applications list .....	17
Installing applications.....	22
<b>6 Contacts .....</b>	<b>23</b>
Adding contacts .....	23
Syncing contacts.....	23
Importing contacts.....	24

Backing up contacts.....	24
Sharing contacts .....	24
<b>7 SoftBank Mail .....</b>	<b>25</b>
Thread list/folder list.....	25
Switching between thread list and folder list.....	25
Thread list.....	25
Folder list.....	26
Sending S! Mail/SMS .....	26
Sending S! Mail/SMS.....	26
Sending decore mail by S! Mail .....	27
Using a template.....	27
Decorating S! Mail.....	27
Opening & replying to S! Mail/SMS.....	27
Opening new S! Mail/SMS .....	28
Retrieving S! Mail/SMS manually .....	28
Retrieving server mail .....	28
Replying to S! Mail/SMS .....	28
Forwarding S! Mail/SMS .....	29
Managing S! Mail/SMS .....	29
Viewing S! Mail/SMS.....	29
Thread list.....	31
Thread details .....	31
S! Mail/SMS message window.....	32
Backing up S! Mail/SMS data.....	33
Restoring S! Mail/SMS data .....	33
Moving S! Mail/SMS data (export).....	33
Moving S! Mail/SMS data (import).....	34
Operations when creating S! Mail/SMS .....	35
Attaching files .....	35

Specifying date/time to send .....	36
Entering emoji pictograms.....	36
Previewing before sending.....	36
Setting priority levels.....	36
Requesting delivery reports .....	37
Discarding a message draft .....	37
S! Mail/SMS settings .....	37
Common Settings .....	37
Send/Receive Settings.....	38
Mail Group Settings .....	39
Number/Address Settings .....	40
<b>8 Multimedia .....</b>	<b>41</b>
Taking an all-focus photo .....	41
Taking a panoramic photo.....	41
Importing photos .....	42
Viewing photos & videos.....	43
Sharing photos & videos.....	43
Scanning a QR code using Camera .....	43
Scanning a QR code using Gallery.....	44
<b>9 Customizing .....</b>	<b>45</b>
Changing Wallpaper.....	45
Adding Widgets to Home Screen.....	45
Managing Home Screen Pages.....	46
Changing notification tones.....	46
Changing font sizes .....	46
Adjusting Display brightness.....	46
<b>10 File Sharing .....</b>	<b>48</b>
Sharing files with Wi-Fi Direct.....	48
Sharing files with Bluetooth®.....	48

Copying files from a computer .....	49
<b>11 Settings .....</b>	<b>51</b>
Setting screen timeout .....	51
Setting a screen lock .....	51
Adjusting volume .....	51
Enabling power saving mode .....	51
Checking memory status .....	52
Setting date and time manually .....	52
Formatting microSD Card .....	52
Initializing data .....	52
Updating software .....	53
Disabling automatic data communication/sync settings .....	53
Disabling location information .....	53
Disabling background data .....	53
Disabling automatic syncing .....	53
Disabling packet communication abroad .....	54
<b>12 Personal Information and Data Security .....</b>	<b>55</b>
<b>13 Legal Notice .....</b>	<b>56</b>
<b>14 Specifications .....</b>	<b>58</b>
Tablet .....	58
<b>15 Warranty &amp; After-Sales Service .....</b>	<b>60</b>
Warranty .....	60
After-sales service .....	60
<b>16 Customer Service .....</b>	<b>61</b>

 
# 1 About This Guide

Thank you for choosing the MediaPad T2 Pro.

This guide is intended for MediaPad T2 Pro running EMUI 4.0.

# 2 Getting Started


## Installing USIM Card/microSD Card

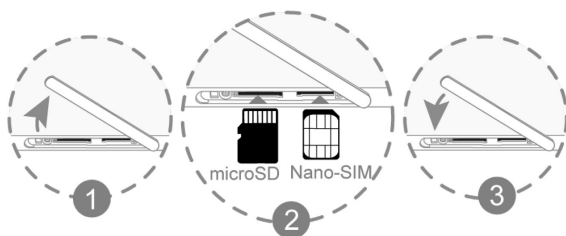

12mm\*9mm



Nano-SIM

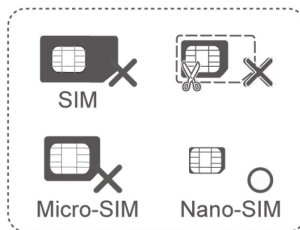

- 1 Open Card Slot Cover
- 2 Insert USIM Card or microSD Card gently (metal contact up) until it clicks in place
- 3 Close Cover

## Initial settings

Make initial settings for Wi-Fi, a Google account, and other options when powering on tablet for the first time. Follow onscreen prompts.

Install USIM Card before powering on tablet.

- 1 Make language and region settings**
- 2 Configure Wi-Fi network to connect to as necessary**
- 3 Follow onscreen prompts**

- If already using another Android device, Tap "Copy your Google Accounts, apps, and data from your other device" to copy settings to tablet.

### Google Account

If you already have a Google account, then in the screen for adding an account enter the Gmail email address. Follow onscreen prompts.

## Locking and unlocking the screen

### Locking the screen

- If tablet has been idle for a certain period of time, screen locks itself automatically.  
Alternatively, press Power Key to lock the screen.

### Note

- In Home Screen, Tap Settings → Display → Sleep and select a time.

### Unlocking the screen













- Press Power Key to wake tablet. Slide finger toward any direction to unlock screen.

## Main Notification and Status Icons










Notification and status bars may show the following icons to indicate tablet status.

Icon	Description	Icon	Description
	Airplane mode		Bluetooth® on



	Charging		Battery full
	Battery extremely low		Wi-Fi hotspot on
	Connected to a Wi-Fi network		Preparing microSD Card
	Upcoming event		Alarms enabled
	Memory full		System exception
	Connected to a VPN		Headset connected

## Frequently used buttons


Icon	Description	Icon	Description
	More		Share
	Completed		Add
	Search		Delete data
	Refresh		Save
	Favorites		


## Home Screen operations

- Tap application icons in Home Screen to open applications.
- Flick left/right in Home Screen to change pages.
- To customize Home Screen, Touch & Hold open area of Home Screen for options menu.  
Select customization for Wallpaper, widgets, etc.




- Drag Status Bar down for Notifications Window. Tap Notifications/Shortcuts to toggle Notifications Window and Shortcuts Window.

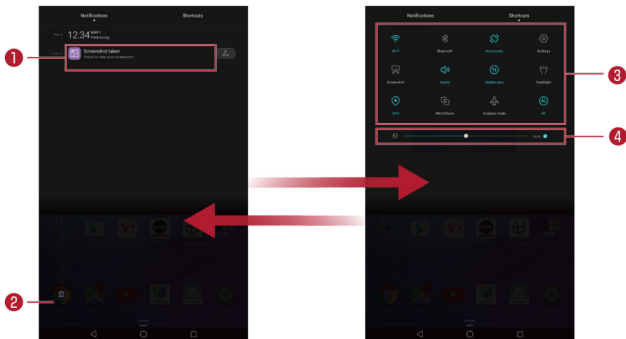

- 1 Tap notification to view details. Flick left/right across notification to dismiss.
- 2 Tap  to delete all notifications.
- 3 Tap shortcut switches in Notifications Window to turn on or off functions. Touch & Hold switch for settings screen of corresponding function. Tap Edit to customize list.
- 4 Drag slider to adjust screen brightness. Enable/disable automatic brightness.

## Dual window gestures

Split the screen into two parts and view different content simultaneously.

To enable dual windows mode, Touch & Hold  or use two fingers to slide up from bottom of screen.



On the screen, Drag  to adjust the screen ratio.

## USIM Card

USIM Card is an IC card containing customer phone number and other information.

### Handling USIM Card

---

- See instructions included with USIM Card for handling.
- Avoid applying labels. May damage USIM Card.
- USIM Card is replaceable (at cost) in case of loss/damage.
- Wipe clean with a dry, soft cloth.
- Always keep the IC chip (metal) clean.
- Always follow emergency procedures to suspend service if your USIM Card or table (USIM Card inserted) is lost/stolen. For details, contact Customer Service.
- Customer is responsible for any damage caused by inserting USIM Card in an other-brand IC card reader, etc. SoftBank Corp. is not responsible in such case.
- It is recommended that you keep a separate copy of information that is stored on USIM Card. SoftBank Corp. is not responsible for damages from stored information that is lost.
- Always power off tablet before inserting/removing USIM Card.

- Note that USIM Card specifications and performance may change without notice.
- Return USIM Card to SoftBank Corp. when cancelling subscription.
- USIM Card is the property of SoftBank Corp.
- Returned USIM Cards are recycled for environmental purposes.

## SIM-unlocking tablet

---

Tablet can be SIM-unlocked. SIM-unlocking tablet allows other-carrier SIM cards to be used with it.

- Some services, functions, etc. may have restrictions when an other-carrier SIM card is used. SoftBank Corp. does not guarantee operation whatsoever.
- For details on SIM unlocking, see SoftBank Website.

## Security codes

The following codes are required for tablet use.

Code	Description
Center Access Code	Four-digit code you have set in subscription contract. For details, see "Center Access Code" (→P. 11).
USIM PIN	Code for USIM Card. For details, see "USIM PIN" (→P. 12).
Password	Code for unlocking screen. For details, see "Setting a screen lock" (→P. 51).

## Center Access Code

---

Center Access Code is the four-digit code set at time of subscription, and is required such as when using option services from a landline phone.

- Do not forget Center Access Code. If you forget the code, contact us for recovery. For details, contact Customer Service.
- Be careful not to reveal security codes to others. If misused by others, SoftBank Corp. is not liable for any resulting damages.

## USIM PIN

---

### USIM PIN and locking USIM Card

By locking USIM Card, entry of USIM PIN (code for using USIM Card) to use tablet is required when powering on tablet. This effectively prohibits unauthorized use by others.

- USIM Card becomes locked by enabling USIM PIN.
- At time of purchasing USIM Card, USIM PIN is set to "9999" (and can be changed).

### Note

- USIM PIN entry will be required when working with the USIM PIN or powering on tablet and USIM Card is locked.
- Entering incorrect USIM PIN three consecutive times activates PIN Lock. To cancel, Personal Unlocking Key (PUK) is required; contact Customer Service.
- Entering incorrect PUK ten consecutive times locks USIM Card, disabling tablet. For recovery, USIM Card must be reissued at a SoftBank Shop (fees apply).

### Enabling USIM PIN

When USIM PIN is enabled, a window for entering USIM PIN (code for using USIM Card) appears to allow tablet use each time tablet is powered on with USIM Card installed.

**1** In Home Screen, **Settings** → **Advanced settings** → **Security**

**2** Set up **SIM card lock** → **Lock SIM card**

**3** Enter **USIM PIN** → **OK** ()

- USIM PIN is enabled and USIM Card is locked.

### Unlocking USIM Card

**1** In **SIM card lock settings window**, **Lock SIM card** → **Enter USIM PIN** → **OK** ()

### Operation when powering on tablet

When powering on tablet and USIM Card is locked, window appears for entering USIM PIN. To use tablet:

**1** Enter **USIM PIN** → 

- Tablet can be used.


### Changing USIM PIN

- First lock USIM Card to change USIM PIN. For details, see "Enabling USIM PIN" (→P. 13).

- 1** In Home Screen, Settings → Advanced settings
- 2** Set up SIM card lock → Change SIM PIN → Enter current USIM PIN → OK → Enter new USIM PIN → OK → Enter new USIM PIN again → OK
  - USIM PIN is changed.

# 3 Text Entry





Tablet comes with multiple input methods. Quickly enter text using the onscreen keyboard.

- Tap a text input field for onscreen keyboard.
- When done, Tap  to hide onscreen keyboard.

## Editing text

Copy, cut, and paste text.

### Select text

Touch & Hold the text field until  and  appear. Drag  and  to select the text to edit, or Tap Select all to select all text.

### Copy text

After selecting text, Tap Copy.

### Cut text

After selecting text, Tap Cut.

### Paste text

Tap where to insert text (to move insertion point, Drag ) and Tap Paste to paste the copied or cut text.

## Selecting an input method

Tablet provides multiple ways to text input. Select preferred input method.


- 1 On text editing screen, Tap text field**
  - Onscreen keyboard appears.
- 2 Flick Notification Bar down**
  - Notifications Window opens.
- 3 In Notifications Window, Select input method**
- 4 Select input method**

# 4 Network Connection

## Connecting to a Wi-Fi network

Select from detected Wi-Fi networks.

### 1 In Home Screen, Settings → Wi-Fi → Wi-Fi ( )

- Wi-Fi is enabled.
- Tap Wi-Fi again to disable Wi-Fi (  ).

### 2 Tap access point → Enter password → Connect

- Tablet is connected.
- Password (indicated by WEP, WPA, KEY, etc.) may be found on a label on your Wi-Fi router. For details, contact the vendor of the router. For public wireless LAN services, inquire about the password with your ISP.
- Omit password entry for unprotected access points.


### Note

- To connect to a Wi-Fi network that uses a hidden SSID, Tap Add network → Enter required network information (SSID etc.) to connect.
- Enabling Wi-Fi increases power consumption. To save battery power, disable Wi-Fi when not in use.

## Connecting to a Wi-Fi network (WPS)

If your wireless router supports WPS (Wi-Fi Protected Setup), use WPS to quickly connect to a Wi-Fi network.

### 1 In Home Screen, Settings → Wi-Fi → Wi-Fi ( )

- Wi-Fi is enabled.
- Tap Wi-Fi again to disable Wi-Fi (  ).



**2 Menu → Advanced settings → WPS connection/WPS PIN connection → Follow onscreen prompts**






- Tablet is connected.








 **Note**










- Enabling Wi-Fi increases power consumption. To save battery power, disable Wi-Fi when not in use.








# 5 Applications












## Applications list

Icon	Function/Service
 (App Pass)	Packed with must-have smartphone applications. All-you-can-download service offering popular and standard paid applications spanning tools, ringtones, and simple games to travel, health, and other genres. No login required, download applications quickly. User bonuses such as monthly tickets for purchasing additional items.
 (Chrome)	Access the Internet for searching and webpage browsing. Synchronize with Chrome bookmarks and other data on your PC. Supports secret tabs and other privacy features.
 (Gmail)	Use Google's email service Gmail anytime and anywhere. Enter keywords to search for messages, and add labels to organize messages.
 (Google)	Search for information on the Internet and for applications on tablet using Google Search. View webpages around the world as well as maps, videos, location/train information for establishments, and other related information.
 (GYAO!)	Premium all-you-can-view video application GYAO!. Movies, anime, music. Packed with a free-of-charge lineup of currently aired dramas, popular artist live concerts, etc.

 (Internet SagiWall)	<p>Detect one-click fraud while browsing the Internet and protect your device.</p> <p>Alert screen appears when harmful site is detected.</p> <p>Subscription to "smartphone kihon pack" (smartphone basic pack) or "Internet SagiWall" required.</p>
 (My SoftBank)	<p>Special portal where members can check billed amounts, change plans and option subscriptions, change email address, make spam settings, etc.</p> <p>Subscribe and unsubscribe to services, and view bargain campaigns only with SoftBank.</p>
 (My SoftBank+)	<p>Application presenting useful information on SoftBank.</p> <p>Usage charges for your device, how to get more convenience from your device, and recommended related products and contents.</p>
 (Netflix)	<p>The largest video download service of its kind in the world with more than 81 million members worldwide.</p> <p>Enjoy favorite movies and dramas on a PC, smart TV, tablet, smartphone, or other device connected to the Internet.</p>
 (Play Store)	<p>Download from a wide range of applications (free/paid) on Google Play.</p> <p>Configure downloaded applications to download updates manually or automatically.</p>
 (Play Music)	<p>Play music saved on device or microSD Card.</p> <p>View music by genre, artist, or album.</p> <p>Create playlists.</p>
 (Play Movies & TV)	<p>Rent videos from Google Play or download and install for video enjoyment.</p>

 (Wi-Fi Spot Settings)	<p>Allows tablet to connect (log on) to SoftBank Wi-Fi spots automatically in SoftBank Wi-Fi spot service areas.</p> <p>Requires subscription to SoftBank Wi-Fi spot service.</p>
 (Yahoo!)	<p>Access the smartphone edition of Yahoo! JAPAN. All the required capability daily from news selects to a wide range of search menus.</p> <p>Check weather, disaster, and other information you want and need to know.</p>
 (Y! Backup)	<p>Easily back up photos, videos, contacts, and other important data.</p>
 (YouTube)	<p>View a variety of video content uploaded to YouTube. View in high-quality mode on tablet.</p> <p>Upload videos captured on tablet.</p>
 (AnimeHodai)	<p>Complete all-you-can-view lineup packed with latest on-air anime to classic favorites.</p>
 (Recorder)	<p>Record and play back audio from conferences and interviews.</p>
 (Camera)	<p>Capture photos and videos.</p> <p>Set image size, white balance, etc. Use continuous shooting.</p>
 (Calendar)	<p>Check calendar and manage events. Switch between day, week, month, and year views.</p> <p>Sync online with Google Calendar.</p>
 (Gallery)	<p>Manage and view photos and videos. Crop and rotate images.</p> <p>View as slideshow.</p>

 (Disaster Message Board)	<p>Post, view, and delete whereabouts information in the event of a major disaster, such as a "6 弱" (roku-jyaku, "6 Lower") or larger earthquake.</p> <p>Set notification to be automatically sent to a pre-specified email address after posting whereabouts information.</p>
 (Sportsnavi LIVE)	<p>Service offering all-you-can-view professional baseball, MLB, world soccer, and other sports events domestically and abroad. Missed-program netcast (minogashi haishin), highlight digests, news, and columns.</p>
 (Smart Security)	<p>Protect your device from viruses and invasion of privacy. Delete viruses from device applications, mail attachments, and microSD Card, and evaluate personal information accessible by applications.</p> <p>Subscription to "smartphone kihon pack" (smartphone basic pack) or "Smart Security powered by McAfee<sup>®</sup>" required.</p>
 (Settings)	<p>Configure tablet settings.</p> <p>Check and configure screen, sound, and other settings.</p>
 (Downloads)	<p>View history of browser downloads using Chrome.</p> <p>Re-sort files sorted by time according to size, and select and delete downloaded files in a batch.</p>
 (Calculator)	<p>Perform basic operations (addition, subtraction, multiplication, division).</p> <p>Use functions for many different calculations.</p>
 (TokuHodai)	<p>More than a million discounts and benefits to choose from including limited bargain sales on foods, leisure, travel, etc., convenience store coupons, and electronic gift code draws.</p>

 (Clock)	<p>Use alarm, world clock, stopwatch, and timer.</p> <p>View times around the world with the world clock.</p> <p>Add a region to view times in multiple regions at the same time.</p>
 (Drive)	<p>Google Drive is a Google online storage service. Save and share files with Google Drive.</p>
 (Hangouts)	<p>Use free photos, emoji, video hangout, etc. to enjoy one-on-one and group talk.</p>
 (Photos)	<p>View and edit captured photos/videos and back them up to Google online storage.</p>
 (BookHodai)	<p>All-you-can-read service with weeklies, fashion magazines, and other popular magazines, as well as popular comics.</p>
 (Maps)	<p>View a map of current location or check route.</p> <p>View traffic information and aerial views. Includes street view, 3D view, etc.</p>
 (Mail)	<p>Use SMS/S! Mail. Exchange decore mail, emoji, etc. with an @softbank.ne.jp or @x.vodafone.ne.jp email address.</p>
 (Notepad)	<p>Save frequently-used words/phrases, notes, etc.</p>
 (Remote Support)	<p>For users subscribing to "keitai nandemo support."</p> <p>This application allows remote support staff to view tablet screen and provide assistance with operation and settings.</p>
 (Contacts)	<p>Save phone numbers and email addresses.</p>
 (LOHACO (SoftBank))	<p>Shopping site allowing you to enjoy bargains easily with popular LOHACO and Yahoo! Shopping.</p> <p>Check saved points and use them shopping.</p>

# Installing applications

A google account is required to download applications.

## 1 From Chrome/Google Play, download application → Follow onscreen prompts

- Application is installed.

### Note

- Some applications are incompatible with tablet, and will not operate correctly or can damage tablet's system. Only download applications from trusted sources.

# 6 Contacts

## Adding contacts

Use the Contacts application to manage contacts information including names, phone numbers, and email addresses.



### 1 In Home Screen, Tools → Contacts

- Contacts opens.
- If no contacts are saved, "No contacts" appears.

### 2 New contact

- If confirmation appears, follow onscreen prompts.
- If no contacts are saved, Tap "Create a new contact."

### 3 Enter required items

- Tap  to delete a selected item's entry field.
- Tap  in Name field to enter a name prefix, middle name, etc.
- Tap Mobile or Home for entry fields to select labels (categories).
- Tap Add another field to add an address, birthday, etc.

### 4

## Syncing contacts

Sync contacts saved to a Gmail or Exchange account with tablet.

### 1 In Home Screen, Settings → Accounts

### 2 Tap account type in Accounts field → Tap account to sync

### 3 Sync People details ()

- Sync settings are made.

### Note

- If no account is listed for syncing with tablet, Tap Add account and add an account.  
Accounts are synced automatically once the account is added.



## Importing contacts

Import contacts from microSD Card.

### **1 In Home Screen, Tools → Contacts**

- Contacts opens.

### **2 Menu → Import/Export → Select where to import to → Follow onscreen prompts**

- Contacts are imported.

## Backing up contacts

Back up contacts to internal storage or microSD Card as a precaution to contacts being accidentally erased or lost.

### **1 In Home Screen, Tools → Contacts**

- Contacts opens.

### **2 Menu → Import/Export → Select where to export to → Export → Tap contacts → OK**

- Contacts are exported.

## Sharing contacts

Use email and Bluetooth® to share contacts saved in tablet.

### **1 In Home Screen, Tools → Contacts**

- Contacts opens.

### **2 Tap contact to share → Menu → Share contact → Tap application → Follow onscreen prompts**

- Contact is sent.

# 7 SoftBank Mail

## Thread list/folder list

View mail in thread list or folder list.

Thread list is described in the User Guide.

## Switching between thread list and folder list

---

**1** In Home Screen, Mail


**2** Tap name of current list view (Thread list/Folder list) → Tap name of list view to change to

- List view switches.

## Thread list

---

Sent and received S! Mail/SMS is displayed sorted by recipient. When viewing messages exchanged with Yamamoto-san, messages are displayed as a conversation with Yamamoto-san within a single thread.

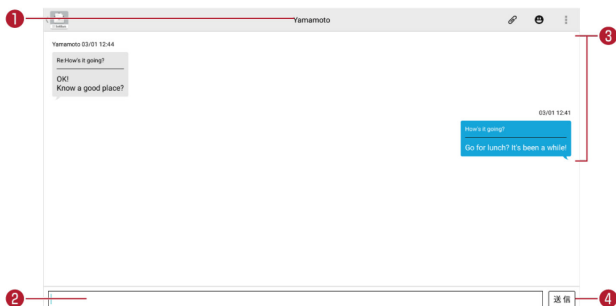

**1** Thread with mailing contact

**2** Message text entry field

**3** Exchanged message content

**4** Send S! Mail/SMS



## Folder list

---

Messages are sorted and saved in folders such as Inbox and Sent Box.

## Sending S! Mail/SMS

**i** Note

- When  is Tapped while creating S! Mail or SMS, the message is saved as a draft.
- Drafts are saved to Draft Box in folder list, and are indicated as  in thread list. Open an S! Mail/SMS draft to edit and send it.

## Sending S! Mail/SMS




---

**1** In Home Screen, Mail → 


**2** 

- Alternatively, enter phone numbers or email addresses in To field directly.

**3** Phonebook, Outgoing History, Incoming History, or Mail Group → Select recipients → OK

- Tap Phonebook, Outgoing History, or Incoming History to select recipients from Phonebook, Outgoing History, or Incoming History.
- Tap Mail Group to select a mail group and set all the members on the list as recipients.
- After setting recipients, Tap  to check recipients' phone numbers/email addresses or set them to Cc/Bcc.
- Message is sent as S! Mail when recipients in Cc/Bcc are specified.
- To delete a recipient, Tap  and then .

**4** Tap Subject/Compose email fields → Enter subject/text

- Tap  to attach a file. For details, see "Attaching files" (→P.35).
- Message is sent as S! Mail when a subject is entered or file is attached.

## 5 Send

- S! Mail/SMS is sent.
- Failed S! Mail/SMS messages are saved as drafts.

# Sending decorate mail by S! Mail

## Using a template

---

Choose from a variety of designs to decorate mail.

**1** In Home Screen, Mail →  → Tap text field →  → Template → Flick left/right to select template

**2** SELECT

**3** Enter recipients → Enter subject → Enter text

**4** Send

- Decorate mail is sent.

## Decorating S! Mail

---

**1** While entering message text, 

- Message is ready to be decorated.

**2** Tap decorating method → Follow onscreen prompts

- Decorate while entering message text.

# Opening & replying to S! Mail/SMS

Tablet receives S! Mail/SMS messages automatically by default. Optionally, retrieve messages manually, and also retrieve all messages stored on the server.

## Opening new S! Mail/SMS

---

When message arrives, new message notice and Notification Icon appear.

### 1 Tap notification

- S! Mail/SMS message window opens.
- To open new message from Notification Icon, Drag Notification Bar down for Notifications Window, then Tap corresponding notification.
- For two or more new messages, thread list opens.

### Note

- Set spam filtering to save messages from senders not in Contacts to spam mail thread.  
New mail notification does not appear. To check messages saved to spam mail thread:

### 1 In Home Screen, Mail → → Spam mail

- If confirmation appears, follow onscreen instructions.

## Retrieving S! Mail/SMS manually

---

### 1 In Home Screen, Mail →

- Mail is received.

## Retrieving server mail

---

### 1 In Home Screen, Mail → → Handle Server Mail

### 2 Receive whole content for all server mails or Receive subject and sender for all server mails

- Server mail is received.

## Replying to S! Mail/SMS

---

### 1 In S! Mail/SMS message window, or

### 2 Enter text

### 3 Send

- Message is sent.

## Forwarding S! Mail/SMS

---

### 1 In S! Mail/SMS message window,

### 2 Enter recipients → Enter text

### 3 Send

- Message is forwarded.

## Managing S! Mail/SMS


### Viewing S! Mail/SMS

---

### 1 In Home Screen, Mail

- Thread list opens.

### 2 Tap thread

- Thread details open.
- To view message drafts and unsent messages, Tap thread indicated with  for the thread details with the draft/unsent S! Mail/SMS draft or message.

### 3 Tap message

- S! Mail/SMS message window opens.

### Note

- Add widgets to check message information in Home Screen. Widgets are available in "easy mode" and "detailed mode" versions. Check number of unread messages with easy mode widgets. Check date/time and preview of messages in addition to number of unread messages with detailed mode widgets. Content of latest message appears if all messages are read.

### Deleting all server mail

**1** In thread list,  → Handle Server Mail → Delete all mails → Delete

#### Checking available storage on mail server

**1** In thread list,  → Handle Server Mail → Check storage space

#### Protecting messages

**1** In thread details, Touch & Hold message to protect → Lock Message

- To unprotect message, Tap Lock Message again.

#### Saving attachments

**1** In S! Mail/SMS message window,  → Select attachment → Save

#### Deleting a thread in thread list

**1** In thread list, Touch & Hold thread →  → Delete

- To select several threads, Touch & Hold first thread then Tap other threads.

#### Deleting a message in thread details

**1** In thread details, Touch & Hold message →  → Delete

#### Reporting spam in S! Mail/SMS message window

**1** In S! Mail/SMS message window,  → Declare Spam → Yes

#### Listing sender and recipient addresses in thread details


**1** In thread details,  → List Address

#### Listing sender and recipient addresses in S! Mail/SMS message window






**1** In S! Mail/SMS message window, 
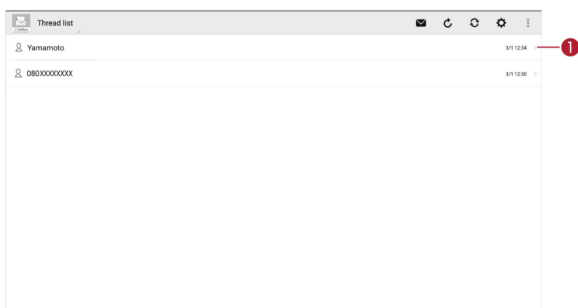
## Thread list

---




- ① Sender, date & time sent/received/saved, etc.

Icon	Description
	Unread messages
	Draft
	Sending scheduled
	Registering auto resend
	Send failure





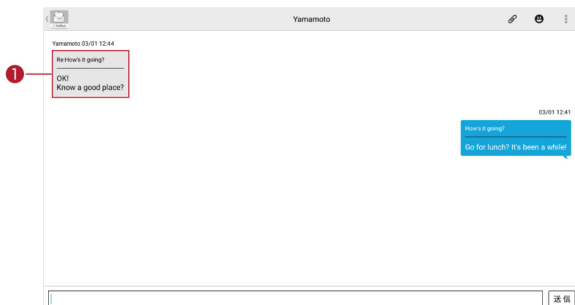 



## Thread details

---









- 1 Sender, subject, text, date & time sent/received/saved, etc.

Icon	Description
	Delivery report
	High importance
	Low importance
	Protected
	Sending scheduled
	Send failure
	Registering auto resend
	Draft
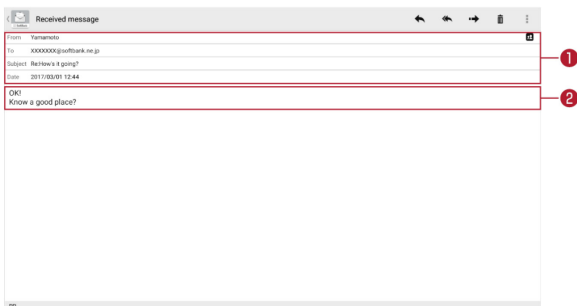
## S! Mail/SMS message window



- 1 Sender, recipients, subject, date & time sent/received/saved, etc.
- 2 Text



Icon	Description
	Sender/recipients list. Tap for list of addresses included in sender/recipient fields.
	Delivery report. Tap for report. Appears for sent messages.
	Attachment. Tap to save attachment.

## Backing up S! Mail/SMS data

---

Back up message data on tablet to microSD Card.



- Back up messages saved on tablet. Data for all messages must be backed up together at the same time.

- 1** In Home Screen, Mail → ⚙️
- 2** Common Settings → Mail Save&Load → Backup/Restore
- 3** Backup(S!Mail Specific) → OK
- 4** OK → Airplane mode (  ) → ◀
  - Backup starts.
- 5** OK → Airplane mode (  ) → ◀
  - Messages are backed up.

## Restoring S! Mail/SMS data

---

Restore message data backed up to microSD Card to tablet.

- 1** In Home Screen, Mail → ⚙️
- 2** Common Settings → Mail Save&Load → Backup/Restore
- 3** Restore(S!Mail Specific) → OK
- 4** OK → Airplane mode (  ) → ◀
- 5** Tap files → OK
  - Restore starts.
- 6** OK → Airplane mode (  ) → ◀
  - Messages are restored.

## Moving S! Mail/SMS data (export)

---

Export message data on tablet in vMessage format to microSD Card. vMessage format is compatible with other smartphones and SoftBank mobile phones (3G).

- Export either received message data, sent message data, or drafts/unsent message data saved on tablet all together. Data for all messages must be saved together at the same time.

**1 In Home Screen, Mail** → ⚙️

**2 Common Settings** → **Mail Save&Load** → **Export/Import**

**3 Export(vMessage)** → **OK**

- If download confirmation and terms of agreement appear, follow onscreen prompts.

**4 Select message category** → **実行(OK)**

- Export starts.

**5 OK**

- Data is exported.

#### **Note**

- Exported message data is saved to the locations below.
  - Received message data: /sdcard/private/MYFOLDER/Mail/Inbox/Inbox.BCK
  - Sent message data: /sdcard/private/MYFOLDER/Mail/Sent Messages/Sent Messages.BCK
  - Draft/unsent message data: /sdcard/private/MYFOLDER/Mail/Drafts/Drafts.BCK
- Filenames of exported data are formatted as the year, month, and date saved to microSD Card. For example, message data saved on March 1st, 2017 is formatted as "17030100.vmg." Several files saved on the same day are formatted starting as "17030101.vmg," with the last two digits increasing sequentially. If tablet clock is unset, formatting appears as "XXXXXX.vmg."

## **Moving S! Mail/SMS data (import)**

---

Import message data exported to microSD Card or other media in vMessage format to tablet.

- To import data from a previously used mobile phone, etc., first save the data you want to import to microSD Card or other media.

**1 In Home Screen, Mail** → ⚙️

**2** Common Settings → Mail Save&Load → Export/Import

**3** Import(vMessage) → OK

**4** Select message category → OK

**5** OK → Airplane mode (  ) → ◀

**6** Select files → OK

- Import starts.

**7** OK → Airplane mode (  ) → ◀

- Data is imported.

### Note

- Imported message data is saved to the locations below.
  - Received message data: /sdcard/private/MYFOLDER/Mail/Inbox/Inbox.BCK
  - Sent message data: /sdcard/private/MYFOLDER/Mail/Sent Messages/Sent Messages.BCK
  - Draft/unsent message data: /sdcard/private/MYFOLDER/Mail/Drafts/Drafts.BCK
- This application also imports messages for which privacy settings, such as secret mode, were configured on a previous mobile phone. Imported data can be viewed.
- Message data that was encrypted and backed up on a previous mobile phone cannot be imported with this application.

## Operations when creating S! Mail/SMS

Use these functions when sending, replying to, or forwarding messages.

### Attaching files

---

**1** While creating S! Mail, 

**2** Tap file type → Follow onscreen prompts

- File is attached.

## Specifying date/time to send

---

Create a message to be sent automatically at a specific time.

**1** After entering recipients/subject/message text,  → **Sending Reservation**

**2** Specify date to send on → **Set**

**3** Specify time to send at → **Set** → **OK**


- Message is saved as a draft, and automatically sent at the specified time on the specified date.

## Entering emoji pictograms

---

**1** While entering subject/message text, 

**2** Tap emoji

- Emoji is entered.
- Tap My PIC while entering message text to select My pictograms.
- Tap  on the My pictogram tab to select My pictograms saved to microSD Card.

## Previewing before sending

---

Check how created S! Mail/SMS will be viewed.

**1** While creating S! Mail/SMS,  → **Preview**

- Preview opens.

## Setting priority levels

---



**1** While creating S! Mail,  → **Set priority**

**2** Tap priority level → **OK**

- Priority level is set.

## Requesting delivery reports


---

- 1 While creating S! Mail/SMS,  → Delivery reports
- 2 Request a delivery report for this message you send () → OK
  - Requesting of delivery reports is set.

## Discarding a message draft

---

Discard a message that is being created without saving it as a draft.

- 1 While creating S! Mail/SMS,  → Delete
- 2 Delete
  - Mail draft is discarded.

## S! Mail/SMS settings

Make settings for S! Mail/SMS

## Common Settings

---

Settable items are the following.

Item	Description
Message Notice	Show popup for new messages.
Sound/Vibration	Set ringtone, vibration, incoming lamp, etc. for new messages.
Thread Mode	Show all messages in conversation threads.
Color Style Setting	Change the screen design.
Font Size options	Change the font size.
SMS/S!Mail Automatic Switching	Set messages to switch automatically between S! Mail/SMS when sending.

Save to Draft Box automatically	Set messages to be automatically saved as drafts if left uncompleted.
Show Subject Field	Show subject field in thread list.
Double enlarge image	Automatically enlarge small images.
My Pictogram Setting	Change sort order of or delete My Pictograms.
Decore Picture Setting	Change sort order of or delete decore mail pictures.
Advertisement Display Setting	Set advertisements to be shown in S! Mail/SMS message window.
Mail Save&Load	Back up/restore message data or export/import message data in vMessage format. vMessage format is compatible with other smartphones and SoftBank mobile phones (3G).
Spam mail folder	Enable sorting of messages from senders not in Contacts to Spam Box.
Initialization	Return message settings to defaults.
Advanced Settings	Enable old messages to be automatically deleted and set number of messages that can be saved. Check used space on microSD Card and in internal storage.

**1** In Home Screen, Mail → 

**2** Common Settings → Set each item

- Settings are made.

## Send/Receive Settings

---

Settable items are the following.

Item	Description
------	-------------

Receive Settings	Make S! Mail/SMS receive settings. Set what portions of S! Mail/SMS to first retrieve, and whether to automatically check new messages when activating mail.
Send Settings	Make S! Mail/SMS send settings. Set whether to quote a message when replying to S! Mail, whether to request delivery reports for sent S! Mail/SMS messages, and whether to show confirmations.
Wi-Fi Connection	Make S! Mail settings for Wi-Fi connections.
SMS Send/Receive Settings	Set the application used for sending/receiving SMS.
Display Progress	Set whether to send and receive messages in the background.

**1** In Home Screen, Mail → ⚙️

**2** Send/Receive Settings → Set each item

- Settings are made.

## Mail Group Settings

---

**1** In Home Screen, Mail → ⚙️

**2** Mail Group Settings

- Mail group setting window opens.

### Adding a mail group

**1** In mail group setting window, Add Mail Group → Enter group name → OK

- Tap Emoji to enter emoji.

### Adding members to a group

**1** In mail group setting window, Tap group → Add Group Member → Phonebook, Outgoing History, Incoming History, or Direct Input → Enter/select contact → OK



### Editing a group name

- 1 In mail group setting window, Touch & Hold group → Edit group name → OK
  - Tap Emoji to enter emoji

### Deleting a group

- 1 In mail group setting window, Tap ✕ next to group → Delete

### Deleting members

- 1 In mail group setting window, Tap group → Tap ✕ next to member → Delete

## Number/Address Settings

---

Settable and viewable items are the following:




Item	Description
Phone Number	View phone number.
Mail Address	View mail address.
Change Mail Address	Navigate to My SoftBank to change mail address, etc.

- 1 In Home Screen, Mail → ⚙️
- 2 Number/Address Settings → Set each item
  - Settings are made.

# 8 Multimedia

## Taking an all-focus photo

Change the focal point of a photo after it's been taken in all-focus mode.

- 1 In Home Screen, Tools → Camera**
- 2 ☰ → All-focus**
  - Camera switches to all-focus mode.
- 3 ●**
  - Take a photo.
- 4 In Home Screen, Tools → Gallery → Select photo taken in all-focus mode**
  -  indicates photos taken in all-focus mode.
- 5 **
  - Tablet enters all-focus editing mode.
- 6 Touch area of photo to change the focal point to**
- 7 **
  - Photo is saved.

## Taking a panoramic photo

Capture panoramic shots even without a wide-angle lens.

- 1 In Home Screen, Tools → Camera**
- 2 ☰ → Panorama**
  - Panorama Viewfinder opens.
- 3 Tap ● to start capture → Pan tablet slowly**
- 4 ●**
  - Capture is completed.
  - Capture also completes automatically when capture limit is reached.
  - After capture is completed, tablet then creates panorama.


# Importing photos

Use a USB OTG cable (sold separately) to import photos to tablet from a camera or other device (USB flash drive, smartphone, etc.).

## **i** Note

- Before purchasing a USB OTG cable (sold separately), contact a SoftBank-designated manufacturer or the manufacturer of the device.

## **1** Use USB OTG cable (sold separately) to connect device to tablet

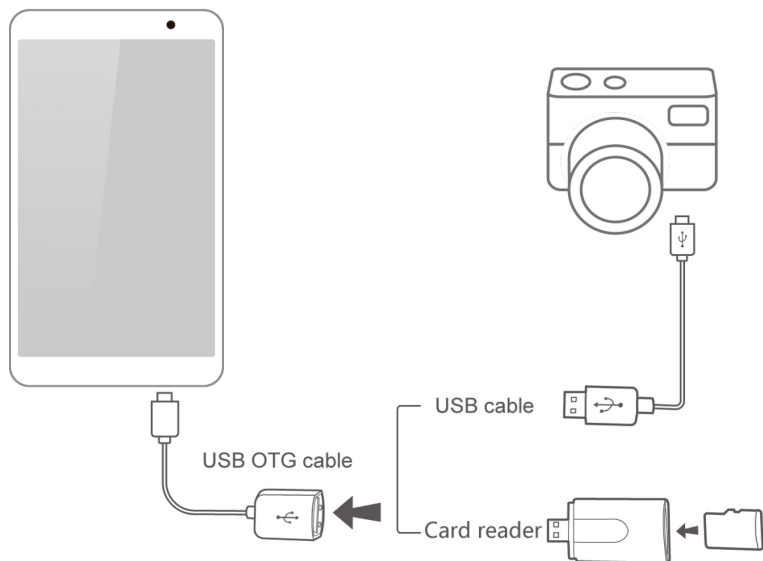

## **2** In Home Screen, Tools → Gallery

## **3** Touch & Hold photos to import

- To select several photos, Touch & Hold first photo then select other photos.

## **4** Move

## **5** Tap where to save file

## Viewing photos & videos

Use Gallery to view photos and videos. This application automatically searches for and sorts photos and videos saved in internal storage or microSD Card for easy browsing.



**1** In Home Screen, Tools → Gallery

**2** Tap photo or video

- Image appears in full-screen mode.
- Flick left/right for previous or next file.

### Note

- Pinch/Spread image to zoom in/out.
- Use the following while viewing photos and movies.

Icon	Description
 (Share)	Share photos and videos
 (Favorites)	Save photos and videos as favorites
 (Delete)	Delete photos and videos
 (Edit)	Edit opened photo
 (Menu)	Open menu for other options

## Sharing photos & videos

Use Bluetooth<sup>®</sup>, email, etc. to share photos and videos.

**1** In Home Screen, Tools → Gallery

**2** Touch & Hold photo or video → Share → Tap application → Follow onscreen prompts

## Scanning a QR code using Camera

**1** In Home Screen, Tools → Camera

**2** Fit QR code in viewfinder guides

**3** After QR code is successfully scanned, View details

## Scanning a QR code using Gallery

- 1** In Home Screen, Tools → Gallery
- 2** Select a QR code photo
- 3** Tap QR code
- 4** View details

# 9 Customizing

Change the Wallpaper in Home Screen, widget settings, and notification tone.

## Changing Wallpaper

Several wallpapers are available on tablet for easily changing to.

**1 In Home Screen, Settings → Display → Wallpaper**

**2 Follow onscreen prompts**

- Wallpaper is changed.

## Adding Widgets to Home Screen

Add calendar, bookmark, and other widgets to Home Screen.

**1 Touch & Hold open area of Home Screen**


- Option menu for Home Screen opens.

**2 Widgets**

- Widget edit window opens.

**3 Drag widget to location**

- Widget is added to Home Screen.

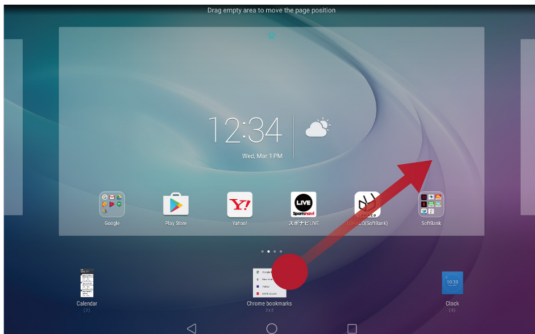

## Managing Home Screen Pages

### 1 Touch & Hold open area of Home Screen

- Option menu for Home Screen opens.

### 2 Flick left/right several times

### 3 +

- Home Screen page is added.

### Note

- In thumbnails edit window, Tap **X** to delete Home Screen page.

### Moving a Home Screen page

### 1 In thumbnails edit window, Touch & Hold a Home Screen page → Drag to location

## Changing notification tones

### 1 In Home Screen, Settings → Sound

### 2 Default notification tone → Tap tone → ✓

- Notification tone is changed.

## Changing font sizes

### 1 In Home Screen, Settings → Display


### 2 Font size → Tap size

- Font size is set.

## Adjusting Display brightness

### 1 In Home Screen, Settings → Display

### 2 Brightness → Drag slider left/right to adjust → OK

· Tap Automatic brightness to set brightness automatically based on surrounding brightness ()




# 10 File Sharing

## Sharing files with Wi-Fi Direct

Use a Wi-Fi network to connect with wireless devices. Once connected, files can be quickly shared.

### 1 In Home Screen, Settings → Wi-Fi → Wi-Fi ( )

- Wi-Fi is enabled.
- Tap Wi-Fi again to disable Wi-Fi (  ).

### 2 Wi-Fi Direct

- Wi-Fi Direct settings open.
- Only either Wi-Fi Direct or Wi-Fi can be used at any one time.

### 3 Tap device to connect

### 4 Permit connection on other device

- Devices are connected.

### 5 Transfer data from other device

- Data is received.

#### Sending data

### 1 Set the application to send by Wi-Fi Direct → Tap other device receiving data


- Files can be shared without pairing the other device if it is on the same network and has Wi-Fi Direct enabled.

#### Ending Wi-Fi Direct connection

### 1 In Wi-Fi Direct settings, Tap connected device → OK

## Sharing files with Bluetooth®

### 1 In Home Screen, Settings → Bluetooth → Turn on Bluetooth ( )

- Bluetooth® is enabled.
- Tap Turn on Bluetooth again to disable Bluetooth® (  ).
- Found Bluetooth® devices appear in Available devices.

## 2 Tap device to pair/connect

## 3 Follow onscreen prompts

- Name of paired/connected Bluetooth® device appears in Paired devices.
- If necessary, enter Bluetooth® passkey (authentication code). The same Bluetooth® passkey must be entered on any two devices exchanging data.

See the device user guide for the Bluetooth® passkey.

## 4 Send data from other device → Accept

- Data is received.

### Sending data

## 1 Set the application to send by Bluetooth® → Tap other device receiving data

- Available when connected to Bluetooth®-compatible device.


### Unpairing devices

## 1 In Bluetooth® settings, Tap ⓘ of paired device → Unpair

# Copying files from a computer

Use Micro USB Cable (sold separately) to connect tablet with a computer. Follow onscreen prompts to select a connection method for sharing files.

Connection mode	Function	Steps
Media device (MTP)	View and manage files in internal storage and microSD Card from a computer.	Click new drive name appearing on computer. Transfer files between internal storage or microSD Card and computer.

	View and manage multimedia files in internal storage and microSD Card from a computer using Windows Media Player 11 or later.	Activate Windows Media Player on computer. Follow onscreen prompts on tablet to transfer multimedia files between internal storage or microSD Card and computer.
USB flash drive	View and manage files saved on microSD Card from a computer.   <b>Note</b> <ul style="list-style-type: none"> <li>● Available when microSD Card is installed in tablet.</li> </ul>	Click new drive name appearing on computer. Transfer files between microSD Card and computer.

# 11 Settings

## Setting screen timeout

Set a screen timeout so tablet automatically turns off Display to save power.

- 1 In Home Screen, **Settings** → **Display** → **Sleep**
- 2 Select timeout period

## Setting a screen lock

- 1 In Home Screen, **Settings** → **Screen lock & passwords**
- 2 Follow onscreen prompts

With a screen lock set, if tablet is idle for a certain period of time, it automatically locks its screen. Alternatively, press Power Key to lock the screen.

## Adjusting volume

Set volumes for notifications, ringtone, and media.

- 1 In Home Screen, **Settings** → **Sound** → **Volume**
- 2 Drag sliders left/right to adjust volumes

Alternatively, use Volume Key to adjust the volume of running applications.

## Enabling power saving mode

- 1 In Home Screen, **Settings** → **Battery manager** → **Power plan**
- 2 Select a power saving mode

## Checking memory status

Before moving a large file to tablet's internal storage or microSD Card, check available storage space.

- 1 In Home Screen, **Settings** → **About tablet**
- 2 View Internal storage memory information

## Setting date and time manually

- 1 In Home Screen, **Settings** → **Advanced settings** → **Date & time**
- 2 Automatic date & time (  )
- 3 Follow onscreen prompts

### Note

- If tablet is set to automatically update the date and time, it updates them according to the time zone, and they cannot be changed manually.

## Formatting microSD Card

### Note

- Back up important data before you format microSD Card.

- 1 In Home Screen, **Settings** → **Advanced settings**
- 2 **Memory & storage** → **SD card** → **Format** → **Erase & format** → **Done**

## Initializing data

### Caution

Restoring tablet to its factory settings erases all personal data, including information about your accounts, your system and application settings, and your installed applications. Before restoring factory settings, back up important data on tablet.

- 1 In Home Screen, **Settings** → **Advanced settings** → **Backup & reset**

- 2 Factory data reset → Reset tablet → Reset tablet

## Updating software

### Caution

Updating tablet may erase all data in it. Back up important data before updating tablet.

- 1 In Home Screen, Settings → Updater
- 2 Follow onscreen prompts

## Disabling automatic data communication/sync settings

How to minimize packets occurring with automatic data communication is described here (how to disable the setting).

### Disabling location information

---

- 1 In Home Screen, Settings → Advanced settings → Location access → Access my location ()

### Disabling background data

---

- 1 In Home Screen, Settings → Data traffic management → Mobile network settings → Enable always-on mobile data ()

### Disabling automatic syncing

---

- 1 In Home Screen, Settings → Accounts → Tap account type → Tap account to sync → Tap each item ()

## Disabling packet communication abroad

---

- 1 In Home Screen, Settings → Data traffic management → Mobile network settings  
→ Data roaming ()

# 12 Personal Information and Data Security

Several measures are recommended to help you protect personal and confidential information.

- Place device in a safe area to prevent unauthorized use.
- Lock device screen with a password or unlock pattern to prevent unauthorized use.
- Periodically back up personal information to microSD Card or other device memory. If changing to a different device, be sure to move or delete any personal information on the old device.
- If there is a worry about viruses when receiving a message or email from an unidentified sender, delete them without opening them.
- If using tablet to browse the Internet, avoid websites that might pose a security risk to avoid theft of personal information.
- If using services such as Wi-Fi or Bluetooth<sup>®</sup>, set passwords for these services to prevent unauthorized access. When these services are not in use, turn them off.



# 13 Legal Notice

**Copyright © Huawei Technologies Co., Ltd. All rights reserved.**

No part of this manual may be reproduced or transmitted in any form or by any means without prior written consent of Huawei Technologies Co., Ltd. and its affiliates ("Huawei"). The product described in this manual may include copyrighted software of Huawei and possible licensors. Customers shall not in any manner reproduce, distribute, modify, decompile, disassemble, decrypt, extract, reverse engineer, lease, assign, or sublicense the said software, unless such restrictions are prohibited by applicable laws or such actions are approved by respective copyright holders.

## **Trademarks and Permissions**

SoftBank and the SoftBank names and logos are registered trademarks or trademarks of SoftBank Group Corp. in Japan and other countries.

S! Mail and TokuHodai are registered trademarks or trademarks of SoftBank Corp.

Internet SagiWall is a trademark or registered trademark of BBSS Corporation.

Intel and the Intel and McAfee logos are trademarks of Intel Corporation or McAfee in the US and other countries.

Yahoo! and the Yahoo! and Y! logo marks are registered trademarks or trademarks of Yahoo! Inc. in the US.



**HUAWEI, HUAWEI,** and



are trademarks or registered trademarks of Huawei Technologies Co., Ltd.

Android™ is a trademark of Google Inc.

LTE is a trademark of ETSI.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Huawei Technologies Co., Ltd. is under license.

"Google," the "Google" logo, "Android," the "Android" logo, "Google Play," the "Google Play" logo, "Chrome," the "Chrome" logo, "Google+," "Gmail," "Google Calendar," "Google

Maps," "Google Talk," and "YouTube" are trademarks or registered trademarks of Google Inc. Other company names and products may be the trademarks of their respective owners. Other trademarks, products, services and company names mentioned may be the property of their respective owners.

### **Notice**

Some features of the product and its accessories described herein rely on the software installed, capacities and settings of local network, and therefore may not be activated or may be limited by local network operators or network service providers.

Thus, the descriptions herein may not exactly match the product or its accessories which you purchase.

Huawei reserves the right to change or modify any information or specifications contained in this manual without prior notice and without any liability.

### **Import and Export Regulations**

Customers shall comply with all applicable export or import laws and regulations and be responsible to obtain all necessary governmental permits and licenses in order to export, re-export or import the product mentioned in this manual including the software and technical data therein.

# 14 Specifications

## Tablet

Item	Description
Dimensions (W×H×D)	Approx. 259.1 × 156.4 × 8.5 mm
Weight	Approx. 486 g (incl. internal battery)
Maximum output	0.2 W (3G) 0.2 W (4G)
Internal battery capacity	6500 mAh
Continuous standby time <sup>1</sup>	Approx. 610 hours (3G) Approx. 632 hours (4G)
Charging time <sup>2</sup>	AC Charger (Micro USB 1.8A) [ZTDAD1]: Approx. 255 minutes AC Charger (Micro USB 1.0A) [ZTDAC1]: Approx. 410 minutes (AC Charger [SB-AC12-HDQC/WH] <sup>3</sup> ): Approx. 250 minutes) (AC Charger [SB-AC13-HDMU/WH] <sup>4</sup> ): Approx. 432 minutes)
Transmission speed <sup>5</sup>	SoftBank 4G LTE: downlink max.350 Mbps <sup>6</sup> / uplink max. 37.5 Mbps SoftBank 4G: downlink max. 214 Mbps <sup>7</sup> / uplink max. 10 Mbps SoftBank 3G: downlink max. 21 Mbps / uplink max. 5.7 Mbps

1 Average measured with tablet fully charged, without calls or operations, in strong signal conditions at rest, and with data communication and Urgent News disabled. May vary with battery strength, ambient temperature, settings, etc.

- 2 Time measured while charging with AC Charger and tablet powered off.
- 3 SoftBank SELECTION AC Charger for smartphones with Qualcomm® Quick Charge™ 2.0 capability [SB-AC12-HDQC/WH]
- 4 SoftBank SELECTION Micro USB recharging AC Charger 1.0A for smartphones [SB-AC13-HDMU]
- 5 Provided on a best-effort basis. Data speed may be lower or communication may not be possible due to network congestion or the communication environment.
- 6 To be introduced starting in some areas of Tokyo, Nagoya, and Osaka. Depending on area, maximum downlink speed 262.5 Mbps to 75 Mbps or lower.
- 7 Provided in some major cities nationwide. Depending on area, maximum downlink speed 165 Mbps to 110 Mbps or lower.

 **Note**

- Voice calling not supported.

# 15 Warranty & After-Sales Service

## Warranty

Tablet purchase includes warranty.

- Check shop name and purchase date.
- Read warranty and keep in a safe place.
- Warranty period is given in warranty.
- SoftBank Corp. is not responsible for any damages for user or third party resulting from lost opportunities to make a call, etc. due to breakage, malfunction, or trouble of product.
- Information/settings on tablet may be lost/changed due to malfunction or repairs. It is recommended that you keep a copy of contacts and other important information. SoftBank Corp. is not responsible for loss/change of data (contacts, music, photos, videos, etc.) or settings due to malfunction, repairs, change of model, or any other handling.
- Disassembly/modification of tablet is prohibited under the Radio Law. Note that tablet cannot be accepted for repairs if modified.

## After-sales service

To request repairs, contact Customer Service (→P. 61) or a nearby SoftBank Shop. Have details of symptoms ready.

- During the warranty period, repairs are made under the terms and conditions of the warranty.
- After the warranty period, if tablet can be repaired, repairs will be made at cost.
- For more information on after-sales service, contact a nearby SoftBank Shop or Customer Service (→P. 61).

# 16 Customer Service

For SoftBank tablet or service information, call General Information. For repairs, call Customer Assistance.

## SoftBank Customer Support

### General Information

From a SoftBank handset, dial toll free at 157

From a landline/IP phone, dial toll free at ☎ 0800-919-0157

### Customer Assistance (Repairs/Lost Tablets)

From a SoftBank handset, dial toll free at 113

From a landline/IP phone, dial toll free at ☎ 0800-919-0113

If you cannot reach a toll free number, use the number (charges apply) below for your service area:

Hokkaido Area, Tohoku Area, Hokuriku Area, Kanto & Koshinetsu Area	022-380-4380
Kansai Area	06-7669-0180
Chugoku Area, Shikoku Area, Kyushu & Okinawa Area	092-687-0010

## Smartphone Technical Support Center

For tablet operation assistance

From a SoftBank handset, dial toll free at 151

From a landline/IP phone, dial toll free at ☎ 0800-1700-151

## SoftBank Global Call Center

From outside Japan, dial +81-92-687-0025 (toll free from SoftBank handsets)

If tablet is lost/stolen, call this number immediately (international charges apply)

THIS DOCUMENT IS FOR INFORMATION PURPOSE ONLY, AND DOES NOT  
CONSTITUTE ANY KIND OF WARRANTIES.

1st edition, published by SoftBank Corp., March 2017

Manufacturer: Huawei Technologies Co., Ltd.