

Simply

User Guide

Introduction

Thank you for purchasing "Simply."

- Before using Simply, carefully read "クイックスタート (Quick Start) (Japanese)", "Safety Precautions" and "User Guide (This guide)" for proper use.
- Depending on the contents of contract, available services are limited.

Simply supports 4G LTE/3G system.

Precautions

- Keep this guide in a safe place.
- In case of loss or damage of this guide, contact Inquiries (P.11-25).
- Handset operations are mainly described in this guide.
- Keep accessories including warranty in a safe place.

Sections of This Guide

User Guide Contents on the right are mainly described in each section.

Preparation and basic knowledge are collectively described to use handset. Be sure to read them.

Getting Started/Basic Knowledge 1

Operations in common are collectively described to use handset. Be sure to read them.

Operations in Common 2

Typical phone functions are collectively described.

Phone 3

Typical mail functions are collectively described.

Mail 4

Browser display and operations are described.

Browser 5

Useful camera functions are described.

Camera 6

Useful handset functions are described.

Useful Functions 7

Handset security is described.

Security 8

Management of data that is saved to handset is described.

Data Folder 9

Handset sound, display and settings for network, etc. are described.

Customize 10

Material, various information, index, etc. about handset are summarized.

Materials/Appendix 11

Descriptions in This Guide

Notations of Operating Instructions

- Simple key illustrations represent key operations.
- "Long Press" means pressing a key for at least 1 second.





Screenshots & Illustrations



Screenshots and illustrations in this guide are images and may differ in appearance with actual display and product.

Other Notations

- "Simply" is referred to as "handset."
- "microSD™ Card", "microSDHC™ Card" is referred to as "SD Card."









Key Operations and Notations

- 1 In Standby,  →  ①
Profile screen appears. ②
- 2  (Menu) → "Edit" → Select an item
→  (Edit) ③
④

- ① Indicate a key to operate.
- ② Indicate a screen after the operation is completed, operation, etc.
- ③ Indicate the operation of selecting a menu item or screen display with  and pressing .
- ④ Indicate the process of going to the next operation.



INFORMATION

- Content at the bottom of the screen that can be operated by pressing  /  is indicated in parentheses, such as  (Back). However,  (Check) /  (Done) /  (Decide) /  (Confirm) are abbreviated as  only.

Contents

Descriptions in This Guide.....	ii
Contents.....	iii
Package Contents.....	v

1 Getting Started/Basic Knowledge

Handset Parts.....	1-2
Key Operations in Standby.....	1-4
Handling USIM Card.....	1-5
Handling SD Card.....	1-7
Handling Battery and Charger.....	1-10
Powering On/Off.....	1-14
Basic Display.....	1-15
Manner.....	1-18
Airplane Mode.....	1-20
Security Codes.....	1-20
PIN Code.....	1-21

2 Operations in Common

Operations in Common.....	2-2
Text Entry.....	2-4
How to Enter Text.....	2-5
Editing Text.....	2-10
User Dictionary.....	2-11
Text Entry Settings.....	2-12
Phone Book.....	2-13
Screenshot.....	2-19

3 Phone

Making Calls.....	3-2
Answering Calls.....	3-6
VoLTE.....	3-7
Operations when too Busy to Answer a Call.....	3-8
Blocking Nuisance Calls.....	3-9
Call Log.....	3-12
Profile.....	3-14
Emergency Calls.....	3-16
Using Call Services.....	3-17

4 Mail

Mail Type.....	4-2
Mail Window.....	4-2
Changing Mail Address.....	4-5
Sending S!Mail/SMS.....	4-5
Receiving Mails.....	4-11
Managing/Using Mail.....	4-12
Urgent News.....	4-19
Other Functions.....	4-21

5 Browser

Before Using Browser.....	5-2
Using Browser.....	5-2
Operations While Using Browser.....	5-3
My SoftBank.....	5-4
Bookmark.....	5-5
Browsing History.....	5-5
Using Downloaded Data.....	5-6
Browser Settings.....	5-8

6 Camera

Precautions for Using Camera	6-2
Viewfinder	6-3
Photo Shooting	6-4
Movie Shooting	6-5
Checking Images/Videos	6-6

7 Useful Functions

Alarm	7-2
Timer	7-3
Stop Watch	7-4
Infrared	7-4
Disaster	7-6
Calendar	7-9
Notepad	7-11
Voice Recorder	7-12
Calculator	7-14
Converter	7-15
あんしんバックアップ (Anshin Backup)	7-16
Notification List	7-21
Application	7-22

8 Security

Handset Code	8-2
Security Functions	8-3

9 Data Folder

Data Folder	9-2
File Copy	9-5
Editing Files	9-5

10 Customize


Settings	10-2
Wallpaper/Display	10-2
Sound/Notification	10-4
Security	10-7
Call Settings	10-7
Network	10-8
Phone Settings	10-10
About Phone	10-12
All Reset	10-13
Encrypt Phone	10-13

11 Materials/Appendix


Software Update	11-2
Troubleshooting	11-3
Main Specification	11-5
Materials Used	11-5
Safety Precautions	11-6
Precautions on Usage	11-14
Specific Absorption Rate (SAR) for This Product (for Japan)	11-19
Index	11-20
Warranty & After-Sales Service	11-24
Inquiries	11-25

Package Contents

- Simply Main Unit

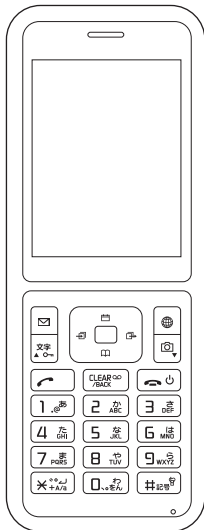

- Battery (SIBAF1)

 


- お願いとご注意 (Safety Precautions) (Japanese)
- クイックスタート (Quick Start) (Japanese)
- Warranty (Main Unit) (Japanese)

- For accessories/other separately-sold products, contact your nearest SoftBank shop or Inquiries (P.11-25).



Handset Parts	P.1-2	Basic Display	P.1-15
Softkeys	P.1-3	Standby	P.1-15
Key Operations in Standby	P.1-4	Checking Information.....	P.1-15
Handling USIM Card	P.1-5	Main Menu	P.1-16
Before Using USIM Card	P.1-5	Display Saving	P.1-16
Inserting/Removing USIM Card	P.1-6	Main Notification Icons/Status	P.1-17
SIM Unlocking	P.1-7	Manner	P.1-18
Handling SD Card	P.1-7	Setting Manner Mode/Drive Mode/Original Mode.....	P.1-18
Before Using SD Card.....	P.1-7	Airplane Mode	P.1-20
Inserting/Removing SD Card.....	P.1-8	Security Codes	P.1-20
Handling Battery and Charger	P.1-10	PIN Code	P.1-21
Before Using Battery and Charger.....	P.1-10	Enabling PIN Code	P.1-21
Installing/Removing Battery	P.1-11		
Charging with AC Adapter	P.1-13		
Powering On/Off	P.1-14		
Power On.....	P.1-14		
Turning the Power OFF.....	P.1-14		

Handset Parts

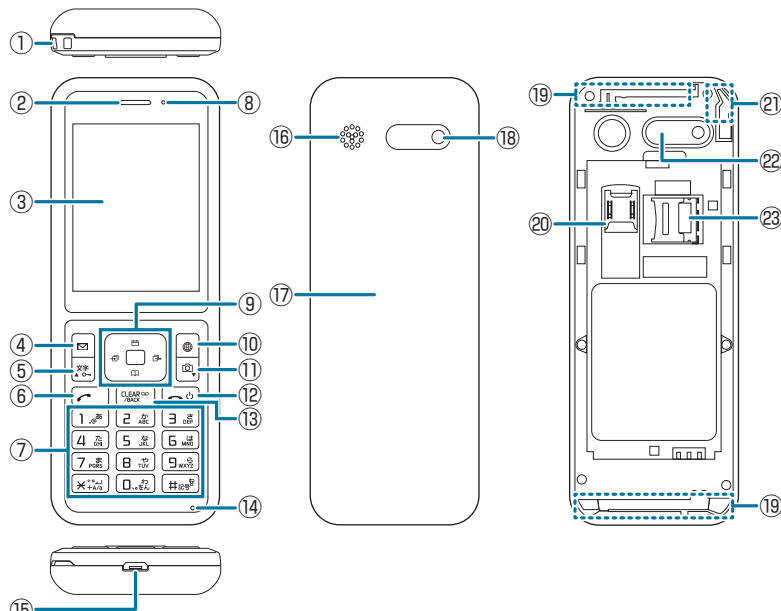

- ① Straphole
- ② Receiver
- ③ Display
- ④ Mail Key
- ⑤ Character Key
- ⑥ Call Key
- ⑦ Dial Keys
- ⑧ Notification LED
- ⑨ Up, Down, Left, Right Key/
Enter Key
- ⑩ Browser Key
- ⑪ Camera Key
- ⑫ Power/End Key
- ⑬ Clear/Back/
Answering Machine Setting
Key
- ⑭ Mouthpiece
- ⑮ External Connection Terminal
- ⑯ Speaker
- ⑰ Battery Cover
- ⑱ Camera
- ⑲ Internal Communications
Antennas
- ⑳ USIM Card Slot
- ㉑ GPS Antenna
- ㉒ Infrared Port
- ㉓ SD Card Slot


⚠ CAUTION

Internal Communications Antennas/GPS Antenna

- Do not cover over with stickers, or your hands, since sensitivity may be affected.


Softkeys

Corresponding key operations appear for softkeys.

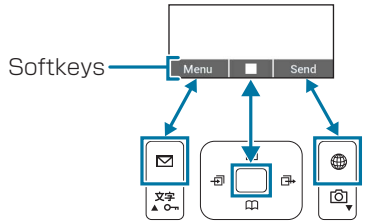

Notations for Pressing Keys

The notations are as follows in this guide.

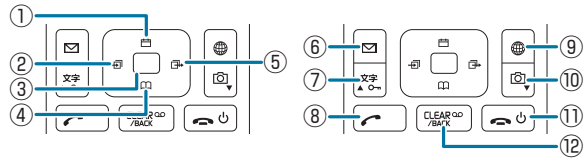


Key	Key Illustrations	Description
①		Press Up key.
②		Press Left key.
③		Press Enter key.
④		Press Down key.
⑤		Press Right key.
①④		Press Up or Down key.
②⑤		Press Left or Right key.
①②④⑤		Press Up, Down, Left or Right key.
⑥		Press Mail key.
⑦		Press Character key.
⑧		Press Call key.
⑨		Press Browser key.
⑩		Press Camera key.
⑪		Press Power/End key.
⑫		Press Clear/Back/Answering Machine Setting Key.




Key Operations in Standby

Press a key once in Standby to activate various functions such as creating S!Mail, viewing Call Log.

● Press Keys to

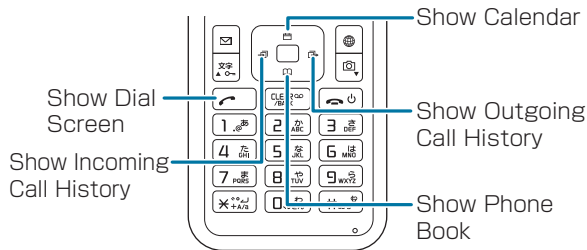

● Long Press Keys to

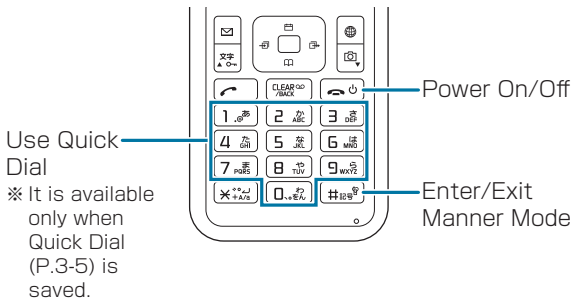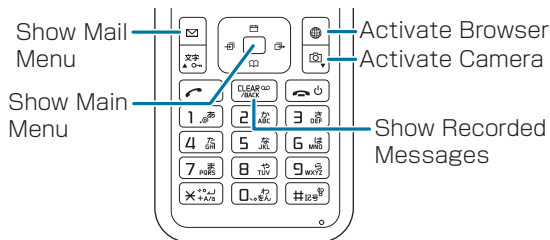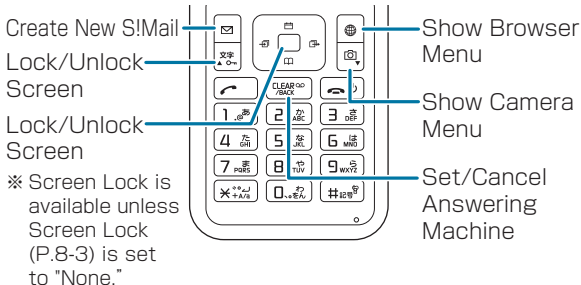

Handling USIM Card

USIM Card is an IC Card containing customer phone number, information, etc.

- For handling USIM Card, see the manual provided with USIM Card.

■ Before Using USIM Card

When using USIM Card, be careful of the following.

- Do not put labels, etc. on USIM Card. May cause malfunction.
- USIM Card will be reissued for a fee if lost or damaged.
- Clean USIM Card with a dry soft cloth.
- Keep the IC (metal) part clean.



USIM Card

- Do not touch IC (metal) part with hand or metal.
- If USIM Card/handset with USIM Card inserted is lost or stolen, always follow emergency procedures to suspend service.
For details, contact Inquiries.
- SoftBank Corp. is not liable for any damages arising from inserting USIM Card into IC Card readers, etc. of other third party devices.


- Keep a separate copy of data saved on USIM Card. SoftBank Corp. is not liable for any loss of data you have saved.
- USIM Card specifications and performance are subject to change without notice.
- Return USIM Card to SoftBank Corp. upon cancellation.
- USIM Card is the property of SoftBank Corp.
- The USIM Card returned from you is recycled for environmental preservation.

■ Inserting/Removing USIM Card

Always power off beforehand.

■ Inserting USIM Card


- 1** Open Battery Cover (P.1-11)
- 2** Removing Battery (P.1-13)
- 3** Note location of USIM Card notch, and slide USIM Card into USIM Card Slot in direction ① to install with the IC part facing down

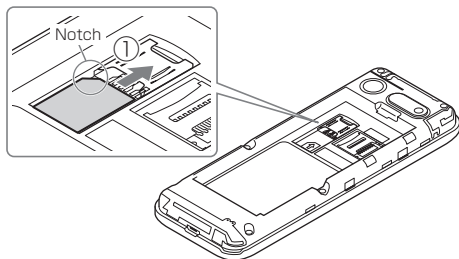

- 4** Installing Battery (P.1-12)
- 5** Attach Battery Cover (P.1-12)

■ Removing USIM Card

- 1** Open Battery Cover (P.1-11)
- 2** Removing Battery (P.1-13)
- 3** Press and hold the hook at ① with pad of finger and press the tip (②) of USIM Card out of SIM Card Slot and slide it in direction ③ to remove

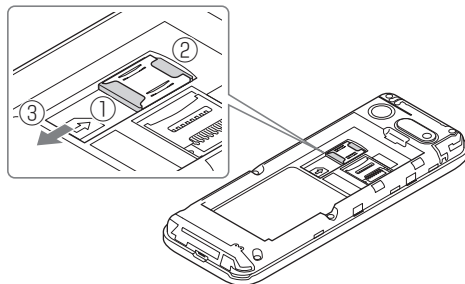

4 Installing Battery (P.1-12)

5 Attach Battery Cover (P.1-12)

SIM Unlocking

Handset supports SIM unlocking. After SIM-unlocking handset, other companies' SIM Cards can also be used on handset.

- When using another company SIM Card, available services and functions may be restricted. SoftBank Corp. makes no guarantees whatsoever regarding the proper operation of handset.
- For details on SIM unlocking, see SoftBank Website.

Handling SD Card

Like Data Folder in handset, data can be saved in SD Card.

- Handset supports microSD™ Cards up to 2GB and microSDHC™ Cards up to 32GB. (as of September 2017)
Note that not all operations are guaranteed.

Before Using SD Card

When using SD Card, be careful of the following.

- SD Card data may be lost or altered due to an accident or malfunction. Keep a copy of your data in a separate place. Note that SoftBank Corp. is not liable for any damages arising from lost/changed data.
- Do not insert or remove SD Card forcefully.
- Do not touch terminals with hand or metal.
- Do not remove Battery or power off handset while reading/writing data in SD Card.
- Be careful not to delete or overwrite data accidentally.

CAUTION



- Store or use SD Card out of reach of small children. Failure to do so may cause accidental swallow, leading to suffocation.

Inserting/Removing SD Card


Always power off beforehand.

Inserting SD Card


- 1 Open Battery Cover (P.1-11)
- 2 Removing Battery (P.1-13)
- 3 Press and hold SD Card Slot Cover with pad of finger and slide it in direction ① until it clicks unlocked. Lift SD Card Slot Cover in direction ②

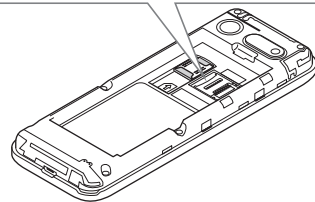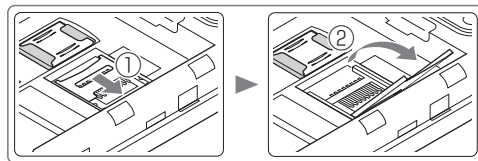

- 4 Note orientation and insert SD Card into SD Card Slot with the terminal part facing down

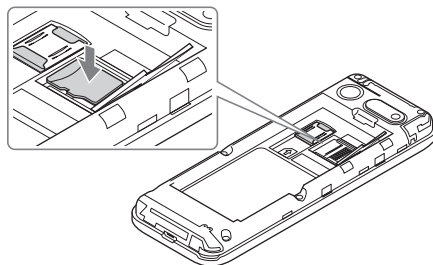

- 5** Lower SD Card Slot Cover in direction ① and press and hold it with pad of finger and slide it in direction ② until it clicks locked

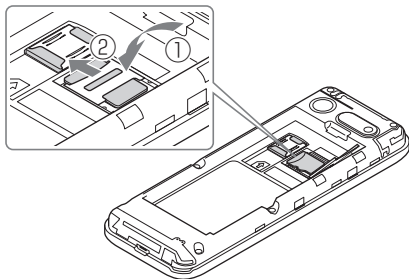


- 6** Installing Battery (P.1-12)
7 Attach Battery Cover (P.1-12)

Removing SD Card

- 1** Open Battery Cover (P.1-11)
2 Removing Battery (P.1-13)

- 3** Press and hold SD Card Slot Cover with pad of finger and slide it in direction ① until it clicks unlocked. Lift SD Card Slot Cover in direction ②

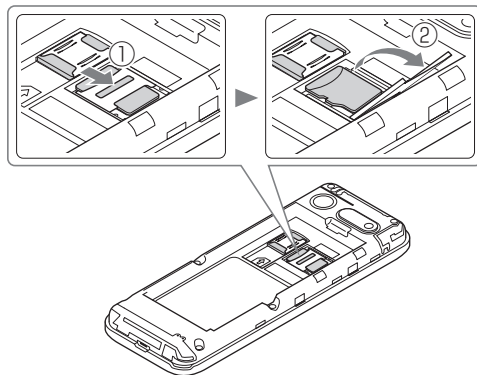

- 4** Remove SD Card
5 Lock SD Card Slot Cover (P.1-9)
6 Installing Battery (P.1-12)
7 Attach Battery Cover (P.1-12)

Handling Battery and Charger

■ Before Using Battery and Charger

When purchased, Battery is not sufficiently charged. Be sure to charge before initially using.

- For charging time and battery usage time: (P.11-5)

■ About Battery

- Soiled Battery, handset or metal part of Charger (Charging Terminals) may cause poor contact, resulting in power failure or insufficient charging. Clean handset, Battery and Charger with a clean, dry swab.
- Battery is a consumable item. Replace Battery with a new one if the operation time becomes extremely short even after it is fully charged. Purchase a new Battery.
- To help maintain performance and life of Battery, do not store in the following conditions (battery level should be at approximately 40% for optimal storage).
 - Full (immediately after charging is complete)
 - Exhausted (too low to power on handset)
- Carry Battery in a bag, etc. when carrying it separately.

■ Charging

- Battery cannot be charged without handset. Install Battery in handset to charge it.
- Charging may take longer when handset is powered on.
- Move Charger away from TV/radio if interference occurs.

■ Battery Life

- Using handset in the following conditions may shorten Battery life:
 - Extremely high or low temperatures
 - Handset, Battery or Charging Terminals of Charger is soiled
 - Weak signal/no signal
 - Handset is left powered on in mid-operation (not in Standby)
- To extend Battery life:
 - Set Backlight Time to a shorter time: (P.10-3)
 - Set Key Sound to OFF: (P.10-6)

■ Recycling

Lithium-ion batteries are recyclable. To recycle a used lithium-ion battery, take it to any shop displaying the recycling symbol.



Li-ion 00




モバイル・リサイクル・ネットワーク
携帯電話・PHSのリサイクルにご協力を。

■ Installing/Removing Battery


Always power off beforehand.

■ Installing Battery


- 1 Place a fingertip on the notch of handset and hold the center of Battery cover and gently lift Battery Cover in direction shown to remove
 - Be careful not to hurt your finger or nail.

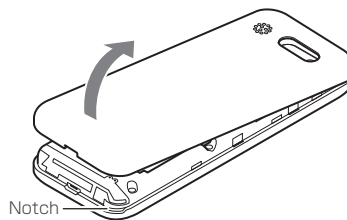


- 2** Slide Battery in direction ① onto metal terminals, and press into handset in direction ②

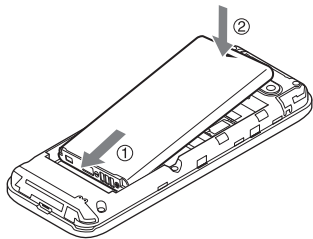

- 3** Fit Battery Cover on handset, and press Battery Cover in directions shown

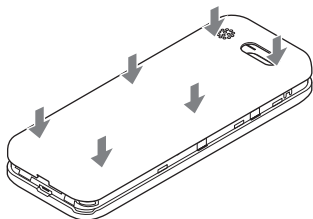


- 4** Trace the circumference of Battery Cover in direction ① with finger and press and hold in direction ② to install Battery Cover completely

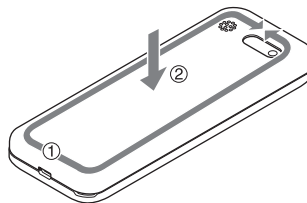

■ Removing Battery

- 1 Open Battery Cover (P.1-11)
- 2 Place a fingertip on the removing hook of Battery, and gently lift Battery in direction shown
 - Be careful not to hurt your finger or nail.

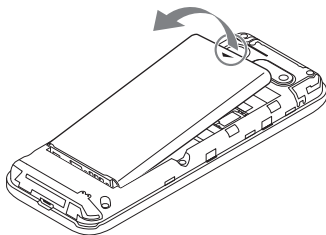



- 3 Attach Battery Cover (P.1-12)

■ Charging with AC Adapter

AC Adapter is an optional accessory. After installing Battery, charge handset using AC Adapter (sold separately).

- Use optional AC Adapter (microUSB Quick Charge™ 2.0 compatible) [ZSDBA4]^{*1}, or AC Adapter (microUSB 1.0 A) [ZSDBA6]^{*2}.
 - For details on AC Adapters and other peripheral equipment, see SoftBank Website.
 - See User Guide for your AC Adapter.
 - The following operations are described with using AC Adapter (microUSB 1.0 A) [ZSDBA6].
- *1 SoftBank SELECTION Qualcomm® Quick Charge™ 2.0 compatible AC Adapter [SB-AC12-HDQC] for smartphones
- *2 SoftBank SELECTION microUSB Charging AC Adapter 1.0 A [SB-AC13-HDMU] for smartphones

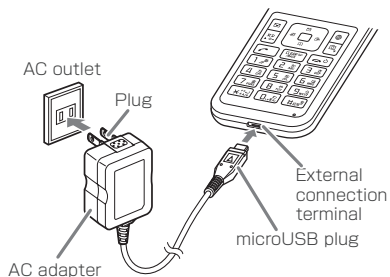

- 1** Insert microUSB plug on External Connection Terminal
- 2** Extend blades and plug AC Adapter into AC outlet
When charging starts, icon () appears and notification LED lights in red. Notification LED goes out once charging completes.
- 3** After charging completes, unplug AC Adapter
 - Remove the plug of AC Adapter from AC outlet and remove microUSB plug from handset.

Powering On/Off

Power On

- 1** Long Press .
Handset powers on. Then Standby appears after a while.

Turning the Power OFF


- 1** Long Press .
- 2** "Yes"
The screen turns off and handset powers off.

Basic Display

Basic Display of handset such as Standby, main menu is described.

Standby

Status icons, date/time, information, etc. appear in Standby.

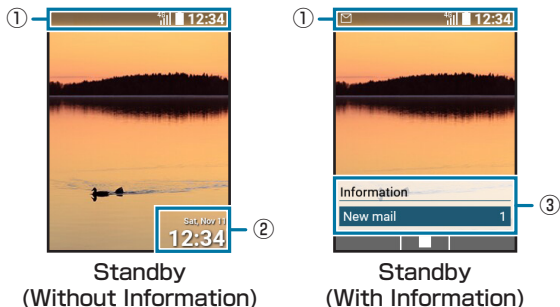

- ① **Status bar**
Signal, battery, handset status, time, etc. appear.

(P.1-17)

- ② **Date/time**
Time, date and day of the week appear.
- ③ **Information**
Information for missed calls, new mail, etc. appears. (P.1-15)

Checking Information

An information message appears when you miss calls or receive messages.

- Type of information and the number of items are shown.



- ① **Information Type**
- ② **Number**

7 Select Information type →

Activate each function to check the content of Information.

Hiding Information

7 while information is shown
Information is not shown temporarily.

Main Menu

Icons are shown to activate various functions in main menu.



Main Menu





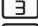
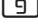

Viewing Main Menu

1  in Standby

Main menu appears.


Dial Keys Operations

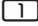Main menu can be selected with Dial Keys. The corresponding keys are as follows:

- | | |
|--|---|
|  : Mail |  : Data Folder |
|  : Browser |  : Alarm |
|  : Infrared |  : Phone |
|  : Tool |  : Settings |
|  : Camera | |

Display Saving

Display goes completely dark after a certain period of no operation to save power.

- Press any key (except Dial Keys) to reilluminate Display.
- Alternatively, in Standby, press  to have Display go dark.

Main Notification Icons/ Status

Notification icons such as new mails, status icons for handset status appear in Status Bar at top of screen.



Status Bar

① Notification Icon

- | | |
|-------------------------------------|-------------------------|
| : Urgent News | : Timer Ringing |
| : Call Arriving/Calling/in Progress | : Calendar Notification |
| : Call on Hold | : Birthday Notification |
| : Missed Call | : Data Downloading |
| : New Answer Memo | : SD Card Unmounted |
| : New Message | : Readying SD Card |
| : New S!Mail/SMS | : Screenshot Captured |
| : Alarm Ringing | : Software Updates |
| | : Hidden Notification |

② Status Icon

- | | |
|--|----------------------------|
| : Battery Strength | : Secret of Mail Displayed |
| : Charging | : Answering Machine Set |
| : Signal Strength | : Answering Machine Full |
| : No Signal | : Call Set to "Speaker ON" |
| : No USIM Card | : Call Set to "Mic OFF" |
| : Data Connectable (4G) | : Alarm Set |
| : Data Connectable (3G) | : Timer Counting Down |
| : Airplane Mode is set | : Pointer ON |
| : Manner Mode | : Pointer OFF |
| : Drive Mode | : Ringtones Volume 0 |
| : Original Mode | |
| : Secret of Phone Book Displayed Temporarily | |
| : Secret of Mail Displayed Temporarily | |

Manner

Please be considerate of people around you and use your handset responsibly.

On Airplanes

Using handset may affect safe operation of aircraft (Follow airline instructions for proper use on an airplane).

In Hospitals

If using or bringing handset is prohibited by medical institutions such as hospitals, follow instructions of each medical institution for use in a hospital.

Congested Places

Persons with an implanted pacemaker, defibrillator, etc. may be around you. Electronic signals may affect operation of implanted pacemakers, defibrillators. Turn off handset.

Public Places such as Cinemas, Theaters, Museums

Using handset in public places may annoy other people around you.

Setting Manner Mode/Drive Mode/Original Mode

Three types of manner modes such as Manner Mode/Drive Mode/Original Mode are available for handset.

- The following tones sound in each mode.
 - Shutter sound for photo shooting
 - Movie record start/stop
 - Alarm ringtones
 - Ringtones for Urgent News



Setting Manner Mode

Mute notification sounds such as incoming calls, new mails and other handset sounds such as Key Sound. Handset vibrates for incoming calls and notifications.

- After Manner Mode is set, "🔕" appears in Status Bar.
- Vibration and LED work at initial value settings in Manner Mode.

7 In Standby, Long Press → "OK"


Manner Mode is set.

- In Standby, Long Press  → "OK" each time to set/cancel Manner Mode.
- Alternatively, in Standby,  → "Settings" → "Sound/Notification" → "Manner Mode Settings" → "Manner"/"OFF" to set/cancel Manner Mode.

■ Setting Drive Mode

Mute notification sounds such as incoming calls, new mails and other handset sounds such as Key Sound. Incoming calls and notifications appear on the screen.

- When a call is received in Drive Mode, it is answered by a guidance that the call cannot be answered since you are driving, and recorded by Answering Machine.
- After Manner Mode is set, "🚗" appears in Status Bar.
- Handset does not vibrate.

1 In Standby,  → "Settings" → "Sound/Notification" → "Manner Mode Settings"

2 "Drive"


Drive Mode is set.

- In Standby, Long Press  → "OK" each time to set/cancel Drive Mode.

■ Setting Original Mode






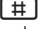
Set whether to sound ringtones according to the ringtone type.

- After Manner Mode is set, "📧" appears in Status Bar.

1 In Standby,  → "Settings" → "Sound/Notification" → "Manner Mode Settings"

2 "Original"


Original Mode is set.

- When setting ringtone type,  (Edit) → Set each item →  (Set).
- When resetting ringtone type,  (Edit) →  (Reset) → "Yes" →  (Set).
- In Standby, Long Press  → "OK" each time to set/cancel Original Mode.

Airplane Mode

Suspend signal-transmitting functions and disable functions such as making/receiving calls, sending/receiving mails.

- After Manner Mode is set, "✈" appears in Status Bar.

1 In Standby,  → "Settings" → "Network"

2 Check "Airplane Mode" ()

Airplane Mode is set.

- To cancel, uncheck "Airplane Mode" ().

Security Codes

When using handset, the following security codes are required.

Handset Code	Code required for using each function. It is not set by default.
Lock No./Password	Code for unlocking screen. It is not set by default.
Security Code	4-digit code in contract. Required for changing details of contract, using optional services from landlines, etc.



- Do not forget Security Code. If you forget the code, servicing is required. For details, contact Inquiries (P.11-25).
- Be careful not to reveal security codes to others. If misused by others, SoftBank Corp. is not liable for any resulting damages.

PIN Code

PIN Code is a code for USIM Card. It is used to prevent unauthorized use by others. It is set to 9999 by default.





■ Enabling PIN Code

When PIN code is enabled, set to show the screen where PIN entry is required for handset use each time handset is powered on with USIM Card installed.

- 1** In Standby,  → "Settings"
- 2** "Security" → "USIM Card Lock Settings" → Check "Lock USIM Card" ()
- 3** Enter PIN code → 
PIN code is enabled.

■ Changing PIN Code

Changing PIN code is available only when PIN code is enabled.

- 1** In Standby,  → "Settings"
- 2** "Security" → "USIM Card Lock Settings" → "Change USIM PIN"
- 3** Enter current PIN code → 
- 4** Enter new PIN code → 
- 5** Enter new PIN code → 
PIN code is changed.

CAUTION

Wrong PIN Code Input

- If wrong PIN is input three times in a row, PIN is locked, and handset usage is restricted. Enter Personal Unblocking Key (PUK code) to release PIN lock. (P.1-22)

■ Canceling PIN Lock (PUK Code)

- For Personal Unblocking Key (PUK code), contact Inquiries (P.111-25).

1 Enter PUK code → 

2 Enter PIN code → 

3 Enter PIN code again → 

PIN lock is canceled.

CAUTION


Wrong PUK Code Input


- If wrong PUK is input ten times in a row, USIM Card is locked, and handset is no longer operable. Input carefully; a locked USIM Card will need to be reissued (fees apply) at a SoftBank shop.


Operations in Common.....	P.2-2	User Dictionary.....	P.2-11
Selecting Items/Going Back to the Previous Screen	P.2-2	Registering Words.....	P.2-11
Checkbox	P.2-2	Editing Words.....	P.2-12
Going Back to Standby.....	P.2-2	Deleting Words.....	P.2-12
Setting Incoming Call Operations.....	P.2-2	Text Entry Settings.....	P.2-12
Text Entry	P.2-4	Setting Predictive Conv.....	P.2-12
Text Entry Window.....	P.2-4	Setting Auto Cursor.....	P.2-12
Changing Mode.....	P.2-4	Reset.....	P.2-13
How to Enter Text	P.2-5	Phone Book	P.2-13
Entering Kanji/Hiragana/Katakana	P.2-5	Using Phone Book.....	P.2-13
Entering Small Kana (っ, ッ, etc.).....	P.2-6	Using Groups.....	P.2-18
Entering * or °.....	P.2-7	Screenshot.....	P.2-19
Entering Alphanumerics	P.2-7	Capturing Screenshots.....	P.2-19
Entering Symbols/Emoji/Emoticons.....	P.2-7		
Entering Phrases	P.2-8		
Quoting Information to Enter.....	P.2-9		
Entering Spaces.....	P.2-9		
Inserting a Line Break	P.2-9		
Editing Text.....	P.2-10		
Deleting Entered Text.....	P.2-10		
Copying/Cutting/Pasting.....	P.2-10		

Operations in Common


Selecting Items/Going Back to the Previous Screen

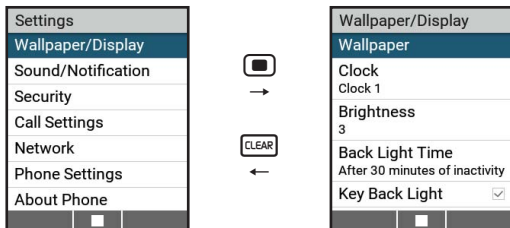

1 Select an item → 
Screen of the item selected is shown.


2 
Return to the previous screen.

Checkbox

When a checkbox is shown in the setting item, select the check box and press  to enable/disable the setting or select/cancel the item.

- : Setting is enabled/Item is selected.
- : Setting is disabled/Item is not selected.

Going Back to Standby


1 In any screen, 
Standby appears.

Setting Incoming Call Operations

Set operations when receiving calls or mails.


Adjusting Volume

Adjust the Ringtone and notification sound volume.

1 In Standby,  → "Settings" → "Sound/Notification"

2 "Phone Call"/"Mail Notification" → "Volume"
→ Select volume → 
The volume is changed.

Changing Ringtone and Notification Sound

1 In Standby,  → "Settings" → "Sound/Notification"






2 "Phone Call"/"Mail Notification" → "Sound"

3 "Preset"/"Data Folder"

- When "OFF" is selected, set to mute ring-tones and notification sound.

4 Select ringtone/notification sound → 


Ringtone/notification sound is changed.

- When "Data Folder" is selected, select a folder →  → Select Sound →  →  (Done).
- Select ringtone/notification sound to play and confirm ringtone. To stop, press  (Stop). And to replay to confirm, press  (Confirm).

■ Setting Vibration

Set vibration when calls/messages arrive.

- Vibration works at initial value settings in Manner Mode.

1 In Standby,  → "Settings" → "Sound/Notification"

2 "Phone Call"/"Mail Notification" → "Vibration"

3 Select a pattern → 


Vibration is set.

- Select a pattern to play and confirm vibration. To stop, press  (Stop). And to replay to confirm, press  (Confirm).

■ Setting Notification LED

Set notification LED pattern (color) when calls/messages arrive.

- Vibration works at initial value settings in Manner Mode.

1 In Standby,  → "Settings" → "Sound/Notification"

2 "Phone Call"/"Mail Notification" → "LED"

3 Select a pattern → 


Notification LED pattern is set.



- Select a pattern to confirm notification LED. To stop, press  (Stop). And to replay to confirm, press  (Confirm).

Text Entry


Use Dial Keys to enter text.

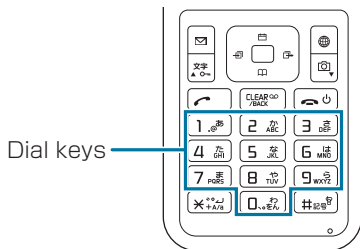A single dial key has multiple characters assigned to it. Press a key multiple times to scroll through its assigned characters. (P.2-5)



- ① **Text entry area**
- ② **Predictive Conv/Normal Conv/Mode**
Predictive Conv (When Predictive Conv is set to ON, "Pred." appears), Normal Conv or mode appears.
- ③ **Predictive Conv Candidate list**
Enter text to show Predictive Conv candidate list. Press  to select text from Predictive Conv candidate list.
Press  (Conv.) during character entry to select text from Normal Conv candidate list.
- ④ **Key operation indicator**
Show available Key operation.

Text Entry Window

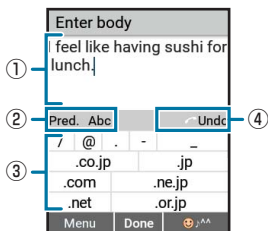


Text Entry Window

Changing Mode

Change the text input method to kanji, hiragana, katakana, alphabet.

7 In Text Entry window, 

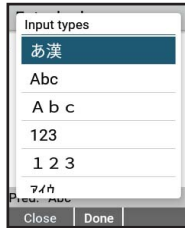

Entry Mode List

Show Entry Mode list.

2 Select a mode

Mode	Description	Mode	Description
あ漢	Kanji/Hiragana	123 [Full]	Double-byte numbers
Abc [Half]	Single-byte alphabet	アウ [Half]	Single-byte katakana
Abc [Full]	Double-byte alphabet	アイウ [Full]	Double-byte katakana
123 [Half]	Single-byte numbers		

3

Mode is changed.

Entering Kanji/Hiragana/Katakana

Entering Kanji

Entering "鈴木" in "あ漢 (Kanji/Hiragana)" Mode is described as an example.


1 In Text Entry window, enter "すすき"

• Enter text as follows:

"す":  (3 times)


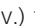

"ず":  →  (3 times) →  (1 time)


"き":  (2 times)

※ Press  first to move the cursor when the next character is on the same key.

2

Select text from Predictive Conv candidate list.

• Press  (Conv.) to show Normal Conv candidate list. Press  (← Area)/ (Area →) to change the area to convert.

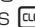• Press  to add/edit text before text conversion.



3

"鈴木" is entered.

● Text Conversion

Candidate list appears during character entry.

- The candidate list sequence changes as words are entered more frequently (Learning dictionary).


How to change	Description
 during character entry (Predictive Conv candidate)	Predicts candidates beginning with the entered text
 (Conv.) during character entry (Normal Conv candidate list)	List of candidates whose Kana/Kanji exactly matches the entered text

■ Entering Hiragana

Entering "すすき" in "あ漢 (Kanji/Hiragana)" Mode is described as an example.


1 In Text Entry window, enter "すすき"

- Enter text as follows:

"す":  (3 times)

"ず":  →  (3 times) →  (1 time)

"き":  (2 times)


- ※ Press  first to move the cursor when the next character is on the same key.

2 


"すすき" is entered.

■ Entering Katakana

Entering "スズキ" in "アイウ (Katakana)" Mode is described as an example.


1 In Text Entry window,  → "アイウ" → Enter "スズキ"

- Enter text as follows:

"ス":  (3 times)

"ズ":  →  (3 times) →  (1 time)


"キ":  (2 times)

- ※ Press  first to move the cursor when the next character is on the same key.


2 

"スズキ" is entered.

■ Entering Small Kana (っ, ッ, etc.)

1 Enter a Kana for small Kana → 
Change to small Kana.

Entering ` or °

- 1 Enter a Kana to add ` / ° to → 
` or ° is added.

Entering Alphanumerics











Entering "SoftBank" in "Abc" Mode is described as an example.

- 1 In Text Entry window,  → "Abc" →

Enter "SoftBank"




"SoftBank" is entered.

• Enter text as follows:









- "S" :  (4 times) → 
- "o" :  (3 times)
- "f" :  (3 times)
- "t" :  (1 time)
- "B" :  (2 times) → 
- "a" :  (1 time)
- "n" :  (2 times)
- "k" :  (2 times)

Entering Symbols/Emoji/Emoticons

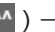


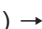


Entering Symbols


- 1 In Text Entry window,  ( ) →
Press  /  to select "Sym." tab
Symbol menu appears.
- 2 Select a symbol → 
The symbol is entered.
• Press  /  to toggle "Full" and "Half" tabs.

Entering Emoji

- 1 In Text Entry window,  ( ) →
Press  /  to select "Emoji." tab
Emoji menu appears.
- 2 Select an emoji → 
The emoji is entered.
• Press  /  to toggle emoji category tabs.

Entering Emoticons

1 In Text Entry window,  (  ) → Press / to select "(^_^)" tab
Emotion menu appears.



2 Select an emotion → 




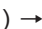


The emotion is entered.

- Press / to toggle emotion category tabs.

Entering Symbols/Emoji/Emoticons from History



In "Hist." tab, previously entered symbols, emoticons, pictograms appear.

- "Hist." tab cannot be selected by pressing / when there is no History in the tab.

1 In Text Entry window,  (  ) → Press / to select "Hist." tab
Entry history of Symbols/Emoji/Emoticons appears.

2 Select Symbols/Emoji/Emoticons → 


Symbol/Emoji/Emoticon is entered.

- Press / to toggle "All"/"Emoji"/"(^_^)"/"Sym." tabs.


Entering Phrases

Registered phrases can be quoted and entered.

- Phrases can also be edited. (P.2-8)
- Other information is also quoted and entered. (P.2-9)


1 In Text Entry window,  (Menu) → "Quotation"

2 "Phrase"

3 Select a phrase category →  → Select a phrase



4 

The phrase is entered.

- Press  (Detail) to show the details of phrases.

Editing Phrases

Registered phrases can be edited.

1 In Text Entry window,  (Menu) → "Input Settings" → "Phrase" → Select a phrase category → 

2 Select a phrase




3  (Edit) → Enter a phrase → 

The phrase is edited.

- Phrases can be reset to default. (P.2-9)

● Resetting Phrases




Reset phrases to default.

1 In Text Entry window,  (Menu) → "Input Settings" → "Phrase" → Select a phrase category → **2** Select a phrase to reset →  (Menu) → "Reset one"/"Reset All" → "Yes"


Phrase is reset to default.

■ Quoting Information to Enter



Information saved to handset such as Contacts, Call Log, Bookmark, Profile, Phrase, Notepad can be quoted and entered.

1 In Text Entry window,  (Menu) → "Quotation"**2** Select an item to quote →  → Select information to quote → 


The quoted information is entered.

■ Entering Spaces**■ Entering a Space at the End of Sentence****1** Move the cursor to the end of sentence → 

A space is entered.

■ Entering a Space in the Middle of Sentence**1** Move the cursor to the place to enter a space in →  (6 times) → 


The space is entered.

■ Inserting a Line Break**1** Move the cursor to the place to insert a line break in → 

The line break is inserted.

■ Deleting Entered Text


■ To delete a character at the end of sentence

- 1 Move the cursor to the end of sentence → 


The character is deleted.

- Long Press  to delete all the characters.

■ To delete characters in a sentence





- 1 Move the cursor to the right of the characters you want to delete → 

The character is deleted.

- Long Press  to delete all the characters to the left of the cursor.

■ Copying/Cutting/Pasting








Store text by copying or cutting and paste it.

- 1 In Text Entry window,  (Menu) → "Select area(Copy etc)"
- 2 Move the cursor to the right/left of the text to select →  (Start) → Move the cursor to the left/right to select the whole text →  (End) → "Copy"/"Cut"
- 3 Move the cursor to where you want to paste →  (Menu) → "Paste"
The copied/cut text is pasted.

User Dictionary







Registered words appear as Conversion Candidates.

■ Registering Words




- 1** In Text Entry window,  (Menu) → "Input Settings"
- 2** "User dictionary"
- 3**  (Menu) → "Add"
- 4** Select "Word" field →  (Edit) → Enter a word → 
- 5** Select "Reading" field →  (Edit) → Enter the reading →  →  (Save) → "OK"
The word is registered.

■ Registering Words from Already Entered Text



Entered text can be registered during character entry.

- 1** In Text Entry window,  (Menu) → "Select area(Copy etc)"
- 2** Move the cursor to the right/left of the text you want to register →  (Start) → Move the cursor to the left/right to select the whole text →  (End) → "Add word"
- 3** Select "Reading" field →  (Edit) → Enter the reading →  →  (Save) → "OK"
The word is registered.

■ Editing Words

- 1 In Text Entry window,  (Menu) → "Input Settings"
- 2 "User dictionary"
- 3 Select a word to edit →  (Menu) → "Edit"
- 4 Edit Word and Reading →  (Save) → "OK"
The word is edited.

■ Deleting Words


- 1 In Text Entry window,  (Menu) → "Input Settings"
- 2 "User dictionary"
- 3 Select a word to delete →  (Menu) → "Delete one"/"Delete all" → "Yes" → "OK"
The word is deleted.

Text Entry Settings

Set operations for text entry.


■ Setting Predictive Conv

Set whether to use predictive conv.

- 1 In Text Entry window,  (Menu) → "Input Settings" → "Input Settings"
- 2 "Predictive Conv" → "ON"/"OFF"
Predictive Conv is set.

■ Setting Auto Cursor


Set whether to move the cursor automatically right after inputting a character.

- 1 In Text Entry window,  (Menu) → "Input Settings" → "Input Settings"
- 2 "Auto cursor move" → "Fast"/"Normal"/"Slow"/"OFF"
Auto cursor is set.

Reset

Reset learning dictionary and reset text input settings to default.

- Learning dictionary is a function to preferentially show already entered Predictive Conv candidates.

1 In Text Entry window,  (Menu) → "Input Settings" → "Input Settings"

2 "Reset" → "Reset learning"/
"Reset settings" → "Yes" → "OK"
Learning dictionary or text input settings is reset.

Using Phone Book

Save names, phone numbers and mail addresses to use to frequently call and exchange mails. In addition, save birthdays, constellations, etc.

CAUTION

- Note that having Battery removed for extended period or leaving Battery low may cause data saved to Phone Book to be erased or altered. Accidents, malfunctions, repairs, handset upgrade/replacement, mishandling, etc. also may cause data saved to Phone Book to be erased or altered.
Back up important contacts and other data regularly. Note that SoftBank Corp. is not liable for any damages arising from loss/alteration of Phone Book.

Viewing Entries

1  in Standby

Entry List window appears.

2 Select a contact to view → 

Entry Details window appears.








- Select a phone number to make a call or create SMS, etc.
- Select mail address to create S!Mail, etc.

Saving Entries to Phone Book

Save an entry with name, phone number, mail address, etc. to Phone Book

1 In Standby,  →  (Menu) → "Add new entry"

2 Enter each item

Item	Description
Photo	<p>Save an image to show for a contact.</p> <ul style="list-style-type: none"> • Selecting an image to save "Data Folder" → Select a folder →  → Select an image →  (Play) →  (Done) → Adjust trimming* →  • Shooting a photo to save "Take photo" → Take a photo →  (Done) → Adjust trimming* →  <p>* Press  (Size) to change the size while trimming.</p>
First name	Enter First name
Last name	Enter Last name

Item	Description
Phonetic last name	Entering Last name automatically saves Last name reading. Last name reading can be changed manually.
Phonetic first name	Entering First name automatically saves First name reading. First name reading can be changed manually.
Phone	<p>Entering a phone number</p> <ul style="list-style-type: none"> • Up to five numbers can be added. Select "Phone Number Type" such as "Mobile", "Work Mobile."
E-mail Address	<p>Enter your mail address.</p> <ul style="list-style-type: none"> • Up to five numbers can be added. Select "Mail Type" such as "Mobile", "Home."
Address	<p>Enter Postcode, Country, Region, City, street and additional information.</p> <p>Select "Residence Type" such as "Home", "Work."</p>
Company	Enter company name.
Department	Enter Department name.
Title	Enter job title.
Website	Enter URL of a website.
Birthday	Enter birthday.




Item	Description
Constellation	Select constellation.
Notes	Enter notes.
Groups	Select a group. <ul style="list-style-type: none"> • Set groups beforehand. • When groups are not set, follow onscreen instructions to save. (P.2-18)
Secret	Set not to display in Phone Book.

3 (Save)

The entry is saved to Phone Book.





INFORMATION

- Alternatively, in Standby,  → "Phone" → "Create New Entry" to create a new entry.
- To show contacts set for Secret, in Standby,  →  (Menu) → "Settings" → "Displayed secret data" → "Displayed."

● Saving New Entries to Phone Book from Other Functions


Save currently shown phone numbers or mail addresses to Phone Book.

E.g.) Save a phone number from Incoming History

1 In Standby,  → Select a phone number →  (Menu) → "Save to phone book"

2 "Add new entry" → Enter each item

■ To add to an existing entry

"Add to entry" → Select a contact to add →  → Enter each item.

3  (Save)

The entry is saved to Phone Book.

- When adding to an existing entry in step 2, select "Overwrite"/"Create new entry."


■ Making Calls from Phone Book

1  in Standby



Entry List window appears.

2 Select a contact to make a call → 

Handset dials the number.

-  to change a tab.
- Alternatively, enter a part of Reading to find the number.
- If no entry matches entered Reading, entries close to Reading appear.

■ To select a number to make a call

Select a contact →  → Select a phone number →  → "Call."

- If multiple phone numbers are saved, select a number to make a call.

■ Using Entry List Window

Operations such as registering new entries, editing, deleting are available.

1 In Standby,  →  (Menu) → Select each item

Item	Description
Add new entry	Save a new Phone Book entry. (P.2-14)
Edit	Edit entries. (P.2-14)
Delete	Delete entries. (P.2-16)
Send	Send contact information via S!Mail or infrared. (P.2-17, P.2-17)
View Mode Settings	Set entry display. (P.2-15, P.2-17)
Confirm memory	Show the number of entries.
Group	Set the group. (P.2-18)

● Deleting Entries

1 In Standby,  → Select a contact →  (Menu) → "Delete"

2 "One Item" → "Yes"

The entry is deleted.

■ To delete multiple contacts

- "Delete multiple" → Check contacts to delete (☑)
 → (🗑️) (Delete) → "Yes."
 • While selecting contacts to delete, (☑) (Menu) →
 "Check all"/"Uncheck all" to select/cancel all the
 contacts.

● Attaching Contacts to S!Mail to Send

1 In Standby, (👤) → Select a contact →
 (✉️) (Menu) → "Send"

2 "Attach to mail"

3 "Attach one"

New S!Mail composition window with the con-
 tact attached to appears.

- For the following operations, see "Creating/
 Sending S!Mail" (P.4-6).

■ To attach multiple contacts

- "Attach selection" → Check contacts to attach (☑)
) → (👌) (Done).
 • While selecting contacts to attach, (☑) (Menu) →
 "Check all"/"Uncheck all" to select/cancel all the
 contacts.
 • For the following operations, see "Creating/Send-
 ing S!Mail" (P.4-6).

● Sending Contact Information via Infra- red

1 In Standby, (👤) → Select a contact →
 (✉️) (Menu) → "Send"

2 "Send Infrared" → "1 Record"/"All Records"
 Infrared communication window appears.
 • For the following operations, see "Sending
 Data" (P.7-5).

● Setting Display Picture of Entry List Window

1 In Standby, (👤) → Select a contact →
 (✉️) (Menu) → "Settings"

2 "Display picture" → "Displayed"/"Not dis-
 played"

The image in Entry List window is displayed/
 not displayed.

● Setting Change View of Entry List Window




1 In Standby, (👤) → Select a contact →
 (✉️) (Menu) → "Settings"

2 "Change view" → "Name order"/"Group"

The order of entries in Entry List window display is changed.

Using Menu in Entry Details Window

Operations such as editing or deleting entries, sending S!Mail, sending infrared are available.






- 1 In Standby,  → Select a contact → 
→  (Menu) → Select each item

Item	Description
Edit	Edit entries. (P.2-14)
Delete	Delete entries. (P.2-16)
Attach to mail	Attach contacts to S!Mail to send. (P.4-6)
Send Infrared	Send contact information via infrared. (P.7-5)

Using Groups





Register multiple entries as a group to use.

Saving Groups

- 1 In Standby,  → "Phone" → "Group"
- 2  (Menu) → "Add new group" → "Group's name" → Enter a group name → 
- 3 "Group's members" → Check members () to register →  (Done) →  (Done)


The group is registered.

Editing Group

- 1 In Standby,  → "Phone" → "Group"
- 2 Select a group →  (Menu) → "Edit group" → Select each item →  → Edit the contents →  (Done)



The group is edited.

● Deleting Groups

- 1 In Standby,  → "Phone" → "Group"
- 2 Select a group →  (Menu) → "Delete group" → "Yes"
The group is deleted.

■ Using Groups

Find an entry from existing groups.



- 1 In Standby,  → "Phone" → "Group"
- 2 Select a group → 
Entries that belong to the group are shown.

Screenshot

Capture a screenshot of the current screen.

- Available for all but some applications.
- Captured screenshots can be checked in "Pictures", etc. in Data Folder.

■ Capturing Screenshots

- 1 Long Press  and  at the same time
to capture a screenshot of the current screen after the shooting sound.

Making Calls.....	P.3-2	Call Log	P.3-12
Entering a Phone Number to Make a Call.....	P.3-2	Call Log List Window	P.3-12
Selecting from Call Log to Make a Call.....	P.3-4	Viewing Call Log List.....	P.3-12
Registering to Dial Keys to Make a Call (Quick Dial).....	P.3-5	Checking Details of Call Log	P.3-13
Making International Calls	P.3-6	Using Menu While Viewing Call Log..	P.3-13
Answering Calls.....	P.3-6	Profile.....	P.3-14
Functions Available When a Call Arrives	P.3-7	Checking Your Profile	P.3-14
VoLTE	P.3-7	Registering Profile.....	P.3-14
Setting Mobile Network.....	P.3-7	Using Menu in Profile Window.....	P.3-16
Operations when too Busy to Answer a Call	P.3-8	Emergency Calls	P.3-16
Putting an Incoming Call on Hold	P.3-8	Using Call Services.....	P.3-17
Recording Answer Memo.....	P.3-8	Call Services.....	P.3-17
Rejecting an Incoming Call.....	P.3-9	Setting Call Barring Service.....	P.3-17
Blocking Nuisance Calls.....	P.3-9	Setting Notify Caller ID.....	P.3-19
Specifying Phone Numbers to Reject Incoming Calls from.....	P.3-9		
Rejecting Incoming Calls from Withheld/ Payphone/Unavailable Phones.....	P.3-11		
Rejecting Incoming Calls from Unknown Phone Numbers.....	P.3-11		

Making Calls

There are four ways to make voice calls with handset.

- Entering a phone number (P.3-2)
- Selecting from Call Log (P.3-4)
- Using Quick Dial (P.3-5)
- Selecting from Phone Book (P.2-16)



INFORMATION

HD Voice

- Since HD Voice supports a wide range of sound from high-pitched to low tone, more natural and clearer voice calls are available. Available for communication with SoftBank/Y!mobile devices that support HD Voice.
- HD Voice supports VoLTE and 3G networks. Higher voice call quality is possible for the use of HD voice with VoLTE.




CAUTION

- Communication is not possible even inside the service area in places where the signal does not reach (e.g. tunnels and basements). Communication may be interrupted in poor reception areas. And if you move to a location with weak or poor signal reception during calls, calling may be suddenly interrupted.

Entering a Phone Number to Make a Call

- 1 In Standby, enter a phone number including area code

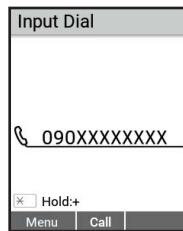

Dial Window

Dial window appears.

- Always enter area code even from within the same area code.
- When entering wrong number, move the cursor to the right of the digit you want to correct → **CLEAR** to delete the number.

- 2   (Call)

Handset dials the number. Call begins when other party answers.

- To end call before other party answers: 

- To switch the speaker to ON/OFF before other party answers: (HF ON)/ (HF OFF)
- To use functions available during a call: (P.3-3)

3 After the call ends →

Handset ends the call.

■ Using Notify Caller ID

Set whether to send your Caller ID to other party.

- Setting Notify Caller ID (P.3-19)
- Setting Notify/Hide Caller ID when placing calls.
Notify: 186 + a phone number → / (Call)
- Hide: 184 + phone number → / (Call)

■ Operations during a Call



Operations during a call are as follows:

Item	Description
Adjust volume	<ul style="list-style-type: none"> • Adjustable to 6 levels.
End the call	
Show Phone Book	(Menu) → "Phone Book" → Select a contact → <ul style="list-style-type: none"> • Making a call is not available.


Item	Description
Show Call Log	(Menu) → "History" → "Outgoing History"/"Incoming History" → Select a history → <ul style="list-style-type: none"> • Making a call is not available.
Show your phone number	(Menu) → "Profile"
Hold	<ul style="list-style-type: none"> • Alternatively, (Menu) → "Hold" to put an incoming call on hold. • To release the call that is put on hold, press / (Resume).
Speaker ON/ speaker OFF	<ul style="list-style-type: none"> • Set/cancel to hear the caller's voice from the speaker. • To set the speaker to OFF, press (HF OFF). • Alternatively, (Menu) → "Speaker ON"/"Speaker OFF" to toggle the speaker ON/OFF.
Mic OFF/Mic ON	(Menu) → "Mic OFF"/"Mic ON" <ul style="list-style-type: none"> • If "Mic OFF" is selected, the third party cannot hear your voice.
Pause	(Menu) → "Pause" → "Automatic(,)" / "Manual(;)"
Sound quality adjustment	(Setting) → "Clearly"/"Mildly"/"Normal"

Selecting from Call Log to Make a Call

1 in Standby


- : Show incoming call history
- : Show outgoing call history
- Call Log: (P.3-12)

2 Select a phone number or name

- When a name and phone numbers are registered to Phone Book, the name is shown.
- Press  to toggle outgoing/incoming call history.

3

Handset dials the number.

- To end call before other party answers: 
- To use functions available during a call: (P.3-3)

4 After the call ends →

Handset ends the call.

Confirming a Phone Number to Make a Call



Select a name from Call Log and confirm a phone number to make a call.

1 In Standby, → Select a name →

History Details window appears to confirm the phone number.

2

Handset dials the number.

- Alternatively,  (Menu) → "Call" to make a call.
- To end a call before other party answers: 
- To use functions available during a call: (P.3-3)

3 After the call ends →





Handset ends the call.

■ Registering to Dial Keys to Make a Call (Quick Dial)







If phone numbers are registered to Dial Keys, Long Pressing a dial key in Standby enables simple phone number entry.

■ Registering to Quick Dial



Up to 10 phone numbers in Phone Book can be registered.

- 1** In Standby,  → "Settings" → "Call Settings" → "Quick Dial"
Quick Dial window appears.
- 2** Select a phone number →  (Edit)
Phone Book appears.
 - The first number corresponds to the number of Dial Keys.
- 3** Select a phone number or name to register → 
It is registered to the selected number.
 - When multiple phone numbers are registered to an entry, select a phone number to register → .

■ Making a Call by Quick Dial




- 1** Long Press  to  in Standby
Dial window with a phone number corresponding to the number of Dial keys appears.
- 2** /  (Call)
Handset dials the number.
 - To end call before other party answers: 
 - To use functions available during a call: (P.3-3)
- 3** After the call ends → 
Handset ends the call.

■ Canceling Quick Dial Registration


- 1** In Standby,  → "Settings" → "Call settings" → "Quick Dial"
Quick Dial window appears.
- 2** Select a phone number or name to cancel →  (Menu)
- 3** "Cancel One"/"Cancel All" → "Yes"
The number registered to Quick Dial is canceled.


Making International Calls

Make voice calls from Japan to outside Japan.

- 1 In Standby, Long Press  to enter "+"
→ Enter country code → Enter a phone number → / (Call)

Handset dials the number.

- For more information on international call rates, visit SoftBank Website (<https://www.softbank.jp/>).
- To end call before other party answers: 
- To use functions available during a call: (P.3-3)



- 2 After the call ends → 
Handset ends the call.

Answering Calls

Ringtone sounds for an incoming call.




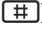
The caller's phone number or name saved in Phone Book appears when Caller ID is sent.


- If not, neither a phone number or name appears.

- 1 While a call is arriving, / (Answer)
→ Talk to the caller








Window during a Call

- To use functions available when a call arrives: (P.3-7)
- To use functions available during a call: (P.3-3)
- Alternatively, when Any Key Answer (P.10-8) is set to ON, press ///Dial Keys (except ) to answer a call.
- "HD" appears for HD Voice during a call.

- 2 After the call ends → 
Handset ends the call.

■ Functions Available When a Call Arrives

Use functions as follows when a call arrives.


Item	Description
Stop ringtone or vibration	
Adjust ringtone volume	
Answer by SMS	 (Menu) → "Reply with SMS" → Select a message →  →  (Send)
Answer by Answering Machine	Answering Machine: (P.3-8)
Put an incoming call on hold	Putting an incoming call on hold: (P.3-8)
Reject an incoming call	Rejecting an incoming call: (P.3-9)

VoLTE (Voice over LTE) is an LTE-based voice call system. Compared to voice calls with conventional 3G networks, higher-quality sound and shorter time until ringback tones sound are benefits (requires separate VoLTE subscription).

- Available for communication with SoftBank devices that support HD Voice.
Handset/other devices must be in an FDD-LTE service area and "4G/3G Auto" settings must be enabled.
- As of September 2017, Simple Style does not support VoLTE.
For details, see SoftBank Website.

■ Setting Mobile Network

Set Mobile Network to "4G/3G Auto" to use VoLTE.

- 1** In Standby,  → "Settings" → "Network" → "Mobile Network" → "Select Network" → "4G/3G Auto"

Mobile Network is set to "4G/3G Auto."

Operations when too Busy to Answer a Call




■ Putting an Incoming Call on Hold

Incoming calls can be put on hold.

- The state is during a call while the call is put on hold

1 While a call is arriving,

The incoming call is put on hold.


- The caller hears a hold message.
- To answer a call that is put on hold: /  (Answer)
- To end a call that is put on hold: 



■ Recording Answer Memo

Record the callers' messages (Answering Machine). The maximum recording time is 30 seconds per message, and the maximum number of messages to record is 5.

1 While a call is arriving,

The caller hears a response message. After that, the caller's message will be recorded.

- Alternatively, while a call is arriving,  (Menu) → "Answer Phone" to activate Answering Machine.

- Automatic activation of Answering Machine can be set. (P.3-8)
- When recorded messages are full, Answering Machine cannot be activated.
- To answer a call while Answering Machine is responding: /  (Answer)

■ Checking Answer Memo

1 in Standby

2 Select a phone number or name to play → (Play)

The message is played.

■ Activating Answering Machine Automatically

When a call arrives, set to play the response message automatically and record Answer Memo.


- Answering Machine is not available when handset is powered off, Airplane mode is set or no signal is received.
- #### ● Setting/Canceling Answering Machine

1 Long Press in Standby → "OK"

Answering Machine is set.

- To Cancel Answering Machine, Long Press

 again → "OK."


- In Standby,  → "Settings" → "Call Settings" → "Answering Machine" → Check/uncheck "Answering Machine" () / () to set/cancel Answering Machine.

● Changing Time until the Caller Hears Response Message


Set the time to 0 to 30 seconds until the caller hears a response message.

It is set to 10 seconds by default.

1 In Standby,  → "Settings" → "Call Settings" → "Answering Machine" → "Waiting Time"

2 Set the time →  (Done)
Waiting Time is set.

■ Rejecting an Incoming Call

1 While a call is arriving,  (Menu) → "Reject"

The incoming call is rejected and the call ends.

Reject incoming calls from previously specified phone numbers or unregistered callers to Phone Book.

Incoming calls from the following phone numbers can be restricted by handset.

- Specified phone numbers (P.3-9)
- Unavailable phone numbers (P.3-11)
- Payphone (P.3-11)
- Withheld phone numbers (P.3-11)
- Unregistered phone numbers to Phone Book (P.3-11)
or only incoming calls from specified phone numbers can be accepted. (P.3-11)

■ Specifying Phone Numbers to Reject Incoming Calls from

Register phone numbers that you restrict for incoming calls to Black List.

Up to 20 phone numbers can be registered to Black List.

■ Registering to Black List


Enter phone numbers or select Phone Book or Call Log to register phone numbers to Black List.

1 In Standby,  → "Settings" → "Call Settings" → "Reject Incoming Calls"

2 "Reject List" → "Edit Black List"

3 Select <Add> →  (Edit)


- When items of the registered phone numbers are selected, contents can be edited.



4 Enter a phone number →  (Done)

The phone number is registered to Black List.

- When "Phone Book"/"Call Log" is selected, phone numbers can be entered from Phone Book or incoming/outgoing call history.
- To specify multiple phone numbers, repeat step 3 and 4.

● Registering to Black List from Call Log

1 In Standby,  → Select a phone number or name to reject

2  (Menu) → "Add To Rejection" → Select register location → 


The phone number is registered to Black List.

- After selecting a registered entry, select "Yes."

■ Deleting Phone Numbers from Black List

1 In Standby,  → "Settings" → "Call Settings" → "Reject Incoming Calls"



2 "Reject List" → "Edit Black List"


3 Select a phone number to delete →  (Menu)

4 "Delete One" → "Yes"

The phone number is deleted.


■ To delete multiple phone numbers

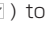"Delete Multiple" → Check phone numbers () to delete →  (Delete) → "Yes."


- While selecting phone numbers to delete,  (Menu) → "Check All"/"Uncheck All" to select/cancel all the phone numbers.

■ Enabling/Disabling Reject Incoming Calls



Set whether to reject incoming calls from phone numbers registered to Black List.

- 1 In Standby,  → "Settings" → "Call Settings" → "Reject Incoming Calls"
- 2 "Reject List" → "Reject Setting"
- 3 "Reject Message"/"No Message"/"OFF"



Reject Incoming calls is enabled/disabled.

- When "Reject Message" is selected, press  (Confirm) to play the message.

■ Rejecting Incoming Calls from Withheld/Payphone/Unavailable Phones

- 1 In Standby,  → "Settings" → "Call Settings" → "Reject Incoming Calls"
- 2 "Withheld"/"Payphone"/"Unavailable"
- 3 "Reject Message"/"No Message"/"OFF"
Reject Incoming calls is enabled/disabled.
 - When "Reject Message" is selected, press  (Confirm) to play the message.

■ Rejecting Incoming Calls from Unknown Phone Numbers


- 1 In Standby,  → "Settings" → "Call Settings" → "Reject Incoming Calls"
- 2 "Unknown"
- 3 "Reject Message"/"No Message"/"OFF"
Reject Incoming calls is enabled/disabled.
 - When "Reject Message" is selected, press  (Confirm) to play the message.

Call Log

Check outgoing/incoming call history. And make a call from Call Log and register to Phone Book.

Call Log List Window



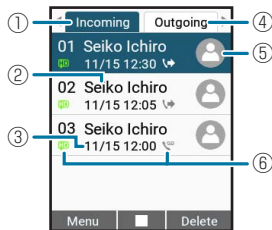




In Standby, press / to show Call Log list window.



Call Log List Window
(Incoming calls)

- Incoming call tab**
- Caller/receiver**
When the caller/receiver is registered to Phone Book, the name is shown.
- Date and time of incoming call**
- Outgoing call tab**
- Image**
When registered to Phone Book, the image is shown.

⑥ Icon

-  : Call
-  : Incoming Call
-  : Missed Call
-  : One-ring Call
-  : Rejected Call
-  : Answer Memo
-  : Call via HD Voice

Viewing Call Log List



The two types of Call Log, "Incoming" and "Outgoing", are shown.

7 / in Standby

 : Show incoming call history

 : Show outgoing call history


Call Log list window appears.


- Switch Call Log type with .
- The newest call log is shown at the top in order. When a name is registered to Phone Book, the name is shown.
- When the number of history exceeds the maximum number, the oldest call log is deleted in order.
- Alternatively, in Standby,  → "Phone" → "Call Log" to show Call Log list window.

■ Checking Details of Call Log

For Call Log, image, name, phone number, date and time of incoming/outgoing call, call type icon, call time are shown.

- When phone numbers are not registered to Phone Book, the name is not shown.

- 1 Select a phone number or name in Call Log list window → 

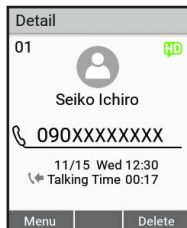


Call Log Details Window





Call Log Details window appears.






- Icon for Call Type: (P.3-12)

■ Using Menu While Viewing Call Log

Operations such as making calls, sending S!Mail, registering to Phone Book are available.

- 1 In Call Log list/Call Log Details window,  (Menu) → Select each item

Item	Description
Call	Make a voice call. "Call"
	"Create SMS" → Create SMS →  (Send) • Creating SMS: (P.4-9)
	"Create Mail" → Create S!Mail →  (Send) • Creating S!Mail: (P.4-6)
	Add special number (184, 186) to the front of phone number and make a voice call. "Add Special No." → "184"/"186" →  /  (Call)

Item	Description
Save to Phone Book	"Add new entry" → Enter required information →  (Save) • Phone Book Registration: (P.2-14)
	"Add to entry" → Select an entry to add a phone number to →  → Enter required information →  (Save) → "Overwrite"/"Create new entry" • Phone Book Registration: (P.2-14)
Delete	In Call Log list window: "Delete one" → "Yes"
	In Call Log list window: "Delete multiple" → Check call logs (<input checked="" type="checkbox"/>) to delete →  (Delete) → "Yes" • While selecting call logs to delete,  (Menu) → "Check all"/"Uncheck all" to select/cancel all the logs.
	In Call Log Details window: "Yes"
Add To Rejection	Add phone number to Black List. (P.3-10)


Profile

Handset phone number can be checked. And mail address, address, etc. can be registered.

Checking Your Profile

1 In Standby, →

Profile screen appears.

- Only your phone number (handset phone number) is registered by default.
- Alternatively, in Standby,  → "Phone" → "Profile" to show the profile window.








Registering Profile

Information such as name, mail address can be registered.

1 In Standby, →

Profile screen appears.

2 (Menu) → "Edit" → Enter each item

Item	Description
Photo	<p>Save an image to show for profile.</p> <ul style="list-style-type: none"> • Selecting an image to save "Data Folder" → Select a folder →  → Select an image →  (Play) →  (Done) → Adjust trimming* →  • Shooting a photo to save "Take photo" → Take a photo →  (Done) → Adjust trimming* →  <p>* Press  (Size) to change the size while trimming.</p>
First name	Enter First name
Last name	Enter Last name
Phonetic last name	Entering Last name automatically saves Last name reading. Last name reading can be changed manually.
Phonetic first name	Entering First name automatically saves First name reading. First name reading can be changed manually.
MY PHONE NUMBER	<p>Show your own phone number.</p> <ul style="list-style-type: none"> • Your phone number (handset phone number) cannot be edited/deleted.

Item	Description
Phone	<p>Entering a phone number</p> <ul style="list-style-type: none"> • Up to four addresses can be added. Select "Phone Number Type" such as "Mobile", "Work Mobile."
My Email	<p>Enter your mail address.</p> <ul style="list-style-type: none"> • Your mail address can be registered automatically. (P.4-5)
Mail Address	<p>Enter your mail address.</p> <ul style="list-style-type: none"> • Up to four addresses can be added. Select "Mail Type" such as "Mobile", "Home."
Address	<p>Enter Postcode, Country, Region, City, street and additional information.</p> <p>Select "Residence Type" such as "Home", "Work."</p>
Company	Enter company name.
Department	Enter Department name.
Title	Enter job title.
Website	Enter URL of a website.
Birthday	Enter birthday.
Constellation	Select constellation.
Notes	Enter notes.

3  (Set)

Your profile is registered.

Using Menu in Profile Window

Operations such as editing profile, resetting, sending S!Mail, sending infrared are available.

1 In profile window,  (Menu) → Select each item

Item	Description
Edit	Information such as name, mail address can be registered. (P.3-14)
Reset	Reset all the profiles except for your phone number (handset phone number).
Attach to mail	Send profile by S!Mail. (P.4-6)
Send Infrared	Send profile by infrared. (P.7-5)

Emergency Calls

Call 110 (Police), 119 (Fire & Ambulance) or 118 (Japan Coast Guard) even when Call Barring is activated.

● Situations Where Emergency Call is Available

- Airplane Mode is set
 - ※ Making an emergency call disables Airplane Mode.
- Screen Lock is set
- All outgoing calls are barred
- In PIN entry window
- In PUK entry window

● Emergency Location Report

Your location is automatically reported to the corresponding agency such as police when you place an emergency call. This system is called "Emergency Location Report." The reported location is based on the positioning signals sent from base stations to handset.

- No application fees or connection fees apply.
- Reported location may be inaccurate, depending on the caller's location and signal strength. Make sure to provide your location, nearby landmarks and purpose on the phone.
- Dial "184" before emergency numbers not to report your location. However, first responders may obtain your location information for situations where an immediate and serious threat to life is concerned.

Using Call Services

Call Services

The following call services are available for handset.

- For more information on services, visit SoftBank Website (<https://www.softbank.jp/>).

Service	Description
Call Barring Service (P.3-17)	Restrict making/receiving calls and sending/receiving SMS.
Notify Caller ID Service (P.3-19)	Set whether to send your Caller ID to other party.

Setting Call Barring Service

Set to restrict outgoing/incoming calls.

● Outgoing Call barring

Item	Description
Bar All Outgoing Calls	All outgoing calls cannot be placed.
Bar All International Calls	International calls cannot be placed except for calls within a country where you stay.
Bar International Calls	International calls cannot be placed except for calls within a country where you stay and Japan.
Enable Outgoing Calls	Deactivate all outgoing call barring.

● Incoming Call barring

Item	Description
Bar All Incoming Calls	All incoming calls cannot be placed.
Bar All Roaming Calls	All incoming calls cannot be accepted except for Japan.
Enable Incoming Calls	Deactivate all incoming call barring.

- 1 In Standby,  → "Settings" → "Call Settings" → "Optional Services" → "Call Barring"

Call Barring window appears.

Starting Call Barring Service

Setting Outgoing Call Barring

- 1 In Call Barring window, "Outgoing Calls" → "Bar All Outgoing Calls"/"Bar All International Calls"/"Bar International Calls" → "OK"

Outgoing call barring is activated.

Setting Incoming Call Barring

- 1 In Call Barring window, "Incoming Calls" → "Bar All Incoming Calls"/"Bar All Roaming Calls" → "OK"

Incoming call barring is activated.

Deactivating Call Barring

Deactivating outgoing call barring

- 1 In Call Barring window, "Outgoing Calls" → "Enable Outgoing Calls" → "OK"
Outgoing call barring is deactivated.

Deactivating incoming call barring

- 1 In Call Barring window, "Incoming Calls" → "Enable Incoming Calls" → "OK"
Incoming call barring is deactivated.

■ Setting Notify Caller ID

Set to whether to notify the third party of your phone number when making a call.

1 In Standby,  → "Settings" → "Call Settings" → "Notify Caller ID"

2 "ON"/"OFF"

Notify Caller ID is set.

Mail Type P.4-2

Mail Window P.4-2

Mail List WindowP.4-2

Mail Details Window.....P.4-3

New S!Mail Composition Window.....P.4-4

New SMS Composition Window.....P.4-4

Changing Mail Address..... P.4-5

Registering Mail Address.....P.4-5

Sending S!Mail/SMS P.4-5

Creating/Sending S!MailP.4-6

Creating/Sending SMS.....P.4-9

Using Draft.....P.4-10

Receiving Mails P.4-11

Checking New Mails.....P.4-11

Receiving New Mails Manually.....P.4-11

Receiving Server Mails.....P.4-11

Managing/Using Mail P.4-12

Checking Mails.....P.4-12

Replying to Mails.....P.4-12

Forwarding MailsP.4-13

Protecting/Unprotecting Mails.....P.4-13

Deleting MailsP.4-14

Saving Attachment to Data FolderP.4-14

Using Menu of MailsP.4-15

Managing InboxP.4-16

Using Spam Mail Folder.....P.4-18

Urgent News..... P.4-19

Not Receiving Urgent NewsP.4-19

Using Urgent News.....P.4-20

Checking Urgent News.....P.4-20

Other Functions P.4-21

Setting Font SizeP.4-21

Viewing Storage InformationP.4-21

Using Send/Receive SettingsP.4-21

Mail Group.....P.4-22

Viewing Your Phone Number/

Mail Address.....P.4-22

Resetting Mail Settings.....P.4-23

Resetting Mail Receive/Send History

.....P.4-23

Deleting All Server MailsP.4-23


● S!Mail

Exchange mails with SoftBank mobile phones (S!Mail compatible devices), other mobile providers' terminals, computers/other email-compatible devices. Mail sending of text messages longer than SMS, attaching images, videos, etc. are possible.


● SMS

Exchange short text messages (70 double-byte/single-byte characters/alphanumerics) using phone numbers of mobile phones as recipients.

■ Mail List Window





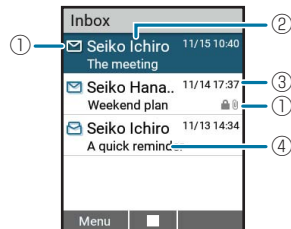


In Standby,  → "Inbox"/"Sent"/"Draft/Unsent" to show Mail List window.

- For Inbox, select the folder → .



Mail List Window
(Inbox)


① Icon

-  /  : Unread/Read S!Mail
-  /  : Unread/Read SMS
-  : New delivery report
-  : Replied S!Mail/SMS
-  : Forwarded S!Mail/SMS
-  : Attachment
-  : Protected S!Mail/SMS
-  : Flagged S!Mail/SMS

- ② Sender (Inbox)/Recipient (Sent, Draft/Unsent)
- ③ Date and time received (Inbox)/Date and time sent (Sent)/Date and time saved (Draft/Unsent)
- ④ Subject

Mail Details Window

Select mail in Mail List window to show Mail Details window.

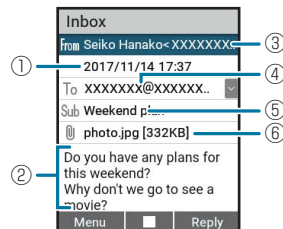

Mail Details Window
(Inbox)

- ① Date and time received (Inbox)/Date and time sent (Sent)/Date and time saved (Draft/Unsent)
- ② Message
- ③ Sender (Inbox)
- ④ Recipient
- ⑤ Subject
- ⑥ Attachment




INFORMATION

- When multiple recipients are set, select "▼" on the recipient field in Mail Details window to show the list of recipients.

New S!Mail Composition Window

In Standby, Long Press  to open new S!Mail composition window.


- Alternatively, in Standby,  → "Create New" to show new S!Mail composition window.

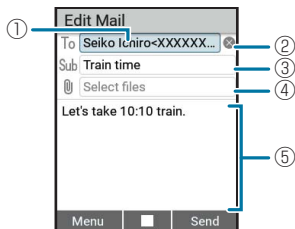

New S!Mail Composition Window

- ① Recipient field
- ② Delete the recipient
- ③ Subject field
- ④ Attachment field
- ⑤ Message field

New SMS Composition Window

In Standby,  → "Create New SMS" to open new SMS composition window.



New SMS Composition Window

- ① Recipient field
- ② Delete the recipient
- ③ Message field


Changing Mail Address

Default account name is random alphanumerics. To avoid receiving spam, a mail address that cannot easily be guessed is preferable.

sbk123-abc @softbank.ne.jp

Account Name
Domain Name
(Customize this)


- For more information, visit SoftBank Website (<https://www.softbank.jp/>).

- 1 In Standby,  → "Settings" → "Number/Address Settings" → "Visit My SoftBank"
Connect to My SoftBank.
 - Follow onscreen instructions.

■ Registering Mail Address

When the mail address is changed, SoftBank sends handset the notification that the mail address change is completed.

Follow the operations below to register the changed mail address to "Profile" in handset.

- 1 In Confirmation window "メールアドレスを更新しますか? (Update the email address?)", press  (Yes)

The mail address is registered to handset.

Sending S!Mail/SMS











S!Mail/SMS that handset can send are as follows:

Item		S!Mail		SMS	
To	Mail Address	<input type="radio"/>	Up to 256 single-byte alphanumerics/ Up to 20 recipients	×	—
	Phone Number	<input type="radio"/>		<input type="radio"/>	Up to 256 single-byte alphanumerics/ Up to 1 recipients
Subject		<input type="radio"/>	Up to 50 double-byte characters Up to 100 single-byte alphanumerics	×	—
Mail Body		<input type="radio"/>	Up to 15000 double-byte characters Up to 30000 single-byte alphanumerics	<input type="radio"/>	Up to 70 double-byte/ single-byte characters/ alphanumerics
Attachment		<input type="radio"/>	*1	×	—

*1 Maximum S!Mail size is 2MB including the subject, message body and attachments.


■ Creating/Sending S!Mail

E.g.) Select a Phone Book entry to send S!Mail
 • Recipients can be selected from Sent/Received history or entered directly. (P.4-7)


- 1** Long Press  in Standby
 New S!Mail composition window appears.
 • Alternatively, in Standby,  → "Create New" to show new S!Mail composition window.
- 2** Select Recipient field →  → "Address book"
- 3** Select a recipient → 
- 4** Select mail address/phone number → 
- 5** Select Subject field →  → Enter subject → 
- 6** Select Message Field →  → Enter message → 
- 7**  (Send)
 The S!Mail is sent.

■ Attaching Files such as Images


E.g.) Attach a file from Data Folder

- 1** Select Attachment field in new S!Mail composition window → 
- 2** "DataFolder" → Select a folder →  → Select a file →  (Play)
 • When SD Card is inserted, toggle "Phone"/"SD" with . (P.9-2)
- Shooting Photo/Movie to Attach**
 "Camera(Photo)"/"Camera(Movie)" → Shoot Photo/Movie
 • Shooting: (P.6-4, P.6-5)
- 3**  (Done)
 The file is attached.

■ To view/play attached file

- Select Attachment field where a file is attached → 
- Some files may not be shown properly depending on the file type.
 - Some functions of PDF file view are limited. (P.9-2)

■ Adding Attachments

- Select Attachment field where a file is not attached → 

- For the following operations, follow step 2 in "Attaching Files such as Images." (P.4-6)

■ To delete attached files

"⊗" in Attachment field where a file is attached → "Yes."




CAUTION



- Some files cannot be attached depending on the file type or size.
- Some copyright protected files cannot be sent.

■ Recipient Entry



How to enter recipients is described.


1 Select Recipient field in new S!Mail composition window → 

■ To add recipients

Select Recipient field where the recipient is already entered in new S!Mail composition window →  → Select empty Recipient field → 



■ To edit recipients

Select Recipient field where the recipient is already entered in new S!Mail composition window →  → Select the recipient to edit → 

- Select a recipient to edit →  (Menu) → "Change to To"/"Change to Cc"/"Change to Bcc" to change the recipient to To/Cc/Bcc.

■ To delete recipients

"⊗" on the recipient in new S!Mail composition window → "Yes"

- Alternatively, select Recipient field where the recipient is already entered in new S!Mail composition window →  → Select the recipient to delete →  (Menu) → "Delete" → "Yes" to delete.


2 Enter a recipient

The recipient is entered.

■ To quote Phone Book

"Address book" → Select a recipient → 

■ To quote Sent/Received history


"Sent history"/"Received history" → Check history () →  (Accept)

■ To quote My profile

"My profile"

- Handset phone number is entered.

■ To quote Mail Group

"Mail Group" → Select mail groups → 


- Mail Group: (P.4-22)

■ To input recipients directly

"Direct input" → Enter mail address/phone number → 

■ Using Menu While Creating S!Mail

Operations such as changing to SMS, saving as draft, discarding, previewing are available.

- 1 In new S!Mail composition window,  (Menu) → Select each item

Item	Description
Change to SMS	Change the S!Mail to SMS.
Save*	Save the S!Mail that you are creating as draft.
Discard	Discard the S!Mail that you are creating.
Preview*	Preview the S!Mail that you are creating.

* Not available unless recipient/subject/message is entered.


■ Limiting S!Mail File Size

Limit S!Mail file size to create.

- 1 In Standby,  → "Settings" → "Send/Receive Settings" → "Send Settings"
- 2 "Send Mail Size" → "300KB"/"2MB"
The file size to send is limited/unlimited.

■ Quote Reply

Set whether to quote original text when replying to S!Mail.

- 1 In Standby,  → "Settings" → "Send/Receive Settings" → "Send Settings"
- 2 "Quote Reply" → "Quote"/"Not quote"
Quote Reply is set/canceled.


■ Limiting Image Size to Send

Limit the image file size to attach to S!Mail.

- 1 In Standby,  → "Settings" → "Send/Receive Settings" → "Send Settings"
- 2 "Sending Image Size" → "300KB"/"No Limit"
The image size to send is set/canceled.

■ Checking Delivery Reports




Delivery reports can be received when other party receives SMS.

- 1 In Standby,  → "Settings" → "Send/Receive Settings" → "Send Settings"

- 2 "Delivery Reports" → "Set"/"Do not set"
Delivery Reports are set/canceled.


■ Setting Signature

Set whether to add signature when creating S!Mail.

- 1 In Standby,  → "Settings" → "Send/Receive Settings" → "Send Settings"
- 2 "Signature" → "Set"/"Do not set"
Signature is set/canceled.
• When "Set" is selected, enter signature → 
→  (Done) to edit Signature.







■ Setting Text Encoding

Set Text Encoding for S!Mail that you send.

- 1 In Standby,  → "Settings" → "Send/Receive Settings" → "Send Settings"
- 2 "Charset of Composer" → "UTF-8"/"Shift_JIS"
Change the text encoding.

■ Creating/Sending SMS


E.g.) Select a Phone Book entry to send SMS
• Recipients can be selected from Sent/Received history or entered directly. (P.4-9)

- 1 In Standby,  → "Create New SMS"
New SMS composition window appears.
- 2 Select Recipient field →  → "Address book"
- 3 Select a recipient → 
• When multiple phone numbers are registered, select a phone number to send.
- 4 Select Message Field →  → Enter message → 
- 5  (Send)
SMS is sent.

■ Recipient Entry

- 1 Select Recipient field in new SMS composition window → 

■ To edit recipients

Select Recipient field where the recipient is entered in new SMS composition window → 

■ To delete recipients

In new SMS composition window, "✕" → "Yes"


2 Enter a recipient

The recipient is entered.

■ To quote Phone Book

"Address book" → Select a recipient → 

■ To quote Sent/Received history

"Sent history"/"Received history" → Check history ()
→  (Accept)

■ To quote My profile


"My profile"
• Handset phone number is entered.

■ To input recipients directly

"Direct input" → Enter a phone number → 

■ Using Menu While Creating SMS

Operations such as changing to S!Mail, saving as draft, discarding, previewing are available.

- 1 In new SMS composition window, 
(Menu) → Select each item


Item	Description
Change to Mail	Change SMS to S!Mail.
Save*	Save SMS that you are creating as draft.
Discard	Discard SMS that you are creating.
Preview*	Preview SMS that you are creating.

* Not available unless recipient/message is entered.

■ Using Draft

Reedit S!Mail/SMS that are saved as draft.

- 1 In Standby,  → "Draft/Unsent"

- 2 Select draft → 


Saved draft, new S!Mail composition/new SMS composition window appears.

- For the following operations, see "Creating/Sending S!Mail" (P.4-6), "Creating/Sending SMS" (P.4-9).

Receiving Mails

S!Mail and SMS are received automatically. Alternatively, mails and SMS can be received manually.

■ Checking New Mails

"" and information message appear when you receive new mails.

1 "New mail" in Information

Mail Details window appears.

- When multiple new mails are received, Inbox appears.



INFORMATION

- Open Inbox after Information appears. And then, Information does not appear even if unread mails are still left.

■ Receiving New Mails Manually

Unreceived mails are stored in server. Mails stored in server can be received manually.

1 In Standby, → "Inbox" → (Receive)

The mails are received.

- "No New Mail" appears when no new mail is received.

■ Receiving Server Mails

Both mails stored in server and partially received S!Mail can be received in one operation.

1 In Standby, → "Inbox" → (Menu) → "Receive all server mail"

Handset connects to server and receives mails.

- "No New Mail Server" appears when no server mail is received.

■ Checking Mails

- 1 In Standby,  → "Inbox"/"Sent"/"Draft/Unsent"
 - For Inbox, Inbox list window appears. Repeatedly, select the folder → .
 - When there are unread mails, the number of unread mails appears on the folder.

- 2 Select mail → 
Mail Details window appears.





INFORMATION

- Menu in Mail List Window: (P.4-15)
- Menu in Mail Details Window: (P.4-15)

■ Replying to Mails





● Replying in Mail List Window

- 1 In Mail List window, select a mail → 
(Menu) → "Reply"/"Reply to all"
- 2 Create mail →  (Send)
The mail is replied to.
 - When a S!Mail is replied to, "Re:" appears at the beginning of subject.






● Replying in Mail Details Window

- 1 In Mail Details window,  (Reply)
 - Alternatively, in Mail Details window, 
(Menu) → "Reply"/"Reply to all" to reply.
- 2 Create mail →  (Send)
The mail is replied to.
 - When a S!Mail is replied to, "Re:" appears at the beginning of subject.


Forwarding Mails

- 1 In Mail List window, select a mail → 
(Menu) → "Forward"
 - Alternatively, in Mail Details window, 
(Menu) → "Forward" to forward the mail.
- 2 Select Recipient field →  → Enter a recipient → Create the mail to forward →  (Send)
The mail is forwarded.
 - To enter recipients: (P.4-7)
 - When a S!Mail is forwarded, "Fw:" appears at the beginning of subject and the original text is quoted.

Protecting/Unprotecting Mails

- 1 In Mail List window, select a mail → 
(Menu) → "Protect"/"Unprotect"
 - Alternatively, in Mail Details window, 
(Menu) → "Protect"/"Unprotect" to protect/unprotect the mail.
- 2 "One Item"
The mail is protected/unprotected.
 - **To protect/unprotect multiple mails**
"Select Item" → Check mails () to protect → 
(Accept) → "Protect"/"Unprotect"
 - While selecting mails to protect,  (Menu) → "Select all"/"Unselect all" to select/cancel all the mails.

■ Deleting Mails


1 In Mail List window, select a mail → 
(Menu) → "Delete"

2 "One Item" → "Yes"


The mail is deleted.

■ To delete multiple mails

"Select Item" → Check mails (☑) to delete → 
(Accept) → "Yes"

• While selecting mails to delete,  (Menu) →
"Select all"/"Unselect all" to select/cancel all the mails.


● Deleting in Mail Details Window

1 In Mail Details window,  (Menu)

2 "Delete" → "Yes"

The mail is deleted.

■ Saving Attachment to Data Folder

1 In Mail Details window, select attachment
→ 

2 "Save to Other Storage"




The attachment is saved to Data Folder.

- Saved data can be checked in Data Folder. (P.9-2)
- Files that handset does not support are saved in Other Documents. However, some data may not be saved.

Using Menu of Mails

Operations such as replying or forwarding mails, deleting are available.

Menu in Mail List Window




- 1 In Standby,  → "Inbox"/"Sent"/"Draft/Unsent"
 - For Inbox, select the folder repeatedly → .
- 2  (Menu) → Select each item

Item	Description
Reply ^{*1}	Reply to the mail.
Reply to all ^{*1}	Reply to all members.
Forward ^{*1}	Forward mails.
Copy and Edit ^{*2}	Copy and edit mails.
Edit ^{*3}	Edit mails.
Delete	Delete mails.
Move ^{*1}	Move mails to another folder.
Unread/Read ^{*1}	Change mails to unread/read.
Protect/Unprotect	Change mails to protect/unprotect.
Flag	Flag/unflag mails.

Item	Description
Sort	Sort mails.
Search	Search mails.

- *1 Only available for Inbox
- *2 Only available for Sent
- *3 Only available for Draft/Unsent

Menu in Mail Details Window

- 1 In Standby,  → "Inbox"/"Sent"
 - For Inbox, select the folder repeatedly → .
- 2 Select mail → 
- 3  (Menu) → Select each item

Item	Description
Reply ^{*1}	Reply to the mail.
Reply to all ^{*1}	Reply to all members.
Forward ^{*1}	Forward mails.
Resend ^{*2}	Resend mails.
Delete	Delete mails.
Move Folder ^{*1}	Move mails to another folder.
Unread/Read ^{*1}	Change mails to unread/read.
Protect/Unprotect	Change mails to protect/unprotect.

Item	Description
Flag	Flag/unflag mails.
Copy Text	Copy text.
Copy Subject	Copy subject.
Header ^{*1}	Show header.
Spam mail report ^{*1}	Report mails as spam.
Text encoding ^{*1}	Select "Auto"/"Shift_JIS"/ISO-2022-JP/"UTF-8"/"EUC-JP" for text encoding.
Delivery information ^{*2}	Delivery report can be confirmed.

*1 Only available for Inbox


*2 Only available for Sent

Managing Inbox

Creating Folder

Folders can be newly created in Inbox.


- Add the filtering rules to created folders to filter mails automatically. (P.4-17)

- 1 In Standby,  → "Inbox"
- 2  (Menu) → "Create Folder"
- 3 Select Folder name field →  → Enter folder name → 
 - If you check "Secret Setting" () , the created folder does not appear. To show the folder temporarily,  (Menu) in Mail list window → "Displayed secret data."
- 4  (Save)
The folder is created.





■ Filtering Mails in Inbox

Mails can be automatically filtered according to other party's mail addresses, subjects.

- Filtering rules can be set to only created folders.




1 In Inbox list window, select a folder that you add Filtering Rules to →  (Menu) → "Edit Folder" → "Filtering Rules" → "Add Filtering Rules"

■ Deleting Filtering Rules that You Set


In Inbox list window, select a folder that you delete Filtering rules of →  (Menu) → "Edit Folder" → "Filtering Rules" → Select Filtering Rules to delete →  → "Yes" →  (Done) →  (Save)

2 "Mail Address" → Select each item
 • When an item other than "Mail Address" is selected, select "Domain"/"Subject."

Item	Description
Mail Address	Filter mails according to mail address.
Domain	Filter S!Mail according to domain.
Subject	Filter S!Mail according to subject. • SMS cannot be filtered according to subject.

3 Select entry field →  → Follow the screen display and enter Mail Address/ Domain/Subject to filter → "OK" →  (Done) →  (Save)
 Filtering Rules are set.


■ Editing Folder

- 1 Select a folder to edit in Inbox list window
→  (Menu) → "Edit Folder"

Folder edit window appears.

- For the following operations, see "Adding Folder" (P.4-16).

■ Deleting Folder

- 1 Select a folder to delete in Inbox list window
→  (Menu) → "Delete Folder"
→ "Yes"

The folder is deleted.

■ Using Spam Mail Folder

When function to sort spam mail is enabled, mails from unregistered contacts to Phone Book are not notified. Spam mails are stored in Spam Mail folder.

- 1 In Standby,  → "Settings" → "Spam Mail Setting" → Check "Enable function to sortspam mail" ()

Function to sort spam mail is enabled.



INFORMATION

- To check Spam mails stored in Spam Mail folder, the operations are as follows:
In Standby,  → "Spam Mail"


Urgent News


Handset receives and shows "Earthquake Early Warning", "Tsunami Warning" from Japan Meteorological Agency, "Disaster and Evacuation Information" from national or local government agencies, etc.

- It is set to ON by default.
- Alerts are not received during calls/transmissions or in poor signal conditions.
- Depending on usage/situation, handset may receive alerts for other areas or no alerts.
- Standby time may become short when Urgent News is set to ON.
- SoftBank Corp. cannot be held liable for any damages associated with this service, including accidents resulting from received or unreceived information, reception timing or reception failure.
- * Earthquake Early Warning is information that notifies you of areas where strong quakes (over intensity 4) are expected as soon as possible when the maximum intensity of the earthquake is estimated to be intensity 5 lower or more through the process that observation data detected near the epicenter is analyzed and the epicenter and scale (magnitude) are estimated immediately after an earthquake occurs.

■ Not Receiving Urgent News



Receiving Urgent News is enabled by default. Set not to receive Urgent News.

1 In Standby,  → "Tool" → "Disaster" → "Urgent News"


2  (Menu) → "Receive Setting" → Uncheck "Alert receiving setting" ()
Receiving Urgent News is disabled.



INFORMATION

- In Standby,  → "Tool" → "Disaster" → "Urgent News" →  (Menu) → "About Urgent News" to check Urgent News.


Using Urgent News

"" and information message appear and you are notified by specified ringtone and vibration when you receive Urgent News.


- Each specified ringtone varies for Earthquake Early Warning, Disaster and Evacuation Information/Tsunami Warning.
- Press any key to stop the specified ringtones and vibrations.
- The specified ringtones sound even in Manner Mode.




INFORMATION

- To cancel Vibration, in Standby,  → "Tool" → "Disaster" → "Urgent News" →  (Menu) → "Receive Setting" → Uncheck "Vibrate" ()

Checking Urgent News

1 In Standby,  → "Tool" → "Disaster" → "Urgent News"

2 Select mail → 


Urgent News appears.

- When the number of received Urgent News exceeds 30, the oldest Urgent News is deleted in order.

Other Functions


Setting Font Size

Set font size in Mail Details window

- 1 In Standby,  → "Settings" → "Font Size" → "Large"/"Middle"/"Small"
Font Size is changed.

Viewing Storage Information

Check the number and capacity of mails stored in handset.

- 1 In Standby,  → "Settings" → "Storage Information"
- 2 Select each item


Item	Description
Inbox	Show the number of mails in Inbox.
Sent	Show the number of mails in Sent.
Draft/Unsent	Show the number of mails in Draft/Unsent.
Capacity	Show Capacity of mails stored in handset.

Using Send/Receive Settings

Make Send/Receive Settings.

Receive Settings

When S!Mail whose size is more than 300KB is received, set whether to partially receive text, etc.

- 1 In Standby,  → "Settings" → "Send/Receive Settings" → "Receive Settings" → "Receive Mail Option" → "Receive All"/"Receive All (Less than 300KB)"
Whether to partially receive text is set.

Send Settings

Make S!Mail/SMS Send Settings.




- To limit mail file size to create: (P.4-8)
- To quote original text when replying to mail: (P.4-8)
- To limit image size to attach to S!Mail: (P.4-8)
- To receive Deliver reports of sent SMS: (P.4-8)
- To attach Signature to mail: (P.4-9)

- To set Text Encoding for mails that you send: (P.4-9)

Mail Group


Create and delete Mail Group.

1 In Standby,  → "Settings" → "Mail Group Settings"





2 "Add group" → Enter a group name → 
Mail Group is created.
• When Mail Group is already created,  (Add)
→ Enter a group name → .

Deleting Mail Group

1 In Standby,  → "Settings" → "Mail Group Settings"


2 Select a group to delete →  (Menu) → "Delete" → "Yes"
Mail Group is deleted.

To delete multiple mail groups

-  (Menu) → "Select delete" → Check Mail Group () to delete →  (Delete) → "Yes"
- While selecting Mail Group to delete,  (Menu) → "Select all"/"Unselect all" to select/cancel all the groups.

Viewing Your Phone Number/Mail Address


Show phone numbers, mail addresses registered in handset and My SoftBank.

1 In Standby,  → "Settings" → "Number/Address Settings"

2 Select each item

Item	Description
Phone Number	Handset phone number appears.
Mail Address	Your mail address appears. • Register mail address in handset beforehand. (P.4-5)
Visit My Softbank	Show My SoftBank. (P.5-4)

■ Resetting Mail Settings

- 1 In Standby,  → "Settings" → "Reset"
- 2 "Reset settings" → "Yes"
Mail settings are reset to default.

■ Resetting Mail Receive/ Send History

- 1 In Standby,  → "Settings" → "Reset"
- 2 "Reset receive/send history" → "Yes"
All receive/send histories are deleted.

■ Deleting All Server Mails

Delete all mails stored in server.

- 1 In Standby,  → "Settings" → "Reset"
- 2 "Delete server mail" → "Yes"
All mails stored in server are deleted.

Before Using Browser	P.5-2	Browser Settings	P.5-8
About SSL/TLS	P.5-2	Setting Privacy/Security	P.5-8
Using Browser	P.5-2	Setting Font Size	P.5-10
Browser Window	P.5-2	Selecting Search Engine	P.5-10
Using Browser Menu	P.5-3	Resetting Browser Settings	P.5-10
Operations While Using Browser			
.....	P.5-3		
Scrolling the Screen	P.5-3		
Stopping Loading Webpages	P.5-3		
Going Back to Previous Screen	P.5-3		
Using Menu of Browser Window	P.5-4		
My SoftBank	P.5-4		
Bookmark	P.5-5		
Registering Bookmark	P.5-5		
Viewing Bookmark	P.5-5		
Browsing History	P.5-5		
Using Downloaded Data	P.5-6		
Checking Downloaded Data	P.5-6		
Changing View Mode of Downloaded Data			
List Window	P.5-6		
Deleting Data	P.5-6		
Sending Data by S!Mail	P.5-7		
Editing Titles	P.5-7		
Viewing Details	P.5-7		

Before Using Browser

About SSL/TLS

Secure Sockets Layer (SSL) and Transport Layer Security (TLS) are encryption protocols that secure Internet transmissions of important/sensitive information such as credit card numbers and corporate secrets, providing protection against online threats (eavesdropping, falsification, impersonation, etc.).

CAUTION

- When opening a secured page, users must decide as their responsibility whether or not to open the page with use of SSL/TLS. SoftBank Corp. and the Certification Authorities Symantec Website Security G.K. and Cybertrust make no guarantees whatsoever to users regarding security of SSL/TLS.

Using Browser

View various websites or homepages by connecting to Internet.

Internet search by keyword is also available.

7 in Standby

Browser window appears.

- If Confirmation window appears, select "Yes." In Confirmation window, check "Don't ask again" () → "Yes" not to show Confirmation window from next time.

Browser Window

In Standby, press  to show Browser window.



Browser Window

- Site name
- Contents
- The number of tabs

The number of opened tabs appears.

Using Browser Menu

View Bookmark list, check Browsing history, make settings for browser, etc.


1 Long Press  in Standby

2 Select each item


Item	Description
Homepage	Show Homepage. (P.5-2)
My SoftBank	Connect to My SoftBank. (P.5-4)
Bookmark	Show Bookmark list. (P.5-5)
Web Search	Enter keyword or URL to show website.
History	Show History window. (P.5-5)
Download	Show downloaded data list window. (P.5-6)
Browser Settings	Show Browser Settings window. (P.5-8)

Scrolling the Screen

1  in Browser window


- Long Press  to scroll the screen continuously.

Stopping Loading Webpages

1  (Stop) in Browser window

- Only available during webpage-loading.

Going Back to Previous Screen

1  (Back) in Browser window

- To go to next screen,  (Menu) → "Forward."

Using Menu of Browser Window

Operations for Bookmark, Browsing history view, etc. are available.


1 In Browser window,  (Menu) → Select each item

Item	Description
Bookmark	Show Bookmark list. (P.5-5)
Regist Bookmark	Register the current website to Bookmark. (P.5-5)
History	Show History window. (P.5-5)
Web Search	Enter keyword or URL to show website.
Tab	Show the displayed tab list.
Reload	Reload to update website.
Forward	Go to next screen.
Pointer	Show Pointer.
Browser Settings	Make Browser Settings. (P.5-8)

Connect to My SoftBank.



1 Long Press  in Standby → "My SoftBank"

My SoftBank appears.




- Alternatively, in Standby,  → "Settings" → "Number/Address Settings" → "Visit My Softbank" to show My SoftBank.

Bookmark







■ Registering Bookmark

- 1 In Standby,  → Show website to register
- 2  (Menu) → "Regist Bookmark" → "Yes"
Bookmark is registered.

■ Viewing Bookmark


- 1 In Standby, Long Press  → "Bookmark"
Bookmark list window appears.
 - Alternatively, in Browser window,  (Menu) → "Bookmark" to show Bookmark.
- 2 Select Bookmark →  (Open)
Website registered to Bookmark appears.


Browsing History

- 1 In Standby, Long Press  → "History"
History window appears.
 - Alternatively, in Browser window,  (Menu) → "History" to show History.
 -  (Menu) → "Open in new tab" to show in new tab.
 - Select History to delete →  (Menu) → "Delete" → "Yes" to delete History.
 - Select History →  (Detail) to show Web page information.
- 2 Select History →  (Open)
Website appears.

Using Downloaded Data


■ Checking Downloaded Data

1 In Standby, Long Press  → "Download"
Downloaded data list window appears.


2 Select data → 
The data is played/shown.

■ Changing View Mode of Downloaded Data List Window

Set View Mode of downloaded data list window.



1 In Downloaded data list window, 
(Menu) → "View Mode" → "Thumbnail"/"List"/"List(Details)"
View Mode is changed.

■ Deleting Data


1 In Downloaded data list window, 
(Menu) → "Delete"

2 "Delete One" → "Yes"
The data is deleted.

■ To delete multiple data

"Delete Multiple" → Check data () to delete →  (Delete) → "Yes"
• While selecting downloaded data to delete, 
(Menu) → "Check all"/"Uncheck all" to select/cancel all the data.

■ Sending Data by S!Mail


1 In Downloaded data list window, 
(Menu) → "Send"


2 "Send One"

New S!Mail composition window with data attached to appears.





- For the following operations, see "Creating/Sending S!Mail" (P.4-6).

■ To attach multiple contacts

"Send Multiple" → Check data () to send → 
(Send)


- While selecting data to send,  (Menu) → "Check all"/"Uncheck all" to select/cancel all the data.
- For the following operations, see "Creating/Sending S!Mail" (P.4-6).

■ Editing Titles

1 In Downloaded data list window, select data →  (Menu) → "Edit Title" → 
→ Edit the title →  →  (Done)

The data title is changed.

■ Viewing Details


1 In Downloaded data list window, select data →  (Menu) → "Details" → "OK"
Details on data appear.

Browser Settings

Set Browser operations.

1 In Standby,  →  (Menu) → "Browser Settings"

Browser Settings window appears.

- Alternatively, in Standby, Long Press  → "Browser Settings" to show the window.

2 Set each item

Item	Description
Privacy/Security	Make settings for Browser security such as Cache, deleting browsing history. (P.5-8)
Font Size	Set displayed Font Size. (P.5-10)
Search Engine	Select Search Engine. (P.5-10)
Browser Reset	Reset Browser Settings. (P.5-10)

Setting Privacy/Security

Delete Cache, browsing history and set Cookies.

Deleting Cache

1 "Privacy/Security" in Browser Settings window

2 "Clear Cache" → "Yes"
Cache is deleted.

Deleting History

Delete all saved browsing history.

1 "Privacy/Security" in Browser Settings window

2 "Clear History" → "Yes"
Browsing history is deleted.

■ Accepting Cookie

Set whether to save and accept Cookies.

1 "Privacy/Security" in Browser Settings window

2 Check/Uncheck "Accept Cookies" () / ()

Saving and accepting Cookies are enabled/disabled.

■ Deleting Cookies

1 "Privacy/Security" in Browser Settings window

2 "Clear all Cookies" → "Yes"
Cookies are deleted.

■ Enabling Javascript

Set whether to use Javascript.

1 "Privacy/Security" in Browser Settings window

2 Check/Uncheck "Enable Javascript" () / ()

Javascript is enabled/disabled.

■ Blocking Pop-ups

Set whether to show Pop-ups in Browser window.

1 "Privacy/Security" in Browser Settings window

2 Check/Uncheck "Block Pop-ups" () / ()

Pop-ups are blocked/unblocked.

■ Setting Font Size

Set displayed Font Size in Browser.

- 1 In Browser Settings window, "Font Size" → "Large"/"Middle"/"Small"
Font Size is changed.

■ Selecting Search Engine

Select Search Engine for keyword search.

- 1 In Browser Settings window, "Search Engine" → "Google"/"Yahoo! JAPAN"/"Bing"
Search Engine is set.

■ Resetting Browser Settings

- 1 In Browser Settings window, "Browser Reset" → "Yes"
Browser Settings are reset to default.

6 Camera

Precautions for Using Camera	P.6-2
Shutter Click	P.6-2
File Formats/Save Location	P.6-2
Photo Size/Movie Size	P.6-3
Viewfinder	P.6-3
Photo Shooting	P.6-4
Photo Shooting Mode	P.6-4
Shooting Photos	P.6-4
Using Menu of Photo Viewfinder	P.6-4
Movie Shooting	P.6-5
Movie Shooting Mode	P.6-5
Shooting Movies	P.6-5
Using Menu of Movie Viewfinder	P.6-5
Checking Images/Videos	P.6-6
Viewing/Playing Images/Videos	P.6-6
Editing Images	P.6-6

Precautions for Using Camera

- Mind etiquette when using Camera. Before capturing an important scene, take some test shots and view results to ensure the scene will be captured properly.
- Do not use Camera where prohibited.
- Images taken with Camera are intended for personal use, and may not be used or forwarded without the permission of the copyright holder (photo subject), etc.
- Lenses soiled with fingerprint smudges and grease may not focus well. Clean Lens off with a soft cloth.
- Hold handset firmly to avoid camera shaking, which may blur images especially in dark places.
- If handset has been left in a hot place for a prolonged period of time, image quality when shooting and saving images may be affected.
- Exposing Lens to direct sunlight may degrade Internal Color Filter, resulting in poor image quality.
- Camera cannot be activated when Battery level is low.
- When Battery level is low or no operations are performed for two minutes after Camera is activated, Camera is deactivated.

Shutter Click

Even in Manner mode, the shutter click sounds for photos. Also during video shooting, start and stop beeps sound. Sound volume is fixed.

File Formats/Save Location

Captured Images/Videos are saved to handset or SD Card. Saved Images/Videos can be checked in Data Folder (P.9-2). File Formats are as follows:

Item	File Formats
Image	JPEG (.jpg)
Video	MP4 (.mp4)


To save to SD Card, change the save location. (P.6-4, P.6-5)

To check memory space: (P.10-10)

Photo Size/Movie Size

Photo size and Video size to set are as follows:

Item	Photo/Video Size
Image	1200 × 1600 (UXGA)
	1024 × 1280 (SXGA)
	960 × 1280 (WXGA)
	768 × 1024 (XGA)
	600 × 800 (SVGA)
	240 × 320 (QVGA)
Video	HD 720p
	SD 480p
	QVGA

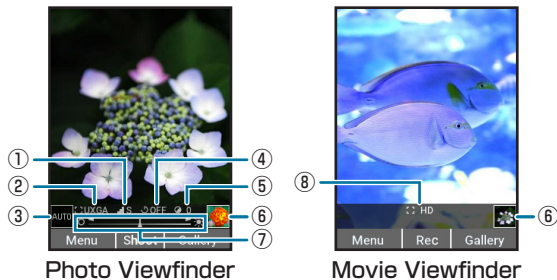


- ① Shooting picture quality
- ② Shooting size
- ③ Shooting scene
- ④ Self-timer
- ⑤ Exposure
- ⑥ The latest image
The latest Photo/video that has been shot appears.
- ⑦ Brightness adjustment bar
Press  to adjust brightness.
- ⑧ Recording size

Photo Shooting

Photo Shooting Mode



Photos are shot in portrait view.

Shooting size, self-timer, exposure, picture quality, scene, effect can be set for photo shooting. (P.6-4)

Shooting Photos

1 in Standby


Photo Viewfinder appears.

- Alternatively, in Standby,  → "Camera" to activate Camera. Or in Standby, Long Press  → "Photo" to activate Camera.

2 Aim Camera at subject → (Shoot)/



The shutter click sounds; image is shot and saved.

- Press  (Gallery) to check an image that you shot.

Using Menu of Photo Viewfinder

Switch to Movie and change settings.

1 In Standby, → (Menu)

2 Select each item

Item		Description
Switch to Movie		Switch shooting mode to Movie.
Setting (Photo)	Size	Set shooting size. (P.6-3)
	Self-timer	Use self-timer.
	Exposure	Adjust exposure.
	Picture Quality	Set picture quality.
	Scene	Set shooting scene.
	Effect	Set effect.
Setting (General)	Storage (Phone or SD)	Set save location.
	Camera Initialize	Initialize photo settings.

Movie Shooting

Movie Shooting Mode

Movies are shot in portrait view.
Recording size can be set for movie shooting.
(P.6-5)

Shooting Movies

1 Long Press in Standby → "Movie"

Movie Viewfinder appears.


- In Photo Viewfinder,  (Menu) → "Switch to Movie" to activate.

2 Aim Camera at subject → (Rec)/

Shooting start beep sounds, and recording starts.

3 (Stop)/

Shooting stop beep sounds, and video is saved.

- Press  (Gallery) to check a video that you recorded.

Using Menu of Movie Viewfinder

Switch to Photo and change settings.

1 Long Press in Standby → "Movie" → (Menu)





2 Select each item

Item		Description
Switch to Photo		Switch shooting mode to Photo.
Setting (Movie)	Size	Set recording size. (P.6-3)
Setting (General)	Storage (Phone or SD)	Set save location.
	Camera Movie Initialize	Initialize movie settings.


Checking Images/Videos

Viewing/Playing Images/Videos

View images and play videos.

- 1 In Standby,  → "Data Folder"
- 2 "Pictures"/"Videos"
 - When checking images/videos saved to SD Card, press  (SD) to switch to SD Card.
- 3 Select a folder → 
- 4 Select an image/a video → 






The image/video appears.



 - For videos, press  (Play) repeatedly to play video.
 - Operations for images: (P.9-3)
 - Operations for videos: (P.9-4)



Editing Images

Images can be edited such as changing size or effect, rotating images.

- Images cannot be edited depending on the type and size of image.

- 1 In Standby,  → "Data Folder"
- 2 "Pictures" → Select a folder →  → Select an image to process → 
- 3  (Edit)
- 4  (Menu) → Select each item

Item	Description
Resize	Resize the image.
Rotate	Rotate the image with  (Left) and  (Right).
Effect	Change the effect.
Cancel	Cancel editing images.

- 5  → Edit image →  (Save) → "Yes"
The edited image is saved.

Alarm	P.7-2	Checking Memos.....	P.7-11
Registering Alarm.....	P.7-2	Editing Memo.....	P.7-12
Turning Alarm OFF.....	P.7-2	Deleting Memo.....	P.7-12
Editing Alarm.....	P.7-2	Voice Recorder	P.7-12
Deleting Alarm.....	P.7-3	Recording Voice.....	P.7-12
Stopping Alarm Sound.....	P.7-3	Setting Save Location for Voice.....	P.7-12
Timer	P.7-3	Playing Voice.....	P.7-13
Using Timer.....	P.7-3	Deleting Voice.....	P.7-13
Stop Watch	P.7-4	Viewing Voice Details.....	P.7-13
Using Stop Watch.....	P.7-4	Calculator	P.7-14
Infrared	P.7-4	Using Calculator.....	P.7-14
Receiving Data.....	P.7-4	Converter	P.7-15
Sending Data.....	P.7-5	Converter Window.....	P.7-15
Disaster	P.7-6	Using Converter.....	P.7-15
Urgent News.....	P.7-6	あんしんバックアップ (Anshin Backup)	P.7-16
Registering Safety Information (Disaster Message Board).....	P.7-6	Login with another SoftBank Account	P.7-17
Sending Voice Message (Disaster Voice Messaging).....	P.7-7	Checking Save/Restore History.....	P.7-17
Playing Received Voice Message (Disaster Voice Messaging).....	P.7-8	Checking Help in あんしんバックアップ (Anshin Backup).....	P.7-17
Calendar	P.7-9	Saving Data.....	P.7-18
Viewing Calendar.....	P.7-9	Restoring Data.....	P.7-18
Registering Schedule.....	P.7-9	Saving Data Regularly and Automatically	P.7-19
Viewing Schedule List.....	P.7-10	Reloading Phone Book Data Saved to Server in Case of Handset Upgrade/ Replacement.....	P.7-20
Checking Schedule.....	P.7-10	Deleting Saved Data.....	P.7-20
Editing Schedule.....	P.7-10	Notification List	P.7-21
Deleting Schedule.....	P.7-11	Application	P.7-22
Notepad	P.7-11		
Creating Memos.....	P.7-11		

Alarm

You are notified by alarm at the specified time.


■ Registering Alarm

Up to twenty alarms can be added.

- After Alarm is set, "🌐" appears in Status Bar.

1 In Standby,  → "Alarm" → "Alarm" →  (Menu) → "Add"

2 Select each item

Item	Operation/Description
Alarm set time	Enter start time for Alarm.
Repeat	Select whether to repeat Alarm. To select "Specify day": Check days of the week (☑) to specify →  (Done)
Snooze settings	Select Snooze interval. When Snooze is set, Alarm goes off repeatedly at the specified interval after Alarm stops ringing.
Label	Enter Alarm name
Prioritize alarm	Set whether to play alarm in Manner mode. Check/Uncheck "Prioritize alarm" (☑)/(☐)

3  (Set)



Alarm is registered.

■ Turning Alarm OFF



1 In Standby,  → "Alarm" → "Alarm" → Uncheck Alarm (☐) to turn OFF
Alarm is turned OFF.

■ Editing Alarm




1 In Standby,  → "Alarm" → "Alarm" → Select Alarm to edit

2  (Edit) → Enter each item →  (Set)
Editing Alarm is completed.









Deleting Alarm

- 1 In Standby,  → "Alarm" → "Alarm" → Select Alarm to delete
- 2  (Menu) → "Delete" → "Yes"
Alarm is deleted.

Stopping Alarm Sound


- 1 Press any key after Alarm goes off
Alarm sound is stopped.
 - To cancel Snooze, // → "Yes."

Using Timer

- 1 In Standby,  → "Alarm" → "Count Down Timer"
Count Down Timer window appears.
- 2  (Edit) → Specify time →  (Done)
 - To have the timer go off even in Manner Mode,  (Settings) → Check "Prioritize timer" ()
- 3  (Start)
The timer starts counting down.
 - To stop the timer counting down, press  (Stop). Press  (Start) again to have the timer restart counting down.
 - To reset the timer, press  (Reset) while the timer is counting down or counting down is stopped.





Stop Watch

■ Using Stop Watch

1 In Standby,  → "Alarm" → "Stop Watch"
Stop Watch window appears.

2  (Start)

Stop Watch starts measuring.

- To stop Stop Watch, press  (Stop) while Stop Watch is measuring. Press  (Start) again to have Stop Watch restart measuring.
- To record lap time and split time, press  (LAP) while Stop Watch is measuring.
- To reset the measurement result, press  (Reset).

Infrared

Exchange data (profile, Phone Book entries, etc.) with other devices such as mobile phones using infrared. With handset and other device close together, align their infrared ports in a straight line.

- Operations may differ depending on the type of data being sent/received.

CAUTION

- It may not be possible to use infrared transmission or to transmit properly depending on the other device or on the data. If another application activates during transmission, it will also cause transmission to end.
- Do not point Infrared Port at eyes while transmitting. May affect vision.



■ Receiving Data

1 In Standby,  → "IrDA"

2 "Receive" → "1 Record"/"All Records"

3 Align infrared ports on handset and sending device

Infrared transmission starts, and the data is received.

- When "All Records" is selected, input the same auth code as the sender's →  →  (Accept)

4 "Yes" → "OK"


Data is saved.

- When all contacts in Phone Book are received, confirmation window of additional/overwriting registration appears. Follow onscreen instructions.

■ Sending Data

■ Sending 1 Contact

1 In Standby,  → "IrDA" → "Send"

2 "1 Record" → Select a contact to send → 




3 Align infrared ports on handset and receiving device

Infrared transmission starts, and the contact is sent.

4 "OK"
The contact is sent.

■ Sending All Contacts

1 In Standby,  → "IrDA" → "Send"

2 "All Records" → Enter a password → 
→ Enter the same auth code as the receiver's →  →  (Accept) → "Yes"

3 Align infrared ports on handset and receiving device

Infrared transmission starts, and the contacts are sent.

4 "OK"
All contacts are sent.

■ Sending Profile

1 In Standby,  → "IrDA" → "Send"

2 "My Profile"

3 Align infrared ports on handset and receiving device

Infrared transmission starts, and the profile is sent.

4 "OK"
Your profile is sent.

Disaster


Urgent News

For details, see "Urgent News" (P.4-19).

Registering Safety Information (Disaster Message Board)

Disaster Message Board is a service that you register your safety information when your call may not go through easily due to voice transmission congestion in the event of a large-scale disaster. And if Setup Auto Notify is set, your safety information can be automatically sent by mail to your family or friends that you registered beforehand when you register safety information.




- Registered information can be viewed on mobile phones by SoftBank as well as other carriers' phones. For details on Disaster Message Board, see SoftBank Website.

1 In Standby,  → "Tool" → "Disaster" → "Disaster Message Board"

Disaster Message Board menu appears.

- If Confirmation window appears, follow on-screen instructions.


2 "Register"

3 Check the state () → Select Enter Message field →  → Enter comment →  → "Register"

Safety information is registered.

Deleting Registered Safety Information


1 In Disaster Message Board menu, "Delete" → Select safety information to delete →


 → "Delete"

- In Disaster Message Board menu, "Delete" → "Delete All" → "Yes" to delete all safety information.

Checking Safety Information




1 "Confirm" in Disaster Message Board menu

2 Enter phone number to confirm →  → "Search"

3 Select date and time to confirm →  Safety information appears.

-  (Menu) → "Get the latest" to update safety information.








■ Registering Recipient Address for Automatic Transmission

- 1** "Setup Auto Notify" in Disaster Message Board menu
- 2** Select Recipient Field →  → Enter a recipient → 
 - When entering recipients,  (Search) → "Search Contacts" to refer to recipients from Phone Book.
- 3** "OK"
Registering the recipient is completed.

■ Sending Voice Message (Disaster Voice Messaging)


Disaster Voice Messaging is a service that records and sends a voice message to desired recipients when your call may not go through easily due to voice transmission congestion in the event of a large-scale disaster.

- Not available when you receive no signal or Airplane mode is set. For details on Disaster Voice Messaging, see SoftBank Website.

- 1** In Standby,  → "Tool" → "Disaster" → "Disaster Voice Messaging"
Disaster Voice Messaging window appears.
 - If Confirmation window appears, follow on-screen instructions.
- 2** "Send Voice"
- 3** "Name or phone number" → Enter a recipient →  →  (Next)
 - When entering recipients,  (Search) → "Search Contacts"/"Search History" to refer to recipients from Phone Book or Call Log.
- 4**  (Record) → Record a message → 
The voice message is recorded.
- 5** "Send" → "Yes"
Voice message is sent.
 - Select "Play" to confirm record message.
 - To record again, "Record again" → "Yes" →  (Record).

■ Playing Received Voice Message (Disaster Voice Messaging)

When you are notified of received voice message by SMS, "☎" appears in Status Bar. Receive (download) and play a voice message to hear the sender's voice.

1 In Standby,  → "Tool" → "Disaster" → "Disaster Voice Messaging"

Disaster Voice Messaging window appears.







- If Confirmation window appears, follow on-screen instructions.

2 "Listen"


Listen list window appears.

3 Select a message →  → "Yes"

Received voice message window appears, and voice message is played automatically.


- To stop the message, press  (Stop) while playing the message.
- To update the message, press  (Update).
- To change the volume,  (Menu) → "Volume" →  → .
- To change the speaker,  (Menu) → "Speaker" → "On"/"Off."

■ Replying by Voice Message

1  (Reply) in Received voice message window

- Follow onscreen instructions.

■ Deleting Messages

1 In Listen list window, select a message to delete →  (Delete)

2 "Selected" → "Yes"

The message is deleted.

■ To delete multiple messages



"More" → Check message () to delete →  (OK) → "Yes"

Calendar

Viewing Calendar

1 in Standby

Calendar window appears.

- Alternatively, in Standby,  → "Tool" → "Calendar" to show Calendar window.
- Press  (Change) to change Calendar to one week display.

Registering Schedule

1 In Calendar window, (Menu) → "Add" Schedule creation window appears.


2 Enter each item

Item	Description
Subject	Enter Subject.
Start date	Select Start date.
Start time	Select Start time.
End date	Select End date.
End time	Select End time.

Item	Description
All day	Set whether to have schedule All day. Check/Uncheck "All day" (<input checked="" type="checkbox"/>) / (<input type="checkbox"/>)
Repetition	Set whether to register repeatedly.
Notification	Set whether to notify.
Location	Enter Location.
Color	Select Color of schedule.
Detail	Enter Detail.


3 (Set) → "OK" Schedule is registered.

Viewing Schedule List

- 1 In Calendar window,  (Menu) → "List Display" → "Schedule"
Schedule list window appears.



Viewing Birthday List

View contacts whose birthdays are registered to Phone Book as a list.



- 1 In Calendar window,  (Menu) → "List Display" → "Birthday"
Birthday list window appears.

Setting Birthday Reminder



Set to remind you of Birthday at the specified time.

- 1 In Birthday list window,  (Settings) → "Birthday reminder time" → Select time → 
Birthday reminder time is set.



Checking Schedule

- 1 In Calendar window, select a date → 
Schedule list window appears.
- 2 Select schedule → 
Schedule Details window appears.



Editing Schedule

- 1 In Schedule Details window,  (Menu) → "Edit"
- 2 Enter each item →  (Set) → "OK"
Edit is completed.




■ Deleting Schedule

- 1** In Calendar window, select a date → 
→ Select schedule to delete
- 2**  (Menu) → "Delete events"
- 3** "Delete one" → "Yes" → "OK"
Schedule is deleted.



■ To delete multiple schedules

- "Delete multiple" → Check schedules () to delete →  (Delete) → "Yes" → "OK"
- While selecting schedules to delete,  (Menu) → "Check all"/"Uncheck all" to select/cancel all the schedules.

■ Creating Memos




- 1** In Standby,  → "Tool" → "Notepad"
Notepad Entry window appears.
• When Notepad list window appears,  (Menu) → "Add."
- 2** Enter contents →  → "OK"
Notepad is saved.

■ Checking Memos




- 1** In Standby,  → "Tool" → "Notepad"
Notepad list window appears.
- 2** Select a memo →  (Detail)
Notepad Details window appears.

Voice Recorder






Editing Memo

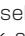- 1 In Notepad list window, select a memo →  (Edit)
Notepad Entry window appears.
 - Alternatively, in Notepad list window, press  (Edit) to show.
- 2 Edit contents →  → "OK"
Editing the memo is completed.


Deleting Memo

- 1 In Memo list window, select a memo to delete
- 2  (Menu) → "Delete"
- 3 "Delete one" → "Yes" → "OK"
The memo is deleted.
 - **To delete multiple memos**
"Delete multiple" → Check memos () to delete →  (Delete) → "Yes" → "OK"
 - While selecting memos to delete,  (Menu) → "Check all"/"Uncheck all" to select/cancel all the memos.



Recording Voice

- 1 In Standby,  → "Tool" → "Voice Recorder"
Voice Recorder window appears.
- 2 "Record"
- 3  (Record)
Recording starts.
- 4 Record voice →  (Stop) → "OK"
Voice data is saved.
 - Press  (Pause) to pause the recording while recording voice. Press  (Record) to resume recording.
 - Voice Play window appears after recording.



Setting Save Location for Voice

- Change save location for voice to handset storage/SD Card
- 1 In Voice Recorder window,  (Menu) → "Storage" → "Phone"/"SD" → "OK"
Save location is set.



■ Playing Voice

- 1 In Voice Recorder window, "Play"
Voice list window appears.
- 2 Select voice to play →  →  (Play)
Voice Play window appears, and recorded voice is played.
 - Operations while playing voice: (P.9-3)

■ Deleting Voice



- 1 In Voice list window, select voice to delete
- 2  (Menu) → "Delete"
- 3 "Delete one" → "Yes" → "OK"
Voice is deleted.
 - Alternatively, in Voice play window,  (Menu) → "Delete" → "Yes" to delete voice.

■ To delete multiple voices

- "Delete Multiple" → Check voices () to delete →  (Delete) → "Yes" → "OK"
- While selecting voices to delete,  (Menu) → "Check all"/"Uncheck all" to select/cancel all the voices.

■ Viewing Voice Details

Check save date, size, etc.

- 1 In Voice list window, select voice that you show details on →  (Menu) → "Details"
Details on voice appear.
 - Alternatively, in Voice play window,  (Menu) → "Details" to show details.


Calculator

Using Calculator

1 In Standby,  → "Tool" → "Calculator"
Calculator window appears.









2 Enter formula



Calculation result appears.

- Press  (Menu) to copy and paste the result.

Operations for Calculator

Operations for Calculator are as follows:


Calculation	Operation key
+ (Add)	
- (Subtract)	
× (Multiply)	
÷ (Divide)	
= (Equal)	 (=)
c (Clear)	 / CLEAR
AC (All clear)	Long Press 
. (Decimal point)	

Calculation	Operation key
% (Percent)	 (%)
+/- (Symbol change)	

Converter

Convert the unit of length, weight, area, temperature.



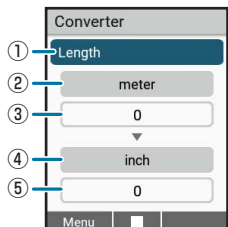






Converter Window



Converter Window

- ① Unit type
- ② Unit to convert
- ③ Numerical value to convert
- ④ Converted unit
- ⑤ Converted numerical value

Using Converter

- 1** In Standby,  → "Tool" → "Converter"
Converter window appears.
- 2** Select unit type field →  → Select unit type to convert → 
- 3** Select unit field to convert →  →
Select unit to convert →  → Select numerical value field to convert →  →
Enter numerical value to convert → 
- 4** Select converted unit field →  →
Select converted unit → 
The result appears in converted numerical value field.

あんしんバックアップ (Anshin Backup)

This application saves each data such as Phone Book/Calendar/Call Log/image/music/movie to cloud server or SD Card, or returns data stored in server to handset. It is convenient to transfer data from an old handset to your new handset in the case of handset upgrade/replacement.

- When SD Card is not inserted, data is saved to handset memory. When saving is completed, save location appears.
- Be sure to delete data beforehand in the case of contract change such as the ownership of handset is handed over to a third party. Some data may not be deleted depending on the type of contract change.
- Note that SoftBank Corp. is not liable for any loss/alteration of saved/restored data. And SoftBank Corp. is not liable for any results arising from this application use.
- Specifications may change without notice.

File Name of Saved Data

The file name of saved data is a save date. For example, if a contact file is saved on November 15 in 2017, the name will be "17111500.vcf." When multiple files are saved on the same day, the name will be "17111501.vcf" and the lower 2-digit number will be increased.

Savable Number of Files

Up to 100 files can be saved to server/SD Card, etc. respectively for each Phone Book data/Calendar data/Call Log data/image data/music data/movie data.

When Data Cannot be Saved


When you make settings such as Secret Mode so that you do not allow a third party to view data, some data may not be saved to server.

Restored Data

For data restored by this application, various applications corresponding to each data are available.

■ Login with another SoftBank Account

When saving to data server/restoring from data server, the account that you use can be changed.


- 1 In Standby,  → "Tool" → "あんしんバックアップ (Anshin Backup)"
 - If Confirmation window appears, follow on-screen instructions.
- 2 "その他の機能 (Other Functions)" → "他のアカウントでログイン (Login with another account)"
- 3 Enter the phone number and password → "ログイン (Login)" → "同意する (Agree)"
 - If Confirmation window appears, follow on-screen instructions.
 - Enter SoftBank account to use.

■ Checking Save/Restore History

- 1 In Standby,  → "Tool" → "あんしんバックアップ (Anshin Backup)"
- 2 "その他の機能 (Other Functions)" → "保存履歴 (Save History)"

Save history appears.

■ Checking Help in あんしんバックアップ (Anshin Backup)

- Check application usage, terms of use, application information.
- 1 In Standby,  → "Tool" → "あんしんバックアップ (Anshin Backup)"
 - 2 "その他の機能 (Other Functions)" → "ヘルプ (Help)"

3 "ヘルプ (Help)"/"利用規約 (Terms of use)"/"アプリケーションについて (About applications)"

Each information appears.

■ Saving Data

Save (back up) each data to server/SD Card, etc.

- Since data is saved as available format for other mobile phones, some part of the data may be discarded or altered.
- Call Log/image/music/movie can be saved to only SD Card.

1 In Standby, → "Tool" → "あんしんバックアップ (Anshin Backup)"

- If Confirmation window appears, follow on-screen instructions.

2 "データの保存 (Data Save)"

3 "サーバーにデータを保存 (Save data to server)"/"SD カードにデータを保存 (Save data to SD Card)"

- If Confirmation window appears, follow on-screen instructions.

- When authentication screen appears, enter the phone number and password → "ログイン (Login)" → "同意する (Agree)."

4 Check item () to save →

5 (実行 (OK)) → "OK"

The data is saved.

- To suspend saving, select "キャンセル (Cancel)."
- When data saving is suspended, the data is not saved.

■ Restoring Data

Select data stored to server/SD Card, etc. and restore it to handset memory.

- Call Log/image/music/movie can be stored from only SD Card.
- Some data may not be restored depending on data. And some part of restored data may be discarded or changed.
- The contents of saved data are restored additionally.

1 In Standby, → "Tool" → "あんしんバックアップ (Anshin Backup)"

2 "データの復元 (Data Restore)"

3 "サーバーからデータを復元 (Restore data from server)"/"SD カードからデータを復元 (Restore data from SD Card)"

- If Confirmation window appears, follow on-screen instructions.
- When authentication screen appears, enter the phone number and password → "ログイン (Login)" → "同意する (Agree)."

4 Check item () to restore → Select data to restore →

- If Confirmation window appears, follow on-screen instructions.

5 (実行 (OK)) → "OK"

The data is restored to handset.

- To suspend restoring, select "キャンセル (Cancel)."
- When data restoring is suspended, data is not restored.

■ Saving Data Regularly and Automatically

Save each data to server/SD Card, etc. regularly and automatically.


- Regular save is enabled by default.
- Save all Phone Book data/Calendar data/Call Log data/image data/music data/movie data to server/SD Card, etc.
- Saving data by selecting data one by one or part of data is not available.
- When "サーバーに保存 (Save to server)" is set for save location, only Phone Book data/Calendar data is saved.
- Since data is saved as available format for other mobile phones, some part of data may be discarded or altered.

1 In Standby, → "Tool" → "あんしんバックアップ (Anshin Backup)"

- If Confirmation window appears, follow on-screen instructions.

2 "定期保存 (Regular save)"


- If Confirmation window appears, follow on-screen instructions.

- 3** Set 更新頻度 (Update frequency)/ 日付 (Date)/ 保存先 (Save location)/ 対象 (Subject) →  (保存 (Save))

Regular save is set.





Reloading Phone Book Data Saved to Server in Case of Handset Upgrade/Replacement

You can transfer data stored in the S!Phone Book backup server to Phone Book of your new handset if you previously used 3G mobile phone and S!Phone Book backup service.

- 1** In Standby,  → "Tool" → "あんしんバックアップ (Anshin Backup)"
- If Confirmation window appears, follow on-screen instructions.
- 2** "電話帳の移行 (Data transfer of address book)"
- 3** "OK" → "Yes"
- Loading the data is completed.
- If Confirmation window appears, follow on-screen instructions.
 - When authentication screen appears, enter the phone number and password → "ログイン (Login)" → "同意する (Agree)."

Deleting Saved Data

Delete data saved to server/SD Card, etc. Note that deleted data cannot be restored.

- 1** In Standby,  → "Tool" → "あんしんバックアップ (Anshin Backup)"
- 2** "その他の機能 (Other Functions)"
- 3** "保存データの削除 (Delete saved data)"
- 4** "サーバーのデータを削除 (Delete data in server)"/"SD カードのデータを削除 (Delete data in SD Card)"
- If Confirmation window appears, follow on-screen instructions.
 - When authentication screen appears, enter the phone number and password → "ログイン (Login)" → "同意する (Agree)."
- 5** Check files () to delete →  →  (Delete)
- While selecting files to delete,  (Menu) → "Check all"/"Uncheck all" to select/cancel all the files.

Notification List

6 "OK" → "OK"

The data is deleted.

- To suspend deleting, select "キャンセル (Cancel)."

Check new notifications (incoming call, mails, etc.) or notifications from each function.


7 In Standby, → "Tool" → "Notification List"

Notification List window appears.

- Selecting notification activates corresponding function.

Application

Check the list of installed applications in handset.

1 In Standby,  → "Tool" → "Application"

Application list window appears.

- Select application →  to activate application.




Handset Code	P.8-2
Registering Handset Code.....	P.8-2
Changing Handset Code.....	P.8-2
Resetting Handset Code.....	P.8-2
Security Functions	P.8-3
Using Screen Lock.....	P.8-3
Using Secret Mode.....	P.8-4

Handset Code




Set a four- to eight-digit code.



■ Registering Handset Code

Registering handset Code is required for the first time activation. Operations to register are as follows:



- 1 In Standby,  → "Settings" → "Security" → "Chg. Handset Code" → "OK"
- 2 Enter a password to register → 
- 3 Enter a password to register again →  → "OK"
Handset Code is set.

■ Changing Handset Code

- 1 In Standby,  → "Settings" → "Security" → "Chg. Handset Code"
- 2  → "Password change" → "OK"
- 3 Enter current password →  → "OK"

- 4 Enter new password → 
- 5 Enter new password again →  → "OK"
Handset Code is changed.

■ Resetting Handset Code


- 1 In Standby,  → "Settings" → "Security" → "Chg. Handset Code"
- 2  → "Password Reset" → "Yes" → Follow onscreen instructions
Handset Code is reset.
 - To reset Handset Code, My SoftBank authentication is required. My SoftBank authentication can be set from My SoftBank Website.


Security Functions

Various security functions protect handset and data in handset.

Using Screen Lock

When turning on the screen, only entering PIN or password enables handset operations.



- When Screen Lock is not canceled, press  (EMG.CALL) to call 110 (Police), 119 (Fire & Ambulance) or 118 (Japan Coast Guard).

1 In Standby,  → "Settings" → "Security" → "Screen Lock"

Screen Lock setting window appears.

- When "PIN" or Password" has already been set, operations for canceling Screen Lock is required.

2 "PIN" / "Password" → "OK"


3 Enter PIN/password →  → Enter Pin/password again → 
Screen Lock is set.

CAUTION



- Be sure to make a separate note of PIN/password that you registered for canceling Screen Lock so that you will not forget it. If you forget the code, servicing is required at your nearest SoftBank shop. In that case, note that the contents that you registered/set will be lost.

Canceling Screen Lock

When PIN/Password Entry window appears after the screen is turned on, canceling Screen Lock is as follows to use handset:





1 Enter PIN/password that you set in PIN/Password Entry window → 
Screen Lock is canceled.

Canceling Screen Lock Settings

1 In Standby,  → "Settings" → "Security"
2 Enter PIN/password →  → "None"
Screen Lock settings are canceled.


■ Long Pressing to Set Screen Lock

Long Press  (Center Key) in Standby to set Screen Lock.

- 1 In Standby,  → "Settings" → "Security" → "Screen Lock"
- 2 "Long Press Center Key"
Screen Lock is activated by Long Pressing .
• Long Press  or  to cancel Screen Lock.





INFORMATION

- When "Long Press Center Key" is not set, Long Press  to lock the screen.

■ Using Secret Mode

Set whether to hide contacts, etc. set to Secret Mode.

- 1 In Standby,  → "Settings" → "Security"
- 2 "Secret Mode"
- 3 Enter a password → 
- 4 "Hide"/"Show"

Contacts, etc. registered as Secret Mode are hidden/shown.

Data Folder	P.9-2
Viewing/Playing Files	P.9-2
Using Menu of Folder/File.....	P.9-2
Showing Images	P.9-3
Playing Music/Audio.....	P.9-3
Playing Videos	P.9-4
File Copy	P.9-5
Editing Files	P.9-5
Changing File Name.....	P.9-5
Deleting Files	P.9-5

Data Folder

View/play files such as images, videos, music/audio saved to handset/SD Card.

Viewing/Playing Files

1 In Standby,  → "Data Folder"

Data Folder window appears.


- Press  (Phone)/ (SD) to toggle handset memory/SD Card.

2 Select folder type

Item	Description
Pictures	Show images.
Music	Show music/audio.
Videos	Show videos.
Other Documents	Show files except for images, music/audio, videos.
Download	Show all downloaded files.
File Manager	Activate File Manager.

3  → Select a folder → 

File list window appears.

4 Select a file → 

The file is shown or played.

CAUTION

- Some files cannot be shown.
- PDF files with password set cannot be shown. Some PDF files whose display size is extremely large or layout is special may not be shown properly.

Using Menu of Folder/File

Operations such as registering to wallpaper, etc. sending S!Mail, coping, deleting are as follows.

1 In Data Folder window/File list window,

 (Menu) → Select each item

Item	Description
Set ^{*1*2}	Register to Wallpaper, Contact Picture.
Send ^{*2}	Send by S!Mail (P.4-6)
Copy to Phone/Copy to SD ^{*2}	Copy to handset memory/SD Card. (P.9-5)
Delete ^{*2}	Delete files. (P.9-5)
Edit Title ^{*2}	Change Title. (P.9-5)

Item	Description
View Mode	Set View Mode.
Details	Show Details.






*1 Only available for image files.






*2 Only available in File list window.

Showing Images

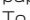1 Select an image in File list window →

• Image operations are as follows:

Item	Operation
Enlarge/reduce	 (Zoom) → Select zoom level • When the image is enlarged to 200%, press  to scroll.
Full Screen	 (Menu) → "Full Screen"
Register to Wallpaper, Contact Picture.	 (Menu) → "Set" → "Wallpaper"/"Contact Picture" To set Wallpaper: (P.10-3)
Attach a file to mail to send	 (Menu) → "Send" → Create S!Mail to send To create S!Mail: (P.4-6)





Item	Operation
Delete	 (Menu) → "Delete" → "Yes"
Check Details	 (Menu) → "Details"
Edit	 (Edit) →  (Menu) → Edit the image To edit images: (P.6-6)
View previous file and next file	






Playing Music/Audio

1 In File list window, select music/audio →



• Operations of music/audio are as follows:

Item	Operation
Play	 (Play)
Pause*	 (Pause) while playing music/audio
Adjust volume*	
Fast rewind/fast forward*	




Item	Operation
View previous file and next file	 before playing a file
Adjust playback speed*	 (Speed) → Select playback speed
Attach a file to mail to send	Before playing a file,  (Menu) → "Send" → Create S!Mail and send To create S!Mail: (P.4-6)
Delete	Before playing a file,  (Menu) → "Delete" → "Yes"
Check Details	Before playing a file,  (Menu) → "Details"








* Available when music/audio is played once.

Playing Videos

1 Select a video in File list window → 


• Operations of voice are as follows:

Item	Operation
Play	 (Play)
Pause*	 (Pause) while playing music/audio
Adjust volume*	



Item	Operation
Fast rewind/fast forward*	
View previous file and next file	 before playing a file
Adjust playback speed*	 (Speed) → Select playback speed
Viewing Full Screen	Before playing a file,  (Menu) → "Full Screen"
Attach a file to mail to send	Before playing a file,  (Menu) → "Send" → Create S!Mail and send To create S!Mail: (P.4-6)
Delete	Before playing a file,  (Menu) → "Delete" → "Yes"
Check Details	Before playing a file,  (Menu) → "Details"

* Available when a video is played once.

File Copy




- 1 Select a file in File list window
- 2  (Menu) → "Copy to Phone"/"Copy to SD"
- 3 "Copy one"
The file is copied.
 - If Confirmation window appears, follow on-screen instructions.

■ To copy multiple files




- "Copy Multiple" → Check files () to copy →  (Copy)
- While selecting files to copy,  (Menu) → "Check all"/"Uncheck all" to select/cancel all the files.

Editing Files

■ Changing File Name

- 1 Select a file in File list window
- 2  (Menu) → "Edit Title"
- 3 Enter file name →  →  (Done)
The file name is changed.

■ Deleting Files

- 1 Select a file in File list window
- 2  (Menu) → "Delete"
- 3 "Delete One" → "Yes"
The file is deleted.
 - To delete multiple files
"Delete Multiple" → Check files () to delete →  (Delete) → "Yes"
 - While selecting files to delete,  (Menu) → "Check all"/"Uncheck all" to select/cancel all the files.

Settings	P.10-2	About Phone	P.10-12
Wallpaper/Display	P.10-2	Checking Handset Status	P.10-12
Setting Wallpaper	P.10-3	All Reset	P.10-13
Setting Clock Display	P.10-3	Resetting Handset to Default	P.10-13
Setting Screen Brightness	P.10-3	Encrypt Phone	P.10-13
Setting Screen Back Light Time	P.10-3		
Setting Key Back Light	P.10-4		
Setting Font Size	P.10-4		
Sound/Notification	P.10-4		
Setting Notifications	P.10-5		
Changing Media Playback Volume	P.10-6		
Setting Key Sound	P.10-6		
Security	P.10-7		
Call Settings	P.10-7		
Setting Any Key Answer	P.10-8		
Setting Voice Quality	P.10-8		
Network	P.10-8		
Setting Mobile Network	P.10-9		
Setting Network Operator	P.10-9		
Setting Restrict Data	P.10-10		
Phone Settings	P.10-10		
Setting Language	P.10-11		
Making Input Settings	P.10-11		
Setting Date & Time	P.10-11		

Settings

Operations for each setting are as follows:

1 In Standby,  → "Settings"

2 Set each item

- For details on settings, see each reference page.

Item	Description
Wallpaper/Display	Set wallpaper and display brightness, etc. (P.10-2)
Sound/Notification	Make settings for Manner mode, ringtone, operation sound. (P.10-4)
Security	Make settings for security such as Screen Lock, password. (P.10-7)
Call Settings	Make Call Settings. (P.10-7)
Network	Set Network and Airplane Mode, etc. (P.10-8)
Phone Settings	Set language and date. (P.10-10)
About Phone	Check handset status. (P.10-12)

Wallpaper/Display

Set wallpaper and display brightness, etc.

1 In Standby,  → "Settings" → "Wallpaper/Display"

Wallpaper/Display window appears.

2 Set each item

Item	Description
Wallpaper	Set wallpaper in Standby. (P.10-3)
Clock	Set Clock in Standby. (P.10-3)
Brightness	Set screen brightness. (P.10-3)
Back Light Time	Set the time until the screen turns off automatically after a certain period of no operation. (P.10-3)
Key Back Light	Set whether to turn on Key Back Light. (P.10-4)
Font Size	Set Font Size on the screen. (P.10-4)





Setting Wallpaper

Set wallpaper in Standby.

1 In Wall/Display window, "Wallpaper" → "Preset"/"Data Folder"

2 Select wallpaper → 

Wallpaper is set.

- When "Data Folder" is selected in step 1, select a folder →  → Select an image →  (Play) →  (Done) → Adjust trimming* → 

* Press  (Size) to change the size while trimming.

Setting Clock Display

Set Clock in Standby.

1 "Clock" in Wallpaper/Display window

2 "Clock 1"/"Clock 2"/"OFF"

Clock display is set.

- When "Clock 1"/"Clock 2" is selected, the preview appears. Press  to set Clock display.

Setting Screen Brightness

1 "Brightness" in Wallpaper/Display window

2 Select Brightness → 

Brightness is set.

Setting Screen Back Light Time

Set the time until the screen turns off automatically after a certain period of no operation.

1 "Back Light Time" in Wallpaper/Display window

2 Select Back Light Time → 

Screen Back Light Time is set.

Setting Key Back Light

Set whether to turn on Key Back Light.

- 1 Check/uncheck "Key Back Light" () / () in Wallpaper/Display window
Key Back Light is set to ON/OFF.


Setting Font Size

Set Font Size on the screen.

- 1 "Font Size" in Wallpaper/Display window
- 2 "Large"/"Middle"/"Small"
Font Size is set.

Sound/Notification

Make settings for Manner mode, ringtone, operation sound.

- 1 In Standby,  → "Settings" → "Sound/Notification"
Sound/Notification window appears.
- 2 Set each item


Description	Item
Phone Call	Set the Ringtone for phone call, etc. (P.2-2)
Mail Notification	Set mail notification sound, etc. (P.2-2)
Alarm/Timer	Set Alarm/Timer notification sound, etc. (P.10-5)
Calendar Alarm	Set Calendar Alarm notification sound, etc. (P.10-5)
Other Notifications	Set other notification sounds. (P.10-5)
Media	Set media volume. (P.10-6)
Key Sound	Set whether to play Key Sound. (P.10-6)
Manner Mode Settings	Set Manner Mode. (P.1-18)

■ Setting Notifications

Set Alarm/Timer, Calendar Alarm, other notification sounds, etc.

■ Changing Notification Volume

1 In Sound/Notification window, "Alarm/Timer"/"Calendar Alarm"/"Other Notifications" → "Volume"






2 Select volume → 
Volume is set.

■ Changing Notification Sound

1 In Sound/Notification window, "Alarm/Timer"/"Calendar Alarm"/"Other Notifications" → "Sound"

2 "Preset"/"Data Folder" → Select notification sound → 

Notification sound is set.

- When "Data Folder" is selected, select a folder →  → Select Sound →  →  (Done).
- Select notification sound to play and confirm. To stop, press  (Stop). And to replay to confirm, press  (Confirm).

■ Setting Vibration



Set vibration pattern when notification rings.

- Vibration works at initial value settings in Manner Mode.

1 In Sound/Notification window, "Alarm/Timer"/"Calendar Alarm"/"Other Notifications" → "Vibration"

2 Select a pattern → 

The pattern is set.


- Select a pattern to play and confirm. To stop, press  (Stop). And to replay to confirm, press  (Confirm).

■ Setting Notification LED



Set notification LED pattern (color) when notification rings.

- Notification LED works at initial value settings in Manner Mode.

1 In Sound/Notification window, "Alarm/Timer"/"Calendar Alarm"/"Other Notifications" → "LED"

2 Select a pattern → 

The pattern is set.

- Select a lighting pattern to confirm the notification LED. To stop, press  (Stop). And to replay to confirm, press  (Confirm).

■ Changing Media Playback Volume

Change the volume of music, movies.

1 "Media" in Sound/Notification window

2 "Volume" → Select volume → 

Volume is changed.

■ Setting Key Sound

Set whether to play Key Sound when pressing keys.

- Not available in Manner Mode


1 Check/Uncheck "Key Sound" () / ()

in Sound/Notification window

Key Sound is set to ON/OFF.

Security

Make settings for security such as Screen Lock, password.

1 In Standby,  → "Settings" → "Security"
Security window appears.

2 Set each item

Item	Description
Chg. Handset Code	Set Handset Code when using applications or each function. (P.8-2)
Screen Lock	Set how to cancel Screen Lock. (P.8-3)
Secret Mode	Set Secret Mode. (P.8-4)
USIM Card Lock Settings	Set USIM Card Lock. (P.1-21)
All Reset	Erase all data in handset memory. (P.10-13)
Encrypt Phone	Encrypt data in handset. (P.10-13)


Call Settings

Make Call Settings.


1 In Standby,  → "Settings" → "Call Settings"

Call Settings window appears.

2 Set each item

Item	Description
Quick Dial	Set Quick Dial. (P.3-5)
Any Key Answer	Set whether to answer a call with any key other than  key. (P.10-8)
Answer Machine	Make Answering Machine settings. (P.3-8)
Voice Quality	Set Voice Quality during a call. (P.10-8)
Optional Services	Set Call Barring Service. (P.3-17)
Reject Incoming Calls	Set to reject incoming calls. (P.3-9)
Notify Caller ID	Set whether to notify caller ID. (P.3-19)

Setting Any Key Answer

Set whether to answer a call with any key other than  key.

- 1 Check/Uncheck "Any Key Answer" ()/ () in Call Settings window.
Any Key Answer is set to ON/OFF.

Setting Voice Quality

Set Voice Quality for voice calls.

- 1 "Voice Quality" in Call Settings window
- 2 "Clearly"/"Mildly"/"Normal"
Voice Quality is set.

Network

Set network functions such as Airplane Mode.

- 1 In Standby,  → "Settings" → "Network"
Network window appears.
- 2 Set each item

Item	Description
Airplane Mode	Leaving power on, suspend signal transmitting functions. (P.1-20)
Mobile Network	Make settings such as access point and network. (P.10-9)
Select Operator	Make settings for network operator. (P.10-9)
Restrict Data	Set whether data communication is enabled for individual applications. (P.10-10)

■ Setting Mobile Network

Make settings such as access point and network.

1 "Mobile Network" in Network window

2 Set each item

Item	Description
Mobile Data	Set whether to enable Mobile Data communication. Check/Uncheck "Mobile Data" (<input checked="" type="checkbox"/>) / (<input type="checkbox"/>)
APN	Add, delete or change access point or reset access point to default.
Select Network	Switch to "4G/3G Auto"/"3G Only"

■ Setting Network Operator

■ Searching Networks to Set

Search available networks to set.

1 In Network window, "Select Operator" → "Search Networks"

Available network is searched. When searching is completed, networks appear in Search Result field.

2 Select Network → 

Network operator is set.

■ Setting Network Automatically

Set available network automatically.

1 In Network window, "Select Operator" → "Choose Automatically"

Network operator is set.

Setting Restrict Data

Set to restrict data communication according to each application.

1 "Restrict Data" in Network window


2 "あんしんバックアップ (Anshin Backup)"/
"Browser"/"Password Manager"

Data communication for each application is restricted.

- Every time each application is selected, "COMM"/"BLOCK" is toggled.

Phone Settings

Set language and date.

1 In Standby,  → "Settings" → "Phone Settings"

Phone Settings window appears.

2 Set each item

Item	Description
Language (言語選択)	Set Language to Japanese or English. (P.10-11)
Input Settings	Make Input Settings. (P.10-11)
Date & Time	Make Date & Time settings. (P.10-11)
Storage	Check handset memory/SD Card space. <ul style="list-style-type: none"> • Select "Mount SD Card"/"Unmount SD Card" to mount/unmount SD Card.
Application	Check information for installed and running applications.

■ Setting Language

Set Language to Japanese or English.

- 1 In Phone Settings window, "Language (言語選択)" → "日本語"/"English"
Language is set.

■ Making Input Settings

Make Input Settings.

- 1 "Input Settings" in Phone Settings window
- 2 Set each item

Item	Description
User dictionary	Register words. (P.2-11)
Phrase	Set Phrase. (P.2-8)
Input Settings	Set Predictive Conv or Auto cursor speed, or reset Learning dictionary or Input Settings. (P.2-12)

■ Setting Date & Time

Make Date & Time settings.

- 1 "Date & Time" in Phone Settings window
- 2 Set each item


Item	Description
Automatic Date & Time	Set Date & Time automatically. Check/Uncheck "Automatic Date & Time" (<input checked="" type="checkbox"/>) / (<input type="checkbox"/>)
Automatic Time Zone	Set Time Zone automatically. Check/Uncheck "Automatic Time Zone" (<input checked="" type="checkbox"/>) / (<input type="checkbox"/>)
Set Date ^{*1}	Set Date manually.
Set Time ^{*1}	Set Time manually.
Select Time Zone ^{*2}	Set Time Zone manually.
Use 24-hour Format	Set to use 24-hour Format. Check/Uncheck "Use 24-hour Format" (<input checked="" type="checkbox"/>) / (<input type="checkbox"/>)

*1 Only available when "Automatic Date & Time" is not set.

*2 Only available when "Automatic Time Zone" is not set.

About Phone

Check handset status.

1 In Standby,  → "Settings" → "About Phone"

Device info settings window appears.

2 Select/check each item

Item	Description
Software Update	Perform software updates and make settings. (P.11-2)
Status	Check battery level, phone number, USIM status, etc. (P.10-12)
Legal Information	Check open source licenses, etc.
Model Number	Check model number
Processor Info	Check processor info.
OS Version	Check OS version.
Kernel Version	Check kernel version.
Build Number	Check build number.
Compliance Information	Check compliance information.

Checking Handset Status

Check battery level, phone number, USIM status, etc.

1 In Device info settings window, "Status"


2 Check each item

Item	Description
Battery Status	Check battery status.
Battery Level	Check battery level.
USIM Status	Check USIM status such as phone number.
IMEI Information	Check IMEI information.
IP Address	Check IP address.
Up Time	Check operating time.

All Reset


Erase all data that you registered in handset and reset contents of each function to default.

Resetting Handset to Default

1 In Standby,  → "Settings" → "Security"

2 "All Reset" → "Reset phone"

- To erase data in SD Card, check "Erase SD card as well" (☑).

3 Enter Handset Code →  → "Erase everything"

Handset is all reset.


- The power turns on again after turning off automatically.

CAUTION

- Reset handset when battery is fully charged.
- Handset code is reset to default.
- Performing all reset erases contents and history that you registered. Note that erased data cannot be restored.

Encrypt Phone

Encrypt data in handset.

1 In Standby,  → "Settings" → "Security"

2 "Encrypt Phone" → "Encrypt phone" → Enter PIN/password

3 "Encrypt phone"
Data in handset is encrypted.

CAUTION

- When "None" or "Long Press Center Key" is set to cancel Screen Lock, PIN/Password entry is not required.
- Encrypt handset with battery both fully charged and being charged.
- Note that all data in handset is deleted if encrypting handset is suspended.

Software Update	P.11-2	Precautions on Usage.....	P.11-14
Updating Software		Usage.....	P.11-14
Manually	P.11-2	When Using Handset in a Car	P.11-15
Troubleshooting	P.11-3	Handling	P.11-16
Main Specification.....	P.11-5	Camera.....	11-17
Materials Used	P.11-5	Music/Videos	11-18
Safety Precautions	P.11-6	Urgent News.....	11-18
Explanation of Graphic Symbols Used in		Technical Standards Conformance	
This Manual.....	P.11-6	Certification	11-18
Handling Handset, Battery, USIM Card, AC		Specific Absorption Rate (SAR) for	
Adapter (Sold Separately) (Common)....	11-6	This Product (for Japan)....	P.11-19
Handling Handset.....	P.11-8	Index.....	P.11-20
Handling Battery	P.11-11	Warranty & After-Sales Service	
Handling AC Adapter (Sold Separately)		P.11-24
.....	P.11-12	Warranty.....	P.11-24
Handling USIM Card.....	11-13	After-Sales Service	P.11-24
Handset Use & Electronic Medical		Inquiries	P.11-25
Equipment.....	P.11-14		

Software Update


At specified time, handset checks whether software updates are required and automatically downloads firmware updates as required.

- Checking/updating does not incur communication charges.
- Handset cannot be used until software is updated. It may take time to update software.
- Operate handset where signal reception is good and without changing location. Also operate with adequate battery charge. Signal becoming weak or Battery becoming low during an update may cause an update failure.

If updating of software fails, handset may no longer be usable. In such case, contact Inquiries (P.11-25).

- Other functions cannot be operated while software update is performed.
- We recommend that you back up needed data before updating software (some downloaded data is not able to be backed up). Data saved on handset before updating remains saved, but depending on handset condition (malfunctions, etc.), data may be lost. SoftBank Corp. is not responsible for damages from loss of data.
- While updating software, absolutely do not remove Battery, USIM Card, or power off. Updating may fail.

Updating Software Manually

- 1 In Standby,  → "Settings"
- 2 "About Phone" → "Software Update"
- 3 "Software Update"

After downloading the update, handset automatically restarts and software update begins. Handset restarts again, and update completion information appears.








CAUTION

- If handset does not restart after the software update is completed, remove Battery, and install it again and power on handset. Contact Inquiries (P.11-25) if handset does not still restart.
- Note that SoftBank Corp. is not liable for any data loss due to software update.



INFORMATION

- To set whether to update the software automatically, in Standby,  → "Settings" → "About Phone" → "Software Update" → "Automatic Update Settings" → .
- To change the schedule to update the software automatically, in Standby,  → "Settings" → "About Phone" → "Software Update" → "Update Schedule Settings" → Enter time →  (Confirm).

- **Handset does not power on**
 - Are you Long Pressing  for at least 1 second?
 - Is Battery level sufficient?
 - Is Battery installed properly?
(P.1-11)
- **Handset functions do not work after turned on**
 - Does PIN entry window appear?
PIN code (P.1-21) is enabled. Enter PIN code.
- **"No SIM card" appears when handset is turned on or operations attempted**
 - Is USIM Card installed properly?
(P.1-6)
 - Is wrong USIM Card installed?
An unusable USIM Card may be installed. Make sure that the right USIM Card is installed.
 - Are there any fingerprints, etc. or other soiling on the IC part on USIM Card?
Remove USIM Card, wipe with a clean, dry cloth, and install it again properly.
- **Handset freezes/operation is unstable**
 - Is USIM Card installed properly?
(P.1-6)
 - If operation is unstable, power off handset, then power on handset to restart.
 - If handset cannot be powered off, remove Battery, and install it again and power on handset.
(P.1-11)

- **Key operations do not work**
 - Is "Long press[Center key]to start" shown?
"Long Press Center Key" is set for Screen Lock.
Cancel "Long Press Center Key." (P.8-4)
- **Display is blurred**
 - Adjust display brightness. (P.10-3)
- **Calls do not connect/cannot use mail or Internet**
 - Is "📶 (No Signal icon)" shown on Status Bar?
Are you where handset receives a weak signal?
Change locations and operate again.
 - Is "✈️ (Airplane Mode icon)" shown on Status Bar?
Cancel Airplane Mode. (P.1-20)
 - Are you using handset overseas?
Handset cannot be used overseas.
 - Is "Mobile Data" disabled?
Enable "Mobile Data."
(P.10-9)
- **Cannot make a call**
 - Is area code entered?
- **Outgoing calls will not connect or busy signal sounds**
 - Is area code entered?
- **Display clock is reset**
 - Replacing battery does not reset Display clock; however, if battery is removed for a long period or left uncharged, the clock may be reset. Set Date & Time again. (P.10-11)
- **Cannot charge/Charging takes time**
 - Is AC Adapter firmly connected to handset?
(P.1-13)
 - Is AC Adapter firmly plugged into a household AC outlet?
 - Is Battery installed into handset?
(P.1-11)
 - Are the terminals soiled? Clean terminals (handset external connection terminal, Battery terminal, AC Adapter terminal).
 - Is ambient temperature between +5°C and +35°C ? Otherwise, battery may not reach full charge.
- **Handset/AC Adapter feel warm**
 - AC Adapter may warm during charging. Handset may warm during long use. This is normal if you can hold it comfortably. Low temperature burns may occur if handset is held against skin for long periods.
- **Battery operating time is greatly reduced**
 - Battery Operating Time may be reduced by environmental factors such as temperature, charging conditions or signal strength, as well as by operations or settings.
See "Main Specification" (P.11-5), "Battery Life" (P.1-10).

● Main Unit

Weight	Approx. 115 g (Battery installed)
Dimensions (W × H × D)	Approx. 50 × 132 × 13.8 mm
Continuous Stand-by Time	Approx. 670 hours (3G) Approx. 500 hours (4G)
Continuous Talk Time	Approx. 600 minutes (3G) Approx. 600 minutes (4G)
Charging Time	Approx. 180 minutes
Maximum Output	0.25 W (3G) 0.2 W (4G)

● Battery (SIBAF1)

Voltage	3.8 V
Battery	Lithium-ion
Capacity	1770 mAh
Dimensions (W × H × D)	Approx. 38.7 × 86.6 × 4.25 mm

● Main Unit




Parts	Material/Finishing
Display Panel	Acrylic resin
Exterior Case (Front Case)	PC + GF resin/UV-cured coating
Camera Panel	Acrylic resin
Exterior Case (Battery Cover)	PC resin/UV-cured coating
Key	PC resin + silicone rubber/UV-cured coating
Screw	Carbon steel
Interior Case	PC resin
Top of Interior Case (Built-in Antenna)	Cu-Ni alloy
USIM Card Slot Cover	SUS
SD Card Slot Cover	SUS
SD Card Slot Terminal	Cu alloy/Gold plating
Speaker Mesh	PET/Polyester synthetic fiber
Speaker Cushion	Polyurethane foam
Battery Terminal (Main Unit)	Cu alloy/Gold plating
Sheet Metal (Battery Compartment)	SUS
Label	PET

● Battery (SIBAF1)

Parts	Material/Finishing
Case (Side)	PC resin
Terminal Part	Cu alloy/Gold plating
Label	PET

Safety Precautions

- For proper handset use, carefully read this "Safety Precautions" beforehand. After you have finished reading this guide, keep this guide in a safe place.
- Observe these safety precautions to prevent injury or damage to other people and property.
- The labels below differentiate between the levels of danger that can occur if handset is not used within the specified guidelines.







 DANGER	Great risk of death or serious injury* ¹ from improper use
 WARNING	Risk of death or serious injury* ¹ from improper use
 CAUTION	Risk of injury* ² or damage to property* ³ from improper use

*1 Serious injury includes: Loss of eyesight, physical injury, high temperature burns, low temperature burns, electric shock, fractures, poisoning and other conditions having side effects or requiring hospitalization or long-term treatment.

*2 Injury includes: Physical injury, high-temperature burns, low-temperature burns, electric shock, and other conditions not requiring hospitalization or long-term treatment.

*3 Damage to property includes: Incidental damage to structures and household property and/or to pets and livestock.

Explanation of Graphic Symbols Used in This Manual

	Action prohibited
	Disassembly prohibited
	Exposure to liquids prohibited
	Handling with wet hands prohibited
	Action compulsory
	Unplug from outlet

Handling Handset, Battery, USIM Card, AC Adapter (Sold Separately) (Common)

DANGER



Do not use, store, or leave handset or related hardware in places subject to high temperatures or where heat collects (near an open flame or heating equipment, under a kotatsu or blanket, in direct sunlight, or inside a car on a hot day).

May cause fire, burns, injury, electric shock, etc.



Don't

Do not place handset or related hardware in or near a heating cooker such as a microwave oven, IH cooking heater, or high-pressure containers such as pressure cooker.

May cause fire, burns, injury, electric shock, etc.



Don't

Do not place handset or related hardware directly on or get soiled with sand, dirt or mud. Do not touch if hands are dirty with sand, etc.

May cause fire, burns, injury, electric shock, etc.



Don't

Do not charge while handset or related hardware are wet with water and other liquids (beverage, sweat, seawater, pet urine, etc.).

May cause fire, burns, injury, electric shock, etc.



Don't

Do not subject handset to strong pressure or break handset. Especially when bringing handset putting in a pocket of clothes, do not let handset hit against surroundings or being put between the objects.

May cause fire, burns, or injury due to battery ignition, rupture, overheat, or leakage damage.

* Examples to avoid

- Sitting or squatting with handset put in a pocket of trousers or skirt
- Putting handset in a pocket of outer wear and catching them in a door or a door of car
- Stepping on handset on a soft object such as a sofa, bed, or bedding, or on a floor



No disassembly

Do not disassemble or modify.

May cause fire, burns, injury, electric shock, etc.



No liquids

Do not get wet with water or other liquid (beverage, sweat, seawater, pet urine, etc.).

May cause fire, burns, injury, electric shock, etc.



No liquids

Do not allow water or other liquid (beverage, sweat, seawater, pet urine, etc.) to get in External Connection Terminal.

May cause fire, burns, injury, electric shock, etc.



WARNING



Don't

Do not drop, step on, throw, or otherwise subject to strong force or impact, or to vibration.

May cause fire, burns, injury, electric shock, etc.



Don't

Be careful that conductive objects (metal, pencil lead, etc.) do not come in contact with External Connection Terminal and that dust does not get in them.

May cause fire, burns, injury, electric shock, etc.



Don't

Do not cover or wrap with a blanket, etc. during use or while charging.

May cause fire, burns, etc.



Do

If charging does not complete even after specified charging time, stop charging.

Overcharging or other conditions may cause fire, burns, injury, etc.

Do Always turn off handset as well as stop charging before entering gas stations or other places where flammable gases or fine particulates generate.

Using handset in presence of flammable gases may cause explosion, fire, etc.

Do If you notice an unusual odor, unusual sound, smoke, overheating, discoloration, deformation, etc. while using, charging or storing handset, do the following.

- Unplug from outlet.
- Power off handset.
- Remove Battery from handset.

Not doing the above may cause fire, burns, injury, electric shock, etc.

CAUTION

Don't Do not use damaged.
May cause fire, burns, injury, etc.

Don't Do not place on an uneven or unstable surface. Be particularly careful while vibrator is activated.
May fall, leading to injury, etc.

Don't Do not store in a humid or dusty location or any place that reaches a high temperature.
May cause fire, burns, electric shock, etc.

Don't Before a child uses handset or related hardware, a parent/guardian should provide instruction and ensure proper usage.
Failure to do so may cause injury, etc.

Don't Keep out of reach of infants.
Failure to do so may result in small parts being accidentally swallowed or may cause injury, electric shock, etc.

Do Exercise caution when using handset continuously for a long time or while charging. Also be careful not to unintentionally be in contact with handset for a long time (falling asleep, etc.).
Handset, Battery, and AC Adapter may become hot with long-period use such as calling and charging. Long contact with hot parts may cause redness, itchiness, rash, low-temperature burns, etc. depending on the individual.

Handling Handset


⚠ DANGER


Don't Do not pierce, hammer, step on, or otherwise subject to excessive force.
May cause fire, burns, injury, etc.


⚠ WARNING


Don't Do not look into Infrared Port when sending data by infrared.
May affect eyesight.


Don't When using infrared transfer, do not point Infrared Port at an appliance or other apparatus having infrared capability.
May cause appliance, etc. to misoperate and cause an accident, etc.


 **Do not look at a repeatedly flickering screen for a long period.**
May cause convulsions, loss of consciousness, etc.


 **Do not allow water or other liquid (beverage, sweat, seawater, pet urine, etc.) or foreign matter (metal, burnable material, etc.) to get in USIM Card/SD Card Slot.**
Do not mistake orientation of USIM Card and SD Card or where to insert.
May cause fire, burns, injury, electric shock, etc.


 **Do not allow direct sunlight, etc. to shine on Camera Lens for long period.**
Concentration of light by the lens may cause fire, burns, injury, etc.


 **Before boarding an aircraft, power off handset or place handset in Airplane mode.**
Restrictions are in place for use aboard aircraft; follow airline instructions.
May affect aircraft instrumentation.
Prohibited use aboard an aircraft may be punishable by law.

 **Follow instructions of each medical institution for use in a hospital.**
Power off handset where use is prohibited.
May affect electronic devices and electric medical equipment.

 **Always keep handset off of the ears when using handsfree calling, the ringtone is sounding, or when waiting for a call.**
If an earphone-microphone, etc. is attached for gaming or video/music playback, adjust to a moderate volume.
When using the handsfree call, loud noise sounds from handset.
Even when waiting for a call, ringtone and vibrator may work suddenly.
Too loud a volume or use for a long period may affect hearing.
Inability to hear surrounding sound may also cause an accident.


 **Individuals with a weak heart should take care with handset vibration and ringtone settings for new calls/mail.**
Sudden ringtone vibration and ringtone surprise you, it may cause harmful effect on heart.

 **Individuals with an electric medical device should consult with the device manufacturer or distributor regarding any effects from electronic signals before using handset.**
May affect the electric medical device.

Do  **Keep handset power off near high precision electronic devices or devices using weak signals.**


May cause devices to misoperate, etc.


* Devices that may be affected
Hearing aids, implanted cardiac pacemakers and implanted defibrillators, other electric medical equipment, other automatically controlled equipment, etc. Individuals using an implanted cardiac pacemaker, implanted defibrillator, or other electric medical equipment should consult with the device manufacturer or distributor regarding any effects from electronic signals.

Do  **Be careful of any internal components that become exposed if Display or Camera Lens breaks.**

Touching broken portions or exposed components may cause burns, injury, electric shock, etc.

CAUTION


Don't  **Do not swing handset by strap.**
May hit you, others, or surrounding objects, causing injury or other accident.

Don't  **If Display breaks and internal matter leaks, do not allow it to get on face, hands or other part of your skin, or on clothing, etc.**


May cause blindness, harm to your skin, etc. If internal matter should get in your eyes or mouth or on your skin or clothing, immediately rinse with clean water.


If in your eyes or mouth, immediately seek medical attention after rinsing.


Don't  **To remove Battery Cover, use only as much strength as necessary.**
Battery Cover may break, causing injury, etc.


Don't  **When attaching Battery Cover, be careful not to let a part of yourself (fingers, etc.) get caught in it.**
Failure to do so may cause injury, etc.

Don't  **Do not use handset with Battery Cover removed.**
May cause burns, injury, electric shock, etc.

Do  **Before using handset in a vehicle, consult with the vehicle manufacturer or distributor regarding any effects from electronic signals.**
Although rarely, some makes of car may have onboard electronic devices that can be affected. Immediately discontinue use if such devices are onboard.





Do  **If any skin abnormality occurs with use of handset, immediately discontinue use and seek medical attention.**
Failure to do so may cause itchiness, rash, eczema, etc. depending on the individual. For details on materials used in handset →P. 11-5 "Materials Used"


Do  **Handset Speaker, Receiver use magnetic components; check that metal objects (cutter blades, staples, etc.) are not attached to it.**
Attached objects may cause injury, etc.


-
- Do**  When viewing Display, view in a sufficiently bright place with Display at an adequate distance.
Viewing in a dark place too closely may affect vision, etc.
-

Handling Battery




DANGER

- Don't**  Do not allow metal objects (necklaces, hairpins, etc.) and conductive materials to come in contact with connection terminals. Do not carry or store such objects or materials with Battery.
May cause fire, burns, injury, etc.
- Don't**  Do not install Battery forcefully if it is difficult to install. And do not remove Battery forcefully if it is difficult to remove.
May cause fire, burns, injury, etc.
For installing/removing Battery, see the following.
⇒P.1-11 "Installing/Removing Battery"
- Don't**  Do not throw Battery in fire or heat Battery.
May cause fire, burns, injury, etc.
- Don't**  Do not pierce, hammer, step on, or otherwise subject to excessive force.
May cause fire, burns, injury, etc.
-

- Do**  Check orientation of Battery when installing in handset. Do not force Battery if difficult to install.
May cause Battery to ignite, rupture, overheat, or leak, resulting in fire, burns, injury, etc.
For installing Battery, see the following.
⇒P.1-11 "Installing/Removing Battery"
-

- Do**  If internal matter from Battery gets into eyes, immediately rinse with clean water without rubbing, and consult a doctor.
Internal matter from Battery may result in loss of eyesight, poor physical condition, etc.
-

WARNING

- Don't**  If you notice an unusual odor, overheating, discoloration, deformation, etc., do not use Battery.
May cause fire, burns, injury, etc.
- Do**  If Battery is leaking or has an unusual odor, immediately discontinue use and keep it away from open flames.
Leaking fluid may ignite, causing ignition, rupturing, etc.
- Do**  Keep Battery away from pets.
Pets biting Battery may cause Battery to ignite, rupture, overheat, or leak, resulting in fire, burns, injury, etc.
-

⚠ CAUTION

Don't If Battery internal matter, etc. leaks, do not allow it to get on face, hands or other part of your skin or on clothing, etc.

May cause blindness, harm to your skin, etc. If internal matter should get in your eyes or mouth or on your skin or clothing, immediately rinse with clean water. If in your eyes or mouth, immediately seek medical attention after rinsing.

Don't Do not dispose of with ordinary refuse.

May cause fire, burns, injury, etc and is also destructive to the environment. Tape terminals on old Battery to insulate them and take to a SoftBank shop or other location where accepted, or dispose of according to local regulations.

Don't Do not use or charge a wet Battery.

May cause fire, burns, injury, etc.

■ Handling AC Adapter (Sold Separately)

⚠ WARNING

Don't Do not use AC Adapter if cord is damaged.

May cause fire, burns, injury, etc.

Don't Do not use AC Adapter in a bathroom or other humid place.

May cause fire, burns, electric shock, etc.

Don't If thunder is audible, do not touch AC Adapter.

May cause electric shock.

Don't Do not short-circuit Charging Terminals while plugged in. Do not touch Charging Terminals with hands, fingers, etc.

May cause fire, burns, electric shock, etc.

Don't Do not subject AC Adapter cord to excessive force (placing heavy objects on it, pulling, etc.).

May cause fire, burns, electric shock, etc.

Don't When plugging in/unplugging AC Adapter, do not allow anything metal (metal strap, etc.) to come in contact.

May cause fire, burns, electric shock, etc.

Don't Do not use a travel converter with AC Adapter.

May cause ignition, overheating, electric shock, etc.

Don't Do not apply excessive force to where AC Adapter is connected to handset.

May cause fire, burns, injury, electric shock, etc.

No wet hands Do not touch AC Adapter cord, Charging Terminals, or power plug with wet hands.

May cause fire, burns, electric shock, etc.

!
Do **Use with the specified power source at the specified voltage.**
If charging while abroad, charge with an AC Adapter compatible with use abroad.
Use with an incorrect power source or voltage may cause fire, burns, electric shock, etc.
AC Adapters: 100 V AC (be sure to connect only to household AC outlet)
AC Adapters compatible with use abroad: 100 V to 240 V AC (be sure to connect only to household AC outlet)

!
Do **Wipe away dust on power plug.**
Using with dust on plug may cause fire, burns, electric shock, etc.

!
Do **When plugging in AC Adapter, plug in firmly.**
Failure to do so may cause fire, burns, electric shock, etc.

!
Do **When unplugging, hold by AC Adapter and do not pull by cord or otherwise subject to excessive force.**
Pulling by cord can damage cord, causing fire, burns, electric shock, etc.

!
Do **When connecting/disconnecting AC Adapter from handset, insert/remove straight from terminal without bending, and without pulling by cord or otherwise subjecting to excessive force.**
Failure to do so may cause fire, burns, injury, electric shock, etc.

!
Do **If Charging Terminals are bent or otherwise deformed, immediately discontinue use. Do not try to return to original shape and resume use.**
Short-circuiting of Charging Terminals may cause fire, burns, injury, electric shock, etc.

!
Unplug **If not using AC Adapter, unplug from outlet.**
Leaving plugged in may cause fire, burns, electric shock, etc.

!
Unplug **If water or other liquid (beverage, sweat, seawater, pet urine, etc.) enters, immediately unplug from outlet.**
May cause fire, burns, electric shock, etc.

!
Unplug **Before caring for equipment, unplug from outlet.**
Failure to do so may cause fire, burns, electric shock, etc.

⚠ CAUTION

!
Don't **Do not be touching AC Adapter for a long period while plugged in.**
May cause burns, etc.

■ Handling USIM Card

⚠ CAUTION

!
Do **When handling USIM Card, be careful not to scratch fingers, etc. on notch.**
May cause injury, etc.

■ Handset Use & Electronic Medical Equipment

⚠ WARNING

! When carrying handset, keep a minimum of 15 cm from implanted cardiac pacemaker, implanted defibrillator, etc.

Electronic signals may interfere with the operation of electric medical equipment.

! When using electronic medical devices as home medical treatment other than an implanted pacemaker and an implanted cardioverter defibrillator outside medical facilities, check individually with the manufacturer of the electronic medical equipment regarding the influence of electronic signals.

Electronic signals may interfere with the operation of electric medical equipment.

! Set handset not to emit electronic signals (power off or place in Airplane mode) if you will be in a packed location and cannot maintain a distance of 15 cm from those around you.

Persons who might have implanted cardiac pacemakers or implanted defibrillators may be in the vicinity. Electronic signals may interfere with the operation of electric medical equipment.

! Follow instructions of each medical institution for use of handset in a hospital.

Electronic signals may interfere with the operation of electric medical equipment.

■ Usage

- Handset supports software update. Use the latest software.
- Since handset uses signal, calling may be difficult in a location such as indoor, underground, in a tunnel, in a car with weak or poor signal reception even if you are in service area. And if you move to a location with weak or poor signal reception during calls, calling may be suddenly interrupted.
- When using handset in public places, take care not to annoy other people around you. Note that theaters or vehicles have designated places where using handset is prohibited.
- Handset is a radio station specified in the Radio Law. Therefore, the inspection based on the Radio Law may be required.
- Use of handset near a landline phone, TV, or radio may affect the image and sound quality of the equipment.
- As the advantages and special characteristics of digital system, handset maintains stable high call quality up to the limit in locations with weak signal reception. Therefore, if the limit is exceeded during calls, calling may be suddenly interrupted.

- Digital system has high privacy of communication. Wiretapping may result. Pay full attention on usage.
- Note that the following may cause information saved on handset to be erased or altered. SoftBank Corp. is not liable for any damages resulting from alteration or loss of information. It is recommended that you keep a separate copy of important data to minimize any damages from alternation or loss of information.
 - When used improperly
 - When affected by static electricity or electrical noise
 - When powered off during operation
 - When malfunctioning, submitted for repairs
- Be sure to charge Battery before using handset for the first time or if handset has not been used for a long time. Even if Battery is not used, storing Battery for extended period causes battery to be gradually discharged.
- SD Card (commercially available) may be warm after extended use. This is normal.
- Do not use or store SD Card (commercially available) in locations prone to static electricity or electrical noise.

- Back up SD Card (commercially available) data to a PC or other media (FC·MO·CD-R/W). SoftBank Corp. is not liable for any damages resulting from loss of saved data due to damage, etc. of SD Card (commercially available).

■ When Using Handset in a Car

- Using handset while driving a car is dangerous and it is prohibited by law. Use handset after parking a car in a safe place.

■ Handling

- Do not use handset in places subject to extremely high or low temperatures, high humidity, direct sunlight, or with much dust.
- Although general handset use in temperatures over 35 °C is possible, handset may become warm. Charging or various functions may stop in such a high temperature. This is normal.
- Do not drop handset, or subject it to impact.
- To clean handset, wipe it with a dry, soft cloth. Do not use alcohol, thinner, benzene. Doing so may discolor or remove exterior features or print.
- Take care not to let nails or fingertips get caught in handset groove gap. May cause injury, etc.
- Do not touch USIM Card slot metal part or Antenna part when Battery Cover is removed. Static electricity may cause malfunction.
- Be sure to power off handset before removing Battery. May cause malfunction.
- Note that having Battery removed for extended period or leaving Battery low may cause content saved on handset to be erased or altered. SoftBank Corp. is not liable for any damages resulting from alteration or loss of content.
- Battery is consumable and lithium-ion. Depending on conditions of usage, however, even if Battery is fully charged, its usage time may become extremely short. Replace Battery. Purchase a specified Battery.



Li-ion00

- When removing Battery, be sure to place a fingertip on the notch of handset and lift the one side of Battery. Removing Battery forcefully may cause damages to terminal.
- Communication antenna is built in handset. This means that it doesn't protrude above the surface of handset. If the built-in antenna is touched with hand or covered with finger, signal reception may become weak. Especially, do not attach sticker, etc. to the built-in antenna. If signal reception becomes weak, making/receiving calls may not be available.
- For handling USIM Card, read User Guide of USIM Card carefully to use it safely and properly.

- Insert SD Card (commercially available) correctly. SD Card (commercially available) can only be used if inserted correctly.

■ Camera

- Do not leave Camera Lens under direct sunlight. May burn or fade colors of elements.
- Shooting photos or storing handset in a warm place for extended period may affect image quality.
- Camera is high-precision, including pixels which always appear bright or dark. Blue, red, white, etc. dots will appear when shooting in extremely dark conditions.
- When shooting indoors under fluorescent lighting, flickering (extremely faint and not visible) may appear as stripes in image. This is not a defect or malfunction.
- Camera may make sound during operation, such as when being activated. This is not a defect or malfunction.
- Keeping Photo Viewfinder open or shooting photos, operating Browser, etc. repeatedly for a continuous and extended period causes handset to become warm. Skin contact for extended period when handset is warm may cause low temperature burns.
- Observe proper etiquette when using Camera.
- Creating a public nuisance with Camera may be punishable by law.
- Practice taking and previewing pictures, videos, and audio before using Camera on important occasions like wedding ceremonies.
- Photo files (below, content) may be altered or erased due to malfunctions, repairs or other handling. SoftBank Corp. is not liable for any damages or lost profit resulting from content alteration/erasure or its restoration.
- Do not use Camera in locations such as bookstores where shooting photos or videos is prohibited.


■ Music/Videos

- Do not listen to music or watch videos while driving a vehicle or riding a scooter/bicycle. Such use of a mobile phone is prohibited by law (use while riding a bicycle may also be punishable). Also be alert while walking; if surroundings are difficult to hear or attention is on Display, a traffic accident may result. Be careful especially at railway crossings, on station platforms, and at intersections.
- Listening at loud volume for an extended period may affect hearing.
- Take care not to disturb those around you (on train, etc.) with earphone or other noise.

■ Urgent News

- Alert sounds when Urgent News is received, even in Silent mode.
- Alerts are not received during calls/transmissions or in poor signal conditions.
- Depending on usage/situation, handset may receive alerts for other areas or no alerts.
- SoftBank Corp. cannot be held liable for any damages associated with this service, including accidents resulting from received or unreceived information, reception timing or reception failure.

■ Technical Standards Conformance Certification

- Handset is compliant with the technical standard conformance of specified wireless equipment based on the Radio Law and Telecommunication Business Act. Follow steps below to check information related to technical standards conformance certification (☎ etc.). In Standby,  → “Settings” → “About Phone” → “Compliance Information”

Specific Absorption Rate (SAR) for This Product (for Japan)

This mobile phone [Simply] meets Japanese technical regulations* and international guidelines for exposure to radio waves.

The Japanese technical regulations for exposure to radio frequency energy established permitted levels of radio frequency energy, based on standards developed by independent scientific organizations through periodic and thorough evaluation of scientific studies.

The regulations employ a unit of measurement known as the Specific Absorption Rate, or SAR.

The SAR limit is 2 watts/kilogram (W/kg) averaged over ten grams of tissue. The limit includes a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The value of the limit is equal to the value given in international guidelines recommended by ICNIRP**, which is in collaboration with the World Health Organization (WHO).

The highest SAR value for this mobile phone is 0.944 W/kg*** when tested for use at the ear, and 1.01 W/kg*** when worn on the body in the below manner****.

While there may be differences between the SAR levels of various phones and at various positions, all phones meet the Japanese technical regulations.

Although the SAR is determined at the highest certified power level, the actual SAR of the phone during operation can be well below the maximum value.

Use at positions other than at the ear****

This mobile phone may be used at positions other than at the ear. By using an accessory such as a belt clip holster that maintains a 1.5 cm separation with no metal (parts) between it and the body and the mobile phone, this mobile phone will comply with international guidelines for radio wave protection.

* The technical regulations are provided in Article 14-2 of the Ministry Ordinance Regulating Radio Equipment.

** International Commission on Non-Ionizing Radiation Protection

*** The value is not under simultaneous transmission use conditions.

The World Health Organization has announced that “A large number of studies have been performed over the last two decades to assess whether mobile phones pose a potential health risk. To date, no adverse health effects have been established as being caused by mobile phone use.”

For more information about SAR, see the following websites:

Ministry of Internal Affairs and Communications (MIC)

<http://www.tele.soumu.go.jp/e/sys/ele/body/index.htm>

Association of Radio Industries and Businesses (ARIB)

<http://www.arib-emf.org/01denpa/denpa02-02.html> (Japanese)

The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure then you can do so by limiting the length of calls or using a hands-free device to keep the mobile phone away from the head and body.

World Health Organization

<http://www.who.int/emf>

List of Specific Absorption Rates (SAR) for radio waves by smartphone/3G model

<https://www.softbank.jp/mobile/support/sar/> (Japanese)

A

About Phone.....	10-12
After-Sales Service.....	11-24
Airplane Mode.....	1-20
Alarm.....	7-2
Deleting.....	7-3
Editing.....	7-2
OFF.....	7-2
Registering.....	7-2
Stopping.....	7-3
All Reset.....	10-13
Anshin Backup.....	7-16
Checking History.....	7-17
Deleting.....	7-20
Login.....	7-17
Restoring.....	7-18
Saving.....	7-18
Saving Data Regularly.....	7-19
Answer Memo.....	3-8
Activating Automatically.....	3-8
Checking.....	3-8
Application.....	7-22

B

Battery.....	1-10
Installing.....	1-11
Removing.....	1-13
Battery Cover.....	1-2
Black List.....	
Deleting.....	3-10
Registering.....	3-9
Bookmark.....	5-5
Registering.....	5-5
Viewing.....	5-5

Browser.....	
Bookmark.....	5-5
Browser Menu.....	5-3
Browser Window.....	5-2
Browsing History.....	5-5
Downloaded Data.....	5-6
Menu of Browser Window.....	5-4
Pointer.....	5-4
Reload.....	5-4
Resetting.....	5-10
Settings.....	5-8
Tab.....	5-4
Web Search.....	5-3, 5-4
Browser Key.....	1-2
Browsing History.....	5-5
Deleting.....	5-8

C

Calculator.....	7-14
Calendar.....	7-9
Checking.....	7-10
Deleting.....	7-11
Editing.....	7-10
List Display.....	7-10
Registering.....	7-9
Call Key.....	1-2
Call Log.....	
Call Log Details Window.....	3-13
Call Log List Window.....	3-12
Menu.....	3-13
Viewing Call Log List.....	3-12
Calls.....	3-2
Answering Calls.....	3-6
Answer Memo.....	3-8
Black List.....	3-9
Blocking.....	3-9, 3-11
Call Barring Service.....	3-17
Call History.....	3-4, 3-12
Call Log.....	3-12
Call Services.....	3-17
Dial Window.....	3-2
Functions Available When a Call Arrives.....	3-7
HD Voice.....	3-2
Making Calls.....	3-2
Making International Calls.....	3-6
Mobile Network.....	3-7
Notify Caller ID Service.....	3-3, 3-19
Nuisance Calls.....	3-9
Operations during a Call.....	3-3
Outgoing Call.....	3-12
Put on Hold.....	3-8
Quick Dial.....	3-5
Redial.....	3-4
VoLTE.....	3-7
Window during a Call.....	3-6
Call Settings.....	10-7
Setting Any Key Answer.....	10-8
Setting Voice Quality.....	10-8
Camera.....	1-2, 6-2
File Formats/Save Location.....	6-2
Movie Size.....	6-3
Movie Viewfinder.....	6-3
Photo Size.....	6-3
Photo Viewfinder.....	6-3
Camera Key.....	1-2
Canceling PIN Lock.....	1-22
Character Key.....	1-2
Charging.....	1-10, 1-13
Checkbox.....	2-2
Checking Images.....	6-6
Checking Videos.....	6-6

Clear/Back/Answering Machine Setting Key	1-2
Converter	7-15
Converter Window	7-15

D

Data Folder	9-2
Menu	9-2
Playing Music/Audio	9-3
Playing Videos	9-4
Viewing/Playing Files	9-2
Descriptions in This Guide	ii
Dial Keys	1-2
Disaster	7-6
Disaster Message Board	
Checking	7-6
Deleting	7-6
Registering	7-6
Disaster Voice Messaging	
Deleting	7-8
Playing	7-8
Sending	7-7
Display	1-2
Display Saving	1-16
Downloaded Data	5-6
Deleting	5-6
Sending by Mail	5-7
View Mode	5-6

E

Editing Files	9-5
Changing File Name	9-5
Deleting Files	9-5
Emergency Call	3-16
Encrypt Phone	10-13
Enter Key	1-2

External Connection Terminal	1-2
------------------------------------	-----

F

File Copy	9-5
-----------------	-----

G

GPS Antenna	1-2
-------------------	-----

H

Handset Code	8-2
Changing	8-2
Registering	8-2
Resetting	8-2
Handset Parts	1-2

I

Information	
Checking	1-15
Hiding	1-15
Infrared	7-4
Receiving	7-4
Sending	7-5
Sending Profile	7-5
Infrared Port	1-2
Internal Communications Antennas ...	1-2

M

Mail	4-2
Attaching Files	4-6
Changing Mail Address	4-5
Creating	4-6
Creating Folder	4-16
Deleting	4-14
Deleting All Server Mails	4-23
Draft	4-10

Filtering	4-17
Forwarding	4-13
Mail Details	4-12
Mail Details Window	4-3
Mail Group Settings	4-22
Mail List Window	4-2
Menu	4-15
New Mail	4-11
New Mail Composition Window	4-4
Protecting	4-13
Receive Mail Option	4-21
Receiving Manually	4-11
Receiving Server Mail	4-11
Replying	4-12
Resetting Mail Receive/Send History	4-23
Resetting Mail Settings	4-23
Saving Attachment	4-14
Sending	4-5
Send/Receive Settings	4-21
Signature	4-9
Spam Mail	4-18
Storage Information	4-21
Mail Group	
Creating	4-22
Deleting	4-22
Mail Key	1-2
Main Menu	1-16
Main Specification	11-5
Mouthpiece	1-2
Movie	6-5
Menu	6-5
Playing	9-4
Shooting	6-5
Shooting Mode	6-5
My SoftBank	5-4

N

Network	10-8
Setting Mobile Network.....	10-9
Setting Network Operator.....	10-9
Notepad	7-11
Checking.....	7-11
Creating.....	7-11
Deleting.....	7-12
Editing.....	7-12
Notification	
Adjusting Volume.....	2-2
Changing.....	2-2
Notification Icons	1-17
Notification LED	1-2
Change.....	2-3
Notification List	7-21

P

Phone Book	2-13
Deleting.....	2-16
Group.....	2-18
Making Calls.....	2-16
Menu.....	2-16
Registering.....	2-14
Phone Settings	10-10
Input Settings.....	10-11
Setting Date & Time.....	10-11
Setting Language.....	10-11
Photo	6-4
Menu.....	6-4
Shooting.....	6-4
Shooting Mode.....	6-4
Phrases	2-8
Editing.....	2-8
Resetting.....	2-9

PIN Code	1-21
Changing.....	1-21
Enabling.....	1-21
Playing Music	9-3
Playing Voice	9-3
Power	
Powering OFF.....	1-14
Powering ON.....	1-14
Power/End Key	1-2
Profile	
Checking.....	3-14
Menu.....	3-16
Registering.....	3-14
PUK Code	1-22

R

Receiver	1-2
Ringtone	
Adjusting Volume.....	2-2
Changing.....	2-2

S

Screenshot	2-19
SD Card	1-7
Inserting.....	1-8
Removing.....	1-9
SD Card Slot	1-2
Security	10-7
Security Codes	1-20
Code.....	1-20
Handset Code.....	1-20
Lock No.....	1-20
Password.....	1-20
Security Functions	8-3
Screen Lock.....	8-3
Secret Mode.....	8-4

Setting Manner Mode	1-18
Drive Mode.....	1-19
Manner Mode.....	1-18
Original Mode.....	1-19
Settings	10-2
Setting Vibration	2-3
SIM Unlocking	1-7
SIMail	4-2
SMS	4-2
Creating.....	4-9
Delivery Reports.....	4-8
Menu.....	4-10
New SMS Composition Window.....	4-4
Sending.....	4-5
Using Draft.....	4-10
Softkeys	1-3
Software Update	11-2
Sound/Notification	
Changing Media Playback Volume	
.....	10-6
Setting Key Sound.....	10-6
Setting Notifications.....	10-5
Speaker	1-2
Standby	1-15
Return.....	2-2
Status Bar	1-15
Status Icons	1-17
Stop Watch	7-4
Straphole	1-2

T

Text Entry	2-4
Changing Mode.....	2-4
Editing.....	2-10
Entry Mode List.....	2-5
Normal Conv Candidate List.....	2-6

Phrases.....	2-8
Predictive Conv.....	2-12
Predictive Conv Candidate.....	2-6
Quoting Information.....	2-9
Reset.....	2-13
Reset learning.....	2-13
Text Entry Settings.....	2-12
User Dictionary.....	2-11
Text Entry Window.....	2-4
Timer.....	7-3
Troubleshooting.....	11-3

U

Up, Down, Left, Right Key.....	1-2
Urgent News.....	4-19
Checking.....	4-20
Not receiving.....	4-19
Receiving.....	4-20
User Dictionary	
Deleting.....	2-12
Editing.....	2-12
Registering.....	2-11
USIM Card.....	1-5
Inserting.....	1-6
Removing.....	1-6
USIM Card Slot.....	1-2

V

Videos	
Playing.....	9-4
Voice Recorder.....	7-12
Deleting.....	7-13
Playing.....	7-13
Setting Save Location.....	7-12
Voice Details.....	7-13

W

Wallpaper/Display.....	10-2
Setting Clock Display.....	10-3
Setting Font Size.....	10-4
Setting Key Back Light.....	10-4
Setting Screen Back Light Time.....	10-3
Setting Screen Brightness.....	10-3
Setting Wallpaper.....	10-3
Warranty.....	11-24

Warranty & After-Sales Service

■ Warranty

- Handset purchase includes warranty.
 - Check shop name and purchase date.
 - Read warranty and keep in a safe place.
 - Warranty period is given in warranty.
- SoftBank Corp. is not responsible for any damages for user or third party resulting from lost opportunities to make a call, etc. due to breakage, malfunction, or trouble of handset.
 - Information/settings on handset may be lost/changed due to malfunction or repairs. It is recommended that you keep a copy of Phone Book contacts and other important information. SoftBank Corp. is not responsible for loss/change of data (contacts, images, sound, etc.) or settings due to malfunction, or repairs.
 - Disassembly/modification of handset is prohibited under the Radio Law. Note that handset cannot be accepted for repairs if modified.

■ After-Sales Service

To request repairs, contact your nearest SoftBank shop or Inquiries (P.11-25). Have details of symptoms ready.

- During the warranty period, repairs are made under the terms and conditions of the warranty.
 - After the warranty period, if handset can be repaired, repairs will be made at cost.
- For more information on after-sales service, contact your nearest SoftBank shop or Inquiries (P.11-25).

Inquiries

For further information, feel free to contact the following.

● SoftBank Customer Support

■ General Information

From a SoftBank handset, dial toll free at 157
From a landline ☎ dial toll free at 0800-919-0157

■ Customer Assistance (Repairs/Lost Handsets)

From a SoftBank handset, dial toll free at 113
From a landline ☎ dial toll free at 0800-919-0113

If you cannot connect to free call with IP phone etc., please call the following number.

Eastern Japan	022-380-4380 (charges apply)
Western Japan	06-7669-0180 (charges apply)
Chugoku, Shikoku, Kyushu and Okinawa Regions	092-687-0010 (charges apply)

● SoftBank Global Call Center

Inquiries from overseas and notification of theft/
loss
+81-92-687-0025
(toll free from SoftBank handsets)

Simply User Guide

September 2017, First Edition

SoftBank Corp.

* If you have any questions after reading this user guide, feel free to contact SoftBank mobile phone dealers where you purchased handset.

Model: Simply

Manufacturer: SEIKO SOLUTIONS INC.

Simply User Guide