

Handy Extras



Useful Handset Applications	8-2
Calendar	8-3
Viewing Calendar	8-3
Opening Calendar	8-3
Saving Schedule	8-3
Viewing Schedule	8-4
Alarms	8-4
Setting/Resetting Alarm	8-4
Editing Alarm	8-5
Calculator	8-5
Converter	8-6
Converting Currencies	8-6
Converting Units	8-6
World Clock	8-7
Viewing World Clock	8-7
Selecting Areas	8-7
Notepad	8-7
Adding Notepad	8-7
Viewing Notepad	8-7
Tasks	8-7
Saving Tasks	8-7
Viewing Tasks	8-7
Marking a Task as Completed	8-8
Voice Recorder	8-8
Voice Recorder Window	8-8
Recording Sound	8-8
Playing Sound	8-9
Stopwatch	8-9

File Viewer	8-9
Using File Viewer	8-9
Zooming In/Out	8-10
Dictionary	8-11
Advanced Settings	
Calendar	8-11
Alarm	8-13
Currency/Unit Conversion	8-14
World Clock	8-14
Notepad	8-15
Tasks	8-15
Voice Recorder	8-17
File Viewer	8-17

Useful Handset Applications

Handset includes helpful lifestyle tools including Calendar and Bar Code Reader.

Calendar



View calendar and save schedule entries (P.8-3).

Alarm



Set Alarms (P.8-4).

Calculator



Use handset as a calculator (P.8-5).

Converter



Convert currencies or units of measure (P.8-5).

World Clock



View current time in major world cities (P.8-7).

Notepad



Create/view text memos (P.8-7).

Tasks



Create/view to-do lists (P.8-7).

Voice Recorder



Record/playback voice memos, etc. (P.8-8).

Stopwatch



Use handset as a stopwatch (P.8-9).

File Viewer



View documents (P.8-9).

Dictionary




Find English expressions for Japanese words or vice versa (P.8-11).

Calendar

Display Calendar and add schedules to Calendar. Select from three view modes. Add title, start date or other information. Save up to 200 events including Tasks.

 
Viewing Calendar

Select from three view modes: Monthly, Weekly and Daily.

- To switch view mode, press  → **View mode** (⊕P.8-12).
- If you select date with calendar entries, the entries appear.

 


Monthly View

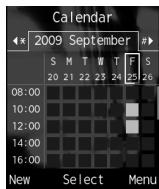



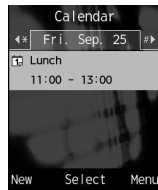



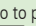







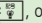


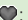
Weekly View



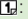


White rectangle: Highlighted position
Background color: Today
Blue-highlight: Saturdays
Red-highlight: Sundays and holidays
┘ (Blue): Schedule registered



Daily View

- In Monthly view, to go to previous/next month, press  or , or highlight Year/Month field and press .
- In Weekly view, to go to previous/next week, press  or , or highlight Year/Month field and press .
- In Daily view, to go to previous/next day, press , , or .
- If you select date with Calendar entries or Alarms set, the titles of Calendar entries, icons and other items appear.

-  : Schedule (*No category*)
-  : Schedule (*Appointment*)
-  : Schedule (*Meeting*)
-  : Schedule (*Business*)
-  : Schedule (*Holiday*)
-  : Schedule (*Anniversary*)
-  : Schedule (*Birthday*)
-  : Schedule (*Phone call*)
-  : Schedule (*Date*)

-  : Schedule (*Travel*)
-  : Schedule (*Miscellaneous*)
-  : Holiday
-  : Alarm set
-  : Repetition set

Opening Calendar



Saving Schedule



Save up to 200 events including tasks. Example: Saving title, start date & time


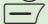
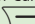
- For other items, see "Saving to Schedule" (⊕P.8-11).



- In Calendar window, select target date before Step 2 to display the date in Start date or End date field.

Viewing Schedule

- 1 
- 2 Move cursor to the day to view and  (Select)
- 3 Select a schedule to view

- To edit schedule, press  (Edit) after Step 3. Edit items, and press  (Save) to save.
- To view the registered number of Calendar and task in Calendar window, press  → *Memory status*.

Advanced

 **Advanced Settings**  P.8-11

- Switching View Mode
- Opening a Specific Date
- Viewing Schedule by Category
- Sending Schedule
- Deleting Schedule
- Viewing Secret Schedule
- Checking Missed Alarm Event
- Viewing Calendar Memory Status
- Sending Schedule as vFile
- Saving Schedule as vFile
- Printing Schedule via Bluetooth®

Alarms


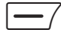
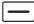
Save up to five Alarms. Use Alarm activation to activate or cancel alarm settings. Set alarms to repeat on specific days of the week or everyday.

Setting/Resetting Alarm



Example: Setting Alarm time

- For other items, see "Saving Alarm" (P.8-13).



Setting Alarm

- 1  → *Tools* → *Alarms*
- 2 Select from *Alarm1* to *Alarm5*
- 3 Enter alarm time
- 4  (Save)
 - Set or edit Alarm and press  (Save), Alarm is set to **On** automatically.

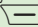- At Alarm time, tone sounds and indicator appears. Handset vibrates if Vibration is not **Off**. Press any key to stop alarm sound, vibration, and to clear indication display.



- During a call, or while connecting or dialing (**Connecting...** or **Dialing...** appears) at Alarm time, a tone sounds and an indicator appears. When **Alert on call** on **System sounds** is unchecked, only indicator appears during a call or connection. Press any key to clear indication display. When **Snooze** is set to other than **Off**, press  (End).
- When Alarm is set,  appears in Standby.
- If multiple alarms are set for the same time, first one set sounds first. If Schedule or Tasks alarm is set for the same time as Alarm (**Tools**), Alarm sounds first.
- When Manner mode is active, settings in **For manner mode** (P.8-14) applies.
- If Camera or Voice recorder is active at Alarm Time, Alarm sounds upon operation termination.

Resetting Alarm


- 1  → **Tools** → **Alarms** → Highlight an alarm to reset →  → **Reset this**

- To reset all alarms, select **Clear all**.


Editing Alarm

- 1  → **Tools** → **Alarms** → Select from **Alarm1** to **Alarm5** → Enter alarm time →  (**Save**)



To edit Alarm name

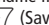Select Alarm name field → Enter alarm name →  (**Save**)




To set Alarm once only or every day

Select Repeat field → **Once only** or **Everyday** →  (**Save**)

To set Alarm for a specific day

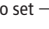Select Repeat field → **Selected day** → Check items to set →  (**Done**) →  (**Save**)

To set Alarm sound or video

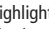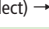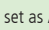Select Alert tone/video field → Select file location → Highlight file →  (**Play**) →  (**Select**) →  (**Save**)

- If Memory Card file is set as Alarm Sound, copy to handset confirmation appear. For copy protected file, move to handset confirmation appears. Choose **Yes** to complete setting.




Advanced




 

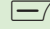

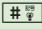
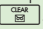

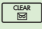
 **Advanced Settings** (P.8-13)

- Setting Volume or Vibration in Manner Mode

Calculator

Perform arithmetic operations up to 13 digits.


- 1  → **Tools** → **Calculator**
- 2 Use keypad,  and  to calculate

- To enter $+$, $-$, \times or \div , press , ,  or .
- To view the result, press .
- To enter decimal numbers, (or) , press  (.) repeatedly.
- To move cursor to left/right, press  or .
- To erase a symbol in a mathematical expression, place cursor after symbol → press .
- To clear mathematical expression and the result at once, press  (C) or hold  for 1+ seconds.

 
Converter

Convert various currencies or units of measure.

Converting Currencies

1  → *Tools* → *Converter* → *Currency*


2 Select Original field

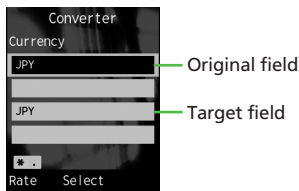

3 Select currency


4 Highlight Original value field
→ Enter value




- To enter decimal point, press .

5 Select Target field → Select currency

6 View result value

- To toggle original and target currency, press  (Reverse).

Converting Units




1  → *Tools* → *Converter* → *Length, Weight, Volume, Area or Temperature*

2 Select Original field → Select currency

3 Highlight Original value field
→ Enter value

4 Select Target field → Select currency

5 View result value

- To toggle original and target unit, press  (Reverse).
- To toggle + and - when converting temperature, press .
- To erase value, press  (Clear).

Advanced

 **Advanced Settings**  P.8-14

World Clock

See current time in world's major cities.

Viewing World Clock

1 → *Tools* → *World clock*

Selecting Areas

Save second time zone to see the time in World clock.

1 → *Tools* → *World clock*

2 Highlight Area 1 or Area 2 field → Use to select city

3 (Save)

Advanced

Advanced Settings P.8-14

Notepad

Add up to 20 memos. Memos can be added even during calls (P.3-5).

Adding Notepad

1 → *Tools* → *Notepad*

2 → Enter text

Viewing Notepad

1 → *Tools* → *Notepad* → Highlight notepad → (View)

Advanced

Advanced Settings P.8-15

- Deleting Notepad
- Sending Notepad
- Viewing Notepad Memory Status

Tasks

Save up to 200 Tasks and Schedule entries; manage by list.

Saving Tasks

Example: Saving Title, Due date & time

- For other items, see "Saving Task" (P.8-15).

1 → *Tools* → *Tasks*

2 → *Add new*

3 Enter a title

4 Highlight Due date & time field → Enter expiry date

5 (Save)


Viewing Tasks


1 → *Tools* → *Tasks*

- In Tasks, press to toggle *All tasks*, *Completed tasks*, *Uncompleted tasks* and *Expired tasks*.
- To edit task, select a task to display details, and press (Edit). Edit items, and press (Save) to save.

Marking a Task as Completed

1  → *Tools* → *Tasks*

2 Highlight a Task →
 (Status) → *Completed*

- To unmark a Task, press  (Status) → select *Uncompleted*.

Advanced

 **Advanced Settings**  P.8-15

 
- Saving Task
- Sending Tasks as vFile
- Sorting Tasks
- Opening Task for a Specific Date
- Deleting Tasks
- Saving Tasks as vFile
- Viewing Secret Task
- Viewing Missed Alarm Event
- Printing Tasks via Bluetooth®
- Viewing Task Item Status

Voice Recorder

Record up to 60 minutes; activate from *Tools*, or *Data Folder* in *Menu*, Create Message window, or during a call.

Voice Recorder Window

Use Softkeys and Multi Selector operations to control Voice recorder.

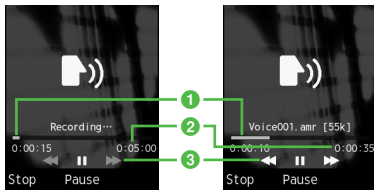


Recording Window

Playback Window

- 1 Elapsed time
- 2 Recordable time (recording)/Playback time (playing)
- 3 Multi Selector operations




Recording Sound


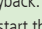
Recorded sound is saved to *Ring songs · tones* in *Data Folder*.


1  → *Tools* → *Voice recorder*

2  (Record)

3  (Stop)

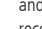


- Recording ends and is automatically saved. When recordable time has elapsed, recording automatically ends and is saved.
- Press  (Pause) to pause recording. While pausing, press  (Save) to end recording and save; press  (Record) to resume recording.




• To immediately confirm the recorded content, press  (Play). Press  (Pause) again to pause playback.

• To start the next recording, press  → Select *Record*.

Playing Sound

Play a sound file saved in *Data Folder*.

- 1  → *Tools* → *Voice recorder*
- 2  → *My sounds*
- 3 **Highlight a file** →  (Play)

- Press  or  to adjust playback volume level.
- Press  to rewind or fast forward.




Advanced


 **Advanced Settings**  P.8-17

- Recording Continuously
- Sending Recorded Sound File
- Deleting Recorded Sound File
- Editing Recorded Sound File Name
- Protecting Recorded Sound File
- Viewing Recorded Sound File Details

Stopwatch

Use handset as a stopwatch; record up to 10 lap times and total time.

- 1  → *Tools* → *Stopwatch*
- 2  (Start)
- 3  (Stop)

- While Stopwatch is running, press  (Lap) to mark a lap.

File Viewer

Using File Viewer


Select Normal view or Full screen view. In either view, Menu and shortcut (Key operation) are available to control Display.




Normal View



Full Screen View

- 1  → *Data Folder*
- 2 *Other documents* → **Select a file**
- 3 **Use menu or shortcuts to browse**









- Open PDF, XLS, DOC, PPT, or TXT files saved in **Data Folder**. Select an image file saved in **Data Folder** and File Viewer is activated automatically.
- To scroll pages, press .
- While File Viewer is active, Switch Bar (P.2-3) is not available.
- Files with up to approximately 10 MB can be browsed. However, in some cases, files under 10 MB may not be browsed.

Note

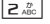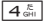

- If a document includes many pages or complicated designs, all pages of the document may not appear properly.
- A file in any language other than Japanese or English may not appear properly.

Shortcut Key Operations

Press the key assigned shortcut to perform shortcut.

Key	Description
	Zoom in
	Zoom out
	Move to the first page
	Move to the previous page
	Rotate 90 degrees clockwise or cancel
	Move to the next page
	Move to the last page
	Select Full screen view or Normal view

Zooming In/Out

- 1  → **Data Folder**
- 2 **Other documents** → **Select a file**
- 3  → **Zoom** → **Zoom**


Advanced

 P.8-17

- Switching between Full Screen view and Normal View
- Zooming In/Out File
- Changing Display Mode for File Width or Height
- Going to Pages
- Capturing Images
- Rotating File 90 Degrees Clockwise
- Searching String within Page
- Sending Files
- Editing File Name
- Protecting File
- Viewing File Details
- Deleting Files
- Viewing Shortcut Key Assignments

Dictionary



Look up words in English/Japanese dictionaries.

- 1  → *Tools* → *Dictionary*
- 2 *English dictionary or Japanese dictionary* → Enter a word
- 3 Select a target word


Advanced Settings

Calendar

Saving to Schedule

 →  (New) → Enter a title → Highlight Start date & time field → Enter start date and time

To set End date & time

Select End date & time field → Highlight End date & time field → Enter end date and time →  (Save)










To set Schedule for all day

Select Start or End date & time field →  (Check) →  (OK) →  (Save)

To set Category

Select Category field → Select an item →  (Save)

To set Alarm

Select Alarm field → Select Alarm time field → Select an item → Select Duration field → Select an item → Select Alert tone/video field → Select file location → Highlight file →  (Play) →  (Select) → Select Volume field → Adjust volume with  →  (Play) →  (OK) → Select Vibration field → Highlight vibration pattern →  (Play) →  (Select) →  (Done) →  (Save)

● For **Other** in Alarm time or Duration, enter alarm time or duration.

● If a Memory Card file is set as Alarm Sound, copy to handset confirmation appears. For a copy protected file, move to handset confirmation appears. Choose **Yes** to complete setting.

To repeat a set Schedule


Select Repeat field → Select an item → Enter repeat times →  (OK) →  (Save)

● If **No repetition** is selected, entering repeat times is not required.

To set Location

Select Location field → Enter location →  (Save)

To automatically delete Schedule


Select Expiry field → Enter an item →  (Save)

● Upon expiry, schedule is automatically deleted from Calendar (e.g. if Expiry is **After 1 year**, and Repetition is unset, schedule is deleted one year from event end date). If Repetition is set, schedule is deleted one year after last repetition. Select **Off** to cancel auto delete.

To set Details

Select Details field → Enter content →  (Save)

To set Secret

Select Secret field → Select an item →  (Save)

Editing Schedule

🕒 → Select date → Select a schedule to edit
 → ⚙️ (Edit) → Edit in the same way as on registration (⌚P.8-11) → 📄 (Save)

Switching View Mode

🕒 → ☰ → *View mode* → Select an item

Opening a Specific Date

🕒 → ☰ → *Go to*

■ **To show today's date**
Today

■ **To toggle to specified date**
Date → Enter date

Viewing Schedule by Category

🕒 → ☰ → *List by category* → Select an item

Sending Schedule

🕒 → ☰ → *Send via Bluetooth* → Check schedule entries to send → 📄 (Send) → *Yes* → (⌚P.11-5 Sending One by One 2)

Deleting Schedule



■ To delete an entry

Select date → Highlight a schedule entry to delete
 → ☰ → *Delete* → *Selected* → *Yes*

■ To delete all schedules of selected date

Highlight date → ☰ → *Delete* → *All this day* → *Yes*

● To delete all schedules in the date displayed in Daily view, ☰ → *Delete* → *All* → Enter Phone Password → ⏹️ (OK) → *Yes*.

■ To delete schedules for a specified period of time

In Monthly view or Weekly view, ☰ → *Delete* → *Periods* → Highlight start date → Enter start date → Highlight end date → Enter end date → ⏹️ (Delete) → *Yes*

■ To delete schedules of currently displayed month or week

In Monthly view or Weekly view, ☰ → *Delete* → *This month* or *This week* → *Yes*

■ To delete all schedules before the highlighted date

In Monthly view or Weekly view, ☰ → *Delete* → *All past data* → Enter Phone Password → ⏹️ (OK) → *Yes*

■ To delete all schedules

In Monthly view or Weekly view, ☰ → *Delete* → *All* → Enter Phone Password → ⏹️ (OK) → *Yes*

■ To delete multiple schedules listed by category

In Monthly view or Weekly view, ☰ → *List by category* → Select a category → ☰ → *Delete* → *Multiple* → Check schedule entries to delete → 📄 (Delete) → *Yes*

● To delete all schedules in category, select *All (This category)* → *Yes*.

Setting Holiday

🕒 → ☰ → *Settings* → *Set holiday* → Select a field → Enter title → Enter date → Enter frequency → 📄 (Save)

Changing Holiday Display

🕒 → ☰ → *Settings* → *Set holiday* → Check holidays setting to enable → 📄 (Save)

Editing Added Holiday

🕒 → ☰ → *Settings* → *Set holiday* → Highlight holiday setting → ☰ → *Edit* → Edit items → 📄 (Save)

Deleting Added Holiday

🕒 → ☰ → *Settings* → *Set holiday* → Highlight holiday setting → ☰ → *Delete*

Setting Beginning of Week

🕒 → ☰ → *Settings* → *Starting day* → *Sunday* or *Monday*

Setting Default Calendar View

→ → **Settings** → **Default view mode**
→ Select an item

Setting Reminder

→ → **Settings** → **Reminder** → Select On/Off field → **On**

■ To set remind time

Select Time field → Enter time → (Save)

■ To set Alarm duration time

Select Duration field → Select an item → (Save)

- When selecting **Other**, enter duration.

■ To set Alarm sound or video

Select Alert tone/video field → Select file location
→ Highlight a file → (Play) → (Select) → (Save)

- If a Memory Card file is set as Alarm Sound, copy to handset confirmation appears. For a copy protected file, move to handset confirmation appears. Choose **Yes** to complete setting.

■ To adjust Alarm volume

Select Volume field → Adjust volume with → (Play) → (OK) → (Save)

■ To set Vibration

Select Vibration field → Highlight vibration pattern
→ (Play) → (Select) → (Save)

Viewing Secret Schedule

→ → **Unlock temporarily** → Enter Phone Password → (OK)

Checking Missed Alarm Event

→ → **Missed alarm event** → Select schedule

Viewing Calendar Memory Status

→ → **Memory status**

Sending Schedule as vFile

→ Select date → Highlight schedule → → **Send**

■ To send via message

Via message → (2)

■ To send via Bluetooth®

Via Bluetooth → (2)

Saving Schedule as vFile

→ Select date → Highlight schedule → → **Save to Data Folder** → **Phone** or **Memory card** → **Yes**

- When Memory Card is inserted, select **Memory card**.

Printing Schedule via Bluetooth®

→ Select date → Highlight schedule → → **Print via Bluetooth** → (4)

Alarm

Saving Alarm

→ **Tools** → **Alarms** → Select from **Alarm1** to **Alarm5** → Enter alarm time

■ To edit Alarm name

Select Alarm name field → Enter alarm name → (Save)

■ To set Alarm once only or every day

Select Repeat field → **Once only** or **Everyday** → (Save)

■ To set Alarm for a specific day

Select Repeat field → **Selected day** → Check items to set → (Done) → (Save)

■ To set Alarm sound or video

Select Alert tone/video field → Select file location
→ Highlight file → (Play) → (Select)
→ (Save)

- If a Memory Card file is set as Alarm Sound, copy to handset confirmation appears. For a copy protected file, move to handset move confirmation appears. Choose **Yes** to complete setting.

■ To adjust Alarm volume

Select Volume field → Adjust volume with → (Play) → (OK) → (Save)





■ To set Vibration

Select Vibration field → Highlight vibration pattern
→ (Play) → (Select) → (Save)

To set Snooze

Select Snooze field → Select an item →

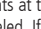 (Save)

- When Snooze is set to other than *Off*, alarm repeats at the specified interval until Snooze is canceled. If no key operation or any key other than  and  (End) is pressed while alarm sounds, alarm stops, and resets to sound again at specified interval. To cancel Snooze, press  or  (End).

- For *Other*, enter duration.

To set Snooze repeat time(s)

Select Snooze repeat time field → Select an item →

 (Save)



To set Alarm duration time

Select Duration field → Select an item →

 (Save)

- When selecting *Other*, enter duration.

Setting/Canceling Alarm



 → *Tools* → *Alarms* → Highlight alarm →  (On/Off)

Setting Volume or Vibration in Manner Mode

 → *Tools* → *Alarms* →  → *For manner mode*

To set Alarm volume

Select Alarm volume field → Adjust volume with

 →  (Play) →  (OK)





To set Vibration

Select *Vibration* field → Select an item




Currency/Unit Conversion**Viewing Exchange Rate**

 → *Tools* → *Converter* → *Currency* → Highlight Original field →  (Rate)

Changing Exchange Rate

 → *Tools* → *Converter* → *Currency* → Highlight Original field →  (Rate) → Highlight a currency to change rate →  (Edit) → Enter rate →  (Save)

Adding Currency Unit

 → *Tools* → *Converter* → *Currency* →  (Rate) →  (Add) → Enter currency unit name and rate

Deleting Added Currency Unit

 → *Tools* → *Converter* → *Currency* →  (Rate) → Highlight currency unit to delete →  (Delete)

World Clock**Setting Daylight Saving Time**

 → *Tools* → *World clock* →  (DST) → Check areas to set daylight saving time →  (Done) →  (Save)

Notepad


Editing Notepad

● → **Tools** → **Notepad** → Highlight notepad
→  (Edit) → Edit content



Deleting Notepad

● → **Tools** → **Notepad**

■ To delete an item

Highlight notepad →  → **Delete** → **Selected** → **Yes**



■ To delete multiple items

Highlight notepad →  → **Delete** → **Multiple** → Check notepads →  (Delete) → **Yes**

■ To delete all items

Highlight notepad →  → **Delete** → **All** → Enter Phone Password → ● (OK) → **Yes**

Sending Notepad


● → **Tools** → **Notepad** → Select notepad →  → **Send memo** → (P.4-4 5! Mail )

Viewing Notepad Memory Status

● → **Tools** → **Notepad** →  → **Memory status**

Tasks




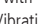
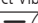


Editing Tasks

● → **Tools** → **Tasks** → Select Task → ● (Edit) → Edit Task (P.8-15) →  (Save)

Saving Task

● → **Tools** → **Tasks** →  → **Add new** → Enter title → Highlight Due date & time field → Enter expiry date


■ To set Alarm

Select Alarm field → Select Alarm time field → Select alarm time → Select Duration field → Select duration → Select Alert tone/video field → Select file location → Highlight file →  (Play) →  (Select) → Select Volume field → Adjust volume with  →  (Play) → ● (OK) → Select Vibration field → Highlight vibration pattern →  (Play) → ● (Select) →  (Done) →  (Save)


- When **Other** is selected in Alarm time, enter alarm time.
- When **Other** is selected in Duration, enter duration.
- If a Memory Card file is set as Alarm Sound, copy to handset confirmation appears. For a copy protected file, move to handset confirmation appears. Choose **Yes** to complete setting.

- At Alarm Time, tone sounds and indicator appears. Press any key to stop the alarm sound. Press ● (OK) to clear the indication display. If Alarm is not stopped, Missed Alarm message appears. Press ● (View) to view the event.
- During a call, or while connecting or dialing (**Connecting...** or **Dialing...** appears) at Alarm time, a tone sounds and an indicator appears. If **Alert on call** in **System sounds** is unchecked, only indicator appears during a call or connection. Press ● (OK) to clear indication display.


■ To set Priority

Select Priority field → Select an item →  (Save)


■ To set Details

Select Details field → Enter content →  (Save)

■ To activate or cancel Secret

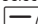Select Secret field → Select an item →  (Save)

Sending Tasks as vFile


● → *Tools* → *Tasks* → Highlight a Task →
 → *Send*

■ To send via message


Via message → (P.4-4 SI Mail 2)

■ To send via Bluetooth®

Via Bluetooth → Check Tasks → (P.11-5 Sending One by One 2)

- Alternatively, in details window,  → Select *Send*.

Sorting Tasks

● → *Tools* → *Tasks* →  → *Sort by* →
 Select an item

Opening Task for a Specific Date

● → *Tools* → *Tasks* →  → *Go to*

■ To show today's Task

Today


■ To enter date to view Task


Date → Enter date

Deleting Tasks

● → *Tools* → *Tasks*

■ To delete an item


Highlight Task →  → *Delete* → *Selected*
 → *Yes*

- Alternatively, in details window,  → *Delete* to delete an item.


■ To delete multiple items

 → *Delete* → *Multiple* → Check Tasks →
 (Delete) → *Yes*

■ To delete all items

 → *Delete* → *All tasks* → Enter Phone
 Password → ● (OK) → *Yes*

Saving Tasks as vFile

● → *Tools* → *Tasks* → Select Task → 
 → *Save to Data Folder* → *Phone* or *Memory*
card → *Yes*


- With Memory Card inserted, *Memory card* can be set as save location.

Viewing Secret Task


● → *Tools* → *Tasks* →  → *Unlock*
temporarily → Enter Phone Password →
 ● (OK)


Viewing Missed Alarm Event

● → *Tools* → *Tasks* →  → *Missed*
alarm event → Select Task to view


- Alternatively, in details window,  → Select *Missed alarm event*.

Printing Tasks via Bluetooth®

● → *Tools* → *Tasks* → Highlight Task →
 → *Print via Bluetooth* → (P.6-12 Printing via Bluetooth® 4)

- Alternatively, in details window,  → *Print via Bluetooth*.

Viewing Task Item Status

● → *Tools* → *Tasks* →  → *Memory*
status

Voice Recorder

Setting Recorded Sound File as Ringtone, etc.

ⓘ → **Tools** → **Voice recorder** → ⓘ (Record)
→ ⏏ (Stop) → ⏏ (Set as) → Select
ringtone

- If **Caller ringtone** is selected, search and select Phonebook entry (➔P.2-17).

Recording Continuously

ⓘ → **Tools** → **Voice recorder** → ⓘ (Record)
→ ⏏ (Stop) → ⏏ → **Record**

Sending Recorded Sound File

ⓘ → **Tools** → **Voice recorder** → ⓘ (Record)
→ ⏏ (Stop) → ⏏ → **Send**

■ To send via message

Via message → (➔P.4-4 SI Mail 2)

■ To send via Bluetooth®

Via Bluetooth → (➔P.11-5 Sending One by One 2)

Deleting Recorded Sound File

ⓘ → **Tools** → **Voice recorder** → ⓘ (Record)
→ ⏏ (Stop) → ⏏ → **Delete** → **Yes**

Editing Recorded Sound File Name

ⓘ → **Tools** → **Voice recorder** → ⓘ (Record)
→ ⏏ (Stop) → ⏏ → **Rename** → Enter
file name

Protecting Recorded Sound File

ⓘ → **Tools** → **Voice recorder** → ⓘ (Record)
→ ⏏ (Stop) → ⏏ → **Lock** or **Unlock**

Viewing Recorded Sound File Details

ⓘ → **Tools** → **Voice recorder** → ⓘ (Record)
→ ⏏ (Stop) → ⏏ → **Details**

Changing Default Name at Saving

ⓘ → **Tools** → **Voice recorder** → ⏏ →
Recording settings → **Default name** → Enter
file name

Changing Recording Time

ⓘ → **Tools** → **Voice recorder** → ⏏ →
Recording settings → **Recording time** → Select
an item

Changing Default Saving Location

ⓘ → **Tools** → **Voice recorder** → ⏏ →
Recording settings → **Set default memory** →
Phone or **Memory card**

- If Memory card is not inserted, files are automatically saved to **Phone**.

File Viewer

Switching between Full Screen view and Normal View

ⓘ → **Data Folder** → **Other documents** →
Select file → ⏏ → **Full screen view** or
Normal view

Zooming In/Out File

ⓘ → **Data Folder** → **Other documents** →
Select file → ⏏ → **Zoom** → Select an item

Changing Display Mode for File Width or Height

ⓘ → **Data Folder** → **Other documents** →
Select file → ⏏ → **Fit to screen** → Select
an item

Going to Pages

ⓘ → **Data Folder** → **Other documents** →
Select file → ⏏ → **Go to** → Select an item


- For **page**, specify page number.

Capturing Images


ⓘ → **Data Folder** → **Other documents** →
Select file → ⏏ → **Screen capture**



- Captured image is saved in JPEG format to **Pictures** folder in **Data Folder** of handset.

Rotating File 90 Degrees Clockwise


● → *Data Folder* → *Other documents* →
Select file →  → *Rotate*

Searching String within Page

● → *Data Folder* → *Other documents* →
Select file →  → *Search* → Enter text to search

- After searching result is displayed, press  to search next with the same word and press  for previous result.

Sending Files

● → *Data Folder* → *Other documents* →
Select file →  → *Send*


■ To send via message

Via message → (P.4-4 S! Mail 2)


■ To send via Bluetooth®

Via Bluetooth → (P.11-5 Sending One by One 2)


Editing File Name

● → *Data Folder* → *Other documents* →
Select file →  → *Rename* → Enter file name


Protecting File

● → *Data Folder* → *Other documents* →
Select file →  → *Lock* or *Unlock*


Viewing File Details

● → *Data Folder* → *Other documents* →
Select file →  → *Details*

Deleting Files


● → *Data Folder* → *Other documents* →
Select file →  → *Delete* → *Yes*

Assigning Scroll Range

● → *Data Folder* → *Other documents* →
Select file →  → *Settings* → *Panning* →
Select an item


- Assign scroll range for each press of .

Fit to Display

● → *Data Folder* → *Other documents* →
Select file →  → *Settings* → *Reflow* →
Select an item


- When *On* content is fit to Display size.

Setting Map


● → *Data Folder* → *Other documents* →
Select file →  → *Settings* → *Map on* →
Select an item

- When *On* current position is framed in red.



Setting Shortcut Guidance to Show/Hide in Full Screen View

● → *Data Folder* → *Other documents* →
Select file →  → *Settings* → *Controller* →
Select an item

Editing Default File Name at Screen Capture

● → *Data Folder* → *Other documents* →
Select file →  → *Settings* → *Screen capture name* → Enter file name

Viewing Shortcut Key Assignments

● → *Data Folder* → *Other documents* →
Select file →  → *FileViewer shortcuts* →
Use  to view shortcuts