

# Appendix



<b>Troubleshooting</b> .....	<b>13-2</b>
<b>Software Update</b> .....	<b>13-5</b>
<b>Function List</b> .....	<b>13-6</b>
Main Menu .....	13-6
<b>Text Entry Key Assignments</b> .....	<b>13-8</b>
<b>Symbols List</b> .....	<b>13-9</b>
Double-byte Symbols .....	13-9
Single-byte Symbols .....	13-9
Symbol Conversions .....	13-9
<b>Pictograms</b> .....	<b>13-10</b>
<b>Memory List</b> .....	<b>13-11</b>
<b>Specifications</b> .....	<b>13-11</b>
SoftBank 830SC .....	13-11
Battery .....	13-12
<b>Index</b> .....	<b>13-13</b>
<b>Objective Index</b> .....	<b>13-18</b>
<b>Advanced Settings Index</b> .....	<b>13-20</b>
<b>Warranty &amp; Service</b> .....	<b>13-21</b>
Warranty .....	13-21
Repair Requests .....	13-21
<b>Customer Service</b> .....	<b>13-22</b>

## Troubleshooting

### ■ Handset does not turn on

- Is battery empty?  
→ Replace or charge battery.
- Is battery installed in handset?  
→ Install battery correctly.

### ■ When power is turned on, PIN entry window appears

- Is *PIN certification* set to *On*?  
→ If *PIN certification* is *On*, enter PIN.

### ■ When power is turned on, USIM password entry window appears

- Is *USIM lock* set to *On*?  
→ If *USIM lock* is *On*, enter USIM password.

### ■ Please insert USIM card, Incorrect USIM or USIM card failed appears when handset is turned on or executing a function

- Is USIM Card correctly installed?  
→ Check to see if USIM Card is correctly installed. If the message appears even though USIM Card is correctly installed, it may be damaged.
- Is USIM Card still being loaded?  
→ Try again after a while.
- Is an incorrect USIM Card used?  
→ Check to see if correct USIM Card is used. Use USIM Card specified by SoftBank.
- Is there debris on USIM Card IC chip?  
→ Remove debris with a clean, dry cloth, and then install USIM Card correctly.

### ■ 圏外 or OUT appears and no calls can be made

- Handset is out-of-range.  
→ Move to a place where the signal is stronger and try again.

### ■ Calls are interrupted or disconnected

- Does 圏外 or **OUT** appear?  
→ Move to a place where the signal is stronger and try again.
- Is battery empty?  
→ Replace or charge battery.

### ■ Unable to make a call

- Is Call Barring set?  
→ Deactivate Call Barring.
- Is *Offline mode* set to *On*? (☒ appears)  
→ Set *Offline mode* to *Off* (☑P.1-14).

### ■ Unable to open Phonebook entry, Data Folder, Call Log, Calendar, or Messaging

- Is *Application lock* set?  
→ Cancel *Application lock* (☑P.9-5).

### ■ Clicking noise is heard during a call

- Noise may be generated when signal is weak or while moving between coverage areas.

**Unable to charge battery**

- ☑ Is AC Charger Connector securely inserted into the conversion cable?
  - ➔ Insert AC Charger Connector securely.
- ☑ Is the conversion cable securely inserted into handset?
  - ➔ Insert AC Charger Connector securely.
- ☑ Is AC Charger plug securely inserted?
  - ➔ Insert AC Charger plug securely.
- ☑ Is battery installed in handset?
  - ➔ Install battery correctly.
- ☑ Are handset terminals and AC Charger clean?
  - ➔ Clean contacts with a dry cotton swab.
- ☑ Was battery charged in ambient temperature below 5 °C or above 40 °C?
  - ➔ Charge battery in ambient temperature between 5 °C and 40 °C.
- ☑ Battery may need to be replaced.
  - ➔ Install a new battery.
- ☑ Does battery always lose its charge quickly after being charged?
  - ➔ Battery life has expired. Replace with a new battery.

- ☑ Does handset or battery become very warm during charging?
  - ➔ If the temperature rises too much, charging may stop. After handset and battery are cool, retry charging.

**Devices become hot**

- ☑ During charging, AC Charger may heat up.
  - ➔ If handset is safe to touch, heat level is normal. If it is too hot to touch, immediately stop charging and contact Customer Service (☎P.13-22).
- ☑ Handset may heat up during charging/long calls.
  - ➔ If handset is safe to touch, heat level is normal. If it is too hot to touch, immediately stop charging and contact Customer Service (☎P.13-22).

**Battery drains quickly**

- ☑ Battery may drain quickly depending on the operating environment (Ambient temperature, charging conditions, or Signal Strength), operations, and settings.
  - ➔ Use handset in an appropriate environment and reduce operations requiring high power (☎P.1-7).

**Display flickers**

- ☑ Is handset used near a fluorescent light?
  - ➔ Use handset as far away from a fluorescent light as possible.

**Display is dim or unlit**

- ☑ This may be due to the characteristics of Display and not a problem. The time until Display is dimmed or unlit can be changed by adjusting the Backlight time (☎P.12-12).

**Unable to play music via speaker**

- ☑ Is *Manner mode* set?
  - ➔ Cancel *Manner mode*.
- ☑ Is the stereo earphone or earphone microphone connected?
  - ➔ Disconnect the connector for the stereo earphone or earphone microphone from handset.


**Too many applications are already running. appears**

- ☑ Too many functions are active.
  - ➔ Close some.

### ■ Unable to establish Bluetooth® or USB connections using Samsung New PC Studio

- ☑ Is the USB driver installed? (for USB connection)
  - ➔ If communications are executed connecting to a personal computer with data cable, installing the driver is required. Download USB Driver Installer from SAMSUNG website (<http://jp.samsungmobile.com/pc/lineup/830download.html>) and install the driver.
- ☑ Is the connection method set correctly on the personal computer?
  - ➔ Set the connection method to **USB** or **Bluetooth** on the Connection Manager of Samsung New PC Studio or the Connection Wizard for the communication in use.
- ☑ Are Bluetooth® or PC USB connection port and Samsung New PC Studio the same?
  - ➔ Make sure port settings match those set for Samsung New PC Studio Connection Manager or Connection Wizard.

### ■ Phonebook entry, Message folder, schedule event in Calendar, or Tasks do not appear

- ☑ In **Security**, is **Secret mode** set to **Hide**?
  - ➔ In **Security**, set **Secret mode** to **Show** (☞P.9-5).
- ☑ Is **Secret** under each function set to **On**?
  - ➔ Press  in intended window → Select **Unlock temporarily**.

### ■ Sending message failed appears

- ☑ If send fails, error message and reason appear.
  - ➔ Confirm reason and try again.

### ■ Service not allowed appears

- ☑ Handset is outside 3G service area.
  - ➔ Send from within the service area.

### ■ Sending operation cannot be operated in offline mode appears

- ☑ In **Offline mode**, handset transmissions are disabled.
  - ➔ Set **Offline mode** to **Off** (☞P.1-14).

### ■ Storage space short by \* \* bytes. Edit data folder files? appears

- ☑ Handset memory is full.
  - ➔ Delete unnecessary files and try again.

### ■ Cannot download. File corrupt. appears

- ☑ File cannot be downloaded; cancel download.

### ■ Unable to call via Stereo Earphone Microphone or Bluetooth®


- ☑ Is **Earphone call** set to **Off**?
  - ➔ Even if **Earphone call** number is saved, if **Earphone call** is set to **Off** it will not be dialed. Set **Earphone call** to **On** (☞P.12-20).

## Software Update

SoftBank releases firmware updates. Download as required. Choose *Update* or *Schedule update*.


1  → *Tools* → *Software update*

2  (Yes)

- Handset connects to network by pressing  (Yes).

3 Read Terms of Use and then *Agree*

- Read through Terms of Use before selecting *Agree*.

4 Enter Center Access Code (☎P.1-18) →  (OK) →

 (OK)

 
- Update result appears.

5 Select one from the following updating methods


### To update immediately

#### Update now

- Update starts. When complete, handset powers off and restarts; Notification appears.

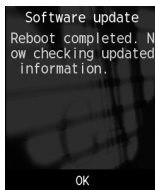


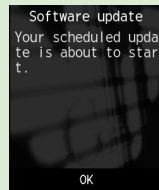 
### To schedule later update

 
*Schedule update* →  (Yes) →

Select schedule date → Select schedule time → Confirm schedule date & time →

 (OK)

- For procedures, contact SoftBank Mobile Customer Service.
- Confirming/downloading updates does not incur fees.
- At scheduled update time, message appears. Press  (OK) or wait ten seconds. Update will not start while handset is in use. When operation ends, a message window appears. However if operation does not end within ten minutes of scheduled update time, scheduled update is automatically canceled.




- To cancel Schedule update, perform Steps 1 to 4, then select *Cancel schedule* and press  (Yes).

## Note

- Charge battery beforehand; if low, update may fail.
- If Scheduled update time arrives while handset is out-of-range, Software Update is canceled.
- Remain within strong, stable signal conditions.
- Handset Phonebook entries, media files, and other contents are not affected by software updates, but always back-up important information (note that some files cannot be copied). SoftBank is not liable for damage from lost information, etc.
- Handset transmissions are disabled during update.
- Update may take some time to complete.
- Update failure may disable handset. Contact SoftBank Customer Center, Customer Assistance (☎P.13-22).
- If updated handset fails to restart, remove and reinsert battery then power on. If this fails, call SoftBank Mobile Customer Center, Customer Assistance (☎P.13-22).

## Function List

### Main Menu

To display the below items, press  in Standby.

Main Menu Item	Page
Messaging	
Received msg.	P.4-10, P.4-13
Create new	P.4-4
Retrieve new	P.4-23
Drafts	P.4-13, P.4-19
Templates	P.4-13, P.4-19
Sent msg.	P.4-13
Unsent msg.	P.4-13
Server mail	P.4-27
Create new SMS	P.4-7
Settings	P.12-2
Memory status	P.10-13
Yahoo! Keitai	
Yahoo! Keitai	P.5-3
Bookmarks	P.5-7
Saved pages	P.5-7
Enter URL	P.5-3, P.5-4
History	P.5-3, P.5-4
PC site browser	P.5-4
Yahoo! Keitai browser settings	P.12-6

Main Menu Item	Page
Media Player	
Music	P.7-4
Movie	P.7-7
Settings	P.12-8
Calendar	P.8-3
Camera	
Take photo	P.6-6
Record video	P.6-11
Data Folder	
Pictures	P.10-2
My Pictograms	P.10-2
Ring songs · tones	P.10-2
Music	P.10-2
Videos	P.10-2
Graphic Mail templates	P.10-2
Other documents	P.10-2
Memory status	P.10-2
Tools	
Alarm	P.8-4
Calculator	P.8-5
Converter	P.8-6
World clock	P.8-7
Notepad	P.8-7
Tasks	P.8-7
Voice recorder	P.8-8
Stopwatch	P.8-9
Dictionary	P.8-11
Software update	P.13-5

 




 




 



Main Menu Item	Page
Phonebook	
Phonebook	P.2-17
Create new entry	P.2-15
Call log	P.3-10
Group settings	P.2-23
Account details	P.1-12
Speed dial	P.3-6
S! Addressbook Back-up	P.11-9
Settings	P.12-10
Memory status	P.12-22
Settings	
Sounds & Alerts	P.12-10
Display settings	P.12-12
Phone settings	P.12-13
Security	P.12-15
Call settings	P.12-16
Manner mode settings	P.12-20
Connectivity	P.12-21
Memory settings	P.12-22

## Text Entry Key Assignments

Multiple characters are assigned to each key. Press a key repeatedly until the target character appears.

Press  to change text entry mode.

Press  to switch to Symbols,  to toggle Pictograms and Emoticons.

 
Key	Kanji/Hiragana	Katakana	Alphanumerics	Numbers
	あいうえおあいうえお 1	アイウエオアイウエオ 1	.@-_:~^1	1
	かきくけこ 2	カキクケコ 2	ABCabc2	2
	さしすせそ 3	サシスセソ 3	DEFdef3	3
	たちつてと 4	タチツテト 4	GHghi4	4
	なにぬねの 5	ナニヌネノ 5	JKLjkl5	5
	はひふへほ 6	ハヒフヘホ 6	MNOmno6	6
	まみむめも 7	マミムメモ 7	PQRSpqrs7	7
	やゆよやゆよ 8	ヤユヨヤユヨ 8	TUVtuv8	8
	らりるれろ 9	ラリルレロ 9	WXYZwxyz9	9
	わをん、。 - 0	ワヲン、。 - 0	„_! ? <Space> 0	0
	<ul style="list-style-type: none"> <li>● Add ° / ° to unfixed, convertible kana</li> <li>● Toggle Pictograms, Emoticons</li> </ul>		<ul style="list-style-type: none"> <li>● Toggle Pictograms, Emoticons</li> <li>● Toggle upper/lower-case (only before fixing and convertible character for entering alphabets)</li> </ul>	
	<ul style="list-style-type: none"> <li>● Toggle Double-byte Symbols, Single-byte Symbols</li> </ul>			
	<ul style="list-style-type: none"> <li>● Reverse toggle characters assigned to the same key before finalizing character selection</li> </ul>			—
	<ul style="list-style-type: none"> <li>● Change entry mode</li> </ul>			

1 When double-byte, "--" cannot be used (" ~ " appears on Display).





# Pictograms

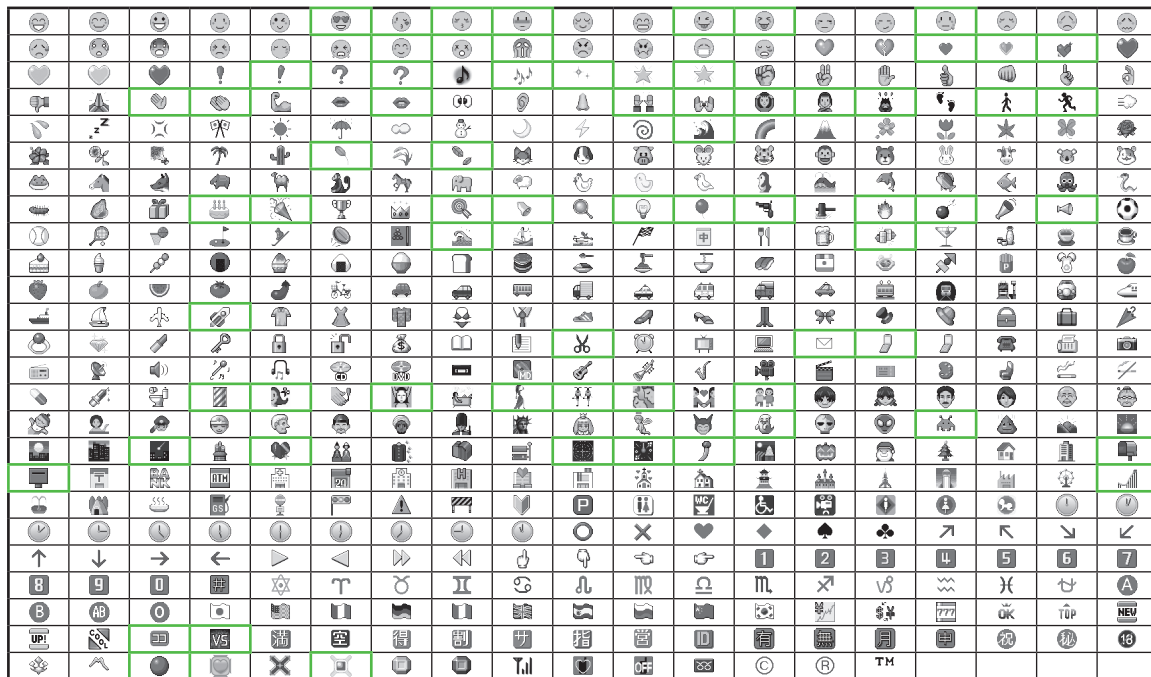

- Pictograms with  are animated.
- Some pictograms and animated pictograms may not appear properly on some models of SoftBank handsets or other devices.

## Memory List

S! Mail/ SMS (Phone memory)	Received messages	Up to 1000 messages or 5MB
	Drafts	Up to 20 messages or 1MB
	Sent messages	Up to 250 messages or 1MB
	Unsent	Up to 20 messages or 1MB
SMS	USIM card	Up to 10 messages
Data Folder	Pictures	Up to 999 items (files/subfolders) per folder
	My Pictograms	
	Ring songs · tones	
	Music	
	Videos	
	Message templates	
	Other documents	

## Specifications

Handset specifications may change without prior notice.

### SoftBank 830SC

Item	Specification
Weight	91 g*
Continuous Talk Time	Voice Call: 280 minutes (3G)*/240 minutes (GSM)*
Continuous Standby Time (Display off)	540 hours (3G)*/350 hours (GSM)*
Charging Time	AC Charger: 160 min.*
Dimensions (W x H x D)	47.4 x 114.9 x 12.0 mm *
Maximum Output	0.25 W

\* Approximate value

- Handset with battery installed.
- Battery Time is calculated by SoftBank Mobile under stable signal conditions. Calling in poor signal conditions or leaving handset on out-of-range will consume more power and may reduce Battery Time by more than half.
- Frequent handset operations requiring Backlight (e.g., Yahoo! Keitai) may reduce Continuous Talk Time and Continuous Standby Time.
- Using video for Wallpaper may significantly reduce Continuous Talking and Continuous Standby Times.

- Continuous Talk Time is an average measured with a battery in stable signal conditions. Continuous Standby Time is an average measured with a new, fully charged battery without calls or operations, in Standby, in stable signal conditions. Alternating between usage and Standby shortens Continuous Talk Time and Continuous Standby Time. Talk Time/Standby Time may vary by environment (battery status, ambient temperature, etc.).

## Battery

Item	Specification
Voltage	3.7 V
Type	Lithium-ion
Capacity	960 mAh
Dimensions (W x H x D)	4.7 x 36.0 x 54.2 mm (without protruding parts)

# Index

## A

<b>AC Charger</b> .....	<b>1-10</b>
<b>Account details</b> .....	<b>1-12</b>
Reset .....	1-19
<b>Alarms</b> .....	<b>8-4</b>
<b>All Reset</b> .....	<b>9-7</b>
<b>Answering Machine</b> .....	<b>3-7</b>
Cancel .....	3-7
Delete records .....	3-8
Play records .....	3-8
Set .....	3-7
<b>Any key answer</b> .....	<b>12-14</b>
<b>Application lock</b> .....	<b>9-5</b>
<b>Auto Keypad Lock</b> .....	<b>9-4</b>
<b>Auto redial</b> .....	<b>12-19</b>

## B

<b>Battery</b> .....	<b>1-7</b>
Inserting & Removing .....	1-8
<b>Bluetooth®</b> .....	<b>11-3</b>
Activate/Cancel .....	11-4
Address .....	12-21
Answering mode .....	12-21
Applicable profiles .....	11-3
Authentication Code .....	11-4
Bluetooth services .....	12-21
Connectivity .....	11-4

Delete paired devices .....	11-11
Device .....	11-5
Edit device name .....	12-21
Edit paired device name .....	11-11
Paired device .....	11-4
Paired Devices Icons .....	11-4
Print .....	10-10
Receive data .....	11-5
Search Devices .....	11-11
Secure mode .....	12-21
Send data .....	11-5
Visibility .....	12-21
<b>Bookmark</b> .....	<b>5-7</b>
Delete .....	5-15
Internet connection .....	5-7
Save .....	5-7
Send URL .....	5-14

## C

<b>Cache</b> .....	<b>5-2</b>
<b>Calculator</b> .....	<b>8-5</b>
<b>Calendar</b> .....	<b>8-3</b>
Delete schedule .....	8-12
Save schedule .....	8-3, 8-11
Schedule .....	8-3
View schedule .....	8-4, 8-12
<b>Call barring service</b> .....	<b>3-14, 3-18</b>
<b>Call forwarding service</b> .....	<b>3-14, 3-16</b>
<b>Call log</b> .....	<b>3-10</b>
Check .....	3-10
Delete .....	3-10

## Call time & cost

Check .....	3-11
Reset .....	3-11
Show charge after call .....	12-18

## Call waiting service

## Camera

Attach to message for sending still image .....	6-13
Attach to message for sending video .....	6-14
Capture video .....	6-11
Effects .....	6-12, 6-14
Frame shot .....	6-7
Multi shot .....	6-6
Night shot .....	6-7
Photo combination .....	6-7
Quick Play .....	6-8
Send a still image via Bluetooth® .....	6-13
Send video via Bluetooth® .....	6-14
Settings .....	12-9, 12-10
Shoot still image .....	6-3
Shortcut operations .....	6-5, 6-10
Timer .....	6-12, 6-14
Viewfinder .....	6-3, 6-9

## Cancel PIN lock

## Center Access Code

## Change mode

## Change PIN

## Change PIN2

## Charge Battery

## Charger Port

## Clear memory

## Conference call service

## Convert currency or unit

**Copy item** . . . . . 1-20, 2-23  
**Country number** . . . . . 12-17

## D

**Data Folder** . . . . . 10-2  
**Dictionary** . . . . . 8-11  
**Display** . . . . . 1-4  
    Backlight . . . . . 12-12  
    Brightness . . . . . 12-12  
    Clock/Calendar . . . . . 12-12  
    Dialing display . . . . . 12-13  
    Font size . . . . . 12-13  
    Main menu style . . . . . 12-12  
    Operator name . . . . . 12-13  
    Wallpaper . . . . . 2-6  
**Download Content Key** . . . . . 7-9, 7-10

## E

**Earphone call** . . . . . 12-20  
**Emergency call** . . . . . 3-7  
**Emergency Location Report** . . . . . 3-7  
**External Device Port** . . . . . 1-4  
**External light** . . . . . 1-17

## F

**File** . . . . . 10-3, 10-4  
    Copy . . . . . 10-6  
    Delete . . . . . 10-6  
    Details . . . . . 10-10  
    Icon . . . . . 10-2, 10-3

Lock/Unlock . . . . . 10-12  
Rename . . . . . 10-5  
Set images as Wallpaper etc. . . . . 10-12  
Set Ringtone . . . . . 10-12  
Sort . . . . . 10-11

**File Viewer** . . . . . 8-9  
    Shortcut operations . . . . . 8-10  
**Folder** . . . . . 10-4  
    Copy . . . . . 10-6  
    Create . . . . . 10-4  
    Delete . . . . . 10-6

## G

**Global Roaming** . . . . . 3-12

## H

**Hearing volume** . . . . . 3-5  
**History**  
    Delete . . . . . 5-9, 5-11  
    Internet connection . . . . . 5-3, 5-4  
    S! Addressbook Back-up . . . . . 11-12  
**Hold incoming call** . . . . . 3-5

## I

**Icon**  
    Attached file . . . . . 4-5  
    Call Log Record . . . . . 3-10  
    Data Folder . . . . . 10-2  
    Device . . . . . 11-4  
    Display . . . . . 1-4

File list . . . . . 10-3  
Message . . . . . 4-11  
Message list . . . . . 4-10  
Mode . . . . . 1-15  
Movie Window . . . . . 7-6  
Music Window . . . . . 7-4  
Schedule . . . . . 8-3  
Shooting mode (still image) . . . . . 6-4  
Shooting mode (video) . . . . . 6-9

**International Code** . . . . . 12-17

**Internet** . . . . . 5-2

**Internet page** . . . . . 5-2, 5-5  
    Font size . . . . . 5-9, 5-12

## K

**Key Lock** . . . . . 1-13

## L

**Language** . . . . . 12-13  
**Lock** . . . . . 9-3  
    Functional lock . . . . . 9-5  
    Key Lock . . . . . 1-13  
    Phone Lock . . . . . 9-3  
    PIN . . . . . 9-4  
    USIM Lock . . . . . 9-4

**Log**  
    Call log . . . . . 3-10

## M

<b>Mailbox</b> . . . . .	<b>4-13</b>	Action settings . . . . .	4-19	Save to drafts . . . . .	4-19, 4-22
Drafts . . . . .	4-13	Add new folder . . . . .	4-28	Send from Drafts . . . . .	4-25
Received message . . . . .	4-13	Change folder name . . . . .	4-17	Send Graphic templates . . . . .	4-8
Sent message . . . . .	4-13	Create . . . . .	4-4, 4-7	Sending options . . . . .	4-20, 4-22
Templates . . . . .	4-13	Create folder . . . . .	4-16	Send text templates . . . . .	4-8
Unsent message . . . . .	4-13	Custom mail address . . . . .	4-4	Send unsent messages . . . . .	4-25
<b>Make a call</b> . . . . .	<b>3-4</b>	Delete . . . . .	4-15, 4-24	Sent message icon . . . . .	4-11
Phonebook . . . . .	2-17	Delete folder . . . . .	4-28	Server mail . . . . .	4-27
<b>Make international calls</b> . . . . .	<b>3-11, 3-21</b>	Delete Graphic templates . . . . .	4-15	Server mail memory . . . . .	4-27
<b>Manner mode</b> . . . . .	<b>1-14</b>	Delete messages in server . . . . .	4-27	Set Secret . . . . .	4-28
<b>Media Player</b> . . . . .	<b>7-2</b>	Delete templates . . . . .	4-15	SI Mail . . . . .	4-2
Add to playlist . . . . .	7-8, 7-10	Details . . . . .	4-24	SMS . . . . .	4-2
Adjust Tone volume . . . . .	12-8	Draft message icon . . . . .	4-11	Sort . . . . .	4-25
Create playlist . . . . .	7-8	Feeling settings . . . . .	4-19	Templates . . . . .	4-5
Download . . . . .	7-3	Font size . . . . .	4-24	Unsent message icon . . . . .	4-11
Play music . . . . .	7-4	Forward . . . . .	4-12	View . . . . .	4-8, 4-10
Play playlist . . . . .	7-8	Forward messages in server . . . . .	4-27	View Attachment . . . . .	4-23
Play video . . . . .	7-7	Graphic mail . . . . .	4-6	<b>Missed call</b> . . . . .	<b>3-5</b>
Repeat mode . . . . .	12-8	Indicators for attached files . . . . .	4-5	<b>Mobile tracker</b> . . . . .	<b>9-6</b>
Settings . . . . .	12-8	Lock/Unlock . . . . .	4-14	<b>Mode settings</b> . . . . .	<b>1-15</b>
Video resolution . . . . .	7-11	Mail Server . . . . .	4-10	<b>Multi Selector</b> . . . . .	<b>iii</b>
<b>Memory Card</b> . . . . .	<b>10-7</b>	Memory status . . . . .	4-28	<b>Mute</b> . . . . .	<b>2-5, 3-20</b>
Initialize . . . . .	10-8	Message list view . . . . .	4-24, 12-3		
Insert/Remove . . . . .	10-8	Message notice . . . . .	12-3		
<b>Memory card backup</b> . . . . .	<b>11-7</b>	Move . . . . .	4-16		
<b>Memory Status</b> . . . . .	<b>10-2, 10-9</b>	Move SMS . . . . .	4-25		
<b>Menu Operations</b> . . . . .	<b>iii</b>	Received message icon . . . . .	4-11	<b>Network mode</b> . . . . .	<b>3-12</b>
<b>Message</b> . . . . .	<b>4-2</b>	Receive server mail . . . . .	4-27	<b>Network Password</b> . . . . .	<b>1-18</b>
3D Pictogram display . . . . .	4-19, 4-23, 4-24	Reply . . . . .	4-12, 4-23	Change . . . . .	3-19
3D Pictograms . . . . .	4-9, 12-3	Retrieve all mails . . . . .	4-27	<b>Notepad</b> . . . . .	<b>8-7</b>
		Save attachment . . . . .	4-16		
		Save Graphic as template . . . . .	4-19		
		Save templates . . . . .	4-27		

## N

## O

Offline mode . . . . . 1-14

## P

Password lock . . . . . 9-4

PC Site Browser . . . . . 5-4

Copy text . . . . . 5-10

Details . . . . . 5-11

Enter URL . . . . . 5-4

Font size . . . . . 12-12

Manufacture number . . . . . 12-7

PC screen . . . . . 5-12

Root certificates . . . . . 12-7

Script . . . . . 12-7

Search . . . . . 5-11

Send URL . . . . . 5-11

Phonebook . . . . . 2-13

Copy . . . . . 2-22

Create Message . . . . . 2-21

Default number . . . . . 2-23

Delete . . . . . 2-18

Edit . . . . . 2-23

Save . . . . . 2-15

Search . . . . . 2-17

Set Secret mode . . . . . 2-20

Phone Lock . . . . . 9-3

Phone Password . . . . . 1-18, 9-3

Picture browser . . . . . 10-3

PIN2 Code . . . . . 1-19

PIN Certification . . . . . 9-4

PIN Code . . . . . 1-19, 9-4

PIN lock . . . . . 9-4

Power On/Off . . . . . 1-11

Preferred network . . . . . 3-12

Print . . . . . 6-12

PUK Code . . . . . 1-19, 9-4

## R

Receive a call . . . . . 3-4

Record . . . . . 3-5

Reject incoming calls . . . . . 3-8

Edit black list . . . . . 3-21

Payphone . . . . . 3-9

Set reject number . . . . . 3-9

Side key . . . . . 12-14

Unavailable . . . . . 3-9

Unknown . . . . . 3-9

Withheld . . . . . 3-9

Reset settings . . . . . 9-7

Ringtone . . . . . 1-16

Ringtone reducer . . . . . 12-20

## S

S! Addressbook Back-up . . . . . 11-9

Sync log . . . . . 11-12

Sync mode . . . . . 11-9

Saved pictures . . . . . 5-7

Delete . . . . . 5-16

Rename . . . . . 5-16

Save . . . . . 5-7

View . . . . . 5-8

Secondary clock . . . . . 12-13

Secret data folder . . . . . 9-6

Secret mode . . . . . 9-5

Security Code . . . . . 1-2, 1-18

Select function from Main Menu . . . . . 2-3

Select function with Switch Bar . . . . . 2-3

Send DTMF . . . . . 3-21

Set default memory . . . . . 12-22

Shortcuts Key . . . . . 2-4

Show my number . . . . . 3-14, 3-19

Simple search . . . . . 2-18, 12-14

Slide show . . . . . 10-10

Softkey . . . . . ii

Software update . . . . . 13-5

Sounds &amp; Alerts . . . . . 2-5, 12-10, 12-11

Speaker phone call . . . . . 3-20

Speed dial . . . . . 3-6

SSL/TLS . . . . . 5-2

Stopwatch . . . . . 8-9

Symbols . . . . . 13-9

System sounds . . . . . 1-16

## T

Tasks . . . . . 8-7, 8-15

Delete . . . . . 8-16

Text entry . . . . . 2-7

Copy . . . . . 2-19

Cut . . . . . 2-19



Delete	2-12
Edit	2-12
Emoticon	2-10
Entry Mode	2-8
Line Break	2-10
Paste	2-19
Pictograms	2-10
Quick Address List	2-11
Symbol	2-10
Undo	2-20
<b>Time zone</b>	<b>12-13</b>

## U

<b>USB connection</b>	<b>11-7</b>
<b>User's Dictionary</b>	<b>2-12</b>
Add	2-12
Delete	2-20
<b>USIM Card</b>	<b>1-5</b>
Insert/remove	1-6
<b>USIM Lock</b>	<b>9-4</b>
<b>USIM Password</b>	<b>1-19, 9-4</b>

## V

<b>vFile</b>	<b>10-2, 10-12</b>
<b>Vibration</b>	<b>1-16, 2-6, 8-14</b>
<b>View Account details</b>	<b>1-12</b>
<b>Voice Call</b>	<b>3-4</b>
Adjust ringer volume	3-4
Adjust volume	3-5
Mute	3-20
Put a call on hold	3-5

Speaker phone call	3-20
Whisper	3-20
<b>Voice mail service</b>	<b>3-14</b>
<b>Voice recorder</b>	<b>8-8</b>
Play sound files	8-9
Protect/Unprotect sound files	8-17
Record settings	8-17
Record sound	8-8
Send sound files	8-17
<b>Volume</b>	<b>1-16</b>

## W

### Window

Calendar	8-3
Movie Window	7-6
Music Window	7-4
Phonebook	2-15
Standby Window	1-13
Still image viewer	6-3
Text Entry Window	2-8
Video Viewfinder	6-9
Voice recorder	8-8
<b>World Clock</b>	<b>8-7</b>

## Y

<b>Yahoo! Keitai</b>	<b>5-3</b>
Copy text	5-8
Details	5-9
Enter URL	5-3
Font size	12-12
Manufacture number	12-6

Refresh	5-8
Root certificates	12-6
Script	12-6
Search	5-8
Send URL	5-8

## Number

<b>3G/GSM</b>	<b>3-12, 12-17</b>
---------------	--------------------

## Objective Index

### Adjust volume

Hearing volume	3-5, 12-20
Media Player	12-8
Ringtone volume	3-4

### Backup

Memory Card	11-7
Phonebook	11-9

### Cancel/Unlock

Answering Machine	3-7
Bluetooth®	11-4
Call barring	3-18
Caller ID	3-19
Call forwarding	3-16
Call waiting	3-16
Manner mode	1-14
Message Lock	4-14
Offline mode	1-14
Phone Lock	9-3
PIN Lock	9-4
Secret mode	9-5
Voicemail	3-15

### Change

Mail address	4-4
Mode	1-15
Network Password	3-19
Phone Password	9-3
PIN	9-3
PIN2	9-3

### Copy

File/Folder	10-6
-------------	------

Items	1-20, 2-23
Message content	4-24
Phonebook	2-22
Text	2-19
Text in page	5-8, 5-10

### Delete/Clear

Call log	3-10
File/Folder	10-6
Memory	9-7
Messages	4-15, 4-24, 4-27
Notepad	8-15
Phonebook	2-18
Records (Answering Machine)	3-8
Schedule	8-12
Tasks	8-16
Text	2-12
User's Dictionary	12-14

### Edit

Account details	1-12
Phonebook	2-23
Schedule	8-12
Tasks	8-15
Text	2-12

### Initialize

Browser	5-10, 5-12
Memory Card	10-8

### Insert/Remove

Battery	1-8
Memory Card	10-8
USIM Card	1-6

### Make a call

Emergency call	3-7
International calls	3-11

Voice call	3-4
------------	-----

### Play

Media Player	7-4, 7-5
Records (Answering Machine)	3-8
Sound	5-9, 5-12
Voice recorder	8-9

### Protect/Lock

File	10-12
Functional Lock	9-5
Message	4-14

### Receive

Bluetooth®	11-5
Message	4-10, 4-27

### Reset

Account details	1-19
All Reset	9-7
Call time & cost	3-11
Reset settings	9-7

### Save

Mail address	4-4
Message	4-19, 4-27
Phonebook	2-13, 2-15
User's Dictionary	2-12

### Search

Bluetooth®-compatible device	11-4
Phonebook	2-17

### Send

Bluetooth®	11-5
File	10-10
Message	4-4, 4-7
Notepad	8-15
Tasks	8-16

URL	5-8, 5-11
<b>Set/Activate</b>	
Alarm	8-4
Answering Machine	3-7
Any key answer	12-14
Black list	3-8, 12-19
Bluetooth®	11-4
Call barring	3-18
Caller ID	3-19
Call forwarding	3-16
Call waiting	3-16
Camera & Video	12-9, 12-10
Date & Time	12-13
File	10-12
International Code	12-17
Key Lock	1-13
Manner mode	1-14
Media Player	12-8
Missed call notification	3-15
Mode	1-14
Offline mode	1-14
Operator	3-12
Phone Lock	9-3
Phone sounds	12-11
Secret mode	9-5
Side key	12-14
Simple search	12-14
Sounds & Vibration	2-5
Vibration	2-6
Voicemail	3-15
<b>View</b>	
Answering Machine	3-8
Calendar	8-3

Call log	3-10
Call time & cost	3-11
Captured Pictures	6-8
Cost after call	12-18
Data Folder	10-3
Data in Memory Card	10-9
Memory Status	4-28, 10-9
Message	4-9, 4-10, 4-23, 4-27
Owner Number (Account Detail)	1-12
Recorded Video	6-11
Schedule	8-4
Tasks	8-7

## Advanced Settings Index

Account Details	1-19	Standby Screen	2-19
Alarm	8-13	Tasks	8-15
Bluetooth® Settings	11-11	Text Entry	2-19
Bookmarks	5-14	User's Dictionary	2-20
Calendar	8-11	Using/Managing Messages	4-23
Call	3-20	Video Playback	7-10
Call Logs	3-21	Viewing Files	10-10
Capturing Still Images	6-12	Voice Recorder	8-17
Conference Call	3-22	World Clock	8-14
Currency/Unit Conversion	8-14	Yahoo! Keitai	5-8
File Viewer	8-17		
Folder Management	4-28		
Main Menu	2-19		
Managing Files/Folders	10-10		
Memory Status	10-13		
Music Playback	7-8		
Notepad	8-15		
Page Operations	5-13		
PC Site Browser	5-10		
Phonebook	2-20		
Playlist	7-12		
Received Messages	4-23		
Recording Videos	6-14		
S! Addressbook Back-up	11-12		
Saved pages	5-16		
Sending S! Mail	4-17		
Sending SMS	4-21		

## Warranty & Service

### Warranty

8305C purchase includes Warranty.

- Confirm shop name and date of purchase.
- Read through the contents of the Warranty and keep it in a safe place.
- The warranty period can be found in the Warranty.

SoftBank Mobile is not liable for damage to you or a third party from missed calls, etc. due to handset failure or malfunction, etc.

### Repair Requests

Before submitting handset for repair, consult the "Troubleshooting" (P.13-2) for a solution. If a problem persists, contact Customer Service (P.13-22) or the nearest SoftBank shop; be prepared to describe problem in detail.

- During the warranty period, repairs will be made under the terms and conditions described in the warranty.
- After the warranty period, repairs will be upon request; if said repairs can be made, you will be charged for them.

#### Note

- Handset files and settings may be lost or altered due to accidents or repairs. Keep a copy of important files, etc. like Phonebook entries. SoftBank Mobile is not liable for damage resulting from accidental loss or alteration of handset files (Phonebook, Data Folder, etc.) or settings.
- Disassembling or modifying this product may be a violation of the Radio Law. Note that SoftBank Mobile will not accept repair requests for disassembled or modified products.

## Customer Service

For SoftBank handset or service information, call General Information. For repairs, call Customer Assistance.

### SoftBank Mobile Customer Center

From a SoftBank handset, dial 157 for General Information, or  
113 for Customer Assistance, toll free

### SoftBank Mobile Global Call Center

From outside Japan, dial +81-3-5351-3491  
(Please take care to dial correctly. International charges will apply.)

Call these numbers toll free from landlines.

Subscription Areas	Contact	
Hokkaido, Aomori, Akita, Iwate, Yamagata, Miyagi, Fukushima, Niigata, Tokyo, Kanagawa, Chiba, Saitama, Ibaraki, Tochigi, Gunma, Yamanashi, Nagano, Toyama, Ishikawa, Fukui	General Information	☎ 0088-240-157
	Customer Assistance	☎ 0088-240-113
Aichi, Gifu, Mie, Shizuoka	General Information	☎ 0088-241-157
	Customer Assistance	☎ 0088-241-113
Osaka, Hyogo, Kyoto, Nara, Shiga, Wakayama	General Information	☎ 0088-242-157
	Customer Assistance	☎ 0088-242-113
Hiroshima, Okayama, Yamaguchi, Tottori, Shimane, Tokushima, Kagawa, Ehime, Kochi, Fukuoka, Saga, Nagasaki, Oita, Kumamoto, Miyazaki, Kagoshima, Okinawa	General Information	☎ 0088-250-157
	Customer Assistance	☎ 0088-250-113