

Handset Security	11-2
Operations Security	11-2
Information Security.....	11-3
Additional Functions	11-4

11

Handset Security



 
Operations Security

Function Lock

Restrict access to handset functions.

Auto	Lock when Display turns off or handset is closed
Once	Lock immediately; setting is canceled once handset is unlocked
At Power On	Lock when handset is turned on; Handset Code entry window opens

- 1 **Settings** **In Phone menu, Locks**

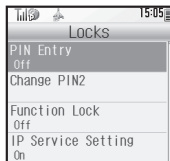

Locks Menu

- 2 **Function Lock**
- 3 **Select item** **Enter Handset Code**

Unlocking Temporarily

While handset is locked, enter Handset Code

When Function Lock is Active

- Press corresponding key to turn handset on/off, answer calls, place callers on hold, end calls, etc.

PIN Entry

Activate PIN Entry to require PIN entry each time handset is turned on.

- 1 **In Locks menu, PIN Entry** **Switch On/Off**
- 2 **On** **Enter PIN**

Secure Remote Lock

Lock a lost handset remotely via PC or another handset. Secure Remote Lock disables all operations except turning handset on, and activates IC Card Lock. For more about Secure Remote Lock, see SoftBank Mobile Website (P.15-22) or contact SoftBank Mobile Customer Center, General Information (P.15-39).



Advanced

- Changing PINs Setting Secure Remote Lock activation message to appear (P.11-4)

Information Security

Application Lock

Restrict access to these functions:

Phone Book

 
Calendar/Tasks

Yahoo! Keitai

Mail


Notepad

- 1 → **Settings** → → In Phone menu, **Locks** →



Locks Menu

 - 2 **Application Lock** →

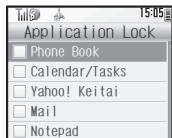

- 3 **Select item** → (✓)
 • For Phone Book, select **No Refer** or **Refer** and press .

- 4 → **Enter Handset Code**
 →

 
Temporary Access to Functions

- When accessing functions, enter Handset Code and press .

History Lock

Restrict access to Call Log and sent/received mail records.

- 1 In Locks menu, **History Lock** →



- 2 **Select item** → (✓)

- 3 → **Enter Handset Code**
 →

Temporary Access to Records

- When accessing records, enter Handset Code and press .

Show Secret Data

Activate Show Secret Data to access Secret entries.

- 1 In Locks menu, **Show Secret Data** →

- 2 **On** → → **Enter Handset Code** →

When Show Secret Data is Active

- Predictive is not available for text entry.



PIN Entry

Changing PINs

Start Here [] ➔ **Settings** [] ➔ **In Phone menu, Locks** [] ➔ **See below**

Changing PIN

PIN Entry [] ➔ **Change PIN** [] ➔ **Enter current PIN** [] ➔ **Enter new PIN** [] ➔ **Re-enter new PIN** []

- Activate PIN Entry first.

Changing PIN2

Change PIN2 [] ➔ **Enter current PIN2** [] ➔ **Enter new PIN2** [] ➔ **Re-enter new PIN2** []

Secure Remote Lock

Setting Secure Remote Lock activation message to appear

Start Here [] ➔ **Settings** [] ➔ **In Phone menu, Locks** [] ➔ **Set Lock Message** [] ➔ **See below**

Saving Message

Message [] ➔ **Enter Handset Code** [] ➔ **Enter message** [] ➔ **Yes** []

Checking Message

Check Message []

