

Getting Started

 
 


Parts & Functions	1-2
Handset	1-2
Display Indicators	1-3
Touch Panel	1-5
Tap	1-5
Scroll	1-5
Hold	1-5
Drag & Drop	1-5
Swipe	1-5
Touch Panel Operations	1-6
Motion Control	1-7
Motion Control Operations	1-7
USIM Card	1-7
Before Using USIM Card	1-7
Inserting & Removing USIM Card	1-8
Battery & Charger	1-9
Before Using Battery or Charger	1-9
Inserting & Removing Battery	1-10
Charge Battery	1-11
In-Car Charger (Optional)	1-12
Power On/Off	1-13
Power On	1-13
Power Off	1-14
Account Details	1-14
Viewing Account Details	1-14
Editing Account Details	1-15
Handling Precautions (Touch Panel & Key Lock)	1-15
Standby Window	1-16





Minding Mobile Manners	1-16
Offline Mode	1-16
Manner Mode	1-17
Changing Mode Settings	1-17
Default Mode Settings	1-17
Security Codes	1-21
Phone Password	1-21
Center Access Code	1-21
Network Password	1-21
PIN Code	1-21
Password for USIM Lock	1-22

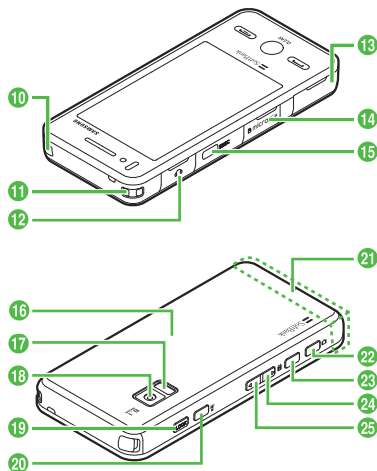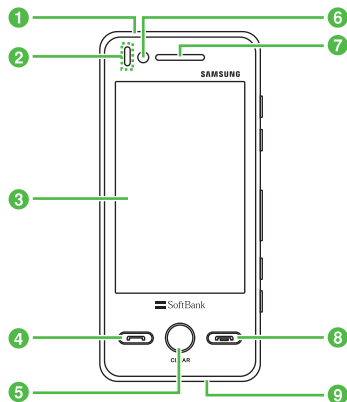

Parts & Functions

Handset



- 1 External Light
Flashes for Missed Call or Incoming Call/ Mail; illuminates red while charging.
- 2 Optical Sensor
Measures ambient light for Display brightness; in-call object proximity.
- 3 Display
- 4 Start Key
Make and receive Voice Call.
- 5 Clear/Back Key
Return to previous operation step.
- 6 Internal Camera
Use for Facial recognition or Video Call.
- 7 Earpiece/Speaker
- 8 Power/End Key
Turn power on/off or end operations.
- 9 Microphone
- 10 External Antenna
Use for Digital TV reception.
- 11 Strap Eyelet
- 12 Earphone Microphone Port
Connect optional Earphone Conversion Cable here.
- 13 Charger/External Device Port
Connect Charger, PC, etc. here.

- 14 Memory Card Port
microSD™ Memory Card connect port.
- 15 Infrared Port
Use for infrared data transmissions.
- 16 Battery Cover
Remove to access Battery, or USIM/
Memory Card.
- 17 Mobile Light
Turn this on when capturing images.
- 18 External Camera
Capture images or send video during
Video Call.
- 19  Hold Key
Lock or unlock Touch Panel and buttons
of handset.
- 20  Manner Key
Press this for 1 + seconds to activate or
cancel Manner mode.
- 21 Internal Antenna
- 22  Camera Key
Press this for 2 + seconds to activate Camera.
Release shutter to capture images.
- 23  TV Key
Press this for 1 + seconds to activate TV.

 
- 24  Side Key
Lower ringer, Media Player, or TV
volume.
- 25  Side Key
Raise ringer, Media Player, or TV volume.









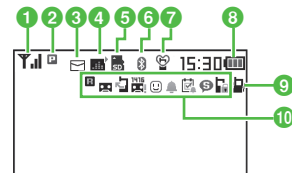







● Internal Antenna & Optical Sensor






















Handset transmits/receives signals via Internal Antenna. There is no external antenna. Voice quality may vary by where/how handset is used. Do not cover or place stickers, etc. over the area containing Internal Antenna or Optical Sensor.


- Keep Optical Sensor clear of obstructions; may cause malfunctions.
- If using Protective Film, keep Optical Sensor area free of obstructions; may cause malfunction.

Display Indicators



- 1  Signal Strength (More bars  indicate stronger signal)
 -  Out-of-Range (**Language** set to Japanese)
 -  Out-of-Range (**Language** set to **English** or **한국어**)
 -  Offline Mode
- 2  3G Network Connected
 -  3G Network Connected (Ready)
 -  3G Network Connected (In Use)
 -  GSM Network Connected
 -  GSM Network Connected (Ready)
 -  GSM Network Connected (In Use)
 -  SSL Connected
 -  Packet Communication Unavailable
 -  Voice Call in Progress (flashes while making or receiving calls)
 -  Video Call in Progress (flashes while making or receiving calls)
 -  My status Online

- 3  New Message
-  Sending Mail
-  Receiving Mail
-  Activate Delivery Report
-  Memory Full (S! Mail/SMS)
-  Downloading Content Key
- 4  Music Playback
-  Music Paused
-  Recording TV program
-  Reservation Set
-  S! Appli
-  S! Appli Paused
-  S! Appli Activation Request
- 5  Memory Card Inserted
-  Read from/write on Memory Card
-  Software Update Required
-  PC Site Browser Connected
-  Unread S! Quick News
-  Unread S! Information Channels
-  All Keys Locked
- 6  Bluetooth® Activated
-  Bluetooth® Transmission
-  Bluetooth® Packet Data in Transmission
-  Headset Connected with Bluetooth® Activated
-  USB Connected
-  (Yellow) USB Connection
-  (Gray) Infrared Data Transmission Activated
-  (Red) Infrared Data in Transmission
-  Data Synchronized
- 7  Manner Mode
-  Drive Mode
-  Meeting Mode
-  Activity Mode
- 8  Battery Strong
-  Battery Moderate
-  Battery Low
-  Battery Weak (Charge Now)
-  (Flashing in Red) Battery Empty
- 9  Ringer and Vibration Activated for Incoming Call
-  Only Ringer Activated for Incoming Call
-  Only Vibration Activated for Incoming Call
-  Ringer and Vibration are Muted for Incoming Call
- 10  Roaming Activated
-  Answering Machine Activated
-  Unheard Answering Machine Message
-  Voicemail/Call Forwarding (**No reply**) Activated
-  Activate Voicemail
-  Unheard Voicemail
-  S! Friend's Status Request
-  Unread S! Friend's Status Notification
-  Alarm Set
-  Schedule Set
-  Schedule with Alarm Set
-  Tasks Set
-  Tasks with Alarm Set
-  Secret Mode Set
-  Password Locked

 
● When  (Red) appears, only Packet Communications and Outgoing S! Mail are available; Calls, Incoming S! Mail, and SMS Service are all disabled.

Touch Panel

Use Stylus to tap or scroll handset Touch Panel items. Some functions support rotating handset vertically or horizontally to change Display orientation. Using Touch Panel and conventions used in this guide are described here.

Tap


Lightly touch target item on Display. Select items to open or execute functions.

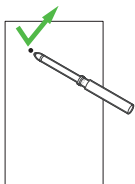

- In this guide, some tap operation procedures are abbreviated with arrows (➔ P.ii).

Hold

 
Touch and hold a Display item for 1 + seconds to activate/execute that item.

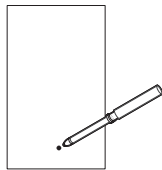

- In this guide, this operation appears as "touch and hold".

Swipe

 
Place Stylus on Touch Panel and swipe it in the direction you want to move. Quickly open next/previous window/page.

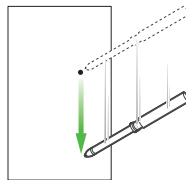

- In this guide, this operation appears as "Swipe".

Scroll

 
Gently slide Stylus across Touch Panel to scroll menus or Internet windows.

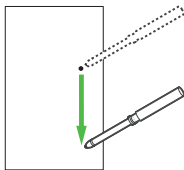

- In this guide, this operation appears as "scroll".

Drag & Drop

 Touch and hold a Display item, move it to the target location (drag) and release it (drop).

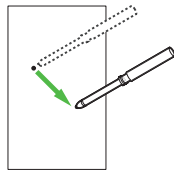

- In this guide, this operation appears as "drag" or "drop".

Note

- Use bundled Stylus with Touch Panel. Finger use leaves fingerprints. Pens may affect Panel sensitivity. Do not apply force to Touch Panel; press gently and carefully.
- Tapping multiple functions simultaneously may cancel operations.
- Touch sensor may not function properly in high humidity or if handset is wet.
- Using protective film, etc. on Touch Panel may inhibit Sensor function.

 
Touch Panel Operations

Use Touch Panel to perform these basic operations.

- Tap / to move to the previous or next item or image.




- Scroll down for more menu items, tabs or page area out of view in Mail, PC Site Browser, or File Viewer. Alternatively, when entering text or viewing messages or Internet pages, press / to scroll.

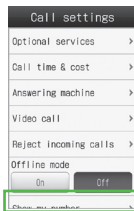


Content Beyond Display View

 - Tap pulldown menu () for menu items.

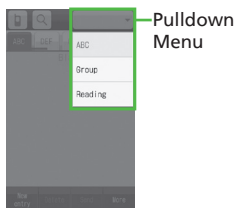

 - Tap **Mark all** to mark all item. Tap **Unmark all** to unmark all items.

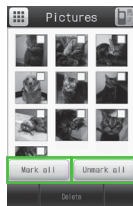

The functions below support Display rotation. In this guide, instructions are for Portrait view operations.

- Image Viewer (P.12-4).
- PC Site Browser (P.5-4).
- Digital TV (P.6-1).
- Camera & Imaging (P.7-1).
- Media Player (P.8-4).
- File Viewer (P.10-11).

Advanced

Settings

- Set Auto Lock (P.14-3)
- Set Touch Panel tone volume level and vibration level for operating Touch Panel (P.14-3)
- Calibrate Touch Panel (P.14-3)

Motion Control

Shake or tilt handset to perform specific functions.

Motion Control Operations

Basic Motion Control operations and the conventions used in this guide are described here.

Shake

Shake handset right and left. Use to play games



- Use to play Dice (➔P.9-4).

Tilt

Tilt handset right and left.

 


- Use to scroll Photo Album images (➔P.12-7).

USIM Card

Before Using USIM Card

Universal Subscriber Identity Module (USIM) Card is an IC card containing customer and authentication information, including handset number and limited storage for Phonebook entries and SMS. Install USIM Card to use handset; turn handset power off to insert/remove USIM Card.



USIM Card

Insert USIM Card into another compatible handset to access SMS and Phonebook entries saved on USIM Card. Note the following precautions regarding USIM Card usage and care (see USIM Card User Guide for details):

- Avoid using excessive force when inserting/removing USIM Card.
- SoftBank is not liable for damage resulting from inserting USIM Card into IC card readers or other third party devices.
- Always keep USIM Card IC chip clean.
- Clean USIM Card IC chip with a soft, dry cloth.
- Do not attach labels to USIM Card; malfunction may result.

Note

 
- USIM Card is the property of SoftBank.
- If USIM Card is lost or damaged, you will be charged for reissuing it.
- Return USIM Card to SoftBank upon termination of subscription.
- Returned USIM Cards are recycled.
- Returned USIM Cards are recycled.
- USIM Card specifications may change without prior notice.
- If USIM Card or handset with USIM Card inserted is lost or stolen in Japan or abroad, immediately contact Customer Service (☎P.15-26) to suspend service.
- Handset/USIM Card repairs, replacement, or upgrades may deactivate Chaku-Uta[®], Chaku-Uta Full[®] or video files on handset/ Memory Card.
- Back-up USIM Card files. SoftBank is not liable for lost files.

Inserting & Removing USIM Card


Always turn power off before opening handset to remove battery, or insert/remove USIM Card.

Inserting

- 1 Remove battery (☎P.1-11)
- 2 With IC chip down, insert USIM Card into card slot as shown in the illustration

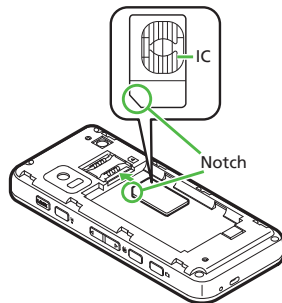


 - 3 Push in USIM Card until it stops and locks

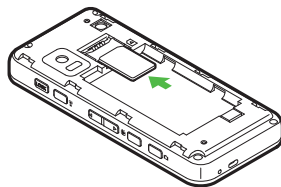

Removing

 - 1 Remove battery (☎P.1-11)
- 2 Press down on USIM Card and gently slide it out

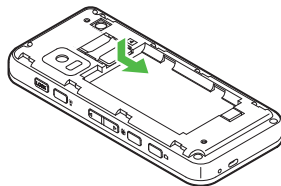

Note

- Inserting USIM Card with excessive force may damage it or handset.
- Do not misplace a removed USIM Card.
- To prevent damaging it, avoid touching the IC chip when inserting or removing USIM Card. Do not touch battery contacts.

Battery & Charger

Before Using Battery or Charger

Charge battery before first use of handset or after long periods of disuse.

Battery

- Long periods of disuse may affect battery's ability to hold a full charge. Charge battery at least once every six months while not in use. Otherwise, battery may become unusable.
- Depending on usage, bulges may appear near end of battery life; this does not affect safety.
- Handset uses a lithium-ion battery; charge battery in anytime without damaging its ability to hold a charge.
- Do not charge battery under the following conditions:
 - In ambient temperatures beyond 5°C - 40°C
 - In high levels of humidity, vibration or dust (May cause malfunction)
 - Near a radio receiver (May cause feedback)
- Handset or Charger may warm while charging. This is normal, however, should they become very hot to touch, stop charging and contact SoftBank Mobile Customer Center, General Information (☎P.15-26).

- Battery is a consumable; replace it if operating time shortens noticeably.

Note

- Use specified Charger only.
- Battery must be inside handset to charge.
- When not in use, unplug Charger from outlet.

Battery Life

Battery time/life may be reduced by any of the following:

- Environmental Factors
 - Storing/using handset beyond 5°C - 40°C
 - Using handset in poor signal conditions
 - Debris on handset, battery or Charger Port
- Operational Factors
 - Camera use
 - Media Player use
 - Heavy use (e.g., for using messaging)
 - Bluetooth® transmissions
 - Digital TV use
- Settings
 - Using Slide show
 - Increasing **Brightness** or **Backlight time**
 - Using Media Player with Backlight set to **Always On**

Battery Disposal

Do not dispose of exhausted batteries with ordinary refuse. Tape over battery terminals before disposal or take to a SoftBank shop. Follow any and all local regulations regarding battery disposal. Lithium-ion batteries are recyclable.

 
When Battery Runs Out

When battery is weak, a warning appears and handset beeps. Charge or replace battery; otherwise handset will automatically turn off.


Inserting & Removing Battery

Inserting


- 1 Press and slide Battery Cover as shown

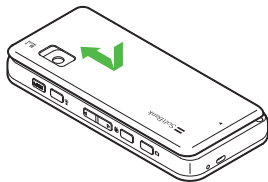


- 2 Remove Battery Cover

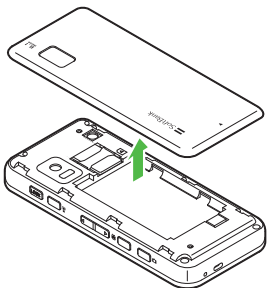 

- 3 Fit battery into handset as shown

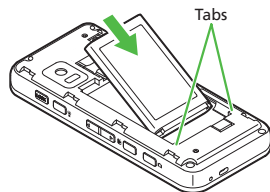 

- 4 Replace Battery Cover

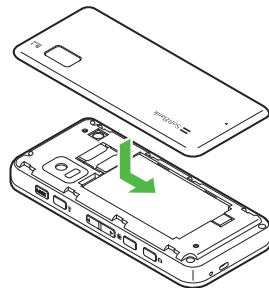 


Note

- Gently insert battery to avoid damaging handset tabs.
- Without cover, battery may fall out. Attach Battery Cover before use.
- Strong impacts may damage Battery Cover.


Removing

Always turn handset off before removing battery. Never remove battery while Charger is connected.

  
1 Press and slide Battery Cover as shown

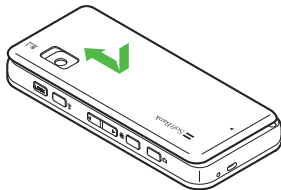



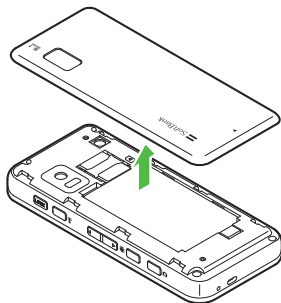



2 Remove Battery Cover

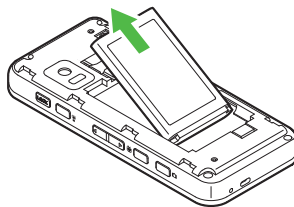 

3 Lift battery up and remove as shown

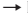

Charge Battery

 
- If handset is on while Charger is connected, battery indicator shows charge level, charging as follows:  →  →  →  → .  flashes when battery is fully charged. If handset is off, **Charging...** appears while charging and when battery is charged, **Battery full** appears. External Light illuminates in red while charging.
- An empty battery requires 155 minutes (approx.) to charge with power off. Charging time may vary by ambient temperature.

AC Charger

- 1 Open Port Cover; with label down, insert Charger Connector into External Device Port

Note

- Make sure Charger Connector is label side down before inserting it.

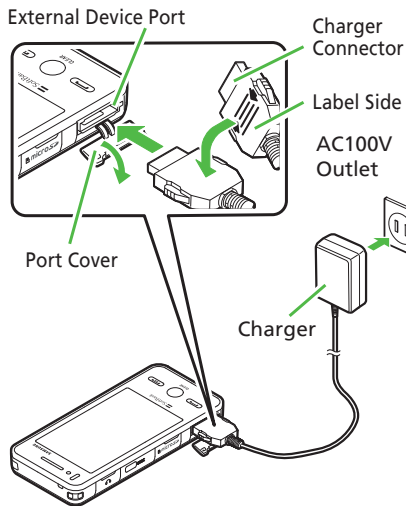

- 2 Plug AC Charger into an AC 100V outlet
- 3 When battery is charged, disconnect handset, close Port Cover, and unplug AC Charger

USB Charge

Connect handset to PC via USB Cable to charge battery.

- 1 Open Port Cover; with label down, insert USB Cable Connector into External Device Port

Note

- Make sure Charger Connector is label side down before inserting it.

 
- 2 Insert USB Plug into PC USB port
- 3 When battery is charged, disconnect handset, close Port Cover, and remove USB Plug
 - USB charging takes longer; charging time varies by PC. A weak battery may not charge via USB.

In-Car Charger (Optional)


- 1 Open Port Cover; with label down, insert Charger Connector into External Device Port

Note

- Make sure Charger Connector is label side down before inserting it.

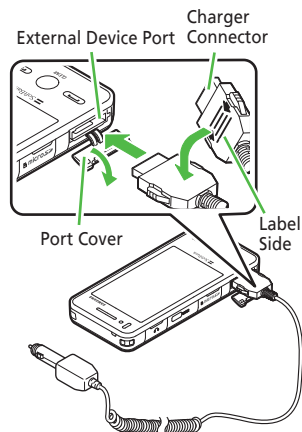


 2 Plug InCar Charger into an Cigarette socket

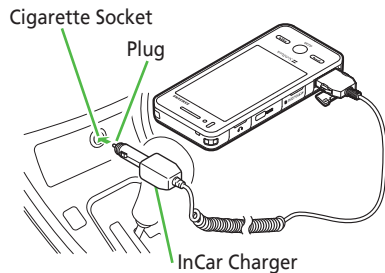

3 Start engine

 4 When battery is charged, disconnect handset, close Port Cover, and unplug InCar Charger

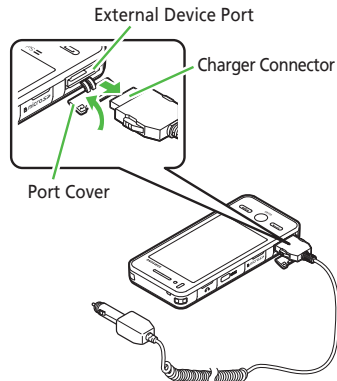

- If using InCar Charger, operations see the InCar Charger manual. To charge in vehicles, use in-car holder to lock the phone.

Note

- Avoid charging handset in extreme heat (Inside vehicles, etc.).
- InCar Charger only for vehicles with negative ground (12V/24V vehicles).

Power On/Off

Power On

1 Press until Display illuminates



Standby Window


- To confirm handset phone number, tap Phone → **Account details**. Your phone number appears in Account details. Edit or use contents (☎P.1-14).
- When handset is left open without operations, Display automatically shuts down to conserve power (☎P.14-5). In addition, by default, Key Lock is automatically activated when Display shuts down (☎P.1-15).
- The first time Messaging, Y! Keitai, etc. is tapped or a function requiring a network connection is activated, **Retrieve NW info** confirmation appears. Tap **Yes** and follow onscreen instructions.
 - **Retrieve NW info** confirmation appears after replacing USIM Card or executing **All reset**.
 - Retrieving Network Info sets date and time. Network Services (Messaging, Yahoo! Keitai, and S! Friend's Status) are available.
 - Retrieve Network Info manually (☎P.14-26).
 - This guide describes operations with date and time set unless noted otherwise.

Power Off

1 Press until Display goes dark

- SoftBank logo appears and handset powers off.

Note

 
- For proper shut down, be sure to press  until Display goes dark.

Account Details

Save your name, E-mail address, blood type, and other information as Account Details.

Viewing Account Details

1 Tap Menu → **Phonebook** → **Account details**

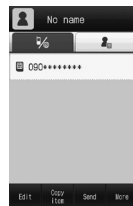

- By default, only phone number is saved in Account details.
- Alternatively, in Standby, tap Phone → **Account details**

Editing Account Details

Example: save name, phone number, E-mail address

- See "Adding Information to Phonebook Entry" (➔P.2-21) to save other information.



- 1 Tap Menu → *Phonebook* → *Account details* → Tap Edit
- 2 Tap Name field
- 3 *Last name, First name, Reading last name or Reading first name*
→ Enter last name/first name/
reading → Tap OK
- 4 Tap Phone number 2 field →
Enter number → Tap OK

- 5 Tap E-mail address field →
Enter E-mail address → *Type*
→ *Private/Home/Work/Internet*
→ Tap OK

6 Tap Save

- See "Text Entry" (➔P.2-7) to enter text.
- By default, only contracted phone number is saved in the list of phone numbers.

Handling Precautions (Touch Panel & Key Lock)


 
Note these precautions when handling handset.

- Activate Key Lock before putting handset in a pocket.
- When carrying AC Charger, retract plug blades. Do not pull/twist power cord; doing so may damage it.

Use Key Lock to prevent accidental Touch Panel or key presses when carrying handset in a pocket or bag.

1 LOCK

- Key Lock is activated.

- Key Lock can be activated while operating functions. However, some functions may not allow Key Lock during operation.
- Key Lock is activated during a call. To use handset during a call, cancel Key Lock.
- By default, when handset is left idle, Display shuts down and Key Lock is automatically activated. To cancel automatic Key Lock activation, set **Auto lock to Off** (➔P.11-4).
- To cancel key Lock, press  for Key Lock guidance, then press .

Standby Window

Access handset applications via Shortcut Keys, Widgets or Toolbar (➔P.2-2). Set images saved in Data Folder as Wallpaper.

Minding Mobile Manners

Please take care not to disturb others when using handset.

- Turn your handset off in theaters, museums, and other places where silence is the norm.
- Keep your handset off aboard airplanes, inside hospitals, or in other places where handset use is prohibited.
- Refrain from using your handset in quiet places such as restaurants, hotel lobbies, or elevators.
- Observe announcements or posted instructions regarding handset use aboard trains, etc.
- Refrain from handset use that interrupts the flow of pedestrian or vehicle traffic.

 
Handset offers two manner-related modes.

- **Offline mode**
Temporarily suspends all handset transmissions. Other functions may be used.
- **Manner mode**
Mute handset sounds and activate Vibration for all alerts, tones, and alarms. Use Manner Key to activate or cancel Manner mode. In addition to Manner, handset features Normal, Drive, Meeting and Outdoor as the set ringtone or operation sound.

- Activating Offline mode or Manner mode mutes ringer. Alternatively, set Ringtone volume or Vibration (➔P.14-3).

Offline Mode

- 1 Tap Menu → *Settings* → *Call settings* → Under *Offline mode*, *On or Off*

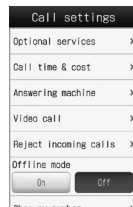



- Power off handset in Offline mode to Power on handset in Offline mode.

Manner Mode

Cancel settings for Manner mode from current setting mode with easy operations.

1 (1 + seconds)

- When Manner mode is active,  appears.
- Even if Manner mode is active, shutter click sounds for Camera.
- Press  for 1+ seconds to cancel Manner mode. Canceling Manner mode, returns handset to mode set before Manner was activated.






Changing Mode Settings

Handset features five modes, including Manner.

1

2 *Normal, Manner, Drive, Meeting, or Outdoor*

Select mode by usage; edit Normal mode or Manner mode settings as required (P.1-17).

Mode	Description
 Normal Mode*	All Sounds & Alerts settings apply
 Manner Mode	Mutes handset system sounds
 Drive Mode	Mutes ringer; plays Driving Message and activates Answering Machine for calls
 Meeting Mode	Mutes Ringtones & System sound
 Outdoor Mode	Maximizes tone volume

* Normal mode indicator does not appear in Standby.

Default Mode Settings

Default volume and ringtone settings vary by mode. Change incoming transmission response by mode. Available items vary by mode. See defaults below (P.14-6).

Item \ Mode	Normal	Manner	Drive	Meeting	Outdoor
Volume					
Voice call	Level 3	N/A	N/A	Level 0	Level 5
Video call	Level 3	N/A	N/A	Level 0	Level 5
Message	Level 3	N/A	N/A	Level 0	Level 5
S! Friend's Status	Level 3	N/A	N/A	Level 0	Level 5
Missed call notif.	Level 3	N/A	N/A	Level 0	Level 5
S! Quick News	Level 0	N/A	N/A	Level 0	Level 0
Delivery report	Level 3	N/A	N/A	Level 0	Level 5
System sounds	Level 3	N/A	N/A	Level 0	Level 5
Ringtone (Upper: Ringtone, Lower: Duration)					
Voice call	Young hopefuls.mp4	N/A	N/A	Young hopefuls.mp4	Young hopefuls.mp4
Video call	Samsung Tune.mp4	N/A	N/A	Samsung Tune.mp4	Samsung Tune.mp4
Message	A Toy Box.mp4 5 seconds	N/A	N/A	A Toy Box.mp4 5 seconds	A Toy Box.mp4 5 seconds
S! Friend's Status	A Toy Box.mp4 5 seconds	N/A	N/A	A Toy Box.mp4 5 seconds	A Toy Box.mp4 5 seconds
Missed call notif.	A Toy Box.mp4 5 seconds	N/A	N/A	A Toy Box.mp4 5 seconds	A Toy Box.mp4 5 seconds
S! Quick News	A Toy Box.mp4 5 seconds	N/A	N/A	A Toy Box.mp4 5 seconds	A Toy Box.mp4 5 seconds
Delivery report	A Toy Box.mp4 5 seconds	N/A	N/A	A Toy Box.mp4 5 seconds	A Toy Box.mp4 5 seconds

Item \ Mode	Normal	Manner	Drive	Meeting	Outdoor
Vibration					
Voice call	Off	Pattern 1	N/A	Off	Off
Video call	Off	Pattern 1	N/A	Off	Off
Message	Off	Pattern 1	N/A	Off	Off
S! Friend's Status	Off	Pattern 1	N/A	Off	Off
Missed call notif.	Off	Pattern 1	N/A	Off	Off
S! Quick News	Off	Off	N/A	Off	Off
Delivery report	Off	Pattern 1	N/A	Off	Off
System sounds	Popup box alerts/Call end tone/Alerts on call	Alerts on call	N/A	Alerts on call	Popup box alerts/Call end tone/Alerts on call
Incoming light					
Voice call	Green	Green	Green	Green	Green
Video call	Green	Green	Green	Green	Green
Message	Green	Green	Green	Green	Green
S! Friend's Status	Green	Green	Green	Green	Green
Missed call notif.	Green	Green	Green	Green	Green
S! Quick News	Off	Off	Off	Off	Off
Alarms	Green	Green	Green	Green	Green
Delivery report	Green	Green	Green	Green	Green

Item \ Mode	Normal	Manner	Drive	Meeting	Outdoor
Notification light					
Missed call	Blue	Blue	Blue	Blue	Blue
Message	Green	Green	Green	Green	Green
Answering machine	White	White	White	White	White
S! Friend's Status	Light Blue	Light Blue	Light Blue	Light Blue	Light Blue
Missed call notif.	Blue	Blue	Blue	Blue	Blue
Missed alarm	Pink	Pink	Pink	Pink	Pink
Delivery report	Green	Green	Green	Green	Green
Answering machine	Off	On	N/A*	Off	Off

* Answering machine activates automatically in Drive mode and cannot be disabled.

Security Codes

Phone Password, Center Access Code and Network Password are required to use handset.

Phone Password

The 4-digit number (9999 by default) is required to operate/change some handset functions.

- Entered Phone Password digits are represented with *.
- If incorrect, an error message appears. Try again.
- Phone Password can be changed on handset (☎P.11-3).

Center Access Code

4-digit number specified at subscription; required to change service subscriptions or optional services to operate handset from landlines.

Network Password

4-digit number specified at subscription, required to restrict handset services. Entering incorrect Network Password 3 consecutive times locks Call Barring settings. To resolve, Network Password and Center Access Code must be changed. For details, contact SoftBank Mobile Customer Center, General Information (☎P.15-26).

- Network Password can be changed on handset (☎P.3-21).

Note

- Write down Phone Password, Center Access Code, and Network Password. If you lose a code, contact Customer Service (☎P.15-26).
- Do not reveal Phone Password, Center Access Code, or Network Password to others. SoftBank is not liable for damage caused by misuse of these codes by others.

PIN Code

USIM Card features 2 security codes: PIN and PIN2.

PIN Code

Use PIN (4- to 8-digit) to prevent unauthorized use of handset by others.

- Modify PIN (☎P.11-3).
- When PIN Lock is activated, PIN entry is required each time handset is turned on or whenever USIM Card is re-inserted (☎P.11-4).

PIN2 Code

PIN2 (4- to 8-digit) is required for resetting *Call time & cost* or editing *Set max cost limit*, etc.

- Modify PIN2 (☎P.11-3).

Canceling PIN Lock (PUK/PUK2 Code)

Incorrectly entering PIN or PIN2 three consecutive times activates PIN Lock and limits handset function access. Enter PUK (PIN Unlocking Key) Code to cancel PIN Lock.

For more information, contact SoftBank Mobile Customer Center, General Information (☎P.15-26).

Note

- Entering PUK or PUK2 incorrectly ten consecutive times locks USIM Card and deactivates handset. Take a note of PUK and PUK2.
- A locked USIM Card cannot be unlocked. Contact SoftBank Mobile Customer Center, General Information (☎P.15-26).

Password for USIM Lock

USIM Password is dedicated to USIM Card authentication. If USIM Password matches, another USIM Card can be used in handset. Change USIM Password each time **USIM lock** is set to **On**.