

Media Player



Using Media Player	8-2
Downloading Media Files	8-3
Playing Music	8-4
Media Player Music Window.....	8-4
Playing Music	8-5
Playing Movie	8-6
Media Player Movie Window	8-6
Playing Movie.....	8-7
Using Playlist	8-8
Creating Playlist	8-8
Playing Playlist	8-8
Streaming	8-9
Streaming from Page Link	8-9
Entering URL	8-9
Accessing from Bookmark.....	8-9
Accessing from History.....	8-9
Advanced Settings	8-10
Music Playback.....	8-10
Movie Playback	8-11
Streaming.....	8-12

Using Media Player

Music player is equipped with this handset.

Download music or movie from Yahoo! Keitai and create your own playlists.

In this chapter, usage of media player is described.

Playing Media Files



Play music or movie via media player (➡P.8-5, P.8-7).
Select a music or movie file from folders or playlists.

Downloading Media Files



Access Yahoo! Keitai and download music or movie.
Download movie content or play it in Streaming
(➡P.8-3).

Player	File (Extension)
Music	MPEG4 Audio (mp4, m4a, or 3gp (sound only)), SoftBank Music Contents (smc), Windows Media Audio(wma)
Movie	MPEG4 (mp4, 3gp), H.263, H.264, Windows Media Video (wmv)

●To play a music file in a format other than above, select it from **Ring songs · tones**. Even compatible files must be saved in **Ring songs · tones** to play.

Note

Movie files exceeding 640 x 480 (mp4 or 3gp) or 320 x 240 (wmv) in resolution cannot be played.

Creating Playlists



Add your favorite music or movie to a playlist and create your own music or movie album (➡P.8-8).

Downloading Media Files

Access Yahoo! Keitai to download music or movie and copy them to handset.

Downloading Music & Movie

Access Yahoo! Keitai and download music or movie.

1 Tap Menu → *Media Player*

2 Download music or movie

■ To download music

Music → *All music* → *Download music* or *Music search*

- Select *Music search* to access Music search and search by genre or artist name.

■ To download movie

Movie → *All movies* → *Download movies*

Note

- Downloading music or movie may incur high Packet Communication fees since they have large data size.

Saving WMA/WMV Media Files from Handset to Memory Card

1 Insert Memory Card into handset

- Tap Menu → *Data Folder* →  to confirm folders are created.

2 Connect handset to a PC via USB

3 Tap Menu → *Settings* → *Connectivity* → *USB mode* → *MTP synch mode* → *Yes*

4 Enter Phone Password → Tap OK

5 Save PC WMA/WMV Files to the specified Memory Card Folder

6 While connecting, tap Exit

7 Remove USB cable

- Receiving calls or messages is not available in the MTP synch mode.
- Save files to the following folders by type:
WMA file : WMAudio
WMV file : WMVideo

Saving other Media Files to Phone or Memory Card

To convert music or movie file formats, software is necessary.

- SoftBank does not guarantee proper operation with any specific software.
- For software specifications or operations, please check for websites of software companies.

1 Insert Memory Card into handset

- Follow instruction (☎P.12-11).

- Save files to the following folders by type:

Music file: PRIVATE/MYFOLDER/My Items/Music
PRIVATE/MYFOLDER/My Items/Sounds & Ringtones

Movie file: PRIVATE/MYFOLDER/My Items/Movie

- If you copy WMA/WMV music or movie directly to Memory Card, you may not able to play them. Make sure to save them to Memory Card through the MTP synch mode (☎P.8-3).
- After saving files, insert Memory Card into handset and load saved files to play the files.


Playing Music

Folder structure is as follows.

Folder	Description
Last played/Now playing	Last played or currently played file
All music	Up to 9999 Music files
Playlists	View playable file on Music in created folders
Artists	All Music files by Artist
Albums	All Music files by Album
Genres	All Music files by Genre
Folder	All files in Ring songs·tones and Music folders of Data Folder and Memory Card, as well as WMAudio in Memory Card
Recent music	100 recently played files (Most recent first)
Most played music	100 most frequently played files (Most frequent first)

•Files in Memory Card may take longer to load.

Media Player Music Window

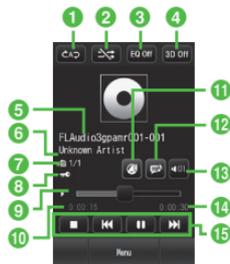

Music Playback

- Repeat mode
Tap to toggle settings.
 → : Off
 ↺ : One
 ↻ : Repeat all
- Setting Shuffle
Tap to toggle settings.
 ↺ : Shuffle On
 ↻ : Shuffle Off
- Sound effect
Tap to toggle settings.
This is not available when using Bluetooth®-compatible stereo headphone.

- 3D sound settings
Tap to toggle settings.
This is not available when using Bluetooth®-compatible stereo headphone.
- Title (File name when title is unknown)
- Artist's name
- File number/Total number of files
- Copy protection
- Progress bar
Drag or tap to specify start point.
- Elapsed playing time
- Web link provided
Tap to open related Website.
- Lyrics available
Tap to show lyrics.
- Volume level
Tap to adjust volume.
- Total playing time

15 Operation keys

 : Stop

 : Play

 : Pause

 : Cue/Previous song

• Tap within 3 seconds after playback starts to play previous song. Tap after 3 seconds to play beginning of current song.

Touch and hold  : Rewind

 : Next song

Touch and hold  : Fast Forward

- Rotate handset 90 degrees to automatically rotate Display image into Landscape view. Operations are the same as those in Portrait view.

Playing Music

1 Tap Menu → *Media Player* → *Music*

2 Play a file

■ To play most recently played file

Last played

- While playing, *Last played* will be *Now playing*.

■ To select from all files

All music → Select a file

■ To select from playlists

Playlists → Select a playlist → Select a file

■ To select from list of Artists

Artists → Select an Artist → Select a file

■ To select from list of Albums

Albums → Select an Album → Select a file

■ To select from list of Genres

Genres → Select a genre → Select a file

■ To select from Folder List

Folder → Select a folder → Select a file

■ To select from list of recently played files

Recent music → Select a file

■ To select from list of often played files

Most played music → Select a file

- Tap  next to *All music* or a playlist name to play all files in the list.
- When Memory Card is inserted, Memory Card files appear in *All music* list and *Folder* list with .
- While Media Player is active, press  repeatedly to hide Music Playback window. Also, press  to choose whether to exit Music Playback window or keep playing the music as BGM. In Standby, press  to end Media Player. End confirmation appears, choose *Yes*.
- When a list is displayed while playing music, tap  to return to Music Playback window.
- If a call arrives while playing music on Player window, playback pauses and handset rings. After call ends, paused Music Playback window returns. For BGM, playback resumes automatically after call ends.
- Alarm time arrives during playing music on Music Playback window, playback pauses, Alarm sounds and indicator appears. Press any key to stop Alarm and to clear the indicator. For BGM, playback resumes.
- When *Auto lock* is set to *On*, press  /  to adjust the volume while playing music as BGM with Touch Panel locked, etc.

Advanced

Advanced Settings (P.8-10)

- Searching File by Text
- Adding Files to Playlist
- Sending Files
- Setting Files to Ringtone in Normal Mode
- Sorting Files
- Purchasing or Downloading Content Key
- Viewing File Details
- Changing Order of Files in Playlist
- Renaming Playlist
- Deleting Playlist
- Stopping Playback
- Switching to Bluetooth® -Compatible Stereo Headphone during Playback

Settings

- Set Repeat mode (P.14-21)
- Set Shuffle (P.14-21)
- Set Equalizer (P.14-21)
- Set 3D sound (P.14-21)

Playing Movie

Folder structure is as follows.

Folder	Description
Last played	Play most recently played file
All movies	View all playable file on Movie up to 9999
Playlists	View playable file on Movie in created folders
Folder	View files on Movie folders of Data Folder and Memory Card, as well as WMVideo in Memory Card
Recent movie	View up to 100 recently played file (Most recently played file appears first)
Most played movie	View up to 100 frequently played file (Most frequently played file appears first)

Media Player Movie Window



Movie Playback

- 1 Repeat mode
Tap to toggle settings.
Off : Off
One : One
Repeat all : Repeat all
- 2 Setting Shuffle
Tap to toggle settings.
Shuffle On : Shuffle On
Shuffle Off : Shuffle Off
- 3 Playback speed
Tap to change setting.
- 4 Display size
Tap to change setting.

- 5 Save as still image
 - Tap to save a still image.
 - Protected movies cannot be played as a still image.
- 6 Movie title (or file name if no title) and author
- 7 Copy protection
- 8 File number/Total number of files
- 9 Progress bar
 - Drag or tap to specify start point.
- 10 Elapsed playing time
- 11 Web link provided
 - Tap to open related Website.
- 12 Volume level
 - Tap to adjust volume.
- 13 Total playing time

14 Operation keys

-  : Stop
-  : Play
-  : Pause
-  : Cue/Previous movie

- Tap within 3 seconds after playback starts to play previous movie. Tap after 3 seconds to play beginning of current movie.

Touch and hold  : Rewind

 : Next movie

Touch and hold  : Fast Forward

- Rotate handset 90 degrees to automatically rotate Display image into Landscape view. Operations are the same as those in Portrait view.
- In Portrait view, tap movie for **1** to **5** icons. In Landscape view, tap movie for items other than image, including playback navigation or progress bar.

Playing Movie

1 Tap Menu → *Media Player* → *Movie*

2 Play a file

■ To play most recently played file

Last played

■ To select from all files

All movies → Select a file

■ To select from playlists

Playlists → Select a playlist → Select a file

■ To select from folder list

Folder → Select a folder

■ To select from list of recently played files

Recent movie → Select a file

■ To select from list often played files

Most played movie → Select a file

- Tapping  next to *All movies* or a playlist name plays all files in the list.
- When Memory Card is inserted, Memory Card files appear in *All movies* list and *Folder* list with .

Advanced

Advanced Settings (P.8-11)

- Searching File by Text
- Adding Files to Playlist
- Sending Files
- Setting Files to Ringtone in Normal Mode
- Sorting Files
- Purchasing or Acquiring Content Key
- Viewing File Details
- Changing Order of Files in Playlist
- Renaming Playlist
- Deleting Playlist
- Stopping Playback
- Switching to Bluetooth® -Compatible Stereo Headphone during Playback

Settings

- Set Repeat mode (P.14-21)
- Set Shuffle (P.14-21)
- Set Backlight (P.14-21)
- Set Portrait style (P.14-21)
- Set Landscape style (P.14-21)
- Show or hide movies thumbnails (P.14-21)
- Access or ignore linked information (P.14-21)

Using Playlist

Create Playlist to make your own album.

Creating Playlist

Up to 20 playlists and 100 files in each playlist can be created.

- 1 Tap Menu → *Media Player* → *Music or Movie* → *Playlists* → Tap Create
- 2 Enter playlist name
- 3 Select created playlist
- 4 Tap Add
- 5 Check files to save → Tap Add to playlist

Playing Playlist

- 1 Tap Menu → *Media Player* → *Music or Movie* → *Playlists*
- 2 Select a playlist
- 3 Select a file

● Playlist cannot be played if included file has been deleted, or file is added from Memory Card and Memory Card is removed. Insert Memory Card and load file to play.

Streaming

Enjoy audio visual media while it is downloaded.
Access compatible files via page links, etc.

Streaming from Page Link

- 1 Open a page containing a page link
- 2 Select a link

Entering URL

- 1 Tap Menu → *Media Player* → *Streaming* → *Enter URL*
 - "rtsp://" is set in URL field by default.

- 2 Enter URL



Streaming

- Operation while streaming is the same as that of Media Player (P.8-4, P.8-6).

Note

- Even if streaming is paused, Internet connection remains active, incurring Packet Communication fees.

Accessing from Bookmark

Up to 20 links in Streaming Bookmark can be saved.

- 1 Tap Menu → *Media Player* → *Streaming* → *Bookmark*
- 2 Select a bookmark

Accessing from History

Up to 20 previously accessed links can be held.

- 1 Tap Menu → *Media Player* → *Streaming* → *History*
- 2 Select history

Advanced

Advanced Settings (P.8-12)

- Saving File to Bookmark while Streaming
- Accessing Streaming Saved as Bookmark
- Accessing Previously Accessed Streaming
- Editing Streaming Bookmark URL
- Saving Streaming Bookmark by Direct Entry
- Deleting Streaming Bookmark URL
- Editing History of Streaming
- Deleting History of Streaming

Advanced Settings

Advanced Settings

Music Playback

Searching File by Text

Tap Menu → **Media Player** → **Music** → **All music** → Tap Search files → Check **Title** or **Artist** → Tap Search field → Enter title or artist name → Tap Search

Adding Files to Playlist

Tap Menu → **Media Player** → **Music** → **All music** → Tap Add to playlist → Check a file to add → Tap Add to playlist → Select a playlist

- To create a new playlist and add files to it. Tap Create in the window to add files → Enter playlist name → Select a created playlist.

Sending Files

Tap Menu → **Media Player** → **Music** → **All music** → Tap Send

To send via message

Via message → Select a file → (P.4-4 S! Mail 2)

To send via Bluetooth®

Via Bluetooth → Check files → Tap Send (P.13-7 Sending Data 2)

To send via infrared

Via infrared → Check files → Tap Send (P.13-3)

Setting Files to Ringtone in Normal Mode

Tap Menu → **Media Player** → **Music** → **All music** → Tap More → **Set as** → Select a file → Select an item

- Alternatively, tap Menu → **Set as** while music is paused in Music playback window.
- This operation is not available for files that cannot be added to ringtone.

Sorting Files

Tap Menu → **Media Player** → **Music** → **All music** → Tap More → **Sort by** → Select an item

- Perform the same operation in other folders.
- After returning to Standby, files will be resorted to default.

Purchasing or Downloading Content Key

Tap Menu → **Media Player** → **Music** → **All music** → Tap More → **Download Content key** → Select a file

Viewing File Details

Tap Menu → **Media Player** → **Music** → **All music** → Tap More → **Details** → Select a file

- Alternatively, during playback, Tap Menu → **Details**.
- Perform the same operation in other folders.

Changing Order of Files in Playlist

Tap Menu → **Media Player** → **Music** → **Playlists** → Select a playlist → Tap Reorder → Hold file to select, then drag to desired location → Tap OK

Renaming Playlist

Tap Menu → **Media Player** → **Music** → **Playlists** → Tap Rename → Select a Play list → Enter playlist name

Deleting Playlist

Tap Menu → **Media Player** → **Music** → **Playlists** → Tap Delete → Check a playlist → Tap Delete → **Yes**

Stopping Playback

During playback, tap 

Switching to Bluetooth®-Compatible Stereo Headphone during Playback

In Music playback window, tap Menu → **Transfer to headset** → Drag device to connect to 

- When no device is registered, search and register new device.
- when **Transfer to headset** is set, volume adjustment on handset is unavailable. Adjust on the headphones.
- Playback with monaural headphones is unavailable.
- Some files may not be played.

- To switch output to handset while playing music, tap Transfer to Phone.
- When headphone is registered or connected before, switching to Bluetooth® -compatible stereo headphone is available without dragging device to connect to .

Setting Repeat Mode

In Music playback window, tap Menu → **Settings** → **Repeat mode** → Select an item

Setting Shuffle

In Media Player Music Window, tap Menu → **Settings** → Under **Shuffle, On or Off**

Setting Equalizer

In Music playback window, tap Menu → **Settings** → **Equalizer** → Select an item

- This is not available when you use a Bluetooth® -compatible stereo headphone.

Setting Stereophonic Sound

In Music playback window, tap Menu → **Settings** → Under **3D sound, On or Off**

- This is not available when you use a Bluetooth® -compatible stereo headphone.

Movie Playback

Searching File by Text

Tap Menu → **Media Player** → **Movie** → **All movies** → Tap Search files → Check **Title** or **Author** → Tap Search field → Enter title or author's name → Tap Search

Adding Files to Playlist

Tap Menu → **Media Player** → **Movie** → **All movies** → Tap Add to playlist → Check a file to add → Tap Add to playlist → Select a playlist

- To create a new playlist and add files to it, tap Create in the window to add files → Enter playlist name → Select playlist

Sending Files

Tap Menu → **Media Player** → **Movie** → **All movies** → Tap Send

■ To send via message

Via message → Select a file → (ⓂP.4-4 5! Mail )

■ To send via Bluetooth®

Via Bluetooth → Check a file → Tap Send (ⓂP.13-7 Sending Data )

■ To send via infrared

Via infrared → Check a file → Tap Send (ⓂP.13-3)

Setting Files to Ringtone in Normal Mode

Tap Menu → **Media Player** → **Movie** → **All movies** → Tap More → **Set as** → Select a file → Select an item

- Alternatively, tap Menu → **Set as** in Music playback window.
- This operation is not available for files that cannot be added to ringtone.

Sorting Files

Tap Menu → **Media Player** → **Movie** → **All movies** → Tap More → **Sort by** → Select an item

- Perform the same operation in other folders.

Purchasing or Acquiring Content Key

Tap Menu → **Media Player** → **Movie** → **All movies** → Tap More → **Download Content key** → Select a file

Viewing File Details

Tap Menu → **Media Player** → **Movie** → **All movies** → Tap More → **Details** → Select a file

- Alternatively, during playback, tap Menu → **Details**.
- Perform the same operation in other folders.

Changing Order of Files in Playlist

Tap Menu → **Media Player** → **Movie** → **Playlists** → Select a playlist → Tap Reorder → Hold file to select, then drag to desired location → Tap OK

Renaming Playlist

Tap Menu → **Media Player** → **Movie** → **Playlists** → Tap Rename → Select a playlist → Enter playlist name

Deleting Playlist

Tap Menu → **Media Player** → **Movie** → **Playlists** → Tap Delete → Check a playlist → Tap Delete → **Yes**

Stopping Playback

During playback, tap 

Switching to Bluetooth®-Compatible Stereo Headphone during Playback

In Movie playback window, tap Menu → **Transfer to headset** → Drag device to connect to 

- When no device is registered, search and register new device.
- when **Transfer to headset** is set, volume adjustment on handset is unavailable. Adjust on the headphones.
- Playback with monaural headphones is unavailable.
- Some files may not be played.
- To switch output to handset while playing music, tap Transfer to Phone.

Setting Repeat Mode

In Movie Playback window, tap Menu → **Settings** → **Repeat mode** → Select an item

Setting Shuffle

In Movie Playback window, tap Menu → **Settings** → Under **Shuffle, On** or **Off**

Setting Backlight

In Movie Playback window, tap Menu → **Settings** → **Backlight** → Select an item

Setting Portrait Style

In Movie Playback window, tap Menu → **Settings** → **Portrait style** → Select an item

Setting Landscape Style

In Movie Playback window, tap Menu → **Settings** → **Landscape style** → Select an item

Setting Thumbnail Display

In Movie Playback window, tap Menu → **Settings** → Under **Thumbnail display, On** or **Off**

Accessing or Ignoring Linked Information

In Movie Playback window, tap Menu → **Settings** → Under **Web link, On** or **Off**

Streaming

Playing the Last Played Streaming

Tap Menu → **Media Player** → **Streaming** → **Last played**

Saving File to Bookmark while Streaming

While streaming, tap Menu → Tap Add bookmark → Tap Title field → Enter title → Tap URL field → Enter URL → Tap Save

Accessing Streaming Saved as Bookmark

While streaming, tap View bookmark → Select bookmark

Accessing Previously Accessed Streaming

While streaming, tap Menu → Tap View history → Select history

Editing Streaming Bookmark URL

Tap Menu → **Media Player** → **Streaming** → **Bookmark** → Tap Edit bookmark → Select bookmark to edit → Tap Title field → Edit title → Tap URL field → Edit URL → Tap Save

- Alternatively, while streaming, tap Menu → Tap View bookmark → Edit bookmark → Select a bookmark to edit → Tap Title field → Edit title → Tap URL field → Edit URL → Tap Save.

Saving Streaming Bookmark by Direct Entry

Tap Menu → **Media Player** → **Streaming** → **Bookmark** → Tap Add bookmark → Tap Title field → Enter title → Tap URL field → Enter URL → Tap Save

- Alternatively, while streaming, tap Menu → Tap View bookmark → Tap Add bookmark → Tap Title field → Enter title → Tap URL field → Enter URL → Tap Save.

Deleting Streaming Bookmark URL

Tap Menu → **Media Player** → **Streaming** → **Bookmark** → Tap Delete → Check bookmarks to delete → Tap Delete → **Yes**

- Alternatively, while streaming, tap View bookmark → Tap Delete → Check bookmarks to delete → Tap Delete → **Yes**.

Editing History of Streaming

Tap Menu → **Media Player** → **Streaming** → **History** → Tap Edit history → Select history to edit → Tap Title field → Edit title → Tap URL field → Edit URL → Tap Save

- Alternatively, while streaming, tap Menu → Tap View history → Tap Edit history → Select history to edit → Tap Title field → Edit title → Tap URL field → Edit URL → Tap Save.

Deleting History of Streaming

Tap Menu → **Media Player** → **Streaming** → **History** → Tap Delete → Check URL to delete → Tap Delete → **Yes**

- Alternatively, while streaming, tap Menu → Tap View history → Tap Delete → Check URL to delete → Tap Delete → **Yes**.

