

# Handset Customization

# 14

<b>Phone Settings</b> .....	<b>14-2</b>
Handset Settings .....	14-2
Touch Panel Settings .....	14-3
<b>Sounds &amp; Vibration &amp; External Light Settings</b> .....	<b>14-3</b>
Sounds & Vibration .....	14-3
External Light Settings .....	14-4
Display and Font Settings .....	14-5
<b>Manner Mode Settings</b> .....	<b>14-6</b>
Call Settings .....	14-6
Phonebook Settings .....	14-11
<b>Messaging Settings</b> .....	<b>14-11</b>
Custom Mail Address .....	14-11
S! Mail & SMS .....	14-12
S! Mail .....	14-14
SMS .....	14-15
<b>Internet Settings</b> .....	<b>14-15</b>
Yahoo! Keitai .....	14-15
PC Site Browser .....	14-16
<b>Digital TV Settings</b> .....	<b>14-17</b>
TV Alarm .....	14-17
Data Broadcast .....	14-18
Display and Sound .....	14-18
Recording .....	14-18
Incoming Calls & Alarms .....	14-19
Auto Power Off .....	14-19
<b>Camera Settings</b> .....	<b>14-19</b>
Camera & Video .....	14-19
Photo .....	14-20
Video .....	14-20

<b>Media Player Settings</b> .....	<b>14-21</b>
Music .....	14-21
Movie .....	14-21
<b>Entertainment Setting</b> .....	<b>14-22</b>
S! Information Channel .....	14-22
S! Applications .....	14-22
Security Settings .....	14-23
Memory Settings .....	14-24
<b>Connectivity Settings</b> .....	<b>14-25</b>
Bluetooth .....	14-25
Infrared .....	14-26
USB .....	14-26
Network .....	14-26

## Phone Settings

## Handset Settings

Start Here

Tap Menu → *Settings* → *Phone settings*

Change user interface language	Default 日本語	言語選択 → Select an item
Set Time zone updating	Default Ask when update	<i>Date &amp; Time</i> → <i>Set time zone</i> → <i>Time zone updating</i> → Select an item
Set time		<i>Date &amp; Time</i> → <i>Set date &amp; time</i> → <i>Time</i> → Enter time → Tap OK <ul style="list-style-type: none"> <li>Some functions are disabled when time is not set.</li> </ul>
Set date		<i>Date &amp; Time</i> → <i>Set date &amp; time</i> → <i>Date</i> → Enter date → Tap OK <ul style="list-style-type: none"> <li>Some functions are disabled until date is set.</li> </ul>
Change Home time zone	Default GMT+09:00	<i>Date &amp; Time</i> → <i>Set time zone</i> → <i>Home zone</i> → Scroll a window and tap a target city → Tap Save <ul style="list-style-type: none"> <li>Alternatively, tap the tab located at the top of the window to change the zone.</li> <li>Select the zone closest to your locality. Complete this setting before selecting <i>Dual Clock</i> in <i>Widget setting</i>.</li> </ul>
Activate or cancel Daylight savings time adjustment	Default <input type="checkbox"/>	<i>Date &amp; Time</i> → <i>Set time zone</i> → <i>Home zone</i> → Scroll a window and tap a target city → <input type="checkbox"/> → Tap Save <ul style="list-style-type: none"> <li>Tap <input type="checkbox"/> to switch to <input type="checkbox"/></li> </ul>
Change Date format	Default YYYY/MM/DD	<i>Date &amp; Time</i> → <i>Set format</i> → <i>Date format</i> → Select an item
Change Time format	Default 24 hour	<i>Date &amp; Time</i> → <i>Set format</i> → <i>Time format</i> → Select an item
Set Time correction	Default On	<i>Date &amp; Time</i> → <i>Set date &amp; time</i> → <i>Time correction</i> → Under <i>Auto correction</i> , <i>On</i> or <i>Off</i> <ul style="list-style-type: none"> <li>To specify when to correct the time, tap <i>Correction timing</i> → Check an item to set → Tap Save.</li> <li>Tapping <i>Manual correction</i> immediately corrects the time.</li> </ul>
Save entries to User's Dictionary		<i>User's dictionary</i> → Tap Add new → <i>Word</i> → Enter word and sentence → <i>Reading</i> → Enter reading → Tap Save
Edit User's Dictionary entries		<i>User's dictionary</i> → Select entry to edit → Edit word and reading → Tap Save

Delete User's Dictionary entries	<i>User's dictionary</i> → Tap Delete → Check word to delete → Tap Delete → <i>Yes</i>
----------------------------------	--

## Touch Panel Settings

**Start Here** Tap Menu → *Settings* → *Touch panel*

Set Auto Lock <b>Default</b> On	Under <i>Auto lock, On or Off</i>
Set Touch Panel tone volume level and vibration level for operating Touch Panel <b>Default</b> Volume: Level 0, Touch vibration: Level 3	<i>Operation feedback</i> → Adjust volume/Set strength of vibration
Calibrate Touch Panel	<i>Touch calibration</i> → Tap Start → Follow the onscreen instructions to sequentially tap the + signs <ul style="list-style-type: none"> <li>• Tap Cancel to exit.</li> </ul>

**Settings**

## Sounds & Vibration & External Light Settings

### Sounds & Vibration

**Start Here** Tap Menu → *Settings* → *Sound settings*

Adjust volume <b>Default</b> Voice call/Video call/Message/S! Friend's Status/Missed call notif./Delivery report/System sounds: Level 3, S! Quick News: Level 0	<i>Volume</i> → Adjust volume <ul style="list-style-type: none"> <li>• If <i>Ringtone reducer</i> is <i>On</i>, ringtone volume is reduced to Level 1 for the first two seconds, regardless of ringtone volume set for Voice/Video Call.</li> <li>• Use  /  to adjust ringtone volume while handset rings.</li> <li>• To mute Voice/Video Call or Message tones, set <i>Volume 0</i> and <i>Vibration to Off</i>. </li> </ul>
Set Ringtone for Voice Call/Video Call <b>Default</b> Voice call: Young hopefuls.mp4, Video call: Samsung Tune.mp4	<i>Ringtone</i> → <i>Voice call, or Video call</i> → Select save location for a file → Select a file <ul style="list-style-type: none"> <li>• Tap  to playback.</li> </ul>
Set ringtone other than Voice Call <b>Default</b> A Toy Box.mp4	<i>Ringtone</i> → Tap a Ringtone field to set → Select save location for a file → Select a file <ul style="list-style-type: none"> <li>• Tap  to playback.</li> </ul>
Set ringtone duration other than Voice Call <b>Default</b> 5 Seconds	<i>Ringtone</i> → Select an item → <i>Duration</i> → Enter duration

Set Vibration <span style="float: right;"><b>Default</b> Off</span>	<i>Vibration</i> → Select an item → Select a pattern <ul style="list-style-type: none"> <li>• Tap  to view a pattern.</li> </ul>
Set system sounds <b>Default</b> Pop up box alerts/Call end tone/Alerts on call: On, Minute minder/Call connect tone/Power on/Power off: Off	<i>System sounds</i> → Check an item to Check → Tap Save <ul style="list-style-type: none"> <li>• Available items vary by mode.</li> </ul>

- Open *Sound settings* to change sounds for Normal mode. Settings cannot be changed for other modes.

## External Light Settings

**Start Here**

Tap Menu → *Settings* → *Sound settings*

Set External Light color for incoming transmissions <b>Default</b> Voice call/Video call/Message/S! Friend's Status/Missed call notif./Alarms/Delivery report: Green, S! Quick News: Off	<i>Incoming light</i> → Select an item → Select a Color <ul style="list-style-type: none"> <li>• When selecting <i>Off</i>, Notification light does not blink.</li> <li>• Tap  to blink a light.</li> </ul>
Set External Light color for missed calls <b>Default</b> Missed call/Missed call notif.: Blue, Message/Delivery report: Green, S! Friend's Status: Light blue, Answering machine: White, Missed alarm: Pink	<i>Notification light</i> → Select an item → Select a color <ul style="list-style-type: none"> <li>• When selecting <i>Off</i>, Notification light does not blink.</li> <li>• Tap  to view color.</li> </ul>

## Display and Font Settings

**Start Here**

Tap Menu → *Settings* → *Display settings*

Change Main Menu settings <b>Default</b> Sweet Liqueur(Random)	<i>Main menu style</i> → Select an item → Select a style
Set the color theme of Menu <b>Default</b> Blue	<i>Color theme</i> → Select an item
Change Wallpaper <b>Default</b> Colored pencil.jpg	<i>Wallpaper</i> → (P.2-5 Wallpaper 2)
Set Frequently Used Functions to Widget Bar <b>Default</b> 17 Widgets (Analog Clock, Calender, Alarm, Light, S! Information Channel, S! Quick News, Top3, Mini player, Oekaki anime, S! Appli, Infrared, Phonebook, Bookmark (Y Keitai), S-1 BATTLE, Content Value Package, Simple Select Video, Widget setting)	<i>Widget setting</i> → Check an item to set → Tap OK ● Up to 17 Widgets can be set.
Set Font type <b>Default</b> Font 1	<i>Font type</i> → Select an item
Change Message text font size <b>Default</b> Standard	<i>Font size</i> → <i>Messages</i> → Select an item
Set text size in Yahoo! Keitai pages <b>Default</b> Standard	<i>Font size</i> → <i>Yahoo! Keitai</i> → Select an item
Set text size in PC Site Browser <b>Default</b> Standard	<i>Font size</i> → <i>PC site browser</i> → Select an item
Adjust Display brightness <b>Default</b> Auto	<i>Backlight</i> → <i>Backlight on</i> → <i>Brightness</i> → Under <i>Auto/Manual</i> , <i>Auto</i> or <i>Manual</i> ● When <i>Manual</i> is selected, adjust brightness on Level field.
Set Backlight time <b>Default</b> 15 seconds	<i>Backlight</i> → <i>Backlight on</i> → <i>Duration</i> → Select an item ● When Backlight time is set to <i>Off</i> , Display becomes dim. ● Display becomes dimmer when Backlight time elapses.
Set Dimmer time of Backlight <b>Default</b> 15 seconds	<i>Backlight</i> → <i>Backlight dim duration</i> → Select an item ● When Backlight time elapses, Display turns off.
Set Operator name <b>Default</b> Off	Under <i>Operator name</i> , <i>On</i> or <i>Off</i>

## Manner Mode Settings

Switching Manner mode	Tap Menu → <i>Settings</i> → <i>Manner mode settings</i> → Select an item <ul style="list-style-type: none"> <li>• To edit each settings in Manner mode, tap Edit → Select a mode → Set each item</li> </ul>
-----------------------	---

## Call Settings

**Start Here**

 Tap Menu → *Settings* → *Call settings*

Forward all calls to Voicemail (Handset does not ring)	<i>Optional services</i> → <i>Voice mail/Call forwarding</i> → <i>Voice mail On</i> → <i>Always(0 sec.)</i>
Forward unanswered calls to Voicemail (specify ring time)	<i>Optional services</i> → <i>Voice mail/Call forwarding</i> → <i>Voice mail On</i> → <i>No reply(5 - 30 sec.)</i>
Activate and set Forwarding	<i>Optional services</i> → <i>Voice mail/Call forwarding</i> → <i>Call forwarding On</i> → Select a call type → Select a setting → Select an item → Set number to forward
Cancel Voicemail/Call Forwarding	<i>Optional services</i> → <i>Voice mail/Call forwarding</i> → <i>Deactivate all</i> → <i>Yes</i>
Confirm current Voicemail/Call Forwarding settings	<i>Optional services</i> → <i>Voice mail/Call forwarding</i> → <i>Get status</i>
Listen to Voicemail message	<i>Optional services</i> → <i>Voice mail/Call forwarding</i> → <i>Listen to voice mail</i> →  or tap Call
Activate or cancel Call Waiting	<i>Optional services</i> → <i>Call waiting</i> → <i>On</i> or <i>Off</i>
Confirm current Call Waiting settings	<i>Optional services</i> → <i>Call waiting</i> → <i>Get status</i>
Set Outgoing Call Barring	<i>Optional services</i> → <i>Call barring</i> → <i>Outgoing call</i> → Select an item → <i>On</i> or <i>Off</i> → Enter Network Password → Tap OK
Activate or cancel Incoming Call Barring	<i>Optional services</i> → <i>Call barring</i> → <i>Incoming call</i> → Select an item → <i>On</i> or <i>Off</i> → Enter Network Password → Tap OK
Cancel all Call Barring	<i>Optional services</i> → <i>Call barring</i> → <i>Cancel all barring</i> → Enter Network Password → Tap OK → <i>Yes</i>

Confirm current Call Barring settings	<i>Optional services</i> → <i>Call barring</i> → <i>Get status</i> → Select an item
Change Network Password	<i>Optional services</i> → <i>Call barring</i> → <i>Set security code</i> → Enter current Network Password → Tap OK → Enter new Network Password → Tap OK → Enter new Network Password again → Tap OK
Set Missed Call Notification	<i>Optional services</i> → <i>Missed call notif.</i> →  or tap Call
Switching Network Mode <span style="float: right;"><b>Default</b> Automatic</span>	<i>Optional services</i> → <i>International call</i> → <i>Select network</i> → Select an item <ul style="list-style-type: none"> <li>• If <i>Manual</i> is set, select from <i>3G/GSM</i>, <i>3G</i>, or <i>GSM</i>.</li> </ul>
Save International Code <span style="float: right;"><b>Default</b> 0046010</span>	<i>Optional services</i> → <i>International call</i> → <i>International code</i> → Enter Phone Password → Tap OK → Enter an international code
Add/change/delete Country Number <b>Default</b> 日本 (Japan), 韓国 (KOR), イギリス (GBR), イタリア (ITA), スイス (CHE), スペイン (ESP), ドイツ (DEU), ポルトガル (PRT), オランダ (NLD), フランス (FRA), モナコ (MCO), アメリカ合衆国 (USA), スウェーデン (SWE), オーストラリア (AUS), 中国 (CHN), 香港 (HKG), 台湾 (TWN)	<i>Optional services</i> → <i>International call</i> → <i>Country number</i> → Add, change, or delete item <ul style="list-style-type: none"> <li>• To add, tap Add → <i>Country name</i> → Enter country name → <i>Country code</i> → Enter country code → Tap OK.</li> <li>• To change, select an item from country code → <i>Country name</i> → Enter country name → <i>Country code</i> → Enter country code → Tap OK.</li> <li>• To delete, tap Delete → Select item → Tap Delete → <i>Yes</i>.</li> </ul>
Select network to access	<i>Optional services</i> → <i>International call</i> → <i>Select operator</i> → <i>Select Auto/Manual</i> → Select an item <ul style="list-style-type: none"> <li>• When you set <i>Manual</i>, select a network.</li> </ul>
Select preferred network from list	<i>Optional services</i> → <i>International call</i> → <i>Select operator</i> → <i>Set priority</i> → Tap Add → <i>Network list</i> → Select a Network
Add a new preferred network	<i>Optional services</i> → <i>International call</i> → <i>Select operator</i> → <i>Set priority</i> → Tap Add → <i>New Network</i> → <i>Country code</i> → Enter country code → <i>Network code</i> → Enter Network code → <i>Network name</i> → Enter Network name → <i>Network type</i> → Select an item → Tap Add
Check Call Time/Cost	<i>Call time &amp; cost</i> → <i>All calls</i> <ul style="list-style-type: none"> <li>• To reset call time/cost, tap Reset → Enter PIN2 → Tap OK.</li> </ul>

Check last Call Time/Cost		<i>Call time &amp; cost</i> → <i>Last call</i> ● To reset last call time/cost, tap Reset.
Check Data Counter		<i>Call time &amp; cost</i> → <i>Data counter</i> ● To reset sent/received data counter, tap Reset.
Show or hide Call Time/Cost after calls	<b>Default</b> Off	<i>Call time &amp; cost</i> → Under <i>Show charge after call, On</i> or <i>Off</i> ● This function may not be available.
Change Call Cost Currency		<i>Call time &amp; cost</i> → <i>Set currency</i> → Enter PIN2 → Tap OK → Tap Price field → Enter rate to the yen → Tap Currency field → Enter currency unit → Tap Save
Set Call Cost Limit		<i>Call time &amp; cost</i> → <i>Set max cost limit</i> → <i>Edit</i> → Enter PIN2 → Tap OK → Select New upper limit field → Enter upper limit → Tap Save ● After reaching the call cost limit, only emergency calls can be made; messaging, web connections (fee-based operations) are disabled. ● When <i>Show charge after call</i> is not available, this function is also unavailable.
Cancel Call Cost Limit		<i>Call time &amp; cost</i> → <i>Set max cost limit</i> → <i>Reset</i> → Enter PIN2 → Tap OK
Activate or cancel Answering machine	<b>Default</b> Off	<i>Answering machine</i> → Under <i>On/Off, On</i> or <i>Off</i>
Set Answering machine response time	<b>Default</b> 18 seconds	<i>Answering machine</i> → <i>Ringling duration</i> → Select an item ● If <i>Other</i> is selected, enter time.
Play Answering machine records		<i>Answering machine</i> → <i>Play messages</i> → Select a record ● To delete record, in list, tap Delete → Check a record to delete → Tap Delete → <i>Yes</i> . ●  → <i>Received</i> → Select a record →  → Message is also available.
Set Answering machine response language	<b>Default</b> 日本語	<i>Answering machine</i> → <i>Sound language</i> → Select an item
Set Preset Picture to appear in place of your own image		<i>Video call</i> → <i>Alternative picture</i> → <i>Preset picture</i> → Tap OK
Set Alternative Picture to appear in place of My Image		<i>Video call</i> → <i>Alternative picture</i> → <i>Pictures</i> → Select a file → Tap OK ● When Memory Card is inserted, <i>Digital camera</i> is selectable.
Adjust incoming video quality	<b>Default</b> Standard	<i>Video call</i> → <i>Incoming video quality</i> → Select an item
Adjust outgoing video quality	<b>Default</b> Standard	<i>Video call</i> → <i>Outgoing video quality</i> → Select an item
Set Preset Picture to appear when Video Call is on hold		<i>Video call</i> → <i>Hold setting</i> → <i>Hold during call</i> → <i>Preset picture</i> → Tap OK

Set Hold setting		<i>Video call</i> → <i>Hold setting</i> → <i>Hold during call</i> → <i>Pictures</i> → Select a file → Tap OK ● When Memory Card is inserted, <i>Digital camera</i> is selectable
Set Preset Picture to appear when Video Call is on hold without answering		<i>Video call</i> → <i>Hold setting</i> → <i>Hold answer</i> → <i>Preset picture</i> → Tap OK
Set Hold answer setting		<i>Video call</i> → <i>Hold setting</i> → <i>Hold answer</i> → <i>Pictures</i> → Select a file → Tap OK ● When Memory Card is inserted, <i>Digital camera</i> is selectable.
Activate or cancel mute for Video Call	<b>Default</b> Off	<i>Video call</i> → Under <i>Mute my voice</i> , <i>On</i> or <i>Off</i> ● If <i>On</i> , tap Unmute to temporarily send voice.
Activate or cancel Speaker Phone during Video Call	<b>Default</b> On	<i>Video call</i> → Under <i>Speaker</i> , <i>On</i> or <i>Off</i>
Set Backlight	<b>Default</b> On	<i>Video call</i> → Under <i>Backlight</i> , <i>On</i> or <i>Off</i> ● When <i>Off</i> is set, Display becomes dim.
Set handset response when Video Call cannot be connected	<b>Default</b> Ask each time	<i>Video call</i> → <i>Retry with</i> → Select an item ● <i>None</i> : Calls are disconnected with no notification. ● When a Video Call cannot be connected, prompt appears to retry with the selected setting.
Answer Video Call from specified party automatically	<b>Default</b> Off	<i>Video call</i> → <i>Auto answer</i> → Under <i>On/Off</i> , <i>On</i> or <i>Off</i> ● When a Video Call arrives from the specified party, a tone sounds and the call is automatically answered.
Create Auto Answer List		<i>Video call</i> → <i>Auto answer</i> → <i>Auto answer list</i> → Tap Add → Select an item → Enter Phone Password → Tap OK → Add an entry ● To delete the specified party, after selecting <i>Auto answer list</i> , tap Delete → Check an entry to delete → Tap Delete → <i>Yes</i> .
Show or hide your own image for Video Calls	<b>Default</b> On	<i>Video call</i> → Under <i>Show my image</i> , <i>On</i> or <i>Off</i>
Accept or reject calls from specified phone numbers	<b>Default</b> Off	<i>Reject incoming calls</i> → <i>Set reject number</i> → Under <i>On/Off</i> , <i>On</i> or <i>Off</i> ● When a call from Reject list arrives, a caller hears a busy tone and call is not connected. <i>Missed call</i> appears in Standby. Select the message to check missed call.

Create or edit Black List		<p><i>Reject incoming calls</i> → <i>Set reject number</i> → <i>Black list</i> → Tap Add → Select an item → Add an entry</p> <ul style="list-style-type: none"> <li>To delete saved phone numbers, select <i>Black list</i> → Tap Delete → Check phone numbers to delete → Tap Delete → <i>Yes</i>.</li> </ul>
Accept or reject calls from unknown numbers	<b>Default</b> Off	<i>Reject incoming calls</i> → Under <i>Unknown, On</i> or <i>Off</i>
Accept or reject calls when number is withheld	<b>Default</b> Off	<i>Reject incoming calls</i> → Under <i>Withheld, On</i> or <i>Off</i>
Accept or reject calls from payphones	<b>Default</b> Off	<i>Reject incoming calls</i> → Under <i>Payphone, On</i> or <i>Off</i>
Accept or reject calls when number is unavailable	<b>Default</b> Off	<i>Reject incoming calls</i> → Under <i>Unavailable, On</i> or <i>Off</i>
Activate or cancel Offline mode	<b>Default</b> Off	Under <i>Offline mode, On</i> or <i>Off</i>
Show or hide your own number		<p><i>Show my number</i> → <i>On</i> or <i>Off</i></p> <ul style="list-style-type: none"> <li>To check current status, select <i>Get status</i>.</li> </ul>
Set handset to automatically redial busy numbers	<b>Default</b> Off	<p>Under <i>Auto redial, On</i> or <i>Off</i></p> <ul style="list-style-type: none"> <li><i>On</i>: Handset automatically disconnects call and redials busy numbers. Auto redial repeats up to 10 times until <i>Cancel</i> is tapped or  is pressed.</li> <li>Auto redial setting takes priority when Video Call retry setting is selected.</li> <li>If called party uses Call Forwarding or Voicemail, call is forwarded accordingly.</li> </ul>
Activate or cancel automatic ringer reduction	<b>Default</b> On	<p>Under <i>Ringtone reducer, On</i> or <i>Off</i></p> <ul style="list-style-type: none"> <li>When ringtone volume level is high, the volume level is reduced to Level 1 for the first four seconds, then returns to the set level.</li> </ul>
Enable or disable calling via Stereo Earphone Microphone	<b>Default</b> Off	<p><i>Earphone call</i> → <i>Call number</i> → Select an item → Add a phone number → Under On/Off, <i>On</i> or <i>Off</i></p> <ul style="list-style-type: none"> <li><i>On</i>: Press Stereo Earphone Microphone (Optional) switch for 1 + seconds to call specified number. To change specified number, repeat setup operation, saving the new number.</li> </ul>
Adjust Earpiece volume	<b>Default</b> Level 5	Adjust volume in Hearing volume field

## Phonebook Settings

**Start Here**

 Tap Menu → *Phonebook* → *Settings*

Select Phonebook Save Location	<b>Default</b> Phone	<i>Save setting</i> → Select an item <ul style="list-style-type: none"> <li>• <i>Ask each time</i>: A confirmation appears each time a new entry is saved.</li> </ul>
Change Phonebook preference (Phone/USIM)	<b>Default</b> Phone	<i>Change view</i> → Select an item
Change Search Method	<b>Default</b> ABC	<i>Search method</i> → Select an item
Copy all records of Phonebook and save on handset and USIM Card		<i>Copy all</i> → <i>Phone to USIM/USIM to Phone</i> → Yes

## Messaging Settings

### Custom Mail Address

Customize or change handset mail address	Tap Messaging → <i>Settings</i> → <i>Custom mail address</i> → Follow onscreen instructions <ul style="list-style-type: none"> <li>• Change mail account name (alphanumerics before @). Random alphanumerics set by default.</li> </ul>
--	--

## S! Mail & SMS

**Start Here**

Tap Messaging → *Settings* → *Universal settings*

Request or cancel Delivery Report	<b>Default</b> Off	<i>Sending settings</i> → Under <i>Delivery report</i> , <b>On</b> or <b>Off</b> <ul style="list-style-type: none"> <li>● <b>On</b>: Receive a message confirming successful delivery of a sent message.</li> </ul>
Quote text from received mail	<b>Default</b> On(Except SMS and Graphic Mail)	<i>Sending settings</i> → <i>Reply with history</i> → Select an item
Select reply setting	<b>Default</b> Off	<i>Sending settings</i> → Under <i>Reply settings</i> , <b>On</b> or <b>Off</b> <b>On</b> : Replies to sent messages are automatically addressed to " <i>Reply to</i> " address <b>Off</b> : Replies to sent messages are addressed to handset number/E-mail address <ul style="list-style-type: none"> <li>● Set address that appears in To: field of replies to messages sent from handset.</li> </ul>
Set "reply to" address		<i>Sending settings</i> → " <i>Reply to</i> " address → Enter an item → Enter address
Show or hide transmission progress bar	<b>Default</b> On	<i>Sending settings</i> → <i>Sending progress settings</i> → Under <i>Sending progress</i> , <b>On</b> or <b>Off</b>
Always show or hide send result (progress bar hidden)	<b>Default</b> With notice	<i>Sending settings</i> → <i>Sending progress settings</i> → <i>Sending result notice</i> → Select an item <ul style="list-style-type: none"> <li>● <i>Sending result notice</i> is only selectable when <i>Sending progress</i> is set to <b>Off</b>.</li> </ul>
Set received message notice content or hide notice	<b>Default</b> From	<i>Receiving settings</i> → <i>Message notice</i> → <i>View setting</i> → Select an item <ul style="list-style-type: none"> <li>● Received message notice scrolls above active function windows.</li> </ul>
Select secret folder message notice setting	<b>Default</b> Show	<i>Receiving settings</i> → <i>Message notice</i> → <i>Secret folder</i> → Enter Phone Password → Tap OK → <i>Secret folder</i> → Select an item <ul style="list-style-type: none"> <li>● <b>Not show</b>: Incoming message notice window for messages sorted to secret folders or <i>Message notice</i> does not appear.</li> </ul>
Adjust 3D Pictogram auto play setting		<i>Receiving settings</i> → <i>3D Pictogram</i> → <i>3D Picto. Auto play</i> → Select an item <b>Always</b> : Show 3D Pictogram for all messages <b>Only unread</b> : Show 3D Pictogram for unread messages only <b>Disable</b> : Hide 3D Pictogram <ul style="list-style-type: none"> <li>● The first time a received message is viewed <i>3D Picto. Auto play</i> confirmation appears.</li> </ul>
Select 3D Pictogram color settings	<b>Default</b> Random	<i>Receiving settings</i> → <i>3D Pictogram</i> → <i>Color settings</i> → ◀ or ▶ to show target pattern → Tap OK
Select 3D Pictogram Display speed	<b>Default</b> Standard	<i>Receiving settings</i> → <i>3D Pictogram</i> → <i>Display speed</i> → Select an item

Link External Light to incoming Feeling Mail <b>Default</b> On	<i>Receiving settings</i> → <i>Link to feeling</i> → <i>Light color</i> → Under <i>On/Off, On</i> or <i>Off</i>
Link External Light color to incoming Feeling Mail <b>Default</b> Happy/Glad: Pink, OK/Good: Green, Sad/Sorry: Blue, NG/Bad: Red, Important/Notice: Yellow	<i>Receiving settings</i> → <i>Link to feeling</i> → <i>Light color</i> → <i>Light color</i> → Select a feeling → Select a color • Tap  to view color.
Link Vibration to incoming Feeling Mail <b>Default</b> On	<i>Receiving settings</i> → <i>Link to feeling</i> → <i>Vibration pattern</i> → Select an item
Set whether to sound handset when Feeling Mail arrives <b>Default</b> Off	<i>Receiving settings</i> → <i>Link to feeling</i> → <i>Ringtone</i> → Under <i>On/Off, On</i> or <i>Off</i>
Linking Ringtone to incoming Feeling Mail <b>Default</b> Happy/Glad: One Fine Day.mp4, OK/Good: Sunny day.mp4, Bad/Sorry: Jazzy House_Pleasure.mp4, NG/Bad: Vintage Cinema.mp4, Important/Notice: On my way home.mp4	<i>Receiving settings</i> → <i>Link to feeling</i> → <i>Ringtone</i> → <i>Assign tone</i> → Select a feeling → Select a save location → Select a Ringtone • Tap  to playback the file.
Set Feeling Mail ringtone duration <b>Default</b> 5 Seconds	<i>Receiving settings</i> → <i>Link to feeling</i> → <i>Ringtone</i> → <i>Duration</i> → Enter time
Change font size <b>Default</b> Standard	<i>Display settings</i> → <i>Font size</i> → Select an item
Change scroll unit <b>Default</b> Single line	<i>Display settings</i> → <i>Scroll unit</i> → Select an item
Show or hide Navigation Bar <b>Default</b> On	<i>Display settings</i> → Under <i>Navigation bar, On</i> or <i>Off</i>
Change received message view <b>Default</b> Folder view	<i>Display settings</i> → <i>Received msg. view</i> → Select an item
Change sent message view <b>Default</b> Folder view	<i>Display settings</i> → <i>Sent msg. view</i> → Select an item
Set or cancel Auto Delete for received messages when Received memory is full <b>Default</b> On (Auto delete)	<i>Auto delete</i> → <i>Received msg.</i> → Select an item <i>On (Auto delete)</i> : Unprotected messages are automatically deleted oldest first to make room for new ones. If <i>Auto delete</i> is <i>Off</i> , memory full confirmation appears. Delete messages and retry. <i>Off</i> : Memory full confirmation appears. Delete messages and retry.
Set or cancel Auto Delete for sent messages when Sent memory is full <b>Default</b> On (Auto delete)	<i>Auto delete</i> → <i>Sent msg.</i> → Select an item <i>On (Auto delete)</i> : Unprotected messages are automatically deleted oldest first to make room for new ones. If <i>Auto delete</i> is <i>Off</i> , memory full confirmation appears. Delete messages and retry. <i>Off</i> : Memory full confirmation appears. Delete messages and retry.

## S! Mail

**Start Here**

Tap Messaging → *Settings* → *S! Mail settings*

Set message sending priority	<b>Default</b> Normal	<i>Sending options</i> → <i>Priority</i> → Select an item
Set sent message Mail Service Center expiry	<b>Default</b> Maximum	<i>Sending options</i> → <i>Expiry time</i> → Select an item ● When the expiry time has elapsed, S! Mails are automatically deleted from Mail Server.
Set time to send a message via Mail Service Center	<b>Default</b> Immediately	<i>Sending options</i> → <i>Delivery time</i> → Select an item ● When set time has elapsed, Mail Service Center sends S! Mail message.
Set S! Mail receiving options	<b>Default</b> Auto download	<i>Receiving options</i> → <i>Home auto settings</i> → Select an item <i>Auto download</i> : Mail Service Center sends complete S! Mail messages automatically <i>From number only</i> : Mail Service Center sends complete S! Mail sent to handset number <i>Manual retrieval</i> : Mail Service Center sends S! Mail Notice; retrieve complete message
Set S! Mail receiving options during roaming	<b>Default</b> Auto download	<i>Receiving options</i> → <i>Roaming auto settings</i> → Select an item <i>Auto download</i> : Mail Service Center sends complete S! Mail messages automatically <i>Manual retrieval</i> : Mail Service Center sends S! Mail Notice; retrieve complete message ● When you set <i>Auto download</i> , an entire message including any attachments will be automatically downloaded, resulting in high Packet Communication fees for your messaging overseas.
Insert or hide Signature	<b>Default</b> Off	<i>Signature</i> → <i>Auto insert</i> → Select an item
Edit Signature		<i>Signature</i> → <i>Signature texts</i> → Enter a signature
Set attached image appearance	<b>Default</b> Double-sized	<i>Picture appearance</i> → Select an item
Set attached image auto playback	<b>Default</b> On	<i>Auto play file</i> → Under <i>Picture</i> , <i>On</i> or <i>Off</i>
Set attached sound auto playback	<b>Default</b> Off	<i>Auto play file</i> → Under <i>Sound</i> , <i>On</i> or <i>Off</i>

## SMS

**Start Here**Tap Messaging → *Settings* → *SMS settings*

Set Mail Service Center message expiry time	<b>Default</b> None	<i>Expiry time</i> → Select an item ● Upon expiry Mail Service Center SMS messages are automatically deleted.
Set Message Center Number	<b>Default</b> Setting 1 +819066519300	<i>Message center</i> → Select an item
Change character code	<b>Default</b> Unicode	<i>Char-code</i> → Select an item

## Internet Settings

### Yahoo! Keitai

**Start Here**Tap Menu → Tap Y!Keitai → *Yahoo! Keitai browser settings*

Show or hide Navigation Bar in a page	<b>Default</b> On	Under <i>Navigation bar</i> , <i>On</i> or <i>Off</i>
Change page font size	<b>Default</b> Standard	<i>Font size</i> → Select an item
Set page scroll unit	<b>Default</b> Single line	<i>Scroll unit</i> → Select an item
Show or hide page images	<b>Default</b> On	<i>Downloads</i> → Under <i>Display image</i> , <i>On</i> or <i>Off</i> ● Set <i>Off</i> to help reduce download time.
Play or mute page sounds	<b>Default</b> On	<i>Downloads</i> → Under <i>Play sounds</i> , <i>On</i> or <i>Off</i> ● Set <i>Off</i> to help reduce download time.
Set Save Location for images in a page, etc	<b>Default</b> Phone	<i>Save to</i> → <i>Phone/Memory card/Ask each time</i> ● To save a file to Memory Card, insert Memory Card.
Delete cache/Cookie/certificates		<i>Memory manager</i> → Select an item → <i>Yes</i>
Show or hide Manufacture Number	<b>Default</b> On	<i>Security</i> → Under <i>Manufacture number</i> , <i>On</i> or <i>Off</i> ● <i>On</i> : Handset automatically sends Manufacture Number to websites upon request as user ID.
Send or hide Referer	<b>Default</b> Send	<i>Security</i> → <i>Send referer</i> → Select an item
Select Cookie setting	<b>Default</b> Enabled	<i>Security</i> → <i>Cookies</i> → Select an item
Select Script setting	<b>Default</b> Ask NW access	<i>Security</i> → <i>Script</i> → Select an item

Confirm Root Certificate		<i>Security</i> → <i>Root certificates</i> → Select a certificate
Set Certificate retention period	<b>Default</b> Per browsing	<i>Security</i> → <i>Certificate retention</i> → Select an item
Initialize Browser		<i>Initialized browser</i> → Enter Phone Password → Tap OK → <i>Yes</i>
Reset settings		<i>Reset settings</i> → Enter Phone Password → Tap OK → <i>Yes</i>

## PC Site Browser

**Start Here** Tap Menu → Tap Y!Keitai → *PC site browser* → *PC site browser settings*

Change page font size	<b>Default</b> Standard	<i>Font size</i> → Select an item
Show or hide page navigation when zooming	<b>Default</b> On	Under <i>Page navigation</i> , <i>On</i> or <i>Off</i>
Show or hide page images	<b>Default</b> On	<i>Downloads</i> → Under <i>Display image</i> , <i>On</i> or <i>Off</i> ● Set <i>Off</i> to help reduce download time.
Play or mute page sounds	<b>Default</b> On	<i>Downloads</i> → Under <i>Play sounds</i> , <i>On</i> or <i>Off</i> ● Set <i>Off</i> to help reduce download time.
Set Save Location for images in a page, etc	<b>Default</b> Phone	<i>Save to</i> → <i>Phone/Memory card/Ask each time</i> ● To save a file to Memory Card, insert Memory Card.
Delete cache/Cookie/certificates		<i>Memory manager</i> → Select an item → <i>Yes</i>
Show or hide Manufacture Number	<b>Default</b> On	<i>Security</i> → Under <i>Manufacture number</i> , <i>On</i> or <i>Off</i> ● <i>On</i> : Handset automatically sends Manufacture Number to websites upon request as user ID.
Send or hide Referer	<b>Default</b> Send	<i>Security</i> → <i>Send referer</i> → Select an item
Select Cookie setting	<b>Default</b> Enabled	<i>Security</i> → <i>Cookies</i> → Select an item
Select Script setting	<b>Default</b> On	<i>Security</i> → <i>Script</i> → Select an item
Confirm Root Certificate		<i>Security</i> → <i>Root certificates</i> → Select a certificate

Set Certificate retention period	<b>Default</b> Per browsing	<i>Security</i> → <i>Certificate retention</i> → Select an item
Show or hide warning	<b>Default</b> Activate PC Site Browser: On, Switch to Yahoo! Keitai: On	<i>Warning messages</i> → Under <i>Activate PC site browser</i> or <i>Switch to Yahoo! Keitai, On or Off</i> <ul style="list-style-type: none"> <li>• Show or hide PC Site Browser activation, or Yahoo! Keitai/PC Site Browser switching warning.</li> </ul>
Initialize Browser		<i>Initialized browser</i> → Enter Phone Password → Tap OK → <i>Yes</i>
Reset settings		<i>Reset settings</i> → Enter Phone Password → Tap OK → <i>Yes</i>

## Settings

### Digital TV Settings

#### TV Alarm

#### Start Here

Tap Menu → *TV* → *Settings* → *TV alarm*

Set Alarm	<b>Default</b> On	Under <i>Alarm, On or Off</i>
Set alert tone	<b>Default</b> Samsung Tune.mp4	<i>Alert tone</i> → Select a save location → Select a file <ul style="list-style-type: none"> <li>• Tap  to playback.</li> </ul>
Set volume	<b>Default</b> Level 3	Adjust Volume on Volume field
Set vibration	<b>Default</b> Off	<i>Vibration</i> → Select an item
Set notification light	<b>Default</b> On	Under <i>Light, On or Off</i>
Set reminder time	<b>Default</b> 1 minute before	<i>Reminder time</i> → Select an item
Set alarm duration	<b>Default</b> 10 seconds	<i>Duration</i> → Select an item
Set alarm sound or vibration in Manner mode	<b>Default</b> Alarm sound:Off, Vibration:On	<i>Manner mode setting</i> → Under <i>Alarm sound/Vibration, On or Off</i>

## Data Broadcast

**Start Here**

 Tap Menu → *TV* → *Settings* → *Set broadcast data*

Set recording type	<b>Default</b> Image+Text	<i>Set recording</i> → Select an item
Select save location	<b>Default</b> Phone	<i>Image location</i> → Select an item
Select connection notification type	<b>Default</b> Ask each time	<i>Notify connection</i> → Select an item
Show or hide Manufacture Number	<b>Default</b> Off	Under <i>Manufacture number</i> , <i>On</i> or <i>Off</i>
Delete station data		<i>Delete station data</i> →  → <i>Yes</i> <ul style="list-style-type: none"> <li>To delete all stations, tap <i>Delete all</i> → Enter Phone Password → Tap OK → <i>Yes</i></li> </ul>

## Display and Sound

**Start Here**

 Tap Menu → *TV* → *Settings*

Show or hide indicators in Landscape view	<b>Default</b> On	<i>Display</i> → Under <i>Display pict</i> , <i>On</i> or <i>Off</i>
Set whether to display 4:3 videos in Landscape view	<b>Default</b> Normal	<i>Display</i> → <i>Landscape style</i> → Select an item
Set whether to display 4:3 videos in Portrait view	<b>Default</b> Normal	<i>Display</i> → <i>Portrait style</i> → Select an item
Adjust Display brightness	<b>Default</b> Level 3	<i>Display</i> → Adjust brightness on setting field <ul style="list-style-type: none"> <li>This setting is only effective when the backlight brightness is set to <i>Manual</i>.</li> </ul>
Adjust sound quality	<b>Default</b> Normal	<i>Sound</i> → <i>Sound mode</i> → Select an item
Select language	<b>Default</b> Main	<i>Sound</i> → <i>Sound language</i> → Select an item
Select output device	<b>Default</b> Phone/Earphone	<i>Sound</i> → <i>Sound output</i> → Select an item

## Recording

Set Save Location	<b>Default</b> Memory card	Tap Menu → <i>TV</i> → <i>Settings</i> → <i>Save recording to</i> → Select an item
-------------------	----------------------------	--

## Incoming Calls & Alarms

Handle Incoming Calls & Alarms

**Default** Voice call/Video call: Call priority, Alarms: Alarm priority

Tap Menu → *TV* → *Settings* → *Calls & Alarms* → Select an item → Select action

- When *Call priority* or *Alarm priority* is set, TV window pauses temporarily and incoming call window or alarm window appears.
- When *Notice a call* or *Alarm notice* is set, a notification appears at top of Display and handset vibrates (TV reception continues). Press  to accept a call; press  to hold a call.

## Auto Power Off

End TV after set duration

**Default** Off

Tap Menu → *TV* → *Settings* → *Auto power off* → Select an item

 Settings

## Camera Settings

### Camera & Video

**Start Here**

  (2 + seconds)

Set Anti-Shake

**Default** Off

 →  → under *Anti-shake, On* or *Off*

- Anti-Shake is not available when Wide Dynamic Range is set to *On*.

Activate or cancel Auto Save

**Default** On

 →  → under *Auto save, On* or *Off*

- *On*: Images or video is automatically saved after capturing or recording.
- *Off*: Select save or cancel the image.

Set Contrast

**Default** 0

 →  → *Contrast* → Select an item

Set Saturation

**Default** 0

 →  → *Saturation* → Select an item

Set Sharpness

**Default** 0

 →  → *Sharpness* → Select an item

Adjusting Brightness

**Default** 0

 → Adjust brightness

Setting Shooting Size

**Default** Wallpaper 480x800

Tap the icon area located at the left side of Viewfinder → *Size* → Select an item

## Photo

Start Here

 (2 + seconds) → 

Select Quality	Default Normal	<i>Quality</i> → Select an item
Set ISO	Default Auto	<i>ISO</i> → Select an item
Set Exposure metering	Default Center-weight	<i>Exposure metering</i> → Select an item
Set Wide Dynamic Range	Default Off	Under <i>Wide dynamic range</i> , <i>On</i> or <i>Off</i> <ul style="list-style-type: none"> <li>Setting this to <i>On</i> automatically adjusts your photo taken in a backlight situation or environment where the brightness difference is extreme that would otherwise be too bright or too dark.</li> <li>Wide Dynamic Range is not available when Anti-Shake is set to <i>On</i>.</li> </ul>
Set save location when Memory Card is inserted	Default Phone	<i>Save to</i> → Select an item <ul style="list-style-type: none"> <li>When image size is set to <i>Mail</i> or <i>Wide S</i>, <i>Digital camera</i> is unselectable.</li> <li>This setting is active with Memory Card inserted.</li> <li>If Memory Card is not inserted, images are automatically saved to <i>Phone</i>.</li> </ul>
Show or hide Guideline	Default Off	Under <i>Guideline</i> , <i>On</i> or <i>Off</i>
Set Face Link Display	Default Off	Under <i>Face link display</i> , <i>On</i> or <i>Off</i> <ul style="list-style-type: none"> <li>When you set this <i>On</i>, after the face you captured is recognized, the name linked to Face Link appears.</li> </ul>
Set Shutter Sound	Default Pattern1	<i>Shutter sound</i> → Select an item

## Video

Start Here

 (2 + seconds) →  → *Video* → 

Select Quality	Default Normal	<i>Quality</i> → Select an item
Set save location	Default Phone	Under <i>Save to</i> , <i>Phone</i> or <i>Memory card</i> <ul style="list-style-type: none"> <li>To save a file to Memory Card, insert Memory Card.</li> </ul>
Show or hide Guideline	Default Off	Under <i>Guideline</i> , <i>On</i> or <i>Off</i>

## Media Player Settings

### Music

**Start Here**

Tap Menu → *Media Player* → *Settings* → *Music*

Set Repeat mode	<b>Default</b> All	<i>Repeat mode</i> → Select an item <ul style="list-style-type: none"> <li>Play a single track repeatedly, all music, or all files in playlist randomly repeatedly.</li> </ul>
Set Shuffle	<b>Default</b> Off	Under <i>Shuffle, On or Off</i>
Set Equalizer	<b>Default</b> Off	<i>Equalizer</i> → Select an item <ul style="list-style-type: none"> <li>Set <i>Equalizer</i> only when using Stereo Earphone Microphone or Bluetooth® -compatible stereo headphone.</li> </ul>
Set 3D sound	<b>Default</b> Off	Under <i>3D sound, On or Off</i> <ul style="list-style-type: none"> <li>Set <i>3D sound</i> only when using Stereo Earphone Microphone or Bluetooth® -compatible stereo headphone.</li> </ul>

### Movie

**Start Here**

Tap Menu → *Media Player* → *Settings* → *Movie*

Set Repeat mode	<b>Default</b> All	<i>Repeat mode</i> → Select an item <ul style="list-style-type: none"> <li>Play a single file repeatedly, all movies, or all files in playlist repeatedly.</li> </ul>
Set Shuffle	<b>Default</b> Off	Under <i>Shuffle, On or Off</i>
Set Backlight	<b>Default</b> Always On	<i>Backlight</i> → Select an item
Set Portrait style	<b>Default</b> 480×360	<i>Portrait style</i> → Select an item
Set Landscape style	<b>Default</b> Normal	<i>Landscape style</i> → Select an item
Show or hide movies thumbnails	<b>Default</b> On	Under <i>Thumbnail display, On or Off</i>
Access or ignore linked information	<b>Default</b> On	Under <i>Web link, On or Off</i> <ul style="list-style-type: none"> <li><b>On:</b> After playing a file with linked info, access confirmation appears.</li> </ul>

## Entertainment Setting

### S! Information Channel

Start Here

Tap Menu → *Entertainment* → *S! Information Channel/Weather*  
→ *Weather Indicator* → *Settings*

Set Weather Indicator update notification	Default On	Under <i>Weather notification</i> , <i>On</i> or <i>Off</i>
Set Weather Indicator automatic update	Default On	Under <i>Icon update</i> , <i>On</i> or <i>Off</i>

### S! Applications

Start Here

Tap Menu → *Entertainment* → *S! Appli* → *Settings*

Set S! Appli Volume	Default 3	Adjust volume on Volume field
Adjust Display Backlight setting	Default Normal settings	<i>Backlight</i> → <i>Always On</i> or <i>Always Off</i> or <i>Normal settings</i> <ul style="list-style-type: none"> <li>When <i>Normal settings</i> is set, settings of <i>Backlight</i> in <i>Display settings</i> is applied.</li> </ul>
Set S! Appli Vibration settings	Default On	Under <i>Vibration</i> , <i>On</i> or <i>Off</i>
Set operation of incoming call or alarm or S! Appli start request. <b>Default</b> Voice Call/Video Call: Call Priority, Alarms: Alarm Priority, S! Appli Start Request: Start notice		<i>Calls &amp; Alarms</i> → Select an item → Select action <ul style="list-style-type: none"> <li>When <i>Call Priority</i> or <i>Alarm priority</i> or <i>Start priority</i> is set, S! Appli pauses temporarily and incoming call, alarm or start request window appears.</li> <li>When <i>Notice a call</i>, <i>Alarm notice</i> or <i>Start notice</i> is set, Call, Alarm or Start request Notification appears in the top of Display. Press  to receive a call. Press  to hold a call.</li> <li>Even when <i>Notice a call</i> is set, if Answering machine is <i>On</i>, S! Appli pauses and Answering machine activates after the response time.</li> </ul>
Reset settings of S! Appli		<i>Set to default</i> → Enter Phone Password → Tap OK → <i>Yes</i>

## Security Settings

**Start Here** Tap Menu → *Settings* → *Security*

Activate or cancel Phone Lock	<b>Default</b> Off	Under <i>Phone lock, On or Off</i> → Enter Phone Password → Tap OK
Activate or cancel Password Lock	<b>Default</b> Off	<i>Password lock</i> → Select an item → Enter Phone Password → Tap OK
Change Phone Password	<b>Default</b> 9999	<i>Change password</i> → Enter current password → Tap OK → Enter new password → Tap OK → Enter new password again → Tap OK
Activate or cancel Facial recognition	<b>Default</b> Off	<i>Facial recognition</i> → Enter Phone Password → Tap OK → Under <i>On/Off, On or Off</i> → Enter Phone Password → Tap OK
Save Facial recognition User	<b>Default</b> Empty	<i>Facial recognition</i> → Enter Phone Password → Tap OK → <i>User registration</i> → <i>User 1</i> to <i>User 5</i> → Select image 1 to image 5 → Tap Start → Tap Save
Show or hide Guidance	<b>Default</b> Preview	<i>Facial recognition</i> → Enter Phone Password → Tap OK → <i>Guidance</i> → Select an item
Set Security Level	<b>Default</b> Normal	<i>Facial recognition</i> → Enter Phone Password → Tap OK → <i>Security level</i> → Select an item
Activate or cancel Function Lock	<b>Default</b> Unlock all	<i>Function lock</i> → Check an item to lock → Tap Save → Enter Phone Password → Tap OK
Activate or cancel Secret mode	<b>Default</b> Hide	<i>Secret mode</i> → Enter Phone Password → Tap OK → Select an item
Activate or cancel USIM Lock	<b>Default</b> Off	Under <i>USIM lock, On or Off</i> → Enter USIM password (4 to 8 digits) → Tap OK → Enter USIM password again as required → Tap OK
Activate or cancel PIN Certification	<b>Default</b> Off	Under <i>PIN certification, On or Off</i> → Enter PIN → Tap OK
Change PIN		<i>Change PIN</i> → Enter current PIN → Tap OK → Enter new PIN → Tap OK → Enter new PIN again → Tap OK
Change PIN2		<i>Change PIN2</i> → Enter current PIN2 → Tap OK → Enter new PIN2 → Tap OK → Enter new PIN2 again → Tap OK
Set IP service setting	<b>Default</b> Off	Under <i>IP service setting, On or Off</i> <ul style="list-style-type: none"> <li>Some functions are only available when you set IP service setting to <i>On</i>.</li> </ul>
Delete Phonebook entries, messages, etc.		<i>All reset</i> → Enter Phone Password → Tap OK → <i>Yes</i>
Restore Settings to default values		<i>Reset settings</i> → Enter Phone Password → Tap OK → <i>Yes</i>

## Memory Settings

**Start Here** Tap Menu → *Settings* → *Memory settings*

Check Memory Card details	<p><i>Memory card</i></p> <ul style="list-style-type: none"> <li>● Check Memory Card name, memory capacity, or remaining memory.</li> </ul>
Rename Memory Card	<p><i>Memory card</i> → <i>Name</i> → Enter name</p>
Format Memory Card	<p><i>Memory card</i> → Tap Format → Enter Phone Password → Tap OK → <i>Yes</i></p>
Backup Memory	<p><i>Memory card</i> → Tap Backup → <i>Yes</i> → Enter Phone Password → Tap OK → Select an item → <i>Yes</i></p>
Restore Memory	<p><i>Memory card</i> → Tap Restore → <i>Yes</i> → Enter Phone Password → Tap OK → Select an item → Select a file → <i>Add</i> or <i>Overwrite</i></p>
Confirm total or remaining Phone Memory	<p><i>Phone memory</i></p> <ul style="list-style-type: none"> <li>● View Phone memory capacity or remaining memory.</li> </ul>
Clear Phone Memory	<p><i>Phone memory</i> → Tap Clear → Check an item to clear → Tap Clear → Enter Phone Password → Tap OK → <i>Yes</i></p>
Set Default Memory to Phone or Memory Card	<p><i>Set default memory</i> → Select an item</p> <ul style="list-style-type: none"> <li>● With Memory Card inserted, select <i>Phone</i> or <i>Memory card</i>. Available when editing images, saving S! Mail attachments, downloading files, receiving data via Bluetooth®, etc.</li> <li>● Even when <i>Memory card</i> or <i>Ask each time</i> is selected with no Memory Card inserted, files are automatically saved to handset.</li> </ul>
View Memory status	<p><i>Memory status</i> → Select an item</p> <ul style="list-style-type: none"> <li>● To delete viewed memory, tap Delete (P.12-15 Deleting Registered/Saved Data).</li> </ul>

**Default** Phone

## Connectivity Settings

### Bluetooth®

Start Here

Tap Menu → *Settings* → *Connectivity* → *Bluetooth*

Activate or cancel Bluetooth® functions	Default Off	Tap On, Tap Off
Search for a new Bluetooth® device		<i>Search</i> → Device responds, drag it to  → Enter Authorization Code (4 to 16 digits) → Tap OK → Enter same code on device within 30 seconds
Transfer all Phonebook, Calender/Tasks or Bookmarks at once		Tap Transfer all → Drag device to connect to  → Enter Phone Password → Tap OK → Select an item
Edit handset name	Default 9315C	Tap More → <i>Settings</i> → Tap Bluetooth name → Edit name
Confirm handset device address		Tap More → <i>Settings</i> <ul style="list-style-type: none"> <li>Address appears on Bluetooth address field.</li> </ul>
Search/save from Bluetooth® devices	Default Show my phone	Tap More → <i>Settings</i> → <i>My phone's visibility</i> → Select an item <ul style="list-style-type: none"> <li>To search and save from other Bluetooth® devices, make handset visible.</li> </ul>
Set Secure mode	Default On	Tap More → <i>Settings</i> → Under <i>Secure mode</i> , <i>On</i> or <i>Off</i> <ul style="list-style-type: none"> <li>On: A confirmation appears before transfers.</li> </ul>
Adjust Handsfree setting	Default Handsfree mode	Tap More → <i>Settings</i> → <i>Handsfree</i> → Select an item <i>Private mode</i> : Use Microphone for handset calls or handsfree device for device calls. <i>Handsfree mode</i> : Talk via handsfree device.
Set Answering mode	Default Normal	Tap More → <i>Settings</i> → <i>Answering mode</i> → Select an item
Set Answer time	Default 4 seconds	Tap More → <i>Settings</i> → <i>Answer time</i> → Select an item <ul style="list-style-type: none"> <li>To set answer time, <i>select Automatic</i> in <i>Answering mode</i>.</li> </ul>
Activate or cancel S! Appli confirmation	Default On	Tap More → <i>Settings</i> → S! Appli request → <i>On</i> or <i>Off</i>
Confirm available Bluetooth® functions		Tap More → <i>Settings</i> → <i>Bluetooth services</i> → Select an item

**Infrared****Start Here** Tap Menu → *Settings* → *Connectivity* → *Infrared*

Activate or cancel Infrared transmission	<b>Default</b> Off	Under <i>On/Off, On</i> or <i>Off</i>
Transfer account details		<i>Transfer account details</i>
Transfer files		<i>Transfer files</i> → Select data folder → Select files → <i>Send</i>
Transfer all Phonebook, Calender/Tasks or Bookmarks at once		<i>Transfer all</i> → Enter Phone Password → Tap OK → Select an item → Enter Authorization Code (4 digits) → Tap OK <ul style="list-style-type: none"> <li>• For <i>Phonebook</i>, choose <i>Yes</i> to transfer images.</li> </ul>

**USB****Start Here** Tap Menu → *Settings* → *Connectivity* → *USB mode*

Activate Mass Storage		<i>Mass storage</i> → <i>Yes</i> → Enter Phone Password → Tap OK → Connect handset to PC via USB Cable → Exchange files with PC <ul style="list-style-type: none"> <li>• You need to connect handset and your PC before this operation.</li> </ul>
Activate Synch Mode to PC		<i>MTP synch mode</i> → <i>Yes</i> → Enter Phone Password → Tap OK → Exchange files with PC <ul style="list-style-type: none"> <li>• You need to connect handset and your PC before this operation.</li> </ul>

**Network****Start Here** Tap Menu → *Settings* → *Connectivity*

Retrieve Network Information manually		<i>Retrieve NW info</i> → <i>Yes</i> or <i>No</i>
---------------------------------------	--	---