

**S! Appli** ..... 11-2  
    Using S! Applications ..... 11-2  
**Additional Functions** ..... 11-3  
**Troubleshooting** ..... 11-5

# 11

## S! Applications



## Using S! Applications

Try out the preloaded S! Applications or download and use 931SH-compatible S! Applications, including games. Refer to the S! Application's help menu or the source Internet site, etc. for operational instructions.

### Remote Control

- Use **Familink Remote** S! Application (Japanese) to control a TV, VCR, etc. via infrared.

1 MENU or ● → S! Appli

2 S! Appli Library



S! Appli Library

3 Select application

### Network S! Applications

- A message appears indicating that Internet connection is required. Follow onscreen instructions.

### Incoming Calls

- Incoming calls automatically pause S! Application.

### Opening S! Appli Notification History

In ●, *Notification History*

## Exiting S! Applications

1



2 End

### Pausing S! Applications

In ●, *Suspend*

### Resuming S! Applications

MENU or ● → *Resume*

- Select **Cancel** to open Main Menu and keep the S! Application paused.
- Select **End** to end the S! Application.

## Advanced

- Downloading S! Applications
- Adjusting S! Application sound volume
- Canceling surround effect
- Setting handset responses to incoming transmissions
- Setting S! Application to activate in Standby
- Setting Permissions
- Opening properties (P.11-3)
- Moving S! Applications to Memory Card
- Changing S! Application settings
- Deleting S! Applications
- Restoring default S! Application settings
- Restoring default S! Appli Library
- Synchronizing Memory Card S! Applications with 931SH
- Opening Java™ license information (P.11-4)



S! Applications	
Downloading S! Applications	<b>MENU</b> or  → <b>S! Appli</b> → <b>S! Appli Library</b> → <b>Download</b> <ul style="list-style-type: none"> <li>Follow onscreen instructions.</li> </ul>
Adjusting S! Application sound volume	<b>MENU</b> or  → <b>S! Appli</b> → <b>Settings</b> → <b>Application Volume</b> → <b>Adjust level</b>
Canceling surround effect	<b>MENU</b> or  → <b>S! Appli</b> → <b>Settings</b> → <b>Surround</b> → <b>Off</b>
Setting handset responses to incoming transmissions	<small>(Start Here)</small> <b>MENU</b> or  → <b>S! Appli</b> → <b>Settings</b> → <b>Calls &amp; Alarms</b> → See below
	<b>Showing Calls</b> Select item → <b>Show Call Notice</b>
	<b>Pausing S! Application for Incoming Mail</b> <b>Incoming Message</b> → <b>Message Priority</b>
	<b>Showing Alarm Notice</b> <b>Alarm</b> → <b>Alarm Notice</b>
	<b>Showing Incoming S! Appli Notification</b> <b>Notification</b> → <b>Start Notice</b>

Setting S! Application to activate in Standby	<small>(Start Here)</small> <b>MENU</b> or  → <b>S! Appli</b> → See below
	<b>Activating Screensaver</b> <b>Settings</b> → <b>Screensaver</b> → <b>Switch On/Off</b> → <b>On</b>
	<b>Setting Screensaver</b> <b>S! Appli Library</b> → Highlight application → <b>Options</b> or  → <b>As Screensaver</b> <ul style="list-style-type: none"> <li><b>As Screensaver</b> appears for compatible S! Applications.</li> <li>Screensaver may not start or operate correctly when an external device (Headphones, etc.) is connected to handset.</li> </ul>
Setting Permissions	<b>Changing Screensaver Activation Time</b> <b>Settings</b> → <b>Screensaver</b> → <b>Activation Time</b> → Enter time → <b>Accept</b> or
	<b>Disabling Automatic Screensaver Restart</b> <b>Settings</b> → <b>Screensaver</b> → <b>Stop Auto Start</b> → <b>On</b>
Opening properties	<small>(Start Here)</small> <b>MENU</b> or  → <b>S! Appli</b> → <b>S! Appli Library</b> → Highlight application → <b>Options</b> or  → <b>Permission</b> → See below
	<b>Customizing Permissions for S! Appli Operations</b> Select item → Select option
	<b>Resetting Permission Settings</b> <b>Reset Settings</b> → <b>Yes</b>
	<b>MENU</b> or  → <b>S! Appli</b> → <b>S! Appli Library</b> → Highlight application → <b>Options</b> or  → <b>Details</b>



Moving S! Applications to Memory Card	<p><i>MENU</i> or  <i>S! Appli</i> <i>S! Appli Library</i>  Highlight application  <i>Multi Select</i> or  <i>Check</i> or  <i>Options</i> or  <i>Move to Card</i></p> <ul style="list-style-type: none"> <li>When an older version of the S! Application is saved, select <b>Yes</b> or <b>No</b>. Repeat application selection step as needed before pressing <i>Options</i> or .</li> <li>Some S! Applications cannot be moved to Memory Card.</li> </ul>
Changing S! Application settings	<p> <i>MENU</i> or  <i>S! Appli</i> <i>Settings</i> </p> <p><b>See below</b></p> <p><b>Activating Notification Setting</b> <i>Notification Setting</i> <i>On</i></p> <p><b>Setting Backlight Status</b> <i>Backlight</i> <i>Switch On/Off</i>  Select option</p> <ul style="list-style-type: none"> <li>Selecting <i>Normal Settings</i> applies Display Backlight setting.</li> </ul> <p><b>Disabling Backlight Flashing</b> <i>Backlight</i> <i>Blink</i> <i>Off</i></p> <p><b>Disabling Vibration</b> <i>Vibration</i> <i>Off</i></p>
Deleting S! Applications	<p><i>MENU</i> or  <i>S! Appli</i> <i>S! Appli Library</i>  Highlight application  <i>Options</i> or  <i>Delete</i> <i>Yes</i></p> <ul style="list-style-type: none"> <li>Handset Code may be required.</li> <li>Cancel Screensaver to delete Screensaver S! Application.</li> </ul>

Restoring default S! Application settings	<p><i>MENU</i> or  <i>S! Appli</i> <i>Settings</i> <i>Set to Default</i>  Enter Handset Code  <i>OK</i> or  <i>Yes</i></p>
Restoring default S! Appli Library	<p><i>MENU</i> or  <i>S! Appli</i> <i>Settings</i> <i>Memory All Clear</i>  Enter Handset Code  <i>OK</i> or  <i>Yes</i></p> <ul style="list-style-type: none"> <li>Delete IC Card data beforehand. (Procedures to delete IC Card data vary by Lifestyle-Appli; contact Osaifu-Keitai® service providers for details.)</li> <li>Memory All Clear deletes all downloaded S! Applications and Lifestyle-Applications; Near Chat access restriction will be canceled.</li> </ul>
Synchronizing Memory Card S! Applications with 931SH	<p><i>MENU</i> or  <i>S! Appli</i> <i>Settings</i> <i>Synchronization</i> <i>Yes</i></p>
Opening Java™ license information	<p><i>MENU</i> or  <i>S! Appli</i> <i>Information</i></p>



## S! Applications



### Cannot move S! Applications to Memory Card

- The S! Application may already be saved or Memory Card memory may be low.



### S! Applications do not pause for incoming transmissions despite *Calls & Alarms* settings

- Regardless of setting, a message appears for Screensaver S! Applications.

