

Handset Parts	1-2
Parts & Functions	1-2
Charging Battery	1-4
Power On/Off	1-6
Handset Power On/Off	1-6
Display & Indicators	1-7
Display	1-7
Indicators	1-9
Touch Panel	1-12
Using Touch Panel.....	1-12
Accessing Functions	1-14
Main Menu	1-15
Shortcuts Menu & Key Shortcut	1-18
Toggling Active Functions (Multi Job)	
.....	1-19
Standby Shortcuts	1-20
Using Simplified Menus (Simple Menu)	
.....	1-22
Viewer Position Setup.....	1-23


Keypad Lock	1-24
Activating/Canceling Keypad Lock	
.....	1-24
Motion Control	1-25
Mobile Manners	1-27
Security Codes	1-28
Basic Tools	1-29
My Details & Basic Tools	1-29
Double Number	1-30
Using Double Number	1-30
Modes.....	1-31
Additional Functions	1-33


1

Getting Started

1 Parts & Functions

Getting Started

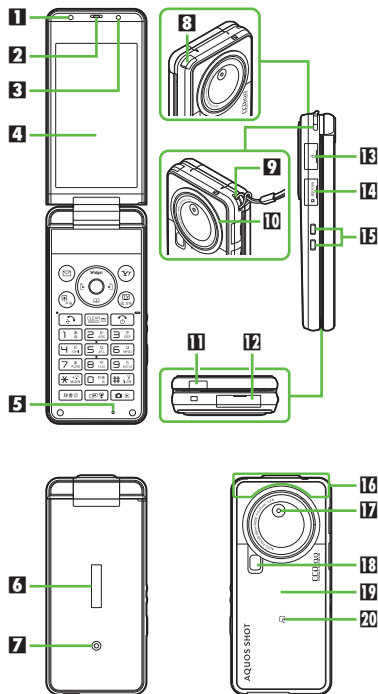

- 1 Light Sensor
- 2 Earpiece
- 3 Internal Camera
- 4 Display
- 5 Microphone
- 6 External Display
- 7 Small Light
- 8 Antenna (for TV reception)
- 9 Strap Eyelet
- 10 Speaker
- 11 Infrared Port
- 12 External Device Port (with Port Cover)
- 13 Headphone Port (with Port Cover)
- 14 Memory Card Slot (with Slot Cover)
- 15 Charging Terminals
- 16 Internal Antenna Location
- 17 External Camera (lens cover)
- 18 Mobile Light
- 19 Battery Cover
- 20  Logo

- Do not cover or place stickers, etc. over Light Sensor or Internal Antenna area.
- Replace Port/Slot Cover after Port/Slot use.
- Avoid metallic straps; Antenna sensitivity may be affected.

Display Positions

Clamshell Closed



Keep handset closed when not in use.


Clamshell Open



Open handset to place or answer calls, navigate with handset keys, etc.

Viewer Position


Handset is closed with Display facing outward.

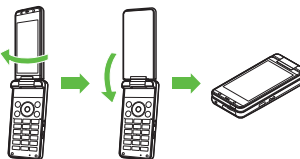

Do not carry handset with Display in Viewer position. Display may be damaged.

Handset Keys

- Keys are indicated in this guide as shown.
- Change functions with \wedge via Set Key Shortcut as needed.

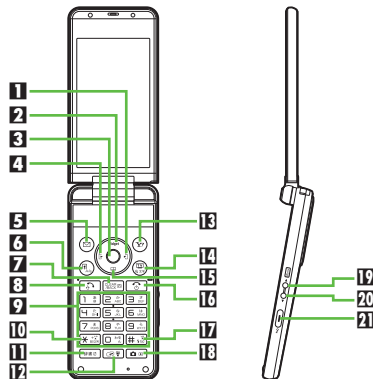**1 Multi Selector (right)** \odot

Open Received Calls. Long Press to activate/cancel Infrared[®].

2 Multi Selector (up) \odot

Open Mobile Widget window. Long Press to open PC Site Browser menu^{*}.

3 Center Key \odot

Open Main Menu.

4 Multi Selector (left) \odot

Open Dialed Numbers. Long Press to activate/cancel Bluetooth[®].

5 Mail Key \odot

Open Messaging menu. Long Press to open S! Mail Composition window^{*}.

6 Shortcuts & A/a Key \odot

Open Shortcuts menu. Long Press to show active indicators (Status Icon List).

7 Clear/Back Key \odot

Play Answer Phone messages. Long Press to activate/cancel Answer Phone.

8 Start Key \odot

Open All Calls. Long Press to open Double Number Mode menu.

9 Keypad \odot - \odot

Enter numbers to place calls or access functions (Quick Operations). Long Press to open Phone Book.

10 * Key \odot

Enter *, +, P, ? and -. Long Press to open S! Friend's Status member list.

11 Dictionary Key \odot

Open Dictionary. Long Press to activate/cancel VeilView.

12 Multi Job & Manner Key \odot

Select handset mode. Long Press to activate/cancel Manner mode.

13 Yahoo! Keitai Key \odot

Open Yahoo! Keitai portal. Long Press to activate Familink Remote^{*}.

14 TV & Text Key \odot

Activate TV. Long Press to open Change Menu window.

15 Multi Selector (down) \odot

Open Phone Book. Long Press to create new Phone Book entries^{*}.

16 Power On/Off Key \odot

Toggle Standby display. Long Press to turn handset power off.

17 # Key \odot

Enter #. Long Press to activate/cancel Manner mode.

18 Camera Key \odot

Activate mobile camera. Long press to activate Review.

Side Keys

19 Volume Up Key \odot

Closed: Scroll External Display indicators, etc. Long Press to activate/cancel Manner mode.

Open: Long Press to activate Hand Mirror. **Viewer:** Long Press to activate Hand Mirror.

20 Volume Down Key \odot

Closed: Scroll External Display indicators, etc. Long Press to check e-money balance. **Open:** Show/hide Softkeys.

Viewer: Show/hide Softkeys. Long Press to check e-money balance.

21 Keypad Lock & Camera Key \odot

Closed: Toggle Clock view. Long Press to illuminate Mobile Light.

Open: Long Press to activate mobile camera. **Viewer:** Activate/cancel Keypad Lock.

Long Press to activate mobile camera.

Multi Selector & Side Keys

- In this guide, Multi Selector and Side Key operations are indicated as follows:

Press \odot or \odot	\odot
Press \odot or \odot	\odot
Press \odot , \odot , \odot or \odot	\odot
Press \odot or \odot	\odot

Charging Battery

Battery must be inserted in handset to charge it.


Charging Battery Overseas

- SoftBank is not liable for problems resulting from charging battery abroad.

AC Charger

Use specified AC Charger **ZTDAA1** (sold separately).


- In this guide, ZTDAA1 is referred to as "AC Charger."
- Handset and AC Charger may warm during charging.

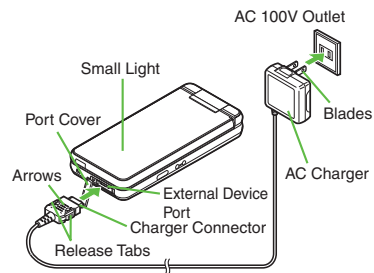

Important AC Charger Usage Note

- Fold back blades after charging. Do not pull, bend or twist the cord.

 
1 Open Port Cover as shown



2 Connect AC Charger


- With arrows up, insert connector until it clicks.

 3 Extend blades and plug AC Charger into AC outlet



- Small Light illuminates red while charging.
- Small Light goes out when battery is full.

 4 Unplug AC Charger



- Pull AC Charger straight out.

5 Disconnect handset

- Squeeze release tabs to remove connector.

6 Fold back blades and replace Port Cover

When Small Light Flashes

- Battery is unchargeable; may be defective or simply at the end of its life; replace it.

USB Charge

Connect handset (with power on) to PC via USB Cable to charge battery.


- Download and install USB Cable driver beforehand.
- Handset must be on to charge battery.
- Battery may not charge if handset is connected through a USB hub.

In-Car Charger

In-Car Charger may be purchased separately.

Important In-Car Charger Usage Notes

- Disconnect Charger before leaving vehicle to prevent charging with engine off.
- Do not use In-Car Charger with Desktop Holder.
- Avoid charging battery inside extremely hot vehicles.

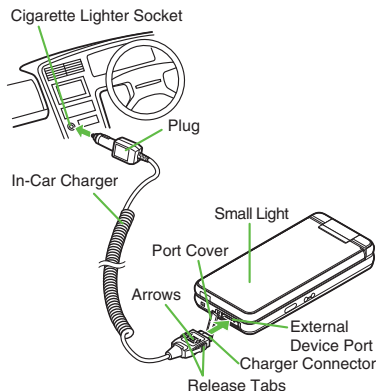

1 Open Port Cover

2 Connect In-Car Charger

- With arrows up, insert connector until it clicks.

3 Plug Charger into cigarette lighter socket

4 Start car engine

- Small Light illuminates red while charging.
- Small Light goes out when battery is full.

5 Unplug Charger

6 Disconnect handset

- Squeeze release tabs to remove connector.

7 Replace Port Cover

Advanced

- Disabling USB Charge (P.1-33)

Handset Power On/Off


Power On

Follow these steps when powering on 933SH for the first time:

1 (Long)

- After Power On Graphic, follow the steps below.

→ → → → → → **設定**
 → → **Language** → → **English**
 → → (Long) → (Long) → Change Menu window opens

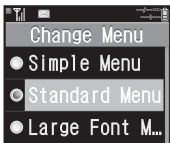

2 Select option →

Guide descriptions are based on Standard Menu.

- My Details setup starts.

3 Enter last name →

Enter first name →

- Change Menu display option confirmation appears.

4 Yes or No →



Standby

- Choose **No** to enter Standby immediately after powering on.

When USIM Card is Not Installed

- **Insert USIM Card** appears; insert the card to use handset.

Retrieving Network Information

Handset initiates Network Information retrieval when , , or is pressed for the first time.



Follow these steps to retrieve Network Information to use Network-related services and TV; retrieval automatically sets Clock:

1 Yes →

2


Power Off

1 (Long)

- After Power Off Graphic, handset shuts down.

Display

Standby

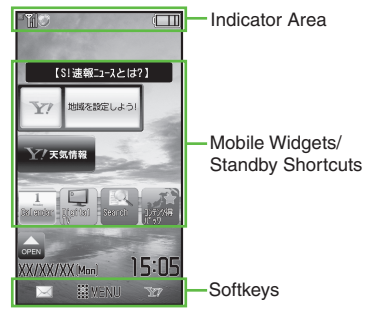


Hereafter, most screenshots omit Mobile Widgets and Standby Shortcuts.

Indicator Descriptions

Check active indicators and their descriptions. (Status Icon List)

1 (Long)

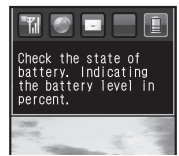

- Alternatively, tap indicator area.
- Active indicators are enlarged; description for selected indicator appears.
- Use to select indicators to view their descriptions.
- Press to open menu/window (e.g., Battery Meter window from battery strength indicator). May be unavailable for some indicators.

Information

Information window opens at the bottom for Missed Calls, new mail, etc.






Information Window

Information label (e.g., **Message**, etc.) and count appear in Information window. Select an item and press to open it.

Advanced

- Handling Information list (P.1-33)

Softkeys

Functions/operations assigned to ,  and  appear at the bottom of Display in portrait orientation with clamshell open.



Using Touch Panel

In clamshell open (landscape) or Viewer position, Softkeys (shown right) appear. Tap a Softkey to execute assigned function/operation. Some key assignments may vary with Display position/window content.

Portrait Orientation




 
Landscape Orientation



Display Saving

Display goes dark after Display Saving time elapses. Press any key to activate it.

Backlight


- Backlight turns off after Time Out time elapses. Press  -  to illuminate it (key press may affect active function).

Display Rotation

Sensor detects handset movement. In Viewer position, Display orientation changes with handset orientation. Display orientation for clamshell open is fixed by default; set to rotate as needed.






Advanced


-  Changing Display rotation method (P.1-34)







Indicators

Display Indicators

,  and  indicate line type in Dual Mode (P.1-30).

Basic Status

 







 





1		Within 3G range
		Within GSM range
		International roaming in progress
2		Signal strength ¹
3		Packet transmission available
4		Battery strength ²

¹The more bars the better.

 
²Battery strength % (appears when Display activates, etc.) is an approximation.













Function Status




1		Active S! Application
		Paused S! Application
		Music playback in progress
		TV recording in progress (handset)
		TV recording in progress (Memory Card)
2		Memory Card in use
		Memory Card formatting
3		TV Timer/TV Recording Timer set
3		Compass Indicator
4		Music playback in progress (via Bluetooth®)
5		Multiple functions (Multi Job) active




Notifications




1		Unread mail
		Unread Delivery Report
2		Answer Phone active & message recorded
		Answer Phone canceled & message recorded
3		New Voicemail
4		Missed Call or new mail on idle line
5		S! Appli/Mobile Widget Notification
6		Contents Key received
7		Unread S! Information Channel info
		Software Update result
		Unread S! Quick News info
8		Unread S! Friend's Status notification or unanswered registration request

Warnings




1		Mail memory low
2		Message delivery failure
3		Memory Card unusable/misinserted

 Transmissions


1		SSL browsing in progress ¹
		Waiting packet transmission
2		Receiving mail
		Sending mail
3		S! Friend's Status online
		Positioning in progress ²
4		Software Update in progress
		USB Cable connected
		USB transmission in progress
		Infrared transmission in progress
		Infrared file transfer in progress
		Bluetooth [®] transmission ready
5		Bluetooth [®] transmission in progress (appears for multiple connections)
		Bluetooth [®] talk in progress
		IC Transmission in progress
		S! Addressbook Back-up transmission in progress
		PC Site Browser in use
6		RSS-compatible site
7		Weather Indicator
8		Infrared transmission ready

¹Hidden while Mobile Widget is in use.

²Flashes while positioning.

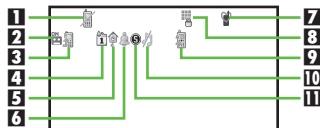Settings


1		Offline Mode active
2		Answer Phone active
3		Call Forwarding or Voicemail active (forwarding condition: Always) [*]
4		Schedule/Task (Alarm set)
		Schedule/Task (Alarm unset)
5		Hour Minder active
6		Alarm set
		Wakeup TV set
		Manner mode active
		Drive mode active
7		Original mode active
		VeilView active
8		Keypad Lock active
		IC Card Lock active
9		Auto Answer or Remote Monitor active
		Ringtone (Silent)
10		Ringtone (Increasing Volume)
		Vibration active
11		Show Secret Data active
		Function Lock active

^{*}Indicator does not appear when Call Forwarding is set to Video Calls only, with Voicemail unset.

External Display Indicators

Basic Status

1 2



1		Signal strength*
2		Battery strength

*The more bars the better.

Notifications

1 2 3 4 5 6 7 8 9 10 11



1		Missed Calls
2		Answer Phone message recorded
3		Missed Call Notification
4		New Voicemail
5		Unread mail
6		Unread Delivery Report
7		Contents Key received
8		Unread S! Information Channel info
9		Weather Indicator update
10		Location Info request
11		Pedometer target achieved

Warnings

1 2 3 4 5



1		Message delivery failure
2		S! Information Channel info reception failure
3		Decorative Call transmission failure
4		IP Service connection failure
5		Weather Indicator update failure

Handset Status

1 2 3 4 5 6 7



1		Alarm
2		Schedule Alarm
3		Task Alarm
4		S! Appli/Mobile Widget Notification
5		Unread S! Friend's Status notification
6		TV Alarm (watch)
7		TV Alarm (record)

External Display Date & Time

- Press to toggle Clock view.

Using Touch Panel

Touch Display to select menu items, move pointer, scroll pages, etc.

Available in clamshell open or Viewer position (regardless of orientation).



Advanced

- Adjusting Touch vibration (P.1-33)

Selection & Execution

■ Tap



Tap Display to open windows or execute Softkey functions/operations.

- Tap twice to execute certain operations.

Special Operations (Double Tap)

Tap twice in rapid succession (within approximately 0.6 seconds) to switch window size while Multi Job is active, to enlarge/reduce images, etc.

■ Long Touch



Touch and hold Display to execute certain functions/operations.

Long Touch Operations

Softkeys

Alternative functions/operations may be available.

Standby & Function Windows

 
Long Touch Display to open function/operation menu.

Internet Pages & Post-Image Capture Windows

Enlarge specific areas.

Text Entry Windows


Long Touch onscreen hiragana key to open list of hiragana in that row with ^ˆ or ^ˆ, etc.

Move/Draw (Drag)

Touch and drag target item to move it; release your finger to stop/save. Move icons, scroll lists, etc.

Screen Scroll (Swipe)

To see items outside Display area, swipe a finger across Display in opposite direction.

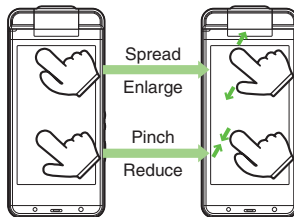Enlarge/Reduce (Spread/Pinch)

Pinch or spread your fingers to reduce or enlarge images, etc.

Important Usage Notes

- Touch Panel may not respond in these situations:
 - Use with gloved fingers/fingernails
 - Use of pens, pencils or other sharp objects
 - Use with objects placed on/against Display
- To prevent malfunctions, do not:
 - Touch Display with wet fingers
 - Subject Display to force/pressure
 - Place labels or stickers over Display
- Calibrate Touch Panel (P.1-17) to improve response.

1 Accessing Functions


Use the following methods as needed.

Main Menu



Repeat menu item selection.

Quick Operations

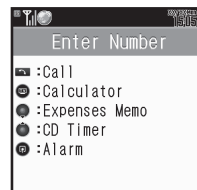


Enter numbers to access functions.
To activate functions, press the corresponding key.

Select menu items

Enter numbers

Use shortcuts

Shortcuts

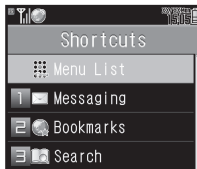


Access assigned functions (changeable).

Standby Shortcuts



Save functions to Standby.


Quick Shortcut

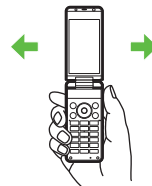

Shake handset to access assigned functions. (Complete setup beforehand.)

Main Menu

Opening Main Menu

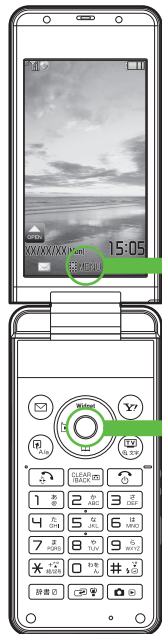

■ Touch Panel



■ Handset Key



Window Description



— Main Menu Items

Messaging	Open/create messages, etc.
Yahoo! Keitai	Browse the Internet
S! Appli	Use S! Applications including games
TV	Watch/record TV programs
Camera	Capture images or record video
Entertainment	Read e-Books, receive news updates, etc.
Tools	Manage schedules, set Alarm, scan QR Codes, etc.
Data Folder	Open files saved on handset/Memory Card
Media Player	Play/download media files
Communication	Communicate with other users in various ways
Phone	Search contacts, add entries, etc.
Settings	Customize handset interface, sounds, etc.

Follow these steps to open **World Clock** via handset keys or Touch Panel:
(Touch Panel navigation screenshots are based on Viewer position.)

Menu Navigation (Handset Keys)

Press **○** in Standby




Open Main Menu

Use **○** to highlight **Tools**



Select Item

Use **○** to select **Clock/Gauge tab**

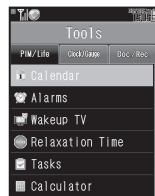


Open Tab

Use **○** to select **World Clock**



Select Item

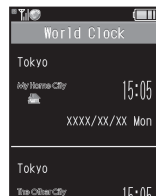

Menu Navigation (Touch Panel)


Tap MENU in Standby





Tap Tools



Tap Clock/Gauge tab

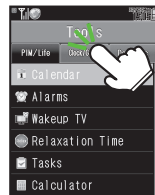

Tap World Clock

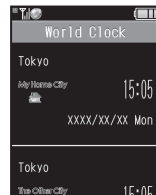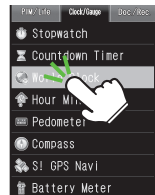

Escape/Return (Handset Keys)

Press Press 
(Standby returns)Navigate
BackReturn to
Standby

Tap CLEAR/BACK






Tap 


Standby returns

Escape/Return (Touch Panel)

Calibrating Touch Panel


Calibrate Touch Panel to improve response.
Hold handset normally during calibration.

- 1   **Settings** 
- 2 In Phone menu, **Touch Panel** 
- 3 **Correct Touch Panel** 

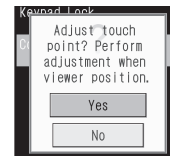

- 4 **Yes** 
 - Follow onscreen instructions.

 Undo Calibration

- If calibration does not improve response, follow these steps to restore default setting:
After 4, 


1 Shortcuts Menu & Key Shortcut

Getting Started

Shortcuts Menu

Access assigned functions via Shortcuts menu.

1

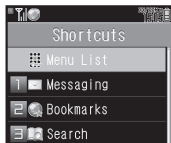

Shortcuts Menu

2

- Menu/window opens.

Changing Default Shortcuts

In 2, select numbered function **Assign Function** **Select menu item** **Select new item**

- To assign menu items, select one and press .

Assigning Files & Folders

In 2, select numbered function **Assign Data** **Select file/folder**

- For folders, select **Set this folder** and press .

Advanced

- Changing item order
- Restoring default shortcuts (P.1-33)

Key Shortcut

In Standby, Long Press , or to access assigned functions.

	Open S! Mail Composition window
	Activate Familink Remote
	Open PC Site Browser menu
	Create new Phone Book entries
	Activate/cancel Bluetooth®
	Activate/cancel Infrared

Changing Assigned Functions

Follow these steps to assign Calculator to .

1 **Settings**

2 In Phone menu, **Set Key Shortcut**



Key Shortcut Menu

3 **Long press**



4 **From Appli**

5 **Tools** In PIM/Life menu, **Calculator**

Bookmark

In 4, **From Bookmark**

Select title

Bluetooth® or Infrared On/Off

In 4, **From Other** **Select item**

Canceling Assigned Function


In 4, **Off**


Toggle Active Functions (Multi Job)

Multi Job Feature

Access a function in Shortcuts menu while another is active.

While browsing the Internet

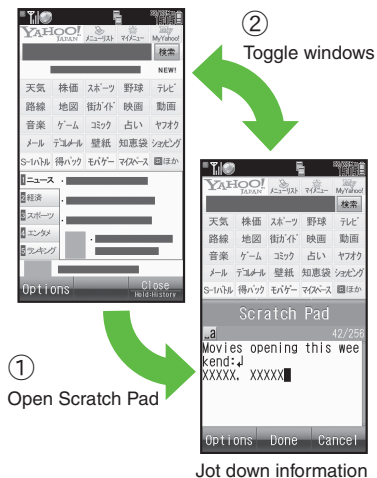


Multi Job may not activate from some menus/windows (e.g., ringtone/ringvideo selection, etc.). Multi Job is disabled while  (gold) appears.

Using Multi Job


- 1 In a function window,** .
In text entry/dial windows, Long Press .





- 2 Select function** 

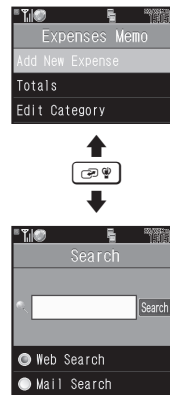

- 3 To toggle active windows,** 



- 4**   **Multi Job ends**
 - If a confirmation appears, follow onscreen prompts.

Standby Shortcuts

Paste shortcuts to functions, files, folders, etc. to Standby for easy access.



Shortcuts

Saving Shortcuts to Standby

- 1
- 2 Use to select (OPEN)
➔



- 3



- 4 Select item ➔
 - Corresponding icon appears in Standby.
 - >> appears when more items are available.
- 5 Use to specify target location ➔

Using Touch Panel

- Tap (OPEN) ➔ Tap ➔ Drag icon to Standby ➔ Tap (CLOSE)
- If (OPEN) does not appear, press (tap in Viewer position).

Saving from Menu/Window

- In Options menu, select **Set as StbyShortcut** (may not appear for some items); select sheet as needed.

Moving Icons with Touch Panel

- After 1, Long Touch Display ➔ **Move Mode** ➔ Drag icon ➔ **Confirm Using Pointer**
- After 1, Long Press to activate pointer navigation; select widgets, etc.
 - To cancel pointer navigation, Long Press .

Advanced

- Sorting icons
- Moving icons
- Moving icons to front/back (P.1-33)

Using Shortcuts

- 1** **Use to select icon**
- Menu/window opens or command is executed.


Using Touch Panel**Tap icon**

- If no icon appears, press (tap (Widget On) in Viewer position).

Removing Shortcuts from Standby

- 1** **Use to select icon**

- 2** **Operation**

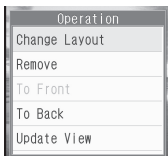


- 3** **Remove**

- 4** **Yes**

Toggling Sheets

Toggle sheets to use Standby Shortcuts and widgets pasted on each sheet.

 - 1**



- To toggle further, press or .
- Sheet name appears at the top, then disappears.
- Save Standby Shortcuts as needed; corresponding icons appear on the current sheet.

Using Touch Panel**Drag finger left or right**

- If no icon appears, press (tap (Widget On) in Viewer position).

Using Locked Sheets

Select **Enter**

Handset Code

- Alternatively, tap then enter Handset Code and tap **OK**.

Advanced

- Removing icons at once by sheet Editing sheet names Locking sheets (P.1-33 - 1-34)

1 Using Simplified Menu (Simple Menu)

Getting Started

Simple Menu Features

Activate Simple Menu to reduce available handset functions and simplify menus.



- Fonts are enlarged and appear in bold.
- Clock is enlarged (Calendar is hidden).


Menu Items

Messaging	Received Msg., Create Msg., Drafts, Templates, Sent Messages, Unsent Msg., Create SMS
Phone	Phone Book, Add New Entry, Play Messages, Answer Phone, Call VM, My Details, Speed Dial/Mail
Camera	Photo Camera, Video Camera, Hand Mirror, Scan Barcode, Scan Card, Kanji Grabber, Scan Text, Review, Photo Settings, Video Settings, SetCameraKey
Convenient Tool	Calendar, Alarms, Calculator, Assignment, Dictionary, Notepad, S! GPS Navi, Pedometer, Compass, S! Friend's Status, S! Circle Talk, Double Number, Change Menu
Data Folder	-
TV	-

Key assignments are largely the same as those in Standard Menu.

Activating Simple Menu

 1 (Long)



2 Simple Menu →

While Using an Incompatible Function

- End the function before activating Simple Menu.

Canceling Simple Menu

(Long) → Standard Menu →


Viewer Position Setup

Set handset to automatically execute one of these actions upon rotating Display to Viewer position:

Take Picture	Activate mobile camera
Activate Digital TV	Activate TV
Show Main Menu	Open Main Menu
Launch Appli	Access assigned function
Connect Bookmark	Access saved URL
Off(Standby)	Keep Standby

Upon first rotation, setup menu opens.

1 Rotate Display (first time)

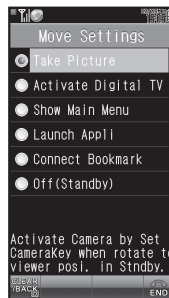

Viewer Position Menu

2 Select item → ●

- Setting is applied and Viewer position setup option confirmation appears.

3 Yes or No → ●

- Selection appears.

Launch Appli or Connect Bookmark

- Handset accesses the assigned function or URL; change function/URL as needed.

From Standby

- → **Settings** → ● → **In Phone menu, Viewer Position** → ● → **Move Settings** → ● → **Select item** → ●

Advanced

- Changing function assigned to Launch Appli in Move Settings
- Changing URL assigned to Connect Bookmark in Move Settings (P.1-34)

1 Activating/Canceling Keypad Lock

Getting Started

Activating

Prevent accidental operation/function activation in Viewer position.

1 In Viewer position,

- Display goes dark and Keypad Lock activates.

When Keypad Lock is Active

- Handset keys and Touch Panel are locked.

Canceling

Open handset (clamshell open). To cancel Keypad Lock in Viewer position, follow these steps:

1

- Display activates.

2

- Keypad Lock deactivates.
- Alternatively, swipe down on ▼
Unlock.

Automatic Keypad Lock (Viewer Position)

- In Viewer position, Display goes dark and Keypad Lock activates after a period of inactivity; follow the steps above to cancel it.

Advanced


-   Canceling Keypad Lock upon Display activation
-  Changing Keypad Lock cancellation method (P.1-33)

Motion Control

Sensor detects handset orientation or movement. Move handset to navigate pages, access functions, etc.

- Cancel Keypad Lock and activate Display first. (Not necessary for activating Quick Silent.)
- Adjust Motion Control sensor (**P.1-35**) before using Motion Control for the first time.
- Activate Motion Control by function beforehand.

Turn Over

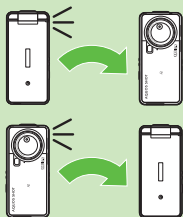

Activate Quick Silent

Turn handset over to instantly mute ringer and stop vibration.

Ringer

Incoming Calls,
Alarms, etc.

Vibration

Incoming Calls,
Alarms, etc.

- Some tones may not be silenced.

Open Quick Shortcut

Shake handset left and right approximately three times in Standby to access assigned functions.

- Change assigned functions as needed.


Activate Camera

Portrait
Orientation

Activate TV

Landscape
Orientation

Shake Left/Right

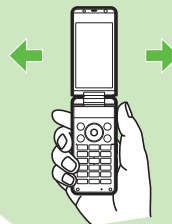

Navigate Functions

Shake to the left to navigate back, or right to navigate forward.

Music

Music Player

Channels

TV

Images

Data Folder
(Pictures)

Pages

Document
Viewer


Multi Job

Shake to the left or right to toggle active windows.

Toggle Windows

Multi Job

Shake Forward or Backward

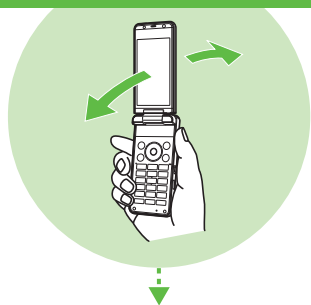

Zoom In/Zoom Out

Shake forward to enlarge, or backward to reduce.

Fonts

Yahoo! Keitai
Message Window

Zoom Image

Data Folder
(Pictures)


Zoom Page

PC Site Browser
Document Viewer

Toggling Motion Control On/Off

1 → Settings →

2 In Phone menu, *Motion Control* →

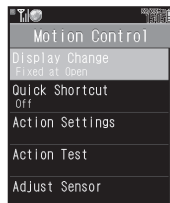

Motion Control Menu

3 *Action Settings* →

4 Select function →

5 On or Off →

Enabling Quick Shortcut

1 In Motion Control menu, *Quick Shortcut* →

2 *Switch On/Off* →

3 *On* →

Activating Show Secret Data Temporarily
Enter Handset Code → Shake handset left or right

- Close handset (clamshell closed) in Standby to cancel Show Secret Data.

Important Motion Control Usage Notes

- Hold/shake handset correctly to avoid unintended results.
- Motion Control may be unavailable while handset is ringing/vibrating.
- Confirm there is ample space for Motion Control use; hold handset firmly and shake it gently to avoid injury/breakage. Do not shake handset roughly; handset may slip, resulting in injury or damage.

Advanced

- Changing Quick Shortcut items
- Deleting Quick Shortcut items
- Restoring default Quick Shortcut items
- Practicing Motion Control actions
- Adjusting Motion Control sensor (P.1-34 - 1-35)

Mobile Manners

Please use your handset responsibly. Use these basic tips as a guide. Inappropriate handset use can be both dangerous and bothersome. Please take care not to disturb others when using your handset. Adjust handset use according to your surroundings.

- Turn it off in theaters, museums and other places where silence is the norm.
- Refrain from using it in restaurants, hotel lobbies, elevators, etc.
- Observe signs and instructions regarding handset use aboard trains, etc.
- Refrain from use that interrupts the flow of pedestrian or vehicle traffic.

Manner Mode

Mutes most handset function sounds.

1 (Long)

 


- Manner mode is set.

When Manner Mode is Active

- Ringtones and other sounds are muted.
- 933SH vibrates for transmissions/alerts.
- Shutter click still sounds at fixed volume.

Canceling Manner Mode

 (Long)


Offline Mode

Temporarily suspends all transmissions.

1 **Settings** **Network**



2 **Offline Mode**

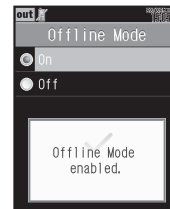3 **On**



- Offline Mode is set.

Canceling Offline Mode

In  **Off** 

Advanced

-   Changing handset modes  Creating a custom mode  Resetting Mode Settings (P.1-35)

Security Codes

These codes are required for handset use.

- Write down Security Codes.
- Do not reveal Security Codes. SoftBank is not liable for misuse or damages.

Handset Code	9999 by default; use or change some functions
Center Access Code	4-digit code selected at contract; access Optional Services via landlines or change contract details
Network Password*	4-digit code selected at contract; restrict incoming/outgoing calls (Call Barring)

*Change as needed.

 
Incorrect Code Entry

- **Handset code is incorrect!** appears; try again.
- If Network Password is incorrectly entered three times consecutively, Call Barring settings are locked. To resolve, Network Password and Center Access Code must be changed.

Changing Handset Code


Enter four to eight digits for new Handset Code.

1 → **Settings** →



Phone Menu

2 **Locks** →

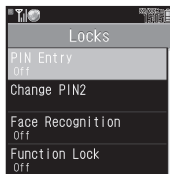

3 **Chg. Handset Code** →



4 **Enter current Handset Code** →



5 **Enter new Handset Code** →



6 **Re-enter new Handset Code** →

My Details & Basic Tools

My Number



- Handset phone number and the name entered at initial setup appear.

Editing My Details

After 1, (select tab) → Select item → → Select item → → Edit → →

VeilView

Activate VeilView to prevent peeking.



Canceling VeilView

(Long)

Hand Mirror

Use Internal Camera to transform Display into a compact mirror.
Image capture/recording is not available.



- Mobile camera activates and Internal Camera image appears.



Pen Light



- Mobile Light illuminates.



Important Pen Light Usage Note

- Do not point Pen Light at people or look at it directly.

Battery Meter



Clock/Gauge



- Approximate battery strength appears.

Changing Battery Strength Indicator Pattern

After 2, → Select pattern →

Battery Strength %

- 100% may not appear even when battery is full. This is by design; not a malfunction.

Phone Help



Doc./Rec.



- For *Indicators*, select category and press .

Advanced


- Clearing My Details Toggling My Details in Dual Mode Changing battery strength indicator pattern Changing VeilView pattern/density (P.1-35)

Using Double Number

Manage two accounts (Line A and Line B, with separate phone numbers and mail addresses) on one handset.

- Double Number requires a separate contract and basic monthly fee.
- While abroad, any Line B messaging charges are applied to Line A.
- For more information, contact SoftBank Mobile Customer Center, General Information (P.15-42).

Two Phone Numbers & Two Mail Addresses

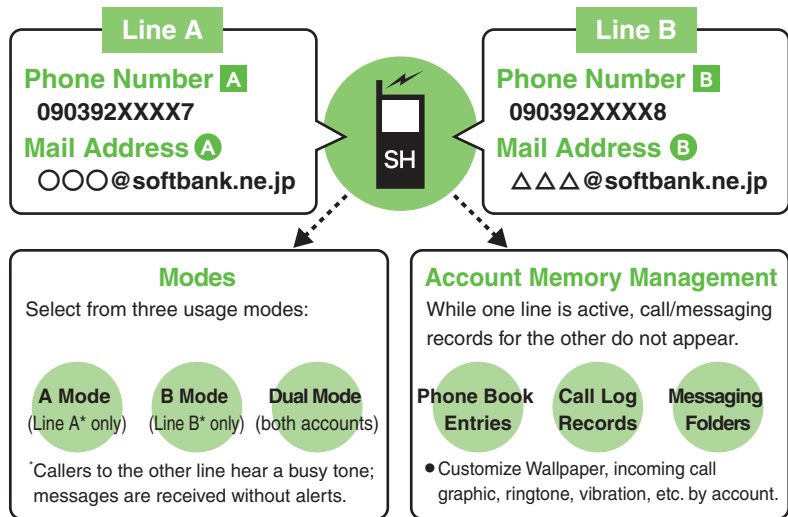

Activating Double Number

Make sure signal is stable.

- 1 → **Settings** →
- 2 In Phone menu, **Double Number** →
- 3 **Switch On/Off** →
- 4 **On** →
- 5 **Enter Handset Code** → → **Yes** →

Canceling Double Number

In , **Off** → →

- When Double Number is canceled:
 - Line B calls and SMS messages are redirected to Line A Phone Number.
 - Initial portion of Line B S! Mail is redirected to Line A. (Full messages are irretrievable.)
 - Double Number account is not affected.

Modes

Activate **A Mode** to use Line A only, **B Mode** to use Line B only, or **Dual Mode** to use both accounts.

A Mode

Receive Calls to Line A Only

- Place calls or send messages via Line A.

A Mode & B Mode Precautions

- Line indicators do not appear in Phone Book entries, message lists, Call Log records, etc.
- When an operation affects information on the other line, a confirmation appears. Follow onscreen prompt(s).

B Mode

Receive Calls to Line B Only

- Place calls or send messages via Line B.

B Mode Restrictions

- Handset connects to the Internet via Line A. (During Internet connections, place/receive calls via Line B.)
- S! Friend's Status, S! Circle Talk and Decoration Call are unavailable.

Advanced

- Omitting Handset Code entry when switching modes
- Renaming Double Number modes
- Showing indicator for calls missed or new mail on idle line
- Hiding Internet connection confirmation (P.1-36)

Dual
Mode

Receive Calls to Both Accounts

- Place calls or send messages via Line A (or the account of record for Phone Book entries or Call Log records) by default; toggle accounts as required.

Phone Book Entries

Specify A, B or Dual.

Messaging








Select Line A or Line B.
Sender Address changes accordingly.

Calling


Select Line A or Line B.
Caller ID changes accordingly.

- ,  and  indicate line type in Phone Book entries, message lists, Call Log records, etc.

 
Switching Modes

-  (Long)
- Enter Handset Code  
- Select mode  
 - For *B Mode* confirmation appears.
- Yes  

In Dual Mode

During an operation, if prompt window below appears, select a line and press .



If customizable by line, line indicator appears bottom right; press  to switch.



If line selection is otherwise required, follow onscreen prompts.

Advanced

-   Rejecting calls to either line in Dual Mode
-  Setting main line for Dual Mode (P.1-36)

USB Charge	
Disabling USB Charge	→ Settings → → → Connectivity → USB Charge → → Disable →
Information	
Handling Information list	Start Here → Phone → → See below
	Opening List Manually Information →
	Clearing List Information → → → Yes →
Touch Panel	
Adjusting Touch vibration	Start Here → Settings → → In Phone menu, Touch Panel → → Touch Reaction → → See below
	Touch Vibration Off in Manner Mode On(Except Manner Mode) →
	Touch Vibration Always Off Off →
Keypad Lock	
Canceling Keypad Lock upon Display activation	→ Settings → → In Phone menu, Touch Panel → → Keypad Lock → → Set Keypad Lock → → Simple Lock →
Changing Keypad Lock cancellation method	→ Settings → → In Phone menu, Touch Panel → → Keypad Lock → → Keypad Unlock → → Select method →

Shortcuts	
Changing item order	→ Select numbered function → → Move → → Select target location →
Restoring default shortcuts	→ Select numbered function → → Set to Default → → Yes →
Standby Shortcut	
■ Operations in Standby	
Sorting icons	→ → Sort Icon → → Select method → <ul style="list-style-type: none"> • Widgets are not affected.
Moving icons	→ Use to select icon → → Operation → → Change Layout → → Specify target location →
Moving icons to front/back	→ Use to select icon → → Operation → → To Front or To Back →
Removing icons at once by sheet	Start Here → → Operate from List → → Remove → → See below
	All Icons
	Remove All → → → Shortcut → Select sheet → → Yes →
Removing icons at once by sheet	Selected Icons
	Select also Remove → → → Shortcut → Select icon → (<input type="checkbox"/> / <input checked="" type="checkbox"/>) → Complete selection → → Yes →
	→ Yes →

Sheets

Editing sheet names	<p>[Start Here] </p> <p>See below</p> <p>Renaming</p> <p>Select sheet </p>
	<p>Resetting All Sheet Names</p> <p> </p>
Locking sheets	<p>[Start Here] </p> <p>Activating Lock</p> <p>Select sheet </p>
	<p>Changing Method for Temporary Access</p> <p>Unlock Method </p> <ul style="list-style-type: none"> Press , then select and press to unlock sheet temporarily.

Viewer Position Setup

Changing function assigned to Launch Appli in Move Settings	<p> </p>
Changing URL assigned to Connect Bookmark in Move Settings	<p> </p>

Motion Control

Changing Display rotation method	<p> </p> <p>Select method </p> <ul style="list-style-type: none"> When set to Manual, press to toggle Display orientation.
Changing Quick Shortcut items	<p> </p> <ul style="list-style-type: none"> To assign menu items, select one and press .
Deleting Quick Shortcut items	<p> </p>
Restoring default Quick Shortcut items	<p> </p>
Practicing Motion Control actions	<p> </p> <ul style="list-style-type: none"> Follow onscreen instructions.

Adjusting Motion Control sensor	<ul style="list-style-type: none"> ● → Settings → ● → In Phone menu, Motion Control → ● → Adjust Sensor → ●
	<ul style="list-style-type: none"> ● Follow onscreen instructions. ● Avoid adjusting sensor near metal/magnetic objects or aboard trains or in vehicles.

Mode

Changing handset modes	<p>Start Here ● → Settings → ● → In Phone menu, Mode Settings → ● → See below</p> <p>Selecting a Handset Mode</p> <p>Select mode → ●</p> <p>Customizing Handset Modes</p> <p>Select mode → ☰ → Select item → ● → Adjust settings</p> <ul style="list-style-type: none"> ● Not available for Normal mode.
	<ul style="list-style-type: none"> ● → Settings → ● → In Phone menu, Mode Settings → ● → Original → ☰ → Select item → ● → Adjust settings
Creating a custom mode	<ul style="list-style-type: none"> ● → Settings → ● → In Phone menu, Mode Settings → ● → Original → ☰ → Select item → ● → Adjust settings
Resetting Mode Settings	<ul style="list-style-type: none"> ● → Settings → ● → In Phone menu, Mode Settings → ● → Select mode → Ⓞ → Enter Handset Code → ● → Yes → ●

My Details

Clearing My Details	<ul style="list-style-type: none"> ● → ☰ → ☰ → ☰ → Reset My Details → ● → Yes → ●
Toggling My Details in Dual Mode	<ul style="list-style-type: none"> ● → ☰ → ☰ → ☰ → Switch to B or Switch to A → ●

Battery Meter

Changing battery strength indicator pattern	<ul style="list-style-type: none"> ● → Settings → ● → In Phone menu, Display → ● → Mini Battery → ● → Select pattern → ●
	<ul style="list-style-type: none"> ● For Clock & Battery level, indicators appear in turn. To change interval, press ☰. ● For Battery level, approximate battery strength appears as a percentage.

VeilView

Changing VeilView pattern/density	<p>Start Here ● → Settings → ● → In Phone menu, Display → ● → VeilView → ● → See below</p> <p>Pattern</p> <p>Pattern Setting → ● → Select pattern → ●</p> <p>Scale</p> <p>Scale Setting → ● → Select scale → ●</p> <p>Density</p> <p>Density Setting → ● → Adjust density → ●</p> <ul style="list-style-type: none"> ● For Density:2 or Density:3, use ☰ before pressing ● to adjust the pattern appearance for straight view.

Double Number

■ All Modes

Omitting Handset Code entry when switching modes	<ul style="list-style-type: none"> ● → Settings → ● → In Phone menu, <i>Double Number</i> → ● → Password Entry → ● → Off → ● → Enter Handset Code → ●
Renaming Double Number modes	<ul style="list-style-type: none"> ● → Settings → ● → In Phone menu, <i>Double Number</i> → ● → Mode Name → ● → Select mode → ● → Enter name → ● → Select icon → ●

■ A Mode & B Mode

Showing indicator for calls missed or new mail on idle line	<ul style="list-style-type: none"> ● → Settings → ● → In Phone menu, <i>Double Number</i> → ● → Show Missed → ● → On → ●
Hiding Internet connection confirmation	<ul style="list-style-type: none"> ● → Settings → ● → In Phone menu, <i>Double Number</i> → ● → Packet Warning → ● → Off → ● <ul style="list-style-type: none"> ● Available for B Mode.

■ Dual Mode

Rejecting calls to either line in Dual Mode	<ul style="list-style-type: none"> ● → Settings → ● → In Phone menu, <i>Double Number</i> → ● → Reject By Line → ● → Select line → ● → On → ●
Setting main line for Dual Mode	<ul style="list-style-type: none"> ● → Settings → ● → In Phone menu, <i>Double Number</i> → ● → Send Priority → ● → Select option → ●