

<b>Camera</b> .....	<b>7-2</b>
Getting Started .....	7-2
<b>Photo Camera</b> .....	<b>7-3</b>
Capturing Still Images .....	7-3
Using Portrait Photography Features .....	7-7
<b>Video Camera</b> .....	<b>7-9</b>
Recording Video .....	7-9
<b>Review</b> .....	<b>7-12</b>
Opening Saved Files .....	7-12

<b>Shooting Modes</b> .....	<b>7-13</b>
Using Shooting Modes (Photo Camera) .....	7-13
<b>Editing Images</b> .....	<b>7-16</b>
Picture Editor.....	7-16
Composite .....	7-20
<b>Printing</b> .....	<b>7-21</b>
Printing Images .....	7-21
<b>Additional Functions</b> .....	<b>7-22</b>
<b>Troubleshooting</b> .....	<b>7-26</b>

# 7

## Camera & Imaging



## Getting Started

Capture still images or record video.

### Portrait Photography

Automatically locks focus on faces, or releases shutter when subjects smile or turn their faces to camera.

### Auto Focus

Measures the distance between subjects and camera to adjust focus.

### Multiple Shooting Modes

Apply effect or add frame, capture sequential/panoramic or scan images, or use long exposure.

### Review

Open/play last saved mobile camera file quickly with a single key; access older files as needed.

### Precautions

- Clean dust/smudges from lens cover with a dry, soft cloth before use.
- Mobile camera is a precision instrument, however, some pixels may appear brighter or darker.
- Shooting/saving images while handset is hot may affect the image quality.
- Exposing lens to direct sunlight may damage color filter and affect image color.

### Auto Shut-off

- Before image capture/recording, mobile camera shuts down after a period of inactivity and handset returns to Standby.

### Shutter Click

- Shutter click and Self-timer tone sound at fixed volume regardless of handset settings.

### Internal & External Cameras

- Use Internal Camera or External Camera; unless noted otherwise, operations in this chapter are described for External Camera.
  - Sizes are limited and shooting modes are not available for Internal Camera.



### Advanced

- Opening Help
- Changing function assigned to Camera Key (P.7-22)

## Capturing Still Images

### Viewer Position

Operation descriptions are based on landscape orientation.

#### 1 Rotate Display to Viewer position

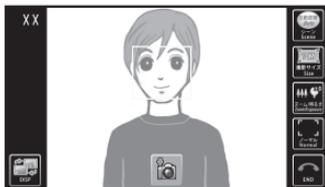


Photo Viewfinder

- After all indicators appear briefly, Photo Viewfinder appears.
- When rotating Display to Viewer position for the first time, Viewer Position menu opens; tap **Take Picture** to complete setup.
- Frames appear on detected faces.
- Alternatively, touch area on which to lock focus.

#### 2 Frame subject on Display



Captured Image Window

- Shutter clicks; captured image is saved.
- Open saved images via Review or Data Folder.

#### 3 Tap **OK**

- Viewfinder returns.

#### 4 Tap **END** → Camera shuts down

### Clamshell Open

Descriptions are for operation with handset keys.

#### 1

- Photo Viewfinder appears.

#### 2 Frame subject on Display



- Shutter clicks; captured image is saved.
- Open saved images via Review or Data Folder.

#### 3

- Viewfinder returns.

#### 4 → Camera shuts down

### Capturing Self Portraits

Open handset and rotate Display 180 degrees. Turn handset around and look into the lens to capture yourself.



### Advanced

-   Activating Mobile Light
-  Adjusting focus quickly for close-up shots
-  Adjusting camera's light sensitivity
-  Changing image size
-  Adjusting color balance according to lighting conditions (And more on P.7-22 - 7-24)



## Pre-Image Capture Operations

Use handset keys or tap indicators.



## Handset Keys

Zoom In/Out	
Toggle Mode	
Adjust Brightness	
Change Image Size	
Toggle Mobile Light Mode	
Toggle Indicator View	
Toggle Internal Camera and External Camera	
Open Help	

Press to open Options menu for more functions/settings.

## Touch Panel

Indicators appear along the edges of Display. Tap one to adjust the corresponding setting or execute the assigned command.

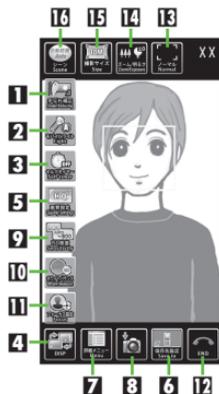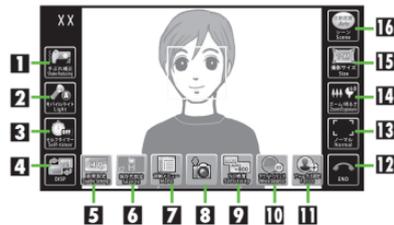

<b>1</b> Shake Reducing	<b>9</b> ISO Sensitivity
<b>2</b> Mobile Light	<b>10</b> White Balance
<b>3</b> Self-timer	<b>11</b> Focus
<b>4</b> Toggle indicator view	<b>12</b> Exit
<b>5</b> Picture Quality	<b>13</b> Shutter Mode
<b>6</b> Save to	<b>14</b> Zoom/Exposure
<b>7</b> Options menu	<b>15</b> Picture Size
<b>8</b> Release shutter	<b>16</b> Scene

### toggling Indicator View In Photo Viewfinder, tap (DISP)

### Additional Operations & Restriction Shortcuts:

Zoom In/Out	Drag finger up or down on image
Adjust Brightness	Drag finger left or right on image
Focus Lock	Tap image

- Tap (Menu) to open Options menu for more functions/settings.
- Toggle Internal/External camera with clamshell open.

## Opening Help

- Tap as follows:  
 (Menu) → *Help*



## ■ Touch Panel Operation Example

Follow these steps to use Self-timer:

### 1 In Photo Viewfinder, tap (DISP)

### 2 Tap (Self-timer)



- **10sec.** appears on indicator. A ten-second Self-timer is ready.
- Tap indicator to toggle status (5 sec., 2 sec. and Off).

### 3 Frame subject on Display



- After selected time elapses, captured image appears.
- Tap **OK** to return to Viewfinder.

#### Releasing Shutter during Countdown

After , 

#### Incoming Calls/Alarm during Countdown

- Countdown stops. (Self-timer remains active.)

## Image Size & Print/Display Size

933SH Picture Size & Corresponding Print/Display Size:

<b>10M</b>	A3 prints
<b>5M</b>	A3 prints
<b>3M</b>	A4 prints
<b>Full HD</b>	Full HD size display wallpaper
<b>Wallpaper</b>	933SH Wallpaper
<b>VGA</b>	VGA size display wallpaper
<b>QVGA</b>	QVGA size display wallpaper

#### Auto Resize Zoom

- At **10M**, Picture Size changes with zoom scale (print quality may be affected); check the size on indicator before image capture.




## Sending Captured Images

## Via Mail

- 1 In captured image window, tap **Send**



- 2 Tap message size limit

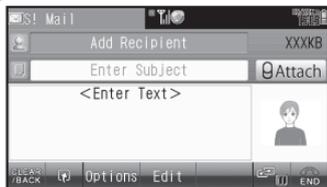

- Mail Composition window opens.
- Images may be resized automatically.

- 3 Complete message and tap **Send**

## Using Handset Keys


In captured image window, **YR** →  
 Select message size limit → ● →  
 Complete message → **YR**

## Applying the Selected Message Size Limit Hereafter

- Before selecting message size limit, tap **Check** or press **☺** to check **From now on too**. checkbox.

## Via Infrared

- 1 In captured image window, Long Touch **Send**

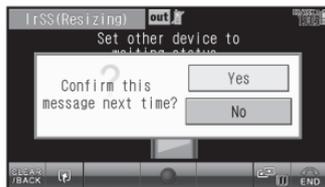

- 2 Tap **Yes** or **No**

## Using Handset Keys

In captured image window, **YR**  
 (Long) → **Yes** or **No** → ●




## Using Portrait Photography Features

Most operation descriptions are based on Viewer position.

### Locking Focus on Faces Automatically

933SH camera locks focus on faces automatically; frames appear on detected faces. (Portrait auto focus)

Detection may fail depending on face angle, distance from subject or environment.

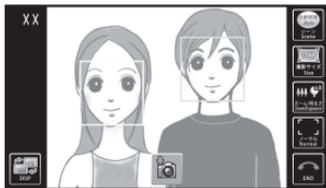

#### When Multiple Faces are Detected

- Frame appears on each face; tap one on which to lock focus.


### Capturing with Focus Lock

Lock focus on subject; camera continuously focuses on the subject even if it moves.

- Chase Focus tracks the subject's movement, and Continuous AF adjusts focus as the distance to the subject changes.
- Chase Focus distinguishes the subject by color; light-colored subjects or subjects having the same color as the background may not be tracked correctly.

### 1 In Photo Viewfinder, frame subject in center of Display

### 2 Half press or tap subject

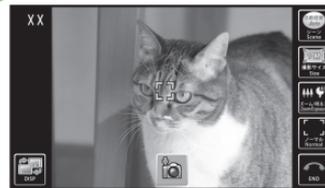

- Focus Lock is set.

### 3

- Captured image appears.
- Tap **OK** to return to Viewfinder.

#### Using Handset Keys

In Photo Viewfinder, frame subject in center of Display →  → 

#### Canceling Focus Lock

- Release  or press .

### Advanced

-  ● Adjusting smile detection level ● Setting Center Auto Focus ● Correcting portrait auto focus images (And more on P.7-23 - 7-24)



## Releasing Shutter upon Smile/ Face Detection

Available Shutter Modes:

<b>Egao focus shutter</b>	Releases shutter when subject smiles
<b>Furimuki shutter</b>	Releases shutter when subject turns face to camera

Adjust smile detection level as needed.

### 1 In Photo Viewfinder, tap (Normal)

- Tap indicator to toggle Shutter Mode between **Egao** ( appears), **Furimuki** ( appears) and **Normal**.

### 2 Shutter is released upon smile/face detection

- Captured image appears.
- Tap **OK** to return to Viewfinder.

#### Using Handset Keys

In Photo Viewfinder,  ➔ Shutter is released upon smile/face detection

## Capturing with Tailored Settings

In Auto mode, 933SH camera detects subject type/environment (Portrait, Landscape, Night, Portrait+Night, Food, Scan Text, Scan Barcode or Scan Card) and applies suitable settings automatically. Select a specific mode for a particular subject/environment.

Examples of Specific Modes:

<b>Baby</b>	Brightens skin tone
<b>Food</b>	Yields vivid colors
<b>Sea</b>	Enhances the blue
<b>Fireworks</b>	Intensifies the black
<b>Pet</b>	Increases shutter speed

### 1 In Photo Viewfinder, tap (Scene)



Scene Menu

### 2 Tap mode

- For **Auto**, select **Find Only Scene** (to disable Scan Card and Scan Barcode) or **Find Card/Barcode**.

### 3 Frame subject in center of Display ➔

- Captured image appears.
- Tap **OK** to return to Viewfinder.

#### Using Handset Keys

In Photo Viewfinder,  ➔ **Scene** ➔  ➔ **Select mode** ➔ 

- For **Auto**, select **Find Only Scene** (to disable Scan Card and Scan Barcode) or **Find Card/Barcode** and press .

#### Toggling Scene Menu Pages

- In Scene menu, tap **Next** or press .

#### Saving Custom Settings

- To save the current camera settings, tap as follows:

In Scene menu, **User Settings** ➔ **Save** ➔ **Yes**

- To load the saved settings, open Scene menu and tap **User Settings**.



## Recording Video

### Viewer Position

Operation descriptions are based on landscape orientation.

- 1 In Photo Viewfinder, tap  (Menu)
- 2 Tap **Camera Mode**
- 3 Tap **Video Camera**



Video Viewfinder

- 4 **Frame subject on Display**  
 
  - Recording starts after a tone.

5 



Save Menu

- 6 **Tap Save**
  - Video is saved. (Viewfinder returns.)

#### Playing Unsaved Video

In , tap **Preview**

#### Incoming Calls

- If a call arrives before video is saved, recorded clip is temporarily saved. End the call to return.

#### When Battery Runs Low

- Recording stops. (Recorded clip is saved.)

### Clamshell Open

Descriptions are for operation with handset keys.

- 1   
  - Video Viewfinder appears.
  - Omit step of pressing  if Video Camera is already active.

- 2 **Frame subject on Display**  
 
  - Recording starts after a tone.

- 3 



Save Menu

- Recording stops with a tone.
- 4 **Save**  
    - Video is saved. (Viewfinder returns.)
    - Play saved video via Review, Data Folder or Media Player.
  - 5   **Camera shuts down**

### Advanced

-   Activating Mobile Light
-  Adjusting focus quickly for close-up shots (And more on P.7-22)
-  Capturing images while recording video
-  Changing recording time/size
-  Enlarging Viewfinder size (And more on P.7-24)



## Operations in Video Viewfinder

Use handset keys or tap indicators.

## Handset Keys

Zoom In/Out	
Toggle Mode	
Adjust Brightness	
Change Record Size	
Toggle Mobile Light Mode	
Change Quality	
Pause/Resume Recording	
Cancel Recording (Start Over)	
Toggle Internal Camera and External Camera	
Open Help	

\*May be unavailable depending on recording size. Press to open Options menu for more functions/settings.

## Touch Panel

Zoom In/Out	Tap <b>Zoom</b> ➔ Drag slider
Adjust Brightness	Tap <b>Exposure</b> ➔ Drag slider
Toggle Mobile Light Mode	Tap <b>Light</b>
Focus Lock	Tap image
Pause/Resume Recording	Tap <b>Pause/Restart</b> *
Cancel Recording (Start Over)	Tap <b>CLEAR/BACK</b> (in Viewer position only)

\*May be unavailable depending on recording size. Tap **Options** to open Options menu for more functions/settings.

## Opening Help

- Tap as follows:  
**Options** ➔ **Help**

## Sending Recorded Video via Mail

Most operation descriptions are based on Viewer position.

1 In Save menu, tap **Send**2 Tap **Save and Send**

- Mail Composition window opens.
- Message creation confirmation appears depending on file size; choose **Yes** to proceed. (Choose **No** to cancel attachment.)

3 Complete message and tap **Send**

## Using Handset Keys

In Save menu, **Send** ➔ ➔ **Save and Send** ➔ ➔ **Complete message** ➔

## Hiding Message Creation Confirmation Hereafter

- While confirmation appears, tap **Check** or press to check **From now on too** checkbox.



## Self-timer

Most operation descriptions are based on Viewer position.

### 1 In Video Viewfinder, tap *Options*



### 2 Tap *Self-timer*



### 3 Tap time

### 4 Frame subject on Display



- After selected time elapses, recording starts.
- To stop recording, press .
- For more, see operation descriptions on P.7-9.

## Using Handset Keys

- In Video Viewfinder,  → *Self-timer*
-  → *Select time* →  → *Frame subject on Display* →  → 
- Releasing Shutter during Countdown After  
- Incoming Calls/Alarm during Countdown
- Countdown stops. (Self-timer remains active.)



## Opening Saved Files

Most operation descriptions are based on Viewer position.

### Opening Last Saved File

Open/play last saved mobile camera file quickly with a single key; access older files as needed.

1 Tap **MENU** ➔ Tap **Camera**

2 Tap **Review**



Review Window

### Using Handset Keys

(Long)

### Exiting Review

- Tap (END) or press .

### Hiding Indicators/Softkeys

- Tap Display or press .

### Enlarging Images

- After , tap **Zoom** or press .

### Pausing Video

- During playback, tap or press . To resume, tap or press .

### Opening Help

- Tap as follows:  
**Options** ➔ **Help**  
▪ Alternatively, press .

### Accessing Older Files

1 In Review window, tap file  
➔ Tap **List**



Review File List

- File list appears.
- Tap **Switch Tab** to toggle lists.

2 Tap file

- File opens/plays.

### Using Handset Keys

- In Review window, ➔ **Select file**  
➔   
▪ Press to toggle lists.

### Sending Images

Send images to blogs, etc. via mail. Infrared and other options can also be used for sending images to other devices. To send images to blogs, complete Blog Setting beforehand.

1 In Review file list, select image  
➔ Tap **Options**

2 Tap **Send/Blog**

3 Tap option

- Follow onscreen instructions.

### Using Handset Keys

- In Review file list, select image ➔ ➔ **Send/Blog** ➔ ➔ **Select option** ➔



## Using Shooting Modes (Photo Camera)

May be unavailable depending on selected image size.

### Continuous Shoot

Available Modes:

<b>4 Pictures</b>	Capture four separate images with Index Image
<b>9 Pictures</b>	Capture nine separate images with Index Image
<b>Overlapped</b>	Capture five images to create a composite image

- 1 In Photo Viewfinder,  ➔ **Modes** ➔ 



Mode Menu

- 2 **Continuous Shoot** ➔ 
- 3 **Select mode** ➔  ➔ **Select speed** ➔ 

- 4 **Frame subject on Display**



- After image capture, Index Image or a composite image appears. (All captured images are saved.)
- When shooting speed is set to **Manual** (4 Pictures and 9 Pictures modes), repeat  for each frame.

#### Checking Captured Images before Saving

- Set Auto Save to **Off** beforehand. After image capture, Index Image or a composite image appears.
  - Long Press  to save all captured images.
  - Follow these steps to save selected image:
    -  **Select image** ➔ 

### Continuous Shoot (Large)

Capture ten continuous shots of **1M(864x1152)** images at high speed.

- 1 In Photo Viewfinder,  ➔ **Modes** ➔ 
- 2 **HQ Continuous** ➔  ➔ **On** ➔ 
- 3 **Frame subject on Display** ➔ 
  - After image capture, the first preview image appears.
- 4  **Select image** ➔ 
  - Image is saved and preview returns.

#### Saving All Captured Images

In  (Long)

#### Saving Strobe Photo (Composite Image)

In ,  ➔ **Strobe Photo** ➔  ➔ **Yes** ➔  ➔  ➔ 



## Adding Frames

- 1 In Photo Viewfinder, → *Modes* →
- 2 Add Frame →
- 3 Preset Frames →



- 4 Select frame →
- 5 Frame subject on Display →
  - Captured image appears.
  - Press to return to Viewfinder.

## Using Frames in Data Folder

In , *Data Folder* → → Select frame → → → Frame subject on Display →

## Camera Effects

- 1 In Photo Viewfinder, → *Modes* →
- 2 Camera Effects →



- 3 Select effect →
- 4 Frame subject on Display →
  - Captured image appears.
  - Press to return to Viewfinder.

## Long Exposure

Capture low-light shots (fireworks, night scenes, etc.) clearly.

- 1 In Photo Viewfinder, → *Modes* →
- 2 Long Exposure →
- 3 Select time →
- 4 Frame subject on Display →



- Shutter is left open for an extended period of time, then captured image appears.
- Press to return to Viewfinder.



## Panorama Picture

1 In Photo Viewfinder, ➔ Modes ➔


2 Panorama/Scanner ➔



Panorama/Scanner Menu

3 Panorama Picture ➔ ➔ On ➔

4 Frame subject on Display ➔

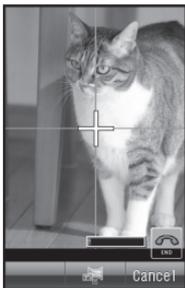

- Move handset slowly to keep aligned with either of yellow lines.
- Image is captured automatically when the bar () turns blue.

5

- Image is saved.

## Checking Captured Images before Saving

- Set Auto Save to **Off** beforehand. After image capture, Save menu opens.
  - To check captured images, follow these steps in Save menu: **Preview** ➔
  - To save captured images, follow these steps in Save menu: **Save** ➔

## Scanning Images

1 In Photo Viewfinder, ➔ Modes ➔

2 Panorama/Scanner ➔

3 Scanner ➔

4 Select size ➔ ➔ Frame subject on Display ➔



- Move handset slowly to scan the area to capture. (Refer to indicators on Display.)

5

- Image is saved.

## Checking Captured Images before Saving

- Set Auto Save to **Off** beforehand. After image capture, Save menu opens.
  - To check captured images, follow these steps in Save menu: **Preview** ➔
  - To save captured images, follow these steps in Save menu: **Save** ➔

## Advanced

- Changing Panorama settings Changing Panorama image preview method (P.7-24)



## Picture Editor

### Picture Editor Options

The following options are available. Some images may not be editable depending on file type and size.

<b>Resize</b>	Select from preset sizes or crop image
<b>Frame</b>	Add Frame to images
<b>Paste</b>	Add text/dates to images
<b>Retouch</b>	Dress up images with preloaded visual effects
<b>Stamp</b>	Add stamps to images
<b>Face Arrange</b>	Make smiley, angry or sad faces
<b>Correction</b>	Correct images
<b>Rotate</b>	Rotate images
<b>Scribbling</b>	Scribble or sketch
<b>File Format</b>	Convert file format and change file size

### Basic Operation

- 1 → **Data Folder** →
- 2 **Pictures** → → **Select image** →
- 3 → **Edit** →
- 4 **Picture Editor** →



Picture Editor Menu

- 5 **Select effect** → → **Edit**



- To start over, press .

- 6 **When finished**,



- 7 **Save as New** →

- To overwrite, select **Overwrite** and press . (Omit .)

- 8 **Enter name** → → **Save here** →

### Canceling Effects

After , **Undo** →

- To restore effect immediately after canceling, select **Redo** and press .




## Changing Image Size

Select from preset sizes or crop image.

### Resize to Preset Size

- 1 In Picture Editor menu, **Resize** ➔ ●

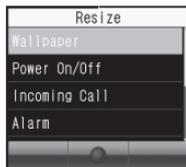

Resize Window

- 2 Select size ➔ ●

- 3 ● Specify image area



- If crop frame does not appear, omit 3.


- 4 ●
- Editing is complete.

### Zooming In/Out

After 3, ● ➔ ● ➔ 4

## Cropping Images

- 1 In Resize window, **Cut** ➔ ●
- 2 ● Move + to the upper left corner of the portion to crop ➔ ●

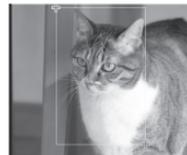

- 3 ● Move + to the lower right corner of the portion to crop ➔ ●

- 4 ●
- Editing is complete.

### Specifying Image Area

After 3, ● ➔ 4

### Zooming In/Out

After 3, ● ➔ ● ➔ 4

## Advanced

- Using additional editing options (P.7-25)



### Applying Visual Effects

Render in sepia tones or add blur, etc.

- 1 In Picture Editor menu, **Retouch** ➔ ●




- 2 Select effect ➔ ●




- 3 ●
  - Editing is complete.

### Adding Frames

- 1 In Picture Editor menu, **Frame** ➔ ●

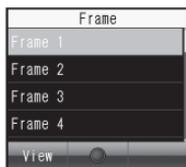

- 2 Select frame ➔ ●

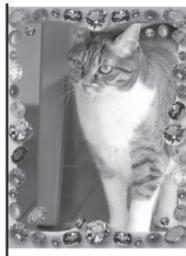


- 3 ●
  - Editing is complete.

### Scribbling

Drag finger on Display to scribble or sketch.

- 1 In Picture Editor menu, **Scribbling** ➔ ●

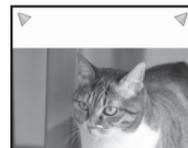

- 2 Drag finger freely on image



- 3 ●
  - Editing is complete.

#### Changing Line Thickness & Color

In 2, (Ⓜ) ➔ Select thickness ➔ ● ➔

Select color ➔ ● ➔ (Ⓜ)

#### Zooming In

In 2, (Ⓜ)

#### Viewing Portions Outside Display

In 2, drag arrows at the corners



## Face Arrange

Make faces smiley, sad, etc.

- 1 In Picture Editor menu, **Face Arrange** ➔ ●



Face Arrange Menu

- 2 Select type ➔ ●

- 3 ●

● Editing is complete.

### Important Face Arrange Usage Note

- When using Face Arrange, take care not to create images that may embarrass or offend others. Always obtain permission before photographing others.

## Adjusting Positions

Change the default positions and sizes of targets to fit the image.

- 1 In Face Arrange menu, ●




- A rectangle appears with + in the upper left corner.

- 2 ● Move + to top left of face




- 3 ● Move + to bottom right of face

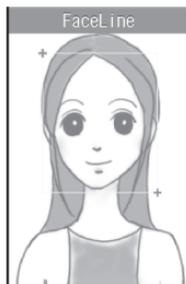

- 4 ●

- Face line is set. Set the eyes and then mouth in the same way.

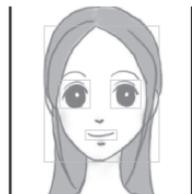

- 5 ● ➔ **Yes** ➔ ● ➔ **Save here** ➔ ●

- Image is saved as a new entry with Face Arrange positions adjusted. Complete Face Arrange. Face Arrange is applied to the adjusted positions.



# Composite

## Composite Options

The following options are available. Some images may not be editable depending on file type and size.

Split Picture	Combine up to four images into one
Merge Panorama	Combine two still images into one

## Panorama Images

Panorama Image Effects:

Near View	Best suited for close-up shots
Document	Use for images with text
Standard	Apply to other images

- 1 → **Data Folder** →
- 2 **Pictures** → → **Select image** →
- 3 → **Edit** →
- 4 **Composite** →

## 5 Merge Panorama →




- File selected in 2 is set as left image.

## 6 <Empty> → → **Select image** →

## 7 EFFECT → → **Select effect** →

- Editing is complete.

## 8 When finished,

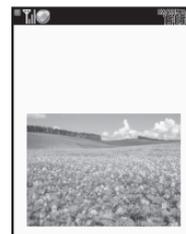

- Merged image appears.

## 9

## 10 Enter name → → **Save here** →

### Changing Images

- After , select image → → →
- Select image →
- Switching Image Positions  
After ,

## Advanced

- Combining reduced images (P.7-25)




## Printing Images

### Digital Print Order Format (DPOF)

Select images from Memory Card and specify the number of copies to print on DPOF-compatible printers, or at digital printing services.


DPOF settings made on other devices are unusable; delete existing settings to create new ones on handset.

- 1 → **Settings** → →
- 2 **Memory Card** → → **DPOF** →
- 3 **Number of Copies** →

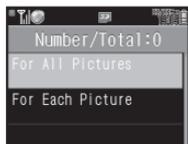

- 4 **For Each Picture** → → **Select folder** →

- 5 **Select image** →

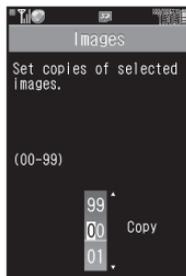

- 6 **Enter a number of copies to print** →
  - For more settings, repeat - .
- 7

#### Applying a Number to All Images

In 4, **For All Pictures** → → Enter a number of copies to print →

#### Canceling Specified Number

In 6, enter **00** → →

#### Viewing Current Print Settings

In 6, **Check Settings** →

### Using Printers

Connect handset to a Bluetooth®-compatible printer and print images in Pictures folder.

- Activate Bluetooth® on the printer.
- Some images may not be sent depending on file type and size.

- 1 → **Data Folder** → → **Pictures** →
- 2 **Select image** → → **Print** →
- 3 **Via Bluetooth** → → **Select printer** →
- 4 **Yes** →
  - To cancel, press .

#### When Authorization Code is Required

Enter Authorization Code →

### Advanced

- Changing print settings (P.7-25)



## Photo Camera & Video Camera

### General

Accessing files from Viewfinder	In Photo/Video Viewfinder,  ➔ <i>Data Folder</i> ➔  ➔  ➔
Opening Help	In Photo/Video Viewfinder,  ➔ <i>Help</i> ➔ <ul style="list-style-type: none"> <li>Press  to toggle Help window for Touch Panel, indicator descriptions and key assignments.</li> </ul>
Changing function assigned to Camera Key ()	➔ <i>Camera</i> ➔  ➔ <i>Set Camera Key</i> ➔ ➔ <i>Select function</i> ➔

### Capturing

Activating Mobile Light	In Photo/Video Viewfinder,  ➔ <i>Mobile Light</i> ➔  ➔ <i>On or Automatic</i> ➔ <ul style="list-style-type: none"> <li><i>Low Light</i> is also available for still image capture.</li> <li>Do not use Mobile Light near people's faces or look into the light yourself.</li> </ul>
Adjusting brightness	In Photo/Video Viewfinder,  ➔ <i>Settings</i> ➔ ➔ <i>Exposure</i> ➔  ➔ <i>Adjust level</i>
Changing image quality	In Photo/Video Viewfinder,  ➔ <i>Settings</i> ➔ ➔ <i>Picture Quality or Video Quality</i> ➔ ➔ <i>Select quality</i> ➔
Adjusting focus quickly for close-up shots	In Photo/Video Viewfinder,  ➔ <i>Focus Setting</i> ➔  ➔ <i>Macro</i> ➔
Adjusting focus manually	In Photo/Video Viewfinder,  ➔ <i>Focus Setting</i> ➔  ➔ <i>Manual Focus</i> ➔  ➔  ➔ <i>Adjust focus</i> ➔ <ul style="list-style-type: none"> <li>To readjust focus, press .</li> </ul>

Locking focus	In Photo/Video Viewfinder, <ul style="list-style-type: none"> <li>Frame subject in center of Display first.</li> <li>To start over, press  again.</li> </ul>
---------------	---

### Saving

Selecting automatic save option	In Photo/Video Viewfinder,  ➔ <i>Save Setting</i> ➔  ➔ <i>Auto Save</i> ➔  ➔ <i>See below</i> <b>For Still Images</b> <i>Select option</i> ➔ <ul style="list-style-type: none"> <li>When <i>Off</i>, press  after image capture to save.</li> </ul> <b>Saving Video Automatically</b> <i>On</i> ➔
Changing save location	In Photo/Video Viewfinder,  ➔ <i>Save Setting</i> ➔  ➔ <i>Save Pictures to or Save Videos to</i> ➔ ➔ <i>Select option</i> ➔

## Photo Camera

### General

Changing shutter click sound	In Photo Viewfinder,  ➔ <i>Shutter Setting</i> ➔ ➔ <i>Shutter Sound</i> ➔  ➔ <i>Select pattern</i> ➔ <ul style="list-style-type: none"> <li>Shutter click sounds for Continuous Shoot, Panorama Picture and Scanner are fixed.</li> </ul>
Switching indicator view	In Photo Viewfinder,  ➔ <i>Settings</i> ➔  ➔ <i>Display Setting</i> ➔  ➔ <i>Select option</i> ➔
Changing send option assigned to	In Photo Viewfinder,  ➔ <i>Settings</i> ➔  ➔ <i>Set Send Key</i> ➔  ➔ <i>Short press or Long press</i> ➔  ➔ <i>Select option</i> ➔ <ul style="list-style-type: none"> <li>Change send option separately for each key press method.</li> </ul>



Disabling quick transition to Viewfinder after saving images	In Photo Viewfinder,  → <b>Save Setting</b> →  → <b>Background Save</b> →  → <b>Off</b> →
--	---

## ■ Capturing

Adjusting camera's light sensitivity	In Photo Viewfinder,  → <b>Settings</b> →  → <b>ISO Sensitivity</b> →  → <b>Select level</b> → <ul style="list-style-type: none"> <li>ISO Sensitivity is <b>Auto (~800)</b> by default. However, 800 or higher sensitivity may be applied depending on environment.</li> </ul>
Changing image size	In Photo Viewfinder,  → <b>Picture Size</b> →  → <b>Select size</b> →
Adjusting smile detection level	In Photo Viewfinder,  → <b>Shutter Setting</b> →  → <b>Egao level</b> →  → <b>Select level</b> → <ul style="list-style-type: none"> <li>Lower the level when detection is slow.</li> </ul>
Adjusting color balance according to lighting conditions	In Photo Viewfinder,  → <b>Settings</b> →  → <b>White Balance</b> →  → <b>Select mode</b> →
Disabling shake reduction	In Photo Viewfinder,  → <b>Settings</b> →  → <b>Shake Reducing</b> →  → <b>Off</b> →

## ■ Focus

Setting Center Auto Focus	In Photo Viewfinder,  → <b>Focus Setting</b> →  → <b>Center Auto Focus</b> →
Canceling Continuous AF	In Photo Viewfinder,  → <b>Focus Setting</b> →  → <b>Continuous AF</b> →  → <b>Off</b> →

Canceling Chase Focus	In Photo Viewfinder,  → <b>Focus Setting</b> →  → <b>Chase Focus</b> →  → <b>Off</b> →
Changing Focus Mark	In Photo Viewfinder,  → <b>Focus Setting</b> →  → <b>Focus Mark</b> →  → <b>Select pattern</b> →

## ■ Correction/Preview

Checking image details before saving	<p>After image capture,  -  (Long) or Long Touch portion</p> <ul style="list-style-type: none"> <li>Available when Auto Save is <b>Off</b>.</li> <li>Use  or drag within enlarged portion to see other portions enlarged. Press  or double-tap to enlarge further. Press  to cancel.</li> <li>Key Assignments: <ul style="list-style-type: none"> <li>Portrait <ul style="list-style-type: none"> <li> (Upper left)  (Upper center)  (Upper right)</li> <li> (Left)  (Center)  (Right)</li> <li> (Lower left)  (Lower center)  (Lower right)</li> </ul> </li> <li>Landscape (rotated 90 degrees counterclockwise) <ul style="list-style-type: none"> <li> (Upper left)  (Upper center)  (Upper right)</li> <li> (Left)  (Center)  (Right)</li> <li> (Lower left)  (Lower center)  (Lower right)</li> </ul> </li> </ul> </li> <li>May be unavailable depending on image size, etc.</li> </ul>
--------------------------------------	--



Correcting portrait auto focus images	(Start Here) After image capture, <b>Correlate to Face</b> <b>See below</b> • Available when Auto Save is <i>Off</i> .
	<b>Adjusting Face/Background Brightness Against sun</b>
	<b>Blurring Out-of-Focus Portions Portrait</b>
Brightening backlit subjects (Dynamic Range Adjustment)	After image capture, • May be unavailable or require access via Options menu depending on Auto Save setting.
Seeking guidance for better shots	After image capture, tap  (Guide) • Follow onscreen instructions.

### ■ Panorama Picture

Changing Panorama settings	(Start Here) In Photo Viewfinder, <b>Modes</b> <b>Panorama/Scanner</b> <b>See below</b>
	<b>Hiding Guides</b> <b>Assisting Lines</b> <b>Off</b>
	<b>Locking Display Brightness during Image Capture AE-Lock</b> <b>Enable</b>
Changing Panorama image preview method	In Panorama preview, <b>Manual Scroll or Full Image</b> • Available when Auto Save is <i>Off</i> .

### ■ Bluetooth® Watches

Releasing shutter remotely with a Bluetooth® watch	In Photo Viewfinder, press the corresponding button on Bluetooth® watch • Connect handset to a Bluetooth® watch and set Set Remote Shutter to <i>On</i> beforehand. For details, see the Bluetooth® watch guide.
Disabling remote shutter control via Bluetooth® watches	In Photo Viewfinder, <b>Shutter Setting</b> <b>Set Remote Shutter</b> <b>Off</b> • Available when a Bluetooth® watch is registered.

### Video Camera

Capturing images while recording video	While recording, • Captured images are saved when saving recorded clip; open them via Review or Data Folder.
Changing recording time/size	In Video Viewfinder, <b>Record Time/Size</b> <b>For Message or Extended Video</b> <b>Select size</b>
Enlarging Viewfinder size	In Video Viewfinder, <b>Display Size</b> <b>Enlarge</b>
Recording video without sound	In Video Viewfinder, <b>Settings</b> <b>Microphone</b> <b>Off</b>
Changing video encoding	In Video Viewfinder, <b>Save Setting</b> <b>Video Encode or Audio Encode</b> <b>Select option</b>
Disabling shake reduction	In Video Viewfinder, <b>Shake Reducing</b> <b>Off</b>



## Editing Images

## Picture Editor

Using additional editing options	<p>[Start Here] → Data Folder → Pictures → Select file → Edit → Picture Editor → See below</p>
	<p><b>Changing Text/Outline Color</b>          Paste → Select text color → Select outline color</p>
	<p><b>Adding Text</b>          Paste → Free Text → Enter text → Move text</p>
	<p><b>Adding Dates</b>          Paste → Date → Move date</p>
	<p><b>Adding Stamps</b>          Stamp → Select stamp → Move stamp</p>
	<p><b>Correcting Image Parameters</b>          Correction → Select type</p>
	<p><b>Rotating Images</b>          Rotate → Select type</p>
	<p><b>Converting File Format</b>          File Format → File Format → Select format</p> <ul style="list-style-type: none"> <li>Changing file format may affect file size/image quality.</li> <li>To return to Picture Editor menu, press <b>[MENU]</b>.</li> </ul>
	<p><b>Changing File Size</b>          File Format → File Size → Select size</p> <ul style="list-style-type: none"> <li>Changing file size may affect image quality.</li> <li>To return to Picture Editor menu, press <b>[MENU]</b>.</li> </ul>

## Composite

Combining reduced images	<p>[Start Here] → Data Folder → Pictures → Select file → Edit → Composite → See below</p>
	<p><b>Creating Split Picture</b>          SplitPicture 480x854 or SplitPicture 240x320 → &lt;Empty&gt; → Select file</p> <p>When finished, Enter name → Save here</p> <ul style="list-style-type: none"> <li>Repeat from selecting &lt;Empty&gt; as needed.</li> </ul>
	<p><b>Previewing Split Picture</b>          While creating Split Picture, View Composite</p>
	<p><b>Changing Images</b>          While creating Split Picture, select image → Select another</p>
DPOF	<p>[Start Here] → Settings → Connectivity → Memory Card → DPOF → See below</p>
	<p><b>Changing print settings</b></p> <p><b>Adding Dates to Prints</b>          Settings → Add Date → On</p> <p><b>Creating an Index Print</b>          Settings → Index Print → On</p> <p><b>Resetting</b>          Reset Settings → Yes</p>



## Mobile Camera

### ? Mobile camera won't activate/ shuts down automatically

- Battery may be low. Charge battery or install a charged battery.
- Leaving handset at high temperature may cause camera area to heat up, disabling mobile camera activation; wait a while and retry.
- Prolonged camera use may cause camera area to heat up, resulting in automatic shutdown; wait a while and retry.

### ? Cannot use Background Save or Auto Save

- Background Save/Auto Save is not available when Save Pictures to is set to *Ask Each Time*.

### ? Display went dark during image capture

- 933SH camera has built-in mechanical shutter and ND filter. Strong shocks to handset during image capture may close mechanical shutter for camera protection, resulting in blank Viewfinder. Reactivate mobile camera to reopen the shutter.

### ? Captured image appears all white

- When Long Exposure is active (⏱, etc. appears), images captured in daylight or good light appear all white.

### ? Image is dark or distorted

- Avoid capturing strong light sources (sun, lamps, etc.) in the background.

## Editing Images

### ? Cannot save/send edited images

- Edited images may be too large to save or send via mail.

## DPOF

### ? Cannot specify print settings properly

- If Memory Card image files have been deleted or renamed on PCs or other devices, reset print settings and start over with settings.

