

14

Handset Customization

Date & Time	14-2
Date & Time.....	14-2
Display & Illumination	14-3
Language.....	14-3
Image & Text.....	14-3
Display & Backlight.....	14-3
External Display.....	14-4
Standby Display.....	14-4
Key Backlight	14-4
Incoming Transmissions	14-5
Handset Response	14-5
Sounds	14-6
System Sounds	14-6
Additional Sound Settings	14-6
Connectivity	14-7
Network	14-7
IP Service	14-7
Reset	14-8
Restoring Default Settings.....	14-8





Date & Time Settings

Date & Time

Start Here

⇒ ● ⇒ Settings ⇒ ● ⇒ In Phone menu, Date & Time ⇒ ●

Setting the date and time	<i>Set Date/Time</i> ⇒ ● ⇒ Enter the year ⇒ Enter the month ⇒ Enter the day ⇒ Enter the time ⇒ ●
Correcting Clock manually	<i>Time Correction</i> ⇒ ● ⇒ <i>Manual</i> ⇒ ● ⇒ Yes ⇒ ● ⇒ Yes ⇒ ●
Disabling auto Clock correction	<i>Time Correction</i> ⇒ ● ⇒ <i>Auto Corr. Setting</i> ⇒ ● ⇒ Off ⇒ ●
Setting auto Clock correction timing	<i>Time Correction</i> ⇒ ● ⇒ <i>Auto Corr. Setting</i> ⇒ ● ⇒ On ⇒ ● ⇒ Select item ⇒ ● (□/✓) ⇒ ● ⇒ ⇒ ●
Activating Daylight Saving	<i>Daylight Saving</i> ⇒ ● ⇒ On ⇒ ●
Changing Time Zone	<i>Set Time Zone</i> ⇒ ● ⇒ ● Select area ⇒ ●
Adding custom time zone	<i>Set Time Zone</i> ⇒ ● ⇒ ● Enter city name ⇒ ● ⇒ ● + or - ⇒ ● ⇒ Enter time difference ⇒ ●
Changing time format to 12 hour	<i>Time Format</i> ⇒ ● ⇒ <i>12 Hour</i> ⇒ ●
Changing date format	<i>Date Format</i> ⇒ ● ⇒ Select option ⇒ ●
Starting the Calendar week on Monday	<i>Calendar Format</i> ⇒ ● ⇒ <i>Monday-Sunday</i> ⇒ ●

Display & Illumination Settings

Language

Start Here ➔ **Settings** ➔ ➔ **Phone menu**

Switching interface between Japanese and English

Language or 言語選択 ➔ ➔ **English or 日本語** ➔ ➔

Image & Text

Start Here ➔ ➔ **Settings** ➔ ➔ **In Phone menu, Display** ➔ ➔

Showing preloaded images for incoming calls, etc.

System Graphics ➔ ➔ Select item ➔ ➔ **Preset Animation (or Pattern 1 to Pattern 3)** ➔ ➔

Showing Data Folder images for incoming calls, etc.

System Graphics ➔ ➔ Select item ➔ ➔ Select folder ➔ ➔ Select image ➔ ➔ Specify image area ➔ ➔
• Some images may be usable without specifying image area.

Showing Customized Screen for incoming calls, etc.

System Graphics ➔ ➔ Select item ➔ ➔ **Customized Screen** ➔ ➔ ➔ ➔
• Not available for **Power On** or **Power Off**.

Selecting image enhancement option for Standby and video playback

Vivid Mode ➔ ➔ Select option ➔ ➔

Changing font of numbers entered in Standby

Dial Number ➔ ➔ Select pattern ➔ ➔

Showing a message each time handset is turned on

Greeting Message ➔ ➔ **Edit Message** ➔ ➔ Enter message ➔ ➔ ➔
Switch On/Off ➔ ➔ **On** ➔ ➔

Hiding caller info in Viewer position

Caller Display ➔ ➔ **Off** ➔ ➔

Display & Backlight

Start Here ➔ ➔ **Settings** ➔ ➔ **In Phone menu, Display** ➔ ➔

Disabling display transition effects

Display Effects ➔ ➔ **Off** ➔ ➔

Changing Display/key Backlight illumination time

Backlight ➔ ➔ **Time Out** ➔ ➔ Select time ➔ ➔

Changing Display Brightness

Backlight ➔ ➔ **Brightness** ➔ ➔ Adjust level ➔ ➔

Canceling/activating Light Sensor

Backlight ➔ ➔ **Brightness** ➔ ➔ (□/✓) ➔ ➔

Changing inactivity time after which Display turns off

Display Saving ➔ ➔ Select period ➔ ➔





Display & Illumination Settings 2

External Display

Start Here () ➔ **Settings** ➔ () ➔ In Phone menu, *Display* ➔ () ➔ **External Display** ➔ ()

Changing inactivity time after which External Display turns off	Duration ➔ () ➔ Select time ➔ ()
Hiding new received messages	Messages ➔ () ➔ Not Display ➔ ()
Hiding caller info	Caller Display ➔ () ➔ Off ➔ ()
Showing Pedometer	Display Pedometer ➔ () ➔ Select item ➔ () • Activate External Display Backlight and press (). • Some items do not appear if body information entry is incomplete.
Changing Clock view	Display Date&Time ➔ () ➔ Select type ➔ ()
Changing Clock font	Clock Type ➔ () ➔ Select pattern ➔ ()

Standby Display

Start Here () ➔ **Settings** ➔ () ➔ In Phone menu, *Display* ➔ () ➔ **Standby Display** ➔ ()

Changing Clock/Calendar	Clock/Calendar ➔ () ➔ Select type ➔ ()
Showing Network service provider name in Standby	Show Operator Name ➔ () ➔ On ➔ ()
Hiding Pedometer in Standby	Pedometer ➔ () ➔ Off ➔ ()

Key Backlight

Start Here () ➔ **Settings** ➔ () ➔ Phone menu

Disabling key Backlight illumination	Set Key Light ➔ () ➔ Off ➔ ()
Changing Key Illumination pattern by event	Sounds & Alerts ➔ () ➔ Set Key Illumi ➔ () ➔ Select item ➔ () ➔ Key Pattern ➔ () ➔ Select pattern ➔ ()
Disabling Key Illumination by event	Sounds & Alerts ➔ () ➔ Set Key Illumi ➔ () ➔ Select item ➔ () ➔ Switch On/Off ➔ () ➔ Off ➔ ()

Incoming Transmission Settings

Handset Response

Start Here

● ➔ **Settings** ➔ ● ➔ In Phone menu, **Sounds & Alerts** ➔ ●

Changing ringtone volume	Volume ➔ ● ➔ Select item ➔ ● ➔ Adjust level ➔ ●
Selecting illumination option	Event Light ➔ ● ➔ Select item ➔ ● ➔ Switch On/Off ➔ ● ➔ On, Link to Sound or Off ➔ ● ● For Link to Sound , press ● again.
Setting illumination color	Event Light ➔ ● ➔ Select item ➔ ● ➔ Light Color ➔ ● ➔ Select color ➔ ●
Changing Key Illumination patterns	Event Light ➔ ● ➔ Select item ➔ ● ➔ Key Pattern ➔ ● ➔ Select pattern ➔ ●
Enabling/disabling illumination for missed transmissions	Status Light ➔ ● ➔ Select item ➔ ● ➔ Switch On/Off ➔ ● ➔ On or Off ➔ ●
Setting illumination color for missed transmissions	Status Light ➔ ● ➔ Select item ➔ ● ➔ Light Color ➔ ● ➔ Select color ➔ ●
Answering calls with other keys	Any Key Answer ➔ ● ➔ On ➔ ● ● Use ☎ - ☎, * ☎, # ☎, ☎, ☎, ☎, ☎, ☎, ☎ or ☎ in addition to ☎.





Sound Settings

System Sounds

Start Here () ➔ **Settings** ➔ () ➔ In Phone menu, **Sounds & Alerts** ➔ ()

Enabling Keypad Tones	System Sounds ➔ () ➔ Keypad Tones ➔ () ➔ Select tone ➔ ()
Changing S! Circle Talk tone	System Sounds ➔ () ➔ S! Circle Talk ➔ () ➔ Select tone ➔ ()
Changing other System Sounds	System Sounds ➔ () ➔ Select item ➔ () ➔ Tone or Sound ➔ () ➔ Select folder ➔ () ➔ Select tone/file ➔ () • For files with limited usage period, choose Yes and press ().
Disabling System Sounds	System Sounds ➔ () ➔ Select item ➔ () ➔ Tone or Sound ➔ () ➔ Off ➔ () • Not available for S! Circle Talk .
Changing System Sound duration	System Sounds ➔ () ➔ Select item ➔ () ➔ Duration ➔ () ➔ Select/enter time ➔ () • Not available for Keypad Tones or S! Circle Talk .
Changing System Sound volume	Volume ➔ () ➔ General Volume ➔ () ➔ Adjust level ➔ ()

Additional Sound Settings

Start Here () ➔ **Settings** ➔ () ➔ Phone menu

Disabling Speaker when using Headphones	Ringer Output ➔ () ➔ Earphone ➔ ()
Activating Speaker surround	Sounds & Alerts ➔ () ➔ Surround ➔ () ➔ On ➔ ()

Connectivity Settings

Network

Start Here ➔ **Settings** ➔ ➔ **Network**

Selecting a Network manually	Select Network ➔ ➔ Manual ➔ ➔ Select Network ➔ ➔
Adding preferred Networks	Select Network ➔ ➔ Set Preferred ➔ ➔ Select target location ➔ ➔ ➔ Insert ➔ ➔ Select Network ➔ ➔
Adding preferred Networks to the end	Select Network ➔ ➔ Set Preferred ➔ ➔ ➔ ➔ Add to End ➔ ➔ ➔
Deleting preferred Networks	Select Network ➔ ➔ Set Preferred ➔ ➔ Select Network ➔ ➔ ➔ Delete ➔ ➔
Adding Networks	Select Network ➔ ➔ ➔ Add New Network ➔ ➔ ➔ Add ➔ ➔ ➔ Enter country code ➔ ➔ ➔ Enter Network code ➔ ➔ ➔ Enter name ➔ ➔ ➔ Select NW Type ➔ ➔ ➔ Select type ➔ ➔ • After selecting Add New Network and pressing ➔, Network list appears if Network has already been added. To add more, press ➔ again and proceed.
Editing Networks	Select Network ➔ ➔ ➔ Add New Network ➔ ➔ ➔ Select Network ➔ ➔ ➔ Change ➔ ➔ ➔ Edit in the same manner as adding Networks ➔ ➔
Deleting Networks	Select Network ➔ ➔ ➔ Add New Network ➔ ➔ ➔ Select Network ➔ ➔ ➔ Delete ➔ ➔
Switching Network services manually	Select Service ➔ ➔ ➔ Manual ➔ ➔ ➔ Select service ➔ ➔
Retrieving Network Information	Retrieve NW Info ➔ ➔ ➔ Yes ➔ ➔
Checking Network status	Network Info ➔ ➔
Editing access point names for external devices	External Device ➔ ➔ ➔ Select name ➔ ➔ ➔ Edit ➔ ➔
Clearing access point names for external devices	External Device ➔ ➔ ➔ ➔ Reset ➔ ➔ ➔ Enter Handset Code ➔ ➔ ➔ Yes ➔ ➔

IP Service

Start Here ➔ **Settings** ➔ ➔ **In Phone menu, Locks** ➔ ➔

Disabling IP Service	IP Service Setting ➔ ➔ ➔ Off ➔ ➔ ➔ Enter Handset Code ➔ ➔
	• When Off , S! Friend's Status, S! Circle Talk, Decoration Call, S! Appli Notification Setting and Mobile Widget Notification Setting are disabled.



Reset Settings

Restoring Default Settings

Start Here

⇒ **Settings** ⇒ **In Phone menu, Master Reset** ⇒ **Yes**

Restoring default handset settings

Reset Settings ⇒ **Enter Handset Code** ⇒ **Yes** ⇒ **Yes** ⇒ **Yes** ⇒ **Yes**

- Some default settings may not be restored.

Clearing all Phone Book entries, Data Folder files, etc.

Reset All ⇒ **Enter Handset Code** ⇒ **Yes** ⇒ **Yes** ⇒ **Yes** ⇒ **Yes**

- Delete IC Card data beforehand. (Procedures to delete IC Card data vary by Lifestyle-Appli; contact Osaifu-Keitai® service providers for details.)
- Files and records deleted by Reset All cannot be restored. Reset All deletes all downloaded S! Applications and Lifestyle-Applications.
- Handset Code returns to the default setting.

- A confirmation may appear before entering Handset Code; end the current function to proceed.
- When Double Number is active, regardless of usage mode setting, Reset Settings restores all default settings (Double Number is canceled), and Reset All clears all user files.

