

Basic Operations



Menu Operations	2-2	Advanced Features	2-27
Accessing Handset Functions.....	2-2	Main Menu	2-27
Icons/Notifications.....	2-3	Desktop Icons	2-27
Info.....	2-6	Text Entry	2-28
Navigating through Menus	2-7	Templates	2-29
Multitask	2-9	Dictionaries.....	2-29
Activating Another Function.....	2-9	Phone Book	2-30
Toggling Functions.....	2-10	S! Addressbook Back-up	2-32
Text Entry	2-11		
Overview.....	2-11		
Entering Characters in 5-touch Mode.....	2-12		
Editing Text	2-14		
Editing Templates	2-15		
Using Dictionaries	2-15		
Entering Characters in 2-touch Mode.....	2-16		
Entering Characters in T9 Input Mode.....	2-16		
Phone Book	2-19		
Overview.....	2-19		
Creating Phone Book Entries.....	2-20		
Using Phone Book	2-21		
Phone Book Settings	2-22		
S! Addressbook Back-up	2-25		
Overview.....	2-25		
Using S! Addressbook Back-up.....	2-25		

2

 


Accessing Handset Functions

- In this guide, most operations start from Main Menu.

From Main Menu

Press to open Main Menu. Use () to select an item and press to open sub menus.

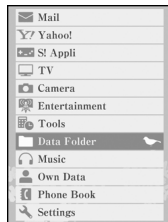

Main Menu

Tip

- Handset returns to Standby after 15 seconds of inactivity.

Using Softkeys & Multi Selector

Press Softkeys or use Multi Selector in Standby to access assigned functions.

Softkeys

- : Open Mail menu.
- (Press and hold): Open Yahoo! menu.
- : Access the function assigned to the key.

Multi Selector

- : Open Active Desktop Page.
- : Open Phone Book Search window.
- : Open Received Calls window.
- : Open Redial window.

 
 
Keyword Search

Enter a keyword to search function/menu items.

1

2 Enter a keyword

<Example> Enter "mail"

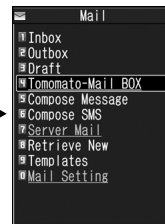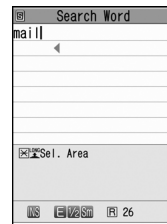

Corresponding items are underlined.

3 or to select an item

Tip

 
- To search for PC Mail functions/menus, set *Priority Mail Menu* (P. 14-19) to PC Mail.



From Original Menu

Assign often-used functions to Original Menu for quick access.

1 →

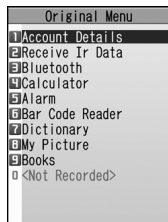

Press to toggle between Main Menu and Original Menu.

Enter Menu Item Number

 
Enter these numbers for direct menu access. Note that Main Menu Theme must be set to **Basic**.

- See P. 15-21 for menu item numbers.
- See P. 2-27 for details on changing Main Menu Theme.

<Example> Access **Select Ring Tone** (menu no. 13)

1

2 →

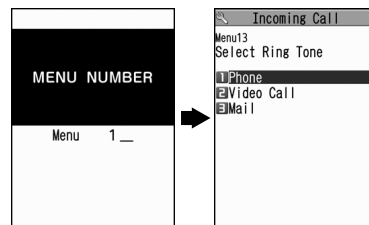

Icons/Notifications

Add functions to Icon Window and use them as shortcuts. Notifications appear to inform you of missed calls, new S! Mail/SMS messages, etc. Select a notification to check the information. The following shortcuts are set by default.

- Wi-Fiコンテンツを探す (Wi-Fi Contents)*
 - メニューリスト (Menu List)*
 - 各種手続・料金 (Manage Account/Fees)*
 - 待ちうた (Machi-Uta™)*
 - S! Quick News List* • TV
 - Photo Mode • Quick Search
- * Links to Japanese page. Requires network connection.



Icons



Menu Operations

2

Basic Operations

Icons

Icon	Function
	Wi-Fi コンテンツを探す Wi-Fi Contents
	メニューリスト Menu List
	各種手続・料金 Manage Account/Fees
	待ちうた Machi-Uta™
	S! Quick News List
	TV
	Photo Mode
	Quick Search
	Call Phone Number
	Compose S! Mail

Icon	Function
	Compose SMS
	Access Webpage (Yahoo! Keitai)
	Access Webpage (PC Site Browser)
	Play Melody
	Show Image
	Play Video
	S! Appli
	Inbox Folder (S! Mail/SMS)
	Movie Mode
	Voice Mode
	Schedule

Icon	Function
	To Do List
	Text Memo
	Bar Code Reader
	Text Reader
	Music Player
	Life History Viewer
	Calculator
	Dictionary
	Receive IR Transmission
	Bluetooth
	Original Menu



Icon	Function
	PC Site Browser
	Books
	Open PDF Files
	Play/Erase Msg.
	Play/Erase VC Msg.
	Pedometer
	Illumination

Notifications

Icon	Function/Information
	Missed Calls
	Answering Machine Play/delete messages.

Icon	Function/Information
	Answering Machine (Video Message) Play/delete Video Messages.
	Voice Mail
	New S! Mail/SMS Messages
	Missed Alarms
	Missed TV Programs
	Timer Recording Finished
	Maximum Call Cost Limit Reached
	Software Update
	USB Mode Communication

Icon	Function/Information
	Network Re-search
	New S! Info Channel
	S! Info Channel Reception Failure
	New Weather Info.
	Weather Info. Reception Failure
	View Content Keys*

Notifications disappear after accessing the functions/information. Answering Machine and Voice Mail notifications disappear after message is played back.

* Content key icon disappears after content keys are checked or deleted.



Menu Operations

Adding Icons

Add up to 15 icons.

- 1 From a function \Rightarrow \Rightarrow **Add Desktop Icon** \Rightarrow \Rightarrow (YES \Rightarrow)

Tip

- Alternatively,
 \Rightarrow \Rightarrow **Create Icon** \Rightarrow \Rightarrow Select function \Rightarrow \Rightarrow Select a Theme \Rightarrow \Rightarrow

Accessing Icons & Notifications

- 1 \Rightarrow



Icon Window

- 2 \Rightarrow **Select an icon** \Rightarrow \Rightarrow
 - Scrolling Icons \Rightarrow \Rightarrow

Info

Phone numbers, functions, etc. saved to Icon Window appear in Info Window.

Accessing Data and Functions

Press \Rightarrow to toggle Info Window and Icon Window.

- 1 \Rightarrow \Rightarrow



Info Window

Desktop opens to previously used window.

- 2 \Rightarrow **Select an item** \Rightarrow \Rightarrow

Items

Item	Details
What's New	Access/view Notifications (P. 2-5).
Unread messages	Access new S! Mail/SMS messages.
Schedule	Schedule Access schedule events (today/tomorrow).
	To Do List Access To Do List entries.
Shortcuts	Access Icons saved to Icon Window.
Phonebook	Phone Number Access phone numbers from Icon Window.
	E-mail address Select e-mail address (from Icon Window) to Create S! Mail.
Bookmarks	Yahoo! Keitai Access bookmarked sites.
	PC Site Browser Access bookmarked sites.




Item	Details
Images & Movies	Still images Open image.
	Video Play video.
Calendar	Open Calendar.
Clock	Access Alarm list (Set Main Time window appears when clock is not set).
Settings	<ul style="list-style-type: none"> Set items on/off. Change item order.

Navigating through Menus


Scrolling Pages

 Use **⏪** or **⏩** (D77- or D6) to scroll next/previous pages.

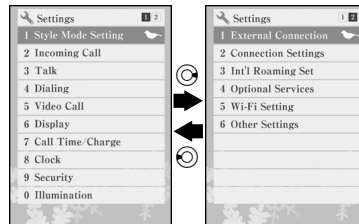

Selecting Menu Items Using Keypad

 Use keypad to enter number corresponding to menu item.

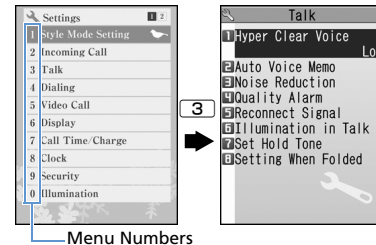

Return to Previous Window or Standby

Press **CLEAR** to cancel operation and return to previous window.

Press **⏪** to return to Standby.

● May not apply to all functions/windows.



More Features

Advanced

Main Menu

- Change Main Menu Theme
- Switch to Simple Menu
- Temporarily Change Design Theme of Main Menu

(▶ P. 2-27)

Desktop Icons

- Delete Notifications
- Edit Title of a Desktop Icon
- Change Icon Image
- Check Icon Information
- Change Order of Desktop Icons
- Delete Desktop Icons
- Reset Desktop Icons
- Change Theme of Desktop Icons
- Show/Hide Desktop Icons

(▶ P. 2-27)

Customize

Display Settings

- Set Softkey Color

(▶ P. 14-4)

Desktop Icons

- Set Desktop Theme
- Change Icon Design of a Theme
- Change Order of Icons of a Theme
- Copy Icons to Another Theme

- Move Icons to Another Theme
- Delete Icons of a Theme
- Set New S! Mail/SMS Indicator in 3D

(▶ P. 14-6)

Menu Display Settings

- List View and Details View
- Set Main Menu Theme
- Change Icon Design (Original Theme)
- Change Background (Original Theme)
- Reset Original Theme Settings
- Save Last Selected Menu Item to Memory
- Add a Menu Item to Original Menu
- Change Order of Original Menu Items
- Cancel Original Menu Items
- Reset Original Menu

(▶ P. 14-7)

Shortcut Key

- Change Function Assigned to Shortcut Key

(▶ P. 14-29)



Activate one function per group at one time.

Function Group	Function
Mail Group	Mail
Yahoo! Group	Yahoo! Keitai
S! Appli Group	S! Appli
Settings Group	Settings, Optional Services
Tools Group	Data Folder, Tools, Phone Book, Own Data, Camera
TV & Music Group	TV, Music

- See P. 15-2 for available combinations of functions that can be activated at the same time.
- Confirm currently active tasks in Tasks Bar.



Tasks Bar

- Transmission fees are incurred while accessing functions during a voice call.

Activating Another Function



Activate another function without exiting current function.

1 While using a function ⇒ ⇒

▶ To Activate Function from Main Menu

 ⇒ Select another function ⇒ 

▶ Mobile Widget

 ⇒ Select a widget ⇒ 

▶ Mail Function



▶ To Access Yahoo! Keitai Portal



▶ To Activate Function Assigned to Shortcut Key

 




2

2 Toggling Functions

1 When multiple functions are active ⇨

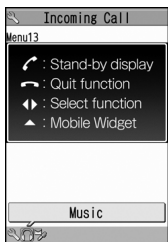

Task Switch Window

To go to Standby, press

Press to reopen Task Switch window.

2 ⇨ Select a task indicator ⇨

Tip

- To End Multitask:
[Task Switch] window ⇨ ⇨ *Quit Selected* or *Quit All Function* ⇨
- Alternatively, press and hold to return to Standby while current functions remain active.



Handset has three text input methods:

 
5-touch, 2-touch and T9 Input.

- This guide mainly explains Japanese text entry in 5-touch mode.

Overview

Text Entry Window

A text entry window consists of Character Entry Pane, Guide Pane and Status Pane. Indicator and key descriptions are as follows:

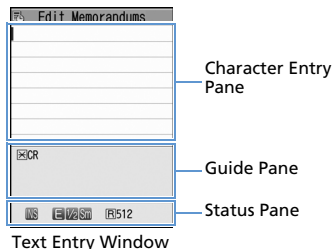

Character Entry Pane

Guide Pane

Status Pane

Text Entry Window

Character Entry Pane

	Cursor
◀	End mark (end of text)

Guide Pane

▲▼ CHG	⊙ to convert characters
▲▼ All	⊙ to search Phone Book
▲▼ Search	
◀▶	⊙ to specify a text range to copy/cut
▲▼ Area	
⊗ CR	⌘ to insert line feed
⊗ A/a	⌘ to switch case of each character, or to add dakuten (`)/handakuten (`)
⊞ AA → aa	⌘ to cancel Caps Lock mode
⊞ aa → Aa	⌘ to set Shift mode
⊞ Aa → AA	⌘ to set Caps Lock mode
⊗ Sel. Area	Press and hold ⌘ to select area of text to copy (cut).
⊞ Paste	Press and hold ⌘ to paste copied or cut text.
↶ Back	↶ to cycle characters on a key in reverse order (e.g. え → ゃ)


Status Pane

2 ⊙	Text input method (2-touch/T9 Input mode) (No indicator for 5-touch mode)
INS OVR	Insert/Overwrite mode
⊞ ⊞ ⊞ ⊞	Character entry mode
⊗	Kuten code input mode (P. 2-29)
1/2 1/2	Double-byte/Single-byte mode
Sm	Lower case input mode
Sm ⊞	Shift/Caps Lock mode
R	Bytes remaining for text entry
Ln	Number of entered characters (appears when entering text to USIM Phone Book/SMS message)



Split Windows

 In some instances, a second window opens with text entry window.

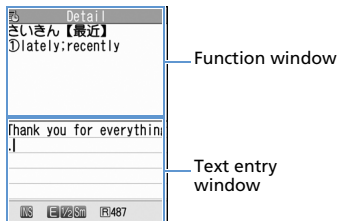

Referring to Dictionary from a text entry window

Switching Windows

Press **[R]** and select *Change Window* to switch windows.

Changing Text Input Methods

- 1 **[Text Entry] window** ⇨ **[R]** ⇨ **CHG Input Method** ⇨ ● ⇨ **Select a text input method** ⇨ ●
Alternatively, press and hold **[R]**.

Toggling Character Entry Modes

- 1 **[Text Entry] window** ⇨ **[R]**
Press **[R]** to toggle entry modes.
Kanji/hiragana → Katakana →
Alphanumerics → Numbers

Tip

- In 2-touch mode, press **[R]** to toggle single-byte and double-byte modes.

Interruptions during Text Entry

When Battery Runs Out

Battery alarm sounds and *Recharge Battery* appears. Text is automatically saved. Access the same function to continue text entry. Text may not be saved depending on the function.

When **[END]** is Pressed

A message appears asking whether to end text entry. Select *YES* and press ● to end text entry without saving the text. To continue text entry, select *NO* and press ●.

When a Voice Call Arrives

Answer the call. After call ends, text entry window returns.

Entering Characters in 5-touch Mode

Press a key multiple times to cycle through letters assigned to that key.
● For key assignment, see P. 15-11.

Kanji, Hiragana & Katakana

Enter a reading (in hiragana) and convert to kanji, katakana, etc.

Using Word Prediction

 
Enter a character and Word Prediction suggests words starting with that character. Word Prediction also suggests word selection for words to follow. Switch to kanji/hiragana mode to use Word Prediction.




<Example> Entering “携帯電話”

1 [Text Entry] window → **2**
(four times)

“け” is entered in Character Entry Pane.
Suggestion list shows predictions for words beginning with “け” in Guide Pane.

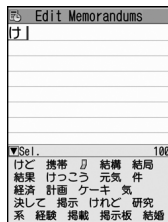

2 → Select “携帯” →

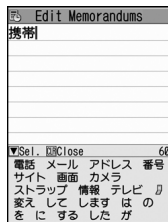 


“携帯” appears in Character Entry Pane.
A suggestion list of words that follow
“携帯” appears in Guide Pane.

■ When Required Word Does Not Appear



Continue hiragana (reading) entry in
Character Entry Pane to narrow down
selection.

 3 → Select “電話” →

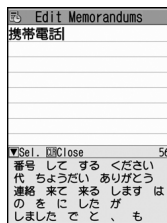

■ To Exit Suggestion List



Tip

 
- Handset has a learning feature that adds entered words to the suggestion list. Press and hold **CLEAR** to delete an added word from the suggestion list.

Converting Hiragana

If the required suggestion does not appear or word prediction is set to off, convert to Kanji as shown below:

<Example> Entering “佐々木”

1 [Text Entry] window → **3** (once)
→ → **3** (once) → **2** (twice)

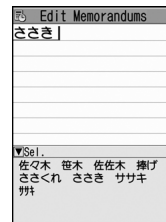

2 →

■ To Determine Entered Hiragana without
Converting It



3 Select a word →

■ To Change Conversion Range





Dakuten (`) & Handakuten (ˆ)

<Example> Entering “が”

- 1 [Text Entry] window ⇨ [2] (once) ⇨ [✖] ⇨ [●]

 
Switching to Lower Case

<Example> Change “つ” to “つ”

- 1 [Text Entry] window ⇨ [4] (three times) ⇨ [✖] ⇨ [●]

Pictographs & Symbols

- 1 [Text Entry] window ⇨ [▽]

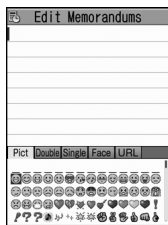

- 2 Select a pictograph/symbol ⇨ [●]
Press [☐] or [▽] to toggle pictograph/symbol categories.

To Toggle Full-Screen List and Continuous Entry

⇨ [R]

- 3 [CLEAR]
The pictograph/symbol list window is closed.

Emoticons

- 1 [Text Entry] window ⇨ [R] ⇨ **Face Mark** ⇨ [●]
- 2 Select an emoticon ⇨ [●]

Common Phrases (Templates)

- 1 [Text Entry] window ⇨ [R] ⇨ **Common Phrases** ⇨ [●]
- 2 Select a folder ⇨ [●] ⇨ Select a phrase ⇨ [●] (twice)

Alphanumerics, Numbers & Katakana

Enter alphanumerics, numbers or katakana in kanji/hiragana input mode.

- 1 [Text Entry] window ⇨ Enter hiragana ⇨ [▽] ⇨ Select a character ⇨ [●]

Editing Text

Deletion & Correction

- 1 [Text Entry] window ⇨ Move cursor to the left of the character to delete ⇨ [CLEAR]
 - To Delete All Characters to the Right of Cursor
⇨ Press and hold [CLEAR]
 - To Delete Entire Text
⇨ Move cursor to the end of text ⇨ Press and hold [CLEAR]

- 2 Position cursor ⇨ Enter correct characters

Copy, Cut & Paste

- Only one entry can be stored on clipboard. If you copy or cut new text, the previously copied or cut text is overwritten.
- Copied or cut text can be pasted repeatedly until you copy or cut new text, or turn handset power off.

 
- 1 [Text Entry] window ⇨ [R] ⇨ **Copy or Cut** ⇨ [●]



- 2 Move cursor to beginning of characters → ●
- 3 Move cursor to end of characters → ●
- 4 Position cursor → [P] → **Paste** → ●


Editing Templates

- 1 → **Own Data** → ● → **Common Phrases** → ●

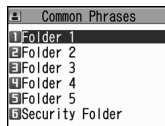

Templates (Common phrases) Window

 - 2 Select a folder → ● (→ Enter Security Code → ●)

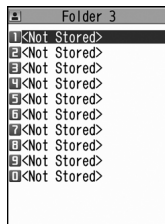

Templates List

 
- 3 Select an entry → [P] → Enter text → ● (→ Enter title → ●)

Using Dictionaries

Saving Words to Own Dictionary

Save frequently used words to Own Dictionary. For each word, save a reading (in hiragana). When the reading is entered in a text entry window, the word appears among the suggestions.

- 1 → **Own Data** → ● → **Own Dictionary** → ●

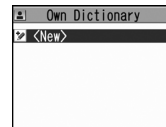

Own Dictionary Window

- 2 <New> → ● → Enter word → ●
→ Enter reading → ●

Tip

 
- To check saved words:
Select a word → ●



Using Downloaded Dictionaries

Download dictionaries from Yahoo! Keitai sites. Dictionary must be enabled in advance.

- 1 ⇒ **Own Data** ⇒ ⇒ **DL Dictionary** ⇒

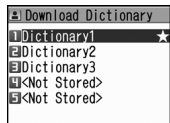

Downloaded Dictionary Window

- 2 Select a dictionary ⇒

★ appears next to the enabled dictionary.

Tip

- To disable a dictionary: [Downloaded Dictionary] window ⇒ Select a dictionary with ★ ⇒
- If an emoticon dictionary is enabled, its content is reflected in the emoticon list when entering emoticons.

Entering Characters in 2-touch Mode

Each hiragana character is entered by combining two key presses.

- For combinations of character input keys, see P. 15-12.
- Procedures for selecting predicted words and for converting entered hiragana are the same as those used in 5-touch mode (P. 2-12).

<Example> Entering “キャンブ”

- The following example is in Japanese text entry mode.

- 1 [Text Entry] window ⇒ (き) ⇒ (change to lower case mode) ⇒ (ゃ) ⇒ (change to upper case mode) ⇒ (ん) ⇒ (ふ) ⇒ (°)

- 2 ⇒

Tip

- Pressing also adds dakuten (°) and handakuten (°) or toggles upper case and lower case.
- Press to toggle double-byte and single-byte modes.

Entering Characters in T9 Input Mode

 
Press a key once for each character, and select the word from the suggestion list.

- For key assignment, see P. 15-13.
- When character entry mode is “Number,” 5-touch input method is automatically applied.

<Example> Entering “春”

- The following example is in Japanese text entry mode.

- 1 [Text Entry] window ⇒ (row は) ⇒ (row 5)
Word predictions for the key combination appear.

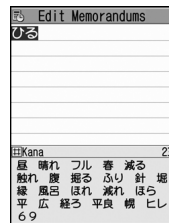

■ To Change Conversion Range





■ Toggle Kanji and Hiragana Suggestion Lists

⇒ #

■ Toggle English and Japanese Suggestion Lists

⇒ ☐

2

☐ ⇄ ☐

Select word from among the suggestions in Guide Pane.

■ To Show Converted Words on Suggestion List

⇒ /P

For example, if you specify “はる,” then “張る,” “貼る” and other words that have the same reading appear on the suggestion list.

■ To Show Predicted Words on Suggestion List

⇒ ☐

For example, if you specify “はる,” then “春休み,” “遥か” and other words that begin with the same reading appear on the suggestion list.

■ To Exit Suggestion List and Continue Character Entry

⇒ CLEAR

3

●

Re-entering Words

Re-enter as shown below if the desired word does not appear.

 
<Example> Entering “らんらんと”

- The following example is in Japanese text entry mode.

1 [Text Entry] window ⇄ 9 (row ら) ⇄ 0 (row わ) ⇄ 9 (row ら) ⇄ 0 (row わ) ⇄ 4 (row た)
 “らんらんと” does not appear in suggestion list.


2

☐

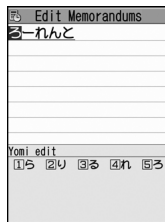

Cursor is on the first character of the word. The edit window opens in Guide Pane, where hiragana characters of row “ら” appear.

 3 1 (ら) ⇄ 3 (ん) ⇄ 1 (ら) ⇄ 3 (ん) ⇄ 5 (と)

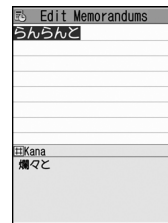

■ If No Correction is Necessary

⇒ ☐ to move cursor to the next character

■ To End Re-entering a Word

⇒ /P

The words predicted/converted from the re-entered word appear on the suggestion list.

4

●



More Features

Advanced

Text Entry

- Switch between Lower Case & Upper Case
- Switch between Single-byte & Double-byte
- Cycle Characters in Reverse Order
- Undo Last Operation
- Move Cursor to Top/End of Text
- Overwrite & Insert Modes
- Insert Line Feed
- Input a Space
- Use Dictionary
- Quote Text
- Use Kuten Codes

(▶ P. 2-28)

Templates

- Edit a Folder Name
- Reset a Folder Name
- Edit Templates
- Reset Templates

(▶ P. 2-29)

Dictionaries

- Edit Entries
- Delete Entries
- Edit Title
- View Information
- Delete Dictionaries

(▶ P. 2-29)

Customize

Text Entry

- Set Text Input Method
- Set Word Prediction
- Set to Show T9 Suggestion Words in Kanji or Hiragana
- Clear Learning History
- Change Font Size
- Set Auto Cursor Movement in 5-Touch Mode

(▶ P. 14-29)



Overview

Save phone numbers, e-mail addresses and other contact information to Phone Book.

Contacts & Settings

Entry Items

- FN · N · F Name & Reading
- Group
- 4 Phone Numbers
- 3 E-mail Addresses
- Address
- Location Information
- Birthday
- Memo
- Still Image
- Entry Number

Custom Settings

- Incoming Ringtone
- Incoming Image
- Illumination
- Vibration
- Outgoing Message

Others

- Secret Data



Handy Functions

Speed Dial

Abbreviated dialing for numbers in Phone Book (P. 3-12).

Tomo-Den

Save frequently accessed Phone Book entries to Tomo-Den (P. 3-12).

Reject Calls

Reject calls from phone numbers not saved in Phone Book (P. 4-6).

● Back Up Important Information

Keep a separate copy of Phone Book entry information. When battery is exhausted or removed for extended periods, Phone Book data may be lost or altered. Damage to handset may also affect data recovery. SoftBank is not liable for damages from lost/altered Phone Book data.



 
Creating Phone Book Entries

<Example> Enter a name, phone number, e-mail address and specify a group

1 → **Phone Book** → → → **Add to Phone Book** → → **Phone** →

2 → **Enter family name** → → **Check reading** → → **N** → → **Enter first name** → → **Check reading** →

Reading is entered automatically. Edit as necessary.

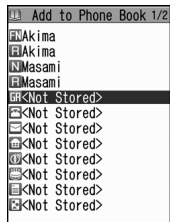

Phone Book Entry Window

3 → → **Select a group** →

4 → → **Enter phone number** → → **Select an icon** →

To save additional numbers, select <Not Stored> and repeat the same step.

5 → → **Enter e-mail address** → → **Select an icon** →

To save additional addresses, select <Not Stored> and repeat the same step.

6

Setting Incoming Image

1 **[Phone Book Entry] window** → →

▶ **To Capture an Image with Camera Photo Mode** → → Capture image →

▶ **To Select an Image in Data Folder Select Image** → → Select a folder → → Select a still image →

Tip

- To cancel selected image, select *Release This* and press .

Creating Entries from Other Functions

Create entries from:

- Received calls
- Dialed Calls
- Redial
- Text Reader
- Bar Code Reader
- Receive/Sent Address List (S! Mail & SMS)
- Yahoo! Keitai
- Phone Number Entry window

<Example> Create an entry from Received Calls

1 → **Select a record** → → **Add to Phone Book** → → **Phone** →

▶ **To Save as New Entry New** →

▶ **To Add to Existing Entry Add** → → Search Phone Book → → Select an entry → (twice)
Phone number is entered.

2 **Enter other items** → (→ **YES** →



Resuming Phone Book Edit Operation

If battery is empty or if another function was activated while editing an entry, resume operation as follows:

- 1 → **Phone Book** → → → **Add to Phone Book** → → **Phone** → → **Recall** →
- 2 Enter each item → (→ **YES** →)

 
Tip

- Save entry before you exit Phone Book. Otherwise, all changes will be lost.

Using Phone Book


Dialing from Phone Book

- 1 → **Phone Book** →

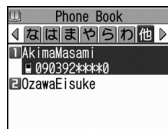

Phone Book Entry List

 - 2 or to switch tabs → → → **Select an entry** →

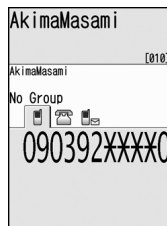

Entry Details

 
- 3 → **Select a number** → → Press for video calls.

Tip

- Alternatively, select a phone number from Phone Book Entry List and press to make a call. If there are multiple entries, the first number is called.

Specifying a Search Method

- 1

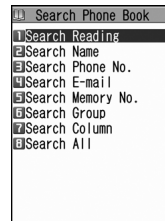

Phone Book Search Window

- 2 **Select a search method** →

Search Reading:

Enter a reading and press .

Search Name:

Enter a name and press .

Search Phone No.:

Enter a phone number and press .

Search E-mail:

Enter an e-mail address and press .

Search Memory No.:

Enter three-digit entry number.

Search Group:

Select a group to view saved entries.

 
Search Column:

Press a key (- or) to access the tab corresponding to that key.



Search All:

Phone Book is organized by tabs (Japanese syllabary order).

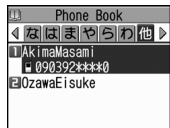

Phone Book Entry List

Tip

- Phone Book entries saved on USIM Card are indicated by

Accessing Entries from Other Functions

Access Phone Book entries from Received Calls, Dialed Calls, Redial and Received/Sent Address List (S! Mail & SMS).

Access Entries from Received Calls

- 1 → → **Look-up Phone Book** →

Access Entries from Dialed Calls

- 1 → **Own Data** → → **Dialed Calls** → → **Look-up Phone Book** →

Access Entries from Redial

- 1 → → **Look-up Phone Book** →

Access Entries from Received Address List (S! Mail & SMS)

- 1 Press and hold → → **Look-up Phone Book** →

Access Entries from Sent Address List (S! Mail & SMS)

- 1 Press and hold → → **Look-up Phone Book** →

Phone Book Settings

Customizing Handset Response

Set different ringtones, images, etc. per entry item or Group.

Indicators

The following indicators appear for set items.



- Ringtone (Incoming Calls)
- Ringtone (Mail)
- Illumination (Incoming Calls)
- Illumination (Mail)
- Vibrator (Incoming Calls)
- Vibrator (Mail)
- Incoming Image (Calls)
- Outgoing Message (Incoming Calls)



To Customize by Phone Number/E-mail Address

<Example> Set a ringtone for incoming voice calls

- 1 [Entry Details] ⇨ ⇨ Select a phone number ⇨ ⇨ **Ring Tone/Image** ⇨
- 2 **Voice Call (Recv.)** ⇨
- 3 **Ring Tone** ⇨ ⇨ Select a ringtone type ⇨ (⇨ Select a folder ⇨) (⇨ Select a ringtone ⇨)

To Customize by Group

<Example> Set illumination for incoming messages

- 1 [Phone Book Entry List] ⇨ ⇨ **Group Setting** ⇨
- 2 Select a group ⇨ ⇨ **Ring Tone/Image** ⇨
- 3 **Mail (Recv.)** ⇨
- 4 **Illumination** ⇨ ⇨ Select a pattern ⇨

Note

- Custom Settings are unavailable for secret Phone Book entries.
- Custom Settings are canceled when entry is set as secret.

Tip

- To cancel Custom Settings, select an item with ★ and press .

Restricting Calls to/from Specific Phone Numbers

Restrict calls to/from specific numbers in Phone Book. This can help manage personal calls and prevent nuisance calls.

- 1 [Entry Details] ⇨ ⇨ Select a phone number ⇨ ⇨ **Restrictions** ⇨
- 2 Enter Security Code ⇨
- 3 Select a restriction type ⇨

Restrict Dialing:
Permit outgoing calls to only one number. Note that the number can only be dialed from Phone Book.

Call Rejection:

Restrict incoming calls from a specified number.

Call Acceptation:

Receive incoming calls only from a specified number.

Tip

- ★ indicates currently set restriction; to cancel, select the setting and press .

When Restrict Dialing is Set

The following operations are disabled:

- Dialing by Keypad
- Dialing from Received Calls
- Calling from Phone Book (except: calling specified number in Phone Book)

Tip

- When *Restrict Dialing* is set, all records on Redial, Dialed Calls and Sent Address List (S! Mail & SMS) are deleted.
- Emergency numbers 110, 119 and 118 are available even when *Restrict Dialing* is set.
- If you change or delete the specified number, the set restriction is canceled. Cancel *Restrict Dialing* to edit or delete.



Setting Secret Entries

Prevent others from accessing certain Phone Book entries.

- Phone Book entries set as secret only appear in Secret Mode or Secret Data Only Mode (P. 4-7).

1 [Entry Details] ⇨ ⇨ **Set Secret** ⇨

Tip

- To cancel Secret Setting: [Entry Details] ⇨ ⇨ **Release Secret** ⇨
- Entries saved while Secret Mode or Secret Data Only Mode is active are saved as secret entries.
- When a Tomo-Den entry is set as a secret entry, the entry's Tomo-Den setting is canceled.

Managing USIM Phone Book

Phone Book entries can be copied between handset and USIM Card.

1 ⇨ **Tools** ⇨ ⇨ **USIM Operation** ⇨ ⇨ **Enter Security Code** ⇨

2 **Copy** ⇨ ⇨ **Phone** → **USIM** or **USIM** → **Phone** ⇨ ⇨ **Phone Book** ⇨

3 **Search Phone Book**

4 **Select an entry** ⇨
Repeat this step to specify other entries.

5 ⇨ **YES** ⇨

Note

- Items that cannot be saved to USIM Phone Book are not copied.
- Phone Book entries set as secret cannot be copied.
- All handset transmissions are unavailable while copying entries.

More Features

Advanced

Saving Additional Information

- Save an Address or Memo
- Save Location Information
- Save Birthday
- Change Entry Number

▶ P. 2-30

Phone Book Search

- Change Index Tab of Phone Book Entry List
 - Change Font Size
 - Change Phone Number/E-mail Address Order
 - Compose an S! Mail from Phone Book
 - Compose an SMS Message from Phone Book
- ▶ P. 2-30

Managing Phone Book

- Check Custom Ringtone/Image Settings by Item
 - Cancel Custom Ringtone/Image Settings by Item
 - Check Restriction Settings by Restriction Type
 - Cancel Restriction Settings by Restriction Type
 - Check Number of Phone Book Entries
 - Edit a Phone Book Entry
 - Copy a Phone Book Entry
 - Check Location Information
 - Send Entries by S! Mail
 - Delete Entries
 - Delete Items from an Entry
 - Delete an Entry from USIM Card
- ▶ P. 2-31

Customize

Phone Book

- Set Preferred Search Method
- Change Group Name

▶ P. 14-12



Overview

Back up handset Phone Book to server.

- Separate subscription required.
- See SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>) for details.
- Service subscription activates **Auto Sync Settings** during network information retrieval. Synchronization will automatically begin 10 minutes after you edit Phone Book.
- Even if **Auto Sync Settings** is set to **OFF**, it returns to **Synchronize** after network information is retrieved again.
- After unsubscribing, make sure that **Auto Sync Settings** is set to **OFF**.

Note

- Fully charge battery beforehand.
- When **Auto Sync Settings** is **ON**, editing entries automatically synchronizes, backs up or downloads updated entries. Packet transmission fees are incurred.
- All data in the server Phone Book will be deleted if **Synchronize**, **Sync From Client** or **Backup** is performed after deleting all data in handset Phone Book.
- All data in handset Phone Book will be deleted if **Synchronize**, **Sync From Server** or **Restore** is performed after deleting all data in the server Phone Book.
- The following Phone Book items are not synchronized.
 - Ring Tone
 - Illumination
 - Vibrator
 - Incoming Call Image

Using S! Addressbook Back-up

Synchronizing Phone Book

Connect to Phone Book backed up on server and bring it up to date with handset's Phone Book.


- The first time you synchronize will be in **Synchronize** regardless of the setting.

- Synchronization can be any of the following types.

Synchronize	Synchronize handset Phone Book and server Phone Book. Both Phone Books are synchronized with the newest information.
Sync From Client	Copy updated information to server Phone Book.
Sync From Server	Copy update information to handset Phone Book.
Backup	Back up handset Phone Book to server (note that Server Phone Book is deleted).
Restore	Restore server Phone Book to handset (note that handset Phone Book is deleted).



 - 1 MENU ⇒ **Tools** ⇒ ⇒ **S!**
Addressbook Back-up ⇒

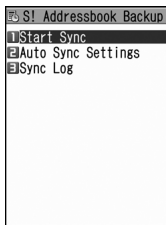

S! Addressbook Back-up Window

- 2 **Start Sync** ⇒ ⇒ Enter Security Code ⇒

- 3 Select type of synchronization ⇒ ⇒ **YES** ⇒

Synchronization starts. Synchronization results appear after completion.

- 4

Checking Synchronize Log

- 1 [S! Addressbook Back-up] window
⇒ **Sync Log** ⇒ ⇒ Select an item ⇒

More Features

Advanced

- S! Addressbook Back-up
- Delete Synchronize Log

▶ P. 2-32)

Customize

- S! Addressbook Back-up
- Set Auto Synchronize
 - Set Auto Synchronize Off
 - Check Auto Synchronize Settings

▶ P. 14-12)



Main Menu

Change Main Menu Theme

Select a pattern (YES or NO)

Switch to Simple Menu

Simple Menu (YES or NO)

In Simple Menu, font size is larger and menu options are limited to basic ones.

Temporarily Change Design Theme of Main Menu

Select a theme

Next time you open Main Menu, default Main Menu returns.

Desktop Icons

Delete Notifications

Press and hold

Some notifications remain.

Edit Title of a Desktop Icon

Select an icon Edit Title

Enter title

Change Icon Image

Select an icon CHG Icon Image Select Icon Image

Select a folder Select a file

To reset icon image, select *Default Icon Image* and press .

Check Icon Information

Select an icon Icon Info Setting

Change Order of Desktop Icons

Select an icon Sort

YES Select a position

Delete Desktop Icons

Select an icon Delete

- To Select *Delete This*
 - Delete This YES
- To Select *Delete selected*
 - Delete selected Select icons
 - YES
- To Select *Delete All*
 - Delete All YES

Reset Desktop Icons

Reset Desktop YES

Change Theme of Desktop Icons

Change Desktop

Select a theme YES

Show/Hide Desktop Icons

Display Setting

Display always or *Display at Use*

When *Display at Use* is set, Desktop Icons only appear when you press in Standby.



Text Entry

Start Here

[Text Entry] window P. 2-11

Functions Before Entering Text

Switch between Lower Case & Upper Case

[Text Entry] window → → **Lower Case** or **Upper Case** → ●

Switch between Single-byte & Double-byte

[Text Entry] window → → **Single-Byte** or **Double-Byte** → ●

Functions While Entering Text

Cycle Characters in Reverse Order

[Text Entry] window → Input a character →

This procedure is available in 5-touch mode.

Undo Last Operation

[Text Entry] window → Press and hold

Move Cursor to Top/End of Text

[Text Entry] window → → **Jump** → ●
→ **To Beginning** or **To End** → ●

Overwrite & Insert Modes

[Text Entry] window → → **Overwrite** or **Insert** → ●

Text entry windows always open in **Insert** mode.

Insert Line Feed

[Text Entry] window →

Press to add a space at the end of text.

Input a Space

[Text Entry] window → → **Space** → ●

Press to add a space at the end of text.

Use Dictionary

[Text Entry] window → → **Refer Dic.** → ●

- To Enter a Word
 - **Enter Word** → ● → Enter word → ●
 - Select a dictionary → ● → Select a word → ●
 - ● → Read descriptions of the word
- To Select Area
 - **Select Area** → ● → Move cursor to beginning of word → ●
 - Move cursor to end of word → ● → Select a dictionary → ●
 - ● → Select a word → ● → Read descriptions of the word
- To Enter a Word from Search History
 - **Reference History** → ● → Select a word → ●
 - Select a dictionary → ● → Select a word → ●
 - Read descriptions of the word



Quote Text

[Text Entry] window → → **Quote Data** →

- To Quote from a Phone Book Entry
→ **Quote Phonebook** → → Search Phone Book → Select a data item to quote text from →
- To Quote from Account Details
→ **Account Details** → → Enter Security Code → → Select a data item →
- To Scan Text by Text Reader
→ **Text Reader** → → Scan text with camera →
- To Scan Bar Code by Bar Code Reader
→ **Bar Code Reader** → → Scan a bar code with camera →

Use Kutten Codes

[Text Entry] window → → **Kutten Code** → → Enter kutten codes (P. 15-14)

Templates

Start Here

[Templates (Common phrases)]
window P. 2-15

[Templates List] P. 2-15

Edit a Folder Name

[Templates (Common phrases)] window → Select a folder → → **Edit Folder Name** → → Enter folder name →

Reset a Folder Name

[Templates (Common phrases)] window → Select a folder → → **Reset Name** → → **YES** →

Edit Templates

[Templates List] → Select a template → → **Edit** → → Edit phrase →

Reset Templates

[Templates List] → Select a template →

- To Select **Delete This**
→ **Delete This** → → **YES** →
- To Select **Delete All**
→ **Delete All** → → Enter Security Code → → **YES** →

User entries are deleted, and preinstalled templates return to default.

Dictionaries

Start Here

[Own Dictionary] window P. 2-15

[Downloaded Dictionary] window P. 2-16

Own Dictionary

Edit Entries

[Own Dictionary] window → Select an entry → → Edit word → → Edit reading →



Delete Entries

[Own Dictionary] window ⇨ Select an entry ⇨ ⇨ **Delete** ⇨ ●

● To Select *Delete This*
⇨ *Delete This* ⇨ ● ⇨ **YES** ⇨ ●

● To Select *Delete selected*
⇨ *Delete selected* ⇨ ● ⇨ Select entries
⇨ ● ⇨ ⇨ **YES** ⇨ ●

● To Select *Delete All*
⇨ *Delete All* ⇨ ● ⇨ Enter Security Code
⇨ ● ⇨ **YES** ⇨ ●

Downloaded Dictionaries

Edit Title

[Downloaded Dictionary] window ⇨
Select a dictionary ⇨ ⇨ **Edit Title** ⇨ ●
⇨ Edit title ⇨ ●

View Information

[Downloaded Dictionary] window ⇨
Select a dictionary ⇨ ⇨ **Dictionary Info**
⇨ ●

Delete Dictionaries

[Downloaded Dictionary] window ⇨
Select a dictionary ⇨ ⇨

● To Select *Delete This*
⇨ *Delete This* ⇨ ● ⇨ **YES** ⇨ ●

● To Select *Delete All*
⇨ *Delete All* ⇨ ● ⇨ Enter Security Code
⇨ ● ⇨ **YES** ⇨ ●

Phone Book

Start Here

[Phone Book Entry] windowP. 2-20

[Phone Book Entry List]P. 2-21

[Entry Details]P. 2-21

Saving Additional Information

Save an Address or Memo

[Phone Book Entry] window ⇨ or
⇨ ● ⇨ Enter content ⇨ ● (⇨ ⇨
Select an icon ⇨ ●)

Save Location Information

[Phone Book Entry] window ⇨ ⇨ ●
⇨ **From Position Loc.** or **From Location History** ⇨ ● (⇨ Select location information
⇨ ●)

To check location information, select
Location Info Detail and press ●.

To delete location information, select **Delete Location Info** and press ●.

Save Birthday

[Phone Book Entry] window ⇨ ⇨ ●
⇨ Enter date of birth ⇨ ●

Change Entry Number

[Phone Book Entry] window ⇨ **No** ⇨ ●
⇨ Change entry number ⇨ ●

Phone Book Search

Change Index Tab of Phone Book Entry List

[Phone Book Entry List] ⇨ ⇨ **Change Display** ⇨ ● ⇨ **Alphabet, Memory No.** or **Group** ⇨ ●



Change Font Size

[Phone Book Entry List]/[Entry Details] ⇨
 √☐ ⇨ **Font Setting** ⇨ ● ⇨ **Standard
 Font, Big Font** (or **Small Font**) ⇨ ●

Change Phone Number/E-mail Address Order

[Entry Details] ⇨ Select a phone
 number/e-mail address ⇨ √☐ ⇨ **Move to
 Top** ⇨ ●

☞ This procedure is available when more than
 one phone number/e-mail address is saved to
 a Phone Book entry.

Compose an S! Mail from Phone Book

[Entry Details] ⇨ ☺ ⇨ Select an e-mail
 address ⇨ ● ⇨ **Compose S! Mail**

Compose an SMS Message from Phone Book

[Entry Details] ⇨ ☺ ⇨ Select a phone
 number ⇨ √☐ ⇨ **Compose SMS** ⇨ ● ⇨
 Compose SMS message

Managing Phone Book

Check Custom Ringtone/Image Settings by Item

[Phone Book Entry List] ⇨ √☐ ⇨ **Ring
 Tone/Image** ⇨ ● ⇨ Select an item with ★
 ⇨ ●

☞ Select another item with ★ to view that
 setting.

Cancel Custom Ringtone/Image Settings by Item

[Phone Book Entry List] ⇨ √☐ ⇨ **Ring
 Tone/Image** ⇨ ● ⇨ Select an item with ★
 ⇨ ● ⇨ Select an item with ★ ⇨ √☐ ⇨
Release Settings ⇨ ● ⇨ **YES** ⇨ ●

☞ When the same ringtone/image is set for
 multiple entries, canceling the setting for one
 entry cancels setting for all entries.

Check Restriction Settings by Restriction Type

[Phone Book Entry List] ⇨ √☐ ⇨
Restrictions ⇨ ● ⇨ Enter Security Code
 ⇨ ● ⇨ Select a restriction type with ★ ⇨
 √☐ ⇨ **Check Settings** ⇨ ●

Cancel Restriction Settings by Restriction Type

[Phone Book Entry List] ⇨ √☐ ⇨
Restrictions ⇨ ● ⇨ Enter Security Code
 ⇨ ● ⇨ Select a restriction type with ★ ⇨
 √☐ ⇨ **Release Settings** ⇨ ● ⇨ **YES** ⇨ ●

Check Number of Phone Book Entries

[Phone Book Entry List] ⇨ √☐ ⇨ **No. of
 Phone Book** ⇨ ●

Edit a Phone Book Entry

[Entry Details] ⇨ √☐ ⇨ **Edit Phone Book**
 ⇨ ● ⇨ Edit each item ⇨ √☐ ⇨ **YES** ⇨
 ●

☞ Select **No** and edit the entry number. The
 edited entry is saved as a new entry and the
 original entry remains as before.

Copy a Phone Book Entry

[Entry Details] ⇨ √☐ ⇨ **Copy to USIM** or
Copy from USIM ⇨ ● ⇨ **YES** ⇨ ●

Check Location Information

[Entry Details] ⇨ ☺ ⇨ Select location
 information ⇨ √☐ ⇨ **Read Map** ⇨ ● ⇨ (⇨
Send or No Confirmation ⇨ ●)



Send Entries by S! Mail

[Phone Book Entry List] → → **Attach to Mail** → → Compose S! Mail →

Available only in S! Mail.

Delete Entries

[Phone Book Entry List] → Select an entry → → **Delete Data** →

- To Select *Delete This*
→ *Delete This* → → YES →
- To Select *Delete selected*
→ *Delete selected* → → Select entries → → → YES →
- To Select *Delete All*
→ *Delete All* → → Enter Security Code → → YES → → YES →

Delete Items from an Entry

[Entry Details] → → Select an item → → **Delete Data** → → *Delete Phone No., Delete Mail Add., Delete Address, Delete Loc. Info, Delete Birthday, Delete Memorandums* or *Delete Image* → → YES →

Delete an Entry from USIM Card

→ **Tools** → → **USIM Operation** →
 → Enter Security Code → → **Delete** →
 → **USIM** → → **Phone Book** →
 → Search Phone Book → Select an entry → → → YES →

S! Addressbook Back-up

Start Here

[S! Addressbook Back-up] window.... P. 2-26

Delete Synchronize Log

[S! Addressbook Back-up] window → **Sync Log** → → Select Log →

- To Select *Delete This*
→ *Delete This* → → YES →
- To Select *Delete selected*
→ *Delete selected* → → Select Log → → → YES →
- To Select *Delete All*
→ *Delete All* → → Enter Security Code → → YES →