

Security



PIN Settings	4-2
Setting PIN1 Entry	4-2
Changing PIN1/PIN2	4-2
Prohibiting Unauthorized Handset Use	4-3
Dial Lock	4-3
Original Lock	4-3
Disabling Keypad	4-4
Secure Remote Lock	4-5
IC Card Authentication	4-5
Prohibiting Outgoing/Incoming Calls	4-6
Rejecting Calls without Caller ID.....	4-6
Rejecting Calls from Unsaved Numbers	4-6
Delaying Ringtone	4-6
Emission OFF Mode	4-6
Secret Modes	4-7
Secret Mode & Secret Data Only Mode	4-7
Hiding Handset Data.....	4-7

4



Setting PIN1 Entry

Set to require PIN1 entry each time handset is turned on.

- 1 → **Settings** → → **Security**
→ → **PIN Setting** →
- 2 Enter Security Code →
- 3 **PIN1 Code Entry Set** → → **ON**
→ → Enter PIN1 →

Changing PIN1/PIN2

● *PIN1 Code Entry Set* must be set to *ON* before changing PIN1.

- 1 → **Settings** → → **Security**
→ → **PIN Setting** →
- 2 Enter Security Code →
- 3 **Change PIN1 Code** or **Change PIN2 Code** →
- 4 Enter current PIN1/PIN2 →
- 5 Enter new PIN1/PIN2 → →
Enter new PIN1/PIN2 again for confirmation →



Dial Lock

Prevent others from operating handset.

1 → **Settings** → → **Security**
→ → **Lock** →

2 **Enter Security Code** →

3 **Dial Lock** →

Note

- GPS positioning features unavailable during Dial Lock. Location Information is based on radio station signals for:
 - Emergency Location Report (P. 3-2)
 - Location Information is reported to corresponding agencies (110, 119 or 118) when emergency calls are placed.
 - 紛失ケータイ捜索サービス (Lost Mobile Phone Search)
- Location Navi is unavailable during Dial Lock.

Tip

- The following operations are possible even when Dial Lock is activated:
 - Power on/off
 - Calling emergency numbers 110, 119 and 118
 - Answering incoming voice/video calls

Canceling Dial Lock

1 **Enter Security Code** →

If incorrect Security Code is entered, press and enter correct Security Code.

Tip

- If Security Code is incorrectly entered five times, handset powers off. Turn handset power on and enter correct Security Code.

Original Lock


Prevent others from accessing handset functions/data (e.g. Phone Book, Mail, etc). Select from three levels (high, medium or low) and customize as required.

- For IC Card Lock and Call Remote Lock, see P. 11-3.

Activating Original Lock

1 → **Settings** → → **Security**
→ → **Lock** →

2 **Enter Security Code** →

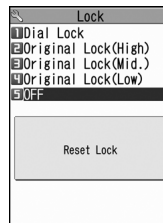

Lock Window

3 **Select an Original Lock level** →

Functions/data specified under the selected lock type are locked.

Tip

- To edit title: [Lock] window → Select an Original Lock → → **Edit Title** → → Edit title →
- Security Code entry is requested when accessing a locked function or data. Enter Security Code to unlock and access function/data. Original Lock setting returns when handset returns to Standby.
- *Dial/Sending Mail and Incoming/Mail Disp.* cannot be unlocked temporarily.



Prohibiting Unauthorized Handset Use

Customizing Original Lock

Set lock per function, group or category.

Some functions/groups are locked.

All functions in Group/Category are locked.

Customize by Function/Data

1 [Lock] window \Rightarrow Select an Original Lock \Rightarrow

2 Select a category \Rightarrow

3 Select a group \Rightarrow

4 Select an item \Rightarrow

Checked items are locked. To uncheck an item, select the item and press .

■ To Select All Functions

\Rightarrow \Rightarrow Select All \Rightarrow

■ To Deselect All Functions

\Rightarrow \Rightarrow Release All \Rightarrow

5 (three times)

Customize by Category or Group

1 [Lock] window \Rightarrow Select an Original Lock \Rightarrow

2 Select a category (\Rightarrow \Rightarrow Select a group)

3 \Rightarrow Select \Rightarrow

To deselect, press , select *Release* and then press .

■ To Select Lock for Category or Group

\Rightarrow \Rightarrow Select All \Rightarrow

■ To Cancel Lock for Category or Group

\Rightarrow \Rightarrow Release All \Rightarrow

4 (\Rightarrow)

Disabling Keypad

Set Keypad Lock to automatically lock handset keys. Customize Lock settings as required.

Setting Keypad Lock

1 \Rightarrow Settings \Rightarrow \Rightarrow Security \Rightarrow \Rightarrow Keypad Lock \Rightarrow

2 Enter Security Code \Rightarrow \Rightarrow

▶ To Lock When Handset Closed After Closed \Rightarrow \Rightarrow ON \Rightarrow

▶ To Lock After Handset Closed a Certain Time
Timer \Rightarrow \Rightarrow Select time until lock activates \Rightarrow

3

Tip

- All keypad operations are disabled, except for answering incoming calls and turning power on/off.
- appears at bottom of Display when keypad operation is available in Keypad Lock.
- Emergency numbers 110, 119 and 118 are available even when *Keypad Lock* is set.

Temporarily Unlocking Keypad Lock

1 Enter Security Code \Rightarrow



Secure Remote Lock

If your handset is lost, lock handset functions remotely from a PC or other mobile phones. All key operations are disabled except Power Key. For details, visit SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>), or access My SoftBank from your handset:
 ☰ ⇒ メニューリスト (Menu List) ⇒ ● ⇒ My SoftBank ⇒ ●


IC Card Authentication

Hold a FeliCa compatible contactless IC card over handset to authenticate the user ID without canceling Dial Lock or Keypad Lock, or without entering a code number.

- IC Card Authentication is available even when IC Card Lock is activated.
- Register up to two contactless IC cards.

Activating IC Card Authentication

- 1 ☰ ⇒ **Settings** ⇒ ● ⇒ **Security** ⇒ ● ⇒ **IC Card Authentic.** ⇒ ● ⇒ Enter Security Code ⇒ ●

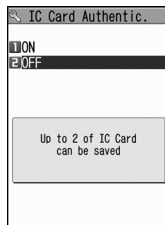

IC Card Authentication Window

- 2 **ON** ⇒ ● ⇒ **OK** ⇒ ●

■ To Activate Registered IC Card

- ⇒ **ON** ⇒ ●

- 3 Place IC Card over ☺ logo
 ☺ disappears after card is registered.

Tip

- To deactivate Authentication:
 [IC Card Authentication] window ⇒ **OFF** ⇒ ● ⇒ **YES** or **NO** ⇒ ●
 Select **YES** to delete or **NO** not to delete all registered IC Card data.

Registering IC Card

- 1 [IC Card Authentication] window ⇒ ☰ ⇒ **New Ext. IC Card** ⇒ ●
- 2 Place IC Card over ☺ logo
 ☺ disappears after card is registered.

Tip

- To delete IC card registration:
 [IC Card Authentication] window ⇒ ☰ ⇒ **Del. Ext. IC Card** ⇒ ● ⇒ Select IC Card to delete ⇒ ● ⇒ ☰ ⇒ **YES** ⇒ ●



Rejecting Calls without Caller ID

Incoming calls from hidden and/or unidentified numbers can be rejected.

1 → **Settings** → → **Security** → →

2 Enter Security Code →

3 **Unknown, Payphone or User Unset** →

4 **Reject** →

Tip

- To allow incoming calls, after Step 3: **Accept** → → **Select Ring Tone** or **Select Calling Disp.** → → **Select type** → → **Select a folder** → → **Select a ringtone or image** →

Rejecting Calls from Unsaved Numbers

1 → **Settings** → → **Security** →

2 Enter Security Code →

3 **Reject** →

Note

- This procedure is unavailable when **Set Mute Seconds** under **Ring Time (sec.)** is set to **ON** (P. 4-6).

Tip

- To allow incoming calls, after Step 2: **Accept** →

Delaying Ringtone

Delay ringtone, for callers not saved in Phone Book (including Secret Phone Book). In addition, set **Missed Calls Display** to **Not Display** so missed calls with a short ring time do not appear in Received Calls. This can prevent you from accidentally returning calls from nuisance calls.

- This procedure is unavailable when **Reject Unknown** is set to **Reject**.

1 → **Settings** → → **Incoming Call** → → **Ring Time (sec.)** →

2 **Set Mute Seconds** → → **ON** → → Enter time before ringtone plays

3 **Missed Calls Display** → → **Not Display** →

Tip

- For calls from numbers in Secret Phone Book, only the number appears when **Set Mute Seconds** is set to **OFF**.
- Ringtone starts in zero seconds when **Set Mute Seconds** is **OFF**.

Emission OFF Mode

The following are prohibited in Emission OFF Mode:

- Incoming/Outgoing Calls
- Incoming/Outgoing Messages
- Yahoo! Keitai Access

1 → **Settings** → → **Emission OFF Mode** →

Repeat procedure to cancel Emission OFF Mode.

Tip

- Emergency numbers (110, 119 and 118) are available even in Emission OFF Mode.



Secret Mode & Secret Data Only Mode

Activate Secret Mode/Secret Data Only Mode to view secret Phone Book entries, secret Schedule events and secret files.

Secret Mode: View all data and secret data.
Secret Data Only Mode: For Phone Book and Schedule, only secret entries appear. For image files, messages and bookmarks, all saved data appear.

Activating Secret Mode & Secret Data Only Mode

1 ⇒ **Settings** ⇒ ⇒ **Security**
⇒ ⇒ **Secret Mode or Secret Data Only Mode** ⇒

2 Enter Security Code ⇒

Canceling Secret Mode & Secret Data Only Mode

1 In Standby,

Hiding Handset Data

Files stored in Secret Folders are accessible only when Secret Mode or Secret Data Only Mode is activated.

- Storable file types: Images, videos, received and sent messages and bookmarks (Yahoo! Keitai and PC Browser).
- Data saved on memory card or USIM Card cannot be stored in Secret Folders.
- Each Secret Folder of Data Folder has a fixed storage capacity as follows:
 - My Picture: Approx. 4 MB
 - Videos: Approx. 10 MB

Moving Data to Secret Folders

1 Set handset to Secret Mode or Secret Data Only Mode

2 From a folder, select an item ⇒
⇒ **Keep in Secret** ⇒

Moving Data from Secret Folders

1 Set handset to Secret Mode or Secret Data Only Mode

2 In a folder list ⇒ **Secret** ⇒

3 Select an item ⇒ ⇒ **Put Out** ⇒

4 Select a destination folder ⇒

Tip

- Functions available with Secret Folder data are limited.

