

# Entertainment




<b>Mobile Widget</b> .....	<b>10-2</b>
About Mobile Widget .....	10-2
Using Mobile Widget (Japanese) .....	10-2
Downloading Widgets .....	10-2
Adding Widgets .....	10-3
<b>S! Quick News</b> .....	<b>10-4</b>
Using S! Quick News (Japanese) .....	10-4
<b>S! Info Channel</b> .....	<b>10-5</b>
Using S! Info Channel (Japanese) .....	10-5
<b>Books</b> .....	<b>10-7</b>
Obtaining Books .....	10-7
Using BookSurfing® .....	10-7
<b>Advanced Features</b> .....	<b>10-8</b>
Mobile Widget .....	10-8
S! Quick News .....	10-8
S! Info Channel .....	10-8
Weather Indicators .....	10-9

## 10



## About Mobile Widget

Download widgets to access the latest information or use various tools.

Access widgets from Standby by pressing .

- Add up to five widgets per Desktop page.
- Select from four Desktop pages.
- In addition to preinstalled widgets, download widgets as needed.
- Screenshots are for illustrative purposes and may differ in appearance from actual widgets.

## Network Widgets


Some widgets require network connection. Transmission fees incur when using such widgets. Follow onscreen instructions when connecting.

- Packet transmission fees apply for downloading widgets.


### Tip

- Contact SoftBank Mobile Customer Center, General Information for details on transmission fees.

## Using Mobile Widget (Japanese)

Open Desktop page and use widgets. In Standby, press  to show or hide widgets.

### Note

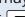- Handset may briefly connect to network after you press . Packet transmission fees apply.

### 1

Use pointer to select widgets.



Active Desktop Page

### 2 Select a widget

## Select Desktop Page

### 1 [Active Desktop Page]



A ★ appears next to the selected Desktop page.

### 2 Select a Desktop page

## Downloading Widgets

Download and add to Desktop page.

- Store up to 100 widgets.

### 1 Entertainment Mobile Widget Widget Contents Download Widget YES

### 2 Select widgets to download (twice) Installation is complete.



### 3 Paste on Desktop → ● → Select a Desktop page → ● → Move into position → ●

#### ■ To Activate Immediately

→ Open → ●

#### ■ To Check Information

→ Property → ●

#### ■ To Open List

→ Widget Contents → ●

#### ■ To Return to Previous Window

→ Back → ●

## Widget List Icons & Indicators



①	Widgets
	Access Widget Store.
	Appears when icon is unavailable for widget.
	Widget not installed. Select to install.
②	Widget Information
	Preinstalled widgets
	Downloaded widgets
	Added to Desktop Page
	Sendable by mail
	Infrared transmittable
	Transferable to Memory Card

## Adding Widgets

1 MENU → Data Folder → ● → Widget → ●

2 Select widgets to add → [ ] → Paste on Desktop → ● → Select a Desktop page → ● → Move into position → ●

### Tip

- Add up to five widgets in each Desktop page.

## More Features

### Advanced

#### Mobile Widget

- Change Position of widgets
- Delete from Desktop Page
- Place widgets in Foreground or Background
- Update Display

▶ P. 10-8

### Customize

#### Mobile Widget

- Check Auto Synchronize Settings
- Set Whether to Automatically Transmit When Abroad
- Delete All Widgets from Desktop Page
- Set Whether to Use Cookies
- Delete Cookies
- Set Widgets On/Off

▶ P. 14-27



## Using S! Quick News (Japanese)

Registered news can be updated automatically and checked from Standby.

- Packet transmission fees are incurred for using S! Quick News.

## Registering News

<Example> Register news on S! Quick News List

- 1 Press and hold



S! Quick News List

- 2 Add News  $\Rightarrow$   $\Rightarrow$  YES  $\Rightarrow$

- 3 Select an item  $\Rightarrow$

Follow onscreen instructions.

## Checking Updated Information

- 1 [S! Quick News List]  $\Rightarrow$  Select an item  $\Rightarrow$

- 2 Select information  $\Rightarrow$

To check next updated information, press .

## More Features

### Advanced

#### S! Quick News

- Manually Update List
- View Descriptions of Registered News
- Delete Registered News/Items

P. 10-8

### Customize

#### S! Quick News

- Set Automatic Updates for S! Quick News
- Hide S! Quick News in Standby
- Set Ticker Speed
- Set Information to appear in S! Quick News
- Hide S! Quick News Images
- Reset S! Quick News Registered Contents

P. 14-27



## Using S! Info Channel (Japanese)


This information service automatically receives the latest news, weather and other information.

- Packet transmission fees are incurred for using S! Info Channel/Weather Indicators.

## Subscribing for Service

Subscribe by registering to receive service.

- 1 ⇒ **Entertainment** ⇒ ⇒ **S! Info Ch./Weather** ⇒

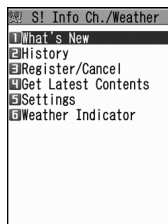

S! Info Channel Menu

- 2 **Register/Cancel** ⇒ ⇒ **YES** ⇒
- Follow onscreen instructions.

## Checking Latest Information

A Desktop Icon notifies you when new information is received.

- 1 ⇒ **Desktop Icons** ⇒



Web Page

Follow onscreen instructions.

### Tip

- To check from a menu:  
[S! Info Channel Menu] ⇒ **What's New** ⇒
- To check previous information:  
[S! Info Channel Menu] ⇒ **History** ⇒ ⇒  
Select a date ⇒ ⇒ Unread or read  
backnumbers are indicated with or .

## Weather Indicators

After subscribing, weather indicators showing current weather appear in Standby.

### Weather Indicators

	Clear (Daytime)		Later
	Clear (Night)		Partial
	Cloudy		Pollen (Low)
	Rain		Pollen (High)
	Snow		UV Rays (Low)
	Thunder		UV Rays (High)

<Example> Cloudy, partial rain

- For a complete list of indicators, see Appendix (P. 15-20).

## Checking Weather Report

- 1 [S! Info Channel Menu] ⇒ **Weather Indicator** ⇒ ⇒ **Weather** ⇒



## More Features

### Advanced

#### S! Info Channel

- Receive Previous Unreceivable Information
- Store Images/Melodies from Web Pages
- Add Phone Numbers/Mail Addresses from Web Pages

[▶ P. 10-8](#)

#### Weather Indicators

- Manually Update Weather Information

[▶ P. 10-9](#)

### Customize

#### S! Info Channel

- Set Whether to Display Desktop Icon For New Received Information
- Set Font Size for Web Pages

[▶ P. 14-28](#)

#### Weather Indicators

- Set Whether to Automatically Update Weather Information
- Set Whether to Display Weather Indicators in Standby
- Set Whether to Display Desktop Icon For New Received Information

[▶ P. 14-28](#)



Download e-comics, e-photo albums and other CCF file books.

## Obtaining Books

Download books from the Internet.

- Downloaded books are stored in Data Folder.
- Some books require you to obtain a contents key (right to use contents).

- 1  ⇒ **Data Folder** ⇒  ⇒ **Books**  
⇒  ⇒ **Download Books** ⇒   
⇒ **YES** ⇒ 

Follow onscreen instructions.

### Tip

- Downloads from BookSurfing® are also available.

## Using BookSurfing®

View e-comics, e-photo albums, etc. (CCF file).

- 1  ⇒ **Entertainment** ⇒  ⇒ **BookSurfing** ⇒ 

BookSurfing® is activated.

See the Help for BookSurfing® for operation.

### Tip

- Alternatively, activate BookSurfing® by selecting ブックサーフィン(BookSurfing) from the S! Appli list.



## Mobile Widget

### Start Here

[Active Desktop Page] ..... P. 10-2

### Change Position of widgets

[Active Desktop Page] ⇨ Point to target widgets ⇨ ⇨ **Change Layout** ⇨ ⇨ Move into position ⇨

### Delete from Desktop Page

[Active Desktop Page] ⇨ Point to target widgets ⇨ ⇨ **Delete Content** ⇨ ⇨ YES ⇨

### Place widgets in Foreground or Background

[Active Desktop Page] ⇨ Point to target widgets ⇨ ⇨ **To front** or **To back** ⇨

### Update Display

[Active Desktop Page] ⇨ Point to target widgets ⇨ ⇨ **Renew Display** ⇨

## S! Quick News

### Start Here

[S! Quick News List] ..... P. 10-4

### Manually Update List

[S! Quick News List] ⇨ Select an item ⇨ ⇨ **Refresh This** or **Refresh All** ⇨ ⇨ YES ⇨

### View Descriptions of Registered News

[S! Quick News List] ⇨ Select an item ⇨ ⇨ **Outline** ⇨

### Delete Registered News/Items

[S! Quick News List] ⇨ Select an item ⇨ ⇨

- To Select **Delete This** ⇨ **Delete This** ⇨ ⇨ YES ⇨
- To Select **Delete All** ⇨ **Delete All** ⇨ ⇨ YES ⇨ (twice) ⇨ Enter Security Code ⇨ (twice)

## S! Info Channel

### Start Here

[S! Info Channel Menu] ..... P. 10-5  
[Web Page] ..... P. 10-5

### Receive Previous Unreceivable Information

[S! Info Channel Menu] ⇨ **Get Latest Contents** ⇨ ⇨ YES ⇨

### Store Images/Melodies from Web Pages

[Web Page] ⇨ ⇨ **Save File** ⇨ ⇨ (⇨ Select a file ⇨ ⇨ **Save** ⇨ ⇨ YES ⇨ (⇨ Select a folder ⇨ (⇨ YES or NO ⇨ ))  
 Select **Play** and press to play melody file.  
 Select **Property** and press to check file information.





### Add Phone Numbers/Mail Addresses from Web Pages

[Web Page] → → **Add to Phone Book**  
 → → **YES** →

- To Save to Handset

→ **Phone** → → Select store method →  
 (→ Search Phone Book → Select Phone  
 Book → (twice)) → Edit items → (→  
**YES** or **NO** → (→ Enter entry number →

- To Save to USIM Card

→ **USIM** → → Select store method →  
 (→ Search Phone Book → Select Phone  
 Book → (twice)) → Edit items → (→  
**YES** →

## Weather Indicators

### Start Here

[S! Info Channel Menu] .....P. 10-5

### Manually Update Weather Information

[S! Info Channel Menu] → **Weather  
 Indicator** → → **Manual Update** → →  
**YES** →

