

# Appendix



<b>Multitask Combinations</b> .....	<b>15-2</b>
<b>Software Update</b> .....	<b>15-4</b>
Updating Software.....	15-4
<b>Troubleshooting</b> .....	<b>15-6</b>
<b>Text Entry Key Assignments</b> .....	<b>15-11</b>
In 5-touch Mode.....	15-11
In 2-touch Mode.....	15-12
In T9 Input Mode.....	15-13
<b>Kuten Code List</b> .....	<b>15-14</b>
<b>Weather Indicators</b> .....	<b>15-20</b>
<b>Menu List</b> .....	<b>15-21</b>
<b>Specifications</b> .....	<b>15-42</b>
Main Specifications .....	15-42
Handset Materials .....	15-43
Maximum Number of Storable Items.....	15-44
Memory Card Folders & Files .....	15-45
<b>Index</b> .....	<b>15-47</b>
<b>Warranty &amp; After Sales Service</b> .....	<b>15-60</b>
Warranty.....	15-60
After Sales Service .....	15-60
<b>Customer Service</b> .....	<b>15-61</b>

## 15



# Multitask Combinations

The following table shows combinations of functions that can be used simultaneously to multitask.

● The following indications may not apply depending on the function status and combination.

Function Currently Active Function	Mail	Yahoo!	S! Appli	Settings/ Optional Services	Data Folder	Tools	Phone Book	Own Data	Camera	TV	Music	Original Menu	Group
Mail	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Mail Group
Yahoo!	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Yahoo! Group
S! Appli	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	S! Appli Group
Settings/Optional Services	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Settings Group
Data Folder	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Data Folder
Tools	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Tools Group
Phone Book	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
Own Data	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
Camera	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	



Function Currently Active Function	Mail	Yahoo!	S! Appli	Settings/ Optional Services	Data Folder	Tools	Phone Book	Own Data	Camera	TV	Music	Original Menu	Group	
TV 	○	○	○	○	○	○	○	○	○	○	×	×	○	TV & Music Group
Music 	○	○	○	○	○	○	○	○	○	○	×	×	○	
During a Voice Call 	○	○	×	×	×	○	○	○	×	×	×	○	Voice Call	
During a Video Call 	×	×	×	×	×	×	×	×	×	×	×	×	Video Call	
During Packet Transmission with a PC Connected 	○	○	○	○	○	○	○	○	○	○	×	×	○	External Connection

○ : Can be activated.  
 × : Cannot be activated.



# Software Update

Check if software on handset needs to be updated, and update it through the network if necessary.

- Before updating software, turn off handset and restart it to make sure that all handset functions have ended.
- Disconnect the USB cable from handset. The software update, if it is done with the USB cable connected, may not be properly completed.
- No transmission fees apply to check or update software.
- Updating software may take 30 minutes or so. Wait for the software update to finish before using handset.
- Make sure battery is sufficiently charged before updating software.
- Update software in a location of good signal reception. Do not change locations while updating software.
- Other handset functions are available once the software update is completed.
- Data saved on handset is retained when you update software. However, data may be lost depending on the handset condition (e.g. a malfunction). We recommend that you make backups of important data (though it may be impossible to back up some downloaded data) before updating software. SoftBank is not liable for any data loss.

- Never remove battery or USIM Card or turn off handset while updating software.
- If software update fails, handset may become inoperable. If this happens, contact SoftBank Mobile Customer Center, Customer Assistance (P. 15-61).

## Updating Software


- 1 ⇒ **Settings** ⇒ ⇒ **Other Settings** ⇒ ⇒ **Software Update** ⇒
- 2 **Software Update** ⇒



- 3 **Follow onscreen instructions**

## After Software is Updated

After update, handset restarts and update status appears.

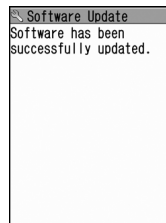




Update Status

### Note


- If handset does not restart after updating, remove and reinsert Battery, and turn handset on again. If handset still does not restart, call Softbank Mobile Customer Center (P. 15-61).



## Checking Update Results

- 1  ⇒ **Settings** ⇒  ⇒ **Other Settings** ⇒  ⇒ **Software Update** ⇒ 
- 2 **Update Result** ⇒ 

## Using Regular Updates

A confirmation for software update appears at the scheduled time. Press  or leave handset for a while to start automatic software update.

- If other functions are being used at the scheduled time, software update cannot start. End all functions to open the software update confirmation window (if you keep using other functions for more than ten minutes after a scheduled time, software update is canceled).



# Troubleshooting

Problem	Possible Cause & Remedy	Refer to
Cannot turn on handset.	Is battery properly installed?	P. 1-13
	Is battery exhausted?	P. 1-21
Handset is slow to turn on.	It takes time if there are large amounts of data (e.g., Phone Book entries) saved on handset.	-
Cannot charge battery. Charging Indicator does not light up.	Is battery properly installed?	P. 1-13
	Is AC Charger plugged into an outlet properly?	P. 1-15
	Is the connector of AC Charger correctly inserted into handset?	
	Is AC Charger the specified ZTDAA1? Battery may not charge properly with non-specified charger.	
Battery drains too fast.	Battery service life may be over. Battery lifespan may be shortened by environmental factors.	P. 1-13, P. 14-5
	Battery operation time will vary depending on handset operations or settings.	
Cannot make calls.	Is handset out of service area or in a location with a weak signal?	-
	Is a maximum call cost limit set?	P. 14-14

Problem	Possible Cause & Remedy	Refer to
Cannot make calls using Keypad.	Is Keypad Lock active?	P. 4-4
	Is <i>Dial/Sending Mail</i> specified to be locked in Original (Dial) Lock mode?	P. 4-3
	Is <i>Restrict Dialing</i> set?	P. 2-23
A message informs you the number is not in service.	Did you include the area code when dialing a phone number?	-
Busy tone always sounds for outgoing call.	Does <i>Network is busy at this moment Please try again later</i> appear in Display?	-
<i>Network is busy at this moment Please try again later</i> appears.	Voice call/packet transmission network may be experiencing heavy traffic or technical difficulties. Try again later. Emergency calls (110, 119 and 118) are still available.	-
Cannot receive Calls. Incoming ringtone does not sound.	Is handset in <i>Emission OFF Mode</i> ?	P. 4-6
	Is handset in Manner Mode?	P. 1-19
	Is <i>Ring Volume</i> set to <i>Silent</i> ?	P. 14-8




Problem	Possible Cause & Remedy	Refer to
The other party's voice is difficult to hear.	Is the earpiece properly placed against your ear?	-
	Is anything obstructing the speaker if it is in handsfree mode?	-
	Is the earpiece volume properly adjusted?	P. 3-3, P. 3-8
The other party's voice is too loud.	Is the earpiece volume properly adjusted?	P. 3-3, P. 3-8
Handset response to key presses is slow.	This may occur when there are large amounts of data saved on handset, or when large amounts of data are being transferred between handset and memory card.	-
Cannot hear key operation tones.	Is <b>Keypad Sound</b> set to <b>OFF</b> ?	P. 14-10
	Is handset in Manner Mode?	P. 1-19
Side Key is inoperable when handset is closed.	Is Keypad Lock active?	P. 4-4
	Is <b>Side Key Guard</b> set to <b>ON</b> ?	P. 1-23

Problem	Possible Cause & Remedy	Refer to
Display is blank.	Is Power Saver Mode activated?	P. 14-5
	If handset is left in a very hot place, it may automatically shut down. If this happens, move handset to a location at an appropriate temperature (5 to 35 °C) and wait for a while until the keys become operable again.	-
Display is hard to see.	Is <b>Brightness</b> under <b>Backlight</b> set to lower level?	P. 14-6
	Is ECO Mode activated?	P. 1-23
	Is <b>Privacy Angle</b> set to <b>ON</b> ?	P. 14-5
Display backlight does not light.	Is <b>Lighting</b> under <b>Backlight</b> set to <b>OFF</b> ?	P. 14-5
Display backlight is sometimes bright, sometimes dim.	Is <b>Brightness</b> under <b>Backlight</b> set to <b>ON</b> ? Light Sensor detects the surrounding brightness and automatically adjusts the Display Backlight brightness.	P. 14-6
Nothing appears in External Display.	Is <b>Indicator Display</b> set to <b>OFF</b> ?	P. 14-8
Key Illumination flashes in an unset pattern.	Is <b>Event</b> set to <b>ON</b> ? Key Illumination flashes in special patterns for special events.	P. 14-30



# Troubleshooting

Problem	Possible Cause & Remedy	Refer to
Message appears when opening an image, video or song file.	The image, video or song is unavailable with the function being used when any of the following messages appear. <b>Not available</b> and <b>No preview data</b>	-
 appears instead of an image or preview.	The image file may be corrupted.	-
Images shot with handset camera flicker.	When shooting images indoors, flicker may occur due to fluorescent lighting, etc. Changing the <b>Flicker</b> setting may help reduce flicker.	P. 7-14
Images/videos shot on handset are too bright.	Were the still images or videos shot with <b>Flicker</b> not set to <b>Auto</b> ? Set <b>Flicker</b> to <b>Auto</b> .	P. 7-14
Images/videos shot on handset are blurred.	Select a Photo Mode suited to the subject or scene.	P. 7-6, P. 7-8
Cannot watch TV.	Is handset out of the digital terrestrial broadcast service area or in a location with a weak signal?	-
	Are the channel settings done?	P. 8-3
Cannot use S! Appli.	Has different USIM Card been inserted? S! Appli becomes unavailable after inserting a different USIM Card. Initialize handset and download S! Appli again.	P. 9-8

Problem	Possible Cause & Remedy	Refer to
<b>Insert USIM</b> appears.	USIM Card is not properly inserted or may be damaged.	P. 1-12
<b>Insert microSD</b> or <b>No microSD</b> appears.	Memory card is not properly inserted or may be damaged.	P. 12-12
<b>Replace with A New One</b> or <b>check the Disk</b> appears.	Perform a scan disk on memory card.	P. 12-19
<b>Function Cannot Operate Any More</b> appears.	End one of the currently active functions to continue operation.	-
<b>Other function active Cannot start</b> appears.	These messages appear when you try to use an unavailable function when another function is active.	-
<b>Other function active Cannot operate</b> appears.		
<b>Memory shortage</b> appears.	This message appears when operation is interrupted due to insufficient memory. Reboot handset.	-





Problem	Possible Cause & Remedy	Refer to
<b>Connection failed</b> appears.	Network connection is interrupted due to weak signal.	-
	The page you are trying to access is very busy. Try again after a while.	-
(microSD card indicator marked with ?) appears.	The indicator appears when a defective memory card is inserted.	P. 12-19
Osaifu-Keitai® cannot be used.	Was handset left uncharged for a long period after the battery ran out?	P. 1-21
	Has IC Card Lock or Call Remote Lock been set?	P. 11-3
Handset changes to 3G network even though  indicates strong Wi-Fi signal.	Are you subscribed to the Keitai Wi-Fi service? Connection with Keitai Wi-Fi is unavailable if you are unsubscribed.	-
	Are you connected to a valid access point? Perform <b>Prioritized AP Search</b> again.	P. 13-14
	Are access point settings correct? Check <b>Profile Setting</b> and <b>Connection Status</b> .	P. 13-15

Problem	Possible Cause & Remedy	Refer to
Cannot use Wi-Fi with the created profile.	Is Wi-Fi activated?	P. 13-11
	Is the profile saved to <b>Priority Settings</b> ?	P. 13-14
	Are access point settings correct? Check <b>Profile Setting</b> and <b>Connection Status</b> .	P. 13-15
	Are you using an access point with a security indicator  ? Enter the security key with <b>Set Security Method</b> .	P. 14-33
Cannot connect to BB mobilepoint.	Did you change any items other than the ID and password for the <b>BB モバイルポイント</b> profile? Connection may become unavailable if profile settings are changed. Perform <b>Reset Profile</b> and configure the settings again.	P. 13-15
Web page for Yahoo! Keitai (PC Site Browser) does not open even though  indicates strong Wi-Fi signal.	Did you move to a different shop or other location while using a public wireless LAN service? If you are going to use the same public wireless LAN service provided at a different location, you may be unable to reconnect for a certain period of time. Wait for a while then connect again.	-



## Troubleshooting

Problem	Possible Cause & Remedy	Refer to
Re-entry of ID and password is requested while using a public wireless LAN service with <i>Direct Access</i> .	Was there no key operation for a certain period of time while using PC Site Browser? Re-enter the ID and password or perform <i>Prioritized AP Search</i> again.	P. 13-14, P. 14-33
The Wi-Fi out of range indicator appears.	Are you using a Bluetooth® device? Stop the Bluetooth® device.	P. 13-8
The MAC address appears as "00:00:00:00:00:00."	After Wi-Fi setup is complete, the correct MAC address appears.	-



## In 5-touch Mode

Key	Kanji/hiragana Entry Mode	Katakana Entry Mode	Alphanumeric Entry Mode	Number Entry Mode
1	あいうえおあいうえお	アイウエオアイウエオ 1	. / @ - : ~ <sup>1</sup> _ 1	1
2	かきくけこ	カキクケコ 2	abcABC 2	2
3	さしすせそ	サシスセソ 3	defDEF 3	3
4	たちつてとっ	タチツテトッ 4	ghiGHI 4	4
5	なにぬねの	ナニヌネノ 5	jklJKL 5	5
6	はひふへほ	ハヒフヘホ 6	mnoMNO 6	6
7	まみむめも	マミムメモ 7	pqrPQRS 7	7
8	やゆよやゆよ	ヤユヨヤユヨ 8	tuvTUV 8	8
9	らりるれろ	ラリルレロ 9	wxyzWXYZ 9	9
0	わをんーわ	ワヲンーワ <sup>2</sup> 0	0	0 + <sup>3</sup>
*	。 。 4 5 6	。 。 4 5 6	4 5	*
#	、 。 ? ! ・ (space) <sup>7</sup>	、 。 ? ! ・ (space) <sup>8</sup>	、 . ? ! ' - & ( ) ¥ (space)	#

- 1 Appears as “~” during double-byte entry.
- 2 The lower case of “ワ” can be entered in double-byte mode.
- 3 Press and hold in Phone Number Entry window to enter “+.”
- 4 Can be toggled between upper case and lower case.
- 5 to insert line feed “↓.”
- 6 Before confirming characters, press to display “\_” and press again in this state to enter “ ” or “ ”.
- 7 Cannot be entered when entering readings in Own Dictionary.
- 8 Only space can be entered when entering readings in USIM Phone Book.



# Text Entry Key Assignments

## In 2-touch Mode

### In Double-byte Mode

Key	Press Next										
	1	2	3	4	5	6	7	8	9	0	
Press First	1	あ	い	う	え	お	A	B	C	D	E
		あ	い	う	え	お	a	b	c	d	e
	2	か	き	く	け	こ	F	G	H	I	J
							f	g	h	i	j
	3	さ	し	す	せ	そ	K	L	M	N	O
							k	l	m	n	o
	4	た	ち	つ	て	と	P	Q	R	S	T
				っ			p	q	r	s	t
	5	な	に	ぬ	ね	の	U	V	W	X	Y
							u	v	w	x	y
6	は	ひ	ふ	へ	ほ	Z	?	!	-	/	
						z					
7	ま	み	む	め	も	¥	&			☎ <sup>1</sup>	
8	や	(	ゆ	)	よ	*	#			♥ <sup>1</sup> 2	
	や		ゆ		よ						
9	ら	り	る	れ	ろ	1	2	3	4	5	
0	わ	を	ん	、	。	6	7	8	9	0	
	わ										

### In Single-byte Mode

Key	Press Next										
	1	2	3	4	5	6	7	8	9	0	
Press First	1	ア	イ	ウ	エ	オ	A	B	C	D	E
		ア	イ	ウ	エ	オ	a	b	c	d	e
	2	カ	キ	ク	ケ	コ	F	G	H	I	J
							f	g	h	i	j
	3	サ	シ	ス	セ	ソ	K	L	M	N	O
							k	l	m	n	o
	4	タ	チ	ツ	テ	ト	P	Q	R	S	T
				ッ			p	q	r	s	t
	5	ナ	ニ	ヌ	ネ	ノ	U	V	W	X	Y
							u	v	w	x	y
6	ハ	ヒ	フ	ヘ	ホ	Z	?	!	-	/	
						z					
7	マ	ミ	ム	メ	モ	\	&			☎ <sup>1</sup>	
8	ヤ	(	ユ	)	ヨ	*	#			♥ <sup>1</sup> 2	
	ヤ		ユ		ヨ						
9	ラ	リ	ル	レ	ロ	1	2	3	4	5	
	@	/	-	_	:	.ne.jp	.co.jp	ac.jp	@softbank.ne.jp		
0	ワ	ヲ	ン	、	。	6	7	8	9	0	
	-	,	.	.	.	www	.com	.html	http://	https://	

- When using double-byte mode to enter reading in USIM Phone Book, double-byte katakana are entered instead of hiragana.
  - Press **[\*]** after entering a character to switch upper and lower case.
- Can be entered when entering pictographs is possible, such as in Text Memo and Common Phrases.
  - Press **[B]** **[O]** to toggle between upper-case and lower-case modes.
  - After characters that cannot have “ ” or “ , ” a separate “ ” or “ ” is entered. Before confirming characters, press **[C]** to display “\_” and press again in this state to enter “ ” or “ . ”
- [ ]**: A space is entered for these key combinations.



## In T9 Input Mode

Key	Kanji/hiragana Entry Mode	Katakana Entry Mode	Alphanumeric Entry Mode
[1]	Row あ, 1	Row ア, 1	. / @ ? ! ( ) , - _ : ' ~ ^ 5 & ¥ 1 Single-byte space
[2]	Row か, 2	Row カ, 2	abcABC2
[3]	Row さ, 3	Row サ, 3	defDEF3
[4]	Row た, 4	Row タ, 4	ghiGHI4
[5]	Row な, 5	Row ナ, 5	kljKJL5
[6]	Row は, 6	Row ハ, 6	mnoMNO6
[7]	Row ま, 7	Row マ, 7	pqrPQRS7
[8]	Row や, 8	Row ヤ, 8	tuvTUV8
[9]	Row ら, 9	Row ラ, 9	wxyzWXYZ9
[0]	わをん わー, 0	ワヨン ワ <sup>4</sup> ー, 0	0
[*]	1 2	1 2	2 6
[#]	3	3	

- For key assignments in number entry mode, see the table in "In 5-touch Mode."
  - Numbers do not appear when entering reading in USIM Phone Book or Own Dictionary.
  - Press [#] to toggle the case as follows: Caps-lock cancel mode → Shift mode → Caps Lock mode
  - Caps Lock mode: All characters are entered in upper case.  
Shift mode: The first characters of words are capitalized and the rest of characters are entered in lower case.  
Caps-lock cancel mode: All characters are entered in lower case.
  - Once characters entered in Shift mode have been determined, the mode is switched to Caps-lock cancel mode.
- 1 When editing a reading, pressing [\*] adds/cancels " " or " " ."
  - 2 [\*] to insert line feed " ↓ ."
  - 3 "、","。"," "" ? "," " ! "," " " . " and "(space)" appear right after a reading or character is determined.
  - 4 The lower case of "ワ" can only be entered in double-byte mode.
  - 5 "ー" is entered in double-byte mode.
  - 6 Pressing before confirming characters enters a space before confirming.



# Kuten Code List

●Actual Display font may differ in appearance from the following.

1st-3rd digits	Fourth digit of Kuten codes										1st-3rd digits	Fourth digit of Kuten codes										1st-3rd digits	Fourth digit of Kuten codes										1st-3rd digits	Fourth digit of Kuten codes														
0 1 2 3 4 5 6 7 8 9											0 1 2 3 4 5 6 7 8 9											0 1 2 3 4 5 6 7 8 9											0 1 2 3 4 5 6 7 8 9															
010	!	~	?	:	.	:	:	:	:	?	037	f	g	h	i	j	k	l	m	n	o	064	θ	ι	κ	λ	μ	ν	ξ	ο	π	ρ	139	∴	∩	∪											160	あ
011	!	~	?	:	.	:	:	:	:	?	038	p	q	r	s	t	u	v	w	x	y	065	σ	τ	υ	φ	χ	ψ	ω											161	あ							
012	!	~	?	:	.	:	:	:	:	?	039	あ	か	さ	た	な	に	ぬ	ね	の	ほ	へ	070	Α	Β	Γ	Δ	Ε	Ζ	Η	Θ	Ι	Κ	Λ	162	あ												
013	!	~	?	:	.	:	:	:	:	?	040	あ	か	さ	た	な	に	ぬ	ね	の	ほ	へ	071	Α	Β	Γ	Δ	Ε	Ζ	Η	Θ	Ι	Κ	Λ	163	あ												
014	!	~	?	:	.	:	:	:	:	?	041	あ	か	さ	た	な	に	ぬ	ね	の	ほ	へ	072	Α	Β	Γ	Δ	Ε	Ζ	Η	Θ	Ι	Κ	Λ	164	あ												
015	!	~	?	:	.	:	:	:	:	?	042	あ	か	さ	た	な	に	ぬ	ね	の	ほ	へ	073	Α	Β	Γ	Δ	Ε	Ζ	Η	Θ	Ι	Κ	Λ	165	あ												
016	!	~	?	:	.	:	:	:	:	?	043	あ	か	さ	た	な	に	ぬ	ね	の	ほ	へ	074	Α	Β	Γ	Δ	Ε	Ζ	Η	Θ	Ι	Κ	Λ	166	あ												
017	!	~	?	:	.	:	:	:	:	?	044	あ	か	さ	た	な	に	ぬ	ね	の	ほ	へ	075	Α	Β	Γ	Δ	Ε	Ζ	Η	Θ	Ι	Κ	Λ	167	あ												
018	!	~	?	:	.	:	:	:	:	?	045	あ	か	さ	た	な	に	ぬ	ね	の	ほ	へ	076	Α	Β	Γ	Δ	Ε	Ζ	Η	Θ	Ι	Κ	Λ	168	あ												
019	!	~	?	:	.	:	:	:	:	?	046	あ	か	さ	た	な	に	ぬ	ね	の	ほ	へ	077	Α	Β	Γ	Δ	Ε	Ζ	Η	Θ	Ι	Κ	Λ	169	あ												
020	!	~	?	:	.	:	:	:	:	?	047	あ	か	さ	た	な	に	ぬ	ね	の	ほ	へ	078	Α	Β	Γ	Δ	Ε	Ζ	Η	Θ	Ι	Κ	Λ	170	あ												
021	!	~	?	:	.	:	:	:	:	?	048	あ	か	さ	た	な	に	ぬ	ね	の	ほ	へ	080	Α	Β	Γ	Δ	Ε	Ζ	Η	Θ	Ι	Κ	Λ	171	あ												
022	!	~	?	:	.	:	:	:	:	?	050	あ	か	さ	た	な	に	ぬ	ね	の	ほ	へ	081	Α	Β	Γ	Δ	Ε	Ζ	Η	Θ	Ι	Κ	Λ	172	あ												
023	!	~	?	:	.	:	:	:	:	?	051	あ	か	さ	た	な	に	ぬ	ね	の	ほ	へ	082	Α	Β	Γ	Δ	Ε	Ζ	Η	Θ	Ι	Κ	Λ	173	あ												
024	!	~	?	:	.	:	:	:	:	?	052	あ	か	さ	た	な	に	ぬ	ね	の	ほ	へ	083	Α	Β	Γ	Δ	Ε	Ζ	Η	Θ	Ι	Κ	Λ	174	あ												
026	!	~	?	:	.	:	:	:	:	?	053	あ	か	さ	た	な	に	ぬ	ね	の	ほ	へ	130	①	②	③	④	⑤	⑥	⑦	⑧	⑨	175	あ														
027	!	~	?	:	.	:	:	:	:	?	054	あ	か	さ	た	な	に	ぬ	ね	の	ほ	へ	131	⑩	⑪	⑫	⑬	⑭	⑮	⑯	⑰	⑱	176	あ														
028	!	~	?	:	.	:	:	:	:	?	055	あ	か	さ	た	な	に	ぬ	ね	の	ほ	へ	132	⑳	㉑	㉒	㉓	㉔	㉕	㉖	㉗	㉘	㉙	177	あ													
029	!	~	?	:	.	:	:	:	:	?	056	あ	か	さ	た	な	に	ぬ	ね	の	ほ	へ	133	㉚	㉛	㉜	㉝	㉞	㉟	㊱	㊲	㊳	㊴	㊵	178	あ												
031	!	~	?	:	.	:	:	:	:	?	057	あ	か	さ	た	な	に	ぬ	ね	の	ほ	へ	134	㊶	㊷	㊸	㊹	㊺	㊻	㊼	㊽	㊾	㊿	179	あ													
032	!	~	?	:	.	:	:	:	:	?	058	あ	か	さ	た	な	に	ぬ	ね	の	ほ	へ	135	㊿	㊿	㊿	㊿	㊿	㊿	㊿	㊿	㊿	㊿	㊿	180	あ												
033	!	~	?	:	.	:	:	:	:	?	060	あ	か	さ	た	な	に	ぬ	ね	の	ほ	へ	136	㊿	㊿	㊿	㊿	㊿	㊿	㊿	㊿	㊿	㊿	㊿	181	あ												
034	!	~	?	:	.	:	:	:	:	?	061	あ	か	さ	た	な	に	ぬ	ね	の	ほ	へ	137	㊿	㊿	㊿	㊿	㊿	㊿	㊿	㊿	㊿	㊿	㊿	182	あ												
035	!	~	?	:	.	:	:	:	:	?	062	あ	か	さ	た	な	に	ぬ	ね	の	ほ	へ	138	㊿	㊿	㊿	㊿	㊿	㊿	㊿	㊿	㊿	㊿	㊿	183	あ												
036	!	~	?	:	.	:	:	:	:	?	063	あ	か	さ	た	な	に	ぬ	ね	の	ほ	へ	139	㊿	㊿	㊿	㊿	㊿	㊿	㊿	㊿	㊿	㊿	㊿	184	あ												



1st-3rd digits	Fourth digit of Kuten codes										1st-3rd digits	Fourth digit of Kuten codes										1st-3rd digits	Fourth digit of Kuten codes																																																									
	0	1	2	3	4	5	6	7	8	9		0	1	2	3	4	5	6	7	8	9		0	1	2	3	4	5	6	7	8	9																																																
178	お										214	吉客宮究巨禦	215	吃脚弓窮拒魚	216	腹唐急笈拋亨	217	桔逆救級拳享	218	橋五朽糾渠京	219	話久求給虛	220	玷仇及日許	221	杵休泣牛距	222	委及灸去鋸	223	却吸球居漁	224	宏慌梗稱控醇	225	工抗構糠膏	226	宏慌梗稱控醇	227	工抗構糠膏	228	工抗構糠膏	229	工抗構糠膏	230	工抗構糠膏	231	工抗構糠膏	232	工抗構糠膏	233	工抗構糠膏	234	工抗構糠膏	235	工抗構糠膏	236	工抗構糠膏	237	工抗構糠膏	238	工抗構糠膏	239	工抗構糠膏	240	工抗構糠膏	241	工抗構糠膏	242	工抗構糠膏	243	工抗構糠膏	244	工抗構糠膏	245	工抗構糠膏	246	工抗構糠膏	247	工抗構糠膏	248	工抗構糠膏







1st-3rd digits	Fourth digit of Kuten codes									1st-3rd digits	Fourth digit of Kuten codes									1st-3rd digits	Fourth digit of Kuten codes																			
	0	1	2	3	4	5	6	7	8		9	0	1	2	3	4	5	6	7		8	9	0	1	2	3	4	5	6	7	8	9								
448	厄	役	約	藥	訊	躍	蜻	柳	數	476											517										558	協	恆	悻	悻	悻	悻	悻	悻	悻
449	矢	鐘								477											518	悻	悻	悻	悻	悻	悻	悻	悻	悻	559	悻	悻	悻	悻	悻	悻	悻	悻	悻
449	愉	輸	遊	癒	佑	油	油	油	油	478											519	悻	悻	悻	悻	悻	悻	悻	悻	悻	560	悻	悻	悻	悻	悻	悻	悻	悻	悻
450	愈	輸	遊	癒	佑	油	油	油	油	479											520	悻	悻	悻	悻	悻	悻	悻	悻	悻	561	悻	悻	悻	悻	悻	悻	悻	悻	悻
451	愈	輸	遊	癒	佑	油	油	油	油	480											521	悻	悻	悻	悻	悻	悻	悻	悻	悻	562	悻	悻	悻	悻	悻	悻	悻	悻	悻
452	悠	祐								481											522	悻	悻	悻	悻	悻	悻	悻	悻	悻	563	悻	悻	悻	悻	悻	悻	悻	悻	悻
452	余	揚	窠	養						482											523	悻	悻	悻	悻	悻	悻	悻	悻	悻	564	悻	悻	悻	悻	悻	悻	悻	悻	悻
453	與	耀	欲							483											524	悻	悻	悻	悻	悻	悻	悻	悻	悻	565	悻	悻	悻	悻	悻	悻	悻	悻	悻
454	與	耀	欲							484											525	悻	悻	悻	悻	悻	悻	悻	悻	悻	566	悻	悻	悻	悻	悻	悻	悻	悻	悻
455	與	耀	欲							485											526	悻	悻	悻	悻	悻	悻	悻	悻	悻	567	悻	悻	悻	悻	悻	悻	悻	悻	悻
456	與	耀	欲							486											527	悻	悻	悻	悻	悻	悻	悻	悻	悻	568	悻	悻	悻	悻	悻	悻	悻	悻	悻
456	與	耀	欲							487											528	悻	悻	悻	悻	悻	悻	悻	悻	悻	569	悻	悻	悻	悻	悻	悻	悻	悻	悻
456	與	耀	欲							488											529	悻	悻	悻	悻	悻	悻	悻	悻	悻	570	悻	悻	悻	悻	悻	悻	悻	悻	悻
456	與	耀	欲							489											530	悻	悻	悻	悻	悻	悻	悻	悻	悻	571	悻	悻	悻	悻	悻	悻	悻	悻	悻
456	與	耀	欲							490											531	悻	悻	悻	悻	悻	悻	悻	悻	悻	572	悻	悻	悻	悻	悻	悻	悻	悻	悻
458	螺	裸	來	菜	精	雷	洛	絡	羅	491											532	悻	悻	悻	悻	悻	悻	悻	悻	悻	573	悻	悻	悻	悻	悻	悻	悻	悻	悻
458	螺	裸	來	菜	精	雷	洛	絡	羅	492											533	悻	悻	悻	悻	悻	悻	悻	悻	悻	574	悻	悻	悻	悻	悻	悻	悻	悻	悻
458	螺	裸	來	菜	精	雷	洛	絡	羅	493											534	悻	悻	悻	悻	悻	悻	悻	悻	悻	575	悻	悻	悻	悻	悻	悻	悻	悻	悻
458	履	李	梨	理	瑞	離	陸	律	利	494											535	悻	悻	悻	悻	悻	悻	悻	悻	悻	576	悻	悻	悻	悻	悻	悻	悻	悻	悻
459	律	掠	略	略	流	溜	流	流	立	495											536	悻	悻	悻	悻	悻	悻	悻	悻	悻	577	悻	悻	悻	悻	悻	悻	悻	悻	悻
461	律	掠	略	略	流	溜	流	流	立	496											537	悻	悻	悻	悻	悻	悻	悻	悻	悻	578	悻	悻	悻	悻	悻	悻	悻	悻	悻
462	律	掠	略	略	流	溜	流	流	立	497											538	悻	悻	悻	悻	悻	悻	悻	悻	悻	579	悻	悻	悻	悻	悻	悻	悻	悻	悻
463	律	掠	略	略	流	溜	流	流	立	498											539	悻	悻	悻	悻	悻	悻	悻	悻	悻	580	悻	悻	悻	悻	悻	悻	悻	悻	悻
464	律	掠	略	略	流	溜	流	流	立	499											540	悻	悻	悻	悻	悻	悻	悻	悻	悻	581	悻	悻	悻	悻	悻	悻	悻	悻	悻
465	律	掠	略	略	流	溜	流	流	立	500											541	悻	悻	悻	悻	悻	悻	悻	悻	悻	582	悻	悻	悻	悻	悻	悻	悻	悻	悻
466	瑤	嶺	齡	連	聖	怡	歷	煉	勵	501											542	悻	悻	悻	悻	悻	悻	悻	悻	悻	583	悻	悻	悻	悻	悻	悻	悻	悻	悻
467	瑤	嶺	齡	連	聖	怡	歷	煉	勵	502											543	悻	悻	悻	悻	悻	悻	悻	悻	悻	584	悻	悻	悻	悻	悻	悻	悻	悻	悻
468	瑤	嶺	齡	連	聖	怡	歷	煉	勵	503											544	悻	悻	悻	悻	悻	悻	悻	悻	悻	585	悻	悻	悻	悻	悻	悻	悻	悻	悻
469	瑤	嶺	齡	連	聖	怡	歷	煉	勵	504											545	悻	悻	悻	悻	悻	悻	悻	悻	悻	586	悻	悻	悻	悻	悻	悻	悻	悻	悻
470	瑤	嶺	齡	連	聖	怡	歷	煉	勵	505											546	悻	悻	悻	悻	悻	悻	悻	悻	悻	587	悻	悻	悻	悻	悻	悻	悻	悻	悻
470	瑤	嶺	齡	連	聖	怡	歷	煉	勵	506											547	悻	悻	悻	悻	悻	悻	悻	悻	悻	588	悻	悻	悻	悻	悻	悻	悻	悻	悻
470	瑤	嶺	齡	連	聖	怡	歷	煉	勵	507											548	悻	悻	悻	悻	悻	悻	悻	悻	悻	589	悻	悻	悻	悻	悻	悻	悻	悻	悻
470	瑤	嶺	齡	連	聖	怡	歷	煉	勵	508											549	悻	悻	悻	悻	悻	悻	悻	悻	悻	590	悻	悻	悻	悻	悻	悻	悻	悻	悻
471	露	勞	婁	魯	呂	魯	魯	魯	路	509											550	悻	悻	悻	悻	悻	悻	悻	悻	悻	591	悻	悻	悻	悻	悻	悻	悻	悻	悻
472	露	勞	婁	魯	呂	魯	魯	魯	路	510											551	悻	悻	悻	悻	悻	悻	悻	悻	悻	592	悻	悻	悻	悻	悻	悻	悻	悻	悻
473	露	勞	婁	魯	呂	魯	魯	魯	路	511											552	悻	悻	悻	悻	悻	悻	悻	悻	悻	593	悻	悻	悻	悻	悻	悻	悻	悻	悻
473	露	勞	婁	魯	呂	魯	魯	魯	路	512											553	悻	悻	悻	悻	悻	悻	悻	悻	悻	594	悻	悻	悻	悻	悻	悻	悻	悻	悻
473	露	勞	婁	魯	呂	魯	魯	魯	路	513											554	悻	悻	悻	悻	悻	悻	悻	悻	悻	595	悻	悻	悻	悻	悻	悻	悻	悻	悻
474	粹	鷺	互	互	互	互	互	互	互	514											555	悻	悻	悻	悻	悻	悻	悻	悻	悻	596	悻	悻	悻	悻	悻	悻	悻	悻	悻
474	粹	鷺	互	互	互	互	互	互	互	515											556	悻	悻	悻	悻	悻	悻	悻	悻	悻	597	悻	悻	悻	悻	悻	悻	悻	悻	悻
475	粹	鷺	互	互	互	互	互	互	互	516											557	悻	悻	悻	悻	悻	悻	悻	悻	悻	598	悻	悻	悻	悻	悻	悻	悻	悻	悻



# Kuten Code List

1st-3rd digits	Fourth digit of Kuten codes									1st-3rd digits	Fourth digit of Kuten codes									1st-3rd digits	Fourth digit of Kuten codes																																																													
	0	1	2	3	4	5	6	7	8		9	0	1	2	3	4	5	6	7		8	9	0	1	2	3	4	5	6	7	8	9																																																		
599	樞	640	爨	641	爲	642	爨	643	樞	644	樞	645	樞	646	樞	647	樞	648	樞	649	樞	650	樞	651	樞	652	樞	653	樞	654	樞	655	樞	656	樞	657	樞	658	樞	659	樞	660	樞	661	樞	662	樞	663	樞	664	樞	665	樞	666	樞	667	樞	668	樞	669	樞	670	樞	671	樞	672	樞	673	樞	674	樞	675	樞	676	樞	677	樞	678	樞	679	樞	680
600	樞	681	爨	682	爨	683	樞	684	樞	685	樞	686	樞	687	樞	688	樞	689	樞	690	樞	691	樞	692	樞	693	樞	694	樞	695	樞	696	樞	697	樞	698	樞	699	樞	700	樞	701	樞	702	樞	703	樞	704	樞	705	樞	706	樞	707	樞	708	樞	709	樞	710	樞	711	樞	712	樞	713	樞	714	樞	715	樞	716	樞	717	樞	718	樞	719	樞	720	樞	721
601	樞	722	樞	723	樞	724	樞	725	樞	726	樞	727	樞	728	樞	729	樞	730	樞	731	樞	732	樞	733	樞	734	樞	735	樞	736	樞	737	樞	738	樞	739	樞	740	樞	741	樞	742	樞	743	樞	744	樞	745	樞	746	樞	747	樞	748	樞	749	樞	750	樞	751	樞	752	樞	753	樞	754	樞	755	樞	756	樞	757	樞	758	樞	759	樞	760	樞	761	樞	762
602	樞	763	樞	764	樞	765	樞	766	樞	767	樞	768	樞	769	樞	770	樞	771	樞	772	樞	773	樞	774	樞	775	樞	776	樞	777	樞	778	樞	779	樞	780	樞	781	樞	782	樞	783	樞	784	樞	785	樞	786	樞	787	樞	788	樞	789	樞	790	樞	791	樞	792	樞	793	樞	794	樞	795	樞	796	樞	797	樞	798	樞	799	樞	800						
603	樞	801	樞	802	樞	803	樞	804	樞	805	樞	806	樞	807	樞	808	樞	809	樞	810	樞	811	樞	812	樞	813	樞	814	樞	815	樞	816	樞	817	樞	818	樞	819	樞	820	樞	821	樞	822	樞	823	樞	824	樞	825	樞	826	樞	827	樞	828	樞	829	樞	830	樞	831	樞	832	樞	833	樞	834	樞	835	樞	836	樞	837	樞	838	樞	839				





# Weather Indicators

Normally Displayed	
	Clear (Day)
	Clear (Night)
	Cloudy
	Rain
	Snow
	Thunder and Lighting
	0% Chance of Rain
	10% Chance of Rain
	20% Chance of Rain
	30% Chance of Rain
	40% Chance of Rain
	50% Chance of Rain
	60% Chance of Rain
	70% Chance of Rain
	80% Chance of Rain
	90% Chance of Rain
	100% Chance of Rain
	Later
	Partial

Pollen Level	
	Low
	Moderate
	High
	Extremely High

Sakura Blossoms	
	Budding
	Near Full Bloom
	Peak Bloom
	Past Peak

Autumn Foliage	
	No Color
	Moderate Color
	Peak Color
	Past Peak

UV Level	
	Low
	Moderate
	High
	Very High

Typhoon	
	Forming
	Approaching
	Emergency Status

Disaster	
	Heavy Rain
	Strong Winds

Topic	
	Notification



- Enter menu item numbers for direct menu access. Note that Main Menu theme must be set to **Basic**.
- See “Check Style Mode Settings” (P. 14-3) for menu items whose default settings differ according to the model color.

## Mail

2nd-level Menu	3rd-level Menu	Menu Item No.	Default Setting	Refer to
Inbox	—	—	—	P. 5-10
Outbox	—	—	—	P. 5-14
Draft	—	—	—	P. 5-27
Tomomato-Mail BOX	—	—	—	P. 5-16
Compose Message	—	—	—	P. 5-6
Compose SMS	—	—	—	P. 5-7
Server Mail	Mail List	—	—	P. 5-11, P. 5-24
	Server Mail Memory	—	—	P. 5-24
Retrieve New	—	—	—	P. 5-23
Templates	—	—	—	
Mail Setting	Custom Mail Address	—	—	P. 5-4
	Priority Mail Menu	—	S! Mail Menu	P. 14-19
	Scroll	—	1 Line	
	Font Size	—	Standard	
	Mail List Disp.	—	1 Line+Body	
	Start Attachment (auto)	—	OFF	
	Header/Signature	—	Edit Header, Edit Signature: Not Stored, Edit Quotation Marks:-----, Insert Setting: Selected	P. 14-16, P. 14-18
	Mail Box Lock	—	Inbox, Outbox, Draft, Server Mail: Unlocked	P. 5-17



# Menu List

2nd-level Menu	3rd-level Menu	Menu Item No.	Default Setting	Refer to
Mail Setting	Receiving Setting	—	Operation Preferred	P. 14-17
	Read Out Setting	—	Select Voice: Female 1, Read Out Received Mail: ON	
	Emotion/Keyword	—	Disp. Emotion: ON, Disp. Keyword: OFF	
	S! Mail Settings	—	Auto Receiving: Auto(1MB), Receiving Size: 2MB, Compose Mail Size: 2MB, Delivery Report: OFF	P. 14-16
	SMS Settings	—	SMS Report Request: OFF, SMS Validity Period: 3 Days, SMS Input Character: Japanese(70char.)	
	Check Mail Settings	—	—	P. 14-19
Reset Mail Settings	—	—	—	

## Mail (PC Mail)

2nd-level Menu	3rd-level Menu	Menu Item No.	Default Setting	Refer to
PC Mail Inbox	—	—	—	P. 5-12
PC Mail Outbox	—	—	—	P. 5-14
PC Mail Draft	—	—	—	P. 5-27
Compose PC Mail	—	—	—	P. 5-7
Retrieve New	—	—	—	P. 5-12
PC Mail Settings	Account Settings	—	See "Account Settings (PC Mail)" (P. 15-35)	—
	Send/Recv. Settings	—	See "Send/Recv. Settings (PC Mail)" (P. 15-36)	
	Priority Mail Menu	—	S! Mail Menu	P. 14-19
	Scroll	—	1 Line	
	Font Size	—	Standard	
	Mail List Disp.	—	1 Line+Body (List Setting: Name)	



2nd-level Menu	3rd-level Menu	Menu Item No.	Default Setting	Refer to
PC Mail Settings	Start Attachment(auto)	—	OFF	P. 14-19
	Header/Signature	—	Edit Header, Edit Signature: Not Stored, Edit Quotation Marks:-----, Insert Setting: Selected	P. 14-16, P. 14-18
	Mail Box Lock	—	PC Mail Inbox, PC Mail Outbox, PC Mail Draft: Unlocked	P. 5-17
	Receiving Setting	—	Operation Preferred	P. 14-17
	Emotion/Keyword	—	Disp. Emotion: ON, Disp. Keyword: OFF	
	Check PC Mail Settings	—	—	P. 14-19
Reset PC Mail Settings	—	—		

## Yahoo!

2nd-level Menu	3rd-level Menu	Menu Item No.	Default Setting	Refer to
Yahoo! Keitai	—	—	—	P. 6-3
Bookmark	—	—	—	P. 6-10
Saved Pages	—	—	—	
History	—	—	—	P. 6-3
Enter URL	—	—	—	
PC Site Browser	—	—	See "PC Site Browser under Yahoo!" (P. 15-36).	—



# Menu List

2nd-level Menu	3rd-level Menu	Menu Item No.	Default Setting	Refer to
Browser Settings	Font Size	—	Standard	P. 14-20
	Scroll	—	Single Line	
	Downloads	—	Display Images: ON, Play Sounds: ON	
	Flash Sound Effect	—	ON	
	Memory Manager	—	—	
	Security	—	Manufacture Number: ON, Send Referer: ON, Cookie Settings: Enabled, Script Settings: Ask NW Access	
	Check Settings	—	—	
	Initialized Browser	—	—	
Reset	—	—	—	

## S! Appli

2nd-level Menu	3rd-level Menu	Menu Item No.	Default Setting	Refer to
S! Appli List	—	—	—	P. 9-8
Settings	Sound/Vib Settings	—	Volume: Level 4, Vibration: ON	P. 14-25
	Backlight Settings	—	Switch ON/OFF: Link To Phone Set., Blink: ON	
	Reset	—	—	P. 14-26
Information	—	—	—	P. 9-8





## TV

2nd-level Menu	3rd-level Menu	Menu Item No.	Default Setting	Refer to
Watch TV	—	—	—	P. 8-6
Program Guide	—	—	—	P. 8-8
Booking Program List	—	—	—	P. 8-11
Timer Recording List	—	—	—	
Result Timer Rec	—	—	—	P. 8-16
TV Link	—	—	—	P. 8-14
Channel List	—	—	—	P. 8-13
Channel Settings	—	—	—	P. 8-3
User Settings	Subtitles	—	ON (Wide:Bottom)	P. 14-22
	Rec. While Low Battery	—	ON	P. 14-23
	TV Effect	—	Sound Effect: Auto, Visual Image Effect: Dynamic	P. 14-22
	TV Sound While Closed	—	ON	
	TV Power Saving	—	OFF (not set)	
	Display Light	—	Constant Light	
	Data BC Settings	—	Set Image Disp.: ON, Sound Effect: ON	
	Icon Always Show	—	ON	P. 14-22
	Time Shift Setup	—	Auto ON	P. 14-23
	Check TV Settings	—	—	
	Reset Channel Setting	—	—	
	Reset Storage Area	—	—	
	Reset TV Settings	—	—	



# Menu List

## Camera

2nd-level Menu	3rd-level Menu	Menu Item No.	Default Setting	Refer to
Photo Mode	–	–	–	P. 7-6
Movie Mode	–	–	–	P. 7-8
Voice Mode	–	–	–	P. 7-13
Quick Album	–	–	–	P. 12-5
Videos	–	–	–	P. 12-2

## Entertainment

2nd-level Menu	3rd-level Menu	Menu Item No.	Default Setting	Refer to
Wi-Fi Contents	–	–	–	P. 13-16
Mobile Widget	Widget Contents	–	–	P. 10-2
	Settings	–	See "Settings for Mobile Widget under Entertainment" (P. 15-37)	–
S! Quick News	S! Quick News List	–	–	P. 10-4
	Settings	–	See "Settings for S! Quick News under Entertainment" (P. 15-38)	–
S! Info Ch./Weather	What's New	–	–	P. 10-5
	History	–	–	
	Register/Cancel	–	–	
	Get Latest Contents	–	–	P. 10-8
	Settings	–	S! Information Notif.: ON, Font Size: Standard	P. 14-28
	Weather Indicator	–	See "Weather Indicator for S! Info Ch./Weather under Entertainment" (P. 15-38)	–
BookSurfing	–	–	–	P. 10-7



## Tools

2nd-level Menu	3rd-level Menu	Menu Item No.	Default Setting	Refer to
Alarm	—	44	—	P. 11-17
Schedule	—	45	—	P. 11-9
Calculator	—	85	—	P. 11-16
Dictionary	Enter Word	—	—	P. 2-28
	Text Reader	—	—	—
	Reference History	—	—	P. 2-28
Text Memo	—	42	—	P. 11-14
To Do List	—	95	—	P. 11-12
Pedometer	—	—	—	P. 11-19
Life History Viewer	—	—	—	P. 11-7
S! GPS Navi	Navi Appli	—	—	P. 11-5
	Current Location	—	—	
	Position Location	—	—	
	Location Logs	—	—	P. 11-26
	NAVI Settings	—	See "NAVI Settings for S! GPS Navi under Tools" (P. 15-38)	—
Osaifu-Keitai	Lifestyle-Appli	—	—	P. 11-2
	IC Card Lock Set.	—	IC Card Lock: OFF, IC Lock(Power-off): Maintain	P. 11-3
	Call Remote Lock	—	OFF	P. 11-4
	IC Card Illumination	—	ON	P. 14-30
	Interface Settings	—	Browser: ON	P. 14-31
S! Addressbook Back-up	Start Sync	—	—	P. 2-25
	Auto Sync Settings	—	ON/OFF: OFF	P. 14-12
	Sync Log	—	—	P. 2-26



# Menu List

2nd-level Menu	3rd-level Menu	Menu Item No.	Default Setting	Refer to
Account Details	—	0	—	P. 1-21
Bar Code Reader	—	—	—	P. 11-21
Text Reader	—	—	—	P. 11-23
Receive Ir Data	—	79	—	P. 13-3
Bluetooth	Device List	—	—	P. 13-6
	Register New Devices	—	—	
	Bluetooth ON/Bluetooth OFF	—	Bluetooth OFF	P. 13-8
	Accept Registered	—	—	
	Bluetooth Settings	—	Time-out to Search: 05 Seconds, Forward Ring Tone: ON, Dial From Other Device: Valid	P. 14-31
Play/Erase Msg.	—	—	—	P. 3-5, P. 3-18
Play/Erase VC Msg.	—	—	—	P. 3-5
Voice Memo	—	43	—	P. 11-15
Voice Announce	—	91	—	P. 14-11
Forwarding Image	—	—	ON	P. 14-12
microSD Manager	—	—	—	P. 12-13
USIM Operation	—	—	—	P. 2-24, P. 5-26



## Data Folder

2nd-level Menu	3rd-level Menu	Menu Item No.	Default Setting	Refer to
My Picture	—	46	—	P. 12-2
Melody	—	16	—	
S! Appli	—	—	—	
Widget	—	—	—	
Ring Songs-Music	—	—	—	
Videos	—	—	—	
Books	—	—	—	
Key Illumination	—	—	—	
TV	—	—	—	
PDF	—	—	—	
Other Documents	—	—	—	

## Music

2nd-level Menu	3rd-level Menu	Menu Item No.	Default Setting	Refer to
—	—	—	—	P. 9-5

## Own Data

2nd-level Menu	3rd-level Menu	Menu Item No.	Default Setting	Refer to
Received Calls	—	24	—	P. 3-10
Dialed Calls	—	—	—	
Blog/Mail Member	—	97	—	P. 5-8
Tomo-Den	—	—	—	P. 3-12



# Menu List

2nd-level Menu	3rd-level Menu	Menu Item No.	Default Setting	Refer to
Common Phrases	—	38	—	P. 2-15
Own Dictionary	—	82	—	
DL Dictionary	—	—	—	P. 2-16

## Phone Book

2nd-level Menu	3rd-level Menu	Menu Item No.	Default Setting	Refer to
—	—	—	—	P. 2-19

## Settings

2nd-level Menu	3rd-level Menu	Menu Item No.	Default Setting	Refer to
Style Mode Setting	—	—	Varies by model color.	P. 14-3
Incoming Call	Ring Volume	50	Phone, Video Call, Mail: Level 4	P. 14-8
	Select Ring Tone	13	Phone (Select Ring Tone: Pattern 1, Select Calling Disp.: Flying Type), Video Call (Select Ring Tone: Pattern 3, Select Calling Disp.: Flying Type), Mail (Select Ring Tone: You've got mail 1, Select Receiving Disp.: Flying Type)	
	Vibrator	54	Phone, Video Call, Mail: OFF	P. 14-9
	Illumination	89	Set Color: Varies by model color., Set Pattern: Pattern 1, Missed Info: ON	P. 14-10
	Manner Mode Setting	20	Manner Mode Set: Manner Mode, Manner Start Time, Manner Release Time: OFF	
	Disp. Phone Book Image	—	ON	P. 14-9
	Answer Setting	58	Any Key Answer	P. 14-8
	Mail Ring Time	68	Mail: ON (Ring Time: 05 Seconds)	
	Ring Time(sec.)	90	Set Mute Seconds: OFF, Missed Calls Display: Display	
Info Notice Setting	65	ON	P. 14-10	



2nd-level Menu	3rd-level Menu	Menu Item No.	Default Setting	Refer to
Incoming Call	Answering Machine	55	OFF	P. 3-4
	Disp. Call/Receive No.	—	Varies by model color.	P. 14-10
Talk	Hyper Clear Voice	—	Low	P. 14-13
	Auto Voice Memo	—	OFF	
	Noise Reduction	76	ON	
	Quality Alarm	75	No Tone	
	Reconnect Signal	77	No Tone	
	Illumination in Talk	—	OFF	
	Set Hold Tone	—	On Hold Tone: Tone 1	
	Setting When Folded	18	End the Call	
Dialing	Pause Dial	84	—	P. 14-12
	Sub-address Setting	—	OFF	
	Prefix Setting	—	国際発信 (Prefix: 0046010), 184 (Prefix: 184), 186 (Prefix: 186)	
	Headset SW to Dial	—	OFF	P. 14-11
	Int'l Dial Assistance	—	Auto Int'l Call Set.: ON (Country Code: 日本, IDD Prefix Code: 国際発信), Country Code Setting: 日本 (Country Code: 81), IDD Prefix Setting: 国際発信 (IDD Prefix Code: 0046010)	P. 14-13
Video Call	Visual Preference	—	Normal	P. 3-17
	Select Image	—	On Hold, Holding, Substitute Image, Answering Machine, Preparing, Voice Memo: Pre-installed	P. 14-14
	Auto Redial as Voice	—	OFF	
	Display Setting	—	Main Display: Other Side, Front Camera Reverse: ON	
	Hands-free Switch	—	ON	



# Menu List

2nd-level Menu	3rd-level Menu	Menu Item No.	Default Setting	Refer to
Display	Display Setting	56	Varies by model color.	P. 14-3
	Backlight	70	Lighting: 15Sec.+Saver (Light Time: 01 Minutes), Charging: Standard, Brightness: ON+Level 4	P. 14-5
	Display Design	86	Varies by model color.	P. 14-4
	Indicator Display	93	ON (See "Indicator Display for Display under Settings" (P. 15-39))	—
	Font	66	Font Type: Gothic, Thickness: Bold, Character Size: Standard	P. 14-4
	Desktop Icon	63	Theme 1 (Wi-Fiコンテンツを探す, メニューリスト, 各種手続・料金, 待ちうた, S! Quick News List, TV, Photo Mode, Quick Search)	P. 14-6
	3D Display Setting	—	ON	
	言語選択 (Language)	15	日本語	P. 14-5
	Original Menu	52	Account Details, Receive Ir Data, Bluetooth, Calculator, Alarm, Bar Code Reader, Dictionary, My Picture, Books	P. 14-7
	Menu Display Set	57	Menu Display: List, Theme: Varies by model color., Memory Focus: OFF	
	Viewer Settings	—	Picture	P. 14-5
	Auto-change Screen	—	ON	P. 1-8, P. 14-5
	Icons	36	—	P. 1-7
	Icons Setting	—	ON	P. 14-7
	Privacy Angle	—	OFF	P. 14-5
	Image Display Mode	—	Vivid	
	Quick Info Setting	—	Display Sender	
Screen Effect	—	OFF		
Call Time/Charge	Call Data	61	—	
	Set Max Cost Limit	—	Notify Setting: OFF	P. 14-14
	Reset Total	60	—	P. 3-18
	Auto Reset Total Cost	—	OFF	P. 14-14





2nd-level Menu	3rd-level Menu	Menu Item No.	Default Setting	Refer to
Clock	Set Main Time	31	Time Adjustment: Auto, Summer Time: OFF	P. 14-2
	Set Sub Clock	–	Display Method: OFF, Summer Time: OFF, Area Name: Display	
	Clock Display	39	Display: ON, Size: Small, Color: Varies by model color.	
	Alarm Setting	–	Alarm Preferred	
	Reading Out in Alarm	–	This Function cannot operate in English-Mode.	–
	Clock Alarm Tone Set	–	Alarm Tone	P. 14-2
	Auto Power ON	–	OFF	P. 14-3
	Auto Power OFF	–	OFF	
Security	Lock	–	OFF	P. 4-3
	IC Card Lock Set.	–	IC Card Lock: OFF, IC Lock (Power-off): Maintain	P. 11-3
	Call Remote Lock	–	OFF	P. 11-4
	Keypad Lock	–	After Closed: OFF, Timer: OFF	P. 4-4
	Emission OFF Mode	–	NO (not set)	P. 4-6
	Secret Mode	40	OFF (not set)	P. 4-7
	Secret Data Only Mode	41	OFF (not set)	
	Reject Unknown	–	Accept	P. 4-6
	Call Setting W/O ID	10	Unknown, Payphone, User Unset: Accept (Select Ring Tone: Same as Ring Tone, Select Calling Disp.: Same as Display)	
	Change Security Code	29	9999	P. 1-20
	IC Card Authentic.	–	OFF	P. 4-5
PIN Setting	–	PIN1 Code Entry Set: OFF	P. 4-2	
Illumination	Closed Illum.	–	ON (Set Color: Varies by model color., Set Pattern: Pattern 2)	P. 14-29
	Key Illumination	–	ON (See "Key Illumination for Illumination under Settings" (P. 15-40))	–
	Key Backlight	–	Varies by model color.	P. 14-30



# Menu List

2nd-level Menu	3rd-level Menu	Menu Item No.	Default Setting	Refer to
External Connection	USB Mode Setting	—	Communication Mode	P. 13-9
	Headset Usage Setting	51	Headset+speaker	P. 14-11
	Headset Mic. Setting	—	Headset Microphone	
	Auto Answer Setting	94	Phone, Video Call: OFF	
Connection Settings	SMS Center Selection	—	819066519300	P. 14-19
	Certificate	—	All Certificates: Valid	P. 6-13
	Retrieve NW Info	—	—	P. 1-17
Int'l Roaming Set	NW Search Mode	—	Auto	P. 14-15
	PLMN Setting	—	—	
	Select Network	—	AUTO	
	Display Operator Name	—	Display OFF	
Optional Services	Caller ID Notification	17	Activate/Deactivate: ON	P. 3-20
	Voice Mail/Divert	—	—	P. 3-14, P. 3-19
	Call Waiting	—	—	P. 3-19
	Call Barring	—	—	P. 3-20
Wi-Fi Setting	ON/OFF	—	ON	P. 13-11
	Prioritized AP Search	—	—	P. 13-14
	Access Point Settings	—	Priority Settings: Unset	
	Manual Setup	—	See "Manual Setup for Wi-Fi Setting under Settings" (P. 15-41)	—
	Easy Connecting(AOSS)	—	—	P. 13-12
	Easy Connecting(WPS)	—	—	P. 13-13
	Wi-Fi/3G Change Set	—	Auto Mode	P. 14-32
	Reset Wi-Fi Setting	—	—	



2nd-level Menu	3rd-level Menu	Menu Item No.	Default Setting	Refer to
Other Settings	Keypad Sound	30	OFF	P. 14-10
	Charge Sound	—	ON	
	Open-close Sound	—	Open Sound: Open-1 (Ring Time: 2.0 Seconds), Close Sound: Close-1 (Ring Time: 2.0 Seconds)	P. 14-11
	Battery Level	71	—	P. 1-21
	Network Status	—	—	
	Side Key Guard	—	OFF	P. 1-23
	Character Input Set	35	Input Mode: 5-touch, Prediction: ON, T9 Change Mode: T9 Kanji Change Mode, CHG Input Size: Standard, Auto Cursor: Normal	P. 14-29
	Shortcut-key Setting	—	Camera	
	Reset Settings	23	—	P. 14-33
Initialize	—	—	P. 15-4	
Software Update	—	—		

### Account Settings (PC Mail)

4th-level Menu	5th-level Menu	Menu Item No.	Default Setting	Refer to
Manual Settings	SMTP Settings	—	SMTP Server Address: Not Stored, SMTP Server Port: 587, Mail Address: Not Stored, SMTP Auth.: ON, SMTP Auth. User ID, SMTP Auth. Password: Not Stored, POP before SMTP: ON, SMTP over SSL: OFF	P. 5-4
	POP3 Settings	—	POP3 Server Address: Not Stored, POP3 Server Port: 110, POP3 Login ID, POP3 Login Password: Not Stored, APOP Auth.: OFF, POP3 over SSL: OFF, Delete Server Mail: OFF	P. 5-5
Set Quick Yahoo! Mail	Mail Address	—	@yahoo.co.jp	
	Password	—	Not Stored	
Yahoo! JAPAN ID	—	—	—	P. 14-19
Edit Account name	—	—	アカウント1/アカウント2/アカウント3	



# Menu List

4th-level Menu	5th-level Menu	Menu Item No.	Default Setting	Refer to
Reset Account Settings	—	—	—	P. 14-19

## Send/Recv. Settings (PC Mail)

4th-level Menu	5th-level Menu	Menu Item No.	Default Setting	Refer to
Outgoing Account	—	—	Not Stored	P. 14-17
Auto Check	—	—	Manual	P. 14-18
Auto Receiving	—	—	Part	
Manual Receiving	—	—	Part	
Check Interval	—	—	2 Hours	
Inactivate Time	—	—	22:00~06:00	
Auto Check in Roaming	—	—	OFF	

## PC Site Browser under Yahoo!

4th-level Menu	5th-level Menu	Menu Item No.	Default Setting	Refer to
Home	—	—	—	P. 6-5
Bookmark	—	—	—	P. 6-10
History	—	—	—	P. 6-6
Enter URL	—	—	—	
Yahoo! Keitai	—	—	—	P. 6-3



4th-level Menu	5th-level Menu	Menu Item No.	Default Setting	Refer to
PC Site Brw. Settings	Warning Messages	—	ON	P. 14-21
	Scroll	—	Single Line	P. 14-20
	Display Mode Settings	—	PC Screen: 100%, Small Screen: Standard	P. 14-21
	Downloads	—	Display Images: ON, Play Sounds: ON	P. 14-20
	Memory Manager	—	—	
	Security	—	Manufacture Number: ON, Send Referer: ON, Cookie Settings: Enabled, Script Settings: ON	
	Check PC Site Brw. Set	—	—	
	Initialized Browser	—	—	
Reset PC Site Brw. Set	—	—		

### Settings for Mobile Widget under Entertainment

4th-level Menu	5th-level Menu	Menu Item No.	Default Setting	Refer to
Auto Refresh	—	—	ON	P. 14-27
Auto Roaming	—	—	OFF	
Delete Content	—	—	—	
Cookies	—	—	ON	
Delete Cookies	—	—	—	
Standby Disp. Set.	—	—	ON	



# Menu List

## Settings for S! Quick News under Entertainment

4th-level Menu	5th-level Menu	Menu Item No.	Default Setting	Refer to
Auto Refresh	S! Quick News	—	OFF	P. 14-27
	General	—	OFF	
	Special	—	OFF	
Standby Settings	Standby Disp. Set.	—	ON	
	Speed Settings	—	Normal	
	Unread & Read Set.	—	Unread & Read	
Set Image Disp.	—	—	ON	
Del. Quick News	—	—	—	

## Weather Indicator for S! Info Ch./Weather under Entertainment

4th-level Menu	5th-level Menu	Menu Item No.	Default Setting	Refer to
Weather	—	—	—	P. 10-5
Manual Update	—	—	—	P. 10-9
Settings	Weather Update	—	ON	P. 14-28
	Standby Setting	—	ON	
	Weather Notif.	—	ON	

## NAVI Settings for S! GPS Navi under Tools

4th-level Menu	5th-level Menu	Menu Item No.	Default Setting	Refer to
Map Setting	Select Navi Appli	—	NAVITIME	P. 14-31
	Map Activate Setting	—	After positioning	
Location Navi	Service Settings	—	—	P. 11-6



4th-level Menu	5th-level Menu	Menu Item No.	Default Setting	Refer to
Map URL Settings	—	—	1: http://map.navitime.jp, 2, 3, 4, 5: Not Recorded	P. 14-31
Send Location Info	—	—	Confirm	

### Indicator Display for Display under Settings

4th-level Menu	5th-level Menu	Menu Item No.	Default Setting	Refer to
Disp. Clock Only	—	—	OFF	P. 14-8
Clock Type	—	—	Digital 1	
Called	—	—	ON	
Mail	—	—	ON	
Connection	—	—	ON	
Time Signal	Set Time	—	60 Minutes	
	Set Color	—	Color 7	
	Set Pattern	—	Pattern 6	
Display Time	—	—	15 Seconds	



# Menu List

## Key Illumination for Illumination under Settings

4th-level Menu	5th-level Menu	Menu Item No.	Default Setting	Refer to
Power ON	—	—	ON	P. 14-30
Power OFF	—	—	ON	
Incoming Call	—	—	Antique Gold	
Dialing	—	—	Rainbow	
Talking Start	—	—	Fun Time	
Mail Receiving	—	—	Antique Gold	
Mail Sending	—	—	Rainbow	
Emotion	—	—	Always	
Alarm	—	—	Reflex White	
Snooze	—	—	ON	
Ir/IC Exchanging	—	—	ON	
Missed Call	—	—	Cosmetic Red	
Open	—	—	Varies by model color.	
Event	—	—	ON	





## Manual Setup for Wi-Fi Setting under Settings

4th-level Menu	5th-level Menu	Menu Item No.	Default Setting	Refer to
Profile Setting (Select profile)	Set Profile Name	—	—	P. 14-32
	Wi-Fi Detail Setting	—	BB モバイルポイント (ESSID Setting: mobilepoint, Radio Mode Setting: AUTO(802.11b/g)), プロファイル02 to 20 (ESSID Setting: ESSID02 to ESSID20, Radio Mode Setting: AUTO(802.11b/g))	
	IP Setting	—	IP Address Setting, DNS Setting: Automatic Setup	
	HTTP Proxy Setting	—	None	P. 14-33
	Set Security Method	—	BB モバイルポイント: WEP (Set KeyID: 1, Set WEP Key: 64Bit/HEX), プロファイル02 to 20: None	
	Public Wi-Fi Setting	—	OFF	
	Wi-Fi Access Mode	—	Keitai Wi-Fi	
Display Information	Connection Status	—	—	P. 13-15
	MAC Address	—	—	



## Main Specifications

Model	940N	
Dimensions (H×W×D) (When Closed)	Approx. 109 × 50 × 13.9 mm (thickest Part: Approx. 16.4 mm)	
Weight	Approx. 114 g	
Continuous Standby Time	[3G] Approx. 540 hrs [GSM] Approx. 280 hrs	
Continuous Talk Time	[3G] Voice Call: Approx. 220 min. Video Call: Approx. 100 min. [GSM] Voice Call: Approx. 190 min.	
Charging Time	Up to approx. 120 min.	
Display/ External Display	Type	Display: LTPS_TFT 262,144 colors External Display: Organic EL one color
	Size	Display: Approx. 3.2 inches External Display: Approx. 0.77 inches
	Pixels	Display: 409,920 pixels (480 × 854 dots) External Display: 3,744 pixels (96 × 39 dots)

Camera	Imaging device	Front Camera: CMOS Rear Camera: CMOS
	Lens size	Front Camera: 1/10.0 inch Rear Camera: 1/3.2 inch
	Effective pixels	Front Camera: Approx. 0.33 million pixels Rear Camera: Approx. 8.1 million pixels
	Recording pixels	Front Camera: Approx. 0.31 million pixels Rear Camera: Approx. 8.0 million pixels
	Zoom (digital)	Front Camera: Up to approx. 1.9 x Rear Camera: Up to approx. 9.0 x
	Still images	Up to approx. 1,000 files <sup>1</sup>
	Still images for continuous shooting	5 to 20 files <sup>2</sup>
	Still image file format	JPEG
	Video recording time	Handset: Up to approx. 218 sec. <sup>3</sup> Memory card: Up to approx. 120 min. <sup>3</sup>
	Video file format	MP4



TV	Continuous watching time	Approx. 180 min.
	Maximum recording time	Approx. 540 min. <sup>4</sup>
Chaku-Uta® and Chaku-Uta Full®	Storage Capacity	Approx. 195 MB <sup>5</sup>

- 1 In case the image size is **QCIF (176 x 144)** and the image quality is set to **Normal** (the file size is 10 KB).
- 2 Varies depending on the image size.
- 3 Time for recording when recorded in the following conditions:

	Handset	Memory card
Image size	QCIF (176 x 144)	
Image quality	Normal	
File size	2MB	Long Time
Recording type	Normal	

- 4 Approximate time when recorded on a 2 GB memory card.
- 5 Shared with images, videos, saved pages, books, images (captured with TV), PDF files and graphic mail templates.

## Handset Materials

Where Used		Material/Finish
Multi Selector center key		PC resin, aluminum vapor deposition + UV coating
Rear Camera		ABS resin, tin vapor deposition + UV coating
Battery compartment	Screws	Iron, zinc plating (chromate)
	USIM Card cover	Stainless alloy
	Terminals	Copper alloy, gold plating
Charger terminals		Copper alloy, gold plating
Battery (terminals)		Epoxy resin (glass epoxy), gold plating



## Maximum Number of Storable Items

Item		Maximum Number	Maximum That Can be Protected
Phone Book entries		1,000 <sup>1</sup>	—
Schedule	Events	2,500	—
	Holidays	100	—
To Do List	Tasks	100	—
S! Mail/SMS	Received messages	1,000 <sup>2 3 4 5</sup>	1,000 <sup>2</sup>
	Sent messages	400 <sup>2 3 4</sup>	200 <sup>2</sup>
	Draft messages	20 <sup>2</sup>	—
PC Mail	Received messages	1000 <sup>2 4</sup>	1000 <sup>2</sup>
	Sent messages	400 <sup>2 4</sup>	200 <sup>2</sup>
	Draft messages	20 <sup>2</sup>	—
Bookmarks	Yahoo! Keitai	100 <sup>5 6</sup>	—
	PC Site Browser	100 <sup>6</sup>	—
Saved Pages		100 <sup>2</sup>	50 <sup>2</sup>
S! Appli		99 <sup>2 5</sup>	—
Still images		1,000 <sup>2 4</sup>	—
Videos		100 <sup>2 6</sup>	—
Captured screenshots (TV)		100 <sup>2</sup>	—
Widgets		100 <sup>2 5</sup>	—
Melody files		400 <sup>2</sup>	—

Item		Maximum Number	Maximum That Can be Protected
Songs		100 <sup>2</sup>	—
books		400 <sup>2</sup>	—
Key Illumination Patterns		50	—
PDF files		400 <sup>2</sup>	—
Template (Graphic Mail)		1,000 <sup>5</sup>	—
Answering Machine	Voice calls	5 (20 sec. each)	—
	Video calls	2 (20 sec. each)	—
Voice Memo		1 (20 sec.)	—
Dialed Calls		30	—
Received Calls		30	—
Speed Dial		10 (Entry Number 000-009)	—

- 1 Up to 50 entries can be saved on USIM Card.
- 2 The actual number that can be saved or protected may be less depending on the data size.
- 3 An additional 10 received and sent SMS messages can be saved on USIM Card.
- 4 Up to 100 additional messages/files can be saved in Secret Folders.
- 5 Includes data stored by default.
- 6 Up to 10 additional files can be saved in Secret Folder.



## Memory Card Folders & Files

Folder			File	
DCIM	XXXNECDT <sup>1</sup>		Still images captured with Camera and JPEG images copied or moved from handset	
MISC			Settings file for DPOF printing	
PRIVATE	MYFOLDER	Mail	Drafts	Backup data of Draft
			Inbox	Backup data of Inbox
			Sent Messages	Backup data of Outbox
		Utility	Calendar	Backup data of Schedule
			Contacts	Backup data of Phone Book
			Memo	Backup data of Text Memo
			Rights	Backup file of content keys
			Tasks	Backup file of To Do List
		My Items	Book	Book files
			Bookmarks	Backup file of Bookmarks
			Flash(R)	Flash <sup>®</sup> files
			Games and More	S! Appli files
			Music	Songs
			Other Documents	PDF files or Other document files
			Pictograms	My Pictograms
Pictures	Still images			
Sounds & Ringtones	Melodies			



# Specifications

Folder			File
PRIVATE	MYFOLDER	My Items	Videos
			Widget
		NE_Folder	Other files
SD_VIDEO	MGR_INFO	TV Program recording management file	
	PRGXXX <sup>2</sup>	TV Program recording files	

- 1 XXX: Three single-byte numbers from 100 to 999
- 2 XXX: Three single-byte alphanumeric characters (hexadecimal) from 001 to FFF



<b>Number</b>	
2-touch Mode .....	2-16
3D Display Setting .....	14-6
5-touch Mode .....	2-12

**A**

<b>Access Files</b> .....	12-3
Composite Image .....	12-16
List Setting .....	12-17
Set Image Disp. ....	12-16
<b>Access Handset Functions</b> .....	2-2
<b>Access History</b> .....	6-3, 6-6
Delete .....	6-12
<b>Access Points</b> .....	13-13
<b>Access the Internet</b>	
From Bookmarks .....	6-10
From Data Broadcasts .....	8-7
From Entered URL Record .....	6-12
From Scanned Data .....	11-29
From TV Links .....	8-14
From URL in Text .....	5-27
From Web Page .....	6-13
Open New Tab .....	6-7
PC Site Browser .....	6-5
Use Access History .....	6-3, 6-6
Yahoo! Keitai .....	6-3
<b>Account Details</b> .....	1-21
<b>Add Folder</b>	
Bookmark .....	6-15

Data Folder .....	12-11
Messages .....	5-26
<b>Adjust Earpiece Volume</b> .....	3-3, 3-8
<b>After Sales Service</b> .....	15-60
<b>Alarm</b> .....	11-17
Cancel .....	11-18
Edit .....	11-28
Release All .....	11-28
Set .....	11-17
<b>Alarm Activation Operations</b> .....	11-17
<b>Alarm Notification Operations</b>	
Schedule .....	11-10
To Do List .....	11-12
<b>Alarm Setting</b> .....	14-2
<b>Answer Calls</b>	
Bluetooth® .....	13-7
Video Calls .....	3-8
Voice Calls .....	3-4
<b>Answer Setting</b> .....	14-9
<b>Answering Machine</b> .....	3-4
Activate When a Call Arrives .....	3-4
Delete Messages .....	3-18
Play Messages .....	3-5
Settings .....	3-4
<b>Any Key Answer</b> .....	14-9
<b>Attach to Mail</b>	
Bookmark .....	6-15
Delete Attached Files .....	5-22
Files .....	5-7
Shot Still Image/Video .....	5-21

<b>Authentication Password</b> .....	13-3
<b>Auto Answer Setting</b> .....	14-11
<b>Auto Check</b> .....	14-18
<b>Auto Check in Roaming</b> .....	14-18
<b>Auto Cursor</b> .....	14-29
<b>Auto Power On/Off</b> .....	14-3
<b>Auto Receiving (PC Mail)</b> .....	14-18
<b>Auto Receiving (S! Mail)</b> .....	14-17
<b>Auto Redial as Voice</b> .....	14-14
<b>Auto Refresh (Mobile Widget)</b> ...	14-27
<b>Auto Refresh (S! Quick News)</b> ...	14-27
<b>Auto Reset Total Cost</b> .....	14-14
<b>Auto Roaming</b> .....	14-27
<b>Auto Save Set</b> .....	7-4
<b>Auto Timer</b> .....	7-11
<b>Auto Voice Memo</b> .....	14-13
<b>Auto-change Screen</b> .....	1-8, 14-5
<b>Auto-sort</b> .....	5-16

**B**

<b>Backlight</b> .....	14-5
<b>Backlight Settings (S! Appli)</b> .....	14-25
<b>Bar Code Reader</b> .....	11-21
Check Scanned Data .....	11-21
Delete Scanned Data .....	11-30
Scan .....	11-21
<b>Basic Key Operations</b> .....	1-3
<b>Battery</b> .....	1-13



Installation .....	1-13
<b>Blog/Mail Member .....</b>	<b>5-8</b>
Add Addresses .....	5-8
Delete Addresses .....	5-22
Edit Address .....	5-22
Set Default Blog Address .....	5-8
Specify Recipients .....	5-20
<b>Bluetooth® .....</b>	<b>13-5</b>
Add New Device .....	13-6
Connecting .....	13-6
Delete Added Device .....	13-17
Device List .....	13-7
Discontinue .....	13-8
Playing Music .....	13-7
Search .....	13-6
Settings .....	14-31
Talk .....	13-7
<b>Bluetooth Info .....</b>	<b>14-32</b>
<b>Bookmarks .....</b>	<b>6-10</b>
Access Page .....	6-10
Add Folder .....	6-15
Delete .....	6-16
Delete Folder .....	6-15
Edit URL .....	6-15
Move .....	6-15
Number of Bookmarks .....	6-15
Save .....	6-10
Save Scanned URL .....	11-30
Send by S! Mail .....	6-15
Sort Folder .....	6-15
<b>Books .....</b>	<b>10-7</b>

<b>BookSurfing® .....</b>	<b>10-7</b>
---------------------------	-------------

## C

<b>Calculator .....</b>	<b>11-16</b>
<b>Call Barring .....</b>	<b>3-20</b>
<b>Call Forwarding .....</b>	<b>3-14</b>
<b>Call Rejection .....</b>	<b>3-16</b>
<b>Call Time/Charge .....</b>	<b>3-11</b>
<b>Call Waiting .....</b>	<b>3-19</b>
<b>Call While Abroad .....</b>	<b>3-13</b>
<b>Caller ID .....</b>	<b>3-20</b>
<b>Camera .....</b>	<b>7-2</b>
Auto Save Set .....	7-4
Blog Upload .....	7-14
Capture Still Images .....	7-6
Effect .....	7-14
Flicker .....	7-14
Memory Info .....	7-14
Movie Type Set .....	7-14
Quality Setting .....	7-14
Quick Album .....	12-5
Record Videos .....	7-8
Settings .....	14-24
Shake Correction .....	7-4, 7-14
Switch Cameras .....	7-5
Viewfinders .....	7-3
<b>Capture Still Images .....</b>	<b>7-6</b>
Auto Timer .....	7-11
Continuous Shooting .....	7-10
Frame .....	7-11

Panoramic Shooting .....	7-11
Smile Mode .....	7-10
<b>Center Access Code .....</b>	<b>1-20</b>
<b>Certificate .....</b>	<b>6-13</b>
<b>Chance Capture .....</b>	<b>7-12</b>
<b>Change .....</b>	
Entry Number .....	2-30
Font Size (Message Text) .....	5-28
Graphic Mail Effects .....	5-22
Icon Image .....	2-27
Network Password .....	3-20
PIN1/PIN2 .....	4-2
Security Code .....	1-20
Set To, Cc or Bcc .....	5-20
<b>Change Skin .....</b>	<b>14-25</b>
<b>Channel List .....</b>	<b>14-22</b>
Delete a Channel .....	14-22
Remote Control Numbers .....	14-22
Save Stations of a Different Area .....	8-13
Switch .....	8-13
<b>Channel Settings .....</b>	<b>8-3</b>
Automatic .....	8-13
<b>Character Stamp .....</b>	<b>12-9</b>
<b>Charge Battery .....</b>	<b>1-13</b>
AC Charger .....	1-15
Desktop Holder .....	1-16
<b>Charge Sound .....</b>	<b>14-10</b>
<b>Check Battery Level .....</b>	<b>1-21</b>
<b>Check Interval .....</b>	<b>14-18</b>
<b>Check Mail Settings .....</b>	<b>14-19</b>





- Check PC Mail Settings ..... 14-19
  - Check PC Site Brw. Set ..... 14-20
  - Check settings (Yahoo! Keitai) .. 14-20
  - Check TV Settings ..... 14-23
  - CHG Input Method ..... 2-12
  - CHG Input Size ..... 14-29
  - Clear Learned (Text Entry) ..... 14-29
  - Clock ..... 14-2
  - Clock Alarm Tone Set ..... 14-2
  - Clock Display ..... 14-2
  - Closed Illumination ..... 14-29
  - Codes ..... 1-20
    - Center Access Code ..... 1-20
    - Network Password ..... 1-20
    - PIN1/PIN2 ..... 1-11
    - Security Code ..... 1-20
  - Compose & Send Messages
    - Attach Files ..... 5-7
    - Compose PC Mail ..... 5-7
    - Compose S! Mail ..... 5-6
    - Compose SMS ..... 5-7
    - Delete Receiver ..... 5-20
    - Edit ..... 5-27
    - From Phone Book ..... 2-31
    - From Scanned Data ..... 11-29
    - From Tomo-Den ..... 3-12
    - From Web Page ..... 6-13
    - Graphic Mail ..... 5-6
    - Insert Header/Signature ..... 5-20
    - Save ..... 5-21
  - Set Default Mail Size ..... 14-16
  - Specify Blog/Mail Member List
    - Recipients ..... 5-20
    - To, Cc or Bcc ..... 5-20
  - Compose Messages ..... 5-6, 5-7
  - Continuous Shooting ..... 7-10
  - Cookie Settings (Internet) ..... 14-20
  - Cookie Settings (Mobile Widget) ..... 14-27
  - Copy
    - Between Handset & Memory Card ..... 12-14
    - Event ..... 11-27
    - Phone Book Entries ..... 2-24, 2-31
    - SMS Messages ..... 5-26
    - Text ..... 2-14
  - Customer Service ..... 15-61
  - Customize Mail Address ..... 5-4
- D**
- Data BC Settings ..... 14-23
  - Data Broadcasts ..... 8-7
  - Data Folder ..... 12-2
    - Add Folder ..... 12-11
    - Change Order of Files ..... 12-16
    - Check File Information ..... 12-16
    - Delete Files ..... 12-18
    - Delete Folder ..... 12-18
    - Edit File Name ..... 12-18
    - Edit Folder Name ..... 12-17
    - Edit Still Images ..... 12-9
  - Edit Videos ..... 12-10
  - Memory Info ..... 12-18
  - Move Files ..... 12-11
  - Open Files ..... 12-3
  - Original Animation ..... 12-6
  - Playlist (Melody) ..... 12-7
  - Playlist (Video) ..... 12-7
  - Quick Album ..... 12-5
  - Ringtone ..... 12-16
  - Secret Folders ..... 4-7
  - Stand-by Display ..... 12-16
  - Delete All LifeApp ..... 14-31
  - Delete All S! App ..... 14-26
  - Delete Cache ..... 14-20
  - Delete Content (Mobile Widget) ..... 14-27
  - Delete Cookies ..... 14-20
  - Delete Quick News ..... 14-27
  - Delivery Report (S! Mail) ..... 14-16
  - Desktop Icon Settings ..... 14-6
  - Desktop Icons ..... 2-3
    - Add Icons ..... 2-6
    - CHG Icon Image ..... 2-27
    - Delete Desktop Icons ..... 2-27
    - Reset ..... 2-27
    - Show/Hide ..... 2-27
    - Sort ..... 2-27
  - Desktop Info ..... 2-6
  - Dial
    - Bluetooth® ..... 13-7



- From Dialed Calls ..... 3-10
- From Phone Book ..... 2-21
- From Received Calls ..... 3-10
- From Redial ..... 3-10
- From Scanned Data ..... 11-29
- From Tomo-Den ..... 3-12
- From Web Page ..... 6-13
- Global Roaming ..... 3-13
- International Calls ..... 3-3
- Phone Number in Message Text ..... 5-27
- Video Calls ..... 3-7
- Voice Calls ..... 3-3
- Dial From Other Device ..... 14-32**
- Dial Lock ..... 4-3**
- Dialed Calls ..... 3-10**
- Dictionaries ..... 2-15**
- Disp. Call/Receive No. .... 14-10**
- Disp. Phone Book Image ..... 14-9**
- Display Design ..... 14-4**
- Display Indicators ..... 1-6**
- Display Light (TV) ..... 14-22**
- Display Mode Settings ..... 14-21**
- Display Operator Name ..... 14-15**
- Display Setting ..... 14-3**
- Display Setting (Video Call) ..... 14-14**
- DL Dictionary ..... 2-16**
  - Delete ..... 2-30
- Download**
  - Books ..... 10-7
  - Music ..... 9-4

- SI Appli ..... 9-8
- Templates (Graphic Mail) ..... 5-23
- Widgets ..... 10-2
- Downloads ..... 14-20**
- DPOF setting ..... 12-15**
  - Cancel ..... 12-19

## E

- ECO Mode ..... 1-23**
- Edit**
  - Address (Blog/Mail Member) ..... 5-22
  - Alarm Settings ..... 11-28
  - Blog/Mail Member List Name ..... 5-22
  - Event ..... 11-27
  - File Name (Data Folder) ..... 12-18
  - Folder Name (Bookmark) ..... 6-15
  - Folder Name (Data Folder) ..... 12-17
  - Folder Name (Messages) ..... 5-26
  - Folder Name (Templates) ..... 2-29
  - Own Dictionary ..... 2-29
  - Phone Book Entry ..... 2-31
  - Record Timer Settings ..... 8-15
  - Re-entering in T9 Input Mode ..... 2-17
  - Still Images ..... 12-9
  - Template (Graphic Mail) ..... 5-23
  - Templates (Common Phrases) ..... 2-15, 2-29
  - Text ..... 2-14
  - URL (Bookmark) ..... 6-15
  - Videos ..... 12-10
  - View Timer Settings ..... 8-15

- Edit Account name ..... 14-19**
- Edit Still Images ..... 12-9**
  - Brightness ..... 12-17
  - Change Size ..... 12-17
  - Character Stamp ..... 12-9
  - Correct Backlight ..... 12-17
  - Frame ..... 12-9
  - Marker Stamp ..... 12-9
  - Refresh Skin Tone ..... 12-17
  - Retouch ..... 12-17
  - Rotate ..... 12-17
  - Trim away ..... 12-10
- Edit Videos ..... 12-10**
- Emission OFF Mode ..... 4-6**
- Emotion/Keyword ..... 14-17**
- Emotion-Expressing Mail ..... 5-10**
- Enter URL ..... 6-3, 6-6**
  - Delete Records ..... 6-13
- External Display ..... 1-8**
- External Display Settings ..... 14-8**

## F

- FeliCa Mark ..... 1-2**
  - IC Card Authentication ..... 4-5
  - IC Card Illumination ..... 14-30
  - Osaifu-Keitai® ..... 11-2
- Flash Sound Effect ..... 14-20**
- Font ..... 14-4**
- Font Size (Internet) ..... 14-20**



Font Size (Mail) .....	14-19
Font Size (S! Info Channel) .....	14-28
Forward (Message) .....	5-27
Forward Ring Tone .....	14-32
Forwarding Image (Phone Book) .....	14-12
Frame .....	7-11, 12-9

**G**

<b>Global Roaming</b> .....	<b>3-13</b>
Call Japan and Other Countries .....	3-13
Call within the Same Country .....	3-13
Settings .....	14-15
<b>Graphic Mail</b>	
Cancel Effects .....	5-22
Create .....	5-6
Create Automatically .....	5-22
Create from a Template .....	5-23
Delete Templates .....	5-23
Edit a Template .....	5-23
Save Template .....	5-22
<b>Group Calling</b> .....	<b>3-20</b>
<b>Group Setting (Phone Book)</b> .....	<b>14-12</b>
Ring Tone/Image .....	2-23

**H**

<b>Handset Parts</b> .....	<b>1-2</b>
<b>Handsfree</b> .....	<b>3-17</b>
<b>Hands-free Switch (Video Call)</b> ..	<b>14-14</b>

<b>Header/Signature</b> .....	<b>14-16, 14-18</b>
<b>Headset Mic. Setting</b> .....	<b>14-11</b>
<b>Headset SW to Dial</b> .....	<b>14-11</b>
<b>Headset Usage Setting</b> .....	<b>14-11</b>
<b>Holidays</b> .....	<b>11-10</b>
<b>Hyper Clear Voice</b> .....	<b>3-17</b>

**I**

<b>IC Card Authentication</b> .....	<b>4-5</b>
Activate .....	4-5
Register .....	4-5
<b>IC Card Illumination</b> .....	<b>14-30</b>
<b>Icon Always Show (Camera)</b> .....	<b>14-24</b>
<b>Icon Always Show (TV)</b> .....	<b>14-22</b>
<b>Icons Setting</b> .....	<b>14-7</b>
<b>Illumination</b> .....	<b>14-9</b>
<b>Illumination in Talk</b> .....	<b>14-13</b>
<b>Image</b>	
Capture .....	7-6
Edit .....	12-9
<b>Image Display Mode</b> .....	<b>14-5</b>
<b>Inactivate Time</b> .....	<b>14-18</b>
<b>Incoming Call Image</b> .....	<b>14-9</b>
<b>Incoming Message Image</b> .....	<b>14-9</b>
<b>Info Notice Setting</b> .....	<b>14-10</b>
<b>Infrared</b> .....	<b>13-2</b>
Authentication Password .....	13-3
Receive All .....	13-4
Receive One File .....	13-3

Send All Ir Data .....	13-3
Send One File .....	13-3
<b>Infrared Port</b> .....	<b>1-2</b>
<b>Initial Setup</b> .....	<b>1-17</b>
<b>Initialize</b> .....	<b>14-33</b>
<b>Initialized Browser</b> .....	<b>14-20</b>
<b>Input Mode</b> .....	<b>14-29</b>
<b>Insertion &amp; Removal</b>	
Battery .....	1-13
Memory Card .....	12-12
USIM Card .....	1-12
<b>Int'l Dial Assistance</b> .....	<b>14-13</b>
<b>Interface Settings</b> .....	<b>14-31</b>
<b>Internal Antenna</b> .....	<b>1-2</b>
<b>International Calls</b> .....	<b>3-3</b>
Enter " + " .....	3-16
<b>Internet</b> .....	<b>6-2</b>
Access History .....	6-3, 6-6
Connect .....	6-3, 6-5
Enter URL .....	6-3, 6-6
Home .....	6-12
Page Operations .....	6-7
Quick Search .....	6-14
Reload .....	6-13
Send URL by S! Mail .....	6-13
Settings .....	14-20
Toggle 3G & Wi-Fi .....	6-12
<b>Interval/Number</b> .....	<b>14-24</b>



## J

JAN Code ..... 11-21

## K

Key Backlight ..... 14-30

Key Illumination ..... 1-21

Settings ..... 14-30

Keypad Lock ..... 4-4

Setting ..... 4-4

Unlock Temporarily ..... 4-4

Keypad Sound ..... 14-10

## L

Language (言語選択) ..... 14-5

Life History Viewer ..... 11-7

Display setting ..... 11-27

Reload ..... 11-27

Lock

Dial Lock ..... 4-3

IC Card Lock ..... 11-3

Keypad Lock ..... 4-4

Original Lock ..... 4-3

Remote Lock ..... 11-4

Secure Remote Lock ..... 4-5

## M

Mail ..... 5-2

Add Folder ..... 5-26

Auto-sort ..... 5-16

Delete ..... 5-25

Delete All Reports ..... 5-25

Delete Attached Files ..... 5-26

Delete Folder ..... 5-26

Delete Read ..... 5-25

Draft ..... 5-27

Edit ..... 5-27

Filter ..... 5-28

Folder Lock ..... 5-17

Forward ..... 5-27

Mail Box Lock ..... 5-17

Mail Windows ..... 5-15

Message Folders ..... 5-14

Move ..... 5-25

Number of Messages ..... 5-26

Protect ..... 5-25

Search Mail ..... 5-28

Secret Folders ..... 5-17

Settings ..... 14-16

Sort ..... 5-28

Sort Folder ..... 5-26

Tomomato-Mail ..... 5-16

Mail List Disp. ..... 14-19

Mail Ring Time ..... 14-8

Mail Setting ..... 14-16

Main Menu ..... 2-2

Change Theme ..... 2-27

Manner Mode ..... 1-19

Manner Mode Set ..... 14-10

Manner Release Time ..... 14-10

Manner Start Time ..... 14-10

Original ..... 14-10

Manual Receiving ..... 14-18

Manufacture Number ..... 14-20

Map Setting ..... 14-31

Map URL Settings ..... 14-31

Marker Stamp ..... 12-9

Melody Playback

Playlist ..... 12-7

Set Repeat Play ..... 12-17

Memory Card ..... 12-12

Access Data ..... 12-13

Access Files ..... 12-3

Check & Repair ..... 12-19

Check Available Memory Space ..... 12-18

Copy Data from Handset ..... 12-14

Copy Data to Handset ..... 12-14

Delete Data ..... 12-19

DPOF setting ..... 12-15

Folders & Files ..... 15-45

Format ..... 12-13

Insert & Remove ..... 12-12

Transfer WMA Data ..... 9-4

Memory Space (Memory info)

Bookmarks ..... 6-15

Camera ..... 7-14

Data Folder ..... 12-18

Memory Card ..... 12-18

Messages ..... 5-26

Music ..... 9-11

Number of Saved Pages ..... 6-16



Phone Book .....	2-31
S! Appli .....	9-12
Schedules .....	11-27
Server Mail Memory .....	5-24
<b>Menu Display Set .....</b>	<b>14-7</b>
<b>Menu List .....</b>	<b>15-21</b>
<b>Missed Calls .....</b>	<b>3-10</b>
<b>Mobile Widget .....</b>	<b>1-9, 10-2</b>
Change Position of widgets .....	10-8
Delete from Desktop Page .....	10-8
Downloading Contents .....	10-2
Paste Contents .....	10-3
Place widgets in Foreground or Background .....	10-8
Settings .....	14-27
Toggle Page .....	10-2
Update Display .....	10-8
Use .....	10-2
<b>Modem .....</b>	<b>13-10</b>
<b>Move</b>	
Bookmarks .....	6-15
Files .....	12-11
Messages .....	5-25
<b>Multitask .....</b>	<b>2-9</b>
Activate Another Function .....	2-9
Combinations .....	15-2
Toggle Functions .....	2-10
<b>Music Player (Video Player) .....</b>	<b>9-2</b>
Playback Windows .....	9-3
Settings .....	14-25

<b>My Phone Number .....</b>	<b>1-21</b>
------------------------------	-------------

---

## N

<b>Net Access .....</b>	<b>14-25</b>
<b>Network Information .....</b>	<b>1-17</b>
<b>Network Password .....</b>	<b>1-20</b>
<b>Network Status .....</b>	<b>1-21</b>
<b>Noise Reduction .....</b>	<b>14-13</b>
<b>Notify Caller ID .....</b>	<b>3-16</b>
<b>Number of Entries</b>	
Bookmarks .....	6-15
Events .....	11-27
Phone Book Entries .....	2-31
Saved Messages .....	5-26
<b>NW Search Mode .....</b>	<b>14-15</b>

---

## O

<b>One Seg Digital TV .....</b>	<b>8-2</b>
<b>Open Inbox Messages .....</b>	<b>5-10</b>
<b>Open New Messages .....</b>	<b>5-10</b>
<b>Open-close Sound .....</b>	<b>14-11</b>
<b>Optional Services .....</b>	<b>3-14</b>
<b>Original Animation .....</b>	<b>12-6</b>
<b>Original Lock .....</b>	<b>4-3</b>
Customize .....	4-4
Settings .....	4-3
<b>Original Manner Mode .....</b>	<b>14-10</b>
<b>Original Menu .....</b>	<b>2-3, 14-7</b>
<b>Osaifu-Keitai® .....</b>	<b>11-2</b>

Activate Lifestyle-Appli .....	11-3
Download Lifestyle-Appli .....	11-2
Restrict Use .....	11-3
Settings .....	14-30
Use .....	11-3
<b>Outgoing Account .....</b>	<b>14-17</b>
<b>Own Dictionary .....</b>	<b>2-15</b>
Delete .....	2-30
Edit .....	2-29

---

## P

<b>Panoramic Shooting .....</b>	<b>7-11</b>
<b>Pause Dial .....</b>	<b>3-17, 14-12</b>
<b>PC Connection .....</b>	<b>13-9</b>
Access Memory Card Data .....	13-9
Packet Transmission .....	13-10
USB Mode Setting .....	13-9
<b>PC Mail Setting .....</b>	<b>5-4</b>
<b>PC Site Browser .....</b>	<b>6-5</b>
Change Disp. Mode .....	6-12
Windows .....	6-5
<b>Pedometer .....</b>	<b>11-19</b>
Activate .....	11-19
Paced Steps (きっちり歩数) .....	11-19
Reset .....	11-29
Set .....	11-19
View Data .....	11-20
Walking Target .....	11-28
<b>Phone Book</b>	
Access Entries from Other Functions .....	2-22



Change Entry Number .....	2-30
Change Index Tab .....	2-30
Check Number of Entries .....	2-31
Copy .....	2-31
Copy to USIM Card .....	2-24
Create Entries .....	2-20
Create Entries from Other Functions .....	2-20
Delete Entries .....	2-32
Delete Items .....	2-32
Dial .....	2-21
Edit an Entry .....	2-31
Group Setting .....	14-12
Read Map .....	2-31
Restrictions .....	2-23
Ring Tone/Image .....	2-23
S! Addressbook Back-up .....	2-25
Save from Scanned Data .....	11-30
Search .....	2-21
Send Entries by S! Mail .....	2-32
Set Incoming Image .....	2-20
Set Preferred Search Method .....	14-12
Set Secret .....	2-24
<b>PIN Lock &amp; Cancellation .....</b>	<b>1-11</b>
<b>PIN1/PIN2 .....</b>	<b>1-11</b>
Change PIN1/PIN2 .....	4-2
PIN1 Code Entry Set .....	4-2
<b>Place Calls on Hold .....</b>	<b>3-16</b>
<b>Play</b>	
Answering Machine .....	3-5
Music .....	9-5
Playlist .....	9-6
Recorded Program .....	8-9
Voice Announce .....	14-11
Voice Mail .....	3-15
Voice Memo .....	3-5
<b>Playlist (Songs) .....</b>	<b>9-6</b>
Add Music .....	9-11
Cancel Playlist Songs .....	9-11
Create .....	9-6
Delete .....	9-12
Play .....	9-6
Sort Playlist .....	9-11
<b>PLMN Setting .....</b>	<b>14-15</b>
<b>POP3 Settings .....</b>	<b>5-5</b>
<b>Power On/Off .....</b>	<b>1-17</b>
<b>Prefix Numbers .....</b>	<b>3-16</b>
<b>Prefix Setting .....</b>	<b>14-12</b>
<b>Priority Mail Menu .....</b>	<b>14-19</b>
<b>Privacy Angle .....</b>	<b>14-5</b>
<b>Profile .....</b>	<b>13-15</b>
Copy .....	13-15
Reset .....	13-15
Setting .....	14-32
<b>Program Guide .....</b>	<b>8-8</b>
<b>Q</b>	
<b>QR Code .....</b>	<b>11-21</b>
<b>Quality Alarm .....</b>	<b>14-13</b>
<b>Quick Album .....</b>	<b>12-5</b>
<b>Quick Info Setting .....</b>	<b>14-5</b>
<b>Quick Search .....</b>	<b>5-28, 6-14, 11-27</b>
<b>Quick Silent .....</b>	<b>14-9</b>
<b>R</b>	
<b>Read Out Message .....</b>	<b>5-24</b>
<b>Read Out Setting .....</b>	<b>14-17</b>
<b>Receive &amp; Open Messages .....</b>	<b>5-10</b>
Auto Receiving .....	14-18
Manually Retrieve S! Mail Messages .....	5-23
Open New Messages .....	5-10
Open PC Mail Inbox Messages .....	5-12
Opening S! Mail & SMS Inbox Messages .....	5-10
Read Out Message .....	5-24
Reply .....	5-11, 5-12
Restrict Incoming S! Mail Size .....	14-18
Retrieve Complete S! Mail/PC Mail .....	5-24
Retrieve New PC Mail .....	5-12
Save Attachments .....	5-18
Use Mail List .....	5-11
<b>Received Calls .....</b>	<b>3-10</b>
<b>Receiving Setting .....</b>	<b>14-17</b>
<b>Reconnect Signal .....</b>	<b>14-13</b>
<b>Record at Low Battery .....</b>	<b>14-23</b>
<b>Record Sound</b>	
Sound without Video (Voice Mode) .....	7-13
Voice Announce .....	14-11
Voice Memo .....	3-4, 11-15
<b>Record Timer .....</b>	<b>8-11</b>
<b>Record Videos .....</b>	<b>7-8</b>



- Auto Timer ..... 7-11
  - Chance Capture ..... 7-12
  - Speed Movie ..... 7-12
  - Voice Mode ..... 7-13
  - Redial** ..... 3-10
  - Register S! Quick News**
  - Contents ..... 10-4
  - Reject Calls w/o Caller ID ..... 4-6
  - Reject Unknown ..... 4-6
  - Remote Control Numbers ..... 14-22
  - Reply to Messages ..... 5-11, 5-12
  - Reset**
  - Blog/Mail Member List Name ..... 5-22
  - Channel Settings ..... 14-23
  - Confirmation Window
  - (Data Broadcasts) ..... 14-23
  - Desktop Icons ..... 2-27
  - Folder Name (Common Phrases) ..... 2-29
  - Handset ..... 14-33
  - Holidays ..... 11-27
  - Mail Settings ..... 14-19
  - Memory Card ..... 12-13
  - My Phone Number ..... 1-21
  - Original Menu ..... 14-7
  - PC Mail Account Settings ..... 14-19
  - PC Site Browser Settings ..... 14-20
  - Pedometer Measurements ..... 11-29
  - S! Appli Settings ..... 14-26
  - S! Quick News Contents ..... 14-27
  - SMS Center Selection ..... 14-19
  - Total Call Cost ..... 3-19
  - Total Call Time ..... 3-18
  - TV Settings ..... 14-23
  - Wi-Fi Setting ..... 14-32
  - Yahoo! Keitai Settings ..... 14-20
  - Reset (S! Appli)** ..... 14-26
  - Reset (Yahoo! Keitai)** ..... 14-20
  - Reset Account Settings** ..... 14-19
  - Reset Channel Setting** ..... 14-23
  - Reset Mail Settings** ..... 14-19
  - Reset PC Mail Settings** ..... 14-19
  - Reset PC Site Brw. Set** ..... 14-20
  - Reset Settings** ..... 14-33
  - Reset Storage Area (TV)** ..... 14-23
  - Reset Total Cost** ..... 3-19
  - Reset Total Duration** ..... 3-18
  - Reset TV Settings** ..... 14-23
  - Reset Wi-Fi Setting** ..... 14-32
  - Retrieve New** ..... 5-23
  - Ring Volume** ..... 14-8
- 
- S**
- S! Addressbook Back-up** ..... 2-25
  - Auto Synchronize ..... 14-12
  - Check Settings ..... 14-12
  - Check Synchronize Log ..... 2-26
  - Delete Synchronize Log ..... 2-32
  - Synchronization Type ..... 2-25
  - Use ..... 2-25
  - S! Appli** ..... 9-8
  - Activate ..... 9-8
  - Delete ..... 9-12
  - Download ..... 9-8
  - Settings ..... 14-25
  - S! GPS Navi** ..... 11-5
  - Add to Phonebook ..... 11-26
  - Current Location ..... 11-5
  - Location Logs ..... 11-26
  - Navi Appli ..... 11-5
  - Settings ..... 14-31
  - S! Info Channel** ..... 10-5
  - Check Latest Information ..... 10-5
  - Get Latest Contents ..... 10-8
  - Save File ..... 10-8
  - Settings ..... 14-28
  - Subscribe for Service ..... 10-5
  - Weather Indicators ..... 10-5
  - S! Information Notif.** ..... 14-28
  - S! Quick News** ..... 10-4
  - Check Updated Information ..... 10-4
  - Delete Registered News ..... 10-8
  - Manually Update ..... 10-8
  - Register News ..... 10-4
  - Settings ..... 14-27
  - Save**
  - Blog/Mail Member ..... 5-8
  - Bluetooth® ..... 13-6
  - Bookmarks ..... 6-10
  - Events ..... 11-9
  - Holidays ..... 11-10



Own Dictionary .....	2-15	<b>Search</b>		<b>Set Max Cost Limit .....</b>	<b>14-14</b>
Phone Book Entries .....	2-20	Messages in a Folder .....	5-28	<b>Set Mute Seconds .....</b>	<b>4-6</b>
S! Quick News .....	10-4	Phone Book .....	2-21	<b>Set Quick Yahoo! Mail .....</b>	<b>5-5</b>
Saved Pages .....	6-10	Songs .....	9-11	<b>Set Ringtone .....</b>	<b>14-8</b>
Tasks .....	11-12	<b>Secret Data</b>		From Data Folder .....	12-16
Templates .....	2-15	Phone Book Entries .....	2-24	<b>Set Sub Clock .....</b>	<b>14-2</b>
Text Memos .....	11-14	schedule .....	11-10	<b>Setting When Folded .....</b>	<b>14-13</b>
Tomo-Den .....	3-12	<b>Secret Data Only Mode .....</b>	<b>4-7</b>	<b>Shoot Framed Images .....</b>	<b>7-11</b>
TV Links .....	8-14	<b>Secret Folders .....</b>	<b>4-7</b>	<b>Shooting</b>	
<b>Saved Pages .....</b>	<b>6-10</b>	<b>Secret Mode .....</b>	<b>4-7</b>	Auto Timer .....	7-11
Delete .....	6-16	<b>Secure Remote Lock .....</b>	<b>4-5</b>	Blog Upload .....	7-14
Number of Pages .....	6-16	<b>Security Code .....</b>	<b>1-20</b>	Chance Capture .....	7-12
Open .....	6-10	<b>Select Image (Video Call) .....</b>	<b>14-14</b>	Continuous Shooting .....	7-10
Protect .....	6-16	<b>Select Microphone .....</b>	<b>14-11</b>	Frame .....	7-11
Save .....	6-10	<b>Select Network .....</b>	<b>14-15</b>	Panoramic Shooting .....	7-11
<b>Schedule (Events) .....</b>	<b>11-9</b>	<b>Send Location Info .....</b>	<b>14-31</b>	Smile Mode .....	7-10
Add Holidays .....	11-10	<b>Send Messages .....</b>	<b>5-6</b>	Speed Movie .....	7-12
Check .....	11-10	Request Delivery Report .....	5-21	Still Images .....	7-6
Copy .....	11-27	<b>Send Referrer .....</b>	<b>14-20</b>	Videos .....	7-8
Delete .....	11-11, 11-27	<b>Send/Recv. Settings .....</b>	<b>14-17</b>	<b>Shortcut-key Setting .....</b>	<b>14-29</b>
Edit .....	11-27	<b>Server Mail .....</b>	<b>5-11</b>	<b>Shutter Sound .....</b>	<b>14-24</b>
Icon Display .....	11-27	Delete .....	5-24	<b>Side Key Guard .....</b>	<b>1-23</b>
Number of Schedules .....	11-27	Forward .....	5-24	<b>Simple Menu .....</b>	<b>2-27</b>
Reset Holiday .....	11-27	Mail List .....	5-11, 5-24	<b>Smile Level .....</b>	<b>14-24</b>
Save .....	11-9	<b>Set Hold Tone .....</b>	<b>14-13</b>	<b>Smile Mode .....</b>	<b>7-10</b>
Save a Text Memo to Schedule .....	11-28	<b>Set Image Disp.</b>		<b>SMS</b>	
Windows .....	11-9	(S! Quick News) .....	14-27	Receive .....	5-10
<b>Screen Effect .....</b>	<b>14-5</b>	<b>Set Image Disp. (Video Player) ...</b>	<b>14-25</b>	Send .....	5-7
<b>Script Settings .....</b>	<b>14-20</b>	<b>Set Main Time .....</b>	<b>14-2</b>	SMS Center Selection .....	14-19
<b>Scroll (Internet) .....</b>	<b>14-20</b>			SMS Settings .....	14-16
<b>Scroll (Mail) .....</b>	<b>14-19</b>				





SMTP Settings .....	5-4	Speed Movie .....	7-12	Copy .....	2-14
Software Update .....	15-4	Standby Disp. Set. (Mobile Widget) .....	14-27	Correction .....	2-14
<b>Songs</b>		Standby Setting (Weather Indicators) .....	14-28	Cut .....	2-14
BGM playback .....	9-10	Standby Settings (S! Quick News) .....	14-27	Dakuten (゛) & Handakuten (゜) .....	2-14
Bluetooth® .....	13-7	Start Attachment (auto) .....	14-19	Deletion .....	2-14
Download .....	9-4	Stereo Earphone Conversion		Emoticons .....	2-14
Effect .....	9-10	Cable .....	1-21	Key Assignments .....	15-11
Equalizer .....	9-10	Storage Location (Camera) .....	14-24	Kuten Code List .....	15-14
Memory Info .....	9-11	Streaming Music and Video .....	6-8	Kuten Codes .....	2-29
Play .....	9-5	Style Mode Settings .....	14-3	Line Feed .....	2-28
Playlist .....	9-6	Sub-address Setting .....	14-12	Lower Case .....	2-14
Repeat Setting .....	9-10	Subtitles .....	14-22	Lower Case & Upper Case .....	2-28
Resume Play .....	9-10			Overwrite & Insert Modes .....	2-28
Search .....	9-11			Paste .....	2-14
Set as Ringtone .....	9-11			Pictographs .....	2-14
Sort .....	9-11			Quote Data .....	2-29
Streaming Music and Video .....	6-8			Settings .....	14-29
Transfer From PC .....	9-4			Single-byte & Double-byte .....	2-28
<b>Sort (Change Order)</b>				Space .....	2-28
Booked Programs .....	8-16			Split Windows .....	2-12
Desktop Icons .....	2-27			Symbols .....	2-14
Files .....	12-16			T9 Input Mode .....	2-16
Folders (Bookmark) .....	6-15			Text Entry Window .....	2-11
Folders (Mail) .....	5-26			Text Input Methods .....	2-12
Messages .....	5-28			Use Dictionary .....	2-28
Original Menu Items .....	14-7			Word Prediction .....	2-12
Playlist Songs .....	9-11			<b>Text Memo</b> .....	11-14
Songs .....	9-11			Check Information .....	11-28
Tasks .....	11-28			Delete .....	11-14, 11-28
<b>Sound/Vib Settings</b> .....	14-25			Save .....	11-14
<b>Specifications</b> .....	15-42			Save from Scanned Data .....	11-30

## T

<b>T9 Change Mode</b> .....	14-29
<b>T9 Input Mode</b> .....	2-16
<b>Templates (Common Phrases)</b>	
Delete .....	2-29
Edit .....	2-15, 2-29
Insert .....	2-14
<b>Text Entry</b> .....	2-11
2-touch Mode .....	2-16
5-touch Mode .....	2-12
Alphanumerics, Numbers & Katakana ...	2-14
Character Entry Modes .....	2-12
Common Phrases (Templates) .....	2-14



Sort .....	11-28
<b>Text Reader</b> .....	<b>11-23</b>
Check Scanned Text .....	11-24
Delete Scanned Data .....	11-30
Edit Scanned Text .....	11-29
NEGA/POSI Mode .....	11-29
Scan .....	11-24
Scan Modes .....	11-23
Scan Window .....	11-23
<b>Time Shift Playback</b> .....	<b>8-7</b>
Time Shift Setup .....	14-23
<b>Time-out to Search</b> .....	<b>14-31</b>
<b>To Do List (Tasks)</b> .....	<b>11-12</b>
Change Order .....	11-28
Check .....	11-12
Delete .....	11-13, 11-28
Save .....	11-12
Set Status .....	11-28
<b>Tomo-Den</b> .....	<b>3-12</b>
Cancel Entries .....	3-19
Dial .....	3-12
Save Entries .....	3-12
Send S! Mail .....	3-12
<b>Tomomato-Mail</b> .....	<b>5-16</b>
<b>Trim away (Still Image)</b> .....	<b>12-10</b>
<b>Troubleshooting</b> .....	<b>15-6</b>
<b>TV</b> .....	<b>8-2</b>
Brightness .....	8-13
Channel Settings .....	8-3
Data Broadcasts .....	8-7

Main/Sub Sound .....	8-13
Program Guide .....	8-8
Program Info .....	8-13
Record .....	8-9
Record Timer .....	8-11
Settings .....	14-22
Sound Switch .....	8-13
Time Shift Playback .....	8-7
View Timer .....	8-11
Watch .....	8-6
Windows .....	8-4
<b>TV Effect</b> .....	<b>14-22</b>
<b>TV Link</b> .....	<b>8-14</b>
Delete .....	8-14
Number of TV Links .....	8-14
Save .....	8-14
Show Details .....	8-14
<b>TV Power Saving</b> .....	<b>14-22</b>
<b>TV Sound While Closed</b> .....	<b>14-22</b>

## U

<b>Update</b> .....	<b>8-13</b>
Data Broadcast .....	8-13
Life History Viewer .....	11-27
S! Quick News List .....	10-8
Server Mail List .....	5-11, 5-24
Web Page .....	6-13
<b>USB Mode Setting</b> .....	<b>13-9</b>
<b>USIM Card</b> .....	<b>1-10</b>
Copy Phone Book Entries .....	2-24, 2-31

Copy SMS Messages .....	5-26
Delete Phone Book Entries .....	2-32
Delete SMS Messages .....	5-26
Insertion & Removal .....	1-12
PINs .....	1-11

## V

<b>Vibrator</b> .....	<b>14-9</b>
<b>Video Call</b> .....	<b>3-7</b>
Brightness .....	3-17
Color Mode Set .....	3-18
Display Light .....	3-18
Hyper Clear Voice .....	3-17
Settings .....	14-14
Visual Prefer. ....	3-17
White Balance .....	3-17
Windows .....	3-7
<b>Videos</b> .....	<b>12-7</b>
Playlist .....	12-7
Streaming Video .....	6-8
<b>View Timer</b> .....	<b>8-11</b>
<b>Viewer Settings</b> .....	<b>14-5</b>
<b>Voice Announce</b> .....	<b>14-11</b>
<b>Voice Call</b> .....	<b>3-3</b>
Hyper Clear Voice .....	3-17
Send Touch Tones .....	3-17
<b>Voice Mail</b> .....	<b>3-14</b>
Missed Call Notification .....	3-15
Play Messages .....	3-15
<b>Voice Memo</b> .....	<b>3-4, 11-15</b>



Auto Voice Memo .....	14-13
Play/Delete Messages .....	3-5, 3-18
Record the Other Party's Voice .....	3-4
Record Your Voice .....	11-15

**W**

<b>Wallpaper (Stand-by Display) .....</b>	<b>14-3</b>
Image in Data Folder .....	12-16
Recorded Video .....	7-15
Shot Still Image .....	7-15
Video in Data Folder .....	12-16
<b>Warning Messages .....</b>	<b>14-21</b>
<b>Warranty .....</b>	<b>15-60</b>
<b>Weather Indicators .....</b>	<b>10-5</b>
Indicator List .....	15-20
Manual Update .....	10-9
Settings .....	14-28
Subscribe for Service .....	10-5
<b>Weather Notif. ....</b>	<b>14-28</b>
<b>Weather Update .....</b>	<b>14-28</b>
<b>Wi-Fi .....</b>	<b>13-11</b>
Access Point Settings .....	13-13
Display Information .....	13-15
Easy Connecting (AOSS) .....	13-12
Easy Connecting (WPS) .....	13-13
Manual Setup .....	13-13
Search & Connect to Priority Connections .....	13-14
Search Access Points .....	13-13
<b>Wi-Fi (ON/OFF) .....</b>	<b>13-11</b>

<b>Wi-Fi Setting .....</b>	<b>14-32</b>
<b>Wi-Fi/3G Change Setting .....</b>	<b>14-32</b>
<b>Word Prediction .....</b>	<b>2-12, 14-29</b>
<b>Write Personal Information .....</b>	<b>14-25</b>
<b>Write/Del User Data .....</b>	<b>14-25</b>

**Y**

<b>Yahoo! Keitai .....</b>	<b>6-3</b>
Switch to PC .....	6-12



# Warranty & After Sales Service

## Warranty

A warranty card is included with 940N.

- Check that the store name and purchase date sections have been filled correctly.
- Read the card carefully and store it in a safe place.
- See the card for the warranty period.

## After Sales Service

Refer to “Troubleshooting” (P. 15-6) before submitting your handset for repair.

If problems still persist, contact SoftBank Mobile Customer Center, Customer Assistance of your area (P. 15-61), or consult with your nearest SoftBank shop.

Provide us with detailed information of your problems.

- Repair within the warranty period is carried out in accordance with the conditions of the warranty.
- Repair after the warranty period is carried out if possible, and the owner of handset is responsible for any repair costs.

## Note

- SoftBank assumes no responsibility for any damages incurred by you or third parties for failed calls, etc. due to failure or malfunction of this product.
- Data and settings you saved may be lost or altered as a result of failure or repair of handset. It is recommended that you keep a backup copy of important data (e.g. Phone Book entries, image and sound files). SoftBank assumes no responsibility for any damages due to the loss or alteration of handset data.
- Disassembling or modifying handset may constitute a violation of Radio Law. Your handset will not be accepted for repairs if it has been modified.

## Tip

- For information on after sales service, contact your nearest SoftBank shop or SoftBank Mobile Customer Center, General Information (P. 15-61).



If you have any questions about SoftBank handsets or services, call General Information.  
For repairs, call Customer Assistance.

### SoftBank Mobile Customer Center

From a SoftBank handset, dial toll free at 157 for General Information or 113 for Customer Assistance.

### SoftBank Mobile Global Call Center

From outside Japan, dial +81-3-5351-3491 (Make sure to dial the correct number. International charges will apply.)

## ■ Call These Numbers Toll Free from Landlines

Subscription Area	Contact	
Hokkaido, Aomori, Akita, Iwate, Yamagata, Miyagi, Fukushima, Niigata, Tokyo, Kanagawa, Chiba, Saitama, Ibaraki, Tochigi, Gunma, Yamanashi, Nagano, Toyama, Ishikawa, Fukui	General Information	0088-240-157
	Customer Assistance	0088-240-113
Aichi, Gifu, Mie, Shizuoka	General Information	0088-241-157
	Customer Assistance	0088-241-113
Osaka, Hyogo, Kyoto, Nara, Shiga, Wakayama	General Information	0088-242-157
	Customer Assistance	0088-242-113
Hiroshima, Okayama, Yamaguchi, Tottori, Shimane, Tokushima, Kagawa, Ehime, Kochi, Fukuoka, Saga, Nagasaki, Oita, Kumamoto, Miyazaki, Kagoshima, Okinawa	General Information	0088-250-157
	Customer Assistance	0088-250-113