

Handy Extras



Useful Handset Applications	10-2	Stopwatch	10-10
Alarms	10-3	Countdown Timer	10-10
Setting/Resetting Alarms	10-3	Good Night Timer	10-11
Editing Alarm	10-3	Calculator	10-11
Calendar	10-4	Converter	10-12
Viewing Calendar	10-4	Converting Currencies	10-12
Opening Calendar	10-5	Converting Units	10-12
Saving Schedule	10-5	Notepad	10-13
Viewing Schedule	10-5	Adding Notepad	10-13
Tasks	10-5	Viewing Notepad	10-13
Saving Tasks	10-5	Voice Recorder	10-13
Viewing Tasks	10-5	Voice Recorder Window	10-13
Marking a Task as Completed	10-6	Recording Sound	10-13
Osaifu-Keitai®	10-6	Playing Sound	10-14
Activating Lifestyle-Appli	10-6	Barcode Reader	10-14
Downloading Lifestyle-Appli	10-6	Scan Barcodes/QR Code	10-14
Using Osaifu-Keitai®	10-7	Using Barcode Files	10-15
IC Card Lock	10-7	Creating QR Code	10-15
Message Remote Lock	10-7	Checking Scanned Barcode	10-15
Call Remote Lock	10-7	File Viewer	10-16
S! GPS Navi	10-8	Using File Viewer	10-16
Using S! GPS Navi	10-8	Dictionary	10-17
Checking Your Current Position	10-9	Dummy Call	10-17
Using Location Navi	10-9	Setting Dummy Call	10-17
Expense Manager	10-9	Activating Dummy Call	10-18
Activate Expense Manager	10-9		
Save Expense Information	10-9		
Viewing Expense Information	10-10		
World Clock	10-10		
Viewing World Clock	10-10		
Selecting Areas	10-10		
		Advanced Settings	10-18
		Alarm	10-18
		Calendar	10-18
		Tasks	10-21
		Osaifu-Keitai®	10-22
		S! GPS Navi	10-22
		Expense Manager	10-23
		World Clock	10-24
		Stopwatch	10-24
		Countdown Timer	10-24
		Good Night Timer	10-24
		Calculator	10-24
		Currency/Unit Conversion	10-24
		Notepad	10-25
		Voice Recorder	10-25
		Barcode Reader	10-26
		File Viewer	10-27
		Dictionary	10-28

Useful Handset Applications

Handset includes helpful lifestyle tools including Alarm/Calendar and Convenient tools including Calculator/Barcode Reader.

Alarm



Set Alarms
(☞P.10-3).

Calendar



See calendar and save
schedule entries
(☞P.10-4).

Tasks



Create/view to-do lists
(☞P.10-5).

Osaifu-Keitai®



Shop with e-money
(☞P.10-6).

S! GPS Navi



View map and
information of
surroundings
(☞P.10-8).

Expense Manager



Create an account book
(☞P.10-9).

World Clock



See current time in
major world cities
(☞P.10-10).

Stopwatch



You can use
stopwatch
(☞P.10-10).

Countdown Timer



Set Alarm to sound
after specified length
of time
(☞P.10-10).

Good Night Timer



Disable sound and
Vibration for specified
time periods
(☞P.10-11).

Calculator



Use handset as a
calculator
(☞P.10-11).

Converter



Convert currencies or
units of measure
(☞P.10-12).

Notepad



Create/view text
memos
(☞P.10-13).

Voice Recorder



Record/playback voice
memos, etc.
(☞P.10-13).

Barcode Reader



Scan barcodes or QR
Codes; create QR Codes
on handset
(☞P.10-14).

File Viewer



View documents
(☞P.10-16).

Dictionary



Find English expressions
for Japanese words or
vice versa
(☞P.10-28).

Dummy Call



Fake calls to handset
(☞P.10-17).

Alarms

Save up to five Alarms. Use Alarm activation to activate or cancel Alarm settings. Set Alarms to repeat on specific days of the week or everyday.

Setting/Resetting Alarms

Example: Setting Alarm time

- For other items, see "Editing Alarm" (☞P.10-3).

Setting

1 Tap Menu → *Tools* → *Alarm*

2 Tap Time field to set → Enter Alarm time

3 Tap Save

- Set or edit Alarm and tap Save, Alarm is set to *On* automatically.

- At Alarm time, tone sounds and indicator appears. Handset vibrates if Vibration is not *Off*. When Snooze is *Off*, tap *OK* to stop Alarm and Vibration.

- If calling, dialing (*Connecting...* appears), or dialing (*Dialling...* appears) at Alarm time, a tone sounds and an indicator appears. If *Call connect tone* in *System sounds* is unchecked, only indicator appears during a call or connection. Tap *OK* to clear indicator, when Snooze is Off.

- When Snooze is set to something other than *Off*, Alarm sounds at the specified interval and specified number of times until Snooze is canceled. When you tap *Snooze* while Alarm sounds, Alarm is set to sound again at the specified interval. Tap *End* → *End* to stop Alarm and to clear indicator.

- When Alarm is set, 📵 appears in Standby.

- If multiple Alarms are set for the same time, the first one set sounds first. If Schedule or Tasks Alarm is set for the same time as Alarm (*Tools*), Alarm sounds first.

- When Manner mode is active, setting in *Manner mode setting* (☞P.10-20) applies.

- If Camera or Voice Recorder is active at Alarm Time, Alarm sounds upon operation termination.

Resetting Alarm

1 Tap Menu → *Tools* → *Alarm*
→ Tap Reset → Check an Alarm → Tap Reset → *Yes*

Editing Alarm

1 Tap Menu → *Tools* → *Alarm*
→ Tap Time field → Enter Alarm time

■ To Edit Alarm Name

Tap Alarm name field → Enter Alarm name → Tap Save

■ To Set Alarm to Repeat

In Repeat, tap a day to activate the Alarm → Tap Save

- If you set Alarm only for a specific day, Alarm will activate only once.
- If you set Alarm for every day, Alarm will activate daily.

■ To Activate/Cancel Alarm for Holidays

Under *Except holidays*, *On* or *Off* → Tap Save

■ To Set Alarm Sound or Video

Alert tone/video → Select a file to save → Select file → Tap Save

- Tap  to play file.

■ To Adjust Alarm Volume

In Volume field, adjust volume → Tap Save

■ To Set Vibration

Vibration → Select an item → Tap Save

- Tap  to view a pattern.

To Set Snooze

Snooze → Select an item → Tap Save

• When Snooze is set to something other than **Off**, Alarm sounds at the specified interval and specified number of times until **Snooze** is canceled. When you tap Snooze while Alarm sounds, Alarm is set to sound again at the specified interval. When you tap **End** → **End**, the Alarm stops and the indicator disappears.

• For **Other**, enter duration.

To Set Snooze Repeat Time(s)

Snooze repeat times → Select an item → Tap Save

To Set Alarm Duration Time

Duration → Select an item → Tap Save

• For **Other**, enter duration.

• If a Memory Card file is set as Alarm sound, copy to handset confirmation appears. For a copy protected file, move to handset confirmation appears. Choose **Yes** to complete setting.

Calendar

To view Calendar, add schedule in Calendar. Select from three view modes.

Add **Title**, **Start date** or other information.

Save up to 500 events including Tasks.

Viewing Calendar

Select from three view modes; Monthly view, Weekly view and Daily view.

- Tap Switch view to change view mode.
- If you select a date with Calendar entries, the entries appear.

Date in orange rectangle*: Highlighted position


Background with orange*: Today

Blue Character: Saturday

Red Character: Holiday/Sunday

☐ (orange)*: Schedule registered

*When **Color theme** is **red**, color will be red.

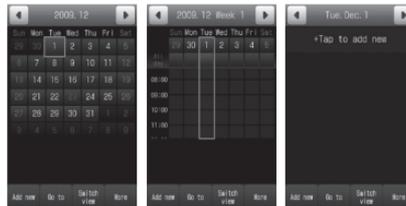

Monthly View

Weekly View

Daily View

• To change Monthly/Weekly/Daily view window for previous/next month, tap ◀ / ▶ or scroll Year/Month/Day field.

• If you select a date with Calendar entries or Alarms set, the titles of Calendar entries, icons and other items appear.

- 📍 : Schedule (No category)
- 📅 : Schedule (Appointment)
- 🗓️ : Schedule (Meeting)
- 💼 : Schedule (Business)
- 😊 : Schedule (Personal)
- 🎉 : Schedule (Holiday)
- 🎂 : Schedule (Anniversary)
- 🍰 : Schedule (Birthday)
- 📞 : Schedule (Phone call)
- 📅 : Schedule (Date)
- 🚗 : Schedule (Travel)
- 👛 : Schedule (Shopping)
- 📁 : Schedule (Miscellaneous)
- 🔔 : Alarm set
- 🔄 : Repetition set

Opening Calendar

1 Tap Menu → *Tools* → *Calendar*

Saving Schedule

Save up to 500 events including Tasks.

Example: Saving title, start date & time, end date & time.

- For other items, see "Saving to Schedule" (☞P.10-18).

1 Tap Menu → *Tools* → *Calendar*

2 Tap Add new

3 Enter title

4 *Start date* → Enter start date → *Start time* → Enter start time

5 *End date* → Enter end date → *End time* → Enter end time

6 Tap OK → Tap Save

- In Calendar, select target date before 2 to enter the date in Start date or End date field.

Viewing Schedule

1 Tap Menu → *Tools* → *Calendar*

2 Select the day to view

3 Select a schedule

- To view the registered number of Calendar and Task in Calendar, tap More → *Memory status*.

Advanced

 **Advanced Settings** (☞P.10-18)

- Saving to Schedule
- Editing Schedule
- Opening a Specific Date
- Switching View Mode
- Viewing All Events
- Viewing Schedule by Category
- Sending Schedule
- Deleting Schedule
- Deleting Added Holiday
- Viewing Secret Schedule
- Checking Missed Alarm Event
- Viewing Calendar Memory Status
- Saving Schedule as vFile
- Printing Schedule via Bluetooth®

Tasks

Save up to 500 Tasks and Schedule entries; manage with list.

Saving Tasks

Example: Saving title, due date & time

- For other items, see "Saving Task" (☞P.10-21).

1 Tap Menu → *Tools* → *Tasks*

2 Tap Add new

3 Enter a title

4 *Due date* → Enter date → *Due time* → Enter time → Tap OK

5 Tap Save

Viewing Tasks

1 Tap Menu → *Tools* → *Tasks*

- In Tasks, tap tab to toggle  (All tasks),  (Completed tasks),  (Uncompleted tasks), and  (Expired tasks).

Marking a Task as Completed

- 1 Tap **Menu** → *Tools* → *Tasks*
- 2 Tap  to complete



- Tap  to toggle  (Completed tasks) and  (Uncompleted tasks),  (Completed tasks) and  (Expired tasks) if expired.

Advanced

 **Advanced Settings**  P.10-21

- Saving Task
- Sending Tasks as vFile
- Deleting Tasks
- Searching Tasks
- Viewing Secret Tasks
- Viewing Missed Alarm Event
- Printing Tasks via Bluetooth®
- Viewing Task Item Status
- Editing Tasks
- Saving Tasks as vFile

Osaifu-Keitai®

Place handset on compatible reader/writer to pay for goods and transport with e-money.

- Handset is embedded with an IC card for use with Osaifu-Keitai® that stores various service and usage information.

Activating Lifestyle-Appli

To use e-money, download a Lifestyle-Appli compatible with Osaifu-Keitai® service, and set up an account.

- 1 Tap **Menu** → *Tools* → *Osaifu-Keitai*
- 2 *Lifestyle-Appli*
- 3 **Select Lifestyle-Appli**

- Follow onscreen instructions.

Note

- Procedures for deleting data in IC Card vary depending on Lifestyle-Appli used. For details, contact Osaifu-Keitai® service provider.
- SoftBank Mobile is not liable for accidental loss/alteration of any data on IC Card from malfunction or repairs.
- If handset is lost or stolen, IC Card may be used by others. SoftBank Mobile is not liable for charges incurred by another party.

Downloading Lifestyle-Appli

- 1 Tap **Menu** → *Tools* → *Osaifu-Keitai*
- 2 *Lifestyle-Appli*
- 3 *Download Lifestyle-Appli*
- 4 **Select Lifestyle-Appli**

- Lifestyle-Appli is saved in *Lifestyle-Appli* folder under Data Folder.

Note

- Downloading and using Lifestyle-Appli may incur high Packet Communication charges.
- Write down service passwords/contact details for customer service, etc.

Using Osaifu-Keitai®

Use Osaifu-Keitai® without activating Lifestyle-Appli.

1 Place back of handset on reader/writer

- Place handset parallel to reader/writer. If it does not scan, try moving handset around.
- Confirm successful scan completion on reader/writer display.
- Use Osaifu-Keitai® during a call or transmission; transaction may require more time than usual.

Note

- Placing objects (e.g., metal jewelry) between handset and reader/writer may inhibit scanning.
- Osaifu-Keitai® is available even when handset is off, but Lifestyle-Appli is not activated. However, if battery is left uncharged after out of battery alarm sounds, Osaifu-Keitai® may not be usable. Charge battery before usage.
- When handset is held up to reader/writer, handset may show a message or vibrate depending on service used. S! Appli, Messaging or Internet may also activate automatically. This behavior can be disabled via settings (☎P.10-22).

IC Card Lock

1 Tap Menu → Tools → Osaifu-Keitai → IC card settings → Under IC card lock, On → Enter Phone Password → Tap OK → Yes

- In Standby,  appears.
- Tap *Off* under *IC Card Lock* to unlock.

Message Remote Lock

Registering Message Remote Lock

1 Tap Menu → Tools → Osaifu-Keitai → IC card settings → Remote lock

2 Enter Phone Password → Tap OK → Under Message, On

3 Remote lock password → Set Password

4 Lock notice → To sender/ Specific address/Not send notice

- If you select *Specific address*, set address:
 - *From phonebook* → Search and select an entry (☎P.2-18) → Select mail address
 - *Direct input* → Enter mail address

Using Message Remote Lock

1 Send message with only Remote lock password in Subject field

- Unavailable if handset cannot receive messages.
- After handset receives message, IC Card is unlocked and message is sent to specified address.

Call Remote Lock

Registering Call Remote Lock

1 Tap Menu → Tools → Osaifu-Keitai → IC card settings → Remote lock

2 Enter Phone Password → Tap OK → Under Call, On

3 Remote lock number1/Remote lock number2

■ **To Register from Phone Book**
From phonebook → Search and select entry

■ **To Enter Phone Number**
Direct input → Enter phone number

■ **To Register Public Phone**
Public phone

4 Missed call count → Enter missed call count

Using Call Remote Lock

- 1 Place a call from one of the specified numbers with Send Caller ID
- 2 Hang up after receiving call
- 3 Repeat 1-2, within three minutes, until specified number of incoming calls is reached

- After specified number of incoming calls, IC Card Lock is set and a message informs you IC Card Lock is activated.

Note

- When setting IC Card Lock, call handset from the same specified phone number. Incoming calls from different phone numbers cannot be counted.
- Calls may not be counted when Call Forwarding is active.

Advanced

Advanced Settings (P.10-22)

- Viewing IC Card Details
- Viewing Balance Info
- Deleting from Balance Info List
- Restricting Functions from Activating Automatically
- Restoring to Default Settings

Settings

- Set Security to Lifestyle-Appli (P.14-21)

S! GPS Navi

S! GPS Navi provides location information by communicating with base stations and by GPS satellite.

Note

- Location information may not be retrievable or may be inaccurate depending on location or signal conditions.
- SoftBank Mobile is not liable for any trouble caused by information provided.
- S! GPS Navi incurs Packet Communication charges. For more information, visit SoftBank Mobile Website (<http://www.softbank.jp>).

Using S! GPS Navi

Activate Navi appli to check your surroundings and plan the shortest route to your destination.

- 1 Tap Menu → *Tools* → *S! GPS Navi* → *Navi appli*

- If confirmation appears, choose *Yes*.
- Tap *Never show this* to disable confirmation message.
- Navi appli activates after location information is retrieved.

Checking Your Current Position

1 Tap Menu → Tools → S! GPS Navi → Current location

- If confirmation appears, choose *Yes*.
- Tap *Never show this* to disable confirmation message.
- Handset connects to Network and web page appears for map.

There are three levels of accuracy for location information.

- Level 3 (📶📶📶): Fairly accurate
- Level 2 (📶📶): Relatively accurate
- Level 1 (📶): Accurate location information could not be retrieved

If Positioning Accuracy Level is 1 or 2, confirmation appears. Tap *Re-positioning/Skip*.

Using Location Navi

Search for current location of saved users or for the approximate location of a lost handset. Search can also be performed with a computer.

For details, see SoftBank Mobile Website (<http://www.softbank.jp>).

* A separate subscription is required for this service.

1 Tap Menu → Tools → S! GPS Navi → Location Navi

- Handset connects to Internet.

2 Follow onscreen instructions

Advanced

Advanced Settings (☞ P.10-22)

- Sending Current Location via Message
- Saving My Location
- Deleting Bookmarked Location

Settings

- Select Navi Appli to Activate (☞ P.14-21)
- Register URL to View Map (☞ P.14-21)
- Activate Positioning Lock (☞ P.14-21)
- Hide Confirmation When Sending Location Information (☞ P.14-21)
- Hide Information When Providing Location Information Automatically (☞ P.14-21)

Expense Manager

Save expense information to calendar and create a simple account book for each month.

Activate Expense Manager

1 Tap Menu → Tools → Expense manager

- Tap ◀ / ▶ to view previous or next month.

Save Expense Information

1 Tap Menu → Tools → Expense manager

2 Tap Add new → Tap Enter expense field → Enter amount

- Tap  to enter calculation result.

3 Tap expense category → Select category

4 Tap Input details field → Enter details → Tap Save

Viewing Expense Information

1 Tap Menu → *Tools* → *Expense manager*

■ To View Total Expenses for a Day

Select day to view expense → See Daily total

■ To View Total Expenses for a Month

Select month to view expense → See Monthly total

■ To View Breakdown of Expenses for a Month

Select month to view expense → Tap Monthly expense → See numbers in list

Advanced

 **Advanced Settings** ⓘ P.10-23

- Deleting an Expense Record

World Clock

See current time in world's major cities.

Viewing World Clock

1 Tap Menu → *Tools* → *World clock*

Selecting Areas

Save second time zone to show time in World clock. Save up to 20 areas.

1 Tap Menu → *Tools* → *World clock*

2 Tap Add new → Scroll map and tap a city to register

- To set/cancel summer time setting, tap  or .

3 Tap Add new

Advanced

 **Advanced Settings** ⓘ P.10-24

- Deleting World Clock

Stopwatch

Use handset as a stopwatch. Save up to ten lap times and total time.

1 Tap Menu → *Tools* → *Stopwatch*

2 *Start*

3 *Stop*

- While Stopwatch is running, tap *Lap* to mark a lap.
- Tap *Restart* to start Stopwatch again.
- Tap *Reset* to clear all times.

Countdown Timer

Count up to 60 minutes.

1 Tap Menu → *Tools* → *Countdown timer*

2 Tap Edit → Enter count time

3 *Start*

- Tap *Restart* to restart countdown.
- Tap *Reset* to reset Countdown timer.

Advanced

 **Advanced Settings** ⓘ P.10-24

- Changing Alarm

Good Night Timer

Disable Alarm/Vibration/Light for a specific period of time.

- When Good night timer is **On**, Alarm/Vibration/Light is set to **Off**, and volume level is set to 0 for functions that use sound.
- Even when Good night timer is **On**, other functions such as Voice Call etc. are available.

1 Tap Menu → *Tools* → *Good night timer*

2 Tap Time field of Timer

3 Tap Start time field → Enter start time

- Check **Activate now** to start timer after Good night timer is set.

4 Tap End time field → Enter end time → Tap OK

5 In Repeat field, select day to activate Good night timer

- To set Alarm once only, do not set day.
- If **Activate now** is selected in ③, setting in Repeat will be canceled.

6 Alarm activation → *On* to activate Alarm with Alarm tone

7 Tap Save

- Good night timer will be **On** automatically.

Note

- Deactivate other functions before Good night timer activates. If any other function is activated, Good night timer cannot be activated.

Advanced

 **Advanced Settings**  P.10-24

- Resetting Good Night Timer

Calculator

Perform four arithmetic operations up to 15 digits.

1 Tap Menu → *Tools* → *Convenient* → *Calculator*

2 Enter numbers and operators

- To move cursor, tap area to place cursor.
- To erase a symbol in a mathematical expression, place cursor after symbol → tap .
- To erase mathematical expression and result all at once, tap .
- Tap  to input complex expressions like pi, trigonometric functions, or roots. To return to Number input window, tap .

Converter

Convert various currencies or units of measure.

Converting Currencies

- 1 Tap Menu → *Tools* → *Convenient* → *Converter* → *Currency*
- 2 Tap Original currency field → Select currency



- 3 Tap Original currency value field → Enter value

- Tap to enter calculation result.



- 4 See result in Converted currency value field

- Tap Reset to reset convert.

Converting Units

- 1 Tap Menu → *Tools* → *Convenient* → *Converter* → *Length, Weight, Volume, Area, or Temperature*
- 2 Tap Original unit field → Select unit
- 3 Tap Original unit value field → Enter value
 - Tap to enter calculation result.
- 4 See result in Converted value field
 - Tap Reset to reset convert.

Advanced

Advanced Settings (P.10-24)

- Viewing Exchange Rate
- Adding Currency Unit
- Deleting Added Currency Unit

Notepad

Add up to 100 memos. Add memos even while placing calls (P.3-24).

Adding Notepad

- 1 Tap Menu → *Tools* → *Convenient* → *Notepad*
- 2 Tap Add new → Enter text
- 3 Select category field → Select category
- 4 Tap Save

Viewing Notepad

- 1 Tap Menu → *Tools* → *Convenient* → *Notepad* → Select the target

Advanced

Advanced Settings (P.10-25)


- Sending Notepad
- Deleting Notepad
- Viewing Notepad Memory Status

Voice Recorder

Record up to 60 minutes; activate from Tools, or via Menu in Data Folder, or during a call, Message creation window.

Voice Recorder Window

Use Softkeys and Multi Selector operations to control Voice Recorder.

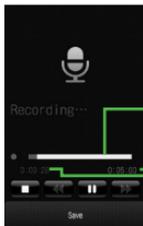

Recording Window



Playback Window

- 1 Status bar
- 2 Recordable time (while recording)/ Playback time (while playing)
- 3 Elapsed time
- 4 Adjust volume
- 5 Playback navigation

Recording Sound

Recorded sound is saved to Ring songs · tones in Data Folder.

- 1 Tap Menu → *Tools* → *Convenient* → *Voice recorder*

- 2 Tap

- 3 Tap or Save

- When recordable time has elapsed, recording automatically ends.
- Tap to pause recording. Tap to resume recording.

- To quickly confirm recorded content, tap Tap again to pause playback.
- To start the next recording, tap Record.

 
Playing Sound

Play sound file saved in Data Folder.

- 1 Tap Menu → *Tools* → *Convenient* → *Voice recorder*
- 2 Tap Data Folder
- 3 Select a sound file

- Tap  to adjust playback volume level.
- Tap  /  or scroll Status bar to rewind/fast forward.

Advanced

 **Advanced Settings**  P.10-25

- Setting Recorded Sound File as Ringtone, etc.
- Moving Recorded Sound File
- Copying Recorded Sound File
- Sending Recorded Sound File
- Deleting Recorded Sound File
- Editing Recorded Sound File Name
- Protecting Recorded Sound File
- Viewing Recorded Sound File Details

Barcode Reader

Use Camera to scan printed barcodes, QR Code or barcode images acquired from websites, etc.

Scan Barcodes/QR Code

Barcode reader automatically identifies and scans Barcodes (JAN code) and QR Codes. Use scan results for handset operations such as calling.



QR code

- 1 Tap Menu → *Tools* → *Convenient* → *Bar code reader* → *Scan barcode*
- 2 Use Display to frame barcode → *Scan or* 
 - Camera focuses and scans barcode automatically.

- Alternatively, tap Menu → *Camera* → *Bar code reader* to start scanning.
- Some barcodes may be invalid.

- Scan may fail if barcode is not clear.
- Indoors, scan may fail if handset shadows barcode.
- Scan may fail when capturing multiple barcodes.
- JAN codes are one-dimensional codes made up of combinations of vertical bars of varying widths and spaces. Handset is not compatible with other 1D codes (e.g., ITF code, Code39, or Codebar/NW-7).
- QR Code is two-dimensional code with information in matrix.
- Hold handset approximately ten cm away from barcode. If it does not scan, move handset slowly to adjust the distance to fix focus.
- Tap Macro Off/Macro On to set/cancel macro.
- To adjust brightness, tap Exposure.
- To save the scanned result, tap Save. To check the saved barcode, tap Result.
- To scan multiple barcodes continuously, tap Continue after activating Barcode reader then scan. After a scan is complete, choose **Yes** to scan the next barcode.
- Split barcodes cannot be opened or saved unless all split barcodes are scanned.
- You can use any phone numbers, mail addresses, or other items for Phone Book entries if they are contained in the scanned data ( P.10-26). For usable information, the background color of the text turns light blue; however, if the text contains any character that is not allowed to use that information, the background area for the following characters does not turn light blue.
- Use QR Codes for text only. Handset cannot scan QR Codes created from media files.

Using Barcode Files

Use a barcode file saved in Data Folder.

1 Tap Menu → *Tools* → *Convenient* → *Bar code reader* → *Open barcode*

- With Memory Card inserted, select a file from Pictures or Digital Camera folder.

2 Select a file

- For split barcodes, once one portion is scanned, the rest is automatically recognized and scanned. If file name or saved directory of a split barcode has been changed, select unrecognized part to be scanned.
- Barcode with changed file size might not be scanned.
- If barcode is unrecognizable, notification appears.

Creating QR Code

Use Phone Book entry or enter text to create QR Code.

- A QR Code holds up to 211 single-byte or 105 double-byte characters.
- When volume of information is large, a split QR Code automatically appears (up to 16 QR Codes).
- Created QR Code is saved in Pictures in Data Folder. Check saved QR Code in Data Folder (☞P.10-15).

1 Tap Menu → *Tools* → *Convenient* → *Bar code reader* → *Create QR code*

2 Create QR Code

■ To Create QR Code from Phone Book

Phonebook → Search and Select entry (☞P.2-18) → Select a phone number

■ To Create Text QR Code

Text input → Enter text

3 Tap Save

- Phone Book entries converted to QR Codes contain Name, Reading name, Phone number, mail address, Address, and Memo. Other items will not be included.
- Tap Send in QR Code confirmation window to create S! Mail with the created QR Code attached.

Checking Scanned Barcode

Check the saved scanned result.

1 Tap Menu → *Tools* → *Convenient* → *Bar code reader* → *Scanned results*

2 Select a result

- If scanned result is too large, it will not appear. Some files cannot be opened.

Advanced

Advanced Settings (☞P.10-26)

- Specifying Saving Location for Created QR Code

File Viewer

Using File Viewer

View document files in Portrait or Landscape view. Rotate handset to automatically rotate Display image.

- This guide describes Portrait View operations.



Portrait View



Landscape View

1 Tap Menu → Tools → Convenient → File viewer

- Tap to view files on Memory Card.

2 Select a file

3 Scroll the file to view

- Tap or to flip page.
- Swipe Display to scroll (up/down/left/right).

- Open PDF, XLS, DOC, PPT, or TXT files saved in Data Folder. Select an image file saved in Data Folder and File viewer is activated automatically.
- Files with up to approximately 10 MB can be browsed. However, browse files of up to 10 MB. In some cases, files under 10 MB may not be browseable.

Note

- If a document includes many pages or complicated designs, all pages of the document may not appear properly.
- A file in any language other than Japanese or English may not appear properly.

Zoom In/Out

1 Tap Menu → Tools → Convenient → File viewer → Select a file

2 → or to adjust magnification



- Alternatively, press / to adjust magnification.

- Tap to show a file to fit Display height. Tap to show a file to fit Display width.

Advanced

Advanced Settings (P. 10-27)

- Sending Files
- Going to Pages
- Searching Characters in Page
- Capturing Images
- Editing File Name
- Protecting File

Dictionary

Look up words in English/Japanese dictionaries.

- 1 Tap Menu → *Tools* → *Convenient* → *Dictionary*
- 2 Tap pulldown menu → *English or Japanese*
- 3 Tap Word field → Enter a word
- 4  → Select a target word

Dummy Call

Setting Dummy Call

Set Dummy Call timer, caller's name and number.

Enabling/Disabling Side Key Activation

- 1 Tap Menu → *Tools* → *Convenient* → *Dummy call* → *Side key activation*
- 2 *On/Off*
 - When *Side key activation* is set to *On*, in Standby, press  for two seconds to activate Dummy Call.

Setting Timer

- 1 Tap Menu → *Tools* → *Convenient* → *Dummy call* → *Set timer*
- 2 Select time

Setting Caller

- 1 Tap Menu → *Tools* → *Convenient* → *Dummy call* → *Set caller*
- 2 Tap Name field → Enter caller's name
- 3 Tap Phone number field → Enter caller's number

Activating Dummy Call

1 In Standby, press for 2 + seconds

- Set time in *Set timer* to activate timer at set time.

2 Press while Dummy Call rings

3 Press after Dummy Call ends

- If name or number is not set, *Withheld* appears.
- While Dummy Call rings, menu items at bottom of Display are not selectable.
- When on a Dummy Call if an actual call comes in, the actual incoming call will be given priority and the Dummy Call will be ended.
- When on a Dummy Call if an actual call comes in, the Ringtone will not sound, the tone sounds will sound.
- Alternatively, tap Menu → *Tools* → *Convenient* → *Dummy call* → *Run dummy call* → *Yes*. Dummy Call activates right after the settings even if *Set timer* is set.

Advanced Settings

Advanced Settings

Alarm

Setting/Canceling Alarm

Tap Menu → *Tools* → *Alarm* → *On* or *Off* beside each Alarm

Setting Alarm Sound/Vibration in Manner Mode

Tap Menu → *Tools* → *Alarm* → Tap Manner mode setting → Under *Alarm sound/Vibration*, *On* or *Off*

Calendar

Saving to Schedule

Tap Menu → *Tools* → *Calendar* → Tap Add new → Enter title → *Start date* → Enter start date → *Start time* → Enter start time → *End date* → Enter end date → *End time* → Enter end time → Tap OK

To Set Schedule for All Day

Date & Time → Check *All day* → Tap OK → Tap Save

To Set Category

Category → Select an item → Tap Save

To Set Alarm

Alarm → *Alarm time* → Select an item → *Duration* → Select an item → *Alert tone/video* → Select a file location → Select a file → Adjust Volume → *Vibration* → Select an item → Tap OK → Tap Save

- For *Other* in *Alarm time* or *Duration*, enter Alarm time or duration.
- While selecting *Alert tone/video*, tap  to playback a file.
- While selecting *Vibration*, tap  to view a pattern.
- If a Memory Card file is set as Alarm sound, copy to handset confirmation appears. For a copy protected file, move to handset confirmation appears.

To Repeat a Set Schedule

Repeat → Enter an item → Enter a number of times to repeat → Tap Save

- If *No repetition* is selected, you do not need to select the number of times to repeat.

To Set Location

Location → Enter location → Tap Save

To Set Guests

Guests → *From phonebook/Enter number/Enter address* → Search and select phone number/Enter number/Enter address → Tap OK

- Tap Add guest to add guests.
- Tap Remove guest → Check guest to remove → Tap Remove → *Yes* to remove guest.

To Automatically Delete Schedule

Expiry → Enter an item → Tap Save

- Upon expiry, schedule is automatically deleted from Calendar (e.g. if Expiry is *After 1 year*, and Repetition is unset, schedule is deleted one year from event end date). If Repetition is set, schedule is deleted one year after last repetition. Select *Off* to cancel Auto delete.

To Set Details

Details → Enter content → Tap Save

To Set Secret

Under *Secret, On or Off* → Tap Save

Editing Schedule

Tap Menu → *Tools* → *Calendar* → Tap date → Tap schedule → Tap Edit → Save to Schedule (📍P.10-18)

Opening a Specific Date

Tap Menu → *Tools* → *Calendar* → Tap Go to

To Show Today's Date

Today

To Toggle to a Specified Date

Date → Enter date

Switching View Mode

Tap Menu → *Tools* → *Calendar* → Tap Switch view

Viewing All Events

Tap *Menu* → *Tools* → *Calendar* → Tap More → *Show all events*

Viewing Schedule by Category

Tap Menu → *Tools* → *Calendar* → Tap More → *List by category* → Select item

Sending Schedule

Tap Menu → *Tools* → *Calendar* → Tap More → *Send*

To Send via Message

Via message → Check a schedule → Tap Send → (📍P.4-4 S! Mail ②)

To Send via Bluetooth®

Via Bluetooth → Check a schedule → Tap Send → (📍P.13-6 Sending One Item at a Time ②)

To Send via Infrared

Via infrared → Check a schedule → Tap Send (📍P.13-3)

To Send via IC Transmission

Via IC transmission → Check a schedule → Tap Send (📍P.13-8)

- Alternatively, in Detailed information window for the schedule to send, tap Send and select an item to send it.

Deleting Schedule

Tap Menu → *Tools* → *Calendar*

To Delete an Entry

Select a schedule → Tap Delete → *Yes*

To Delete All Schedules of Selected Date

Tap a date to delete in Monthly view or Weekly view → Tap More → *Delete* → *All this day* → *Yes*

- To delete schedules in the date shown in the Daily view, tap More → *Delete* → Check schedules to delete → Tap Delete → *Yes*.

To Delete Schedules for a Specified Period of Time

In Monthly view or Weekly view, tap More → *Delete* → *Periods* → *From* → Enter start date → *To* → Enter end date → Tap Delete → *Yes*

To Delete Schedules of Currently Shown Month or Week

In Monthly view or Weekly view, tap More → *Delete* → *This month* or *This week* → *Yes*

To Delete All Schedules before the Highlighted Date

In Monthly view or Weekly view, tap More → *Delete* → *All past data* → Enter Phone Password → Tap OK → *Yes*

To Delete All Schedules

In the Monthly view or Weekly view, tap More → **Delete** → **All** → Enter Phone Password → Tap OK → **Yes**

To Delete Multiple Schedules Listed by Category

In Monthly view or Weekly view, tap More → **List by category** → Select a category → Tap Delete → Check schedules to delete → Tap Delete → **Yes**

- When tapping **Mark all**, enter Phone Password → Tap OK → **Yes**.

Setting Holiday

Tap Menu → **Tools** → **Calendar** → Tap More → **Settings** → **Set holiday** → (if holiday is already added, tap Add new →) Enter title → Tap Save

- To change date, tap **Date** → Enter date.
- To change frequency, tap **Frequency** → Select an item.

Changing Holiday Display

Tap Menu → **Tools** → **Calendar** → Tap More → **Settings** → **Set holiday** → Under **holiday**, **On** or **Off**

Editing Added Holiday

Tap Menu → **Tools** → **Calendar** → Tap More → **Settings** → **Set holiday** → Tap Edit → Select an entry → Edit the entry → Tap Save

Deleting Added Holiday

Tap Menu → **Tools** → **Calendar** → Tap More → **Settings** → **Set holiday** → Tap Delete → Check entries to delete → Tap Delete → **Yes**

Setting Beginning of Week

Tap Menu → **Tools** → **Calendar** → Tap More → **Settings** → **Starting day** → **Sunday** or **Monday**

Setting Default Calendar View

Tap Menu → **Tools** → **Calendar** → Tap More → **Settings** → **Default view mode** → Select an item

Setting Reminder

Tap Menu → **Tools** → **Calendar** → Tap More → **Settings** → **Reminder** → Under **On/Off**, **On**

To Set Reminder Time

Tap Time field → Enter a time → Tap Save

To Set Alarm Sound Duration

Duration → Select an item → Tap Save

- When selecting **Other**, enter duration.

To Set Alarm Sound or Video

Alert tone/video → Select a folder → Select a file → Tap Save

- In Selecting file window, tap  to playback a file.
- If a Memory Card file is set as Alarm sound, copy to handset confirmation appears. For a copy protected file, move to handset confirmation appears. Choose **Yes** to complete setting.

To Adjust Alarm Volume

Adjust Volume → Tap Save

To Set Vibration

Vibration → Select an item → Tap Save

- Tap  to view a pattern.

Setting Alarm Sound/Vibration in Manner Mode

Tap Menu → **Tools** → **Calendar** → Tap More → **Settings** → **Manner mode setting** → Under **Alarm sound/Vibration**, **On** or **Off**

Viewing Secret Schedule

Tap Menu → **Tools** → **Calendar** → Tap More → **Unlock temporarily** → Enter Phone Password → Tap OK

Checking Missed Alarm Event

Tap Menu → **Tools** → **Calendar** → Tap More → **Missed alarm event** → Select a schedule

Viewing Calendar Memory Status

Tap Menu → **Tools** → **Calendar** → Tap More → **Memory status**

Saving Schedule as vFile

In Daily view, tap More → **Save to Data Folder** → Select an item → Select a schedule → **Yes**

- Save location can be set to **Memory card** if inserted.

Printing Schedule via Bluetooth®

In Daily view, tap More → **Print via Bluetooth** → Select a schedule (P.7-17 Printing via Bluetooth® 4)

Tasks

Saving Task

Tap Menu → **Tools** → **Tasks** → Tap Add new → Enter title → **Due date** → Enter due date → **Due time** → Enter time → Tap OK

■ To Set Priority

Priority → Select an item → Tap Save

■ To Set Alarm

Alarm → **Alarm time** → Select an item → **Duration** → Select an item → **Alert tone/video** → Select a location to save → Select a file → Adjust volume → **Vibration** → Select an item → Tap OK → Tap Save

- When **Other** is selected in **Alarm time**, enter Alarm date and time.
- When **Other** is selected in **Duration**, enter duration time.
- While selecting **Alert tone**, tap  to playback a file.
- While selecting **Vibration**, tap  to view a pattern.
- If a Memory Card file is set as Alarm sound, copy to handset confirmation appears. For a copy protected file, move to handset confirmation appears. Choose **Yes** to complete setting.
- At Alarm time, tone sounds and indicator appears. Tap **OK** to stop Alarm and indicator is cleared. If no Alarm is stopped, Missed Alarm message appears. Tap the message to view the event.

- During a call, while dialing (**Connecting...** appears) or while dialing (**Dialling...** appears), at Alarm time, a tone sounds and an indicator appears. When **Call connect tone** on **System sounds** is unchecked, only indicator appears during a call or connection. Tap **OK** to clear indicator.

■ To Set Details

Details → Enter content → Tap Save

■ To Activate or Cancel Secret

Under **Secret, On** or **Off** → Tap Save

Sorting Tasks

Tap Menu → **Tools** → **Tasks** → Tap pulldown menu → **Deadline** or **Priority**

Sending Tasks as vFile

Tap Menu → **Tools** → **Tasks** → Tap Send

■ To Send via Message

Via message → Check tasks → Tap Send → (📧P.4-4 S! Mail )

■ To Send via Bluetooth®

Via Bluetooth → Check tasks → Tap Send → (📶P.13-6 Sending One Item at a Time )

■ To Send via Infrared

Via infrared → Check tasks → Tap Send → (📶P.13-3)

■ To Send via IC Transmission

Via IC transmission → Check tasks → Tap Send → (📶P.13-8)

- Alternatively, in Task details window, tap Send and select an item to send.

Deleting Tasks

Tap Menu → **Tools** → **Tasks**

■ To Select a Tab and Delete

All tasks, Completed tasks, Uncompleted tasks, or Expired tasks tab → Tap Delete → **Delete in this tab** → Check tasks to delete → Tap Delete → **Yes**

- Alternatively, in Task details window, tap Delete to delete one.

■ To Delete All Tasks

Tap Delete → **Delete all tasks** → Enter Phone Password → Tap OK → **Yes**

Searching Tasks

Tap Menu → **Tools** → **Tasks** → Tap More → **Search** → **By due date/By title** → Entering Expiration/Title

Setting Alarm Sound/Vibration in Manner Mode

Tap Menu → **Tools** → **Tasks** → Tap More → **Manner mode setting** → Under **Alarm sound/Vibration, On** or **Off**

Viewing Secret Tasks

Tap Menu → **Tools** → **Tasks** → Tap More → **Unlock temporarily** → Enter Phone Password → Tap OK

Viewing Missed Alarm Event

Tap Menu → **Tools** → **Tasks** → Tap More → **Missed alarm event** → Select a missed task to check

- Alternatively, in Task details window, tap More → **Missed alarm event** to view.

Printing Tasks via Bluetooth®

Tap Menu → **Tools** → **Tasks** → Tap More → **Print via Bluetooth** → Select a task → (P.7-17 Printing via Bluetooth® 4)

- Alternatively, in Task details window, tap More → **Print via Bluetooth**.

Viewing Task Item Status

Tap Menu → **Tools** → **Tasks** → Tap More → **Memory status**

Editing Tasks

Tap Menu → **Tools** → **Tasks** → Select a task to edit → Tap Edit → Edit Task (P.10-21)

Saving Tasks as vFile

Tap Menu → **Tools** → **Tasks** → Select a task → Tap More → **Save to Data Folder** → Select an item → **Yes**

- With Memory Card inserted, **Memory card** can be set as save location.

Osaifu-Keitai®

Viewing IC Card Details

Tap Menu → **Tools** → **Osaifu-Keitai** → **IC card settings** → **IC card status**

- When IC card is locked, confirmation message appears. Choose **Yes** → Enter Phone Password.

Viewing Balance Info

Tap Menu → **Tools** → **Osaifu-Keitai** → **IC card settings** → **Balance info** → Enter Phone Password → Tap OK → Select an item → Select Lifestyle-Appli

- Can be used for Lifestyle-Appli that supports viewing balance info. Deleting from balance info list.

Deleting from Balance Info List

Tap Menu → **Tools** → **Osaifu-Keitai** → **IC card settings** → **Balance info** → Enter Phone Password → Tap OK → Tap Delete → Check items to delete → Tap Delete → **Yes**

Restricting Functions from Activating Automatically

Tap Menu → **Tools** → **Osaifu-Keitai** → **IC card settings** → **Interface settings** → Enter Phone Password → Tap OK → Set **Off** for functions to restrict

Restoring to Default Settings

Tap Menu → **Tools** → **Osaifu-Keitai** → **IC card settings** → **Reset** → Enter Phone Password → Tap OK → **Yes**

S! GPS Navi

Sending Current Location via Message

Tap Menu → **Tools** → **S! GPS Navi** → **Location mail** → If confirmation appears, choose **Yes** → Tap Re-positioning/Skip/OK as required → Create message (P.4-4 S! Mail 2)

Saving My Location

Tap Menu → **Tools** → **S! GPS Navi** → **My locations** → Tap Create new → **Name** → Enter name → **Location info**

■ New Location

New positioning → If confirmation appears, choose **Yes** → Tap Re-positioning/Skip/OK as required → **Yes/No**

- After location is set, tap Re-positioning to retrieve location.

■ Save from History

Form location logs → Tap history to save → **Yes/No**

- Alternatively, Tap Menu → **Tools** → **S! GPS Navi** → **Location logs** → Tap history to save → Tap Save.

Viewing Route to Bookmarked Location

Tap Menu → **Tools** → **S! GPS Navi** → **My locations** → Tap Navigation → Tap bookmarked location → If confirmation appears, choose **Yes**

- For following operation, follow onscreen instructions.

Viewing Map of Bookmarked Location

Tap Menu → **Tools** → **S! GPS Navi** → **My locations** → Tap Open map → Tap bookmarked location → If confirmation appears, choose **Yes**

Sending Bookmarked Location via Message

Tap Menu → **Tools** → **S! GPS Navi** → **My locations** → Tap More → **Send via message** → Tap bookmarked location to send → Create message (P.4-4 S! Mail 2)

Deleting Bookmarked Location

Tap Menu → **Tools** → **S! GPS Navi** → **My locations** → Tap More → **Delete** → Check bookmark to delete → Tap Delete → **Yes**

Viewing Location History

Tap Menu → **Tools** → **S! GPS Navi** → **Location logs** → Select history

-  displays occasions on which location information could not be retrieved.

Viewing Route to Location

Tap Menu → **Tools** → **S! GPS Navi** → **Location logs** → Tap Navigation → Tap Location logs → If confirmation appears, **Yes**

Viewing Map of Location

Tap Menu → **Tools** → **S! GPS Navi** → **Location logs** → Tap Open map → Tap Location logs to view → If confirmation appears, **Yes**

Sending Location via Message

Tap Menu → **Tools** → **S! GPS Navi** → **Location logs** → Tap More → **Send via message** → Tap Location logs to send → Create message (P.4-4 S! Mail 2)

Deleting a Location

Tap Menu → **Tools** → **S! GPS Navi** → **Location logs** → Tap More → **Delete** → Check location logs to delete → Tap Delete → **Yes**

Expense Manager

Deleting an Expense Record

Tap Menu → **Tools** → **Expense manager** → Tap Delete

■ To Delete Expense Information for Selected Day

All this day → **Yes**

■ To Delete Expense Information for a Period of Time

Periods → Tap From field → Enter start time → Tap To field → Enter end time → Tap Delete → **Yes**

■ To Delete Expense Information for Current Month

This month → **Yes**

■ To Delete All Expense Information

All → Enter Phone Password → Tap OK → **Yes**

Saving Expenses Information to Notepad

Tap Menu → **Tools** → **Expense manager** → Tap Monthly expense → Tap Save to Notepad → **Yes**

World Clock

Deleting World Clock

Tap Menu → **Tools** → **World clock** → Tap Delete → Check an item → Tap Delete → **Yes**

Setting Dual Clock

Tap Menu → **Tools** → **World clock** → Tap Set on dual clock → Select an item → **Set as 1st clock/Set as 2nd clock** → Tap OK

Stopwatch

Saving Stopwatch Content to Notepad

Tap Menu → **Tools** → **Stopwatch** → **Start** → **Stop** → **Save to Notepad** → **Yes**

Countdown Timer

Changing Alarm

Tap Menu → **Tools** → **Countdown timer** → Tap Settings

■ To Set Duration

Duration → Select an item → Tap Save

- When selecting **Other**, enter duration.

■ To Alert Tone

Alert tone → Select a file location → Select a file → Tap Save

■ To Set Volume

Set volume in Volume field

■ To Set Vibration

Vibration → Select an item → Tap Save

Good Night Timer

Resetting Good Night Timer

Tap Menu → **Tools** → **Good night timer** → Tap Reset → **Yes**

Calculator

Adding Calculation Result to Notepad

Tap Menu → **Tools** → **Convenient** → **Calculator** → Enter calculation →  →  → **Yes**

- Complete calculation to save results to Notepad.

Currency/Unit Conversion

Viewing Exchange Rate

Tap Menu → **Tools** → **Convenient** → **Converter** → **Currency** → Tap Currency field → Select Original currency → Tap View rate

Changing Exchange Rate

Tap Menu → **Tools** → **Convenient** → **Converter** → **Currency** → Tap View rate → Select a currency → Enter rate

Adding Currency Unit

Tap Menu → **Tools** → **Convenient** → **Converter** → **Currency** → Tap View rate → Tap Add rate → Enter currency unit name → Enter rate

Deleting Added Currency Unit

Tap Menu → **Tools** → **Convenient** → **Converter** → **Currency** → Tap View rate → Tap Delete rate → Check currency unit to delete → Tap Delete → **Yes**

- When **Mark all** is tapped, tap Delete → Enter Phone Password → Tap OK → **Yes**.

Saving Results to Notepad

Tap Menu → **Tools** → **Convenient** → **Converter** → Convert Currencies/Convert Units → Tap Save to Notepad → **Yes**

Notepad

Sending Notepad

Tap Menu → **Tools** → **Convenient** → **Notepad**
→ Tap Send

■ To Use Notepad Data as Message Text

As message text → Select a Notepad → (P.4-4 S! Mail 2)

- If Notepad contains Hangul characters, Graphic Mail will be unavailable.

■ To Send via Message

Via message → Check a Notepad → Tap Send
→ (P.4-4 S! Mail 2)

■ To Send via Bluetooth®

Via Bluetooth → Check a Notepad → Tap Send
→ (P.13-6 Sending One Item at a Time 2)

■ To Send via Infrared

Via infrared → Check a Notepad → Tap Send
→ (P.13-3 Sending Data Items One at a Time 1)

■ To Send via IC Transmission

Via IC transmission → Check a Notepad →
Tap Send → (P.13-8)

- Alternatively, in Detail window, tap Send to send.

Deleting Notepad

Tap Menu → **Tools** → **Convenient** → **Notepad**
→ Tap Delete → Check a Notepad → Tap
Delete → **Yes**

- Enter Phone Password to delete all entries.
- Alternatively, in Detail window, tap Delete to delete one Notepad.

Viewing Notepad Memory Status

Tap Menu → **Tools** → **Convenient** → **Notepad**
→ Tap More → **Memory status**

Searching Notepad

Tap Menu → **Tools** → **Convenient** → **Notepad**
→ Tap More → **Search** → Enter searching text

Viewing Notes by Category

Tap Menu → **Tools** → **Convenient** → **Notepad**
→ Tap More → **List by category** → Select
category

Saving Notes to Data Folder

Tap Menu → **Tools** → **Convenient** → **Notepad**
→ Tap More → **Save to Data Folder** → **Phone/
Memory card** → Select Saving Notepad → **Yes**

Editing Notepad

Tap Menu → **Tools** → **Convenient** → **Notepad**
→ Select a Notepad → Tap Text field → Edit
Notepad

Changing Notepad Category

Tap Menu → **Tools** → **Convenient** → **Notepad**
→ Select a Notepad → Tap category field →
Select category

Voice Recorder

Setting Recorded Sound File as Ringtone, etc.

Tap Menu → **Tools** → **Convenient** → **Voice
recorder** → Record a sound → Tap Set as →
Select a Ringtone

- If **Caller ringtone** is selected, search and select
entry (P.2-18).

Moving Recorded Sound File

Tap Menu → **Tools** → **Convenient** → **Voice
recorder** → Record a sound → Tap Data Folder
→ Tap Move → Select an item → Check a file to
move → Tap Move → Select a location to save

Copying Recorded Sound File

Tap Menu → **Tools** → **Convenient** → **Voice
recorder** → Record a sound → Tap Data Folder
→ Tap Copy → Select an item → Check a file to
copy → Tap Copy → Select a location to save

Sending Recorded Sound File

Tap Menu → **Tools** → **Convenient** → **Voice
recorder** → Record a sound → Tap More → **Send**

■ To Send via Message

Via message → (P.4-4 S! Mail 2)

■ To Send via Bluetooth®

Via Bluetooth → (P.13-6 Sending One Item at a
Time 2)

■ To Send via Infrared

Via infrared (P.13-3)

■ To Send via IC Transmission

Via IC transmission (P.13-8)

Deleting Recorded Sound File

Tap Menu → **Tools** → **Convenient** → **Voice recorder**
→ Record a sound → Tap More → **Delete** → **Yes**

Editing Recorded Sound File Name

Tap Menu → **Tools** → **Convenient** → **Voice recorder** → Record a sound → Tap More → **Rename** → Enter file name

Protecting Recorded Sound File

Tap Menu → **Tools** → **Convenient** → **Voice recorder**
→ Record a sound → Tap More → **Lock** or **Unlock**

Viewing Recorded Sound File Details

Tap Menu → **Tools** → **Convenient** → **Voice recorder**
→ Record a sound → Tap More → **Details**

Changing Default Name at Saving

Tap Menu → **Tools** → **Convenient** → **Voice recorder**
→ Tap Rec. settings → **Default name** → Enter file name

Changing Recording Time

Tap Menu → **Tools** → **Convenient** → **Voice recorder**
→ Tap Rec. settings → **Recording time** → Select an item

- If **Other** is selected, enter recording time.

Changing Default Saving Location

Tap Menu → **Tools** → **Convenient** → **Voice recorder**
→ Tap Rec. settings → **Set default memory** → Select an item

- If Memory Card is not inserted, Memory Card cannot be set as save location.

Barcode Reader

Using Scanned Data

Tap Menu → **Tools** → **Convenient** → **Bar code reader** → **Scan barcode** → Scan a barcode

■ To Call Scanned Phone Number

Select a number with **TEL**: or ten to 32-digit number starting with 0 → **Select** → **Voice call**, **Video call** or **Edit before call**

- If **Edit before call** is selected, edit phone number then **Call** or Tap Video call.

■ To Send Message to Scanned Phone Number

Select a number with **TEL**: or ten to 32-digit number starting with 0 → **Select** → **Create message** → **S! Mail** or **SMS** (☎P.4-5 S! Mail ⑤, ☎P.4-7 SMS ⑤)

■ To Send Message to Scanned Mail Address

Highlight mail address contained with @ → **Select** → **Create message** → (☎P.4-4 S! Mail ⑤)

■ To Access Scanned URL

Highlight URL starting with **http://** or **rtsp://** → **Select** → **Go to URL** → **Yes**

■ To Save Scanned Entry to Phone Book

Highlight an entry → **Select** → Tap Save

■ To Save Scanned Number, etc. as a New Phone Book Entry

Highlight a phone number, etc. → **Select** → **Add to phonebook** → **New** → (☎P.2-17 Creating New Entries ⑤)

■ To Add Scanned Number, etc. to an Existing Phone Book Entry

Highlight a phone number, etc. → **Select** → **Add to phonebook** → **Update** → Search and select entry (☎P.2-18) → Creating New Entries (☎P.2-17)

■ To Add Scanned URL to Bookmarks

Highlight a URL → **Select** → **Add to bookmark** → Enter a title

■ To Copy Scanned Mail Address or Phone Number, etc.

Highlight an mail address or phone number → Tap Copy → Select an item

- For **Copy Text**, tap the first character to copy → Tap Start point → Tap the last character to copy → Tap End point.

■ To Paste Scanned Phone Number, Mail Address, etc. to Message Text

Tap Send → Tap OK → **S! Mail** or **SMS** → (☎P.4-4 S! Mail ②, P.4-7 SMS ②)

■ To Paste a Scanned Phone Number or Mail Address to Message Text

Tap Send → Tap Cut → Tap the first letter and Tap Start point → Tap the last letter and set range → Tap End point → Tap OK → **S! Mail** or **SMS** → (☎P.4-4 S! Mail ②, P.4-7 SMS ②)

■ To Copy Scanned Characters

Tap Copy → Tap the first letter and tap Start point → Tap the last letter → Tap End point

Specifying Saving Location for Created QR Code

Tap Menu → **Tools** → **Convenient** → **Bar code reader** → **Create QR code** → **Phonebook** or **Text input** → (⊕P.10-15 Creating QR Code 2) → Tap Save to → Select an item → Tap Save

Attaching Created QR Code to Message to Send

Tap Menu → **Tools** → **Convenient** → **Bar code reader** → **Create QR code** → **Phonebook** or **Text input** → (⊕P.10-15 Creating QR Code 2) → Tap Send → (⊕P.4-4 S! Mail 2)

File Viewer

Deleting Files

Tap Menu → **Tools** → **Convenient** → **File viewer** → Select a file →  → **Yes**

Viewing File Details

Tap Menu → **Tools** → **Convenient** → **File viewer** → Select a file → 

Sending Files

Tap Menu → **Tools** → **Convenient** → **File viewer** → Select a file → Tap Send

■ To Send via Message

Via message → (⊕P.4-4 S! Mail 2)

■ To Send via Bluetooth®

Via Bluetooth → (⊕P.13-6 Sending One Item at a Time 2)

■ To Send via Infrared

Via infrared (⊕P.13-3)

■ To Send via IC Transmission

Via IC transmission → (⊕P.13-8)

Going to Pages

Tap Menu → **Tools** → **Convenient** → **File viewer** → Select a file → Tap Go to → Select an item

- For **Page**, specify page number.
- Tap  or  to go to another page.

Searching Characters in Page

Tap Menu → **Tools** → **Convenient** → **File viewer** → Select a file → Tap Search → Enter keyword

- After the search results appear, to find the next/previous word in the document that matches the same search word, tap Next/Previous.
- To exit the search mode, tap End Search.
- To try to search using other words without exiting, tap New search.

Capturing Images

Tap Menu → **Tools** → **Convenient** → **File viewer** → Select a file → Tap More → **Capture screen**

- Captured image is saved in JPEG format to Pictures in Data Folder of handset.

Editing File Name

Tap Menu → **Tools** → **Convenient** → **File viewer** → Select a file → Tap More → **Rename** → Enter file name

Protecting File

Tap Menu → **Tools** → **Convenient** → **File viewer** → Select a file → Tap More → **Lock** or **Unlock**

Assigning Scroll Range

Tap Menu → **Tools** → **Convenient** → **File viewer** → Select a file → Tap More → **Settings** → Panning → Select an item

Fitting to Display

Tap Menu → **Tools** → **Convenient** → **File viewer**
→ Select a file → Tap More → **Settings** → Under
Reflow, On or **Off**

Setting Map

Tap Menu → **Tools** → **Convenient** → **File viewer**
→ Select a file → Tap More → **Settings** → Under
Map on, On or **Off**

- Current position is framed in blue.

Editing Default File Name at Screen Capture

Tap Menu → **Tools** → **Convenient** → **File viewer**
→ Select a file → Tap More → **Settings** → Tap
Screen capture name field → Enter file name

Dictionary

Saving Searching Data to Notepad

Tap Menu → **Tools** → **Convenient** → **Dictionary**
→ Tap pulldown menu → **English** or **Japanese** →
Tap Word field → Enter a word →  → Select a
target word → Tap Save to Notepad → **Yes**