

USIM Card	1-2
About USIM Card	1-2
USIM Card Installation.....	1-3
USIM PINs.....	1-3
Parts & Functions	1-4
Handset	1-4
Display Positions.....	1-7
Key Operations in Standby	1-8
Display	1-10
About Battery	1-13
Before Charging	1-13
Battery Installation	1-15
Charging Battery	1-16
Handset Power On/Off	1-17
Manner Mode	1-18
Minding Mobile Manners.....	1-18
Manner-related Features.....	1-18
Activating Manner Mode	1-18
Activating Offline Mode.....	1-19
Activating Driving Mode	1-19
Handset Menus	1-19
Main Menu	1-19
Menu Numbers	1-21
Accessing Functions/Info from Standby	1-22
Touchpad	1-23

 
Standby Options & Event Indicators	1-24
Event Indicators.....	1-24
Mobile Widget (Japanese).....	1-25
S! Quick News (Japanese).....	1-25
Shortcuts.....	1-25
Customizing User Interface	1-26
Customized Screen	1-26
Changing Display Font.....	1-27
Private Menu	1-28
Opening Private Menu	1-28
Customizing Private Menu	1-28
Adding Shortcuts.....	1-28
Simple Menu	1-29
Activating Simple Menu	1-29
Simple Menu	1-30
Using Videos/Music	1-31
Passwords	1-32
Phone Password.....	1-32
Center Access Code.....	1-32
Security Code	1-32
Multi Task	1-33
Activating Another Function.....	1-33
Ending Current Functions.....	1-33
View Blind	1-34
My Number	1-34

USIM Card

About USIM Card

Universal Subscriber Identity Module (USIM) Card is an IC card containing customer and authentication information, including handset number, and limited Phone Book entry and SMS message storage. USIM must be inserted to use handset or Network services (calling, messaging, Internet, etc.). Turn handset off before inserting/removing USIM Card.

USIM Card



- Insert USIM Card into other compatible SoftBank handset to use information saved on USIM Card.
- Use SoftBank specified USIM Card only; non-specified USIM Cards may not function properly.
- Do not insert USIM Card into other IC card devices. SoftBank is not liable for any resulting damages.
- Keep IC portion clean.
- Do not damage, carelessly touch or short-circuit IC chip; doing so may result in loss of data or malfunction.
- Remove dust/debris with a soft, dry cloth.
- Do not place labels, etc. on USIM Card; may cause failure.
- If handset is dropped/subjected to shock, handset may return to Standby. This is not a malfunction.

If **USIM not inserted After power-off Insert USIM** appears, re-insert USIM Card properly then restart handset.

Important

- USIM Card is the property of SoftBank.
- Return USIM Card to SoftBank upon service cancellation.
- USIM Card will be reissued for a fee if lost or damaged.
- If USIM Card/handset with USIM Card inserted is lost or stolen, contact SoftBank Mobile Customer Center or Global Call Center (☎P.19-34).
- Back up USIM Card files. SoftBank is not liable for lost files.
- USIM Card specifications/performance may change without prior notice.
- Pre-installed S! Appli may be unusable while a different or replacement USIM Card is inserted into handset.
- Returned USIM Cards are recycled.

Note

 
- Some downloaded files may be inaccessible after upgrades/repairs, USIM Card/handset replacement.

USIM Card Installation

- Remove battery (☞P.1-15) then follow steps below.

Inserting


- 1 With IC chip down, insert USIM Card

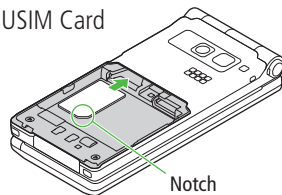

Notch

Removing

 - 1 Slide out USIM Card gently

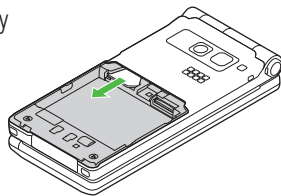

Note

- Do not force USIM Card into or out of handset; may damage handset/USIM Card.
- Be careful not to lose the removed USIM Card.
- Avoid touching USIM Card terminals or IC chip; doing so may hinder performance/USIM Card recognition.

USIM PINs

There are two USIM Card security codes: PIN & PIN2

- PIN and PIN2 are set to **9999** by default.
- PIN/PIN2 can be changed (☞P.12-3).

PIN	4 to 8-digit code used to prevent unauthorized handset use. <ul style="list-style-type: none"> ● When PIN Authentication is ON (☞P.12-2), PIN entry is required each time handset is turned on (with USIM Card inserted).
PIN2	Required to clear call times/costs or set maximum cost (☞P.18-9).

PIN Lock & Cancellation (PUK/PUK2)

PIN Lock or PIN2 Lock is activated if PIN or PIN2 is incorrectly entered three times. Cancel PIN Lock or PIN2 Lock by entering the PIN Unlocking Key (PUK/PUK2) (☞P.12-3).

- For information on PUK/PUK2, contact SoftBank Mobile Customer Center, General Information (☞P.19-34).

 
Note

- If PUK/PUK2 is incorrectly entered ten times, USIM Card is locked and handset is disabled. Write down PUK/PUK2.
- For procedures required to unlock USIM Card, contact SoftBank Mobile Customer Center, General Information (☞P.19-34).


Parts & Functions

Handset

Normal Position

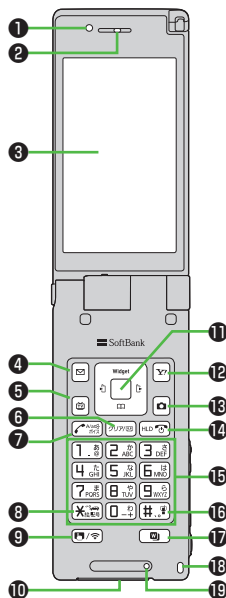

Horizontal Open Position

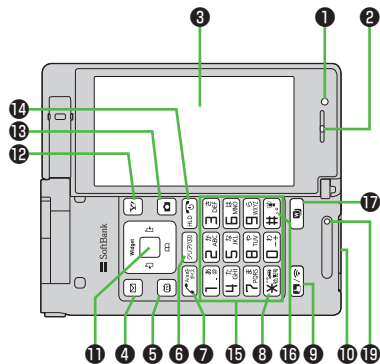 

Using Earphone Microphone or Video Output Cable

 
Connect following accessories (A) and (B) to External Port.

(A) Earphone Microphone or Video Output Cable





 
(B) Stereo Earphone Conversion Cable

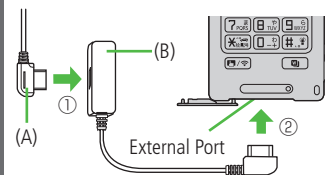








<Operation>



- ① Connect flat plug (A) to flat terminal (B)
- ② Connect plug (B) to External Port

 


- Do not press answer button on Earphone Microphone when connecting. Doing so may cause Earphone Microphone to malfunction. In that case, pull out Earphone Microphone, and connect again.

- 1 **Light Sensor**
 - Detects ambient light
- 2 **Earpiece**
- 3 **Internal Display**
- 4  **Mail Key**
 - Open Messaging menu
 - Execute Upper Left Softkey function (↵P.ix)
- 5  **TV Key**
 - Activate TV
 - Execute Lower Left Softkey function (↵P.ix)
- 6  **Clear/Memo Key**
 - Delete characters
 - Cancel menus
 - Use Answer Phone
- 7  **Send Key**
 - Initiate or answer calls
 - Toggle upper/lower case in text entry windows
 - Use Voice Dial
- 8  *** /Pictograph/Symbol/Driving Mode Key**
 - Enter " * "
 - Access pictographs in text entry windows
 - Access symbol list from pictograph list
 - Toggle Driving Mode

- 9  **Touchpad/Wi-Fi Switch Key**
 - Toggle Touchpad on/off
 - Toggle Wi-Fi function on/off
- 10 **External Port**
 - Connect AC Charger (sold separately), Stereo Earphone Conversion Cable or other accessories here
- 11  **Multi Selector**
 - Scroll up/down/left/right to navigate menus and text (↵P.ix)
 -  Select widgets/S! Quick News
 -  Open Phone Book
 -  Open Incoming Call Logs
 -  Open Redial logs
- 12  **Yahoo! Keitai Key**
 - Open Yahoo! Keitai Main Menu
 - Execute Upper Right Softkey function (↵P.ix)
- 13  **Camera Key**
 - Activate Camera/Video Camera
 - Execute Lower Right Softkey function (↵P.ix)
- 14  **End/Escape & Power Key**
 - Power on/off (↵P.1-17)
 - End calls
 - Return to Standby

- 15 **Keypad/Touchpad**
 - Enter phone number/text
 - Use Touchpad (↵P.1-23)
- 16  **#/Symbol/Manner Key**
 - Enter "#"
 - Toggle Manner Mode
- 17  **Widget Key**
 - View list of available widgets
 - Activate Music Player
- 18 **Horizontal Open Position Hook**
- 19 **Microphone**

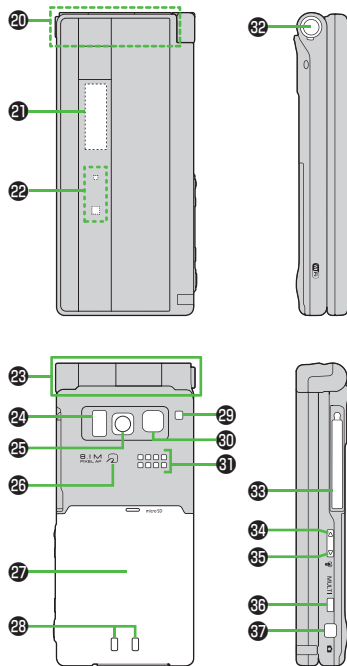**20 Antenna****21 External Display** (☞P.1-12)**22 Notification Light/Charging Indicator**

- Flashes for incoming transmissions
- Lights in red for charging

23 Hinge/Antenna**24 Infrared Port**

- Transfer data via Infrared

25 Camera**26 Logo**

- Place Logo over a reader/writer when using Osafu-Keitai® (☞P.13-11)

27 Battery Cover**28 Charging Terminals****29 Strap Eyelet****30 Flash/Photo light**

- Lights/flashes during Camera use
- Use when shooting in dark places

31 Speaker**32 One-push Open Button** (☞P.1-7)**33 TV Antenna****34 Upper Side Key**

- Increase earpiece/TV volume

[Handset Closed]

- View Incoming Call Logs on External Display
- Toggle External Display
- Turn on illumination

35 Lower Side Key

- Decrease earpiece/TV volume
- [Handset Closed]**

- Set/cancel Manner Mode
- Check missed calls/new messages

36 (MULTI) MULTI Key

- Open TASK MENU/Pictures Folder

 
37 (CAMERA) Shutter Key

- Activate Camera/capture images

Display Positions

Normal Position


Press One-push Open Button to open handset.

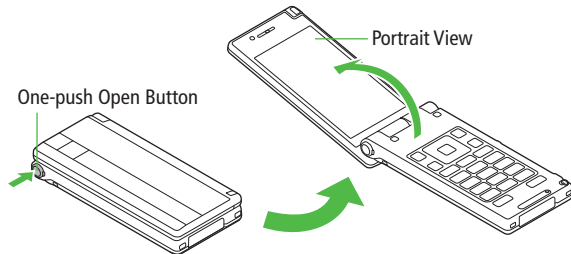

- Close handset manually. If handset does not close, open completely before closing handset again.
- Customize handset to answer/end calls, etc. when opening/closing handset (→ P.18-8, P.18-10).
- Handset may spring open. Be careful not to drop handset.

Horizontal Open Position

 - 1 Press **A** lightly
- 2 Flip open (as indicated by arrow)
Watch TV programs or use Messaging, S! Appli, Camera, etc. in Horizontal Open Position (Landscape View).

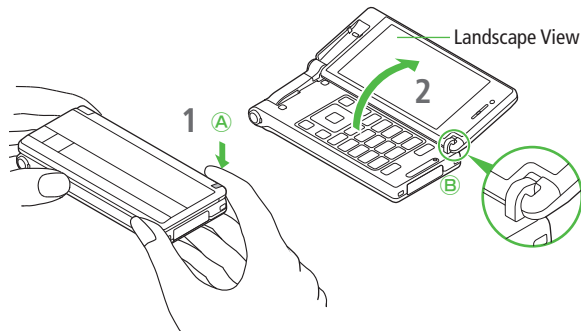






- Hook **B** should be intact. If hook is detached, close handset and try again.
Do not lift hinge portion **A** when opening handset.

Note



- If One-push Open Button is pressed in Horizontal Open Position, handset opens in Normal Position after it is closed.
- Before switching positions, be sure to completely close handset. Do not switch positions when handset is not fully closed; otherwise malfunction or damage may result.

 Key Operations

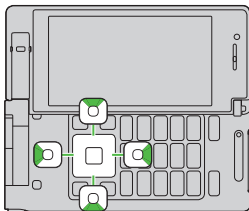- Key operations in Horizontal Open Position may differ from Normal Position.
- Multi Selector (   ) operations are described as pictured.



Settings Linked with Display Position



- Open handset in Horizontal Open Position to show Horizontal Open Menu while handset is in Standby ( P.1-20). Also, activate Digital TV or Camera automatically ( P.18-14).










Note




- Switching Normal Position to Horizontal Open Position may end active screen.



Key Operations in Standby

Press or press and hold (more than one second) a key in Standby to execute the following.

Key Operations		Normal Position (Portrait View)	Horizontal Open Position (Landscape View)
	Short Press	Initiate a call	—
	Long Press	Voice dial	—
	Short Press	Show/hide widgets	
	Long Press (2 + sec)	Turn off power	


Key Operations		Normal Position (Portrait View)	Horizontal Open Position (Landscape View)
	Short Press	Open Main Menu	Open Horizontal Open Menu
	Long Press	Activate/cancel Keyguard	
	Short Press	Play Answer Phone	—
	Long Press	Activate/cancel Answer Phone	—
	Short Press	Activate Camera	
	Long Press	Activate Video Camera	
	Short Press	Activate Digital TV	
	Long Press	Activate/cancel IC Card Lock	
	Short Press	Open Messaging Menu	
	Long Press	Open S! Mail Composition window	
	Short Press	Access Yahoo! Keitai	
	Long Press	Open Yahoo! Keitai Menu	
	Short Press	Open Widget List	
	Long Press	Activate Music Player	
	Short Press	—	—
	Long Press	Toggle Wi-Fi on/off	
	Short Press	Select widgets, Event Indicators, shortcuts, status indicators or S! Quick News ticker.	—
	Long Press	Activate slideshow	—

Key Operations		Normal Position (Portrait View)	Horizontal Open Position (Landscape View)
	Short Press	Open Phone Book search window	—
	Long Press	Open Phone Book entry window	—
	Short Press	Open Incoming Call Logs	Select widgets, Event Indicators or S! Quick News ticker.
	Long Press	Open Received address logs	Activate Slideshow
	Short Press	Open Redial logs	—
	Long Press	Open Sent address logs	—
①	Short Press	Enter "1"	—
	Long Press	Open Phone Book page "あ"	—
②	Short Press	Enter "2"	—
	Long Press	Open Phone Book page "か"	—
③	Short Press	Enter "3"	—
	Long Press	Open Phone Book page "さ"	—
④	Short Press	Enter "4"	—
	Long Press	Open Phone Book page "た"	—
⑤	Short Press	Enter "5"	—
	Long Press	Open Phone Book page "な"	Turn on/off Back Light
⑥	Short Press	Enter "6"	—
	Long Press	Open Phone Book page "は"	—
⑦	Short Press	Enter "7"	—
	Long Press	Open Phone Book page "ま"	—

Key Operations		Normal Position (Portrait View)	Horizontal Open Position (Landscape View)
⑧	Short Press	Enter "8"	—
	Long Press	Open Phone Book page "や"	Activate/cancel View Blind
⑨	Short Press	Enter "9"	—
	Long Press	Open Phone Book page "ら"	—
⑩	Short Press	Enter "0"	—
	Long Press	Open Phone Book page "わ"	—
✳	Short Press	Enter "✳"	—
	Long Press	Activate/Cancel Driving Mode	
#	Short Press	Enter "#"	—
	Long Press	Activate/Cancel Manner Mode	
▲	Short Press	Increase earpiece volume	—
	Long Press		—
▼	Short Press	Decrease earpiece volume	—
	Long Press		—
	Short Press	—	
	Long Press	Activate Camera	
	Short Press	Activate TASK MENU	
	Long Press	Open Pictures folder	

Display

 Display Indicators

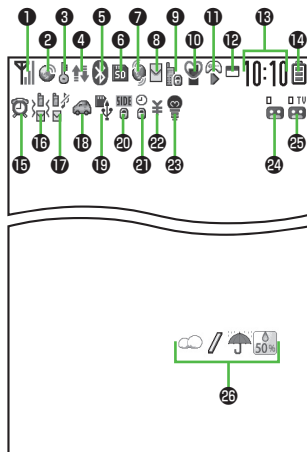

- 15 - 25 are Status Indicators. Access functions from respective indicators (➔P.1-22).

1 Signal Strength

📶 Strong 📶 Moderate 📶 Weak 📶 Low

📶 Emission OFF Mode Active

📶 Out-of-Range

2 Packet Transmission in Progress (PC)

📶 Dial-up Connection Established on PC

📶 3G/GSM Packet Transmitting

📶 Operator (set for Select Operator) Out-of-Range

📶 3G/GSM 3G/GSM Packet Transmission Available*

📶 3G/GSM 3G/GSM Packet Transmission Unavailable*
* Appears only while abroad

📶 Wi-Fi On (Out-of-Range)

📶 Wi-Fi On (In-Range)

📶 Wi-Fi Connection

3 Secure Content

📶 S! Addressbook Back-up Synchronizing

📶 Auto Sync Settings Active

4 PC Site Browser Active

📶 Infrared Transmission

📶 IC Transmission

📶 USB Cable Connected

📶 Keypad Active

5 Software Update (Notification/Updating/Result)

📶 1416 Voice Mail

📶 (Blue) Bluetooth® Device Connected

📶 (Black) Bluetooth® Power Save Mode

6 microSD Card

📶 Inserted

📶 Reading/Writing Data

📶 Write-protected

📶 Unsupported

📶 Unusable

📶 USB Cable (Not Included) Connected

📶 microSD Mode

📶 MTP Mode

📶 During Call

📶 During Video Call

📶 During Voice Call

- 7 Positioning
- New S! Quick News Information
- New S! Information Channel info
- 8 Unsent Message
- Unread Message
- Incoming Mail Memory Full (Handset)
- 9 **Security**
 - Privacy Key Lock Active
 - Personal Data Lock Active
 - Key Pad Dial Lock Active
 - IC Card Lock Active
 - Secret Mode and Secret Data Only Active
 - Key Pad Dial Lock, Secret Mode and Secret Data Only Active
 - Key Pad Dial Lock and Personal Data Lock Active
 - Secret Mode, Secret Data Only and IC Card Lock Active
 - Privacy Key Lock and IC Card Lock Active
 - Personal Data Lock and IC Card Lock Active
 - Key Pad Dial Lock and IC Card Lock Active
 - Key Pad Dial Lock, Secret Mode, Secret Data Only and IC Card Lock Active

 
- Key Pad Dial Lock, Personal Data Lock and IC Card Lock Active
- 10 Manner Mode Active
- Manner Mode (set in User Mode)
- 11 **S! Appli**
 - / Active/Paused
 - Auto Start Request Received
 - / Start Request Received while Active/ Paused
- 12 One Function Active
- Multiple Functions Active
- Digital TV Active
- Recording TV Program
- During Timer Recording
- TV Recording Paused
- Music Playback
- Music Paused
- 13 Time
- 14 **Battery Level**
 - → → (Red)
- 15 (Red) Alarm Set (Today)
- (Blue) Alarm Set (After Today)
- 16 Vibration Active (Incoming Call)
- Vibration Active (Incoming Message)

- Vibration Active (Incoming Call/Message)
- 17 Incoming Call Ringtone Disabled
- Incoming Message Ringtone Disabled
- Incoming Call/Message Ringtone Disabled
- 18 Driving Mode
- 19 microSD Mode set for USB Mode
- MTP Mode set for USB Mode
- 20 Side Key Disabled when Handset Closed
- 21 Timer Lock at Close Active
- 22 Call Charge Reached Upper Limit
- 23 Back Light OFF
- View Blind ON
- Back Light OFF; View Blind ON
- 24 Answer Phone Active (Number of Answer Phone Messages (Voice Calls))
- 25 Answer Phone Active (Number of Answer Phone Messages (Video Calls))
- 26 Weather Indicator (☞P.8-3)

Note

- To show indicator description: **Main Menu**
 - ▶ **Settings** ▶ **Display Settings**
 - ▶ **Describe Icons** ▶ to highlight an indicator

External Display Indicators

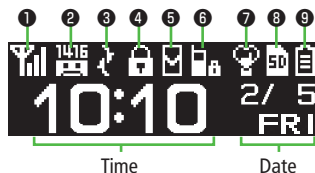


Time

Date

⏏ (Right side)



Time

- Upon closing handset, External Display illuminates for 15 seconds.
- Each  press toggles Incoming Call Logs with missed calls.


1 Signal Strength

 Strong  Moderate  Weak  Low

 Offline Mode

 Out-of-Range

2 Voice Mail

 Software Update (Notification/Updating/Result)

 Bluetooth® Device Connected

 Bluetooth® Power Save Mode

3 S! Addressbook Back-up Synchronizing

4 Keyguard Setting Active

5 Unsent Message

 Unread Message

 Incoming Mail Memory Full


6 Privacy Key Lock Active


 Personal Data Lock Active


 Key Pad Dial Lock Active

 IC Card Lock Active

 Secret Mode and Secret Data Only Active

 Key Pad Dial Lock, Secret Mode and Secret Data Only Active


 Key Pad Dial Lock and Personal Data Lock Active


 Secret Mode, Secret Data Only and IC Card Lock Active

 Privacy Key Lock and IC Card Lock Active

 Personal Data Lock and IC Card Lock Active

 Key Pad Dial Lock and IC Card Lock Active

 Key Pad Dial Lock, Secret Mode, Secret Data Only and IC Card Lock Active

 Key Pad Dial Lock, Personal Data Lock and IC Card Lock Active

7 Manner Mode Active

 Manner Mode (set in User Mode) Active

8 microSD Card

 Inserted

 Reading/Writing Data

 Write-protected

 Unsupported

USB Cable (Not Included) Connected

 microSD Mode

 MTP Mode

9 Battery Level



About Battery


Before Charging

Charge battery before use or after a period of disuse (AC Charger sold separately).

Charging Time & Operating Time Estimates

		3G	GSM
Charging Time		130 minutes*	
Standby Time		650 hours*	370 hours*
Talk Time	Voice Call	220 minutes*	230 minutes*
	Video Call	140 minutes*	–

* Approximate value

- 3G Mode/GSM Mode:  P.2-10
- Charging time is an average measured within temperatures of 5°C to 35°C.
- Talk Time is an average measured with a new, fully charged battery, with stable signals.
- Standby Time is an average measured with a new, fully charged battery, with handset closed without calls or operations, in Standby with stable signals.
- Talk Time and Standby Time may vary by environment (battery status, temperature, etc.).

About Battery

- Clean handset, battery & charger with dry cotton swab.
- Replace battery if operating time shortens noticeably.
- Charge battery at least once every six months.
- Use a case when carrying battery separately.

Charging

- Battery must be installed to charge it.
- It may take longer for charging when handset is on.
- Move charger away from TV/radio if interference occurs.

Battery Time



- Using handset in the following conditions may shorten battery time.
 - Extreme temperatures
 - Handset/battery/AC Charger terminals are dirty.
 - Weak signal/out-of-range
 - Handset is left mid-operation (not in Standby)
 - Playing Music Player, Wi-Fi is on, TV or S! Appli is active, etc.
- Extending battery time


Example:

 - Turn Back Light Time **OFF** or set a shorter time for Power Saver mode (☞P.18-5)
 - Select **OFF** for Key Tone (☞P.18-3)

When Battery Runs Out

Unless a Call is in Progress

A message appears and warning tone sounds for 10 seconds. Handset power turns off automatically after one minute; press any key except  or  to cancel warning tone manually. Charge or replace battery.

- If Manner Mode is active, nothing sounds.
- To stop warning tone, press  (MULTI) while handset is closed.

 
During a Call

A message appears and warning tone sounds via Earpiece or Speaker. After 20 seconds, call ends and handset shuts down in one minute. Charge or replace battery.

Battery Strength Indicator

- Battery Strength indicator changes as remaining usage time decreases. Charge or replace battery when battery level is low (☞P.1-10) or a message appears on Display.

Battery Voltage

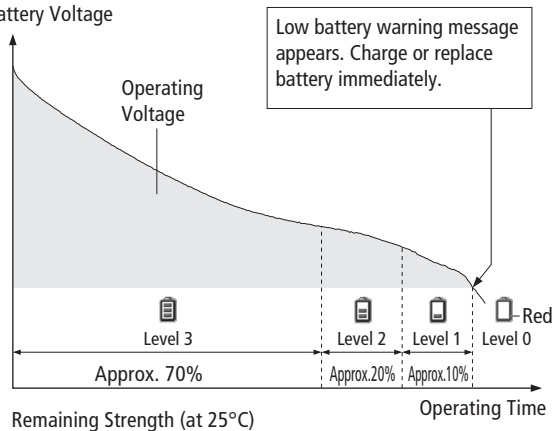


Note

- Alternatively, check battery level from **Main Menu ▶ Settings ▶ Phone Settings ▶ Battery ▶ Battery Level**

Battery Installation


- Always turn off handset power before removing battery.

 1 Press and slide to remove cover

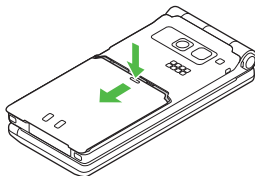


2 Insert Battery

 Align battery contacts with handset pins.

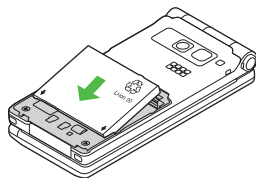


Remove Battery

 Lift battery out as shown.

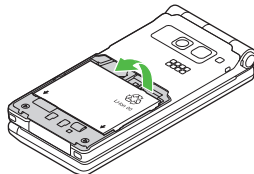

3 Replace battery cover

 Cover should click into place.

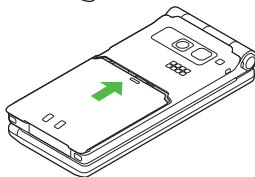

Note

- Lithium-ion batteries are valuable and recyclable resources.
 - Recycle used lithium-ion battery at a shop displaying the symbol shown to the right.
 - To avoid fire or electric shock, do not:
 - Short-circuit battery
 - Disassemble battery

 


Li-ion 00

Charging Battery

Use only specified AC Charger (sold separately).

Charging Time: Approximately 130 minutes

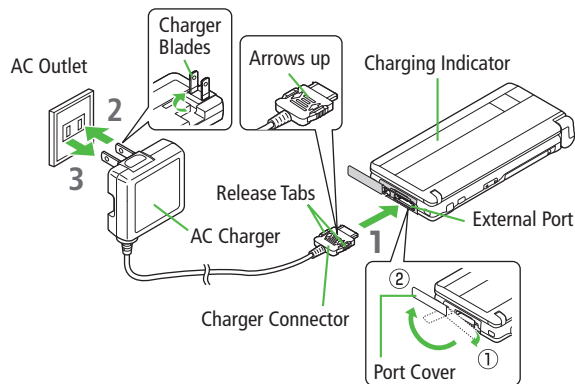

1 Connect AC Charger to handset

Insert Charger Connector (arrows up) into External Port.

2 Plug AC Charger into AC Outlet

Extend Charger Blades.

Charging Indicator illuminates and charging starts.

When charging is complete, Charging Indicator goes out.

- When Charging Indicator flashes, remove AC Charger and battery from handset then attach them again.
- Charge Sound is heard when charging starts/ends. When handset is turned off or in Manner Mode, nothing sounds.

3 When charging is complete, unplug AC Charger, then disconnect handset

Squeeze Release Tabs to remove Charger Connector, and replace Port Cover.

Note

- For details, read AC Charger instructions.
- Alternatively, charge battery by using Desktop Holder (not included).

Tip

- Charging Start/End Tone Off (P.18-3)

Handset Power On/Off

1 Press and hold

Start-up window appears and handset enters Standby.

- Enter PIN if PIN Authentication is ON (☞P.12-2).

2 Press for 2+ seconds

Handset shuts down.

- Do not turn on handset immediately after turning off. Wait a few seconds.



Standby

■ Initial Setup




The first time handset powers up and Initial setting window appears, select **YES** and set the following: (Each item can be set separately.)

Date & Time* (☞P.18-9)	Set date and time
Phone Password (☞P.12-2)	Enter 9999, and enter new Phone Password (4-8 digits)
Key Tone (☞P.18-3)	Select ON or OFF
Font Size (☞P.18-6)	Set Display font size all at once

* May be automatically set

■ View Information Messages





At time of purchase, information message is provided for your convenience.

-  to highlight an Event Indicator (☞P.1-24), then press 
-  → **Incoming Mail** → **Received** → Select a message
Widget appears in Standby after information message is viewed.

Note

- If **USIM not inserted After power-off Insert USIM** appears, clean and properly re-insert USIM Card then restart handset.
- When handset is open, Display turns off after a period of inactivity.

Retrieving Network Information

When ,  or  is pressed for the first time in Standby, handset initiates Network Information retrieval;  to retrieve it.

- Update Network Information to use messaging, Internet, etc.
- Update Network Information manually: **Main Menu** ► **Settings** ► **Connectivity** ► **Retrieve NW Info** ► **YES**

Tip

Settings

- Change Wallpaper ● Add Calendar to Wallpaper
- Change Wallpaper Randomly (☞P.18-3)
- Change Start-up Window (☞P.18-4)

Manner Mode

Minding Mobile Manners

Please use your handset responsibly. Use these basic tips as a guide. Inappropriate handset use can be both dangerous and bothersome. Please take care not to disturb others when using your handset. Adjust handset use according to your surroundings.

- Turn it off in theaters, museums and other places where silence is the norm.
- Refrain from use in restaurants, lobbies, elevators, etc.
- Observe signs and instructions regarding handset use aboard trains, etc.
- Refrain from use that interrupts the flow of pedestrian or vehicle traffic.

Manner-related Features

Manner Mode (☞P.18-2)	Press Manner key to mute handset tones and activate vibration for incoming transmissions.
Vibration Mode (☞P.18-2)	Activate in public places, meetings, etc. for silent call/message alerts.
Ringer Volume (☞P.18-2)	Mute call/message tones.
Offline Mode (☞P.1-19)	Suspend all handset transmissions.
Answer Phone (☞P.2-15)	Use to handle incoming calls when inappropriate/unsafe to answer.
Driving Mode (☞P.1-19)	While driving, send a voice message informing the caller that you cannot answer the call (Handset does not ring.).

 
Activating Manner Mode

Press one key to mute handset tones and activate vibration for incoming transmissions.

- Manner Mode settings can be changed (☞P.18-7).
- When Manner Mode is active, 📵 appears.

1 In Standby, press and hold (#)

- To cancel: Press and hold (#) again
- To activate/cancel while handset is closed: Press and hold ☑



Note


- Shutter click and incoming tone via Earphone (**Level 1**) sound even in Manner Mode.
- When activating Music Player or Digital TV in Manner Mode, confirmation appears asking whether to cancel Manner Mode.
- When **Prefer manner mode** is **OFF** (☞P.13-7), Alarm sounds even if Manner Mode is active.

Tip

- **Settings** ● Set Manner Mode Type (☞P.18-7)

Activating Offline Mode

Temporarily suspend all handset transmissions; when active, all calls/messages and incoming information are blocked.

- When Offline Mode is active,  appears.

Main Menu ▶ Settings ▶ Call Settings ▶ Offline Mode

1 YES

- To cancel: Follow the same steps.

Note

- Offline Mode disables Bluetooth®/Wi-Fi/Infrared/IC transmissions. Bluetooth® handsfree devices cannot be used either.

Activating Driving Mode

Handset does not ring for incoming calls. Voice guidance informs the caller you are unavailable and handset records voice/video messages.

- When Driving Mode is active,  appears.

1 In Standby, press and hold

 
- Press and hold  again to cancel.

Note

- When Answer Phone memory is full, incoming calls are rejected.
- Ringtone sounds through Earphone Microphone when connected.


Handset Menus

Main Menu

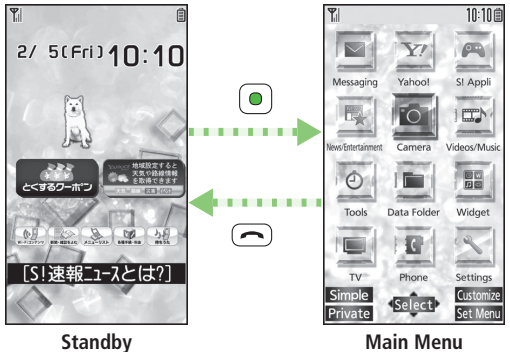


1 In Standby,

Main Menu appears.

- To change Main Menu theme:  [Set Menu] → Select a theme

2 to highlight an icon →













Selected function menu appears.

- To return to Standby: 

Note

- Standby window returns after 15 seconds of inactivity in Main Menu.

Main Menu Icons


<p>Messaging</p>  <p>Create new/view received messages</p>	<p>Yahoo! (Yahoo! Keitai)</p>  <p>Enjoy Mobile Net & PC Site browsing...</p>	<p>S! Appli</p>  <p>Download, set and use S! Appli</p>
<p>News/Entertainment</p>  <p>Use S! Quick News or E-books</p>	<p>Camera</p>  <p>Capture images or record videos</p>	<p>Videos/Music</p>  <p>Play music, videos, etc.</p>
<p>Tools</p>  <p>Set Alarm or save Calendar entries...</p>	<p>Data Folder</p>  <p>Open files saved on handset/microSD Card</p>	<p>Widget (Mobile Widget)</p>  <p>Use Mobile Widget</p>
<p>TV</p>  <p>View TV or record/timer-record programs</p>	<p>Phone</p>  <p>Access Phone Book, save contact information...</p>	<p>Settings</p>  <p>Adjust/customize handset settings</p>

Tip


Settings

- Change Display Color Scheme ● Change Main Menu Icons
- Change Main Menu Background (P.18-4)

Horizontal Open Menu

In Horizontal Open Position, press  in Standby to access Horizontal Open Menu. From Horizontal Open Menu, access functions available in Horizontal Open Position.



- Default Horizontal Open Menu varies by handset color (P.18-28).
- Press  to go from Horizontal Open Menu to Standby.
- Set handset to open to Horizontal Open Menu, Digital TV or Camera for Horizontal Open Position (Horizontal View: P.18-14).
- Some operations and menu items in Horizontal Open Menu differ from those that appear in this guide.

Menu Numbers

 
Use keypad to select functions or menu items.

Unnumbered Menu Items

When numbers do not appear, select items as shown.

Main Menu

(#) to select **Settings** from Main Menu

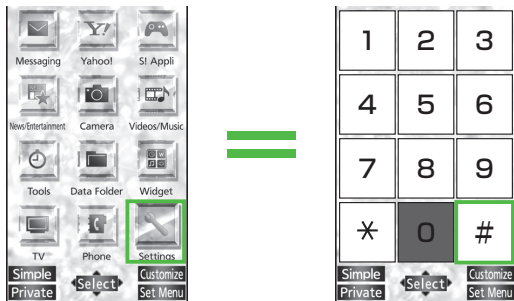

- Press (0) to show Account Details. To open Phone top menu, select **Phone** by pressing

 
When Menu Icons is Set to Basic or Customize

Menus cannot be selected from Main Menu by keypad.

Open menu items by entering specific number in Main Menu (Quick Open Menu: P.19-14).


Horizontal Open Menu

(4) to select **Data Folder**

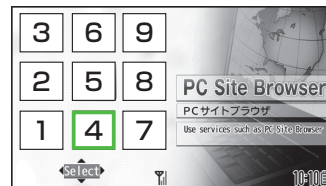

Top Menu Opened from Main Menu

 (2) to select **Display Settings**

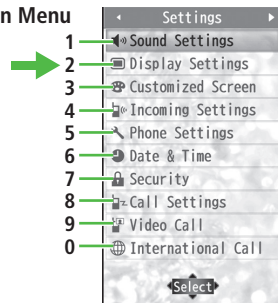


Example: Settings Top Menu

Numbered Menu Items

Press key corresponding to menu number to select a menu.

 In Display Settings (from **Settings** Top Menu), (5) to select **Menu Icons**

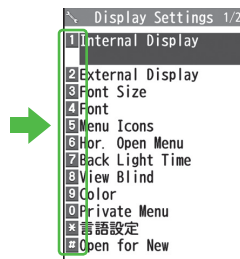

Accessing Functions/Info from Standby

Select indicators/ticker in Standby to access functions and information.

Available Items

- Event Indicator (☞P.1-24)
- Mobile Widget (☞P.7-2)
- S! Quick News (☞P.8-4)
- S! Information Channel/Weather (☞P.8-2)
- Shortcuts (☞P.1-25)
- Status Indicators (☞P.1-10)

1 In Standby, (☞)

Pointer (☞) appears.

- Press (☞) or (☞) to return to Standby (Pointer disappears).

2 Use (☞) to move pointer (☞) to an indicator, icon or ticker →

(☞) [Select]

Indicator, icon or ticker is selected. Function name appears.

- Press and hold (☞) to move pointer (☞) continuously
- To cancel selection: (☞) or (☞)

3 (☞) [Select]

Function or information appears.

When Widgets Do Not Appear

Pointer (☞) does not appear. After Step 1, use (☞) to highlight an item

→ (☞) [Select] to show function or information

- To show/hide widgets: (☞)

Using Pointer (☞)

> In Standby, (☞) → (☞) [Menu] → Select an item (See below)



Item	Operation/Description
to widgets list	Open Widget List
Yahoo!JAPAN Login	Open Yahoo! JAPAN log in window
Stand-by Display	Change Standby wallpaper > Select a folder → Select an image

Touchpad

Use Touchpad to select items, move cursor or scroll pages.

- Touchpad is also available in Horizontal Open Position.
- Touchpad is deactivated in Standby, in text entry window, etc.

 
Notes

- Handle Touchpad gently with fingertip. Do not press with force or use sharp objects (e.g. finger nail, pen, etc.).
- Do not operate Touchpad with gloved fingers or place objects on Touchpad while operating.
- Do not affix any stickers on Touchpad.

Turning Touchpad ON/OFF



Touchpad Indicators illuminate.

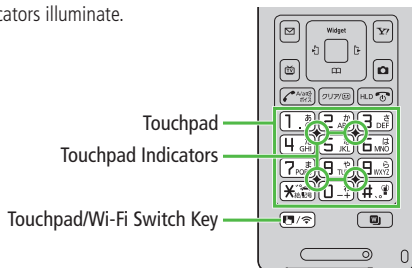


Note


- Touchpad is enabled when PC Site Browser or Mobile Widget activates (To disable automatic activation: P.18-7).
- Touchpad is unavailable in the following situations: In Standby; in text entry window; when making/receiving a Voice Call; when Alarm activates. Touchpad becomes available again when compatible functions are activated.
- Even when Touchpad Switch Key is set to **Touchpad+Keys**, Keypad is disabled while pointer appears on a website.
- Touchpad may be disabled depending on functions or websites. Use or .

Basic Operations

<p>Tap</p>	<p>Tap key lightly to set/select items (same operation as .</p>	
<p>Slide</p>	<p>Slide finger across Touchpad to scroll menus (same operation as .</p>	

Slide and Hold

Slide up, down, left or right and hold to continue scrolling (same operation as pressing down on ).

 


Operation while Website is Open

Slide

Slide up, down, left, right or diagonally to scroll pages, etc.

- Also available in Horizontal Open Position.

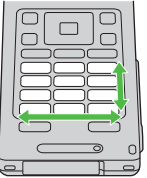

Tip

- Settings**
- Change Touchpad Speed
 - Adjust Tap Sensitivity
 - Scroll Setting
 - Set Touchpad to Activate for Web Browser/Mobile Widget
 - Adjust Touchpad Sensitivity
 - Deactivate Keypad while Touchpad is On (P.18-7)
 - Change Pointer (Scroll) Speed (P.18-24)

 
Standby Options & Event Indicators

Check various indicators and information in Standby.

- To access functions/information from indicators: P.1-22

Event Indicators

Event Indicators appear for missed calls, messages, etc.

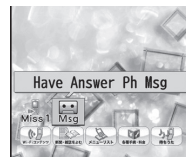

Events

Missed calls	Missed calls (P.2-13)
New message	New messages (P.14-11)
Have Answer Ph Msg	Recorded caller messages (P.2-15)
Voice mail	New Voice Mail (P.2-19)
Had incoming call(s)	If Missed Call Notification is active, indicator appears for calls missed while handset is off, out-of-range, engaged, etc. (P.2-19)
New S! Info Channel	S! Information Channel (received updates) (P.8-2)
New Weather	Weather Indicator (received updates) (P.8-3)

Other Information

- Missed alarm (P.13-6)
- S! Appli startup notice (P.16-3)
- USB Mode setting (P.11-17)
- Missed location information request
- Auto location information notice (P.17-3)
- Timer (P.5-13)
- Content Key (P.10-5)
- Software Update result (P.19-13)

Mobile Widget (Japanese)

Paste various widgets to Standby to access information or tools from Standby.

- Mobile Widget: ☞P.7-2
- To show/hide widgets: ☞



S! Quick News (Japanese)

By default, S! Quick News appears at bottom of Display.

- S! Quick News: ☞P.8-4
- Show/hide S! Quick News: ☞P.18-19



Shortcuts

Access frequently used functions from Standby.

- Following shortcuts are set by default:
Wi-Fi コンテンツ (Wi-Fi Contents)*
新聞・雑誌をよむ (News/Magazines)*
メニューリスト (Menu List)*
各種手続き・料金 (Manage Account/Fees)*
待ちうた (Machi-Uta®)*

* Requires network connection. Available in Japanese only.



Shortcuts

Adding Shortcuts




- Some functions are not available for shortcuts.


- 1 Open a function, ☞[Menu] →
Add shortcut icon → YES

Scroll Shortcuts

Five shortcuts appear at a time. To scroll more shortcuts, first press ☞ to hide widgets, then press ☞ and use ☞ to scroll shortcuts.

Editing/Deleting Shortcuts

- 1 In Standby,  →  to move pointer → Highlight a shortcut
- 2  [Menu] → Select an item (See below)

Item	Operation/Description
Edit title	> Edit title
Sort	> Select an item → Select a target →  [Finish] → YES
Delete this	> YES
Delete all	> YES

Customizing User Interface

Customized Screen

Download and set Customized Screen to personalize user interface, ringtone, etc., to a selected theme.

Downloading Customized Screen

Main Menu ► Data Folder ► Customized Screen





1 Customized Screen → YES

List of websites appears.

Select a website and follow onscreen instructions.

- To manage Customized Screen applications in Data Folder:  P.10-10

Setting Customized Screen

- 1 In Standby,  →  [Customize]
→ *Customized Screen*
- 2 Highlight a theme →  [Set]
 - To toggle thumbnail and list:  [Change]
- 3 **YES**

■ Cancel Customized Screen

> In Standby,  →  → *Release Settings*

Note

- Customized Screen cannot be set when battery is low.
- Other functions are not available while switching. For some seconds after switching is complete, all calls/messages may be blocked.
- Alternatively, **Main Menu ► Settings ► Customized Screen**
- When Simple menu is active, Customized Screen settings are not reflected. To reflect settings, cancel Simple menu.
- When Customized Screen cannot be canceled, enter **6368##** in Standby → *Release Settings* → **YES**

Changing Display Font

Change Display font. Fonts can also be downloaded.

Downloading Fonts

Main Menu ► Settings ► Display Settings ► Font

- 1 **Download Font** → **YES**

Follow onscreen instructions.

- For details on Font folder (Data Folder):  P.10-10

Note

- While Personal Data Lock is set, fonts cannot be downloaded.

Changing Font

Main Menu ► Settings ► Display Settings ► Font




- 1 Select a folder → Highlight a font →  [Set]

 
Private Menu

Save frequently used functions in Private Menu.

- Up to 12 items can be saved.
- Change preset functions as needed.



Opening Private Menu

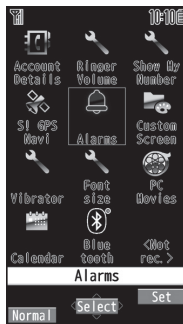- In Standby,  →  [Private] Private Menu appears.
 - To return to Main Menu:  [Normal]
- Select a menu







Private Menu Window


Change Private Menu Background

- > After Step 1,  [Set] →  [Menu] → *Change BG image* → Select a folder → Select an image


Customizing Private Menu

- In Standby,  →  [Private] →  [Set]
- Highlight a target →  [Menu] → *Add to menu*
- Select an item

Cancel Functions

- > In Step 2, (highlight a function →  [Menu]) → *Release this* or *Release all* → YES

Reset Private Menu

- > In Step 2,  [Menu] → *Reset menu* → YES



Private Menu Setting Window

Adding Shortcuts

- In Standby,  →  [Private] →  [Set]
-  [Menu] → *Add shortcut icon* → YES

Note

- Alternatively, open Private Menu setting window from **Main Menu** ► **Settings** ► **Display Settings** ► **Private Menu**

 
Simple Menu

Activate Simple menu to limit menu options to basic ones.

- Handset is limited to basic operations (☞P.1-30).



Normal Mode Window

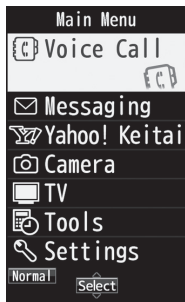

Simple Menu Window

Activating Simple Menu

- 1 In Standby, → [Simple] → YES
- 2 YES or NO
 - Select YES to set all items in Font Size (☞P.18-6) to Large.
 - To open Simple menu: in Standby.

Cancel Simple Menu

- > In Standby, → [Normal] → YES

Note

- Turning off the power does not cancel Simple menu.
- Widgets and S! Quick News do not appear in Standby while Simple menu is active. Customized Screen setting is canceled.

Simple Menu

Simple Menu	Page
Voice Call	
Outgoing Log	2-13
Incoming Log	2-13
Phone Book	4-6
Create New Phone Book	4-3
Answer Phone	2-15
Account Details	1-34
Messaging	
Incoming Mail	14-16
Create New	14-4
Retrieve New	14-15
Drafts	14-16
Sent Messages	14-16
Create New SMS	14-7
Yahoo! Keitai	
Yahoo! Keitai	15-2
Bookmarks	15-8
Saved Pages	15-8
Enter URL	15-4

Simple Menu	Page
Camera	
Take Pictures	6-6
Shoot Videos	6-7
See Pictures	6-12
Watch Videos	6-12
TV	
Watch TV	5-5
Timer Recording	5-13
Channel Setting	5-4
Tools	
Data Folder	10-2
Alarms	13-6
Calendar	13-2
Calculator	13-8
Notepad	13-8
Receive via Infrared	11-2

Simple Menu	Page
Settings	
Ringtones/Volume	1-18 18-2
Screen/Fonts	18-3 to 18-6
Call Time & Cost	18-9
Date & Time	18-9
Security	12-2 13-12 19-12
Call Settings	2-17 to 2-21

Using Videos/Music

 
Download videos, music, newspapers or magazines from websites. Play back downloaded files from Videos/Music menu.

- Subscription to Keitai Wi-Fi service may be required for some content.
- Make sure to check information before using sites.

Main Menu ► Videos/Music

1 Select an item

Follow onscreen instructions.

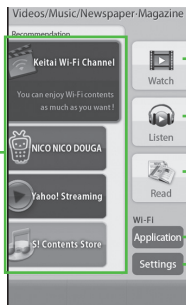

Open Videos folder
(☞P.10-13)

Activate Music Player
(☞P.9-6)

Activate Digital Media Viewer
(☞P.8-6)

Access My SoftBank for
Keitai Wi-Fi subscription

Open Wi-Fi setting window
(☞P.11-11)

Connect to respective sites

Menu Item Update

Confirmation may appear when Videos/Music menu opens. Select **YES** to update. If **NO** is selected, confirmation keeps appearing.

Note

- Alternatively, **Main Menu ► Settings ► Phone Settings ► Videos/Music Updates**

Passwords

Phone Password, Center Access Code and Security Code are needed for handset use.

Phone Password

<Default> 9999

4 to 8-digit number required to use/change some handset functions.

- Enter number within 15 seconds.
- _ appears for each digit entered.
- Phone Password can be changed on handset (☞P.12-2).

Center Access Code

4-digit number specified at initial subscription; required to access Voice Mail via landlines or subscribe to fee-based information.

- Do not attempt to change Center Access Code. For details, contact SoftBank Mobile Customer Center, General Information (☞P.19-34).

Security Code

4-digit number specified at initial subscription, required to restrict handset services (☞P.2-20).

- Enter number within 15 seconds.
- If entered incorrectly three times, Security Code settings lock; Security Code & Center Access Code must be changed. Reach SoftBank Mobile Customer Center, General Information (☞P.19-34) for details.
- Security Code can be changed on handset (☞P.2-21).

Note


- Write down Phone Password, Center Access Code and Security Code. Do not reveal Phone Password, Center Access Code and Security Code. SoftBank is not liable for misuse or damages.
- For details, contact SoftBank Mobile Customer Center, General Information (☞P.19-34).

Multi Task

Activate up to three functions from four different groups at the same time.

Group	Function
① Messaging Group	Messaging
② Yahoo! Keitai/S! Appli Group	Yahoo! Keitai/S! Appli/News/Entertainment
③ Tools Group	Camera/Tools/Data Folder/TV/Phone/Mobile Widget
④ Settings Group	Settings

 - [▼] appears above the icons of an active group.
- [] appears for single function in use; [] for multiple functions in use.

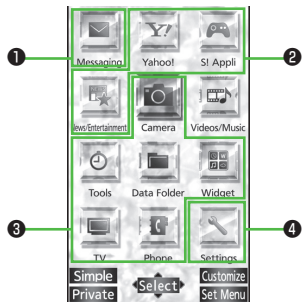

Note

- Transmission fees apply for calls/packet transmissions while multitasking.

 
Tip

- Other Functions while Watching TV (P.5-8)
- Background Music (P.9-7)

Activating Another Function

Activate another function from a different group. Multi Task is unavailable when Simple menu is active.

- 1 [] (MULTI) → *Open Menu* →
Select a function

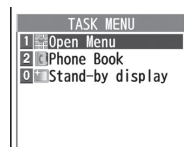

TASK MENU Window

Note

- If another function is selected from same group, confirmation appears. Select **YES** to cancel current function and start a new function.

Ending Current Functions

- 1 [] (MULTI) → [END] → **YES**

View Blind

Activate View Blind to protect Display from prying eyes.

Main Menu ► Settings ► Display Settings ► View Blind

1 *ON*

2 Select a level



- Set level 1-3 (Level 3 is the highest level).

Note

- Alternatively, press and hold (8) to activate/cancel. Previously selected level takes priority.
- View Blind is not activated/deactivated when: In Standby (Normal Position only); S! Appli is active; Privacy key Lock is active; All Reset is active; phone number is being entered.

My Number

Confirm handset phone number in Account Details (P.4-12). Also confirm data saved in Account Details: name, mail address, etc.

- 1 In Standby,  → 
Account Details appears.

