4

Phone Book

Overview	4-2
Saving to Phone Book	4-3
Phone Book Entry Items	4-3
Create New Entry	4-3
Other Ways to Add New Entries	4-5
Setting Groups	4-6
Searching/Using Phone Book	4-6
Making Calls from Phone Book	
Using Phone Book	4-7
Managing Phone Book	4-9
Editing Phone Book Entries	
Deleting Phone Book Entries	4-9
Copying/Deleting Phone Book Data	4-9
Phone Book Memory Status	4-9
S! Addressbook Back-up	4-10
Manual Synchronization	4-11
Auto Synchronization	4-11
Viewing Sync Log	4-11
Account Details	4-12
Editing Account Details	4-12
Account Details Functions	4-12
Voice Dial	4-13
Adding Entries to Voice Dial	4-13
Searching Entries by Voice Dial	4-13


Overview

Save frequently used phone numbers and mail addresses to Phone Book.

Supplement phone numbers and mail addresses with birthday, street address, an image or notes.





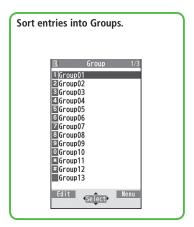

Note

• Back-up Important Information

Keep a separate copy of Phone Book entry information. When battery is exhausted or removed for extended periods, entries may be lost. Handset damage may also affect data recovery. SoftBank is not liable for damages from lost/altered entries.

Tip

●Backing up to microSD Card (P.10-21)

Phone Book Entry Items

Save up to 1000 entries in handset Phone Book; 50 entries to USIM Card Phone Book

Available entry items are as follows.

	Phone Book Entry Items	Handset	USIM Card	
Bas	Name (Reading)	0	0	
Basic item	Group	19	10	
em	Phone number	5	2	
	Mail address	5	1	
	Address	0	_	
	Location information	0	_	
	Birthday	0	_	
	Memo	0	_	
	Image	100	_	
	Memory number	000 - 999	_	
lnc	Ringtone			
l≝.	Vibrator			
Incoming Settings	Notification Light			
eti.	Screen			
Sgr	Msg Ringtone		_	
	Msg Vibrator			
	Msg Notif. Light			
	Answer message			

○: Can be saved —: Cannot be saved

 Phone Book entries in USIM Card can also be used in another SoftBank handset

Create New Entry

Save new entries to handset or USIM Card Phone Book.

- When saving to USIM Card Phone Book, set Save Settings to USIM or Ask Every Time beforehand (P.18-12).
- Press and hold (2)
- Enter Last name → Enter First name
 - For handset Phone Book, of to switch Basic item and Incoming Settings tabs.



Select an item (See below)

Item	Operation/Description	
Last name	Save last name. For USIM Card, enter both first name and last name together > Enter last name	
First name	Save first name > Enter first name	
Reading (Last/First)	Automatically entered when last/first name is entered. For USIM Card, both readings are entered together. To change reading, edit	

Handset Phone Book

Item	Operation/Description
Group	Categorize/search entries by group ➤ Select a group • Change group names or set ringtones for individual groups ((□→P.4-6).
Phone number	> Enter phone number (→ For handset, select an icon)
Mail address	 Enter mail address (→ For handset, select an icon) Save only phone number if mail address is "phone number@softbank.ne.jp".
Address	Save zip code, country/region, prefecture, city, number/street and additional information > Select an item → Enter each information → <i>Home</i> or <i>Office</i> → For entering other information, [∑][Return]
Location information	Identify handset location and save information. Also, save location record selected from location logs > Select an item • By position loc. → YES → Check information → ■ [Set] (To show information while positioning: When [Use] appears at lower right of display, press ☑ [OK]. To retry positioning: ☑ [Retry]) • From loc. history → Select a location record to save
Birthday	> Enter birthday
Memo	>Enter memo

Item	Operation/Description
Image	Save a still image to appear for incoming calls > Select an item
	· Select image → Select a folder → Select a file
	· Shoot image → Frame subject →
	$ \bigcirc [Record]/\bigcirc/\bigcirc(\triangle) \rightarrow \bigcirc [Save]/\bigcirc/\bigcirc(\triangle) $
	• Saved still image appears for an incoming call only when
	Phone Book Image (☐*P.18-8) is ON . If there is an image saved for Screen (☐*Below), the image
	preferentially appears.
Memory	> Enter memory number
number	Enter memory number
Ring tone	> Ring Tones → Select a type → Select a folder →
J	Select a ringtone
Vibrator	> Select vibrator → Select a pattern
Notification	> Select illumination → Select a pattern
Light	
Screen*	> SEL picture → Select a screen type → Select a folder → Select an image
	Saved still image appears for an incoming call whether
	Phone Book Image is ON or OFF. Phone Book
	Image setting applies only when still image is saved for Image .
Msg Ringtone	> Ring Tones → Select a type → Select a folder → Select a ringtone
Msg Vibrator	> Select vibrator → Select a pattern
Msg Notif.	> Select illumination → Select a pattern
Light	- Select a pattern
Answer	> Select answer message → Select a message
message	

[☑][Finish]

Other Ways to Add New Entries

Save currently displayed phone numbers, mail addresses, still images or location information to Phone Book. **Example: Saving Numbers from Incoming Call Logs**

- \triangleright \rightarrow Highlight a record \rightarrow \bigcirc [Menu] \rightarrow Add to Phone Book
- **New Entry New** → Enter details (🗁 Step 3 on P.4-3)

Add to Existing Entry

Add → Select entry → Enter other details (**⊈**Step 3 on P.4-3)

- When saving to USIM Card, *Overwrite* appears instead of *Add*.
- When complete, \square [Finish] (\rightarrow *YES*)

Note

- Press [Y/][Menu] from a function. If *Add to Phone Book* appears, the information is savable to Phone Book. From a message window, select Add Address to save entries; from still image list/still image, select **Set display** → **Phone Book** to save entries.
- When saving new entries in Secret Mode or Secret Data Only, entries are saved to handset regardless of Save Settings.

Setting Groups

Sort entries by Group. Custom set ringtones/vibrators/ notifications per group.

Main Menu ▶ Phone ▶ Group

- appears for USIM Card Group.
- Highlight a group $\rightarrow \square$ [Edit] \rightarrow Select an item \rightarrow Set item
 - Enter group name for " Group name."
- When complete, ☑ [Finish]

Check Settings

- > Select a group entry, or [Yr] [Menu] → Check setting
- Settings cannot be checked in USIM Card Group Phone Book.

Reset Group Setting

> Highlight a group → [Y][Menu] → Reset group → YES

Note

- Custom settings unavailable for USIM Card Groups.
- Individually set ringtones are prioritized over those set for groups.

Searching/Using Phone Book

Making Calls from Phone Book

<Default> A-KA-SA-TA-NA/Reading



- Search Phone Book (See below)
 - To change search method: → Select a search method (See helow)

(366 861011)	
Search Method	Operation/Description
A-KA-SA-TA-	Search entries by katakana syllabary. Names saved in
NA/Reading	Roman characters are saved under the 英 tab.
	> Highlight a reading page
	 Alternatively, enter partial reading
Group	> Select a group
Memory	Enter memory (entry) number to search for an entry
Number*	> Enter a memory number
Name	>Enter partial name → 🔟
Phone	> Enter partial phone number → □
Number	· · ·
Mail Address	> Enter partial mail address → □
2-touch Dial*	Show entries with memory (entry) numbers 000 - 009

^{*} Handset Phone Book only

Select an entry





Voice Calls

Video Calls

Highlight a phone number → [V. Call]

Note

- To scroll through entries, enter nothing and press ((not available in Group or 2-touch Dial).
- If no matches are found in A-KA-SA-TA-NA/Reading or **Memory Number** method, entries closest to condition appear.
- Once a method is selected, same method retains.

Additional Search/Dialing Methods

Open Tab Assigned to Key from Standby	Press and hold ① – ⑨ Open search window assigned to key.
Enter Partial Number from Standby or during Call	Enter partial number → □
By Memory Number	\frown \rightarrow \square \rightarrow Enter a memory number
By Single-digit Memory Number (2-touch Dial)	Enter last digit (① – ⑨) of memory number 000-009 → Voice Call:

Using Phone Book

Use Phone Book Entries

> □ → Highlight an entry → [Menu] → Select an item (See below)

Item	Operation/Description
New	Add a new entry (From Step 2 on P.4-3)
Sort ¹	Change display order
	> Select an order
Send Ir data ²	(□ P.11-3)
IC	(<u>r</u> 3-P.11-5)
transmission ²	
Send to	(<u></u> P.11-9)
Bluetooth ²	
Copy to	Copy an entry to microSD Card
microSD ²	> YES
	 To view copied data: ☐ P.10-20
S! AB BkUp	(<u>C</u> _ F P.4-10)
Delete phone	> Select an item → Follow steps for selected option
book	(□ F.4-9)
Character	Switch character size to large/standard
size	
Set secret	Set/cancel Secret Mode for selected entry
mode/	 Entries saved as secret data appear only when
Release	Secret Mode or Secret Data Only is active
secret ²	(⊈ P.12-10).

¹ Available only when search method (☐ P.4-6) is set to *Name*,

Phone Number or Mail Address

² Not available in USIM Card Phone Book

■ Use Entry Details
> ② → Select an entry → ② [Menu] → Select an item (See below)

Item	Operation/Description
Notify caller ID	Show/hide caller ID (🗲 P.2-3)
Prefix numbers	Make a call using a prefix number (☐FP.2-3)
Int'l dial assist	Make an international call using Int'l Dial Assist > Select a country/region code → ✓
Restrictions*	Activate restrictions on specified entry (☐FP.12-12)
Edit Phone Book	Edit entry (13 From Step 3 on P.4-3)
Delete phone book	> Phone number or Delete this → YES • Item names vary by selected item: Mail address/Address/Location info/Birthday/ Memo/Image
Add shortcut icon	Create a shortcut (C₃P.1-25)
Compose message	Create a message to mail address of selected entry (☐From Step 4 on P.14-4)
Compose SMS	Create an SMS message to phone number of selected entry (△From Step 4 on P.14-7) • Message can be sent to SoftBank handsets only.
Send Ir data*	(□ P.11-3)
IC transmission*	(⊆ P.11-5)
Send to Bluetooth*	(⊆ F.11-9)

Item	Operation/Description
Copy to	Copy an entry to microSD Card
microSD*	> YES
	 To display copied data: ☐ P.10-20
S! AB BkUp	(□ F.4-10)
Copy names	Copy a name
Copy phone	Copy an item
numbers	 Item names vary by selected item.
	Copy mail add./Copy address/Copy location info/
	Copy birthday/Copy memo
Character	Switch character size to large/standard
size	
Set secret	Set/cancel Secret Mode for selected entry
mode/	 Entries saved as secret data appear only when
Release	Secret Mode or Secret Data Only is active
secret*	(△ FP.12-10).
Copy to USIM/	Copy an entry to USIM Card
Copy from	> YES
USIM	

^{*} Not available in USIM Card Phone Book

Note

• Insert entry details to a message (☐ P.3-6).

Managing Phone Book

Editing Phone Book Entries

- 1 \bigcirc \rightarrow Select an entry \rightarrow \bigcirc [Edit]
- **7** Edit (☐From Step 3 on P.4-3) → **YES**

Deleting Phone Book Entries

- Select an item (See below)

Item	Operation/Description
Delete this	> YES
Delete select	 Check entries to delete → ☑[Finish] → YES ☑[Menu] → Select all in tab*, Select all, Release all in tab* or Release all to check/uncheck all entries at a time
Delete all in tab*	> YES
Delete all	Delete all entries (handset/USIM Card Phone Book) including Secret Mode entries > Enter Phone Password → YES → YES

^{*} Available in *A-KA-SA-TA-NA/Reading*, *Group* and *Memory Number* search methods (\$\sumsymbol{L}^{\infty} P.4-6)

Copying/Deleting Phone Book Data

Main Menu ▶ Phone ▶ Memory Manager

- 1 Enter Phone Password
- **>** Select an item (See below)

Item	Operation/Description	
Сору	Copy data between handset/USIM Card Phone Book Copy to USIM or Copy from USIM	
Delete	Delete data in handset/USIM Card Phone Book > Phone or USIM	

- **3** *Phone Book* → Select an entry*
 - * To clear, repeat operation.

Phone Book Memory Status

Main Menu ► Phone ► Memory Status

View handset/USIM Card Phone Book memory status.

S! Addressbook Back-up

Back up Phone Book entries to S! Addressbook (network server); synchronize handset Phone Book with S! Addressbook; restore Phone Book after accidental loss/alteration.

Separate subscription is required for this service.

Notes

- Fully charge battery beforehand (appears).
- Transmission fees apply to synchronization, backup and restoration.
- Restore cancels these Phone Book settings: Ringtone, Vibrator, Notification Light, Picture, Answer message.
- Subscription to the service activates Auto Sync Settings during network
 information retrieval to back up edited Phone Book entries. Note that
 initiating network information retrieval activates Auto Sync Settings even
 when Auto Sync Settings are *OFF*. When contract is terminated, check if
 Auto Sync Settings are *OFF* (\$\subseteq\$P.4-11).
- S! Addressbook is deleted upon contract termination.
- Addresses saved in Address field on handset Phone Book are saved to building name field in S! Addressbook.
- When number of characters saved in S! Addressbook exceeds maximum number of characters savable on handset Phone Book, excess characters do not appear on handset Phone Book.

Synchronization/Back-up/Restoration

- Be careful of back-up/restoration timing or selecting a synchronization direction.
- When no handset Phone Book entries exist, executing regular update or selecting Sync from Client or Backup deletes S! Addressbook.
- When no S! Addressbook entries exist, executing regular update or selecting Sync from Server or Restore deletes all handset Phone Book entries.

Capacity Disparities

 When the number of savable items varies between handset Phone Book and S! Addressbook, synchronization reflects lower limit.

Transfer to New Handsets

- S! Addressbook Back-up-compatible 3G Handsets: Data remains.
- Other 3G Handsets: Service subscription and data remains, but data is not accessible via handset (accessible via PCs).
- V3/V4/V5/V6/V8 Series: Service subscription is terminated and data is deleted.

Manual Synchronization

Regular Update

Update S! Addressbook and handset Phone Book after adding/editing entries.

Main Menu ▶ Phone ▶ S! Addressbook BkUp

1 Start Sync

Selecting Sync Type

Main Menu ▶ Phone ▶ S! Addressbook BkUp ▶ Details ▶ Backup/Restore

1 Select an item (See below)

Item	Operation/Description
Sync from	Send data changed in handset Phone Book to
Client	S! Addressbook
Backup	Delete all S! Addressbook entries and save handset Phone Book to S! Addressbook
Sync from	Send data changed in S! Addressbook to handset Phone
Server	Book
Restore	Delete all handset Phone Book entries and save \$1. Addressbook to handset Phone Book

) YES

Auto Synchronization

Main Menu ▶ Phone ▶ S! Addressbook BkUp ▶ Details ▶ Auto Sync Settings

- 1 ON
 - To cancel, select OFF
- Select an item (See below)

Item	Operation/Description
Every month	Synchronize monthly at specified time of the date
	> Enter a date → Set start time
Every week	Synchronize weekly at specified time of the day
-	> Select a day → Enter start time
After Editing PB	Synchronize ten minutes after editing

3 Select a Sync Type → YES

View Auto Sync Settings

> In Step 1, Confirm Settings

Viewing Sync Log

Main Menu ▶ Phone ▶ S! Addressbook BkUp ▶ Details ▶ Sync Log

- Select a log
- Delete Sync Log
- > In Step 1, (highlight a log →) [1] [Menu] → Delete this or Delete all (→ For Delete all, enter Phone Password) → YES

Account Details

Save phone number, mail address, street address, etc. in Account Details.

Editing Account Details

1 • • •

2 ⊠[Edit]

3 Enter Phone Password \rightarrow Edit \rightarrow \square [Finish]

 \bullet Your subscribing phone number cannot be edited or deleted.

Account Details Functions

In Account Details, press $\[\mathbf{w}\]$ [Menu] for following operations.

Item	Operation/Description
Edit*	Edit Account Details (From Step 3 above)
Character size	Switch character size to large/standard
Display all data*	View all saved items such as phone numbers and mail addresses
Copy names	Copy a name
Copy phone numbers	Copy an item ■ Item names vary by selected item. Copy mail add./Copy address/Copy birthday/ Copy notepad

Item	Operation/Description
Send Ir data	Send details via Infrared (௴P.11-3) ■ Alternatively, while Account Details is open, press [Ir].
IC transmission	Send details via IC transmission (△P.11-5) ■ Alternatively, while Account Details is open, press [ICtrans].
Copy to microSD	Copy details to microSD Card > YES ■ To display copied data: □ P.10-20 ■ Account Details is saved as a Phone Book entry.
Erase phone number*	> Select an item → YES ■ Delete items saved in Account Details ■ Item names vary by selected item. Erase mail add./Erase address/Erase birthday/ Erase memorandums/Delete image
Reset*	Reset Account Details (handset number remains) > YES

^{*} Enter Phone Password if required.

Note

● Insert Account Details information to a message (ぱ P.3-6).

Voice Dial

Make a call by saying a voice dial name.

Note

- Keep microphone about 10 cm away from your mouth, and pronounce a Voice Dial name clearly. If microphone is too distant, your voice may not be recognized.
- Avoid making sounds unrelated to Voice Dial names (clearing your throat, clicking your tongue, heavy breathing, etc.).
- Say Voice Dial names in quiet places.
- Avoid pressing or brushing keys, or covering microphone with fingers when pronouncing a Voice Dial name.

Adding Entries to Voice Dial

Main Menu ▶ Phone ▶ Settings ▶ Voice Dial

- 1 <New> → Select a Phone Book entry Entries with ★ are already saved in Voice Dial list.
- Enter a Voice Dial name
 - Only katakana entry is available for Voice Dial names.

Edit Voice Dial Names

> In Step 1, highlight a Voice Dial name → [Edit] → Edit name → YES

Delete Voice Dial Entries

>In Step 1, (highlight a Voice Dial name →) [Y] [Menu] → Delete this or Delete all → YES

Searching Entries by Voice Dial

- Press and hold → Say a Voice Dial name Say the name within four seconds after voice recognition tone sounds. Once Voice Dial is recognized, result appears.
- Woice Calls
 Highlight phone number → ✓

Video Calls
Highlight phone number → ☑[V. Call]



● Activate Voice Dial Automatically ● Activate Voice Dial via Earphone or Bluetooth® Device (广子P.18-12)