News/Entertainment

S! Information Channel/Weather (Japanese)	8-2
Registering/Canceling	8-2
Using S! Information Channel	8-2
Using Weather Indicator	8-3
Option Menu Items	8-4
S! Quick News (Japanese)	8-4
Registering S! Quick News Items	8-4
Opening New Information	8-5
E-Books (Japanese)	8-6
Blogging	8-7
Saving Blog Details	8-7
Posting to Blogs	8-7
Blogging Functions	8-8

S! Information Channel/Weather (Japanese)

Subscribe to content and periodically receive updates. Set Weather Indicator to appear on Standby.

- Transmission fees apply for updates.
- Auto download is not available overseas.

Registering/Canceling

Main Menu ► News/Entertainment ► S! Info Ch./Weather

1 Register/Cancel → YES

Handset connects to the Network. Follow onscreen instructions.

Using S! Information Channel

Up to seven updates are saved.

Viewing New Information

When information arrives, and Event Indicator appear in Standby.

- 2 [Select]

Follow onscreen instructions.

● Option Menu Items (ピテP.8-4)



Manually Retrieve Information

Select Event Indicator "Failed to download"

- Alternatively, Main Menu ▶ News/Entertainment
 - ► S! Info Ch./Weather ► Get Latest Contents ► YES
- Delete Information
- > Main Menu ▶ News/Entertainment ▶ S! Info Ch./Weather
 - ► Highlight What's New? ► [Y7][Menu] ► Delete ► YES

Note

- Alternatively, Main Menu ▶ News/Entertainment
 - ▶ S! Info Ch./Weather ▶ What's New? to retrieve information
- If there is unread information in both S! Quick News and S! Information Channel, adoes not appear. Only Event Indicator appears.

Viewing Previously Received Information

Main Menu ► News/Entertainment ► S! Info Ch./Weather

- **1** *History* → Select a date
 - I for unread news and for read news appear.
- Delete History
- > Main Menu ► News/Entertainment ► S! Info Ch./Weather
 - ► History ► (Highlight a history) ► ☑ [Menu] ► Delete or Delete all ► YES (► For Delete all, enter Phone Password)

Using Weather Indicator

Weather Indicator for current forecast area appears in Standby.

Viewing New Information

Event Indicator and Weather Indicator appear for weather updates.

[Select]

Information appears.
Follow onscreen instructions.

● Option Menu Items (ピラP.8-4)



Weather Indicator

Indicators are updated periodically.

Example: Clear, To Rain later thunderstorm,

Cloudy with occasional snow, etc.

• See Weather Indicator List (P.19-24) for a complete list of indicators.

Manually Update Weather Indicator

Select Event Indicator "Failed to download"

- Alternatively, Main Menu ▶ News/Entertainment
 - S! Info Ch./Weather ▶ Weather Indicator ▶ Manual Update
 YES

Hide Event Indicator

- > Main Menu ► News/Entertainment ► S! Info Ch./Weather
 ► Weather Indicator ► Missed Event Settings ► OFF
- Note
- Alternatively, view forecast details from Main Menu
 - ► News/Entertainment ► S! Info Ch./Weather
 - ▶ Weather Indicator ▶ Weather

Hiding Weather Indicator

Main Menu ► News/Entertainment ► S! Info Ch./Weather

► Weather Indicator ► Display Settings

1 OFF

• When Display Settings is set to *OFF*, update is also deactivated.

Option Menu Items

Open information and press [yz][Menu] for these options.

Item	Operation/Description
Forward	Go to next page
Text Copy	Copy page text
Select File	View, play or save file to Data Folder (From Step 2 in Downloading Image/Sound Files: ☐ P.15-11)
Jump in this page	Jump to top/end of page
Yahoo! Keitai	View top menu
Font Size*	Change character size
Exit viewing this	Exit content

^{*} Linked with Font Size setting in Internet option menu.

S! Quick News (Japanese)

Add news headlines, weather forecasts, etc. via S! Quick News List to scroll across Standby Window.

- Registering or viewing S! Quick News incurs transmission fees. No fees apply for viewing ticker information. For more information, visit SOFTBANK MOBILE Corp. Website (http://www.softbank.jp).
- Auto download is not available overseas.

Registering S! Quick News Items

• Register a total of up to five items for **Quick** and **General** news and one item for Special news.

Main Menu ► News/Entertainment ► S! Ouick News ► S! Ouick News List

- Add News → YES Yahoo! Keitai connects and contents list appears.
- Select an item Follow onscreen instructions

Opening New Information

Viewing New Information in Standby

When new information is received, appears in Standby.

- 1 In Standby, \bigcirc \rightarrow \bigcirc to move pointer \rightarrow Select ticker
- 3 Select information Details appear.



- Show Only Unread Items in Standby Change Marquee Speed
- ●Hide S! Quick News ●Image Download (☐ P.18-19)

Opening S! Quick News List

Main Menu ► News/Entertainment ► S! Quick News ► S! Quick News List

- 1 Select an item
 Content list appears.
- 2 Select information
 Detailed information appears.
- **3** To connect to the Network, select a title → **YES**
- Update Manually

> In Step1, [Yzz][Menu] → Update or All Update → YES

View Summary

> In Step 1, highlight information → [Menu] → Summary Display

Delete Registered Items

> In Step 1, (highlight information →) ☑ [Menu] → Delete or All Delete → YES (→ For All Delete, enter Phone Password)

Note

- Alternatively, Main Menu ▶ News/Entertainment
- ► S! Quick News ► Settings ► Del S! Quick News List
- > YES to delete all information

Tip



●Automatically Update S! Quick News List ●Delete S! Quick News Information (ぱ字P.18-20)

E-Books (Japanese)

Use Digital Media Viewer, BookSurfing® or e-Book Viewer to acquire/view e-books, comics, photo books, etc. on handset.

- Digital Media Viewer, BookSurfing® and e-Book Viewer are S! Appli.
- Download Content Keys (P.10-5) to read BMO/CCF/XMDF files.
- Some copy protected files have extensions different from the ones below.

Application	File Format
Digital Media Viewer	BMO (.bmo)
BookSurfing [®]	CCF (.ccf)
e-Book Viewer	XMDF (.zbf, .zbk, .zbs)

• Some PC contents may not be viewable via e-Book Viewer.

Main Menu ► News/Entertainment

- **Digital Media Viewer, BookSurfing** or **e-Book Viewer**
 - See application Help menu for usage information.

Note

- Launch each viewer via S! Appli, or select a file from Books in Data Folder
- When purchasing a new handset, move BMO/CCF/XMDF files via microSD Card. However, if BMO/CCF/XMDF files are copy protected, Content Keys backup may be needed (△→P.10-24). Some contents require another Content Key after being moved/copied to a new handset or can not be moved/copied at all.

Blogging

Save blog details to update or view blogs.

• Save up to 20 blog details.

Saving Blog Details

Main Menu ▶ News/Entertainment ▶ Post Blog

1 **(New)** → Select an item (See below)

Item	Operation/Description
Service name	Save a blog service name
	> Enter a service name
Blogger	Save a mail address for posting to a blog by mail
address	> Enter a mail address
Mail title	Save a title to enter automatically when posting to a blog
	by mail
	> Enter a title
Yahoo! Keitai	Save a URL for posting to a blog from Yahoo! Keitai
URL	> Enter a mail address
PC Site	Save a URL for posting to a blog from PC Site Browser
Browser	> Enter a mail address

7 □[Finish]

Posting to Blogs

Main Menu ► News/Entertainment ► Post Blog

1 Post by Mail

Highlight an entry $\rightarrow \bigcirc$ [Post] \rightarrow Compose a message (\square From Step 4 on P.14-4) \rightarrow \square [Send]

Post from Yahoo! Keitai/PC Site Browser

Highlight an entry → ☑[To site] → By Yahoo! Keitai or By PC Site Browser

 $\rightarrow YFS$

Handset connects to the Network and website appears. Follow onscreen instructions.

Post Images to Blogs

- >While captured image is open, or from Data Folder, select an image
 - → [Menu] → Post blog* → Follow Step 1 above
- * When *Post blog* does not appear in sub menu, function is unavailable (e.g. when sub menu is opened from [Folder] in Picture Viewfinder).
- Set Auto save set (□P.18-17) in Camera menu to OFF to capture and post images directly.

Blogging Functions

From ▶ Main Menu ▶ News/Entertainment ▶ Post Blog

- Edit Entries
- > Highlight an entry → **(Edit)** → Edit
- Delete Entries
- > Highlight an entry → [Y7] [Menu] → Delete → Select an item (See below)

Item	Operation/Description
Delete this	> YES
Delete	> Check entries → ☑ [Finish] → YES
selected	
Delete all	> Enter Phone Password → YES