

Music Player

Overview	9-2
Saving Music	9-2
Downloading Chaku-Uta Full®	9-3
Saving Music Files by Using SD Audio	9-3
Transferring WMA Files	9-4
Using Music Player	9-5
Playback Window Indicators	9-5
Playing Music	9-6
Playback Window Operations.....	9-7
Functions while Playing Files.....	9-8
Chaku-Uta Full®/WMA List.....	9-9
Using Play List	9-10
Play List	9-11

Overview

Play music saved on handset/microSD Card.

- Play List: P.9-10

Notes

- Files may not play due to file support issues or microSD Card status, etc.
- When playback starts with low battery, confirmation appears. When battery is low during playback, confirmation appears.
- Playback pauses for incoming calls or Alarm. Playback resumes after calls are received or Alarm sounds.

Music Illumination

- Notification Light illuminates when playback starts. When playback starts during charging, Music Illumination lights before Charging Indicator.
- To turn off light, set **Music** to **OFF** in Notification Light setting (P.18-10).

Tip

- Use Bluetooth® Device for Listening to Music (P.11-10)

Saving Music

Save Music to play on Music Player.

Download Chaku-Uta Full® P.9-3	Open site link to download and save songs Supported file format: SMC, MPEG-4 (MPEG-4 AAC, MPEG-4 AAC+ (HE-AAC), Enhanced aacPlus)
Save Music via SD Audio (P.9-3)	Save music CD songs via PC to microSD Card in AAC format Supported file formats: MPEG-2 AAC, MPEG-2 AAC+SBR
Save WMA files P.9-4	Save Windows Media® Audio (WMA) files in PC to microSD Card via Windows Media® Player Supported file formats: WMA

- Some files may not play even if format is supported.

Copy Protected Files

Copy protected files may not play, be saved or forwarded.

To play a copy protected file, obtain Content Key (P.10-5).

Confirm file expiry date or usage limitations (Music info: P.9-8).

Saving Music Files on PCs

When saving music files for use with 941P, observe the following guidelines:

- Copyrighted Works
 - Do not infringe on third party/intellectual property rights.
 - Music files are limited to private use.
- Obtain software to convert file format.
 - Refer to websites providing software.
 - Performance of some software types is not guaranteed.

Downloading Chaku-Uta Full®

Access websites directly from Music Player to download Chaku-Uta Full® files.

- View details (price, expiry date, etc.) on source website.

Main Menu ▶ Data Folder ▶ Music ▶ Main Folder

1 **Download Music → YES**

Handset connects to the Network and Download site appears.

- Follow onscreen instructions to download files.

Saving Music Files by Using SD Audio

Note

- Saving music files requires following:
 - 941P
 - microSD Card (commercial item)
 - USB cable (not included)
 - PC (Windows® XP, Windows Vista®)
 - Software for PC (commercial item)Panasonic brand "SD-Jukebox" is recommended. Purchase SD-Jukebox from website below:
<http://club.panasonic.jp/mall/sense/> (Japanese only)
- Music CD to save

**Main Menu ▶ Settings ▶ Connectivity ▶ USB Mode
▶ microSD Mode**

- 1 Connect handset to a PC via USB cable
- 2 Activate SD-Jukebox on PC
- 3 Set a music CD on PC
- 4 Save music files to micro SD Card
 - See SD-Jukebox manual for usage information.
 - After saving, release USB cable from handset.

Transferring WMA Files

Transfer WMA files from PC to microSD Card via Windows Media® Player. Up to 1000 files can be saved per microSD Card.

- Use PC with Windows Media® Player installed.
- When using Windows Media® Player 10 (10.00.00.3802 or later)/11 on Windows® XP, use Windows® XP Service Pack 2 or later.
- When using Windows Vista®, use Windows Media® Player 11.
- Insert microSD Card into handset before preparing USB cable (Transferring Data via USB Cable: ↗P.11-17)

Main Menu ▶ Settings ▶ Connectivity ▶ USB Mode
▶ MTP Mode

1 Connect handset to a PC via USB cable

Follow Windows Media® Player operations to transfer WMA files from PC to microSD Card.

 
- Refer to Windows Media® Player Help for operations.
- Terminate all software applications before disconnecting USB cable.









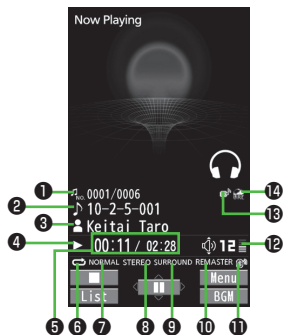




 

Note

- Do not remove microSD Card while transferring files to microSD Card. Files may be damaged.
- WMA files overwrite existing files with same name in handset when copied from PC. To check file names, refer to Windows Media® Player Help.
- 941P may not recognize WMA files saved to a microSD on a different handset. Handset may not recognize WMA files from PCs if **USB Mode** is set to **MTP Mode**. Delete WMAudio and WMSYSTEM folders in My Items (MY FOLDER) on microSD, or format microSD Card (↗P.10-20) via PC. Formatting microSD deletes all saved files.
- To play WMA files on handset, save files to WMFile (↗P.10-22) on microSD Card and play the files from PC Movies folder in Data Folder.

Using Music Player

Playback Window Indicators



Item	Description
① File Number/Total Number	—
② Title	—
③ Artist	—
④ Status	—
⑤ Elapsed Time/Total Time	—
⑥ Play Mode Indicators	 Play only one  Repeat one  Repeat all  Random  Random play&repeat  DEMO
⑦ Equalizer Setting	 Normal  H.BASS1  H.BASS2  Train
⑧ Stereo/Monaural	 Stereo  Monaural
⑨ Listening Setting	 Surround-sound  Natur 1  Natur 2
⑩ Remaster Setting ON	—
⑪ Bluetooth® Device Connected	—
⑫ Volume	—
⑬ Lyric	—
⑭ URL	—

 
Playing Music

1 Press and hold

Player Menu window appears.

- Last playback window appears.

 [Menu] → **Player menu** to show Player Menu window.

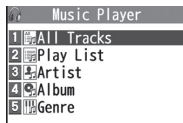

Player Menu Window




2 Select a category (See below)

Item	Operation/Description
All Tracks	Select files from handset & microSD Card
Play List	Select group of files saved to Play List
Artist	Select files from Artist folder
Album	Select files from Album folder
Genre	Select files from Genre folder


- ★ appears for currently/previiously played Play List.

3 Select a file

Selected file plays.

- ★ appears for currently/previiously played file.
- Playback Window Operations:  P.9-7
- To end playback,  

Note

- Alternatively, play music from **Main Menu** ► **Tools** ► **Music Player**
- mp4/3gp files in Ring Songs&Tones folder can also be played in Music Player.
- Missed Call/New Message Notification Tone ( P.18-8) is unavailable during playback while handset closed.

Changing Play Mode

1 Press and hold

Player Menu window or Playback window appears.



2 [Menu] → **Play mode setting**

3 Select an item (See below)

Item	Operation/Description
Normal	Play all files in selected category/Play List
Play only one	Play selected file
Repeat one	Repeat selected file
Repeat all	Repeat all files in selected category/Play List
Random	Play selected category/Play List files randomly
Random play&repeat	Repeat selected category/Play List files randomly

Background Music

Listen to music while using other handset functions.

- 1 While music plays,  [BGM]
- 2 To end,  in Standby → **End player**


Note


- Some functions cannot operate simultaneously.
- Volume or play mode change is not available during Play Background.

Playing Chaku-Uta Full®/WMA Files as Demo



















Main Menu ► Data Folder ► Music

- 1 Select an item (See below)

Item	Operation/Description
Main Folder	View Chaku-Uta Full® list > Select a folder ● To view file list in handset/microSD Card:  [Phone/microSD]
WMA	View WMA list

-  [Change] to toggle display views in Chaku-Uta Full® and WMA list.
- 2 Select a Chaku-Uta Full® or WMA file
Demonstration playback starts.

 
Playback Window Operations

Adjust Volume	 or 
Play Previous*	 or press and hold  ● When playback time is over three seconds, previous file plays from beginning.
Play Next*	 or press and hold 
Fast-rewind	Press and hold 
Fast-forward	Press and hold 
Pause/Resume	 [ / ]
Stop	 []
View Next Jacket/Lyric	(3)
View Previous Jacket/Lyric	(1)
Toggle Jacket/Lyric Display	(2)
Toggle Playlist/Playback Window*	 [List/Player]
Play Background*	 [BGM]
Toggle Remaster On/Off ( P.9-8)	(9)
Toggle Sound Effect (Listening) Modes ( P.9-8)	(8)
Toggle Equalizer Modes ( P.9-8)	(7)

* Not available for playback as a demo

Functions while Playing Files



■ Set Sound Effect

> While playing file,  [Menu] → **Sound effect** → Select an item (See below)

Item	Operation/Description
Remaster	Complement sound from earphone or Bluetooth® device to bring close to original sound > ON or OFF
Listening	Add listening effect to sound from earphone or Bluetooth® device > Select an item <ul style="list-style-type: none"> · Surround-sound: Reproduce natural and stereophonic sound · Natur 1 or Natur 2: Complement sound specific to earphone to reproduce natural sound · OFF: Turn off Listening setting
Equalizer	Change quality of sound from earphone or Bluetooth® device > Select an item <ul style="list-style-type: none"> · Normal: Reproduce normal sound · H. BASS1: Enhance low-pitched sound · H. BASS2: Enhance low-pitched sound even more · Train: Minimize sound leakage

■ Functions Available in Playback Window

> While playing file,  [Menu] → Select an item (See below)

Item	Operation/Description
Player menu	Show Player menu
Play mode setting	Change play mode ( P.9-6)
Sound effect	( Left)
Music info	Show song title, artist and playback time
Connect to Website	Open site link > YES
Display Image	Show jacket
Display lyric	Show lyric
Previous image/ Previous lyric	Show previous jacket or lyric
Next image/ Next lyric	Show next jacket or lyric

Chaku-Uta Full®/WMA List

From **Main Menu** ▶ **Data Folder** ▶ **Music**

Confirm Memory Status

> **[Menu]** → *Memory Status*

Functions Available in Chaku-Uta Full® Folder List

> **Main Folder** → Highlight a folder → **[Menu]** → Select an item
(See below)

Item	Operation/Description
Add folder	> Enter folder name
Edit folder name	> Enter folder name
Delete folder	> Enter Phone Password → YES
Memory Status	> Confirm memory status/total files

Functions Available in Chaku-Uta Full®/WMA File List

> **Main Folder** or **WMA** (→ Select a folder) → Highlight a file → **[Menu]** → Select an item (See below)

Item	Operation/Description
Set as ring tone (Fullsong ring tone)¹	Set Chaku-Uta Full® as ringtone > Fullsong ring tone → Select an item
Set as ring tone (Point ring tone)¹	Set a segment of Chaku-Uta Full® as ringtone > Point ring tone → Select a segment → Select an item ● To confirm segment: [Play]
Music info	Show song title, artist and playback time
Move¹	> Select a storage

Item	Operation/Description
Move to microSD¹	Move a Chaku-Uta Full® to microSD Card
Add folder¹	> Enter folder name
Multiple-choice¹	Select multiple Chaku-Uta Full® files > Check Chaku-Uta Full® files → [Menu] → Delete , Move or Send Ir data → Operate selected item
Connect to Website¹	Open site link > YES
Display image	Show jacket
Memory Status	Memory status/total number of files appears
DEL all licenses²	Delete all WMA licenses > Enter Phone Password → YES
Delete this	> YES
Delete all	Delete all files in folder > Enter Phone Password → YES
Attach to message¹	Attach file to S! Mail/PC Mail (☞ From Step 2 on P.14-4)
Send Ir data¹	(☞ P.11-3)
IC transmission¹	(☞ P.11-5)
Take contents key¹	(☞ P.10-5)

¹ Chaku-Uta Full® files only

² WMA files only

Using Play List


Use **Play List** to organize **Data Folder** music files. Select **Music** folder files to create **Play List** links to each file in its original folder.

Creating New Play Lists

 
- Save up to 30 Play Lists with up to 100 songs per list.
- Music files saved on microSD Card are also savable.

1 Press and hold

Player Menu window or Playback window appears.

- When Playback window appears,  [Menu] → **Player menu** to show Player Menu window

2 **Play List** → [Menu] → **Create play list** → Select a category and show file list → Check files to save to Play List → [Finish]

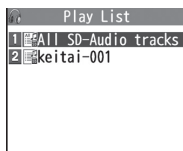

Play List Window

3 Enter a Play List name


Note

- Create WMA Play Lists (using Windows Media® Player) or SD Audio Play Lists (using SD-Juke Box) on PC. Maximum number of Play Lists to create and songs to save is as follows:
WMA Play Lists: 100 Play Lists; 250 songs per list
SD Audio Play Lists: 99 Play Lists; 99 songs per list

Playing Songs from Play List

1 Press and hold

Player Menu window or Playback window appears.

 
- When Playback window appears,  [Menu] → **Player menu** to show Player Menu window

2 **Play List** → Select a Play List

- To play back selected Play List from the beginning:  [Play]

3 Select a file

Selected file plays back.

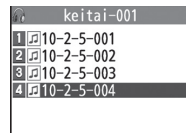

Play List Contents Window

Note

- mp4/3gp files in Ring Songs&Tones folder can also be added to Play List.

Play List

Press and hold (▶) [Menu] ▶ **Player menu** ▶ **Play List**

■ Functions Available in Play List Window

> (Highlight a Play List) [Menu] → Select an item (See below)

Item	Operation/Description
Player menu	Open Player menu
Play mode setting	Change play mode (↵P.9-6)
Create play list	Create a new Play List (↵P.9-10)
Copy play list	Copy Play List > Enter a Play List name
Edit pl. list name	Edit Play List name > Edit Play List name
Add	Add files to Play List > Select a category, and open a Play List → Check files to add → [Finish]
Delete play list	> Select an item → Operate selected item

■ Functions Available in Play List Contents Window

> Select a Play List → (Highlight a file) → [Menu] → Select an item (See below)

Item	Operation/Description
Player menu	Open Player menu
Play mode setting	Change play mode (↵P.9-6)
Music info	Show song title, artist and playback time
Add	Add files to Play List > Select a category, and show contents window → Check files to add → [Finish]
DEL from play list	Delete files from Play List > Select an item → Operate selected item
Order to play	> Select a file from Play List to change playing order → to change order → [Select] ● Repeat steps above to change order → [Set]
Add to play list	Add files to another Play List > Add one or Add some (→ For Add some , check files → [Finish]) → Select a Play List
Display image	Show jacket

