

# Managing Files

<b>Data Folder</b> .....	<b>10-2</b>
Data Folder Structure .....	10-2
<b>Opening Files</b> .....	<b>10-4</b>
Viewing & Playing Files .....	10-4
Copy Protected Files .....	10-5
Options .....	10-6
<b>Using/Editing Still Images</b> .....	<b>10-11</b>
Editing Still Images .....	10-11
Creating Animations .....	10-12
Saving Still Images to Phone Book .....	10-13
<b>Playing Videos</b> .....	<b>10-13</b>
Playing Videos/PC Movies .....	10-13
Playing Videos Recorded on HDD Recorder .....	10-14
File Playback Functions .....	10-15
<b>Managing Folders/Files</b> .....	<b>10-16</b>
Managing Folders .....	10-16
Using Play List .....	10-17

<b>microSD Card</b> .....	<b>10-18</b>
microSD Card Installation .....	10-19
Format microSD Card .....	10-20
Viewing microSD Card Files .....	10-20
Handset Data Backup .....	10-21
PC File Transfers .....	10-22
microSD Card Functions .....	10-23
<b>Variety Photo Viewer</b> .....	<b>10-24</b>
Viewing Still Images .....	10-24
Slideshow .....	10-26

# Data Folder

Save, play and manage files downloaded from Internet, etc.

- Save still images/videos captured by Camera, downloaded data or data copied/moved from SoftBank handset to microSD Card.

## Data Folder Structure

Folder		Function/Saved Data	File Format <sup>1</sup>	
Pictures <sup>2</sup>	Download Pictures		JPEG, GIF (.gif including Interlaced GIF), GIF Pictogram Package File (.gpk), SWF (.swf Flash Animation), PNG (.png including Interlaced PNG)	
	Variety Photo Viewer			
	Main Folder			
	Camera			
	My Pictograms	Download My Pict.		Connect to download site
		お気に入り 顔文字, 装飾, etc.		Downloaded pictograms, etc. Preinstalled pictograms
	Mail Art	Mail Art (download)		Connect to download site
	Pre-installed			Preinstalled still images
Original Animation		Display still images continuously		
Ring Songs&Tones <sup>2</sup>	DL Ring Songs&Tones		SMF, SP-MIDI, AMR, SMAF and MPEG-4 formatted files (.mid, .midi, .amr, .mmf, .3gp, .mp4)	
	Main Folder			
	Pre-installed			
	Voice Announce			
	Play List			
S! Appli <sup>2</sup>	Download S! Appli		—	
Widget <sup>2</sup>	Download Widget		WGT (.wgt), SWGT (.swgt)	
Music	Main Folder <sup>2</sup>	Download Music	MP4, SMC, WMA (.3gp, .mp4, .smc, .wma)	
		Initial Folder		
	WMA <sup>3</sup>	WMA Files transferred from PC		

	Folder	Function/Saved Data	File Format <sup>1</sup>
<b>Videos<sup>2</sup></b>	Download Videos	Connect to download site	MP4 (including .mp4, .3gp, SDV), ASF (.asf)
	Main Folder	Downloaded video files, etc.	
	Camera	Video files recorded by Camera	
	Pre-installed	Preinstalled video files	
	BD/DVD Recorder <sup>3</sup>	Videos transferred from HDD Recorder	
	Play List	Play back Play List	
<b>PC Movies</b>	Position Memory	Play back video files from saved resume position	WMA (.wma), WMV (.wmv), ASF (.asf)
	microSD <sup>3</sup>	PC movie files saved from PCs	
	Play History	Select a file from playback history	
<b>TV</b>	Image	Still images recorded by Digital TV	JPEG (.jpg)
	Video <sup>3</sup>	Programs recorded on handset	TOD (.tod), MOI (.moi), MAI (.mai), PGI (.pgi)
	Position Memory	Play back video files from saved resume position	
<b>Lifestyle-Appli</b>	Download	Connect to download site (Osaifu-Keitai®: ㊦P.13-9)	–
<b>Books<sup>2</sup></b>	Download Books	Connect to download site	CCF (.ccf), XMDF (.zbf, .zbc, .zbs), BMO (.bmo)
<b>Customized Screen<sup>2</sup></b>	Customized Screen	Connect to download site	CUSR (.xcfs)
<b>Templates</b>	Download Templates	Connect to download site	–
<b>Font</b>	Download Font	Connect to download site	MTF (.mtf)
	Main Folder	Downloaded fonts	
	Pre-installed	Pre-installed fonts	
<b>Other Documents<sup>2</sup></b>	Main Folder	Incompatible files attached to mail <sup>4</sup>	–

<sup>1</sup> Some copy protected files have extensions different from above.

<sup>2</sup> When microSD Card is installed, press  [microSD] in Folder list to view data saved in microSD Card.

<sup>3</sup> Available only when microSD Card is inserted.

<sup>4</sup> Some attachment files cannot be saved in Other Documents.

# Opening Files

## Viewing & Playing Files

### Main Menu ► Data Folder

- Select a folder
  - In Folder List, press  to toggle handset folder and microSD Card folder.



Pictures Folder

- Select a folder → Select a file  
File appears/plays.
  - To toggle list/thumbnail view:  
 [Change]



Still Image List Window






### When Shortcut to a Download Site is Selected

Handset connects to a download site on Internet.

### Enlarge Still Images

> Main Menu ► Data Folder ► Pictures ► Select a folder ► Select a file ►  [Menu] ► Display size ► Fit in display




 




### Operations while Playing Files from Ring Songs&Tones

Stop	 [Stop]
Volume	 / 
Attach to messages	 [  ]

## Copy Protected Files

Playing/forwarding/saving may be restricted and Content Key may be required for usage.

If Content Key is expired, obtain a new Key to use file.

-  or  (Silver) appears for copy protected files requiring Content Keys.  files are accessible.  files are inaccessible.  appears on images in Thumbnail view of expired files (Original icon appears for Books folder).
- When deleting  files or folders containing  files, confirmation appears asking whether to delete corresponding Content Key. Other files requiring same Content Key may become unusable.
- See File Properties to confirm restrictions such as expiry term or usage limitation (Options: P.10-6)
- 941P holds up to 1000 Content Keys. Multiple Keys may be required to use a file.
- Interrupted playback (by incoming calls or Alarm) of copy protected WMA files with limited usage in Data Folder is also counted as one usage.


## Using Copy Protected Files

- Files downloaded on handset cannot be used on PCs.
- Network setting may be required for usage.
- File usage may require insertion of USIM Card in use at time of download.
- When set as wallpaper or ringtone, settings may return to defaults if license has expired or different USIM Card is inserted.
- Limited use files cannot be set as wallpaper or ringtone.

## Obtaining Content Key

If Content Key is expired, a message appears when the file is opened. To obtain a new Key, select **YES**. Handset connects to Content Key site.


### Note

- Alternatively, obtain Content Key as follows: Highlight a file →  [Menu] → **Take contents key** → **YES**
- Depending on contents, some Content Keys may not be obtained from websites even when warning for expired contents appears.
- When 1000 Content Keys have been saved, a message appears. Delete old Keys; otherwise downloads may fail (Connection fees apply).

### Tip

- Back Up Content Key (P.10-24)



## Options

Highlight a file in Data Folder →  [Menu] for the following operations.

- Some functions may not be available depending on files.

### Pictures

Item	Operation/Description
<b>Edit picture</b>	Edit files (☞P.10-11)
<b>Display picture</b>	Open files
<b>Set display*</b>	Set as wallpaper, Phone Book image, Menu Icons, etc. > Select an item ● ★ appears for item.
<b>Picture info</b>	Show file name, file size, etc.
<b>Attach to message</b>	Attach files to S! Mail/PC Mail (☞From Step 2 on P.14-4)
<b>Graphic mail</b>	Add selected files to Graphic Mail (☞P.14-9)
<b>Post blog</b>	Post file on a blog (☞P.8-7)
<b>Send Ir data</b>	Send files via Infrared (☞P.11-3)
<b>IC transmission</b>	Send files via IC transmission (☞P.11-5)
<b>Add shortcut icon</b>	Create shortcuts (☞P.1-25)
<b>Copy to microSD</b>	Copy files to microSD Card
<b>Move to microSD</b>	Move files to microSD Card
<b>Positioning</b>	Set where to paste files in Standby > Select a position
<b>Edit file name</b>	Edit file names
<b>Move</b>	Move files to other folders

Item	Operation/Description
<b>Slideshow</b>	Show files in a folder continuously. Select display speed > <b>Normal</b> or <b>Slow</b>
<b>Delete this</b>	Delete a file > <b>YES</b>
<b>Delete all</b>	Delete all files > Enter Phone Password → <b>YES</b>
<b>Multiple-choice</b>	Select multiple files to use > Check files to use →  [Menu] → Select an item
<b>Memory Status</b>	Show memory information
<b>Sort</b>	Change display order of files > Select an order
<b>Pictures/ File names</b>	Toggle list views ● Alternatively,  [Change] to toggle
<b>Take contents key</b>	Connect to site for Content Key

\* Before setting a file as Video Call related item (except for Incoming/Outgoing Video Calls), set **Select Images** to **Original** (Change Outgoing Image: ☞P.18-13).

To set a file as Menu Icon related item, set **Menu Icons** to **Customize** (☞P.18-4).

- If incoming calls arrive or handset is turned off while My Pictograms package file (.gpk) is being uncompressed, some pictograms in package file may not open. Retry uncompressing.

### Tip

- Enlarge Still Images (☞P.10-4)
- Editing Still Images (☞P.10-11)
- Creating Animations (☞P.10-12)
- Saving Still Images to Phone Book (☞P.10-13)

## Ring Songs&Tones

Item	Operation/Description
<b>Edit file name</b>	Edit file names
<b>Play melody</b>	Play back files
<b>Set as ring tone</b>	<ul style="list-style-type: none"> <li>&gt; Set as ringtone</li> <li>● ★ appears for item.</li> </ul>
<b>Add shortcut icon</b>	Create shortcuts (☞P.1-25)
<b>Attach to message</b>	Attach files to S! Mail/PC Mail (☞From Step 2 on P.14-4)
<b>Send Ir data</b>	Send files via Infrared (☞P.11-3)
<b>IC transmission</b>	Send files via IC transmission (☞P.11-5)
<b>Copy to microSD</b>	Copy files to microSD Card
<b>Song-Tone info</b>	Show titles, file names, etc.
<b>Memory Status</b>	Show memory information
<b>Delete</b>	<ul style="list-style-type: none"> <li>&gt; Select a type               <ul style="list-style-type: none"> <li>· <b>Delete this</b> → <b>YES</b></li> <li>· <b>Delete select</b> → Check files to delete → ☑[Finish] → <b>YES</b></li> <li>· <b>Delete all</b> → Enter Phone Password → <b>YES</b></li> </ul> </li> </ul>
<b>Sort</b>	Change display order of files > Select an order
<b>Move</b>	Move files to other folders
<b>Move to microSD</b>	Move files to microSD Card
<b>Take contents key</b>	Connect to site for Content Key

## Widget

Item	Operation/Description
<b>Paste on Stand-by</b>	(☞P.7-2)
<b>Widget Information</b>	Show file names, sizes, etc.
<b>Attach to message</b>	Attach files to S! Mail/PC Mail (☞From Step 2 on P.14-4)
<b>Send Ir data</b>	Send files via Infrared (☞P.11-3)
<b>IC transmission</b>	Send files via IC transmission (☞P.11-5)
<b>Move to microSD</b>	Move files to microSD Card
<b>Delete this</b>	Delete a file > <b>YES</b>
<b>Delete all</b>	Delete all files > Enter Phone Password → <b>YES</b>
<b>Multiple-choice</b>	Select multiple files to use > Check files to use → ☑[Menu] → Select an item

## S! Appli/Lifestyle-Appli

Item	Operation/Description
<b>Start</b>	Activate S! Appli or Lifestyle-Appli
<b>Security level</b>	Set security level (☞P.16-4)
<b>S! Appli info</b>	Show file names, file sizes, etc.
<b>Add shortcut icon</b>	Create shortcuts (☞P.1-25)
<b>Move to microSD</b>	Move files to microSD Card (Lifestyle-Appli cannot be moved)
<b>Delete</b>	Delete files > <b>YES</b>

## Music

- See "Functions Available in Chaku-Uta Full®/WMA File List" (☞P.9-9)

## Videos

Item	Operation/Description
<b>Register</b>	Set as ringtones, Standby Display or Start-up display
<b>Video info</b>	Show titles, file names, etc.
<b>Attach to message</b>	Attach files to S! Mail/PC Mail (☞From Step 2 on P.14-4)
<b>Post blog</b>	Post file on a blog (☞P.8-7)
<b>Send Ir data</b>	Send files via Infrared (☞P.11-3)
<b>IC transmission</b>	Send files via IC transmission (☞P.11-5)
<b>Copy to microSD</b>	Copy files to microSD Card
<b>Move to microSD</b>	Move files to microSD Card
<b>Move</b>	Move files to other folders

Item	Operation/Description
<b>Add shortcut icon</b>	Create shortcuts (☞P.1-25)
<b>Edit file name</b>	Edit file names
<b>Delete this</b>	Delete a file > <b>YES</b>
<b>Delete all</b>	Delete all files > Enter Phone Password → <b>YES</b>
<b>Multiple-choice</b>	Select multiple files to use > Check files to use → ☒[Menu] → Select an item
<b>Memory Status</b>	Show memory information
<b>Sort</b>	Change display order of files > Select an order
<b>Listing</b>	Change list view <ul style="list-style-type: none"> <li>• ☒[Change] to toggle views</li> </ul>
<b>Take contents key</b>	Connect to site for Content Key



## ■ PC Movies

Item	Operation/Description
<b>Contents info</b>	Show titles, file names, etc.
<b>Move</b>	Move files to other folders
<b>Copy</b>	Copy files to other folders
<b>Multiple-choice</b>	Select multiple files to use > Check files to use →  [Menu] → Select an item
<b>Comment view</b>	Show descriptions
<b>Memory Status</b>	Show memory information
<b>Delete this</b>	Delete a file > <b>YES</b>
<b>Delete all</b>	Delete all files > Enter Phone Password → <b>YES</b>

## ■ TV



- See Pictures folder for still images.

Item	Operation/Description
<b>Edit title</b>	> Enter titles
<b>Video info</b>	Show titles, channel names, etc.
<b>Add shortcut icon</b>	Create shortcuts (⌘P.1-25)
<b>Delete</b>	> Select an item <ul style="list-style-type: none"> <li>· <b>Delete this</b> → <b>YES</b></li> <li>· <b>Delete selected</b> → Check files to delete →  [Finish] → <b>YES</b></li> <li>· <b>Delete all</b> → Enter Phone Password → <b>YES</b></li> </ul>
<b>Memory Status</b>	Show memory information
<b>Listing</b>	Change list view <ul style="list-style-type: none"> <li>●  [Change] to toggle views</li> </ul>



## ■ Books

Item	Operation/Description
<b>Play</b>	Play back files
<b>Connect to Website</b>	Open site link
<b>Book info</b>	Show file names, file sizes, etc.
<b>Copy to microSD</b>	Copy files to microSD Card
<b>Move to microSD</b>	Move files to microSD Card
<b>Add folder</b>	Add folders
<b>Edit file name</b>	Edit file names
<b>Move</b>	Move files to other folders
<b>Take contents key</b>	Connect to site for Content Key
<b>Delete</b>	Delete files > <b>YES</b>



## ■ Customized Screen

Item	Operation/Description
Preview	Preview files
Collective Setting	Set Customized Screen all at once
File info	Show titles, file names, etc.
Copy to microSD	Copy files to microSD Card
Move to microSD	Move files to microSD Card
Edit file name	Edit file names
Delete this	Delete a file > <b>YES</b>
Delete all	Delete all files > Enter Phone Password → <b>YES</b>
Multiple-choice	Select multiple files to use > Check files to use →  [Menu] → Select an item
Memory Status	Show memory information
Sort	Change display order of files > Select an order
Listing	Change list view ●  [Change] to toggle views
Take contents key	Connect to site for Content Key
Connect to Website	Open site link

## ■ Templates

Item	Operation/Description
Compose S! Mail	Send files via S! Mail (  P.14-5)
Edit title	Edit titles
Template info	Show title and file size
Delete this	> <b>YES</b>
Delete selected	> Check files to delete →  [Finish] → <b>YES</b>
Delete All	> Enter Phone Password → <b>YES</b>

## ■ Font

Item	Operation/Description
Set	Apply selected font
File info	Show file names, file sizes, etc.
Edit title	Edit titles
Delete this	Delete a file > <b>YES</b>
Delete all	Delete all files > Enter Phone Password → <b>YES</b>
Multiple-choice	Select multiple files to use > Check files to use →  [Menu] → Select an item
Memory Status	Show memory information
Sort	Change display order of files > Select an order
Listing	Change list view ●  [Change] to toggle views

## Other Documents

Item	Operation/Description
<b>File info</b>	Show file names, file sizes, etc.
<b>Attach to message</b>	Attach files to S! Mail/PC Mail (☞From Step 2 on P.14-4)
<b>Copy to microSD</b>	Copy files to microSD Card
<b>Edit file name</b>	Edit file names
<b>Move</b>	Move files to other folders
<b>Delete this</b>	Delete a file > <b>YES</b>
<b>Delete all</b>	Delete all files > Enter Phone Password → <b>YES</b>
<b>Multiple-choice</b>	Select multiple files to use > Check files to use → [Y?][Menu] → Select an item
<b>Memory Status</b>	Show memory information
<b>Sort</b>	Change display order of files > Select an order

### Note

- Titles of mp4/3gp Ring Songs&Tones files and Videos/Music/Customized Screen files appear in respective lists. Files without titles appear with file names (created when files are saved to handset). Titles cannot be changed; edited file names may not appear in lists.






## Using/Editing Still Images

### Editing Still Images

- Edit features are not available for all file types.

#### Main Menu ▶ Data Folder ▶ Pictures

- 1 Select a folder → Select a file → [Y?][Menu] → **Edit picture**
- 2 [Y?][Menu] → Select an item (See below)

Item	Operation/Description
<b>Marker stamp</b>	> Select a stamp →  to move stamp →  [Put] <ul style="list-style-type: none"> <li>• Following options are available when positioning a stamp:               <ul style="list-style-type: none"> <li>• To rotate or scale up/down: [Y?][Menu] → Select an item</li> <li>• To start over: [X][Cancel]</li> </ul> </li> <li>• To add: [A][Add]</li> </ul>
<b>Frame</b>	> Select a frame <ul style="list-style-type: none"> <li>• To rotate 180 degrees: [Y?][Menu] → <b>180° rotation</b></li> <li>• To change frame: </li> <li>• To return to frame list: [X][Cancel]</li> </ul>
<b>Character stamp</b>	> Enter text →  to move text →  [Put] <ul style="list-style-type: none"> <li>• To change content/color/font/size: When positioning stamp, [Y?][Menu] → Operate selected item</li> <li>• To start over: [X][Cancel] after positioning</li> </ul>

Item	Operation/Description
Fit in screen	Change image size to Standby (480 x 854) > <b>YES</b>
Change size	> Select a size ● To start over:  [Cancel]
Trim away	> Specify a size →  to specify area →  [Set] ● To start over: After specifying area,  [Cancel]
Retouch	> Select an item ● To start over:  [Cancel]
Rotate	> <b>90° to right, 90° to left or 180°</b> ● To start over:  [Cancel]
Brightness	>  to adjust brightness
Attach to message <sup>1,2</sup>	Attach edited file to S! Mail/PC Mail >  [Set] → Compose message (👉From Step 2 on P.14-4) ● Alternatively,  [] to attach image to a message
Post blog <sup>1,2</sup>	Post on a blog >  [Set] → Post on a blog (👉P.8-7)
Save <sup>1</sup>	Overwrite/rename to save edited files

<sup>1</sup> Available after other editing operations.

<sup>2</sup> File is automatically saved.

3 [Set] → [Save]

4 **YES** (Overwrite) or **NO** (Save as)

## Creating Animations

### Saving Original Animation

Main Menu ▶ Data Folder ▶ Pictures ▶ Original Animation

1 <New> → <1st> - <20th>

2 Select a folder → Select a file  
● Repeat Step 2.

3 [Finish]

### Functions Available in Original Animation List




In Original Animation list, press [Menu] for following operations.

Item	Operation/Description
Edit title	> Enter title
Org. animation	Add more files to an Original Animation (👉Above)
Display picture	Play back an Original Animation ● Alternatively, select an Original Animation from list to play back.
Set display	Set an Original Animation as Standby display, etc. > Select item to set Original Animation as
Picture info	View item set for <b>Set display</b>
Release animation	Cancel a saved Original Animation > <b>YES</b>

## Saving Still Images to Phone Book

- Savable sizes:
  - Standby (480 x 854) or smaller in JPEG or GIF format (up to 300 Kbytes)
  - VGA (640 x 480) or smaller in PNG format
- Save images to up to 100 Phone Book entries.
- Still images cannot be saved to USIM Card Phone Book entries.


### Main Menu ► Data Folder ► Pictures

- 1 Select a folder → Select a file →  [Menu] → **Set display** → **Phone Book**
- 2 **New Entry**  
**New** → Enter details (→ From Step 2 on P.4-3) →  [Finish]  
**Add to Existing Entry**  
**Add** → Select entry →  [Finish] → **YES**

## Playing Videos



















### Playing Videos/PC Movies


 
 

#### Main Menu ► Data Folder

- 1 **Play Videos**  
**Videos** → Select a folder → Select a file  
**Play PC Movies**  
**PC Movies** → **microSD** → Select a file
  - To toggle file list views:  [Change]

#### ■ Playback Operations

- Some operations are not available depending on files.
- Operation descriptions are based on Normal Position.

Adjust Volume	 or 
Play Previous	 <ul style="list-style-type: none"><li>● Starts from beginning when playback time is over three seconds.</li></ul>
Play Next	
Fast-rewind <sup>1</sup>	Press and hold 
Fast-forward <sup>1</sup>	Press and hold 
Playback Position <sup>2</sup>	 repeatedly
Change Speed	 [  /  /  ]
Mute/Resume	  / 
Pause/Resume	 [  /  ]
Play Frame by Frame <sup>1</sup>	While pausing,  [Frame] <ul style="list-style-type: none"><li>● Play back frame by frame</li></ul>

<b>Toggle Views</b>	 ● Toggle: Portrait View → Landscape View (fit to Display size) → Full-size Landscape View <sup>2</sup>
<b>Toggle Remaster On/Off</b> (↵P.9-8)	
<b>Toggle Sound Effect (Listening) Modes</b> (↵P.9-8)	
<b>Toggle Equalizer Modes</b> (↵P.9-8)	

<sup>1</sup> Videos only

<sup>2</sup> May be unavailable depending on image size.

## Playing Videos Recorded on HDD Recorder

### Transfer programs recorded on HDD recorder to microSD Card via USB cable (not included) for playback on handset.







 


 














- Set **USB Mode** to **microSD Mode** before connecting handset to HDD recorder (↵P.11-17).
- For details about transferring videos, see HDD recorder manuals.
- Use Earphone Microphone for stereo sound. Use a Bluetooth® device for wireless audio output (↵P.11-10).


 
 

**Main Menu ▶ Data Folder ▶ Videos ▶ BD/DVD Recorder**

- 1 Select a file

## Functions Available in Video Window

- Some functions may be unavailable depending on the file type.
- Operation descriptions are based on Portrait View.

<b>Adjust Volume</b>	 or 
<b>Play Previous Chapter</b>	 ● When three seconds into the chapter, playback returns to beginning of current chapter.
<b>Play Next Chapter</b>	
<b>Skip (Forward)</b>	While playing/pausing, press and hold  ● Skip about 30 seconds forward.
<b>Skip (Rewind)</b>	While playing/pausing, press and hold  ● Skip about 10 seconds backward.
<b>Fast-rewind</b>	 ● To play back:  [  ] ● Play back at normal speed during 10x fast-forward. Play back at 10x speed during 30x fast-forward.
<b>Fast-forward</b>	 ● To play back:  [  ] ● Play back at normal speed during 10x fast-rewind. Play back at 10x speed during 30x fast-rewind.
<b>Playback Position</b>	 repeatedly
<b>Change Speed</b>	 [  ] / [  ] / [  ]
<b>Mute/Resume</b>	 [  ] / [  ]
<b>Pause/Resume</b>	 [  ] / [  ]
<b>Play Frame by Frame</b>	While pausing,  [ <b>Frame</b> ] ● Play back frame by frame

<b>Toggle Views</b>	 ● Toggle: Portrait View → Landscape View (fit to Display size) → Full-size Landscape View
<b>Toggle Remaster On/Off</b> (↵P.9-8)	
<b>Toggle Sound Effect (Listening) Modes</b> (↵P.9-8)	
<b>Toggle Equalizer Modes</b> (↵P.9-8)	

## File Playback Functions

### ■ Play Back from a Resume Position

Resume playback (videos/PC Movies) from a saved position.

> **Main Menu** ► **Data Folder** ► **Videos** or **PC Movies**

► **Position Memory** ► Select an item

- Save a resume position: ↵Right
- **Marker to resume** is a resume position automatically saved when a call arrives, alarm goes off, battery runs low, or playback is terminated.



### ■ Play Back from Play History (PC Movies Only)


> **Main Menu** ► **Data folder** ► **PC Movies** ► **Play History**

► Select a record

### ■ Functions Available in Video/PC Movie Playback Window

- Some operations are not available depending on files.
- > While playback is paused, [Menu] → Select an item (See below)

Item	Operation/Description
<b>Normal play</b> <sup>1</sup>	Play at normal speed
<b>Slow</b> <sup>1</sup>	Play at slow speed
<b>Quick View (1.25x)</b> <sup>1</sup>	Play 1.25 times faster than normal
<b>Quick View(2x)</b> <sup>1</sup>	Play at double speed
<b>Fast</b> <sup>2</sup>	Forward
<b>Rewind</b> <sup>2</sup>	Rewind
<b>Stop</b>	Return to Videos/PC Movies List window
<b>Position to play</b>	Start playback from specified point >  to highlight a play point →  [Set]
<b>Connect to Website</b> <sup>1</sup>	Open site link > <b>YES</b>
<b>Sound effect</b>	<b>Remaster, Listening</b> or <b>Equalizer</b> (↵P.9-8)
<b>Contents info</b> <sup>2</sup>	Show title, file name, etc.
<b>Position memory</b>	Save resume position > Select a resume position ● To play back from a saved position: ↵Left
<b>Mail/blog</b> <sup>1</sup>	Attach file to a message to send or post on a blog > Select an item · <b>Attach to message</b> (↵From Step 2 on P.14-4) · <b>Post blog</b> (↵Step 1 on P.8-7)

Item	Operation/Description
<b>Register (Ringtones)</b> <sup>1</sup>	Set as ringtone > <b>Ringtones</b> → Select a type ● ★ appears for item set as ringtone.
<b>Register (Stand-by Display/Start-up Window)</b> <sup>1</sup>	Save a file as Standby Display or Start-up Window > Select an item → <b>YES</b>
<b>Video info</b> <sup>1</sup>	Show title, file name, etc.
<b>Send Ir data</b> <sup>1</sup>	Send file via Infrared (☞P.11-3)
<b>IC transmission</b> <sup>1</sup>	Send file via IC transmission (☞P.11-5)
<b>Add shortcut icon</b> <sup>1</sup>	Create a shortcut (☞P.1-25)
<b>Description</b> <sup>2</sup>	Show file information > <b>The words view</b> or <b>Description view</b>
<b>Copy URL</b> <sup>2</sup>	Copy URL
<b>Display size</b>	Select a display size > <b>Actual size</b> or <b>Fit in display</b>
<b>Change to full</b> <sup>1</sup>	Toggle: Portrait View → Landscape View (fit to Display size) → Full-size Landscape View <sup>3</sup> ● To toggle views: 

<sup>1</sup> Video files only

<sup>2</sup> PC movie files only

<sup>3</sup> May be unavailable depending on image size.


## Managing Folders/Files

### Managing Folders

The following operations are available in Pictures, Music, Books, Videos, Ring Songs&Tones and Other Documents.

#### Main Menu ► Data Folder

- 1 Select a folder →  [Menu] → Select an item (See below)

Item	Operation/Description
<b>Add folder</b>	Create user folders
<b>Edit folder name</b>	Edit user folder names
<b>Delete folder</b>	Delete a user folder > Enter Phone Password → <b>YES</b> → <b>YES</b>
<b>Folder security</b> <sup>1</sup>	Hide files in folder unless Phone Password is entered > Enter Phone Password → <b>YES</b>  appears for folder. ● To cancel: Repeat the step
<b>Delete all image</b> <sup>2</sup>	> Enter Phone Password → <b>YES</b> → <b>YES</b>
<b>Edit Play List</b> <sup>3</sup>	Edit Play Lists
<b>Release Play List</b> <sup>3</sup>	Cancel edited Play Lists > <b>YES</b>



Item	Operation/Description
<b>Select storage</b> <sup>4</sup>	Specify folders on microSD Card to save files to > <b>YES</b> ● Folders cannot be specified when saving Books files.
<b>Memory Status</b> <sup>5</sup>	View memory capacity/number of saved files

<sup>1</sup> Pictures/Videos folders only

<sup>2</sup> Pictures folder only

<sup>3</sup> Play List folder in Ring Songs&Tones folder only

<sup>4</sup> microSD Card only

<sup>5</sup> Music folder only



## Using Play List

**Use Play List to organize Data Folder Ring Songs&Tones/ Videos files.**

**Select Ring Songs&Tones, Music or Videos folder files to create Play List links to each file in its original folder.**

### Creating Ring Songs&Tones Play Lists

**Main Menu ▶ Data Folder ▶ Ring Songs&Tones**

- 1 Highlight **Play List** →  [Menu] → **Edit Play List**
- 2 Select a number → Select a folder → Select a file  
● Repeat Step 2.
- 3  [Finish]

#### ■ Play Back Play List

 
> **Main Menu ▶ Data Folder ▶ Ring Songs&Tones ▶ Play List**

- Files are played back in the saved order.

#### ■ Delete a File

> After Step 1, select a file → **Release this**

#### ■ Delete All Files


> In Step 1,  [Menu] → **Release Play List** → **YES**

#### Note

- mp4/3gp files cannot be added to Play List except in Music Player Play List.

## Creating Video Play Lists

**Main Menu ▶ Data Folder ▶ Videos ▶ Play List**


- 1 Select a Play List
- 2 Select a number → Select a folder → Select a file
  - Repeat Step 2.
- 3  [Finish]

### ■ Play Back Play Lists

 


> **Main Menu ▶ Data Folder ▶ Videos ▶ Play List ▶** Highlight a Play List →  [Play]

- Files are played back in the saved order.

### ■ Delete Files

> After Step 1, (highlight a file →)  [Menu] → **Delete this** or **DEL all from list** → **YES**

### ■ Change Order

> After Step 1,  [Menu] → **Oder to play** → Select a file → Select a target →  [Finish] →  [Finish]

## microSD Card

- 941P is compatible with up to 2 GB commercial microSD Cards and up to 16 GB commercial microSDHC Cards (as of December 2009). For information on memory card compatibility, visit the website below (Japanese). Note that microSD Cards not listed on the website may not function properly.
  - From Yahoo! Keitai  
P-egg (as of December 2009)  
**Main Menu ▶ Yahoo! ▶ Bookmarks**  
**▶ Panasonic Site (P-egg)**
  - From PC  
<http://panasonic.jp/mobile/>  
Not all operations are guaranteed by the microSD/microSDHC Cards listed.
- Format new microSD/microSDHC Cards for use with handset (👉P.10-20).

### Note

 
- SoftBank is not liable for damages from accidental loss/alteration of microSD Card information. Keep a copy of Phone Book entries, etc. in a separate place.
- microSD Card has no write protect feature; there is a risk of accidental erasure/overwriting of files.

## microSD Card Installation




- Turn off handset before inserting/removing microSD Card.
- Battery Installation: [P.1-15](#)

### Inserting

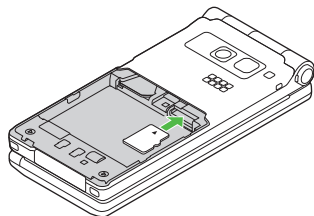- 1 Insert microSD Card until it clicks




### microSD Card Check

 
When microSD Card is installed correctly,  appears. If  appears, microSD Card cannot be used. Remove microSD Card from handset, and re-insert it. If  does not disappear, execute Check microSD ([P.10-23](#)) or format microSD Card ([P.10-20](#)).  
(Display Indicator: [P.1-10](#))

### Removing

- 1 Push microSD Card in
  - microSD Card pops out with a light push.

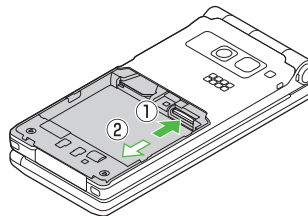


#### Note

- Do not turn off handset or remove battery/microSD Card while  flashes. microSD Card may be damaged or files lost.
- microSD Card may pop out when inserting/removing it.

## Format microSD Card

- Formatting microSD Card deletes all saved files/data.

Main Menu ► Tools ► microSD Backup

1  [Menu] → *microSD format*

2 Enter Phone Password → *YES*

### Note

 
- Do not turn handset power off or remove microSD Card or battery while formatting; may damage handset or microSD Card.
- microSD Cards formatted on other devices may not be used. Format microSD Card on 941P before use.
- Handset cannot format incompatible microSD Cards.
- If format fails, turn power off and remove microSD Card from handset. Reinsert microSD Card and format it again.

## Viewing microSD Card Files

View Phone Book entries, Calendar events, Tasks, mail messages, Notepads and Bookmarks backed up on microSD Card.

Main Menu ► Tools ► microSD Backup


1 Select a category

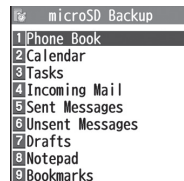

Category List

2 Select a file

 Backup date appears as file name.



File List

3 Select a data



Data List



Detailed Data

### Note

- If messages on microSD Card do not appear correctly, copy messages to handset (P.10-21) and execute **Charset Conversion** (P.14-23).

## Handset Data Backup

Back up handset data (Phone Book, Calendar, Tasks, Messages, Notepad, Bookmarks, Content Keys) to microSD Card; restore handset data after accidental loss/alteration.

- Back up Content Key: ☞P.10-24

### Backing up to microSD Card

Main Menu ► Tools ► microSD Backup

- 1 Highlight a category → ☞[Menu] → **Copy to microSD** (→ For **Bookmarks**, select an item)
- 2 Enter Phone Password → **YES**  
All files of selected category are backed up to microSD Card.

#### One File Backup

> Open a file → ☞[Menu] → **Copy to microSD** → **YES**

### Restoring from microSD Card

Main Menu ► Tools ► microSD Backup

- 1 Select a category

## 2 Restore One Item

Select a file → Highlight an item → ☞[Menu] → **Add to phone**

### Restore One File

Highlight a file → ☞[Menu] → **Add to phone** or **Overwrite to phone** → Enter Phone Password

### Restore All Files

☞[Menu] → **Add all to phone** or **Overwr. all to ph.** → Enter Phone Password

## 3 YES

#### Note

- Note that **Overwrite to phone** or **Overwr. all to ph.** erases all files of same category on handset.
- Video files of 100 MB or larger cannot be moved from microSD to handset.
- Files of 10 MB or larger except for Videos/Books files (BMO files) cannot be moved/copied from microSD to handset.
- Data backed up in other SoftBank handsets may not be restored in 941P depending on type and size.

#### Tip

- Delete Items from microSD Card ● View microSD Card Memory Capacity (☞P.10-23)

## PC File Transfers

### Folder Structure

Files moved or copied from handset to microSD Card are organized as follows:

- Save files in folders by file type.

<b>DCIM</b>		
● Still images saved to microSD Card		
<b>PRIVATE</b>		
<b>MYFOLDER</b>		
<b>Utility</b>		
Calendar	Calendar.BCK	Calendar Backup files
Contacts	Contacts.BCK	Phone Book Backup files
Rights		Content Key Backup files
Tasks	Tasks.BCK	Tasks Backup files
Memo	Memo.BCK	Notepad Backup files
<b>Mail</b>		
Drafts	Drafts.BCK	Drafts Backup files
Inbox	Inbox.BCK	Incoming Mail Backup files
Outbox	Outbox.BCK	Unsent Messages Backup files
Sent Messages	Sent Messages.BCK	Sent Messages Backup files
<b>My Items</b>		
Book		E-comics, etc.
Bookmarks	Bookmarks.BCK	Bookmarks Backup files
Flash(R)		Flash® files

Games and More	S! Appli
Music	Sound files with .3gp, .mp4, .smc
Other Documents	Other files
Pictograms	My Pictograms
Pictures	Still images moved/copied from handset to Main Folder in microSD Card
Sounds & Ringtones	Sound files of: up to 10 MB with .3gp, .mp4, up to 300 KB with .mid, .midi, .amr
Videos	Videos moved/copied from handset to Main Folder in microSD Card
Widget	Widget contents
WMFile*	PC movie files saved from PC to microSD Card
<b>SD_VIDEO</b>	
● Videos saved to microSD Card	
● Videos recorded from Digital TV or transferred from HDD recorder.	

- Some copy protected files have extensions different from above.
- When moving/copying videos from microSD Card to handset, file format or file size may change.

\* If WMFile does not appear in My Items (MYFOLDER), create and save a folder titled WMFile.


## Using Data on microSD Card

With a microSD Card inserted, connect handset with a PC via USB cable (not included) to read/write data from/onto microSD Card.

Following equipment is required:

- Connector Cable: USB cable
- PC: PC with USB port (Universal Serial Bus Specification Rev 1.1/2.0 compliant)
- Compatible Operating Systems: Windows® XP, Windows Vista® (Japanese version in each)

**Main Menu ▶ Settings ▶ Connectivity ▶ USB Mode ▶ microSD Mode**

- 1 Connect handset to PC via USB cable while handset is on
  - PC recognizes microSD Card.
  -  appears in Standby (handset).

### Note

- Even if incoming call arrives, reading/writing data continues during calls. After calls, check indicators on PC to see if reading/writing is complete.
- File names saved in microSD Card may not properly appear if changed on PC.

## microSD Card Functions

### ■ Restore microSD Card items (Check microSD)

Use Check microSD to repair microSD Card data errors.

> **Main Menu ▶ Tools ▶ microSD Backup ▶  [Menu] ▶ Check microSD ▶ YES**

- Do not turn handset power off or remove microSD Card or battery while formatting; may damage handset or microSD Card.
- It may take 30 seconds or longer to complete Check microSD depending on data volume on microSD Card.
- Handset cannot check incompatible or unformatted microSD Cards.
- Handset may delete files and folders that fail to be restored.

### ■ Delete Items from microSD Card

> **Main Menu ▶ Tools ▶ microSD Backup ▶ Select a category ▶ (Highlight a file →)  [Menu] ▶ Delete this or Delete all (▶ For Delete all, enter Phone Password) ▶ YES**

- Content Key cannot be deleted.

### ■ View microSD Card Memory Capacity

> **Main Menu ▶ Tools ▶ microSD Backup ▶  [Menu] ▶ microSD info**

## ■ Back Up Content Key

Copy Content Keys to microSD Card from handset or to handset from microSD Card.

> **Main Menu** ▶ **Settings** ▶ **Security** ▶ **Content Key**

▶ **Copy to microSD** or **Copy from microSD** ▶ Enter Phone Password

- Content Keys with expiration dates or usage limits cannot be backed up.
- USIM Card inserted when Content Keys were moved to microSD Card must be inserted to move Content Keys from microSD Card.
- Some applications are not compatible with handset. Only Content Keys for compatible applications are backed up. Also, note that some keys are moved to microSD Card when backed up. Contact SoftBank Mobile Customer Center, General Information for more information (☎P.19-34).
- Backing up Content Keys overwrites previously saved Content Key backup.

## Variety Photo Viewer

View still images in Pictures folder (Data Folder) using Variety Photo Viewer. Slideshow is also available.

 
- Variety Photo Viewer is available in Horizontal Open Position only.
- Only JPEG files are supported by Variety Photo Viewer.

### Viewing Still Images

**Main Menu** ▶ **Data Folder** ▶ **Pictures**

#### 1 Variety Photo Viewer

Folder list appears.

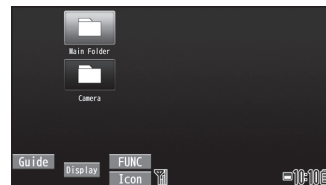

Folder List

#### 2 Select a folder

File list appears.



File List



- 3 Select a file  
File image appears.

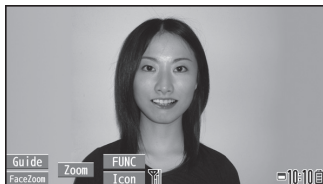 


Image Window

- To zoom in/out: **[Zoom]/[Return]**
- To view previous/next file: **[Left/Right]** (For Touchpad operations, slide from left to right for previous file or right to left for next file)

### Operation Guide

> **[Guide]**

### Toggle Icons On/Off

> **[Icon]**

#### Note

- Copy protected files are not viewable.
- Connect handset to a TV (P.11-18) and view images using Variety Photo Viewer.

## Available Operations

### From Folder/List Window

In folder/file list window, press **[FUNC]** for following operations. Follow onscreen instructions.

Item	Operation/Description
<b>Slideshow</b>	Start slideshow (P.10-26)
<b>Kisekae*</b>	Change theme for folder list

\* Folder list window only

### From Image Window

In Image Window, press **[FUNC]** for following operations. Follow onscreen instructions.

Item	Operation/Description
<b>Slideshow</b>	Start slideshow (P.10-26)
<b>Zoom</b>	Enlarge to 200%
<b>Rotate</b>	Each press rotates image 90° clockwise
<b>Attach to S! Mail</b>	Send file via S! Mail (From Step 2 on P.14-4)
<b>Post blog</b>	Post file to a blog (P.8-7)
<b>Effect</b>	Set slideshow effects
<b>Delete</b>	Delete file

#### Note

- Some files may not appear right side up when posted to a blog.

### Face Zoom

Face Zoom is available when a face is detected.

> In Image Window, **[FaceZoom]**

- When more than one face is detected, each press zooms in on another face.

 
## Touchpad Operations

### Use Touchpad operations in Variety Photo Viewer.

- Touchpad:  P.1-23


#### Scroll Page/Screen

- Slide left/right to scroll files in File List.
- Slide left/right to scroll images in Image Window.

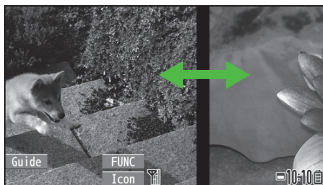

#### Zoom

 Slide up/down to zoom in/out from Image Window.

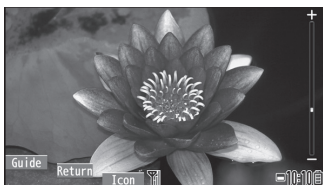

## Slideshow

View files in succession.

Main Menu ▶ Data Folder ▶ Pictures  
▶ Variety Photo Viewer

1 View All Images  
 [FUNC] → *Slideshow*


#### View Selected Folder

Select a folder →  [FUNC] → *Slideshow*  
Slideshow starts.

#### Note

- Press and hold  in Standby from Horizontal Open Position to show files in all folders.

## Slideshow Operations

Press  during slideshow to pause and open menu. Follow onscreen instructions.



### Change Slideshow Settings

Pause slideshow and select **Settings**. Follow onscreen instructions.

Item	Operation/Description
<b>Time</b>	Set slide display time
<b>Effect</b>	Set transition effects
<b>Face zoom</b>	Zoom in on faces
<b>Random</b>	Shuffle files
<b>Repeat</b>	Repeat slideshow

#### Note

- Face zoom may be unavailable depending on file type.

# 10

## Managing Files