 



Getting Started

Package Contents

- Handset (COLOR LIFE 5)

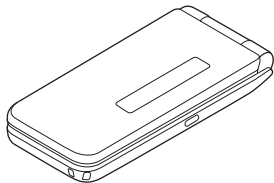

 - Battery (PMBBH2)



- クイックスタート (Japanese)
- お願いとご注意 (Japanese)
- 保証書 (Japanese)

Note

- Use SoftBank Mobile specified AC Charger (sold separately) to charge Battery.
- For more information about AC Charger and accessories, please contact SoftBank Customer Support, General Information (☎ P.9-25).
- COLOR LIFE 5 accepts microSD or microSDHC Card (not included). Purchase one to use related functions (☎ P.1-5, P.9-1).

Using This Guide

Before reading on, please make note of the following:

 
- COLOR LIFE 5 is referred to as "handset."
- "401PM" refers to this handset "COLOR LIFE 5."
- "microSD Card" and "microSDHC Card" are referred to as "microSD Card."
- Screenshots, etc. are for reference. Actual handset windows, menus, etc. may differ.
- Key icons are simplified.
- Most operation descriptions begin in Standby.
- Pressing a Key for more than one second is described as "Press and Hold."

Guide Symbols

Softkeys

Press the corresponding Key to execute the function or operation indicated at the bottom of Display.

Example:

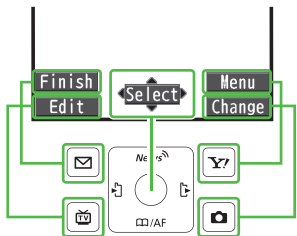


Japanese Functions & Services




When "(Japanese)" appears in a title, Japanese ability is required to use full range of the function or service.

 Multi Selector

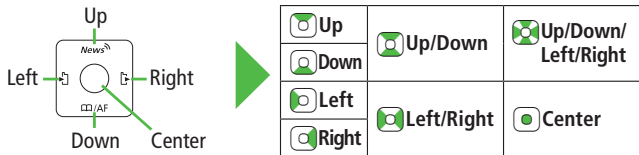Use Multi Selector to select items, navigate menus, etc. In this guide, Multi Selector operations are indicated as shown below.

 


USIM Card Installation

- Always power off handset before removing Battery.
(Removing Battery Cover:  P.9-22/Removing Battery:  P.1-4)
- USIM PINs:  P.1-14


Inserting

- 1 With IC chip face down, insert USIM Card

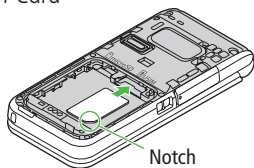


Removing

 - 1 Slide out USIM Card gently

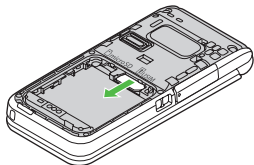

Important

- USIM Card is the property of SoftBank Mobile.
- Return USIM Card to SoftBank Mobile upon service cancellation.
- USIM Card will be reissued for a fee if lost or damaged.
- If USIM Card/handset with USIM Card installed is lost or stolen, contact SoftBank Customer Support or SoftBank Mobile Global Call Center ( P.9-25).
- Back up USIM Card files. SoftBank Mobile is not liable for lost files.
- USIM Card specifications/performance may change without prior notice.
- Pre-installed S! Appli may be unusable while a different or replacement USIM Card is installed.
- Some downloaded files may be inaccessible after upgrades/repairs, USIM Card/handset replacement.
- Returned USIM Cards are recycled.

Note

- Do not forcefully insert/remove USIM Card; may damage handset/USIM Card.
- Avoid touching USIM Card terminals or IC chip. Doing so may hinder performance/USIM Card recognition.

 
Charging Battery

Battery Installation

- Always power off handset before removing Battery Cover (☞ P.9-22).


Inserting

- 1 Align Battery contacts with handset pins

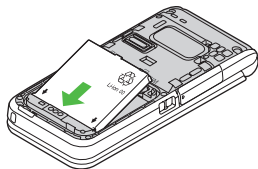

Removing

 - 1 Lift Battery out

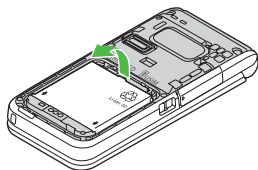

Note

 
- Lithium-ion batteries are valuable and recyclable resources.
 - Recycle used lithium-ion battery at shops displaying this symbol:
 - To avoid fire or electric shock, do not:
 - Short-circuit Battery
 - Disassemble Battery



Li-ion 00

Charging Battery

- Use only specified AC Charger (sold separately).
- Open/Secure External Device Port Cover: P.9-22

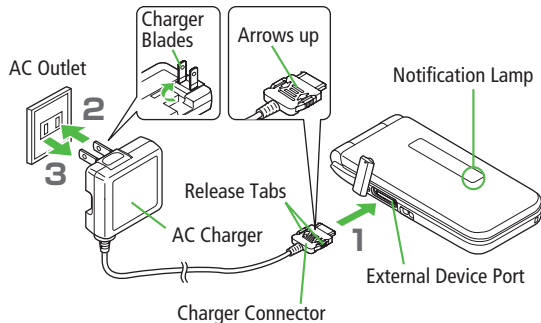


- 1 Connect AC Charger to handset
- 2 Extend Charger blades, and plug AC Charger into AC outlet
Notification Lamp illuminates and charging starts.
When charging is complete, Notification Lamp goes out.
- 3 When charging is complete, unplug AC Charger, then disconnect handset
Squeeze release tabs to remove Charger connector, and replace Port Cover.

microSD Card Installation

- Always power off handset before removing Battery Cover (P.9-22).
- Handset Data Backup: P.9-1

Inserting

 - 1 Insert microSD Card until it clicks

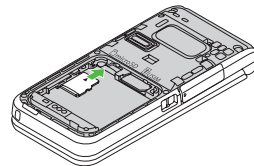


Format microSD Card


- > **Main Menu** ▶ **Tools** ▶ **microSD Backup** ▶ **Backup/Refer Data** ▶
 [Menu] ▶ **microSD format** ▶ Enter Phone Password ▶ **YES**
- Formatting microSD Card deletes all saved files/data.
 - Do not power off handset or remove microSD Card while formatting; may damage handset or microSD Card.

Removing

 - 1 Push microSD Card in
 - microSD Card pops out with a light push.

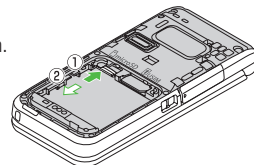

Parts & Functions

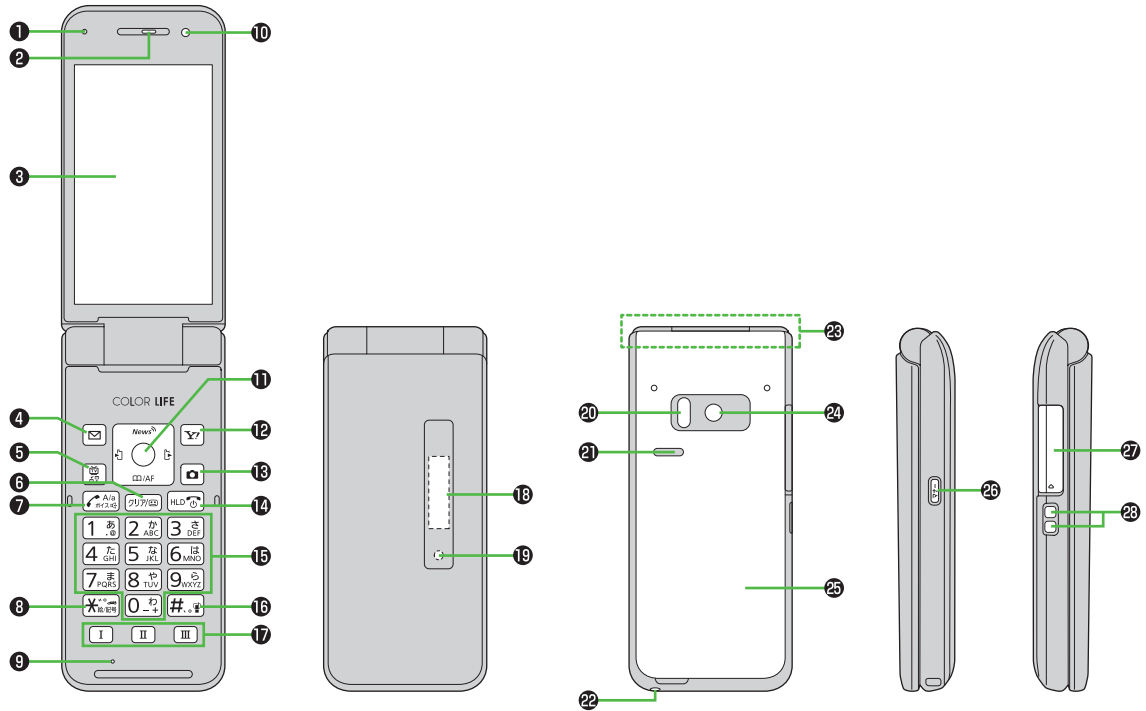 

Getting Started

1 Pressure-release Vent

2 Earpiece

3 Main Display

4 Mail Key

- Open Messaging menu
- Execute Upper Left Softkey function

5 TV Key

- Activate TV
- Open TASK MENU
- Execute Lower Left Softkey function

6 Clear Key

- Delete characters
- Cancel menus
- Use Answer Phone

7 Send Key

- Initiate or answer calls
- Toggle upper/lower case in text entry windows
- Use Voice Dial

8 * /Pictograph/Symbol/Driving Mode Key

- Enter "*"
- Access pictographs in text entry windows
- Toggle Driving Mode on/off

9 Mic

10 Light Sensor

- Detects ambient light

11 Multi Selector

- Move cursor or select menus (☞ P.1-2)
- Select icons
- Open Phone Book
- Open Received call logs
- Open Redial logs

12 Yahoo! Keitai Key

- Open Yahoo! Keitai top menu
- Execute Upper Right Softkey function

13 Camera Key

- Activate Camera
- Execute Lower Right Softkey function

14 End/Escape & Power Key

- Power on/off (☞ P.1-8)
- End calls
- Return to Standby

15 0 - 9 Numeric Keys

- Enter phone number/text

16 # /Manner Mode Key

- Enter "#"
- Toggle Manner Mode on/off

17 I II III Multi One-Touch Key

- Execute set function

18 External Display (☞ P.1-11)

19 Notification Lamp

- Flashes for incoming transmissions
- Lights for charging

20 Infrared Port

- Transfer data via Infrared

21 Speaker

22 Strap Eyelet

23 Internal Antenna Area

24 Camera

25 Battery Cover

26 Side Key

- Press to mute ringer [Handset Closed]
- Toggle External Display
- Activate/cancel Manner Mode

27 External Device Port

- Connect AC Charger, earphone or other accessories here

28 Charging Terminals

Note

- Do not press microphone button when connecting Earphone with Mic. Doing so may cause malfunction. If pressed accidentally, unplug then reconnect it.

Basic Operations


Power On/Off

1 Power On

Press and Hold 

Start-up window and waterproof precautions appear and handset enters Standby.

 
 
Power Off

Press  for 2+ seconds → **YES**

Handset shuts down.

Initial Setup

The first time handset powers on and Initial setting window appears, select **YES** and set the following: (Each item can be set separately.)

| | |
|--|--|
| Date & Time* ( P.1-9) | Set date and time |
| Phone Password ( P.1-14) | Enter 9999 , and enter new Phone Password |
| Key Tone | Select ON or OFF |
| Font Size | Set Display font size all at once |

*May set/adjust automatically upon network connection.


Retrieving Network Information

Pressing , ,  or  for the first time in Standby may initiate Network Information retrieval. Press  to retrieve it.

- Update Network Information to use messaging, Internet, etc.
- Update Network Information manually: **Main Menu** ► **Settings** ► **Connectivity** ► **Retrieve NW Info** ► **YES**

Keyguard

Lock handset Keys to prevent accidental operation.

- While set,  appears in Standby.

1 Press and Hold

- To cancel Keyguard, repeat operation.

While Keyguard is Active

- Answer incoming calls by Pressing .
- Once emergency numbers (110, 119, 118) are dialed, Keyguard is canceled.

English Interface

Main Menu ► 設定 ► ディスプレイ設定 ► Language ► English

Date & Time

Main Menu ► Settings ► Date & Time

1 *Date & Time*

2 Enter year → Enter date → Enter time

World Clock

> After Step 2, highlight time zone → [Edit] →  to select a time zone → [Select]

● Alternatively, in Step 1, *World Clock* → ON →  to select an area → [Select].

My Number

1  → 

Edit Account Details

Save phone number, mail address, street address, etc. in Account Details.

● Handset phone number cannot be edited or deleted.

> After Step 1, [Edit] → Enter Phone Password → Edit → [Finish]

 
Send Account Details via Infrared

> After Step 1, [Ir]

Display

Icons & Indicators

Main Display

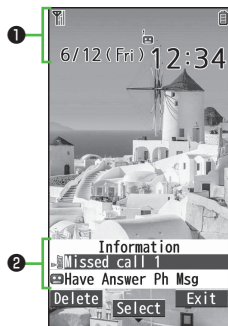

1 Display Indicators

Signal Strength

Strong
 Moderate
 Weak
 Low

Offline Mode Active

OUT Out-of-Range

Battery Level

→ → → → (Red)

Data Transmission

3G/GSM Packet Transmitting

Network Service

Operator (set for Select Operator)
Out-of-Range

3G / GSM 3G/GSM Packet Transmission Available*

3G / GSM 3G/GSM Packet Transmission Unavailable*

* Appears only while abroad

Secure Content

PC Site Browser Active

Infrared Active

USB Cable Connected

Keyguard Active

Voicemail

(Blue) Bluetooth® Device Connected

microSD Card Installed

Unread Message

Unread Urgent News

Manner Mode Active

Software Update
(Notification/Updating/Result)

Digital TV Active

Timer Recording in Progress

Recording TV Program/Paused

Music Playback/Paused

Vibration Active (Incoming Call/Message)

Incoming Call/Message Ringtone Disabled

Driving Mode Active

USB Mode

Communication Mode

 
microSD Mode


Answer Phone Active (Number of Recorded Messages (Voice Call))

Answer Phone Active (Number of Recorded Messages (Video Call))

2 Information Window (P.1-12)

External Display

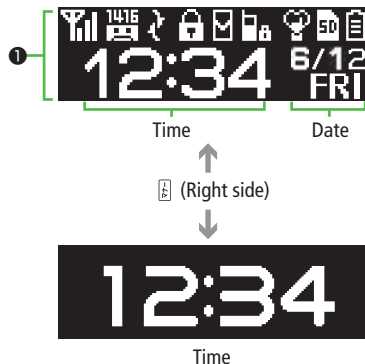

- Upon closing handset, External Display illuminates for 15 seconds.
- If there are missed calls, each  press shows up to three Incoming Call Logs starting with the latest.

1 Display Indicators

Signal Strength

 Strong  Moderate  Weak  Low

 Offline Mode Active

 Out-of-Range

Battery Level



 Keyguard Active

 Voicemail

 (Blue) Bluetooth® Device Connected

 microSD Card Installed

 Unread Message

 Unread Urgent News

 Manner Mode Active


 Software Update
(Notification/Updating/Result)

 
USB Mode

 microSD Mode


Information Window



In Standby, Information Window opens for missed events.
Select a notification to view/access information.

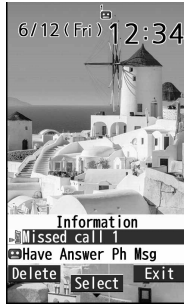 - 1 Highlight an item → 
Follow onscreen instructions.

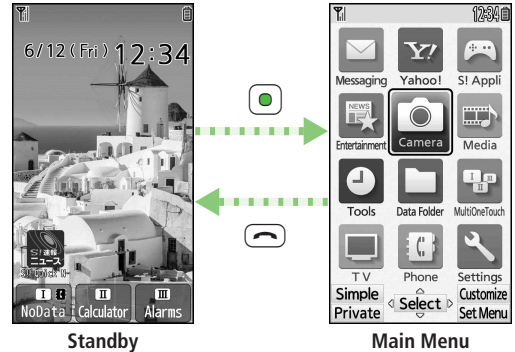

Handset Menus



- 1 In Standby, 
Main Menu appears.
- 2  to highlight an icon →  [Select]
Selected function menu appears.
 - To return to Standby: 

Function List

| Messaging |
|--------------------|
| Incoming Mail |
| Create New |
| Retrieve New |
| Create New SMS |
| Drafts |
| Templates |
| Sent/Unsent |
| Server Mail |
| Create New PC Mail |
| Settings |
| Memory Status |
| Yahoo! |
| Yahoo! Keitai |
| Menu List |
| Bookmarks |
| Saved Pages |
| Web Search |
| Enter URL |
| History |
| PC Site Browser |
| Set Yahoo! Keitai |
| Reset |

| S! Appli |
|---------------------|
| S! Appli List |
| S! Appli Settings |
| S! Appli History |
| Information |
| Entertainment |
| S! Info Ch./Weather |
| S! Quick News |
| Post Blog |
| Camera |
| Camera |
| Video Camera |
| Media |
| Music |
| Videos |
| Tools |
| Alarms |
| Calendar |
| Calculator |
| Notepad |
| Tasks |
| Sound Recorders |
| Barcode Reader |

| Location Settings |
|---------------------|
| Infrared |
| Bluetooth |
| Music Player |
| microSD Backup |
| Templates/User Dic. |
| Disaster Tool |
| Data Folder |
| Pictures |
| Ring Songs&Tones |
| S! Appli |
| Music |
| Videos |
| TV |
| Books |
| Customized Screen |
| Templates |
| Font |
| Other Documents |

| MultiOneTouch |
|----------------------|
| MultiOneTouchBtn I |
| MultiOneTouchBtn II |
| MultiOneTouchBtn III |
| TV |
| Watch TV |
| Timer Watching |
| Timer Recording |
| Recording Result |
| TV Link |
| Channel List |
| Channel Setting |
| User Settings |

| Phone |
|---------------------|
| Phone Book |
| Create New Entry |
| Call Log |
| Account Details |
| S! Addressbook BkUp |
| Group |
| Memory Manager |
| Restrictions |
| Settings |
| Memory Status |
| Settings |
| Sound Settings |
| Display Settings |
| Customized Screen |
| Incoming Settings |
| Phone Settings |
| Date & Time |
| Security |
| Call Settings |
| Video Call |
| International Call |
| Connectivity |
| Notification Light |

Handset Security

USIM PINs

| | |
|-------------|---|
| PIN | 4 to 8-digit code used to prevent unauthorized handset use. <ul style="list-style-type: none">● When PIN Authentication is ON, PIN entry is required each time handset is powered on (with USIM Card installed). |
| PIN2 | Required for call cost setting. |

- PIN and PIN2 are set to **9999** by default.

PIN Authentication

Main Menu ► **Settings** ► **Security** ► **PIN Authentication**

- 1 Enter Phone Password → **PIN Authentication** → **ON** or **OFF** → Enter PIN

PIN/PIN2 Lock & Cancellation (PUK/PUK2)

PIN Lock or **PIN2 Lock** is activated if **PIN** or **PIN2** is incorrectly entered three times. **Cancel PIN Lock** or **PIN2 Lock** by entering **PIN Unblocking Key (PUK/PUK2)**.

- For information about PUK/PUK2, contact SoftBank Customer Support, General Information (☎ P.9-25).

Note

- If PUK/PUK2 is incorrectly entered ten times, USIM Card is locked and handset is disabled. Write down PUK/PUK2.
- For USIM Card recovery, contact SoftBank Customer Support, General Information (☎ P.9-25).

Passwords

The following passwords are required for handset use.

| | |
|---|---|
| Phone Password | 4 to 8-digit number required to use/change some handset functions. (9999 by default.) |
| Center Access Code (Security Code) | 4-digit number specified at initial subscription; required to access optional services via landlines, set Call Restrictions, subscribe to paid content. |

- Enter number within 15 seconds. _ appears for each digit entered.
- Do not forget Phone Password/Center Access Code (Security Code). For password recovery, contact SoftBank Customer Support, General Information (☎ P.9-25).
- Do not reveal Phone Password/Center Access Code (Security Code). SoftBank Mobile is not liable for misuse or damages.

Note

- If entered incorrectly, an error message appears. Reenter the password.
- If Center Access Code (Security Code) is entered incorrectly three times, Call Barring settings lock; Center Access Code (Security Code) must be changed. For details, contact SoftBank Customer Support, General Information (☎ P.9-25).
- If Security Code has been changed on handset, enter the number to activate/cancel Call Barring.

Change Phone Password

> **Main Menu** ► **Settings** ► **Security** ► **Change Phone Password** ►

Enter current Phone Password ► Enter new Phone Password ► **YES**

Mobile Manners

Minding Mobile Manners





Please use your handset responsibly. Inappropriate handset use can be both dangerous and bothersome.

- Power off handset in theaters, museums and other places where silence is the norm.
- Refrain from use in restaurants, lobbies, elevators, etc.
- Observe signs and instructions regarding handset use aboard trains, etc.
- Refrain from use that interrupts the flow of pedestrian or vehicle traffic.

Manner-related Features


| | |
|----------------------|--|
| Manner Mode | Mute handset tones and activate Vibration for incoming transmissions. |
| Vibration | Activate in public places, meetings, etc. for silent call/message alerts. |
| Ringer Volume | Adjust call/message tones, etc. |
| Offline Mode | Suspend all handset transmissions. |
| Answer Phone | Use to handle incoming calls when inappropriate/unsafe to answer. |
| Driving Mode | While driving, send a voice message informing the caller that you cannot answer the call. (Handset does not ring.) |

 Manner Mode

 

 
- 1 In Standby, Press and Hold 
 appears.
 - To cancel: Press and Hold  again
 - To activate/cancel while handset is closed: Press and Hold 

Offline Mode

[Main Menu](#) ► [Settings](#) ► [Call Settings](#) ► [Offline Mode](#)

- 1 **YES**
 appears.
 - To cancel: Follow the same steps

Driving Mode

- 1 In Standby, Press and Hold 
 appears.
 - To cancel: Press and Hold  again