

Text Entry

Entering Text


Enter alphanumerics, hiragana, kanji, katakana, symbols and pictographs.

- There are two character input methods: 5-touch and 2-touch
In this guide, examples are described for 5-touch.

2-touch

Press two Numeric Keys to enter a character.

Text Entry Window

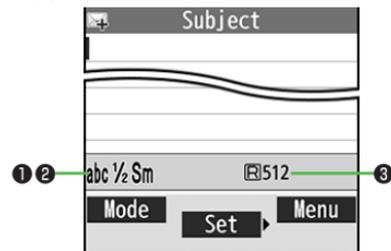

① Character Input Methods		Operations
5-touch/2-touch		Press and Hold [Mode]
② Input Modes (Double-byte/Single-byte)		Operations
5-touch	漢 ¹ / ₁ : Kanji (hiragana) (double-byte) か ¹ / ₁ / 加 ¹ / ₂ : Katakana abc ¹ / ₁ / abc ¹ / ₂ : Uppercase alphanumerics abc ¹ / ₁ Sm / abc ¹ / ₂ Sm: Lowercase alphanumerics 123 ¹ / ₁ / 123 ¹ / ₂ : Numbers	[Mode] → Select a character type
2-touch	2 ¹ / ₁ / 2 ¹ / ₂ : Uppercase alphanumerics/ Regular kana 2 ¹ / ₁ Sm / 2 ¹ / ₂ Sm: Lowercase alphanumerics/ Small kana	<ul style="list-style-type: none">To toggle double-/single-byte: [Mode]To toggle Small kana/Regular kana:
③ Remaining Bytes		

Entering Characters

Example: Enter 鈴木

1 In alphanumeric mode,  [Mode] → **漢字**

す:  three times

ず: * →  three times → 


き:  twice

* When the next character is on the same Key, Press  first to move cursor.

2  to enter suggestion list

● To exit list: 

3  to select 鈴木

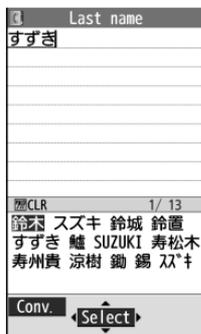

Other Input Functions

Enter katakana/ alphanumerics	 [Mode] → Select input mode (character type) → Enter characters
Enter small kana (っ, っ, etc.)	Enter a character →  ● Alternatively, Press a Key repeatedly for assigned small kana.
Enter uppercase letters	Enter a character →  ● Alternatively, Press a Key repeatedly for assigned uppercase letter.
Add ° or °	Enter a character to add ° or ° →  for ° or  twice for ° ● In single-byte katakana mode, enter ° or ° as a single-byte character.
Insert line feed	 [Line FD] to insert line feeds in text
Add space at end of text	
Insert space within text	 repeatedly until single-byte space appears*, or  [Menu] → Input Space (Double-byte (single-byte) space is entered in double-byte (single-byte) input mode.)
Reverse toggle	 [Rev.] Example: From c, Press to toggle as follows: c → b → a → 2...
Move cursor to beginning/ end of sentence	 [Menu] → Jump → To beginning or To end
Undo	 [Undo]

*Space cannot be entered in number mode. Use symbol list.

Pictographs/Symbols/Smileys/URLs

- Pictographs do not appear in messages sent to incompatible SoftBank handsets or most e-mail addresses.

1 In text entry window, 

List log may appear first.

マイ絵¹: My Pictograms
共通²: Universal (cross-carrier) pictographs
全絵: All pictographs
記号: Symbols
顔文字: Smileys
URL: URLs

¹ Only in S! Mail text entry window

² Only for S! Mail



2 To toggle tabs,  or 

3  to select a pictograph/symbol/smiley/URL

- To close list: 

Templates

Insert templates (greetings, URLs, smileys, etc.).

1 In text entry window, Press and Hold 

- Not available in number mode.

2 Select a category → Select a template

Additional Features

1 In text entry window,  [Menu] → *Templates/Quote*

2 Select an item

Item	Operation/Description
Kuten code	Enter a character code > Enter a character code (4 digits)
Quote phone book	Quote Phone Book entry details > Select an entry → Check items →  [Finish]
Quote acct detls	Quote Account Details > Enter Phone Password → Check items →  [Finish]
Bar code reader	Activate Bar Code Reader to insert scanned result

Editing Text

Deleting & Replacing

1 Delete Characters within a Line

Place cursor before a character → 

A character after cursor is deleted.

- Press and Hold  to delete all characters after cursor.

Delete Characters from the End of Text

Place cursor at the end of text → 

A character before cursor is deleted.

- Press and Hold  to delete all characters before cursor.

2 Enter another character

Copy/Cut & Paste

1 In text entry window,  [Menu] → *Copy* or *Cut*

2 Select Text to Copy/Cut

Place cursor before (or after) text to select →  [Start] →

Place cursor after (or before) text →  [End]

Select All (In S! Mail Message Text Entry Window Only)

 [All] → 

3 Place cursor at target location →  [Menu] → *Paste*