

## Getting Started

Capture still images or record video.

### Detect Personal & Pet

Locks focus on the face of a person or pet. Register people's faces; related information appears in Viewfinder upon face detection.

### Continuous AF

Focus continuously adjusts as the framed subject's position changes.

### Select Camera

002SH is loaded with preset camera modes tailored for various purposes/occasions; select a camera mode to suit subject/shooting conditions.

### Album

Sort saved images into up to 500 albums; create original albums as needed.

### Important Mobile Camera Usage Notes

- Clean dust/smudges from lens cover with soft dry cloth before use.
- Mobile camera is a precision instrument, however, some pixels may appear brighter or darker.
- Shooting/saving images while handset is hot may affect the image quality.
- Exposing lens to direct sunlight may damage color filter and affect image color.

### Auto Shut-off

- Before image capture/recording, mobile camera shuts down after a period of inactivity and handset returns to Standby.

### Shutter Click

- Shutter click and Self-timer tone sound at fixed volume regardless of handset settings.

## Photo Camera & Video Camera Overview

Focus modes and sizes shown below are defaults; those with \* are fixed.

		Description	Focus Mode	Size
Standard Shooting	Easy Auto Camera	Capture nearby subjects easily (settings partially changeable)	Normal(Face)*	14M
	Pro Auto Camera	Capture nearby subjects easily (settings mostly changeable)	Normal(Face)	14M
	Quick Camera	Capture distant scenery quickly	Manual Focus*	3M
Subject & Conditions	Scene Cameras	Select one according to subject/shooting conditions	Normal(Face)*	14M
	Monochrome Camera	Capture black and white images	Normal(Face)*	14M
	Sepia Camera	Capture sepia images	Normal(Face)*	14M
	Long Exposure Camera	Capture images in low light (fireworks, night scenes, etc.)	Normal(Face)*	14M
	Shot Memo Camera	Improve text readability in captured memos, tables, etc.	Center Auto Focus*	5M
Specific Objectives	Wallpaper Camera	Show mock Clock/Calendar in Viewfinder to capture image and set it as Wallpaper	Normal(Face)	Wallpaper*
	Auction Camera	Use guide to capture multiple images for posting on auction sites	Center Auto Focus	VGA
	Messaging Camera	Capture and send images via mail easily	Normal(Face)*	VGA
	Blog Camera	Capture and post images to blogs easily	Normal(Face)	VGA

		Description	Focus Mode	Size
Auto Shutter Release	Look Back Camera	Play sound and release shutter automatically when subject turns face to camera	Normal(Face)*	14M
	Smile Camera	Release shutter automatically when subject smiles	Normal(Face)*	14M
	Self Timer Camera	Release shutter automatically after selected time elapses	Normal(Face)*	14M
Consecutive Shooting	Rapid Shooting Camera	Capture up to 100 images rapidly	Normal(Face)	Full HD
	Three-Shot Camera	Capture three consecutive images of up to 14M size automatically	Normal(Face)	14M
	Best Select Photo	Select best image from a series of rapid shot images including moments immediately before shutter releases	Center Auto Focus	QVGA
Fun Cameras	Fish-eye Camera	Capture images with enhanced barrel distortion as if shot with full-frame horizontal fisheye lens	Center Auto Focus*	3M
	Miniaturize Camera	Capture images of scenery, etc. that resemble miniature models as if shot with a tilt-shift lens	Center Auto Focus*	5M
	Drawable Camera	Drag on captured image to scribble or sketch	Normal(Face)*	Wallpaper

Additional  
Cameras

Pretty Arrange Camera

Touch up faces in captured images

Normal(Face)\*

5M

Self Portrait Camera

Use guide to capture self portraits

Normal(Face)\*

5M

Face Register Camera

Register name and note for faces

Normal(Face)\*

VGA\*

HD Video Camera

Record long high quality video

Normal(Portrait)

HD\*

Pro Auto Video Camera

Record video with more customizable options

Normal(Portrait)

HD

Golf Swing Video Camera

Record and check golf swing

—

Wide\*

Video Camera for Mail

Record small video easily to send it via mail


Normal(Portrait)

QCIF

## Video Camera

**Camera-in-Use Light**

- LED beside the lens flashes red while mobile camera is active. LED illuminates red while recording video.

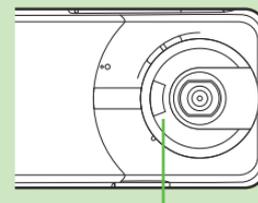

Camera-in-Use Light

## Capturing Still Images

### Viewer Position

(Landscape Display Touch Panel Operations)  
Follow these steps to capture someone's image via **Pro Auto Camera**:

- 1 
- 2 Rotate Display to Viewer position
- 3 Tap  ➔ Swipe to select **Pro Auto Cam**



- 4 Tap **Pro Auto Camera**
  - Pro Auto Camera activates.

### 5 Frame subject on Display


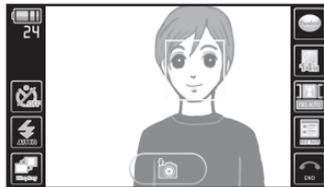


Photo Viewfinder  
(face detected)

- Focus is locked on the face of a detected person or pet automatically for Pro Auto Camera, Easy Auto Camera, etc. (Face auto focus)
  - When multiple faces are detected, frame appears on each face; tap one on which to lock focus.
  - Detection may fail depending on face angle, distance from subject or environment.
- To use Detect Personal, first register a face with a name, etc. If camera detects registered face, saved name, etc. appears in Viewfinder; handset automatically sorts saved images to designated folder (Portrait & Pet).
  - Camera cannot detect registered faces and pets at the same time.

### 6

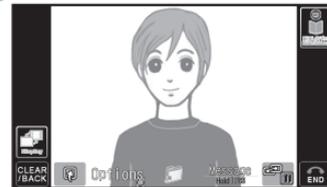

Captured Image Window

- Shutter clicks; captured image appears.

### 7

- Tap 
  - Image is saved. (Viewfinder returns.)
  - Open saved images via Album or Data Folder.

### 8

- Tap **END** ➔ **Camera shuts down**

#### Mobile Light

- Mobile Light may illuminate automatically depending on ambient light level or camera mode. Follow these steps to turn setting off:


[Photo Viewfinder] Tap  ➔ Tap  twice

- May require access via **MENU** depending on camera mode.

## Pre-Image Capture Operations (Touch Panel)

Indicators appear on Display. Tap one to adjust the corresponding setting or execute the assigned command.

Indicators vary by camera mode.

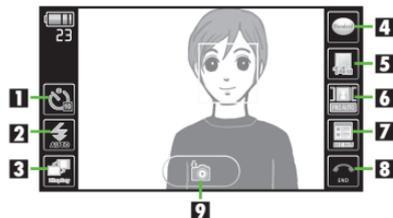

1	Self-timer	6	Switch cameras
2	Mobile Light	7	MENU
3	Toggle indicator view	8	Exit
4	Scene	9	Release shutter
5	Picture Size		

### Toggle Indicator View

[Photo Viewfinder] Tap

## Additional Operations

Zoom In/Out	Drag up or down across image
Adjust Brightness	Drag left or right across image
Focus Lock	Tap image

Tap **MENU** for more functions/settings.

### Opening Help

[Photo Viewfinder] Tap **MENU** → Tap **Help** twice

### Clamshell Open

(Portrait Display Handset Key Operations)  
Follow these steps to capture distant scenery via **Quick Camera**:

- Photo Viewfinder appears.

- **Quick Cam** →

## 3 Frame subject on Display

- Faces are not detected automatically for Quick Camera. For close-up portrait shots, press and use to adjust focus, then press .

## 4

- Shutter clicks; captured image is saved. (Viewfinder returns.)
- Open saved images via Album or Data Folder.

## 5

→ **Camera shuts down**

### Mobile Light

- Mobile Light may illuminate automatically depending on ambient light level or camera mode. Follow these steps to turn setting off:

[Photo Viewfinder] → **Mobile Light** → → **Off** →

## Pre-Image Capture Operations (Handset Keys)

Zoom In/Out	
Adjust Brightness	
Toggle Mobile Light Mode	
Toggle Indicator View	
Open Help	

Press to open Options menu for more functions/settings.

## Focus Lock

Lock focus on subject; camera continuously focuses on the subject even if it moves.

- Chase Focus tracks the subject's movement, and Continuous AF adjusts focus as the distance to the subject changes.
- May be unavailable depending on camera mode.

### 1 In Photo Viewfinder, frame subject in center of Display

### 2 Half press and hold or tap subject

- Focus Lock is set.
- To cancel, release or tap subject again.

### 3

- Captured image appears.
- Tap or **OK** to return to Viewfinder.

## Using Handset Keys

[Photo Viewfinder] Frame subject in center of Display → →

- To cancel Focus Lock, press again before pressing .

## Chase Focus

- Camera distinguishes the subject by color; light-colored subjects or subjects having the same color as the background may not be tracked correctly.

## Image Size & Usage

002SH Picture Size & Corresponding Usage:

14M	A3 prints
10M	B4 prints
5M	B5 prints
3M	L to 2L prints
Full HD	Full HD display wallpaper
Wallpaper	002SH Wallpaper
VGA	Blog posts, etc.
QVGA	Mail attachments, etc.

## Smart Resize Zoom

- At 14M(*Smart Resize*), Picture Size changes with zoom scale (print quality may be affected); check the size on indicator before image capture.

## Selecting Camera by Use

### Switching Cameras

(Landscape Display Touch Panel Operations)

- 1 In Photo Viewfinder, tap camera selection indicator (📷, etc.)



- 2 Swipe to select camera
- 3 Tap camera
  - Selected camera activates.
  - For subsequent operations, see "Using Selected Camera."

### Using Selected Camera

(Landscape Display Touch Panel Operations)

#### ■ Rapid Shooting Camera

- 1 Tap 📷
- 2 Tap mode twice
- 3 Frame subject on Display
  - ➡ 📷
  - After image capture, thumbnails appear.
- 4 Tap 📷
- 5 Tap Save
  - Save process may take some time depending on the number of captured images. If a confirmation appears, tap **Yes**, then tap **OK**.
  - Saved images appear in Data Folder (Pictures > Shot Pic).

#### Shooting Manually

After ⏸, press 📷 for each frame ➡  
From 4

#### Saving Selected Images

After ⏸, tap image (☑) ➡ Tap Save  
Using Photo Recommender

- Follow these steps to save an image from recommended images (automatically selected in terms of Face, Move, Sharpness and Macro, one for each).

After ⏸, tap 📷 ➡ Tap image (☑) ➡  
Tap Save

#### Creating Strobe Photo (Composite Image)

After ⏸, tap 📷 ➡ Tap Yes ➡ Tap OK

- Tap 📷 to save.
- May be unavailable depending on rapid shooting mode.

### ■ Look Back Camera

**1** Frame subject on Display ➔

Tap ,  or 

- Sound plays.

**2** Face detection activates and shutter releases; image appears

**3** Tap **OK**

- Viewfinder returns.

### ■ Smile Camera

**1** Frame subject on Display

**2** Smile detection activates and shutter releases; image appears

**3** Tap **OK**

- Viewfinder returns.

### ■ Self Timer Camera

**1** Frame subject on Display



- Countdown starts.

**2** Shutter releases after approximately ten seconds; image appears

**3** Tap **OK**

- Viewfinder returns.

### ■ Wallpaper Camera

**1** Frame subject on Display



- Wallpaper preview appears.

**2** Tap **Setting**

- Image is set as Wallpaper. (Viewfinder returns.)

### ■ Auction Camera

**1** Frame subject on Display



- First preview image appears.

**2** Tap 

- Repeat **1** - **2** to capture two more images following onscreen instructions.

**3** Tap **Yes**

### ■ Messaging Camera

**1** Frame subject on Display



**2** Tap 

- Mail Composition window opens. Complete and send message.

### ■ Shot Memo Camera

**1** Frame subject on Display



**2** Tap  ➔ Correction starts ➔ Swipe to select preview image ➔ Tap **Apply**

**3** Tap 

- Viewfinder returns.

## ■ Pretty Arrange Camera

### 1 Frame subject on Display



### 2 Tap

- Face is touched up.
- To cancel, tap .

### 3 Tap *Apply* ➔ Tap

- Viewfinder returns.

#### Adjusting Each Effect Separately

After , tap corresponding indicator

(, etc.)

- Tap the same indicator repeatedly for further adjustment.

#### When Multiple Faces are Detected

- After , tap to touch up all faces. To touch up select faces, follow these steps:

Tap frame () ➔ Tap ➔

## ■ Self Portrait Camera

Activate Self Portrait Camera with handset open and follow these steps:

### 1 Turn handset upside down

### 2 Rotate Display 180 degrees ➔ Tap *OK*

### 3 Frame your face on Display and look into the lens

### 4 Face detection activates, tones sound, and shutter releases; image appears

### 5 Tap *OK*

- Viewfinder returns.



## ■ Additional Cameras

Three-Shot Camera	Frame subject on Display ➔  ➔ Tap image ➔ Tap <i>Save</i>
Best Select Photo	• To save all images or use Photo Recommender, see P.7-8 "Rapid Shooting Camera."
Scene Cameras	
Monochrome Camera	
Sepia Camera	Frame subject on Display ➔
Miniaturize Camera	
Fish-eye Camera	
Long Exposure Camera	Frame subject on Display ➔ • Shutter is left open for approximately 30 seconds before image capture.
Blog Camera	Frame subject on Display ➔  ➔ Tap  ➔ Proceed with blogging
Drawable Camera	Frame subject on Display ➔  ➔ Tap  ➔ Drag on image ➔ Tap <i>Assign</i> ➔ Tap <i>Save as New</i> or <i>Overwrite</i> • For <i>Save as New</i> , follow onscreen instructions.

## Changing & Saving Camera Settings

Change settings by purpose/shooting conditions; save frequently used settings as **My Camera** for future use. Some settings may be unavailable depending on camera mode (no corresponding indicators appear).

### Major Items

		Description
Focus	Focus Mode	Select <b>Normal(Face)</b> , <b>Center Auto Focus</b> , <b>Macro</b> or <b>Manual Focus</b>
	Continuous AF	Adjust focus as focus-locked subject's position changes; choose <b>On</b> or <b>Off</b>
	Chase Focus	Track focus-locked subject as it moves within framed image; choose <b>On</b> or <b>Off</b>
	Focus Mark	Select focus frame design from <b>Pattern 1</b> to <b>Pattern 6</b>
Shutter	One Touch Shutter	Release shutter upon tapping subject; choose <b>On</b> or <b>Off</b>
	Self-timer	Select <b>10 sec.</b> , <b>5 sec.</b> , <b>2 sec.</b> or <b>Off</b>
	Shutter Mode	Select <b>Normal</b> (manual), <b>Egao</b> (smile detection) or <b>Furimuki</b> (face detection)
	Shutter Sound	Select shutter click sound from <b>Pattern 1</b> to <b>Pattern 3</b>
Image Size & Quality	Picture Size	Select image size from <b>14M(3240x4320)</b> to <b>QVGA(240x320)</b>
	Picture Quality	Select image quality from <b>High Quality</b> , <b>Fine</b> and <b>Normal</b>

		Description
Conditions	ISO Sensitivity	Select light sensitivity from <b>Auto</b> (~800) to <b>Auto(High:~12800)</b> and <b>100</b> to <b>12800</b>
	White Balance	Select <b>Auto</b> , <b>Daylight</b> , <b>Cloud/Shade</b> , <b>Tungsten</b> or <b>Fluorescent</b> for best color balance
	Exposure	Select amount of light received by camera from <b>-2</b> to <b>+2</b>
	Mobile Light	Select Mobile Light mode from <b>On</b> , <b>Automatic</b> , <b>Low Light</b> and <b>Off</b>
Save Settings	Save Pictures to	Select <b>Memory Card Priority</b> , <b>Memory Card Fixed</b> , <b>Phone Memory</b> , <b>DCIM</b> or <b>Ask Each Time</b>
	Auto Save	Select <b>On(Preview Off)</b> , <b>On(Preview 2 sec.)</b> , <b>On(Preview Manual)</b> or <b>Off</b>
	Background Save	Enable quick transition to Viewfinder after saving images; choose <b>On</b> or <b>Off</b>
Other	Shake Reducing	Select shake reduction option from <b>Auto</b> , <b>Auto(Strong)</b> and <b>Off</b>
	Display Setting	Select indicator/Viewfinder view from <b>Normal</b> , <b>Guidance</b> , <b>Icon Off</b> and <b>Mirror Image Display</b>
	Mirror Image Display	Reverse Viewfinder image; choose <b>On</b> or <b>Off</b>
	Set Send Key	Select send option assigned to (Ⓜ)

## Changing Settings

(Landscape Display Touch Panel Operations)  
Example: Picture Quality

### 1 In Photo Viewfinder, tap **MENU**



### 2 Tap **Picture Quality** twice



### 3 Tap quality twice

- Viewfinder returns.
- For some settings, current status appears in their indicators.

## Saving Changed Settings

(Landscape Display Touch Panel Operations)  
After image capture, save changed settings with a name and captured image; load saved settings in the same manner as switching cameras.


May be unavailable depending on camera mode.

### Saving as My Camera

#### 1 In captured image window, tap **Options** ➔ Tap **Save as My Camera**

- Messages appear.

#### 2 Drag frame to specify image area

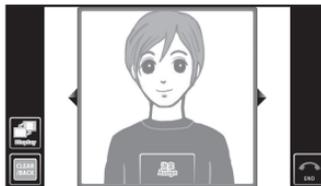

- The specified portion will be used as the camera's icon.

### 3 Tap **Assign**

### 4 Tap **My Camera Name:**

### 5 Enter name ➔ Tap **Done**

### 6 Tap **Assign**

- My Camera is created.

### Entering Information

After , tap **Note:** ➔ Enter text ➔ Tap **Done** ➔ 

### Using My Cameras

#### 1 In Photo Viewfinder, tap camera selection indicator (, etc.)

#### 2 Swipe to select My Camera

#### 3 Tap My Camera

## Registering Faces (Detect Personal)

Register people's faces; related information appears in Viewfinder upon face detection, and captured images are sorted into albums (Portrait & Pet) when saved.

- Register name, note and priority for up to ten faces.
- When multiple registered faces are detected, focus is locked to one with highest priority.



Viewfinder Information


### Saving Entries

(Landscape Display Touch Panel Operations)

- 1 In Photo Viewfinder, tap **MENU**
- 2 Tap **Detect Personal/Pet**

### 3 Tap **Register Face**

### 4 Use guide to find best position

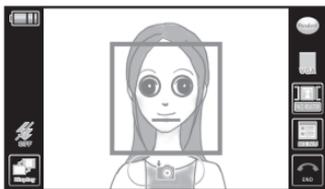

- Guide turns red when face is detected.

### 5



- Window shown above opens when face is recognized correctly; if not, repeat 4 - 5.

### 6 Tap **Empty**

### 7 Tap **Name:**

### 8 Enter name → Tap **Done**

### 9 Tap **Assign**

- Entry is saved.
- The lower the entry number the higher the priority.

### Entering Information

After 3, tap **Note:** → Enter text → Tap **Done** → 9

### Setting Text Color


After 3, tap **Font Color:** → Tap color → 9

- Upon face detection, Viewfinder information appears in the selected color.

## Recording Video

### Precautions

Do not cover Recorder Microphones while recording video.

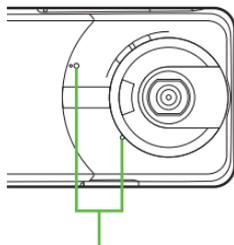

Recorder Microphones

### Viewer Position

(Landscape Display Touch Panel Operations)  
Follow these steps to record high definition video via **HD Video Camera**:

Record up to four seconds per shot on handset.  
Insert a Memory Card to record longer shots.

- 1 With handset open,  (Long)
- 2 Rotate Display to Viewer position



Video Viewfinder  
(HD Video Camera)

- 3 Frame subject on Display  
➡ 
- Recording starts after a tone.

4 

- Recording stops with a tone.
- Video is saved and plays back; Viewfinder returns.
- Play saved video via Album, Data Folder or Media Player.

### Incoming Calls

- If a call arrives before video is saved, recorded clip is temporarily saved. After the call, video is saved and plays back automatically; Viewfinder returns.

### If Battery Runs Low

- Recording stops. (Recorded clip is saved.)

### Switching Video Cameras

[Video Viewfinder] Tap **MENU** ➡ Tap **Simple Setting** ➡ Tap video camera

## Video Viewfinder Operations (Touch Panel)

Indicators appear on Display. Tap one to adjust the corresponding setting or execute the assigned command.

Indicators vary by camera mode.



<b>1</b> Self-timer	<b>7</b> MENU
<b>2</b> Mobile Light	<b>8</b> Exit
<b>3</b> Toggle indicator view	<b>9</b> Capture still image
<b>4</b> Scene	<b>10</b> Start recording
<b>5</b> Recording size	<b>11</b> Pause/resume recording
<b>6</b> Switch cameras	

### Toggle Indicator View

[Video Viewfinder] Tap

## Additional Operations

<b>Zoom In/Out</b>	Drag up or down across image
<b>Adjust Brightness</b>	Drag left or right across image
<b>Focus Lock</b>	Tap image
<b>Cancel Recording (Start Over)</b>	Tap <b>CLEAR/BACK</b> (in Viewer position only)

Tap **MENU** for more functions/settings.

## Changing Scene Setting by Subject

[Video Viewfinder] Tap ➔ Swipe to select scene ➔ Tap scene

## Opening Help

[Video Viewfinder] Tap **MENU** ➔ Tap **Help**

## Switching Cameras

[Video Viewfinder] Tap camera selection indicator (, etc.) ➔ Swipe to select camera ➔ Tap camera

## Clamshell Open

(Portrait Display Handset Key Operations)  
Follow these steps to send recorded video via mail using **Video Camera for Mail**:

- 1  → 
- 2  → **Simple Setting** → 
- 3 **Video Cam For Mail** → 



Video Viewfinder  
(Video Camera for Mail)

- 4 **Frame subject on Display**  
→ 
  - Recording starts after a tone.
- 5 
  - Recording stops with a tone.
  - Video is saved and plays back.

6 **During playback,** 

7 **S! Mail** → 

- Mail Composition window opens.

8 **Complete message** → 

## Switching Video Cameras

[Video Viewfinder]  → **Simple Setting** →  → **Select video camera** → 

Video Viewfinder Operations  
(Handset Keys)

Zoom In/Out	 / 
Adjust Brightness	 / 
Mobile Light On/Off	
Change Quality	
Pause/Resume Recording	While Recording, 
Capture Still Image	While Recording, 
Cancel Recording (Start Over)	
Open Help	

\*May be unavailable depending on camera mode and recording size.  
Press  to open Options menu for more functions/settings.

## Checking Golf Swing

Play two golf swing video files simultaneously for comparison.

Be sure there is ample swinging space before recording golf swings.

### Recording with Golf Swing Video Camera

(Landscape Display Touch Panel Operations)

**1** In Video Viewfinder, tap camera selection indicator (📷, etc.)

**2** Swipe to select *GolfSwingVideoCam* and tap it

**3** Frame head within green circle ➡   
 • Countdown starts.  
 • Recording starts after approximately ten seconds; video is saved and plays back automatically.

### Self-Recording

- Activate Golf Swing Video Camera with handset open and rotate Display 180 degrees to record yourself. Viewfinder image appears reversed; to display a mirror image, follow these steps:  
 Tap *Options* ➡ Tap *Settings* ➡ Tap *Display Setting* ➡ Tap *Mirror*

### Comparing Golf Swings

(Portrait Display Handset Key Operations)  
 Play two video files recorded with Golf Swing Video Camera simultaneously in slow motion for comparison.

- Simultaneous playback may be unavailable for other video files.
- Golf Swing Play supports video recorded with Golf Swing Video Camera only.
- Simultaneous/synchronous playback may be unavailable depending on recording conditions (swing speed difference, background, etc.).

**1**  ➡ *Entertainment* ➡   
 ➡ *Media Player* ➡ 

**2** *Videos* ➡  ➡ *Golf Swing Play* ➡ 

**3** Select storage media ➡ 

**4** Select first file ➡  (☐/☑)

**5** Select second file ➡  (☐/☑)

**6**  (⏏)

- To hide message, press .

**7**  ➡ 

- Synchronizing process starts.

**8** 

- Slow motion playback starts.

### Adjusting Head Position

In  (Chg. Up) or  (Chg.Low) ➡  Move circle to frame head ➡  ➡  ➡ 

### Setting Swing Direction & Point of View

In  (Chg. Up) or  (Chg.Low) ➡  (Prev.) or  (Next) ➡  ➡  ➡ 

### Pausing Playback

-   
 ■ In pause, press  to advance frame.

### Replaying during Playback

  
 Playing at Normal Speed  
 In  (Long)

## Changing & Saving Video Camera Settings

Change settings by purpose/shooting conditions; save frequently used settings as **My Video Camera** for future use. Some settings may be unavailable depending on camera mode (no corresponding indicators appear).

### Major Items

		Description
Focus	Focus Mode	Select <b>Normal(Portrait)</b> , <b>Manual Focus</b> or <b>Macro</b>
	Chase Focus	Track focus-locked subject as it moves within framed image; choose <b>On</b> or <b>Off</b>
Video Size & Quality	Picture Size	Select recording size from <b>HD(1280x720)</b> to <b>QCIF(176x144)</b>
	Video Quality	Select <b>High Quality</b> , <b>Fine</b> or <b>Normal</b>
Microphone	Microphone	Record video with sound; choose <b>On</b> or <b>Off</b>
	Microphone Mode	Select <b>Wide</b> , <b>Focus</b> or <b>Chase</b>

		Description
Conditions	Exposure	Select amount of light received by camera from <b>-2 to +2</b>
	Mobile Light	Activate Mobile Light; choose <b>On</b> or <b>Off</b>
	ND Filter Setting	Select <b>Auto</b> or <b>Fixed</b>
Save Settings	Save Videos to	Select <b>Memory Card Priority</b> , <b>Memory Card Fixed</b> , <b>Phone Memory</b> or <b>Ask Each Time</b>
	Auto Save	Select <b>On(Preview Off)</b> , <b>On(Preview On)</b> or <b>Off</b>
Other	Shake Reducing	Enable shake reduction; choose <b>On</b> or <b>Off</b>
	Display Setting	Select indicator/Viewfinder view from <b>Normal</b> , <b>Guidance</b> , <b>Icon Off</b> and <b>Mirror</b>
	Self-timer	Select <b>10 sec.</b> , <b>5 sec.</b> , <b>2 sec.</b> or <b>Off</b>
	Video/Audio Encode	Select <b>H.264/AAC</b> or <b>MPEG4/AMR</b>


## Changing Settings

(Landscape Display Touch Panel Operations)  
Example: Picture Size (recording size)

### 1 In Video Viewfinder, tap **MENU**



### 2 Tap **Picture Size**

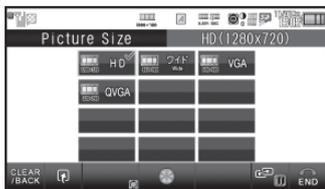

### 3 Tap size

- Viewfinder returns.
- For some settings, current status appears in their indicators.

## Saving Changed Settings

(Landscape Display Touch Panel Operations)  
Save changed settings as My Video Camera and load them as needed.  
Change settings beforehand.

### Saving as My Video Camera

### 1 In Video Viewfinder, tap **MENU** ➔ Tap **Simple Setting**

### 2 Tap **Save as My Video1** or **Save as My Video2**

- Settings are saved as My Video Camera.

**Overwriting Saved My Video Camera**  
After 2, tap Yes

## Using My Video Cameras

### 1 In Video Viewfinder, tap **MENU** ➔ Tap **Simple Setting**

### 2 Tap My Video Camera

## Opening Saved Images via Album



### Basics

Handset sorts saved images (still images and video) into up to 500 albums of the following preloaded categories automatically; create original albums as needed.

<b>Portrait &amp; Pet</b>	Stores portraits (sorted into albums by registered face) and images containing detected pets
<b>Event</b>	Stores images sorted into albums by period scheduled in Calendar
<b>By Camera</b>	Stores images sorted into albums by camera mode
<b>By Date</b>	Stores images sorted into albums by captured date

### Album Images & Source Files

- Album stores only file locations. (Source files are saved in Data Folder.) Images disappear from Album if source files are deleted.

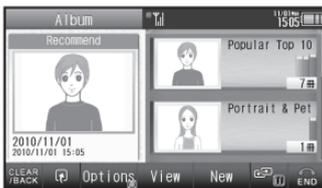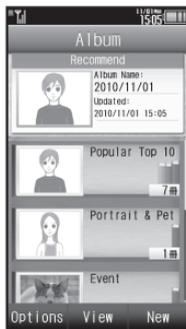

A single image can be sorted into multiple categories (e.g., a portrait captured using a specific camera is stored in **By Camera** and **Portrait & Pet**). In addition, a single image with multiple registered faces will be stored in each subject's album in **Portrait & Pet**.

### Opening Albums

(Portrait Display Handset Key Operations)



Album Window

- **Recommend** shows a recently updated album.
- **Popular Top 10** stores ten most frequently opened albums.



Album List

- Albums within appear.

### 3 Select album → ●



Image List

### 4 Select image → ●

### 5 ●

- Image appears.
- For Rapid Shooting Camera and Three-Shot Camera albums, images appear sequentially (Continuous Slide); press ● to stop.

#### Opening Latest Album

After 1, (Y)


#### Slide Show (Still Images)

After 2, select album → (M) → Slide Show → ●

## Creating Original Albums

Create new albums by selecting sort keys (from Portrait & Pet, Event and By Camera) and specifying date and time. Follow these steps to create an album by selecting sort keys from Portrait & Pet and By Camera:

### 1 In Album window, (M) → Create Original Album → ●

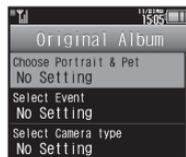

### 2 Choose Portrait & Pet → ●

### 3 Select entry → ●



- Repeat (M) to complete selection.

### 4 (Y)

### 5 Select Camera type → ●

### 6 Select camera → ●



- Repeat (M) to complete selection.

### 7 (Y)

### 8 Create Album → ●

### 9 Enter name → ●

### 10 Yes → ●

#### Previewing Created Album

After 2, Album Preview → ●

- To return, press (M).

#### Editing Sort Keys

[Album List] Select album → (M) →

Edit Auto Sort Keys → ● → Select item → ● → Edit → (Y)

- For items other than **Select Date/Time**, press (Y) again.