 


## Area Setup

When activating TV for the first time, follow these steps to set up channels by area:

1 

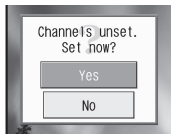

• Setup confirmation appears.

2 Yes → 



3 Select region → 


4 Select prefecture →  →  
Select locality → 



• After setup, channel list appears.

5 



• To watch TV, select **Digital TV** and press .



### Watching TV without Completing Area Setup

In ③, No Preference → 

### Adding Reception Areas

 →  → Set Channels →  →

Change Area →  → Select Area →

 → Set Area Info →  → From ③

 
### Important Digital TV Usage Notes

- 002SH is exclusively for use in Japan.
- When using TV while charging battery, separate AC Charger and Antenna to avoid interference.

### Digital TV Antenna

Pulling Antenna by its top, extend it fully.

- Adjust angle to find best reception. (Unless transmission source is near, extend it for better reception.)
- After use, gently retract Antenna. Do not carry handset with Antenna extended; damage may result.

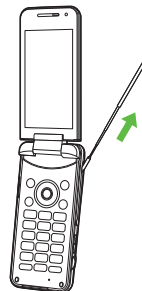

## Watching TV


Complete Area setup (P.8-1) first.

1 



TV Window

### 2 Use Keypad to select a channel

- Use  to switch channels one by one; Long Press to find channel with stable signal automatically.

3  ➔ Yes ➔  ➔ TV ends


#### Incoming Calls

- Press  to answer calls.

#### When Answering Voice Calls with Memory Card Inserted

- Current program is temporarily recorded; start playback after the call. (Time Shift)

#### Incoming Messages

- Double beep sounds and New Message notice appears. Long Press  to access messages.

#### Important Digital TV Usage Notes

- Do not use TV while driving or cycling. Accidents may result. Phone use while driving is prohibited by the Road Traffic Law (revised November 1, 2004). When walking, always pay attention to your surroundings, especially near road/rail crossings, etc.
- Call transmissions, incoming messages or mobile phone use in the immediate vicinity may affect audiovisual quality.
- Programs may not be viewable or record properly when:
  - Too far from or too close to broadcasting stations
  - In mountainous areas or near tall buildings
  - Aboard trains or in moving vehicles
  - Near high-voltage lines, neon lights or wireless base stations
  - Near railroad tracks or highways
  - Anywhere a jamming signal is broadcast/reception is unstable

### Watching TV in Widescreen

#### Viewer Position

1 In TV window, rotate Display to Viewer position

2 Hold handset in landscape



- TV window rotates with handset orientation.



3 Drag left or right across TV image ➔ Tap channel

- Alternatively, tap channel key then drag left or right to select channels.

#### Activating TV from Standby in Viewer Position

Tap MENU ➔ Tap TV ➔ Tap Digital TV

## Clamshell Open

In Motion Control menu, set Display Change to **Manual at Open**(press ) or **Manual**(press ) first.

### 1 In TV window,







- TV window rotates 90 degrees clockwise.

### 2 Use Keypad to select a channel

- Multi Selector response changes with TV orientation.

## Major TV Window Operations

### Handset Keys

Toggle Panel On/Off	
Change Area	
Volume Control	
Toggle Display Size (portrait)	

### Touch Panel

Switch Channel	Drag left or right across TV image ➔ Tap channel
Volume Control	Drag up or down across TV image
Toggle View	Tap TV image
Change Display Size	Pinch or spread across TV image <sup>1</sup>
Change Data Broadcast View	Pinch or spread across Data Broadcast area <sup>1</sup>
Change Area	Tap Area name ➔ Tap Area <sup>2</sup>

 
<sup>1</sup>Available in portrait orientation.

<sup>2</sup>Available in landscape orientation.

### Using Options Menu via Touch Panel

- Tap **Options**, then tap menu items to proceed.

## Panel & Channel Area Descriptions

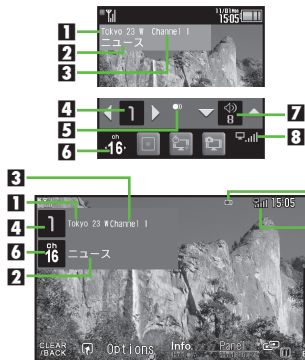

1 Area name	5 Sound Channel
2 Program name	6 Channel
3 Station name	7 Volume
4 Channel key	8 Signal strength*

\*The more bars the better.  
Indicator position varies with display size.

## Recording Programs

Clip is saved to handset (or Memory Card, if inserted).

### Precautions

- Saved files cannot be forwarded or attached to messages.
- 002SH encryption technology prevents unauthorized copying or playback of Memory Card files through data encryption and authentication. Files copied from Memory Card to other cards on PC are unplayable.
- Copyright laws limit duplicated material to private use only, and prohibit unauthorized reproduction/other use.
- SoftBank Mobile is not liable for any damages resulting from accidental loss or alteration of recorded content.

### Dubbing 10

- 002SH supports Dubbing 10 copy protection scheme that allows recordings to be copied from handset to Memory Card. Open file properties for remaining copy count.

## 1 In TV window, (Long) ➔ Recording starts




Recording Window

- Changing volume, etc. does not affect recordings.
- Illumination Light flashes to indicate TV signal strength: Move to a place where Illumination Light flashes sky blue (moderate) or blue (strong).


 


## 2 (Long) ➔ Recording ends

### Recording Programs in Landscape

#### [TV Window] (Long)

- To stop, Long Press  while recording.

### In Viewer Position

- Tap  to start recording. To stop, tap .
- In landscape orientation, Long Touch **Hold** . (To stop, Long Touch **Hold** .)

 
 
### Chase Play (Playing while Recording)

- Watch a program from the beginning while recording it on Memory Card.

#### [Recording Window] (Long) ➔

#### Playback starts ➔ (Long) ➔

#### Playback stops

- To start playback in Viewer position, tap **Options** ➔ **Rec**  ➔ **Play**. Long Touch **Hold**  to stop playback.

### Memory/Battery Runs Low or Video Call is Accepted

- Recording stops. (Recorded clip is saved.)

### Saving Files via the Internet while Recording

- While recording programs to handset, be sure there is enough free memory before saving files.

## Playing Recorded Programs

- 1 In TV window, **TV Player**



Video List

- indicates the file is unplayable.

- 2 Select file



Playback Window

- Playback starts. (The last played file plays from where it stopped.)

- 3 (Long) **Playback stops**

### Switching Video Lists

After , **Change to Phone** or **Change to MemoryCard**

### Major Playback Operations

Adjust volume or change display size following the same operations used while watching TV.

### Handset Keys

Rewind/Fast Forward	<sup>1, 2</sup> / <sup>1</sup>
Skip (Forward/Backward)	
Pause <sup>3</sup>	(● in landscape)
Set Marker	<sup>4</sup>
Toggle Panel On/Off	(● in landscape)

<sup>1</sup> Each press increases speed. To resume normal playback, press (● in landscape).

<sup>2</sup> Long Press to replay. (Available when no Marker is saved.)

<sup>3</sup> In pause, use to reverse/advance frame.

<sup>4</sup> Not available during Time Shift playback. Long Press to split file.

### Touch Panel













Rewind	Drag left across TV image <sup>1</sup>
Fast Forward	Drag right across TV image <sup>1</sup>
Pause	Tap <b>Pause</b> or <sup>2</sup>
Stop Playback	Long Touch <b>Hold</b>
Skip to Any Point	Drag slider
Toggle View	Tap TV image
Change Display Size	Pinch or spread across TV image <sup>3</sup>
Change Data Broadcast View	Pinch or spread across Data Broadcast area <sup>3</sup>

<sup>1</sup> Release to resume normal playback.


<sup>2</sup> In pause, drag left/right across TV image to reverse/advance frame.

<sup>3</sup> Available in portrait orientation.

## TV Timer & TV Recording Timer

- 1 In TV window,  ➔ *Rec./TimeShift* ➔ 
- 2 *Reservation List* ➔ 
- 3  ➔ *New Entry* ➔ 
- 4 *Manual* ➔  ➔ *Watching or Recording* ➔ 
- 5 Enter start date/time ➔  ➔ Enter end date/time ➔ 
- 6 *Channel:* ➔  ➔ *Select channel* ➔  ➔ 

### Setting Timer via EPG

In , *From TV Listing* ➔ 

- Refer to the application's help menu for operational instructions.

### Timer Recording Precautions

Confirm target channel reception.

- End the current operations.
- Be sure battery is charged adequately and there is enough free memory.

### At Timer Time (TV Alarm Time)

TV and Alarm activate.



Recording starts slightly before the Timer start time and ends a few seconds after the Timer end time.




### While Using Another Function

- TV activates via Multi Job and target program/recording starts. However, if Multi Job cannot activate in the current state, TV may remain off, or the current function may end automatically (unsaved images, messages, Phone Book entries, etc. may be deleted). End all active functions/applications before Timer time.

## Accessing Webcasting Sites (Japanese)

Access Yahoo! Streaming and other webcasting sites.

- Subscription to Keitai Wi-Fi may be required to use some services/content.
- Read information on the source site.

- 1  ➔ **Videos/Music** ➔ 
  - If an update message appears, follow onscreen prompts.
- 2 **Select item** ➔ 
  - Follow onscreen instructions.

### Menu Updates

Information window opens for Videos/Music menu update notice. Follow these steps to open it:

- 1 **In Information window, Menu Update Notif.** ➔ 
- 2 **Yes** ➔ 
  - Follow onscreen instructions.

### Suppressing Information Window for Menu Updates

-  ➔ **Settings** ➔  ➔  ➔ **Phone/**
-  ➔ **Videos/Music Menu Updates** ➔
-  ➔ **Notification Off** ➔ 

### Streaming

Most media on webcasting sites are provided as streams; handset plays media while it downloads.

 
### Playing Media Streams

- 1 **Select file** ➔ 




- Playback starts.
- For playback window description, see **P.8-11** "Video Playback Window Description."

### Stopping Playback

**During playback,** 

### Playback Sound

- Streaming sound is heard from Speaker/Headphones regardless of  Sound Output setting in Media Player.

## Media Player Basics

Use Media Player to play music/video on 002SH.

- Download media files from Mobile Internet sites via Media Player or transfer files from PCs.
- Transfer PC music files and save them on Memory Card.

### Music File Support

#### My Music

(Handset/Memory Card)  
Downloads/Transferred Files

#### SD AUDIO

(Memory Card)  
Transferred SD-Audio Files

#### WMA

(Memory Card)  
Transferred WMA Files

### Video File Support

#### My Videos

(Handset/Memory Card)  
Downloads/Recorded Files

#### Recorder Contents/ SD VIDEO

(Memory Card)  
Transferred SD-Video Files

### Playback Precautions

- Media Player is not compatible with some recording/playback formats. Files may not play depending on Memory Card status.
- Playback stops for incoming calls.
- If battery is low, Media Player will not play. Playback stops if battery runs low during playback.
- Turn down the volume if distortion is noticeable in Speaker sound.
- Handset plays media while it downloads (streaming/progressive download). Packet transmission fees apply (except when downloading via Wi-Fi) even while playback is paused.

### Compatibility

- Files transferred from PCs cannot be used as ringtones or System Sounds.



## Downloading Media Files

Download media files from the Internet. Read information (price, expiry date, etc.) on the source site.

- 1 **Entertainment** **Media Player**



- 2 **Music or Videos**

- 3 **Download Music or Download Videos**

- Follow the links to download media.

## Saving Music Files from PCs

- Use software to convert music file format.
- For software usage and specifications, see the provider's website, etc.
- SoftBank Mobile does not guarantee compatibility with any software.
- USB Cable may be purchased separately.

 
### Handling Transferred Files

- Copyright laws limit duplicated material to private use only.
- Files created with PC software, etc. may not play.
- Comply with copyright and other intellectual property laws when using obtained files.

## Saving WMA Files

Follow these steps to save WMA files via compatible software:  
(Copy protected files can only be played on the handset with which the files were transferred.)

- 1 **Connect handset to a PC via USB Cable**

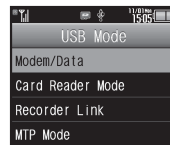

- 2 **MTP Mode**

- Copy music from PC. Refer to the software's help menu for operational instructions.

- 3 **Yes** **Connection ends**

- Disconnect USB Cable.

### If Menu in 1 Does Not Appear

- Follow these steps:
  - Tools** **Connectivity**
  - USB Mode** **From**
  - Operations on the PC may be required; if prompted, follow onscreen instructions.

## Playing Music

- 1 → **Entertainment** →
- 2 **Media Player** → → **Music**  
→
- 3 **My Music** → → **Select**  
**tab (folder)**



Music Playlists Window

- 4 **All Music** →
- 5 **Select file** →



Music Playback Window

- Album art appears for compatible Chaku-Uta Full® files. (WMA album art is not supported.)

### Using Other Functions while Playing Music

After , or

- To stop playback, follow these steps in Standby:

→ **Yes** →

### Playing SD AUDIO or WMA Files

In , **SD AUDIO** or **WMA** → →

From

### Searching Music Files

After , → **Search** → → Enter  
search text →

### Lyric Display-Compatible Files

 
- Press to display lyrics.

### Major Music Playback Operations

<b>Replay</b>	 (Long Press: Rewind', Double Press: Skip Backward)
<b>Skip Forward</b>	 (Long Press: Fast Forward')
<b>Volume Down</b>	 (Long Press: Mute)
<b>Volume Up or Cancel Mute</b>	
<b>Pause</b>	
<b>Stop</b>	In Pause,
<b>Switch Sound Output</b>	(Long)
<b>Open Help</b>	

Release for playback.

### Music Playback Window Description

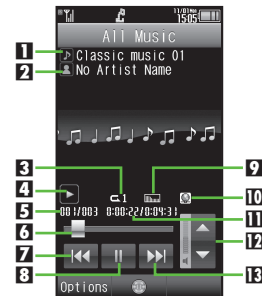


<b>1</b> Title	<b>8</b> Pause
<b>2</b> Artist name	<b>9</b> Sound Effects
<b>3</b> Playback Mode	<b>10</b> Information link
<b>4</b> Status	<b>11</b> Elapsed time
<b>5</b> Track number	<b>12</b> Volume control
<b>6</b> Playback slider	<b>13</b> Skip forward
<b>7</b> Replay	

## Playing Video

 1 **Entertainment**

2 **Media Player Videos**


3 **My Videos Memory Card or Phone Memory**

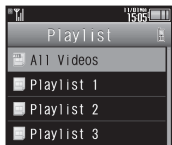

Video Playlists Window

4 **All Videos**

 5 **Select file**

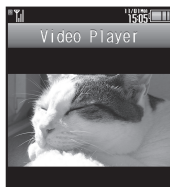

Video Playback Window

6 **Playback stops**

### Playing SD VIDEO Files

In **SD VIDEO**

### Searching Video Files

After **Search** Enter search text

### At Alarm Time

- Playback pauses.
- Video Recorded on Other Devices
- Video image may appear rotated.

## Major Video Playback Operations

For volume up/down, pause, sound output or help, see **P.8-10** "Major Music Playback Operations."

Fast Forward/Rewind	
Slow Motion Playback	In Pause,
Advance/Reverse Frame	In Pause,
Replay	(Long)
Skip Forward/Backward	
Toggle View	(Interface On/Off) (Display Size) (Aspect)

\*Each press increases speed.

## Video Playback Window Description



1 Title	6 Elapsed time
2 Author name	7 Volume
3 Clip number	8 Information link
4 Status	9 Sound Effects
5 Playback Mode	10 Pause

## Using Playlists

Playlists store playback orders. Add favorite media files to Playlists, or organize files by artist/genre.

- Playlists store only file locations. Source files remain in All Music or All Videos.
- Music or Ring Songs-Tones sub folder containing music files appear in Playlists window; select a folder to play the files within it.

### Adding to Playlist

Follow these steps to add a music file to **プレイリスト1**:

- 1 **Entertainment** →
- 2 **Media Player** → **Music** →
- 3 **My Music** →



Playlists Window

- 4 **All Music** → **Select file** →
- 5 **Add to Playlist** → **プレイリスト1** →

### Renaming Playlists

- 1 In Playlists window, select **Playlist** →
- 2 **Edit List Title** → **Enter name** →

## Customizing Standby Display (Japanese)

Paste various widgets (applications) to Standby to access/activate information/ functions immediately from Standby.



Widgets

S! Quick News &  
S! Friend's Status Widget

### Saving Widgets to Standby

Save up to three widgets (excluding *S!速報ニュース/S!ともだち状況*, *歩数計* and *家計簿*).

1 → → →

Widget Tab

Standby Shortcut Tab



2

 
3 **Select widget** →

• Corresponding icon appears.

4 **Specify target location**  
→

### Using Widgets

1 → **Select widget** →

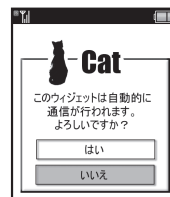


• Widget activates; follow onscreen instructions.

### Unlocking Temporarily

 → → → **Enter Handset Code** →

## Removing Widgets from Standby

- 1  →  **Select widget** → 

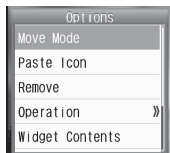

- 2 **Remove** → 

## Obtaining Widgets

- 1  → **Widget** → 



Mobile Widget Menu

- 2 **Widget Store** → 

- Follow onscreen instructions.

### Installing Widgets

- Some widgets may need to be installed manually; follow these steps:


[Mobile Widget Menu] **Widget Contents** →  → **Select widget** →  → **Install** →  → **Yes** → 

### Activating Widgets Not Saved in Standby

[Mobile Widget Menu] **Widget Contents** →  → **Select widget** →  → 




## Deleting Widgets

- 1 In Mobile Widget menu, **Widget Contents** → 

- 2 **Select widget** → 
  - *SI速報ニュース*と*もだち状況、歩数計* and *家計簿* cannot be deleted.

- 3 **Delete** →  → **Yes** → 

### Deleting All Widgets

In 2,  → **Delete All** →  → **Yes** → 

 
- If there is a widget saved in Standby, a confirmation appears; follow onscreen prompt.

## Standby Shortcuts

Paste shortcuts to functions, files, folders, etc. to Standby for easy access.

### Saving Shortcuts to Standby

1 → → **Paste Icon** →

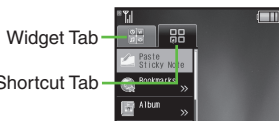

2 **Select item** →

- Corresponding icon appears.
- >> appears when more items are available.

3 **Specify target location**  
→

### Saving from Menu/Window

- Follow these steps in Options menu:  
(Available when **Set as StbyShortcut** appears.)

**Set as StbyShortcut** → →  
**Standby Screen** →

### Using Shortcuts

1 → **Select icon** →   
• Menu/window opens or command is executed.

### Unlocking Temporarily

→ → → **Enter Handset Code** →

### Removing Shortcuts from Standby

1 → **Select icon** →   
2 **Remove** →

## Icon View

Save shortcuts to functions, files, folders, widgets, etc. to Icon View for easy access.

### Saving Shortcuts to Icon View

- If selected page is full, remove icons first.
- Installed widgets are saved automatically.

1



Icon View Page

- Press or to open next or previous page. (Press in **Page 1** to return to Standby.)

2 →

3 **Select tab** → **Select item**



- Corresponding icon appears.
- >> appears when more items are available.

4 **Specify target location**



#### Saving from Menu/Window

- Follow these steps in Options menu:  
(Available when **Set as StbyShortcut** appears.)

**Set as StbyShortcut** → → **Select page or New Page** → → **Specify target location** →

#### When Five or More Pages Exist

- A confirmation appears after 1. Choose **Yes** or **No** and press .
  - To disable confirmation, press .

### Using Shortcuts

1 **On Icon View page, select icon** →

- Press or to open next or previous page. (Press in **Page 1** to return to Standby.)

#### Accessing Last Opened Page

(Long)

#### Showing Hidden Icons Temporarily

[Icon View Page] → → Enter Handset Code →

### Removing Shortcuts

1 **On Icon View page, select icon** → (Long)

2 **Cancel Icon** →