

<b>SoftBank 004Z Utility Operations Guide (Windows PC)</b> .....	<b>3-2</b>
Overview .....	3-2
Packet Communication Settings.....	3-3
Connecting/Disconnecting.....	3-4
Connection Record.....	3-5


## Overview

### Initiating SoftBank 004Z Utility

To activate SoftBank 004Z Utility, double-click  (SoftBank 004Z Utility shortcut). For Windows 7 or Windows Vista, insert modem to automatically open "AutoPlay" dialog box. Click "Run AutoRun.exe" to initiate SoftBank 004Z Utility.

For Windows XP, insert modem plug into PC USB port to automatically initiate SoftBank 004Z Utility.

### Main Screen

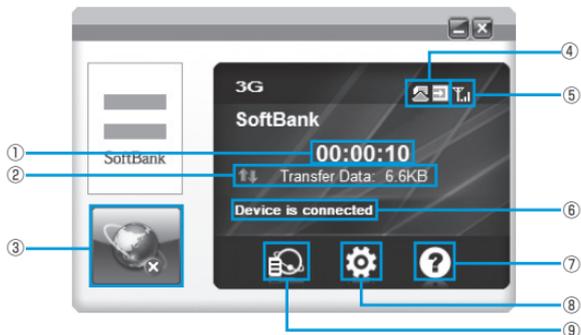


- ① **Connection Time**  
Changing PC clock during connections affects accuracy.
- ② **Transferred Data Meter**
- ③ **Connect/Disconnect**
- ④ **Connection Indicators**  
USIM Card connection status
- ⑤ **Signal Strength Indicator**
- ⑥ **Network Connection Status**
- ⑦ **Help**  
Open User Guide PDF file (Japanese)
- ⑧ **Configuration**  
Perform activation settings or profile settings.
- ⑨ **Communication Record**  
Open connection record.

### Signal Strength Window

Icon	Signal Strength
	Out-of-range
	Faint
	Weak
	Medium
	Strong

## Packet Communication Settings


Dial-up profile must be set up for packet communications. In Main Screen, click  for Connection dialog box.

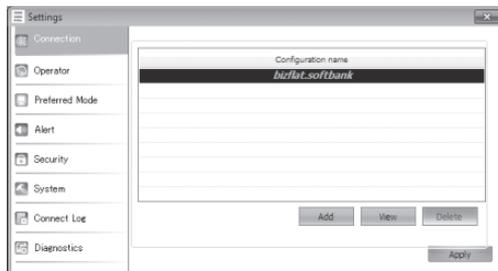

SoftBank 004Z Utility Connection dialog box appears.

## Creating New Profile

### 1 Click "Add"

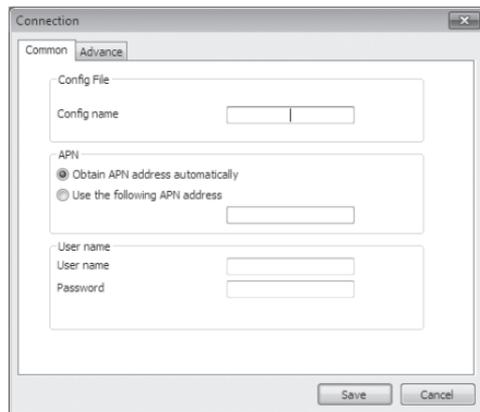

### 2 Set Config name, APN, User name, and Password

- As required, click "Advance" tab to set DNS, PDP Server, Authentication Mode, or PDF types.

### 3 Click "Save" to save all dial-up connecting destination settings, and close dialog box

- Click "Cancel" to close Connection dialog box.

## Editing Profile

- 1 Select profile to edit from "Configuration name" list
- 2 Click "Edit" to change set information
- 3 Click "Save" to save reset information
- 4 Click "Apply" to save setting
  - Close window to exit dial-up connecting destination setting.

## Deleting Profile

- 1 Select profile to delete from "Configuration name" list
- 2 Click "Delete" to open confirmation dialog box
- 3 Click "OK" to delete selected profile
  - Click "Cancel" to keep selected profile.
- 4 Click "Apply" to save setting
  - Close window to exit dial-up connecting destination setting.

## Connecting/Disconnecting

### Starting

- 1 Click  to initiate connection



During connections, confirm connection time, transmitted, and received data size of the current connection here.



## Checking Communication Summary

- 1 Click "From"/"To" for statistics


ProfileName	Start time	End time	Duration	Up	Down	Transmits
buffer.suf...	2011-02-01 10:02:26	2011-02-01 10:02:51	00:00:25	3,0980	4,1000	7,1980

Total time: 00:00:20

- This is only a guide. Actual transmissions may differ.

## Setting Operator

- 1 In Main Screen, click
- 2 Click "Operator" to select "Automatic" or "Manual"
  - Select "Manual" and click "Search" to find operator.

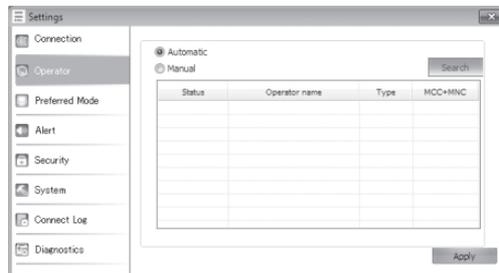

- 3 Click "Apply" to save setting

## Preferred Network

- 1 In Main Screen, click 
- 2 Click "Preferred Mode" to select "Automatic" or "3G only" or "GSM only"




- 3 Click "Apply" to save setting

• Preferred Network is selectable only if Operator Selection is set to "Automatic."

## Alert

- 1 In Main Screen, click 
- 2 Click "Alert" to select "Network connect alert"/"Network disconnect alert"
  - Click "Browse" to select files on PC.
  - If "Mute" is checked, sound cannot be set.

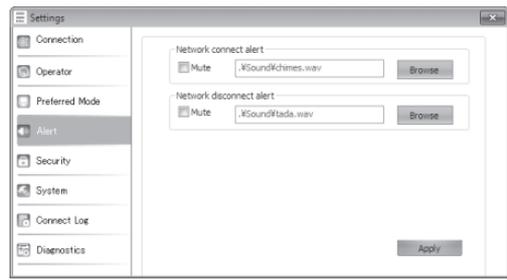

- 3 Click "Apply" to save setting

## Security Code

### PIN



Personal Identification Number (PIN) is USIM Card security code. Change PIN, or activate/cancel PIN Authentication to control USIM Card access.

Default: PIN Authentication is off/PIN is "9999"

### PIN Authentication

Activate or cancel PIN Authentication. When active, PIN entry is required for modem use.

- In Main Screen, click  → "Security" → Check/Uncheck Box → "Apply." PIN entry window appears. Enter new PIN, and click "OK."

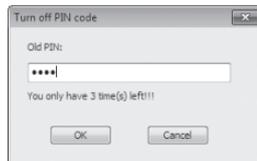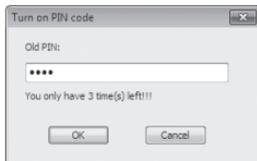

### Changing PIN

- 1 In Main Screen, click  → Click "Security" → Click "Revise PIN" (checked)
- 2 If "Security" window appears, enter current PIN and new PIN
- 3 Enter new PIN again
- 4 Click "OK" to complete change




- Set four- to eight-digit number as PIN.  
Default: 9999

### Entering PIN

If PIN Authentication is active, PIN entry is required for modem use.

- 1 Insert modem USB plug into PC USB port, and activate SoftBank 004Z Utility for PIN entry window
- 2 Enter PIN correctly
- 3 Click "OK" for authentication

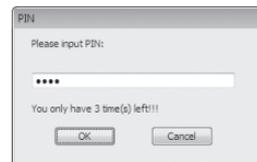

## Unlocking PIN


- 1 If USIM Card is locked, PUK Code entry window appears
- 2 Enter PUK Code correctly
- 3 Set new PIN
- 4 Enter new PIN again
- 5 Click "OK" to complete change



• Incorrectly entering PIN three consecutive times activates PIN Lock. PUK Code is required to unlock it. Entering PUK Code ten consecutive times locks modem completely. If modem is completely locked, predefined procedures are required. Contact SoftBank Mobile Customer Center, General Information (P.7-3).

## System Settings


- 1 In Main Screen, click
- 2 Click "System" to select "Startup"/"Auto connect"
  - If "Auto connect" is checked, connection starts automatically.

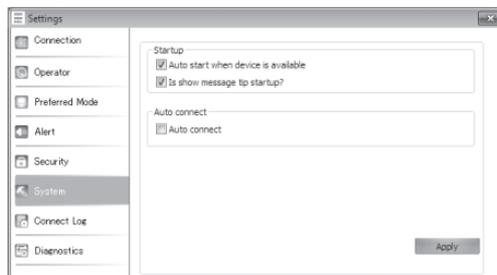

- 3 Click "Apply" to save setting

## Connect Log Setting

- 1 In Main Screen, click 
- 2 Click "Connect Log" for "Set price"/"Set connect unit"
  - If "Set connect unit" is checked, "Byte"/"Packet" is selectable.

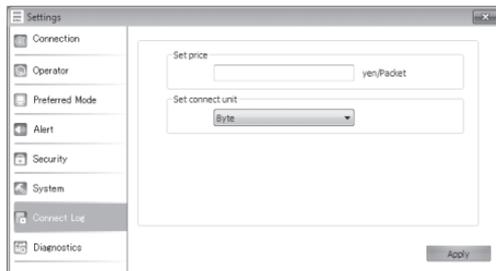

- 3 Click "Apply" to save setting

## Viewing Diagnostics

- 1 In Main Screen, click 
- 2 Click "Diagnostics" to view "Software information" (Version Information) and "Device information" (Device name/IMEI/Phone number)
  - Click "Refresh" to update information.

