

# 2

## Using Wi-Fi (WLAN)

<b>WLAN</b>	<b>2-2</b>
<b>Connecting WLAN Supported Devices</b>	<b>2-2</b>
Connecting Nintendo DS	2-2
Connecting PSP	2-4
Connecting Wii	2-5
Connecting PS3	2-6
Connecting WPS	
Supported Wi-Fi Devices	2-7
<b>Connecting Windows</b>	<b>2-7</b>
Windows 7	2-7
Windows Vista	2-8
Windows XP	2-9
<b>Connecting Mac</b>	<b>2-10</b>

### WLAN

Mobile Router supports IEEE 802.11b/g/n standards. Connect WLAN devices (PC, game console, etc.) via Mobile Router for wireless data transfers.

Mobile Router supports Wi-Fi Protected Setup (WPS), which easily configures WLAN connection settings on any WPS compliant WLAN device. Enter Mobile Router's SSID and WEP keys to connect non-WPS compliant WLAN devices. See WLAN default setting sticker for SSID and WEP keys. This section describes the first connection of Nintendo DS series\*, PSP (Playstation Portable), Wii, PS3 (PlayStation3), WPS compatible devices, Windows PC and Mac to Mobile Router.

\* Nintendo DS series is a generic name for Nintendo 3DS/DSi LL/DSi/DS Lite/DS.

- ▶ These settings should be performed the first time Mobile Router is connected to another WLAN device. Thereafter, simply activate WLAN function to automatically connect Mobile Router to a WLAN device (WAN Connection Mode set to Always On).
- ▶ Change WLAN settings as required. See Chapter 5 "General Settings Using Web UI".
- ▶ To ensure security, it is recommended that network name (SSID) and encryption key (WEP) which were set at time of purchase be changed.
- ▶ Use Mobile Router to connect up to ten WLAN devices simultaneously.

### Connecting WLAN Supported Devices

#### ■ Connecting Nintendo DS

This section describes about Nintendo Wi-Fi connection compatible software use with Nintendo DS series.

\* Connection verification for 3DS/DS Lite/DS is completed.

The contained connection procedures are independently verified and created.

Do not inquire to Nintendo Co., Ltd. in regards to what is described here.

- ▶ If encryption methods for WLAN security settings are set to something else other than WEP, set them to WEP. However when security settings (P.5-6) are changed, be aware that already connected WLAN terminals can no longer be connected.
- ▶ Confirm Mobile Router is connected to Internet. Internet connection is required to establish Wi-Fi connections.

All screenshots and operations based on Nintendo DS Lite.

#### 1 Press Power Key of Mobile Router for more than two seconds

WLAN function turns on and connect to Internet.

#### 2 On Nintendo DS, activate Nintendo Wi-Fi Connection, then *Wi-Fi*コネクション設定

Wi-Fi appears.

- For Nintendo DSi, from menu, touch **本体設定** and then **インターネット**
- For Nintendo 3DS, from HOME menu, touch **本体設定** and then **インターネット設定**
- For operating method, refer to each software manual.

## Using Wi-Fi (WLAN)

### 3 Touch Wi-Fi 接続先設定

- Nintendo DSi: 接続設定
- Nintendo 3DS: インターネット接続設定



### 4 Touch 未設定

- Nintendo 3DS: 接続先の登録 → 自分で設定する



### 5 Touch アクセスポイントを検索



### 6 Select Mobile Router SSID (\*\*\*\*\*)

- See WLAN default setting sticker for Mobile Router SSID
- If default SSID has been changed: Select current SSID



### 7 Enter WEP key → 決定

- See WLAN default setting sticker for WEP




### 8 Touch はい

- Nintendo 3DS: OK



### 9 Touch はい

- Nintendo 3DS: OK

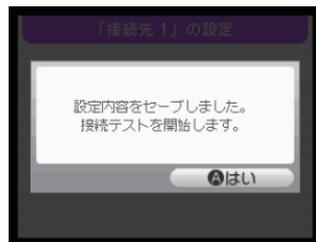

Connection test starts.  
Devices connect and 接続に成功しました appears.

Connected WLAN client count on Display increases by one.  
e.g.) 0 → 1

## Using Wi-Fi (WLAN)

### ■ Connecting PSP

Below operations are based on PSP-2000/PSP-3000, with WLAN security set to WEP. Operations may vary for PSP-1000\* or when security is not set to WEP. See PSP User's Guide.

- \* Some procedures may vary for PSP-1000 system software earlier than version 1.52.
- \* The contained connection procedures are independently verified and created. Do not inquire to Sony Computer Entertainment Inc. in regards to what is described here.

#### 1 Press Power Key of Mobile Router for more than two seconds

WLAN function activates and connects to Internet.

#### 2 PSP: Slide WLAN Switch to On

#### 3 In PSP Home menu select **Settings** → **Network Settings** → ○

#### 4 Select **Infrastructure Mode** → ○

#### 5 Select **New Connection** → ○

- PSP-1000: Enter connection name → ▷

#### 6 Select **Scan** → ▷

#### 7 Select **Mobile Router SSID (\*\*\*\*\*)** → ○

- See WLAN default setting sticker for Mobile Router SSID.
- If default SSID has been changed: Select current SSID → ○

#### 8 **Confirm SSID** → ▷

#### 9 **Select WEP** → ▷

#### 10 **Press** ○ → **Enter WEP key** → ▷

- See WLAN default setting sticker for WEP.

#### 11 **Select Easy** → ▷

#### 12 **Confirm name** → ▷

- PSP-1000: Skip ahead to 13.

#### 13 **Confirm settings** → ▷

#### 14 **Press** ○

#### 15 **Press** ○

#### 16 **Connection test starts**

When complete, test results appear.

Connected WLAN client count on Display increases by one.

e.g.)  0 →  1

## Using Wi-Fi (WLAN)

### ■ Connecting Wii

Below operations are based on WEP. Operations may vary when security is not set to WEP.

See Wii User's Guide.

\* The contained connection procedures are independently verified and created.

Do not inquire to Nintendo Co., Ltd. in regards to what is described here.

#### 1 Press Power Key of Mobile Router for more than two seconds

WLAN function activates and connects to Internet.

#### 2 In Wii menu, select *Wii*

#### 3 Select *Wii* 本体設定

#### 4 Select ▸

"Wii 本体設定2" appears.

#### 5 Select インターネット

#### 6 Select 接続設定

#### 7 Select 未設定

#### 8 Select *Wi-Fi* 接続

#### 9 Select アクセスポイントを検索

#### 10 Select *OK*

#### 11 Select Mobile Router SSID (\*\*\*\*\*)

- See WLAN default setting sticker for Mobile Router SSID.
- If default SSID has been changed: Select current SSID.

#### 12 Enter WEP key → *OK*

- See WLAN default setting sticker for WEP.

#### 13 Select *OK*

#### 14 Select *OK*

Connection test starts. When complete, 接続テストに成功しました appears.

Connected WLAN client count on Display increases by one.

e.g.)  → 

## Using Wi-Fi (WLAN)

### ■ Connecting PS3

Below operations are based on WEP. Operations may vary when security is not set to WEP. See PS3 User's Guide.

\* The contained connection procedures are independently verified and created. Do not inquire to Sony Computer Entertainment Inc. in regards to what is described here.

#### 1 Press Power Key of Mobile Router for more than two seconds

WLAN function activates and connects to Internet.

#### 2 In PS3 Home menu, select **Settings** → **Network Settings** → **Internet Connection Settings**

#### 3 Select **Yes** → ○

#### 4 Select **Easy** → ▷

#### 5 Select **Wireless** → ▷

#### 6 Select **Scan** → ▷

#### 7 Select **Mobile Router SSID** (\*\*\*\*\*\*) → ○

- See WLAN default setting sticker for Mobile Router SSID
- If default SSID has been changed: Select current SSID

#### 8 **Confirm SSID** → ▷

#### 9 Select **WEP** → ▷

#### 10 Press ○ → **Enter WEP key** → ▷

- See WLAN default setting sticker for WEP.

#### 11 **Confirm settings** → ○

Settings are saved.

#### 12 Press ○

The connection test starts. When complete, test results appear.

Connected Wi-Fi device count on Display increases by one.

e.g.)  → 

## Using Wi-Fi (WLAN)

### ■ Connecting WPS Supported Wi-Fi Devices

**1 Press Power Key of Mobile Router for more than two seconds**

WLAN function activates and connects to Internet.

**2 Turn on WLAN functions → Prepare for WPS**

**3 Press WiFi/WPS Key of Mobile Router for about five seconds**

"WPS Proceeding" appears on Display.

**4 Connect Wi-Fi devices via WPS**

When complete, "WPS Success" appears.

- Operations vary depending on Wi-Fi devices.

**5 If other settings are required with Wi-Fi devices, follow the onscreen instructions**

Connected WLAN client count on Display increases by one.

e.g.)  → 

## Connecting Windows

All screenshots and procedures based on WEP.

### ■ Windows 7

**1 Press Power Key of Mobile Router for more than two seconds**

WLAN function activates and connects to Internet.

**2 Turn on PC WLAN function**

**3 In Start menu, click Control Panel → Network and Internet → Network and Sharing Center**

**4 Click Connect to a network**

**5 Click SSID (\*\*\*\*\*\*) → Connect**

- See WLAN default setting sticker for Mobile Router SSID
- If default SSID has been changed: Select current SSID



## Using Wi-Fi (WLAN)

### 6 Enter Security key in Security key field, and click **OK**

- See WLAN default setting sticker for security key.



Connected WLAN client count on Display increases by one.

e.g.)  → 

### Windows Vista

#### 1 Press Power Key of Mobile Router for more than two seconds

WLAN function activates and connects to Internet.

#### 2 Turn on PC WLAN function

#### 3 In Start menu, click **Control Panel** → **Network and Internet** → **Network and Sharing Center**

#### 4 Click **Connect to a network**

#### 5 Click Mobile Router SSID (\*\*\*\*\*\*) → **Connect**


- See WLAN default setting sticker for Mobile Router SSID
- If default SSID has been changed: Select current SSID



## Using Wi-Fi (WLAN)

### 6 Enter Security key in Security key or passphrase field, and click **Connect**

- See WLAN default setting sticker for security key.

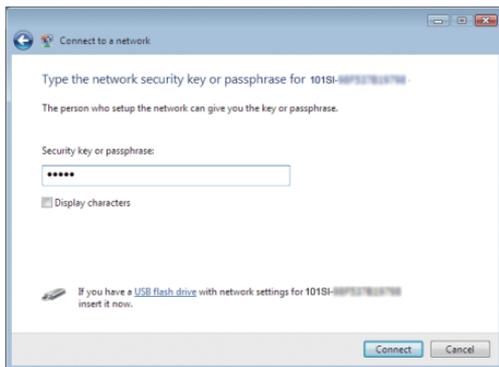

### 7 Click **Close**

Connected WLAN client count on Display increases by one.

e.g.)  0 →  1

## Windows XP

### 1 Press Power Key of Mobile Router for more than two seconds

WLAN function activates and connects to Internet.


### 2 Turn on PC WLAN function

### 3 In Start menu, click **Control Panel** → **Network and Internet** → **Network and Sharing Center**

### 4 Click **Wireless network connection** → **Network task** → **Display usable wireless network**

### 5 Click Mobile Router SSID (\*\*\*\*\*\*) → **Connect**


- See WLAN default setting sticker for Mobile Router SSID
- If default SSID has been changed: Select current SSID

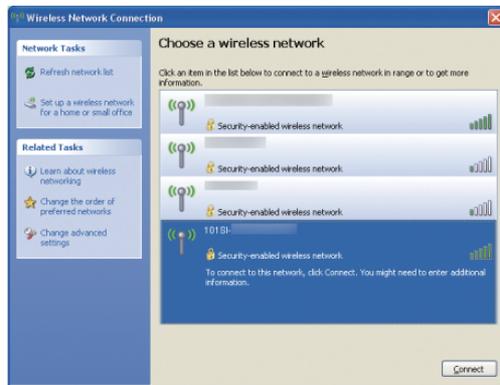

## Using Wi-Fi (WLAN)

### 6 In Network key, confirm Network key field, enter Security key → **Connect**

- See WLAN default setting sticker for security key.

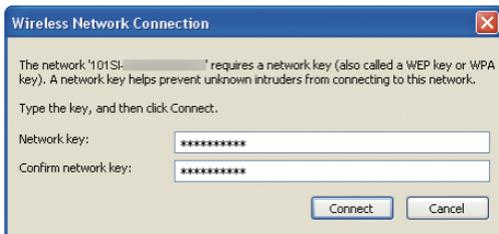

Connected WLAN client count on Display increases by one.  
e.g.)  0 →  1

## Connecting Mac

Screenshots/operations are based on WEP, Mac OS X 10.6.


- 1 Press Power Key of Mobile Router for more than two seconds  
WLAN function activates and connects to Internet.
- 2 From Apple menu, click **System Preferences** → **Network**
- 3 Click **AirPort** → **Turn AirPort On** to turn WLAN function on



## Using Wi-Fi (WLAN)

### 4 From Network Name pulldown list, select Mobile Router SSID (\*\*\*\*\*)

- See WLAN default setting sticker for Mobile Router SSID
- If default SSID has been changed: Select current SSID

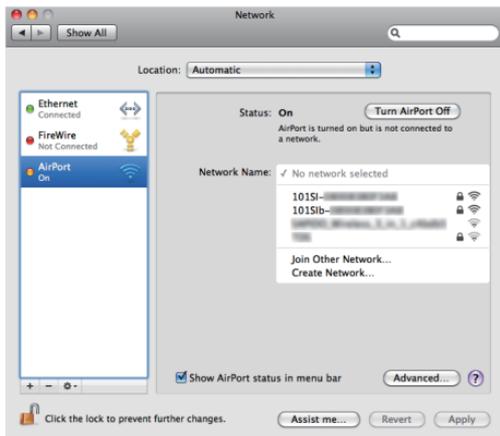

### 5 Enter security key in Password field → *Remember this network* → OK

- See WLAN default setting sticker for security key.



### 6 Confirm Network Name is set to SSID (\*\*\*\*\*)

Connected WLAN client count on Display increases by one.

e.g.)  0 →  1