

Camera

Before Using Camera

- Notification Lamp illuminates while Camera is active.
- Shutter click sounds at fixed volume even in Manner Mode.

File Formats & Save Location

Photos/videos are saved to Data Folder.

Image Type	File Format	Save Location
Photos	JPEG (.jpg)	Pictures (Data Folder)
Videos	MPEG-4 (.3gp, .mp4), ASF (.asf)	Videos (Data Folder)

Changing Save Location


From ► **Main Menu** ► **Camera** ► **Camera** or **Video Camera**

- 1  [Menu] → *Storage setting* → *Store in*
- 2 *Phone* or *microSD*


Camera Display Indicators

• Images shown below are for reference only.

■ Camera

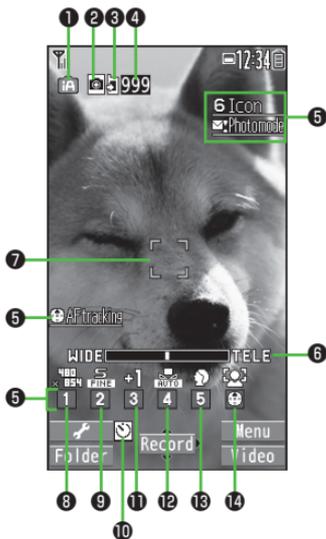

■ Video Camera

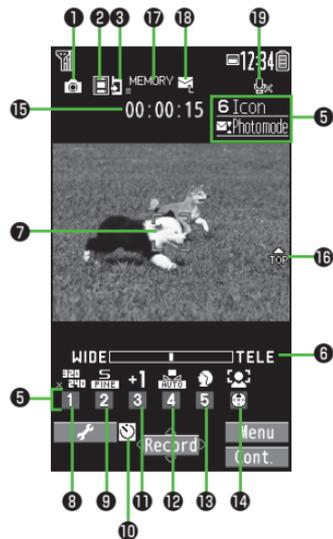

Camera

	Item	Description
1	Photo mode	Intelligent Auto Normal Scene My original setting (For Scene/My original setting, indicators vary by setting.)
2	CHG camera-mode	Camera Video Camera Action mode (Auto/Manual/Auto bracket)
3	Store in	Phone microSD
4	No. of frames	Show number of remaining frames
5	Key guidance	Show Key operation guidance
6	Zoom bar	Indicate zoom level
7	Focus Guide	Auto focus guide AF tracking guide
8	Image size	Indicate image size
9	Quality	Standard Fine Super fine
10	Auto timer	
11	Exposure	Adjust brightness (Level -3 to +3)
12	White balance	Auto Fine Cloudy Light bulb Light
13	Scene	Portrait Sports Food Scenery Nightscape Backlight Character Snow Sunset Pet
14	Focus mode	Face Detection Auto Macro Landscape AF tracking
15	Recordable time	Indicate recordable time
16	Top indicator	Indicate vertical direction
17	Memory capacity bar	Indicate memory status (appears in red when memory is full)
18	File size	Mail restrict'n(S) Mail restrict'n(L) Long time
19	Movie type set	Record video without audio

Key Guidance

- Follow the steps below to change settings:
 - Press Keys indicated by 5 (→ to select an item)
 - to select a setting → to select an item

Taking Photos

- 1  Photo Viewfinder appears.
- 2 Frame subject →  [Record] or 
Shutter click sounds.
 - To return to Viewfinder without saving the image:  [Folder] →  to return to Viewfinder
- 3  [Save]
 - To view the photo immediately after capturing:  [Folder] →  to return to Viewfinder
- 4  to exit
Return to Standby.



Photo Viewfinder

■ Send Photo via S! Mail

> After Step 2,    → Create message (👉 P.4-3)

Recording Videos

- 1  →  [Video]
Video Viewfinder appears.
- 2 Frame subject →  [Record] or 
Tone sounds and ●REC appears.
- 3  [Stop] or 
Tone sounds.
 - To view the video immediately after recording:  [Play]
 - To return to Viewfinder without saving the video:  [Folder]
- 4  [Save]
- 5  to exit
Return to Standby.



Video Viewfinder

■ Send Video via S! Mail

> After Step 3,    → Create message (👉 P.4-3)

Camera Functions

Auto Focus Lock

Bring focus on subject at center of Display automatically.
Lock focus on subject, and recompose your photo.

- 1 In Viewfinder,  or 
 - When in focus, handset sounds. Focus Guide turns green.
 - When out of focus, Focus Guide turns red.
 - To cancel focus: 
- 2 Compose shot
- 3 Capture image in selected Camera mode

AF Tracking

Position AF tracking guide on subject. Camera tracks moving subject, adjusting focus and exposure.

- 1 In Photo Viewfinder, 
AF tracking guide appears.
- 2 Position AF tracking guide on subject and Press 
Upon recognition, AF tracking guide turns yellow and tracking begins.
 - To cancel:  or 
- 3  or  to capture photo



Zoom

- 1 In Viewfinder, 

Auto Timer

- 1 In Viewfinder,  [Menu] → *Auto timer*
- 2 *ON* → Enter time (seconds)
- 3  [Record]
Auto timer tone sounds. After set period of time, shutter is released and recording starts.
 - While Auto timer is active, Press  [Quit] or  to return to Viewfinder without canceling Auto timer.

Note

- Auto timer is not available when Action mode is set to *Manual*.
- Auto timer is set to *OFF* after capturing.

Continuous Shooting

Capture a succession of up to 20 still images automatically with a single press.

- 1 In Photo Viewfinder,  [Video] →  [Cont.]
 appears. (Icon may change depending on modes.)
- 2 Frame subject →  [Record] or 
 - To stop shooting halfway: 
- 3 **Save All**
 [STO all]
Save Selected Images
Select images →  [Save]
 - Check mark appears on selected images. To cancel selection, select the image again. Check mark disappears.
 - To view a full-size Image: Select an image, then Press  [Detail] →  to return to thumbnail view ( to view other images while viewing full-size image.)

Viewing Photos & Videos

Main Menu ► Data Folder

1 **Open Photos**
Pictures

Open Videos
Videos

2 Select a folder

3 Select a file



Example: Pictures

■ Open Photos Saved on microSD Card

> In Step 1, *Pictures* → [microSD] → Select a folder

■ Open Videos Saved on microSD Card

> In Step 1, *Videos* → [microSD] → Select a folder