 


Text Entry

Unless noted otherwise, text entry descriptions are for text entry windows.



Text Entry Window (Message Text)

Opening Help




Note

- Pressing repeatedly may not close text entry windows.

Switching Entry Modes

1

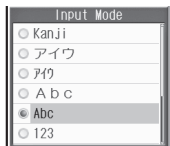

- Available entry modes appear.

2 **Select mode**

- Entry mode indicators:

	Kanji (Hiragana)
	Double/Single-byte Katakana
	Double-byte Alphanumerics (upper/lower case)
	Single-byte Alphanumerics (upper/lower case)
	Single-byte Number
	Character Code

appears when Predictive is active.

Character Entry Basics

Use Keypad to enter characters. Multiple characters are assigned to each key. Press a key to toggle character options for that key.

Example: In Double-byte Katakana mode, press three times.

 


- Press to reverse-toggle options. To enter characters assigned to the same key, press first.

Example: In Single-byte Alphanumerics mode, enter *no*.













- Long Press a key to confirm the current character and advance cursor.




Entering Characters

Hiragana

Enter **すずぎ** in Kanji (Hiragana) mode.

- 1    (す) →  →
   (ず) →  (ず) →
  (ぎ)

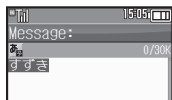


- 2  (Confirm)

Kanji

Convert **すずぎ** to **鈴木**.

- 1 Enter **すずぎ**



- In Kanji (Hiragana) mode, word suggestions change as hiragana are entered. (Predictive)
- Long Press  to toggle suggestion mode between Standard, Literary, Spoken and Automatic. (Personal Mode)

- 2 



- 3 **鈴木**

 
 
 
- To exit suggestion list, press .

- 4 






- Words likely to follow the entry appear. (Previous Usage)

When Target Word is Not Listed

- Press  or  to segment hiragana to convert separately.
 - Press  to toggle Predictive and Non-Predictive suggestions.

  
Deleting Words/Phrases from Entry Log

- Enter hiragana →  → Select word/phrase →  (Long Press) → Yes → 

Entering from Dictionaries

Enter text by referring to word definitions, translations, etc.

1 Enter hiragana ➔ Before confirming entry,

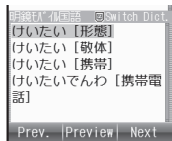

- Press  to toggle dictionaries.

2 Select word, etc. ➔

- Definition/translation appears.

3

One-Hiragana Conversion

Enter the first hiragana for a suggestion list from previously selected words.

Example: **すずき** was previously converted to **鈴木**.

1 (す) ➔

2 Select word/phrase ➔

Correction Conversion

After mistyping hiragana assigned to the same key (e.g., **い** instead of **う**), enter intended word/phrase from suggestion list without retyping.

(Available when three or more hiragana are typed.)

1 Enter hiragana ➔ Before selecting word/phrase,

- Corrected word suggestions appear.

2 Select word/phrase ➔

Katakana

Switch to Double-byte Katakana mode and enter **ジュン**.

1 ➔ **アイウ** ➔

2 (ジ) ➔ (ジ) ➔

(ユ) ➔ (ユ) ➔

(ン) ➔



Pictograms & Symbols



- May be unavailable depending on entry mode.
- Immediately after confirming a descriptive word such as **嬉しい** or **悲しい**, corresponding pictograms may appear in suggestion list. (PictogramWordLink)

1

- Pictogram or symbol list appears. (Log appears if pictogram/symbol has been used.)

2 (toggle tabs) ➔ or (toggle lists)



- While entering message text, press  in pictogram list to toggle cross-carrier pictograms and all pictograms. Alternatively, press  to switch to My Pictogram or symbol list.

3 Select pictogram or symbol ➔

- Pictograms are double-byte even in single-byte entry modes.

4 ➔ List closes

Emoticons

1  ➔ **Emoticons** ➔ 

2 **Select emoticon** ➔ 

Alternative Emoticon Entry Method

- In Kanji (Hiragana) mode, enter **かお** or a descriptive word such as **わーい** or **うーん**, then convert the entry.

Mail & Web Extensions

Enter **.co.jp**, **http://**, etc., easily.

1  ➔ **Quick Addr. List** ➔ 

2 **Select extension** ➔ 


- Extensions are single-byte even in double-byte entry modes.

Hiragana to Katakana/
Alphanumeric Conversion

Enter katakana or alphanumerics in Kanji (Hiragana) mode using key inscriptions.

Example: Enter **PM**

1   ➔ 

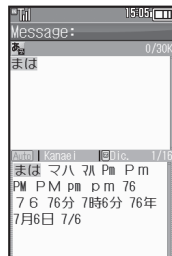

2 **Select word/phrase (PM)**
➔ 


Using Wildcard Characters


To improve word suggestions in Kanji (Hiragana) mode, or Single-byte Alphanumeric mode, add ***s**, or ***s** (wildcard characters) respectively, to entries. Use ***** or ***** to specify the character count: For example, enter **あか**** for a list of words/phrases of four or more characters starting with **あか** or **あが**; enter **so**** for a list of case-insensitive words/phrases that start with **so**.

Example: Kanji (Hiragana) mode

1 **Enter hiragana** ➔  ➔ 



- ***** appears; to enter another *****, press  again.

2  ➔ **Select word/phrase**
➔ 

Editing Characters

 
Deleting & Editing

Correct **また、お願いします** to **また明日
お願いします**.

1 Select character




2



- Highlighted character is deleted.

 3 Select target location → Enter characters



Recovering Deleted Characters

- Press **[↶]** to recover characters deleted with **[↷]**.

Deleting All Text

 
- Long Press **[↷]** at text end. To delete characters on and after cursor, select the first character of text and Long Press **[↷]**.

Jumping to the End or Top of Text

- [↵]** → **Cursor Position** → **[↶]** → **Jump to End or Jump to Top** → **[↶]**

Copy/Cut & Paste

1 **[✂]** → **Cut or Copy** → **[↶]** → Select first character → **[↶]**




Cut

- To cancel and start over, press **[↵]**.

2 Highlight text range → **[↶]**

 3 Select target location → (Long Press)



- Text is entered.

Pasting Previously Cut/Copied Text

- Select target location → **[↵]** → **Paste** → **[↶]** → **Select text** → **[↶]**

 
- Available when Paste List appears.

Customizing Fonts

Enlarging All Fonts

Enlarge fonts for menus, text entry, etc.

1 (Long Press)



2 **Large Font Menu** →

Canceling Large Font Menu
In , **Standard Menu** →

Resizing Specific Fonts

1 → **Settings** →



2 In Sound/Display menu, **Display** →

3 **Font Settings** →



Font Settings Menu

4 **Font Size** → → **Select item** →

5 **Select size** →

Changing Font Weight

1 In Font Settings menu, **Font Weight** →



2 **Select weight** →

Wallpaper

1 → **Settings** → → In **Sound/Display** menu, **Display** →

2 **Wallpaper** →



Wallpaper Menu

3 **Select folder** →

4 **Select file** →

- Some files may not be usable.
- Omit when **Preset Pictures** is selected in .
- Use to zoom in/out or press to rotate.

5

Selecting Images Smaller or Larger than Display

After , select option → →

- For **Centered**, use to zoom in/out or press to rotate.

Downloading Images from the Internet

In , **Download Pictures** →

- Read terms of service and then follow onscreen instructions.

Selecting Images with Limited Usage Period

- Confirmation appears. Follow these steps:

Yes → →

If Double Number Mode Menu Opens

Select mode →

Selecting Chara Time Files

In , **Chara Time** → → **Select file**

→ → →

Slideshow Wallpaper

Set slideshow to appear in Standby. Some folders/files may not be supported.

1 In **Wallpaper** menu, **Slide W paper** →

2 **Folder Setting** →

3 **Pictures or DCIM** →

4 **Select subfolder** → → **Set this folder** →

- Omit steps for subfolder if none is applicable.

If There is No Image in Set Folder

- Preset images appear.

Using Preset Images

In , **Preset Pictures** →

Selecting Pattern

In , **Pattern Setting** → → **Select pattern** →

- To check patterns, select one and press .

Customizing Handset Responses

Ringtone

Use preset sounds or media files saved in Data Folder, etc.

- 1 **Settings** → **Sound/Display menu, Sounds & Alerts**



Sounds & Alerts Menu

- 2 **Ringtone/videos**
- 3 **Select item**
For **For New Message**, etc., select **Assign Tone** and press.
- 4 **Select folder**
- 5 **Select tone/file**
• Some files may not be usable.

Changing Ringtone Duration

After **Duration** → **Enter time**

Playing Video for Incoming Transmissions

In **Videos** → **Select start point**

If Portion of File Content is Specifiable

- After **Select start point**, start point selection window opens. Follow these steps:

Select start point

Selecting Files with Limited Usage Period

- Confirmation appears. Choose **Yes** and press **to proceed**.

Machi-Uta® Service Registration (Japanese)

Use Machi-Uta® to play music instead of the standard ringback tone for the other party. Machi-Uta® requires a separate contract and basic monthly fee.

- 1 **In Sounds & Alerts menu, Machi-Uta**
- 2 **Register/Cancel**
• Follow onscreen instructions.

Vibration

- 1 **In Sounds & Alerts menu, Vibration**
- 2 **Select item** → **Switch On/Off**
- 3 **On**
- 4 **Vibration Pattern**
• To check vibration patterns, select one and press.
- 5 **Select pattern**

Important Vibration Usage Note

- Cancel Vibration when charging Battery to help avoid accidents.