

Infrared

Wirelessly transfer files between handset and compatible devices.

Transferable Files

Phone Book	Received Msg.
Calendar	Sent Messages
Tasks	Drafts
Notepad	Templates (Messaging)
Bookmarks	Data Folder

 
- Copy/forward-protected files are not transferable.
- Some files may not be transferable; some settings may be lost, or files may not be saved properly.

Getting Started

Infrared Precautions

Align Infrared Ports of both devices.

- Handset cannot receive connection requests during Software Update.

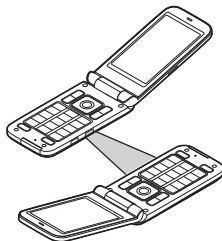

- Do not place objects between devices.
- Keep Infrared Ports aligned during transfer.
- Do not look into Infrared Port during Infrared transmissions. Eyesight may be affected.
- SoftBank 105SH complies with IrMC 1.1; however, some files may not transfer properly.

Transfer Options

One File Transfer	Transfer single files
All File Transfer	Transfer all files by function

- Some transfer options may be unavailable depending on file type.
- Transfer Memory Card files one by one.

Authorization Code


- Four-digit code required for Infrared transfers. All File Transfers are possible when codes match. (Authorization Code is changeable for each transfer.)

Transferring Files Using Infrared

Receiving Files

1 (Long Press)



- Infrared activates. (Alternatively, activate it from Main Menu.)
- Handset receives files if sent within three minutes.
- Handset must be in Standby to accept connection requests.
- To cancel Infrared, Long Press .

2 Connection request arrives


3 Perform subsequent operations

- To cancel transfer, press .

Subsequent Operations

■ One File Transfer

Yes  

- If storage media confirmation appears, select media and press .

■ All File Transfer (Adding Files)

Yes    Enter Authorization

Code    As New Items  

■ All File Transfer (Overwriting Existing Files)

Yes    Enter Authorization

Code    Delete All & Save 

  Yes  

- For Phone Book, My Details except handset number is overwritten as well.

Sending Files

■ One File Transfer

Example: Phone Book entry

1   Select entry    Send Entry  

2 Via Infrared    Transfer starts

- When complete, entry search window returns.

All File Transfer

1   Tools     Connectivity  Infrared  



2 Send All  

3 Yes    Enter Handset Code  

4 Select item   ( / )  Complete selection  

5 Enter Authorization Code    Transfer starts  

Sending Phone Book

 
- In , Picture transfer confirmation appears; choose **Yes** or **No** and press .

Exchanging Contact Information

Exchange name, phone numbers, mail addresses, and other contact info with other compatible handsets using Infrared. Read **P.6-1** "Infrared Precautions" beforehand.

Receiving Profiles


1 (Long Press)

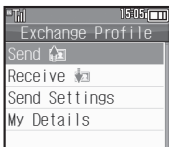

Exchange Profile Menu

2 **Receive**

 3 **Profile received**




- Received profile is saved to Phone Book.

Sending Profiles

1 **In Exchange Profile menu,** **Send** **Transfer starts**

Changing Profile Items to Send

[Exchange Profile Menu] **Send**

Settings    **Select item**  

(/)  **Complete selection**  

Opening My Details

[Exchange Profile Menu] **My Details**

 
Connecting PC

Accessing Memory Card

Connect handset to a PC with USB Cable to access Memory Card from the PC without removing it from handset.

USB Cable may be purchased separately.

1 Connect handset to a PC with USB Cable

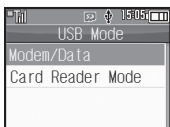

2 Card Reader Mode →

- Use PC to access Memory Card.

3 → Yes → →

Connection ends

- Disconnect USB Cable.

If Menu in 1 Does Not Appear

- → Tools → → Connectivity → From

- Operations on the PC may be required; if prompted, follow onscreen instructions.

Utility Software (Japanese)

For more PC-related operations, download Utility Software (including USB Cable driver) from the following URL.

Utility Software

http://k-tai.sharp.co.jp/support/download/s/#!/soft_utility

Mobile Data Communication Fees

- Accessing the Internet from handset using a PC/PDA may incur high charges as large-volume packet transmissions tend to occur in a short period of time.

Basics

Back up information to Memory Card, and restore to handset as needed.

Specify frequency for Auto Backup.

Auto Backup requires a subscription to S! Addressbook Back-up.

Supported Items

Select items, or back up all items together at once.

In Manual Backup, open Options menu for **Check Selection** to select multiple items for simultaneous backup.

Phone Book*	Sent Messages*
Calendar*	Drafts*
Tasks*	Templates (Messaging)
Bookmarks*	Contents Keys
Notepad*	Data Folder
Mail Groups*	User Dictionary
Received Msg.*	

*Selectable for simultaneous backup.

Auto Backup Compatibility

- These items are not backed up:
 - Mail Groups
 - Templates (Messaging)
 - Data Folder
 - User Dictionary

Precautions

- Not available if Battery is low.
- Backup may fail if Memory Card memory is low.
- Some items may not be transferable; some settings may be lost, or files may not transfer properly.

Auto Backup File Deletion

- Auto Backup saves up to three backup files for each item; when full, handset automatically deletes oldest files to save new ones.

Contents Keys

- Manual Backup overwrites Contents Keys in Memory Card. Perform Restore beforehand to keep previous Keys.
- In Auto Backup, Contents Keys are added to Memory Card.

Restoring Backed Up Content

 
- Corresponding handset content is overwritten depending on Restore option.

Backup & Restore

Manual Backup

To back up selected items together at once:

- 1 → **Settings** → →
Phone/ → **Backup/**
Restore →

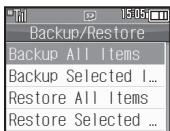

Backup/Restore Menu

- 2 **Backup Selected Items** →
 → **Enter Handset Code**
→
- 3 **Yes** →
- 4 **Select item** → (/✓) →
Complete selection
 - For **Phone Book**, confirmation appears. Choose **Yes** or **No** and press .

- 5 → **Yes** →
 - To cancel, press .

- 6 **Backup complete** → →

Selecting Multiple Items Together at Once

In 4, → **Select option** → →

From 5

Selecting/Canceling All Items

In 4, → **Check All or Uncheck All**

→

Auto Backup

Back up information to Memory Card at a specified frequency automatically.

To enable Auto Backup, set Auto Sync Settings (S! Addressbook Back-up) to **On**; Auto Backup will be performed at 2:00 AM on the same day of the week by default.

Precautions

- Auto Backup does not start when:
 - Memory Card is not inserted
 - Battery is low/dead and not being charged
 - Another function is active (end it and return to Standby to start backup)

At Auto Backup Time

 
Backup starts; Information window opens upon completion.

Select **Complete Auto Save** and press to open backup result.

Changing Settings

To back up once a week automatically:

- 1 In Backup/Restore menu, **Settings/Manage** →
- 2 **Auto Backup** → → Enter Handset Code →

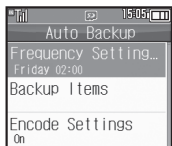

Auto Backup Menu

- 3 **Frequency Settings** →
- 4 **Once Every Week** → → Select day → → Enter time →
- 5 **Backup Items** → → Select item (/) → Complete selection →

Backing Up Once a Month

- In 4, **Once Every Month** → → Enter date → → Enter time → → 5

Disabling Auto Backup

- In 4, **Don't Auto Backup** →
- Disabling Encoding
[Auto Backup Menu] **Encode Settings** → → **Off** →

Memory Card to Handset

To restore selected items:

- 1 In Backup/Restore menu, **Restore Selected Items** → → **Yes** →
- 2 Select item → (/) → Complete selection
- 3
 - If no file list appears, skip ahead to 5.
- 4 **Select file** →
 - Repeat 4 to complete selection.

5

6 **Yes** →

- To cancel, press .

7 **Restore complete** → →

Selecting Multiple Items Together at Once

- In 2, → Select option → → From 3

Selecting/Canceling All Items

- In 2, → **Check All or Uncheck All** →

Changing Restoration Method

- After 2, select item → → **Change to Add Mode or Chg. to Overwrite Mode** → → From 3