

Getting Started

Capture photos or record video.

Various Sizes

Select small sizes to send captured photos/recorded video using S! Mail[®]; select larger sizes for higher resolutions.

Auto Focus

Measures the distance between subjects and Camera to adjust focus.

Shooting Modes

Apply effect or add frame, or capture successive photos.

Review

Open/play last saved Camera file quickly; access older files as needed.

*May not be delivered as sent depending on shooting size or recipient device.

Important Camera Usage Notes

- Clean dust/smudges from Lens Cover with soft dry cloth before use.
- Camera is a precision instrument; however, some pixels may remain on/off.
- Shooting/saving images while handset is hot may affect the image quality.
- Exposing Lens to direct sunlight may damage Color Filter and affect image color.

Automatic Shutdown

- Camera shuts down after a period of inactivity and handset returns to Standby.

Shutter Click

- Shutter click and Self-timer tone sound at fixed volume regardless of handset settings.

Capturing Photos


1  (Long Press)

2 Frame subject on Display




Photo Viewfinder

 3 

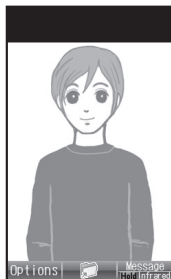



Captured Photo Window

- Shutter clicks and photo is captured.
(To start over, press .)




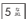 
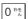 
4 

- Photo is saved. (Viewfinder returns.)
- Open saved photos from Review or Data Folder.

5  ➔ **Camera shuts down**

Sending Captured Photos Using S! Mail
 [Captured Photo Window]  ➔
 Complete message ➔ 


Main Viewfinder Operations

Zoom In/Out*	
Toggle Camera	
Adjust Brightness	
Change Shooting Size	
Open Help	

*May be unavailable depending on shooting size.

Recording Video

 
1 (Long Press)

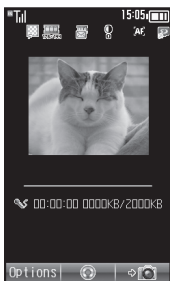


Video Viewfinder

2 Frame subject on Display




- Tone sounds and recording starts.
(To start over, press .)

 3

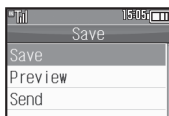

Video Save Menu

 

 


- Tone sounds and recording stops.
(To start over, press .)

4 **Save**

- Video is saved. (Viewfinder returns.)
- Play saved video from Review, Data Folder or Media Player.

5 **Camera shuts down**

■ Main Viewfinder Operations




Zoom In/Out	
Toggle Camera	
Adjust Brightness	
Change Shooting Size	
Open Help	

Playing Unsaved Video

In 4, **Preview** 

Sending Recorded Video Using S! Mail

In 4, **Send**   **Save and Send**

  **Complete message** 

- May not be delivered as sent depending on shooting size or recipient device.

Incoming Calls while Recording

- Recorded clip remains even if the call is answered. End the call to save it, etc.

If Battery Runs Low

- Recording stops. (Recorded clip is saved.)

Opening Saved Files

Opening Last Saved File

Open/play last saved Camera file; access older files as needed.

1 [OK] → **Camera** → [OK]

2 **Review** → [OK]



Review Window

- To end, press [ESC].

Enlarging Photos

After [OK], [OK]

Pausing/Resuming Video

 
After [OK], [OK] (press to pause/resume)

Opening Help

[Review Window] [0?]

Accessing Older Files

1 In Review window, [v]

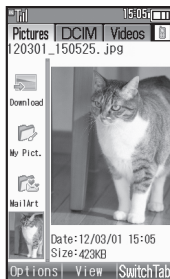

Review File List

- File list appears.
- Press [v] to toggle lists.






2 **Select file** → [OK]


- File opens/plays.

Using Shooting Modes

May be unavailable depending on selected shooting size.

Self-timer

- In Photo/Video Viewfinder,**
 ➔ **Self-timer** ➔ 
- Select time** ➔ 
- Frame subject on Display**
 ➔ 
 - After selected time elapses, photo is captured or recording starts.
 - To stop recording, press .
 - For more, see operation descriptions on P.7-2 or P.7-3.

Releasing Shutter during Countdown
 After ,

Incoming Calls/Alarm during Countdown
 • Countdown stops. (Self-timer remains active.)

Continuous Shoot (Photo Camera)






Available modes:

4 Pictures	Capture four separate photos with index image
9 Pictures	Capture nine separate photos with index image
Overlapped	Capture five photos to create a composite image

- In Photo Viewfinder,**  ➔ **Modes** ➔ 



Mode Menu

- Continuous Shoot** ➔ 
- Select mode** ➔  ➔ **Select speed** ➔ 
- Frame subject on Display**
 ➔ 
 - After shooting, index image or a composite image appears.
 - When shooting speed is set to **Manual** (4 Pictures and 9 Pictures modes), repeat  for each shot.










- (Long Press)**

- All captured photos are saved.

Saving the Selected Photo

After ,  (select photo) ➔ 

Adding Frames (Photo Camera)

- In mode menu, Add Frame**
 ➔ 
 - Preset Frames** ➔ 
 - Select frame** ➔ 
 - Frame subject on Display**
 ➔ 
 - Photo is captured.
 - Press  to save photo. (Viewfinder returns.)
- Using Frames in Data Folder
 In , **Data Folder** ➔  ➔ **Select frame** ➔  ➔  ➔ **Frame subject on Display** ➔ 