 


Area Setup

When activating TV for the first time, set up channels by area. (TV is exclusively for use in Japan.)

1 



• Setup confirmation appears.

2 Yes  



3 Select region  

4 Select prefecture  
 Select locality  



• After setup, channel list appears.

5 



• To watch TV, select **TV** and Press .

Watching TV without Completing Area Setup

In  **No Preference**  

Adding Reception Areas


   **Set Channels**  

Change Area   **Select Area** 

  **Set Area Info**   

TV Antenna

TV Antenna is located behind Display. Check signal strength indicator and move handset to find best reception. (More bars indicate stronger signal.)

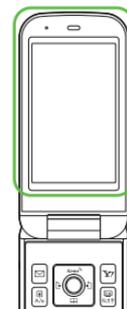

Antenna Area

Watching TV

Complete Area setup (P.8-1) first.

1



TV Window

2 Use Dialpad to select channel

- Use to surf channels in list order; Long Press to find channel with stable signal automatically.

3 ➔ Yes ➔ ➔ TV ends

Changing Display Size/TV Orientation

[TV Window]

- Press to toggle view between Full Screen, Normal (Portrait), Enlarge (Portrait) and Normal (Landscape).
- In portrait view, Data Broadcast appears below TV image.

Incoming Calls

- Press to answer calls.

Incoming Messages

- Tone sounds and notice appears. Long Press to access messages.

Toggle Function

- While watching TV in portrait position, Press to toggle function between volume control (Volume Operation mode) and Data Broadcast item selection (Data Operation mode).

Important TV Usage Notes

- Do not use TV while driving or cycling. Accidents may result. Phone use while driving is prohibited by the Road Traffic Law (revised November 1, 2004). When walking, always pay attention to your surroundings, especially near road/rail crossings, etc.
- When using TV while charging Battery, separate AC Charger cord and TV Antenna to avoid interference.
- Call transmissions, incoming messages or mobile phone use in the immediate vicinity may affect audiovisual quality.
- Programs may not be viewable or record properly when:
 - Too far from or too close to broadcasting stations
 - In mountainous areas or near tall buildings
 - Aboard trains or in moving vehicles
 - Near high-voltage lines, neon lights or wireless base stations
 - Near railroad tracks or highways
 - Anywhere interfering signals are broadcast/reception is unstable


Main Key Assignments

Open Options Menu	
Toggle Panel On/Off	(in portrait view) (in landscape view)
Volume Control	


*In portrait view, Volume Operation mode.

Multi Selector

Multi Selector functions changes with TV orientation.

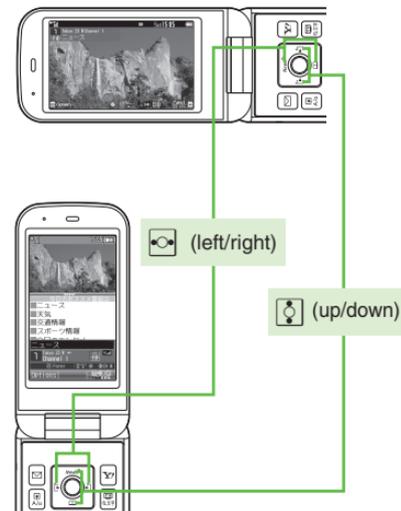

Panel Layout

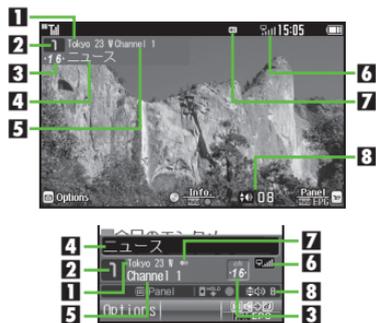


1	Area Name	5	Station Name
2	Channel Key	6	Signal Strength
3	Channel	7	Sound Channel
4	Program Name	8	Volume

Indicator position varies with Display content, etc.

Data Broadcast (Japanese)

In portrait view, Data Broadcast appears below TV image. Use to select an item and Press to access program-related information and interactive services. In Volume Operation mode, Press to switch to Data Operation mode first.

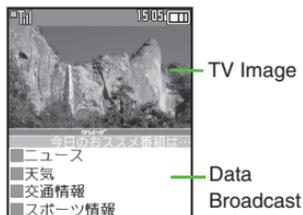

Data Broadcast Window

Data Broadcast Fees

- Data Broadcast information viewing is free; however, using data links/related services incurs Internet connection fees.
- Confirmation appears the first time a fee-based Network connection is established from a channel; if accepted, further Network connections are established without confirmation until the channel is changed.

Recording Programs

Record current program on Memory Card.

Precautions

- Saved files cannot be forwarded or attached to messages.
- Handset encryption technology prevents unauthorized copying or playback of Memory Card files. Files copied from Memory Card to other cards on PC are unplayable.
- Copyright laws limit duplicated material to private use only, and prohibit unauthorized reproduction/other use.
- SoftBank Mobile is not liable for any damages resulting from accidental loss or alteration of recorded content.

- 1 In TV window,  (Long Press) ➔ Recording starts



Recording Window

- Changing Volume, etc. does not affect recordings.
- When Notification Lamp flashes orange, reception is poor; change location to where Notification Lamp illuminates green.

- 2  (Long Press) ➔ Recording ends

Recording Programs in Portrait View

[TV Window]  (Long Press)

- To stop, Long Press  while recording.
- Memory/Battery Runs Low or Video Call is Accepted**
- Recording stops. (Recorded content is saved.)

Playing Recorded Programs

- 1 In TV window,  ➔ TV Player ➔ 



Video List

- Files with  are unplayable.

- 2 Select file ➔ 



Playback Window

- Playback starts. (The last played file plays from where it stopped.)

- 3  (Long Press) ➔ Playback stops

Main Playback Operations

Adjust Volume or open Options menu following the same operations used while watching TV.

Fast Forward	 ¹
Rewind	 ^{1, 2}
Skip Forward	
Skip Backward	
Pause ³	 ⁴
Split File	 (Long Press)
Set Marker	
Toggle Panel On/Off	

¹ Each Press increases speed. To resume normal playback, Press .

² Long Press to replay. (Available when no Marker is saved.)

³ In pause, use  to reverse/advance frame.

⁴ In portrait view, Volume Operation mode.

TV Timer & TV Recording Timer

- 1 In TV window,  ➔ **Rec. Operation** ➔ 
- 2 **Reservation List** ➔ 
- 3  ➔ **New Entry** ➔ 
- 4 **Manual** ➔  ➔ **Watching or Recording** ➔ 
- 5 Enter start date/time ➔  ➔ Enter end date/time ➔ 
- 6 **Channel:** ➔  ➔ **Select channel** ➔  ➔ 

Setting Timer from EPG

In , **From TV Listing** ➔ 

- Refer to the application's help menu for operational instructions.


Recording Timer Precautions

Confirm target channel reception; keep handset open.

- Insert a Memory Card.
- Exit all active functions/applications.
- Confirm Battery charge and memory status.

At Timer Time (TV Alarm Time)

TV and Alarm activate.

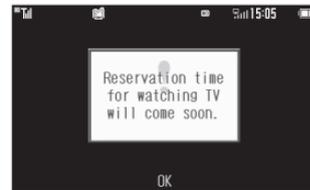

Signal reception starts slightly before the Timer start time and program recording/viewing ends a few seconds after the Timer end time.

While Using Another Function

- TV activates (Multi Job) and target program recording/viewing starts. If Multi Job cannot activate in the current state, TV may remain off, or the current function may exit automatically (unsaved images, messages, contacts, etc. may be deleted). Exit all active functions/applications before Timer time.

Media Player Basics

Use Media Player to play music/videos on handset.

- Download media files from the Internet using Media Player.
- Transfer PC music files and save them on Memory Card.

Music File Support

My Music

(Handset/Memory Card)
Downloads/Transferred Files

Video File Support

My Videos

(Handset/Memory Card)
Downloads/Recorded Files

Playback Precautions

 
- Media Player may not support some recording/playback formats. Files may not play depending on the Memory Card status.
- Playback stops for incoming calls.
- If Battery is low, Media Player does not play. Playback stops if Battery runs low during playback.
- Turn down Volume if distortion is noticeable in Speaker sound.
- Handset plays media while it downloads (progressive download). Packet transmission fees apply even while playback is paused.

Compatibility

- Files transferred from PCs cannot be used as ringtones or System Sounds.

Downloading Media Files

Download media files from the Internet. Read information (fee, expiry, etc.) on the source site.



- Follow the links to download media.

Saving Music Files from PCs

- Use software to convert music file format.
- For software usage and specifications, see the provider's website, etc.
- SoftBank Mobile does not guarantee compatibility with any software.
- USB Cable may be purchased separately.
- Install USB Cable driver beforehand. See **P.6-8 "Utility Software (Japanese)."**

Handling Transferred Files

- Copyright laws limit duplicated material to private use only.
- Files created with PC software, etc. may not play.
- Comply with copyright and other intellectual property laws when using obtained files.

Playing Music

1 **Media** **Music**

2 **My Music** **Select tab (folder)**



Music Playlists Window

3 **All Music**

4 **Select file**



Music Playback Window

- Album art appears for compatible Chaku-Uta Full® files.

Using Other Functions while Playing Music

After , or

- To stop playback in Standby:
 Yes

Searching for Music Files

After , **Search** **Enter search text**

Lyric Display-Compatible Files

- Press to view lyrics.

Main Music Playback Operations

Replay	 (Long Press: Rewind*, Double Press: Skip Backward)
Skip Forward	 (Long Press: Fast Forward)
Volume Down	 (Long Press: Mute)
Volume Up or Cancel Mute	
Pause	
Stop	In Pause,
Open Help	

*Release for playback.

Music Playback Window Layout




1	Title	6	Elapsed Time
2	Artist Name	7	Volume
3	Track Number	8	Information Link
4	Status	9	Sound Effects
5	Playback Mode		

Playing Videos

1 → **Media** → → **Videos**
→


2 **My Videos** → → **Memory Card or Phone Memory** →

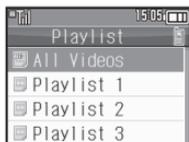

Video Playlists Window

3 **All Videos** →

4 **Select file** →

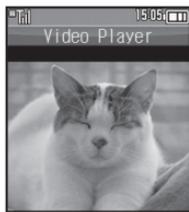

Video Playback Window

5 → **Playback stops**

Searching for Video Files

After → **Search** → → Enter search text →

At Alarm Time

- Playback pauses.

Videos Recorded on Other Devices

- Videos may appear rotated.

Main Video Playback Operations

For Volume up/down, pause or help, see P.8-9 "Main Music Playback Operations."

Replay	(Long Press: Rewind', Double Press: Skip Backward)
Skip Forward	(Long Press in Pause: Advance Frame, Long Press: Fast Forward')
Interface On/Off	
Toggle Display Size	

'Release for playback.

Video Playback Window Layout



1 Title	6 Elapsed Time
2 Author Name	7 Volume
3 Clip Number	8 Information Link
4 Status	9 Sound Effects
5 Playback Mode	

Using Playlists

Playlists store music/videos in a playback order. Add favorite media files to Playlists, or organize files by artist/genre.

Playlists store only file locations. Source files remain in All Music or All Videos.

Adding to Playlist

To add a music file to **プレイリスト1**:

1 ➔ **Media** ➔ ➔ **Music**
➔

2 **My Music** ➔



Playlists Window

3 **All Music** ➔ ➔ **Select file**
➔

4 **Add to Playlist** ➔ ➔ **プレイリスト1** ➔

Renaming Playlists

1 In Playlists window, select Playlist ➔

2 **Edit List Title** ➔ ➔ Enter name ➔