






みまもりケータイ3

SoftBank 202Z


Quick Start

Handset Overview

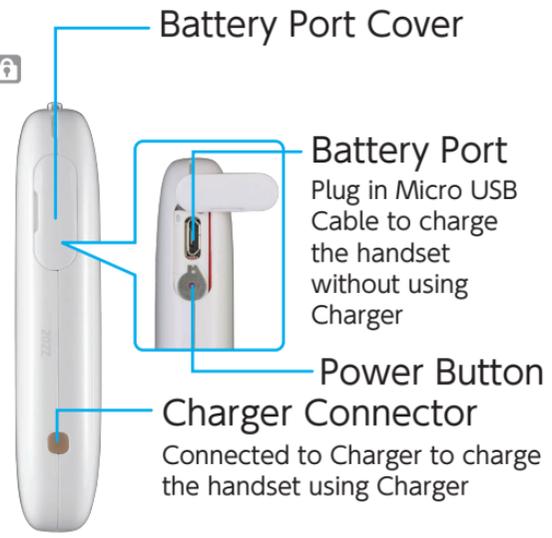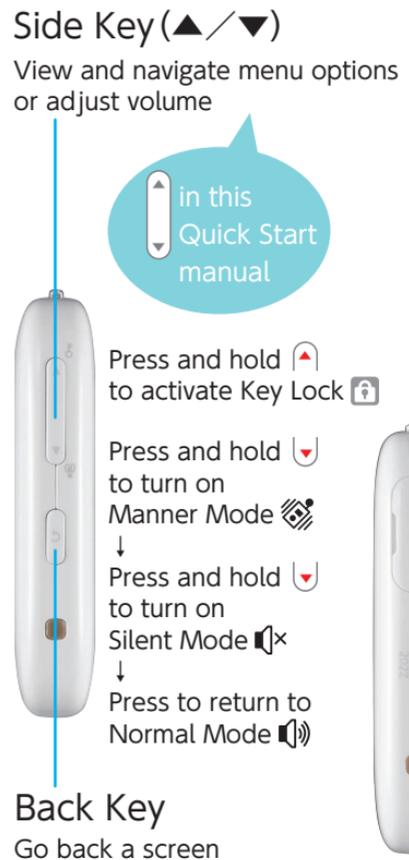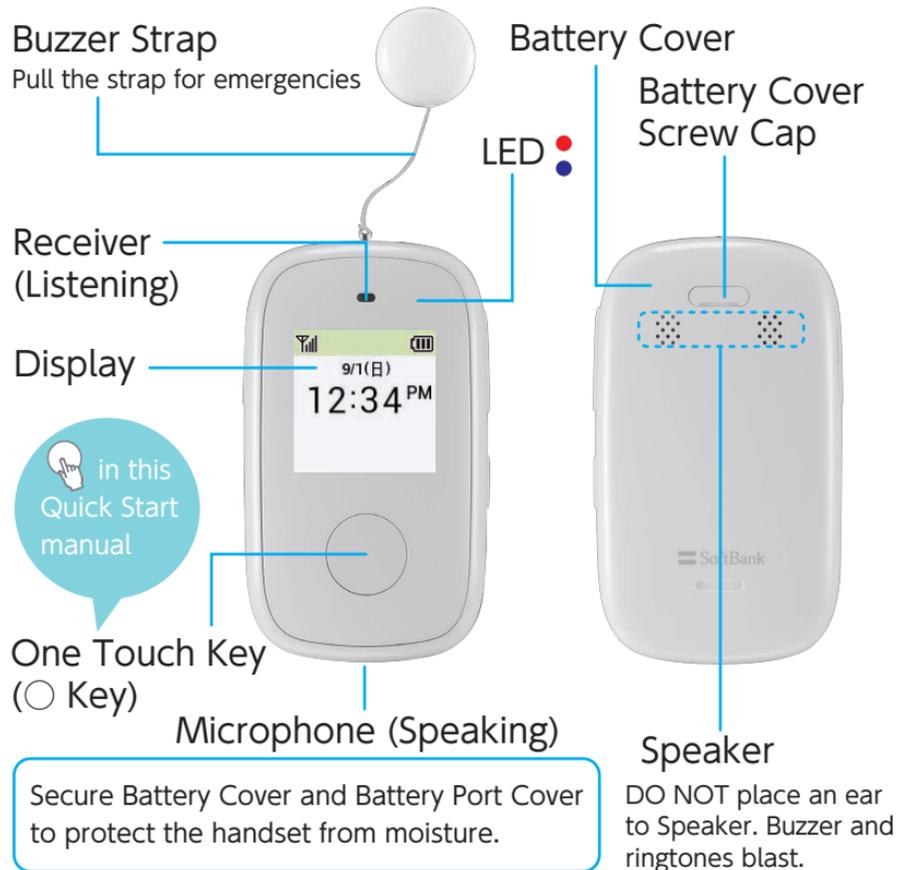

Main Features

 Phone	Call settings for quick calls
 Mail	<ul style="list-style-type: none">• Receiving mail• Sending prefixed texts and created voice messages
 Emergency buzzer	Buzzer blasting if Buzzer Strap is pulled
 Pedometer	Counting steps taken
 Settings	Providing setting options
 Life Monitoring	Sending a text that the user is active or not active
 Speed Detection	Sending a text that the user travels in vehicles
 Handset Tracker	Finding where the user is now

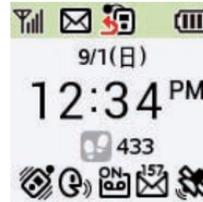


Home screen shows time and current settings. See 画面の見方 (Screen and icons) in User Guide. Screen images in this Quick Start may differ from handset's screens.

Screen Icons

 Signal bars	 Silent Mode
 New mail	 Auto-online mode
 Missed calls	 Voice mail
 Messages in Voice Mail	 Notifications
 Disaster alerts and warnings	 Software update
 Battery level	 GPS location
 Manner Mode	 Key Lock

- To turn the handset on and off, press Power Button following the directions below.
- Turn the handset off in hospitals, aircraft and areas where you are instructed to do so.

Turning the Handset On and Off

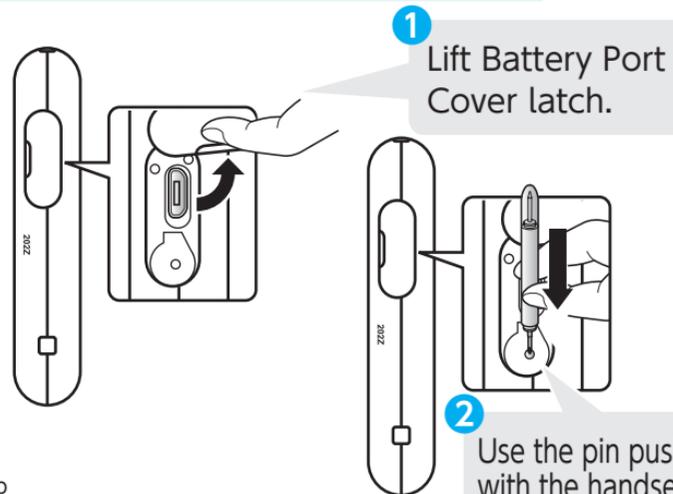

1 Lift Battery Port Cover latch.


2 Use the pin pusher (provided with the handset) to push Power Button for longer than 2 seconds.

*Tip
The handset can also be turned on without using the pin pusher. If you charge the handset, it turns on.

-  informs you that the battery is getting low and needs to be charged. To charge it, use the steps below. If the red LED on the handset lights up, the battery starts charging. When  appears on the display, the battery is fully charged.

Charging the Battery

- 1 Connect one end of Micro USB Cable to AC Adapter and the other end to the plug on the back of Charger.
- 2 Plug in AC Adapter to a wall outlet.
- 3 Insert the handset in Charger.

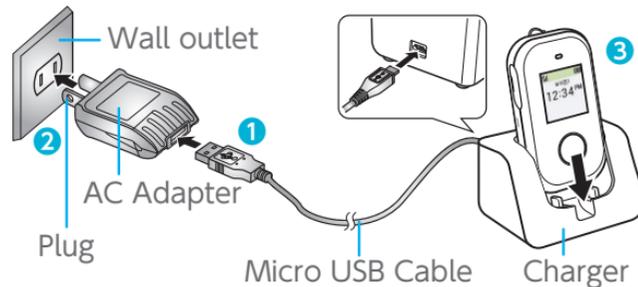

*Tip
The handset can also be charged without using Charger. Connect one end of Micro USB to AC Adapter and the other end directly to Battery Port on the side of the handset.

- To answer a call, press One Touch Key. If you use 自動着信 (Auto-online Mode), you can answer a call without pressing the Key. In this mode, incoming calls automatically become online. To set this mode, see 着信モードを設定する (call settings for receiving calls) in User Guide.

Receiving Calls



Press One Touch Key to answer a call.




Press the Key to end the call.




The call ended.

- Call approved numbers: Set ワンタッチ発信 (One Touch Call Mode) first. Press 〇 Key once to call. To set this mode, see 発信方法を確認する (Call settings) in User Guide.
- Call emergency numbers (Police: 110, Fire: 119, Coast Guard: 118): Use Side Key to view Phonebook and select 緊急通報 (emergency numbers).

Making Calls

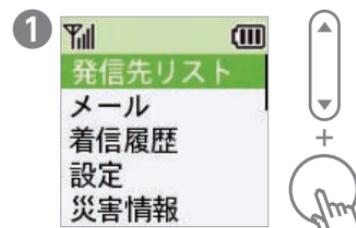

Select 発信先リスト (phonebook). Press One Touch Key to view Phonebook.

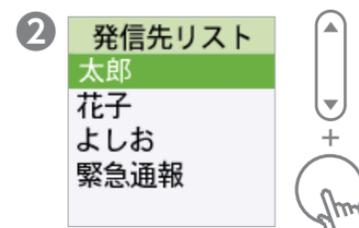

Select who you call. Press One Touch Key to dial.



Press One Touch Key to end the call.




The call ended.

-  informs you that you have unchecked voice mail.

Listening to Voice Mail



Select 着信履歴 (call log).
Press One Touch Key to view the log.

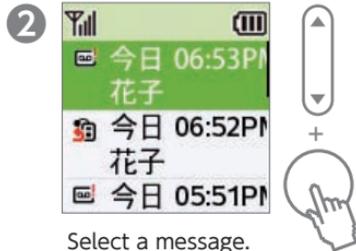

Select a message.
Press One Touch Key to view options.



Select 留守番電話を聞く (listen to voice mail). Press One Touch Key to listen.




Press One Touch Key to end.

-  informs you that you have unreturned missed calls.
- If you have missed calls, the Blue LED blinks.


Checking Missed Calls



Select 着信履歴 (call log).
Press One Touch Key to view the log.

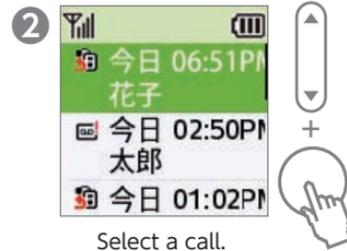


Select a call.
Press One Touch Key to view reply options.

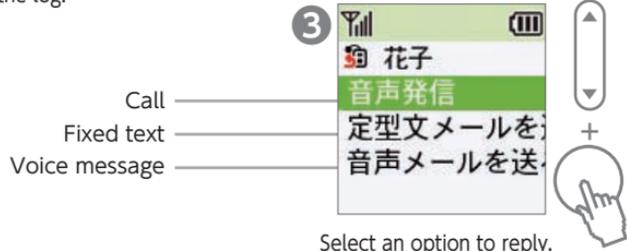


Select an option to reply.
Press One Touch Key to reply.

- You can record and send voice messages.
- One message can be recorded for 60 seconds.

Sending Voice Messages Record & Send

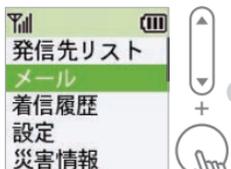
- 

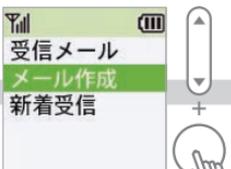Select メール (mail). Press One Touch Key to view options.
- 

Select メールを作成 (create new). Press One Touch Key to view options.
- 

Select 音声 (voice). Press One Touch Key to view Phonebook.
- 


Select who you send a voice message to. Press One Touch Key to go to the recording screen.
- 

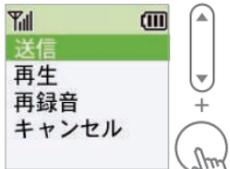
Press One Touch Key to start recording. Press the Key again to finish recording.
- 


Select 送信 (send). Press One Touch Key to send.


- 定型文メール (short ordinary texts) are ready to be sent to update family members on how you are doing.

Sending Text Messages Select & Send

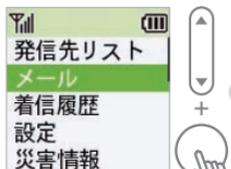
- 

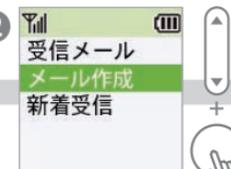Select メール (mail). Press One Touch Key to view options.
- 

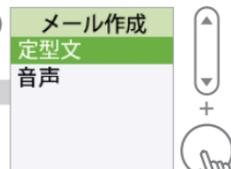Select メールを作成 (create new). Press One Touch Key to view options.
- 

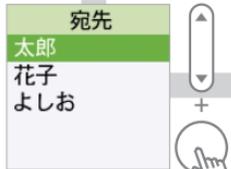Select 定型文 (ordinary texts). Press One Touch Key to view Phonebook.
- 


Select who you send mail to. Press One Touch Key to view the text list.
- 

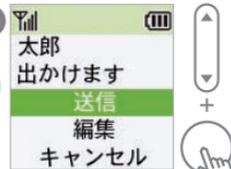
Select a text. Press One Touch Key to view mail you will send.
- 


Select 送信 (send) appearing at the end of the text. Press One Touch Key to send.


- If you have new mail, the blue LED blinks.
-  informs you that you have unread mail.


Reading Mail

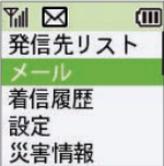- 

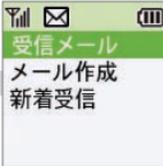Select メール (mail). Press One Touch Key to view options.
- 

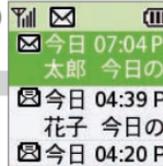Select 受信メール (received mail). Press One Touch Key to view a mail list.
- 

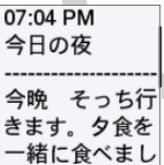Select a message. Press One Touch Key to read it.
- 

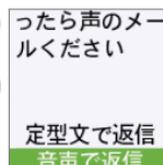The message appears. Use Side Key to scroll the page.
- 

Reply options appear at the end of the message. Use Side Key to select an option. Press One Touch Key to reply.

- The handset receives earthquake warnings, Tsunami alerts, disaster information and public evacuation orders through the national public alert system.


Getting Disaster Warnings and Alerts


A disaster warning arriving



If a warning arrives, you are alerted with alarm and human voice. Press One Touch Key to view options.


Checking the warning

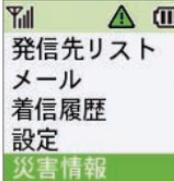- 

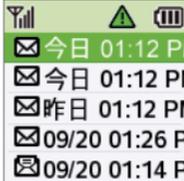Select 災害情報 (disaster information). Press One Touch Key to view a warning list.
- 


Select a warning. Press One Touch Key to view the information.

- Use  to select 設定 (settings).
Setting options include ringtones, volume, display colors, and Pedometer.

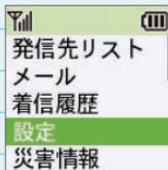


Settings
(Volume, display colors, etc.)


Change ringtones

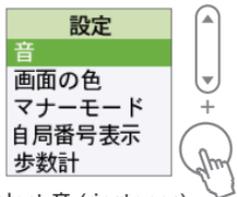


Select 音 (ringtones).
Press One Touch Key to view options.

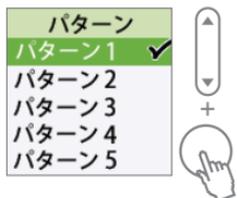


Change display colors

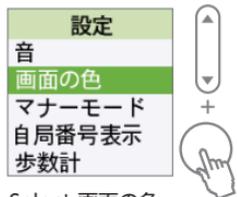

Select 画面の色 (display colors).
Press One Touch Key to view options.

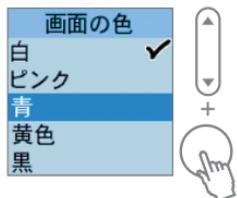

Use Pedometer

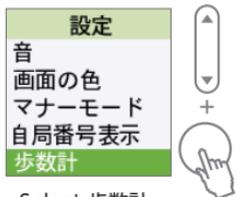


Select 歩数計 (pedometer).
Press One Touch Key to view options.



Note:

The handset has several PIN-protected settings. If you want to change font sizes, for example, you need a PIN. See 管理設定 in User Guide about the PIN.

PIN-protected Settings

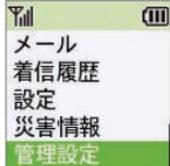- 

Select 管理設定 (PIN-protected settings).
Press One Touch Key to go to the PIN screen.
- 

Enter a PIN.
Press One Touch Key to view options.
- 

Select 文字・時計 (font/clock).
Press One Touch Key to view options.
- 

Select 文字サイズ (font size).
Press One Touch Key to view options.
- 

Select a size (大:large/中:Medium/小:Small).
Press One Touch Key to apply the change.

- If you didn't set an owner when you got the handset, you can set it online at My SoftBank.

Setting Owner


- 1 Go to My SoftBank at <http://my.softbank.jp/>.
- 2 Enter a phone number and a password. Press ログイン (log in).

See User Guide about how to set an owner after logging in.



- An approximate location of the handset can be searched from an owner's device. For example, if the handset is lost, its location can be estimated.
- To use this function, Ichi Navi service subscription is required. See details on SoftBank Mobile website at <http://www.softbank.jp/> (Japanese information only).

Handset Tracker

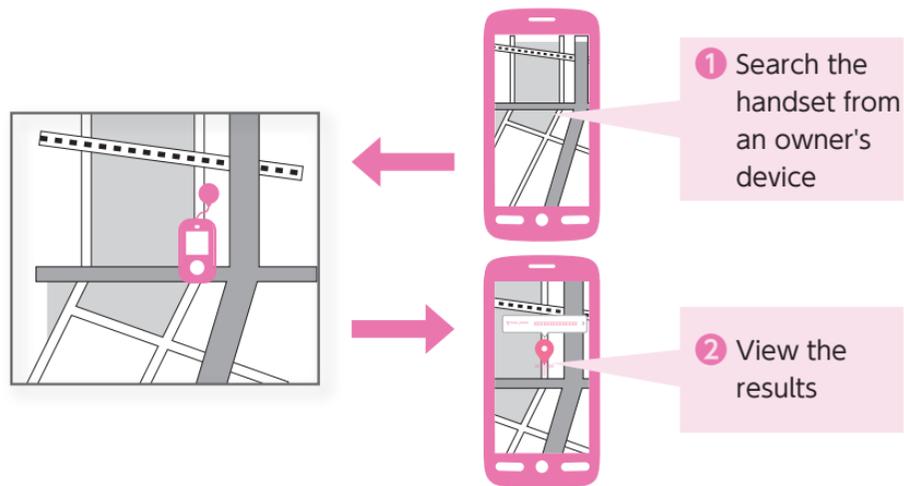

- A schedule can be set to check whether the user of the handset is active or not active. For this propose, whether the handset physically changed its position is sensed and user's family member get a text.
- To use this function, set Life Monitoring following the steps below.
For details, see 生活みまもり (Life Monitoring) in User Guide.

Life Monitoring

Text sample

[生活みまもり] みまもりケータイ
指定した時間内に動作を検知しました。


メール送信時刻
2013/09/07 19:00

前日歩数
301 歩

*Life Monitoring is not intended to be used for health and medical purposes. It should not be use to sense or monitor life-critical conditions of a person.



1 Select 管理設定 (PIN-protected settings).
Press One Touch Key to view options.

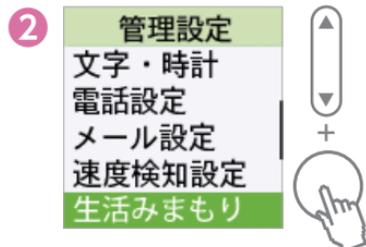

2 Select 生活みまもり (Life Monitoring).
Press One Touch Key to start setting options of Life Monitoring.

- A speed can be set to check a behavior of the user of the handset. If the user is riding a train or vehicle, user's family members get a text.
- To use this function, set Speed Detection following the steps below.
For details, see 速度検知を設定する (setting Speed Detection) in User Guide.


Speed Detection

Text sample


[速度検知] みまもりケータイ
設定した基準以上の速度で移動を検知しました。確認してください。

(感度設定：高)

現在地

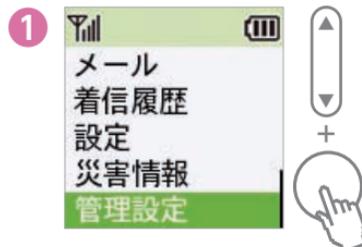

1 Select 管理設定 (PIN-protected settings).
Press One Touch Key to view options.

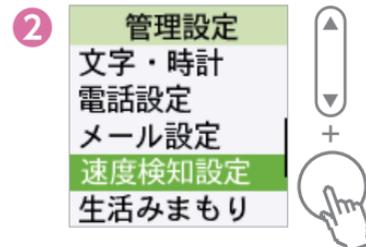


2 Select 速度検知設定 (Speed Detection settings).
Press One Touch Key to start setting options of Speed Detection.

- Change the handset to Manner Mode or Silent Mode in trains, libraries and public areas.




Manner Mode

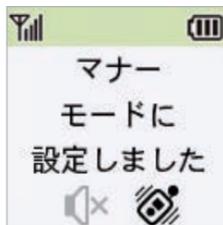

 Press and hold once

No ringtone. Vibration only.

Silent Mode

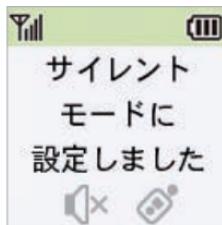

 Press and hold twice

No ringtone and vibration.

English Customer Support

- SoftBank handsets ●

157 (toll-free) →8

- Landline ●

0800-919-0157 (toll-free) →8

- Overseas ●

+81-3-5351-3491

(international charges applied/free using SoftBank handsets)



ソフトバンクは、はじめています。
続けていきます。環境への取り組み。
<http://www.softbankmobile.co.jp>

To effectively use and fully enjoy the handset, please take a moment to read the disclaimer and warranty information in User Guide.

August 2013, First Edition
SoftBank Mobile Corp.
Visit SoftBank Shop for assistance
Model : SoftBank 202Z
Manufacturer : ZTE Corporation

