 


## Parts & Functions

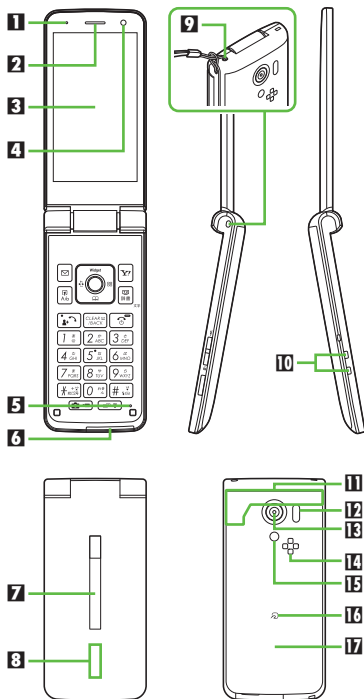 


- 1** Pressure Vent
- 2** Earpiece
- 3** Display
- 4** Light Sensor
- 5** Mic
- 6** External Device Port
- 7** Sub-display
- 8** Notification Lamp
- 9** Strap Eyelet
- 10** Charging Terminals (for Desktop Holder)
- 11** Internal Antenna Area
- 12** Infrared Port
- 13** Camera (Lens Cover)
- 14** Speaker
- 15** Mobile Light
- 16** Logo
- 17** Battery Cover

- Do not cover or place stickers, etc. over Light Sensor or Internal Antenna area.
- Close External Device Port Cover (hereafter "Port Cover") after use.
- Avoid metal Straps; may affect signal reception.

### Opening Port Cover


- Pull at notch to open Port Cover.



### Handset Positions

#### Handset Closed

 Keep handset closed when not in use.




#### Handset Open

Open handset to place or answer calls, enter text, etc.



## Handset Keys

 - Keys are indicated in this guide as shown.
- Change assigned functions indicated \* with Set Key Shortcut.

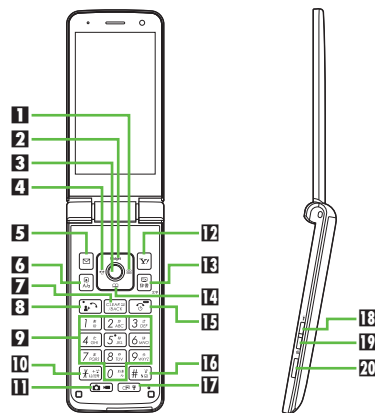**1 Multi Selector (right)**

Open Icon View. Long Press to access last opened Icon View page\*.

**2 Multi Selector (up)**

Open Mobile Widget window. Long Press to open PC Site Browser menu\*.

**3 Center Key**

Open Main Menu. Long Press to activate/cancel Keypad Lock.

**4 Multi Selector (left)**

Open Call Log (All). Long Press to enable/disable Bluetooth®.

**5 Mail Key**

Open Messaging menu. Long Press to open SI Mail Composition window\*.

**6 Shortcuts & A/a Key**

Open Shortcuts.

**7 Clear/Back Key**

Play Answer Phone messages. Long Press to activate/cancel Answer Phone.

**8 Start & Rakutomo Link Key**

Open Rakutomo Link.

**9 Dialpad**

Enter numbers to place calls or access functions. Long Press to open Phone Book.

**10 \* Key**

Enter \*, +, P, ? and -.

**11 Camera Key**

Activate Camera.

**12 Yahoo! Keitai Key**

Open Yahoo! Keitai portal. Long Press to open Bookmarks list\*.

**13 TV & Dictionary Key**

Activate TV. Long Press to open Dictionary.

**14 Multi Selector (down)**

Open Phone Book. Long Press to open Exchange Profile\*.

**15 Power On/Off & End Key**

Long Press to power off.

**16 # Key**

Enter #. Long Press to activate/cancel Manner mode.

**17 Multi Job & Manner Key**

Select handset mode. Long Press to activate/cancel Manner mode.

## Side Keys

**18 Volume Up Key**

**Handset Closed:** Long Press to illuminate Mobile Light.

**19 Volume Down Key**

**Handset Open:** Show/hide Softkeys. Long Press to enable/disable VeilView.

**20 Shutter Key**

**Handset Closed:** Toggle Clock view.

**Handset Open:** Long Press to activate Video Camera.

## Multi Selector &amp; Side Keys

- In this guide, Multi Selector and Side Key operations are indicated as follows:

Press  or	
Press  or	
Press , ,  or	
Press  or	

# Battery & USIM Card Installation

 
Do not apply excessive force to Battery or USIM Card.

## Inserting

USIM Card must be inserted to use handset.


### 1 Remove Battery Cover

Battery Cover

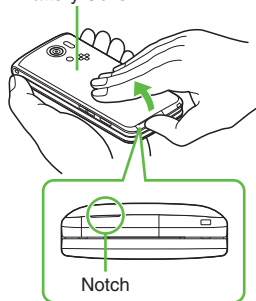


- Use notch to lift Battery Cover. Push up Battery Cover along edges to remove it.

### 2 Use tab to pull out USIM Tray

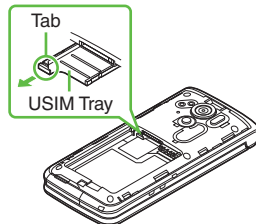 


### 3 Slide in USIM Card with metal contacts facing up

 


### 4 Secure USIM Tray
 
### 5 Insert Battery

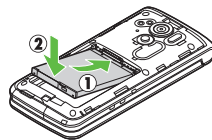

- With logo side facing up, align Battery terminals with contacts.

### 6 Replace Battery Cover

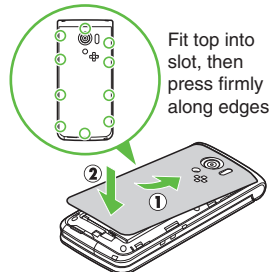 

Fit top into slot, then press firmly along edges


- If Battery Cover is not closed properly, debris may get trapped between gasket and base, or liquid/dust may enter.

## Removing

 Always power off first.

### 1 Remove Battery Cover

### 2 Remove Battery

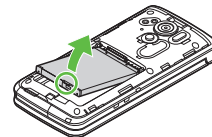

- Lift Battery as shown.

### 3 Pull out USIM Tray

### 4 Lift and slide out USIM Card

- Secure USIM Tray, insert Battery and replace Battery Cover.
- Take care not to lose removed USIM Card.

### After USIM Card Removal (Contract Termination, Handset Upgrade/Replacement, Repairs, Etc.)

- Some files on handset and Memory Card may be inaccessible. Inserting another USIM Card may disable S! Appli and BookSurfing®.

## About Battery

- Charge Battery at least once every six months; uncharged Battery may die or affect files/settings.
- Depending on usage, bulges may appear near end of battery life; this does not affect safety.
- Replace Battery if operating time shortens noticeably.
- Clean Battery terminals and charging terminals with a dry cotton swab, etc.
- To maintain water/dust resistance, close Battery Cover properly. Debris trapped between gasket and base may allow ingress of liquid/dust.
- If Battery Cover is damaged, replace it with a new one. Use of damaged Battery Cover may allow ingress of water, causing electric shock, battery corrosion, etc.
- Battery is not water or dust proof.

### Lithium-ion Battery

- This product requires a lithium-ion battery. Lithium-ion batteries are recyclable.
  - To recycle a used lithium-ion battery, take it to any shop displaying the recycling symbol.
  - To avoid fire or electric shock, do not short-circuit or disassemble Battery.



## About USIM Card

USIM Card is an IC card containing customer and authentication information, including handset number. Save contacts on USIM Card Phone Book to use them on other SoftBank handsets. Depending on USIM Card in use, some entry items may not be supported, and some limits (character entry, etc.) may be lower.

### Precautions

- Do not insert USIM Card into any other IC card device. SoftBank Mobile Corp. is not liable for resulting damages.
- Keep metal contacts clean; debris may cause malfunction. Clean with a soft dry cloth.
- Do not attach labels to USIM Card. Malfunction may result.

### Important

- USIM Card is the property of SoftBank Mobile Corp.
- USIM Card will be reissued for a fee if lost or damaged, etc.
- Return USIM Card to SoftBank Mobile Corp. upon contract termination.
- Returned USIM Cards are recycled.
- USIM Card specifications may change without prior notice.
- Keep a copy of information saved on USIM Card in a separate place. SoftBank Mobile Corp. is not liable for loss of information.
- If USIM Card or handset (with USIM Card inserted) is lost or stolen, suspend your service immediately. For details, contact SoftBank Customer Support, General Information (P.9-1).

## USIM PIN

**9999** by default; activate PIN Entry to restrict handset use.

### PIN Lock

- Entering incorrect PIN three consecutive times activates PIN Lock, limiting handset use.

### Canceling PIN Lock

- Contact SoftBank Customer Support, General Information (P.9-1) for your Personal Unblocking Key (PUK) and follow these steps:

**Enter PUK** ➡ **Enter new PIN** ➡ **Re-enter new PIN** ➡

- Do not forget PUK; write it down if necessary.

### PUK Lock

- Entering incorrect PUK ten consecutive times activates PUK Lock, disabling handset. For recovery, USIM Card must be reissued at a SoftBank Shop (fees apply).

## Charging Battery (Desktop Holder)

Battery must be inserted in handset to charge it.

### Charging Battery Outside Japan

- SoftBank Mobile Corp. is not liable for problems resulting from charging Battery abroad.

### Important AC Charger Usage Note

 
- Retract blades after charging. Do not pull, bend or twist cord.

### When Notification Lamp is Flashing

- Battery is unchargeable; may be defective or simply at the end of its life; replace it.

Use Desktop Holder with AC Charger ZTDAA1 (optional accessory).


- In this guide, ZTDAA1 is referred to as "AC Charger."
- **AC Charger and Desktop Holder are not water or dust proof. Do not charge Battery while handset is wet.**
- Handset/AC Charger may become warm while charging.

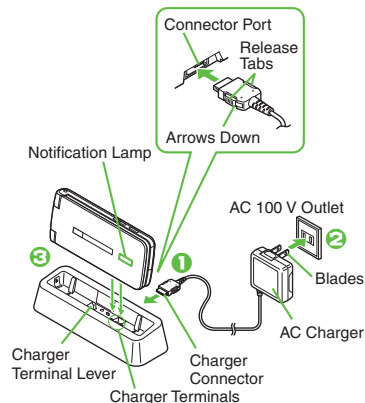


### 1 Insert Charger connector into Desktop Holder

- Insert Charger connector in the correct orientation until it clicks.
 
### 2 Extend blades and plug AC Charger into AC outlet



### 3 Place handset into Desktop Holder

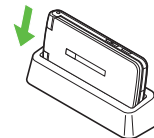 

- Push down handset until it clicks into place.
- Notification Lamp illuminates red while charging.
- Notification Lamp goes out when Battery is full.

### 4 Remove handset from Desktop Holder

### 5 Unplug AC Charger

### 6 Remove Charger connector from Desktop Holder

- Squeeze release tabs and pull straight out.

### Important Desktop Holder Usage Notes

- Do not subject to force/pressure.
- Do not attempt to open handset.
- Do not get Straps caught between handset and Desktop Holder.











## Power On/Off

### Power On

Described for initial power on.

#### 1 (Long Press)

- After Power On Graphics, water/dust proofing information appears; follow these steps:

 ➔  ➔  ➔  ➔  ➔ **設定**  
 ➔  ➔ **Language** ➔  ➔ **English**  
 ➔  ➔  (Long Press) ➔   
 (Long Press) ➔ Change Menu opens

#### 2 Select option ➔

 
Guide descriptions are based on Standard Menu.

- After Change Menu guidance, My Details setup starts.

#### 3 Enter last name ➔ ➔ Enter first name ➔

- Change Menu display option appears.

#### 4 Yes or No ➔

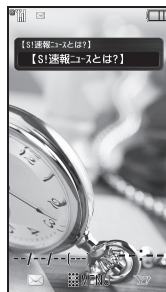




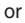
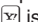
Standby

- Choose **No** to enter Standby immediately after powering on.

#### When USIM Card is Not Installed

- Insert USIM Card** appears; handset is unusable.

### Retrieving Network Information

A prompt appears when , , ,  or  is Pressed for the first time.



To use Network-related services:  
(Clock will be set automatically.)

#### 1 Yes ➔ ➔ Retrieval starts

#### 2

 
### Power Off

#### 1 (Long Press)

- After Power Off Graphics, handset shuts down.

# Display

## Standby

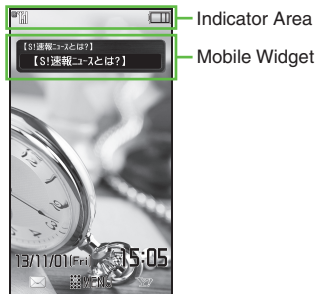


Hereafter, most screenshots omit Mobile Widgets and other icons.

## Indicator Descriptions

 Check active indicators and their descriptions. (Status Icon List)


### 1 Tap indicator

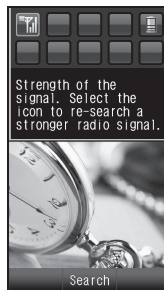

- Active indicators are enlarged; description for selected indicator appears.
- After ❶, Touch & Hold other indicators to view their descriptions.
- After ❶, Tap indicator to access corresponding function (e.g., Battery Meter window from battery strength indicator); may be unavailable for some indicators.

## Information Window

 Opens at the bottom for missed calls, new mail, etc.

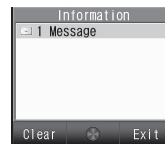

Information Window

Information label (e.g., **Message**, etc.) and count appear. Select an item and Press to open it.

### Opening Information List Manually

 
➡ Phone ➡ ➡ Information ➡

### Clearing Information List

➡ Phone ➡ ➡ Information ➡   
 ➡ ➡ Yes ➡

## Display Rotation

Motion Control sensor detects handset orientation. Display orientation changes with handset orientation in TV, Internet and some other functions.

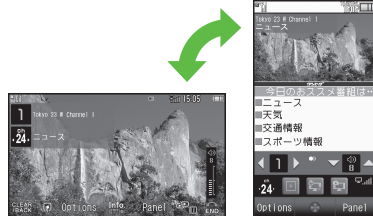


Landscape Orientation

Portrait Orientation

## Softkeys

 Function/operation labels appear at the bottom of Display; see key assignments below. Alternatively, Tap Touchscreen to execute the assigned function/operation.

### Portrait Orientation

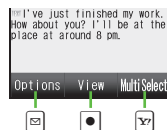


### Landscape Orientation



Some key assignments may vary with window content.



## Display Saving

Display goes completely dark after set Display Saving time elapses. Press any key (except  during a call) to cancel Display Saving and reilluminate Display.

### Backlight

- Backlight turns off after Time Out time elapses. Press  -  to illuminate it (key press may affect active function).
- Display goes completely dark during a call. (Backlight does not turn off first.)



# Indicators

## Display Indicators

### Basic Status

 


1		Within 3G Network
		Within GSM Network
		Roaming
2		Signal Strength <sup>1</sup>
3		Battery Strength <sup>2</sup>

<sup>1</sup>More bars indicate stronger signal.

<sup>2</sup>Flashes while charging; battery strength % (appears when Display activates, etc.) is an approximation.


### Function Status



1		S! Appli Active*
		S! Appli Paused*
1		Music Playback
		TV Recording (handset)
2		TV Recording (Memory Card)
		Memory Card Inserted
2		Accessing Memory Card
		Reading Memory Card
3		Formatting Memory Card
		TV Timer/TV Recording Timer Set
3		Compass Indicator
4		Music Playback (using Bluetooth®)
5		Multiple Functions (Multi Job) Active

\*Appears gold for some S! Appli.

### Notifications

 


1		Unread Mail
		Unread Delivery Report
2		Answer Phone Active & Message Recorded
		Answer Phone Canceled & Message Recorded
3		New Voicemail
4		S! Appli Notification
5		Contents Key Received
6		Unread S! Information Channel Info
		Software Update Result
7		Unread S! Quick News Info
		Unread Urgent News

### Warnings



 1		Mail Memory Low
2		Message Delivery Failure
3		Memory Card Unusable/Misinserted

## Transmissions




1		SSL Browsing <sup>1</sup>
		Packet Transmission Active
		Receiving Mail
		Sending Mail
		Positioning <sup>2</sup>
		Updating Software
5		RSS-compatible Site
6		Weather Indicator
7		USB Cable Connected
		USB Transmission Active
		Infrared Transmission Active
		Infrared File Transfer
		Bluetooth® Active
		Bluetooth® Transmission Active
		Bluetooth® Transmission Active (for multiple connections)
		Bluetooth® Talk Active
		IC Transmission Active
		S! Addressbook Back-up Transmission Active
8		PC Site Browser in Use
		Infrared Active

<sup>1</sup>Hidden while Mobile Widget is in use.

<sup>2</sup>Flashes while sending location information.

## Settings

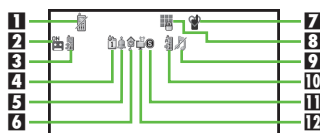 

1		Offline Mode
2		Answer Phone Active
3		Call Forwarding or Voicemail Active (forwarding condition: <b>Always</b> *)
4		Calendar/Task (Alarm Set)
		Calendar/Task (Alarm Unset)
5		Alarm Set
6		Hour Minder Active
7		Manner Mode
		Drive Mode
		Original Mode
8		VeilView Active
		Keypad Lock Active
		IC Card Lock Active
9		Ringtone (Silent)
		Ringtone (Increasing Volume)
9		Vibration for Incoming Voice/Video Calls Active

10		Auto Answer or Remote Monitor Active
11		Show Secret Data Active
		Function Lock (Once) Active
12		Wakeup TV Set

\*Indicator does not appear when Call Forwarding is set to Video Calls only, with Voicemail unset.

## Sub-display

View date/time and the following indicators with handset closed.

### Activating Sub-display



- Press to toggle view.

### Indicators

#### Basic Status



1	Signal Strength <sup>1</sup>
2	Battery Strength <sup>2</sup>

<sup>1</sup>More bars indicate stronger signal.

<sup>2</sup>Flashes while charging.

#### Notifications

	Missed Call
	Answer Phone Message Recorded
	Missed Call Notification
	New Voicemail
	Unread Mail
	Unread Delivery Report
	Contents Key Received
	Unread S! Information Channel info
	Weather Indicator Update
	Location Information Request
	Pedometer Target Achieved
	S! Appli Notification
	Auto Backup Complete
	Auto Backup Canceled
	Unread Urgent News

#### Warnings

	Message Delivery Failure
	S! Information Channel Info Reception Failure
	Weather Indicator Update Failure
	Auto Backup Failure

#### Handset Status

	Alarm
	Calendar Alarm
	Task Alarm
	TV Alarm (Watch)
	TV Alarm (Record)

## Using Touchscreen

Touch Display to select menu items, open functions, scroll pages, etc.

### Basic Operations

#### Tap



Tap item or key to open or execute corresponding function/operation.

#### Double Tap

Tap Display twice in rapid succession (within approximately 0.6 seconds).

#### Touch & Hold



Touch item for 1+ seconds to move icon, open menu, etc.

#### Drag



 
Drag to move item or scribble/sketch.

#### Flick



Flick to scroll.

#### Pinch & Spread

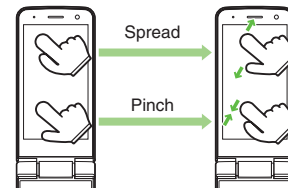

Pinch or Spread to zoom in or out on images, etc.

## Important Touchscreen Usage Notes

- Touchscreen may not respond in these situations:
  - Use with gloves/long fingernails
  - Use of pens, pencils or sharp objects
  - Use with objects on/against Display
  - When Display is wet
- To prevent malfunctions, do not:
  - Touch Display with wet fingers
  - Use if Display is wet
  - Subject Display to force/pressure
  - Place labels or stickers over Display
- Calibrate Touchscreen (**P.1-14**) to improve response.



## Usage Examples

### Selection & Execution

Tap item to open or execute corresponding function/operation.



Tap **Data Folder**

- The result is the same as selecting an item with  and Pressing .

### Two Taps

When Tapping item only selects (highlights) it, Tap the item again to execute function/operation.



 
Tap **Music** twice



Music folder opens

## Screen Scroll

For hidden items, Flick/Drag in opposite direction.

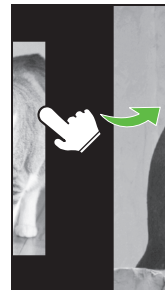


Flick right



Left portion appears

## Zoom In & Zoom Out

 
Pinch or Spread to zoom in or out on images, etc.

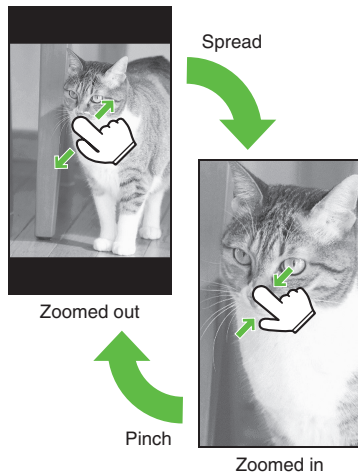

- Double-Tapping images, etc. may also zoom in/out them.
- In Internet page or before saving captured photo, Touch & Hold area/portion to zoom it in.

## Open Menu

 Touch & Hold Display to open menu.

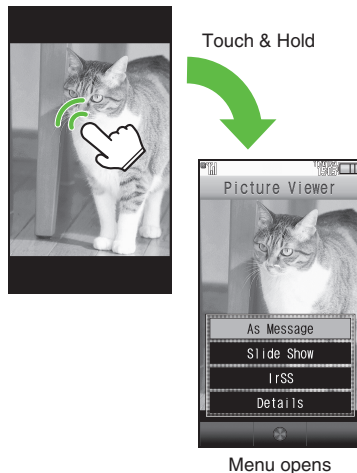

Menu opens

## Calibrating Touchscreen

Calibrate Touchscreen to improve response. Hold handset normally during calibration.

- 1 ➔ **Settings** ➔ ➔ **Phone/**
  - 2 **Touch Panel** ➔
  - 3 **Correct Touch Panel** ➔
- 
- 4 **Yes** ➔
    - Follow onscreen instructions.

### Undo Calibration

- If calibration does not improve response, restore default setting as follows:

After 4,

# Main Menu

## Opening Main Menu



■ Touchscreen

■ Handset Key

 
### Menu Layout



### Main Menu Items

<b>Messaging</b>	Open/create messages, etc.
<b>Yahoo!</b>	Access the Internet.
<b>S! Appli</b>	Use S! Appli including games.
<b>Entertainment</b>	Read e-Books, receive news updates, etc.
<b>Camera</b>	Shoot photos or videos.
<b>Media</b>	Play/download media files.
<b>Tools</b>	Manage schedules, set Alarm, etc.
<b>Data Folder</b>	Open files saved to handset/Memory Card.
<b>Widget</b>	Use Mobile Widgets.
<b>TV</b>	Watch/record TV programs.
<b>Phone</b>	Add/search contacts, etc.
<b>Settings</b>	Customize handset interface, sounds, etc.

**Menu Navigation** To open **World Clock** using handset keys or Touchscreen:

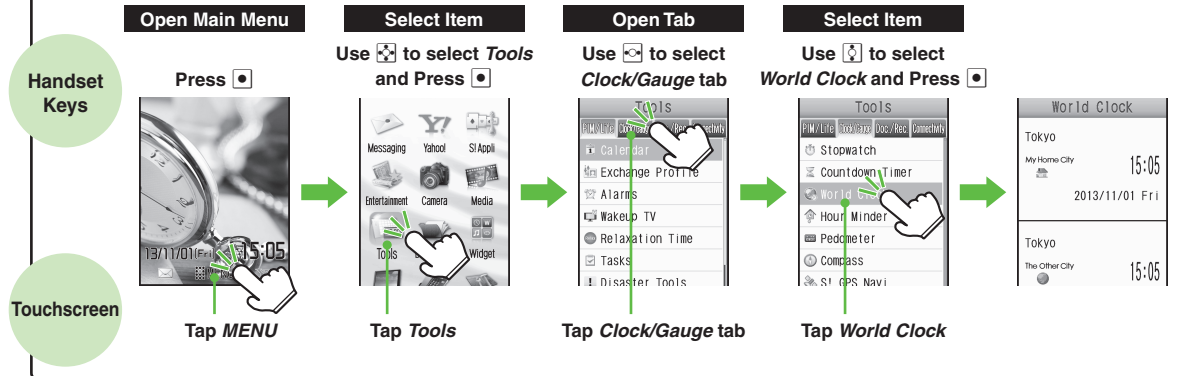

**Escape/Return** Example: After opening **World Clock**

**Go Back**

Press



**Return to Standby**

Press



**Using Touchscreen**

- If available, Tap corresponding Softkey (**CLEAR/BACK**, **END**, etc.) to escape function or return to previous window.



# Menu List

## Messaging

Received Msg.  
Create Message  
Retrieve New Msg.  
Drafts  
Templates  
Sent Messages  
Unsent Messages  
Chat Folder  
Server Mail Box  
Create New SMS  
Settings  
Memory Status

## Yahoo!

Yahoo! Keitai  
Menu List  
Bookmarks  
Saved Pages  
Web Search  
Enter URL  
History  
PC Site Browser  
Browser Settings

## S! Appli

S! Appli Library  
Osaifu-Keitai  
Settings  
Information

## Entertainment

S! Information Channel/Weather  
S! Quick News  
Blog Tool  
BookSurfing  
e-Book Viewer

## Camera

Easy Auto Camera  
Pro Auto Camera  
Quick Camera  
Rapid Shooting Camera  
Best Select Photo  
Fish-eye Camera  
Miniaturize Camera  
HD Video Camera  
Pro Auto Video Camera  
Album  
Scan Receipt  
Barcode Reader  
Scan Card  
Kanji/English Grabber  
Review

## Set Camera Key

## Media

Music  
Videos  
MTP Mode

## Tools

## ■ PIM/Life

Calendar  
Exchange Profile  
Alarms  
Wakeup TV  
Relaxation Time  
Tasks  
Disaster Tools  
Household Accounts  
Calculator  
Expenses Memo  
Osaifu-Keitai  
Simulated Call

## ■ Clock/Gauge

Stopwatch  
Countdown Timer  
World Clock  
Hour Minder  
Pedometer  
Compass  
S! GPS Navi  
Battery Meter

## ■ Doc./Rec.

Dictionary  
Search  
Notepad  
Scratch Pad  
ASCII Art  
Voice Recorder  
Barcode/Scan  
Phone Help

## ■ Connectivity

Bluetooth  
Infrared  
IC Transmission  
USB Mode  
USB Charge  
Memory Card  
Backup/Restore

**Data Folder**

Pictures
DCIM
Ring Songs-Tones
S! Appli
Widget
Music
Videos
Lifestyle-Appli
Books
Customized Screen
Flash®
Other Documents
Memory Status

**Widget**

Widget Contents
Settings

**TV**

TV
TV Player
TV-Image Folder
TV Link
Reservation List
Recorder Contents
Settings

**Phone**

Phone Book
Add New Entry
Information
Call Log
Play Messages
Play Voicemail
S! Addressbook Back-up
My Details
Set Category
Mail Groups
Rakutomo Link
Speed Dial/Mail
Touch-Tone Signal List
Settings/Manage


**Settings****■ Sound/Display**

Mode Settings
Display
Customized Screen
Sounds & Alerts
Date & Time
言語選択 (Language)
Ringer Output
Earpiece Volume
Change Menu

**■ Phone/☎**

User Dictionary
Set Key Shortcut
Motion Control
Touch Panel
Set Key Light
Memory Card
Backup/Restore
Locks
Software Update
Master Reset

**■ Call**

Call Time/Data Counter
Answer Phone
Voicemail/Call Forwarding
Video Call
Caller ID
 Missed Calls
Int'l Calling
Call Barring
Auto Answer
Call Waiting

**■ Network**

Select Network
Select Service
Re-search Signal
Offline Mode
Retrieve NW Info
Network Info
External Device
Technical Regulations
Conformity Certification

## Security Codes

These codes are required for handset use. (Save Handset Code and Administrator Code beforehand.)

- Guide descriptions are given assuming that Handset Code and Administrator Code are saved.
- Do not forget Security Codes.
- Do not reveal Security Codes. SoftBank Mobile Corp. is not liable for misuse or damages.

<b>Handset Code*</b>	Use or change some functions.
<b>Administrator Code*</b>	Required for Reset Settings, Reset All, etc.
<b>Center Access Code (Network Password)</b>	Four-digit code in contract; change contract details, access Optional Services from landlines, or set Call Barring.

\*Save/change on handset.

### If Security Code is Unsaved

- Code setup message/window opens whenever Security Code is required.

### Incorrect Code Entry

 
- Message appears for incorrect code entries; retry.
- Call Barring settings will be locked if incorrect Center Access Code (Network Password) is entered three times consecutively when making a setting. To unlock, the code must be changed.
  - If Network Password has been previously changed on a mobile phone, enter the latest code to set Call Barring.

### Saving Handset Code

Enter four to eight digits.

1 ➔ **Settings** ➔ ➔

2 **Locks** ➔

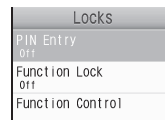

Locks Menu

3 **Handset Code Settings** ➔

4 **Save Handset Code** ➔

5 **Enter Handset Code** ➔

6 **Re-enter Handset Code** ➔

### Changing Handset Code

After 4, enter current Handset Code ➔

➔ **Enter new Handset Code** ➔

➔ **Re-enter new Handset Code** ➔

## Saving Administrator Code

Enter four to eight digits.

- 1 In Locks menu, **Administrator Setting** ➡ ☐
- 2 **Register Administrator Code** ➡ ☐
- 3 **Enter Administrator Code** ➡ ☐
- 4 **Re-enter Administrator Code** ➡ ☐

## Changing Administrator Code

After 2, enter current Administrator Code

- ➡ ☐ ➡ Enter new Administrator Code
- ➡ ☐ ➡ Re-enter new Administrator Code
- ➡ ☐

## Need/UnNeed Setting

For enhanced security, set Need/UnNeed Setting to **Need**; then Handset Code will be required to delete all files/entries, etc.

- 1 In Locks menu, **Handset Code Settings** ➡ ☐
- 2 **Need/UnNeed Setting** ➡ ☐
- 3 **Need** ➡ ☐ ➡ Enter Handset Code ➡ ☐

## Mobile Manners

Please use your handset responsibly. Take care not to disturb others when using your handset.

- Keep handset off in theaters, museums and other places where silence is the norm.
- Refrain from use in restaurants, hotel lobbies, elevators, etc.
- Observe signs and instructions regarding handset use aboard trains, buses, etc.
- Refrain from use that interrupts the flow of pedestrian or vehicle traffic.

### Manner Mode

Mutes most handset function sounds.

#### 1 (Long Press)






Indicator


- Manner mode activates.

#### When Manner Mode is Active

- Ringtones and other sounds are muted.
- Handset vibrates for incoming transmissions, etc.
- Shutter click and Urgent News alert tones still sound at fixed volume.
- To unmute Speaker temporarily while playing music, etc.:

During playback,  ➔  ➔ Yes or No ➔  ➔ Adjust Volume

#### Canceling Manner Mode

 (Long Press)

### Offline Mode

Suspend signal transmission and reception. Handset will be unable to place/receive calls, send/receive messages, access the Internet, etc.



#### 1 ➔ Settings ➔ ➔ Network

#### 2 Offline Mode ➔

#### 3 On ➔

- Offline Mode activates.

 
#### Canceling Offline Mode

In , Off ➔ 

## My Details & Basic Settings

### Handset Number & Address

1 ☐ ➔ 0 ☐

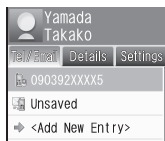

- Handset number, mail address (unsaved by default) and the name entered at initial setup appear.

### Editing My Details

After 1, ☐ (select tab) ➔ Select item ➔ ☐ ➔ Select item ➔ ☐ ➔ Edit ➔ ☐

### Date & Time

1 ☐ ➔ **Settings** ➔ ☐ ➔ In Sound/Display menu, **Date & Time** ➔ ☐

2 **Set Date/Time** ➔ ☐

3 **Enter the year** ➔ **Enter the month** ➔ **Enter the day** ➔ **Enter the time** ➔ ☐

- If confirmation appears, choose **Yes** and Press ☐.

### Language

1 ☐ ➔ **Settings** ➔ ☐ ➔ In Sound/Display menu, **Language** or **言語選択** ➔ ☐

2 **English** or **日本語** ➔ ☐

## Using World Clock

### Auto World Clock

 
Powering on outside Japan automatically sets World Clock; the local time for your current location appears in Standby. Powering on after arriving back to Japan restores original Clock setting and Clock view.

### Disabling Auto World Clock


- 1 ➔ **Settings** ➔ ➔ In **Sound/Display menu, Date & Time** ➔
- 2 **Auto World Clock** ➔
- 3 **Disabled** ➔

### Setting World Clock Manually

- 1 ➔ **Tools** ➔ ➔ **World Clock** ➔

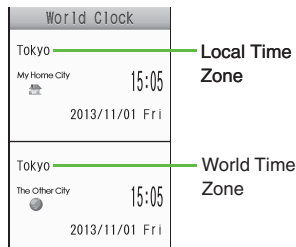

- 2

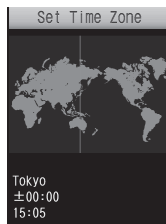 

Set Time Zone Window

- 3 ➔ **Select city** ➔

- 4 ➔ **Standby returns**

**Advancing One Hour (Daylight Saving)**  
[Set Time Zone Window]

■ To cancel, Press .

**Adding Custom Time Zone**

[Set Time Zone Window] ➔ Enter city name ➔ ➔ + or - ➔ ➔ Enter time difference ➔

### Showing World Clock in Standby Manually

- 1 ➔ **Settings** ➔ ➔ In **Sound/Display menu, Display** ➔
- 2 **Standby Display** ➔
- 3 **Clock/Calendar** ➔
- 4 **World Clock (L), etc.** ➔
- 5 ➔ **Standby returns**

## Using Memory Card

### About Memory Card

Use microSD/microSDHC Memory Card to save and organize files for use on handset.

 
- Use recommended Memory Cards only. For details, contact SoftBank Customer Support, General Information (P.9-1).
- **If Memory Card is inserted, captured photos, downloads and other files are saved to Memory Card. (My Pictograms and Graphic Mail templates are saved to handset.)**

### Memory Card Cautions

- Do not force Memory Card into or out of handset.
- Keep Memory Card out of infants' reach; may cause choking if swallowed.
- Do not touch terminals or expose them to metal objects.
- SoftBank Mobile Corp. is not liable for any damages resulting from accidental loss/alteration of information. Keep a copy of contacts, etc. in a separate place.
- Never power off or remove Battery while files are being accessed.
- Be careful not to erase or overwrite files accidentally.

### Memory Card Slot Location

Memory Card Slot is located above USIM Card Slot. Do not insert Memory Card into USIM Card Slot.

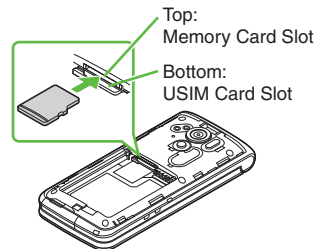




## Inserting & Removing

Always power off first.

### 1 Remove Battery (P.1-3)
 
### 2 Insert Memory Card

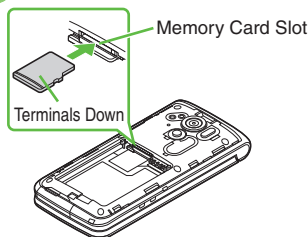

- Insert Memory Card (terminals facing down) all the way until it clicks.
- Do not insert other objects.


### 3 Insert Battery, then replace Battery Cover (P.1-3)
 
#### If Appears after Power On

- Memory Card may not be inserted properly; reinsert it.

#### Removing Memory Card

- Gently push in Memory Card and release it; Memory Card pops out. Carefully remove Memory Card without bending it.

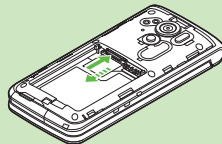



## Formatting Memory Card

When using a new Memory Card for the first time, format it on handset before trying to save files, etc. Formatting deletes all Memory Card files.

1  ➔ **Settings** ➔  ➔   
**Phone/** ➔ **Memory Card**  
 ➔ 

2 **Format Card** ➔  ➔ **Yes**  
 ➔ 

- Offline Mode activates; signal transmission and reception are suspended until formatting is complete.

3 **Yes** ➔   
 • To cancel, choose **No** and Press .

#### Precaution

- Never power off or remove Battery while formatting; may damage Memory Card or handset.