

## Text Entry

Use handset keys to enter text. Unless noted otherwise, text entry descriptions are for text entry windows.



Text Entry Window (Message Text)


### Opening Help




### Note

- Pressing repeatedly may not close text entry windows.

### Switching Entry Modes

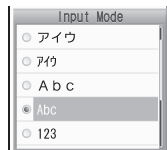

- Available entry modes appear.

 

- Entry mode indicators:

	Kanji (Hiragana)
	Double/Single-byte Katakana
	Double-byte Alphanumerics (upper/lower case)
	Single-byte Alphanumerics (upper/lower case)
	Single-byte Number
	Character Code

\* appears when Predictive is active.

### Text Entry Basics

Use Dialpad to enter characters. Multiple characters are assigned to each key. Press a key to toggle character options for that key.

**Example: In Double-byte Katakana mode, Press three times.**



- Press to reverse-toggle options. To enter characters assigned to the same key, Press first.

**Example: In Single-byte Alphanumerics mode, enter no.**



- Long Press a key to confirm the current character and advance cursor.



# Entering Characters

## Hiragana

Enter **すずき** in Kanji (Hiragana) mode.

- 1 (す) → →  
 (ず) → (ず) →  
 (ぎ)



- 2 (Confirm)


## Kanji

Convert **すずき** to **鈴木**.

### 1 Enter **すずき**

- Word suggestions change as hiragana are entered. (Predictive)
- Long Press to toggle suggestion mode between Standard, Literary, Spoken and Automatic. (Personal Mode)


2

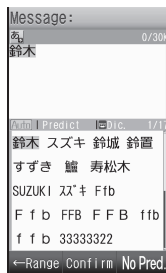

3 **鈴木**

- To exit suggestion list, Press .

4

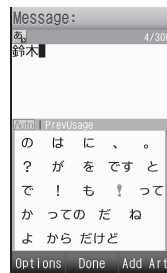

- Words likely to follow the entry appear. (Previous Usage)

### When Target Word is Not Listed

- Press or to segment hiragana to convert separately.
  - Press to toggle Predictive and Non-Predictive suggestions.


### Deleting Words/Phrases from Entry Log

Enter hiragana → → Select word/phrase → (Long Press) → Yes →

## Entering from Dictionaries

Enter text by referring to word definitions, translations, etc.

### 1 Enter hiragana ➔ Before confirming entry,

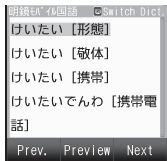

- Press  to toggle dictionaries.

### 2 Select word, etc. ➔

- Definition/translation appears.

### 3

## One-Hiragana Conversion

Enter the first hiragana for a suggestion list from previously selected words.

Example: **ずずき** was previously converted to **鈴木**.

### 1 (ず) ➔

### 2 Select word/phrase ➔

## Correction Conversion

After mistyping hiragana assigned to the same key (e.g., **い** instead of **う**), enter intended word/phrase from suggestion list without retyping.

Available when three or more hiragana are typed.

### 1 Enter hiragana ➔ Before selecting word/phrase,

- Corrected word suggestions appear.

### 2 Select word/phrase ➔

## Katakana

Switch to Double-byte Katakana mode and enter **ジュン**.

### 1 ➔ アイウ ➔

### 2 (ジ) ➔ (ジ) ➔

### (ユ) ➔ (ユ) ➔

### (ン) ➔



## Pictograms & Symbols



- May be unavailable depending on entry mode.
- Immediately after confirming a descriptive word such as **嬉しい** or **悲しい**, corresponding pictograms may appear in suggestion list. (PictogramWordLink)

### 1

- Entry window for pictograms and symbols opens. (Log appears if pictogram/symbol has been used.)

### 2 (toggle tabs) ➔ or (toggle lists)



- While entering message text, Press  in pictogram list to toggle cross-carrier pictograms and all pictograms. Alternatively, Press  to switch to My Pictogram or symbol list.

### 3 Select pictogram or symbol ➔

- Pictograms are double-byte even in single-byte entry modes.

### 4 ➔ List closes

## Emoticons

1  ➔ **Emoticons** ➔ 

2 **Select emoticon** ➔ 

## Alternative Emoticon Entry Method

- In Kanji (Hiragana) mode, enter **かお** or a descriptive word such as **わーい** or **うーん**, then convert the entry.

## Mail &amp; Web Extensions

Enter **.co.jp**, **http://**, etc., easily.

1  ➔ **Quick Addr. List** ➔ 

2 **Select extension** ➔ 


- Extensions are single-byte even in double-byte entry modes.

Hiragana to Katakana/  
Alphanumeric Conversion

Enter katakana or alphanumerics in Kanji (Hiragana) mode using key inscriptions.

Example: Enter **PM**

1    ➔ 

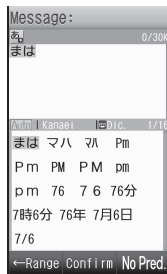


2 **Select word/phrase (PM)**  
➔ 


## Using Wildcard Characters

To improve word suggestions in Kanji (Hiragana) mode, or Single-byte Alphanumeric mode, add **\***s, or **\*s** (wildcard characters) respectively, to entries. Use **\*** or **\*s** to specify the character count: For example, enter **あか\*\*** for a list of words/phrases of four or more characters starting with **あか** or **あが**; enter **so\*\*** for a list of case-insensitive words/phrases that start with **so**.

Example: Kanji (Hiragana) mode

1 **Enter hiragana** ➔  ➔ 

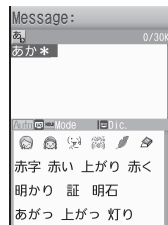

- **\*** appears; to enter another **\***, Press  again.


2  ➔ **Select word/phrase**  
➔ 

## Editing Characters

 
### Deleting & Editing

Correct **また、お願いします** to **また明日  
お願いします**.

#### 1 Select character




#### 2 CLEAR BACK

 

- Highlighted character is deleted.

#### 3 Select target location → Enter characters

 

### Recovering Deleted Characters

- Press to recover characters deleted with .

### Deleting All Characters

 
- Long Press at text end. To delete characters on and after cursor, select the first character of text and Long Press .

### Jumping to the End or Top of Text

- **Cursor Position** → → **Jump to End or Jump to Top** →

### Copy/Cut & Paste

#### 1 → **Cut or Copy** → → **Select first character** →




Cut

- To cancel and start over, Press .

#### 2 **Highlight text range** →
 
#### 3 **Select target location** → (Long Press)



- Text is entered.

### Pasting Previously Cut/Copied Text

- Select target location** → → **Paste**
- → **Select text** →

 
- Available when Paste List appears.

# Customizing Fonts

## Enlarging All Fonts


Enlarge fonts for menus, text entry, etc.

- 1  → **Settings** →



Sound/Display Menu

 - 2 In Sound/Display menu, **Change Menu** →




- 3 **Large Font Menu** →


Switching Back to Standard Menu  
After 2, **Standard Menu** →

## Resizing Specific Fonts

- 1 In Sound/Display menu, **Display** →

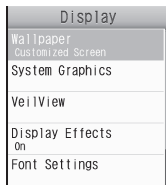

- 2 **Font Settings** →

 


Font Settings Menu

- 3 **Font Size** →  → **Select item** →

- 4 **Select size** →

## Changing Font Weight

 
- 1 In Font Settings menu, **Font Weight** →



- 2 **Select weight** →

## Using Mincho Font

 - 1 In Font Settings menu, **Font Type** →



- 2 **Ming-cho** →

## Wallpaper

1 → **Settings** → → In **Sound/Display** menu, **Display** →

2 **Wallpaper** →



Wallpaper Menu

3 **Select folder** →

4 **Select file** →

- Some files may not be usable.
- Omit 5 when **Preset Pictures** or **Customized Screen** is selected in 3.
- Use to zoom in/out or Press to rotate.

5

### Selecting Images Smaller or Larger than Display

After 4, select option → →

- For **Centered**, use to zoom in/out or Press to rotate.

### Downloading Images from the Internet

In 3, **Download Pictures** →

- Read terms of service and then follow onscreen instructions.

### Selecting Images with Limited Usage Period

- Confirmation appears. Follow these steps:

**Yes** → →

### Selecting Chara Time Files

In 3, **Chara Time** → → **Select file**

→ → →

## Slideshow Wallpaper

Set slideshow to appear in Standby. Some folders/files may not be supported.

1 In **Wallpaper** menu, **Slide Wallpaper** →

2 **Folder Setting** →

3 **Pictures or DCIM** →

4 **Select subfolder** → → **Set this folder** →

- Omit steps for subfolder if none is applicable.

### If There is No Image in Set Folder

- Preset images appear.

### Using Preset Images

In 3, **Preset Pictures** →

### Selecting Pattern

In 2, **Pattern Setting** → → **Select pattern** →


- To check patterns, select one and Press .

## Customizing Handset Responses

### Ringtones

Use preset sounds or media files saved in Data Folder, etc.

- 1 **Settings** → **Sound/Display menu, Sounds & Alerts**

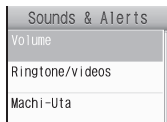

Sounds & Alerts Menu

- 2 **Ringtone/videos**
- 3 **Select item**
  - For **For New Message**, etc., select **Assign Tone** and Press
- 4 **Select folder**
- 5 **Select tone/file**
  - Some files may not be usable.

### Changing Ringtone Duration

After **Duration** → **Enter time**

### Playing Video for Incoming Transmissions

In **Videos** → **Switch**

### If Portion of File Content is Specifiable

- After **Start point selection** window opens. Follow these steps:

**Select start point**

### Selecting Files with Limited Usage Period

- Confirmation appears. Choose **Yes** and Press **OK** to proceed.

### Machi-Uta® Service Registration (Japanese)

Use Machi-Uta® to play music instead of the standard ringback tone for the other party. Machi-Uta® requires a separate contract and basic monthly fee.

- 1 In **Sounds & Alerts menu, Machi-Uta**
- 2 **Register/Cancel**
  - Follow onscreen instructions.

### Vibration

- 1 In **Sounds & Alerts menu, Vibration**
- 2 **Select item** → **Switch On/Off**
- 3 **On**
- 4 **Vibration Pattern**
  - To check vibration patterns, select one and Press **OK**.
- 5 **Select pattern**

### Vibration Caution

- When handset is placed on a desk, etc. with Vibration active, it may fall off upon receiving calls/messages; disable Vibration when charging Battery.