

## Getting Started

Shoot photos or videos.

### Detect Personal & Pet

Locks focus on the face of a person or pet. Register people's faces; related information appears in Viewfinder upon face detection.

### Continuous AF

Focus continuously adjusts as the framed subject's position changes.

### Select Camera

Handset is loaded with preset Camera modes tailored for various purposes/occasions; select a Camera mode to suit subject/shooting conditions.

### Album

Sort saved images into up to 500 albums; create original albums as needed.

### Important Mobile Camera Usage Notes

- Clean dust/smudges from Lens Cover with a soft dry cloth before use.
- Camera is a precision instrument; however, some pixels may remain on/off.
- Shooting/saving images while handset is hot may affect image quality.
- Exposing Lens to direct sunlight may damage Color Filter and affect image color.

### Automatic Shutdown

- Camera shuts down after a period of inactivity and handset returns to Standby.

### Shutter Click

- Shutter click and Self-timer tone sound at fixed volume regardless of handset settings.

# Photo Camera & Video Camera Overview

Focus modes and sizes shown below are defaults; those with \* are fixed.

|                      |                   | Description  | Focus Mode         | Size       |
|----------------------|-------------------|--|--------------------|------------|
| Standard Shooting    | Easy Auto Camera  | Capture nearby subjects easily (settings partially changeable).                  | Normal(Face)*      | 12M        |
|                      | Pro Auto Camera   | Capture nearby subjects easily (settings mostly changeable).                     | Normal(Face)       | 12M        |
|                      | Quick Camera      | Capture distant scenery quickly.   | Manual Focus*      | 3M         |
| Subject & Conditions | Scene Cameras     | Select one according to subject/shooting conditions.                             | Normal(Face)*      | 12M        |
|                      | Monochrome Camera | Capture black and white photos.  | Normal(Face)*      | 12M        |
|                      | Sepia Camera      | Capture sepia photos.  | Normal(Face)*      | 12M        |
|                      | Shot Memo Camera  | Improve text readability in captured memos, tables, etc.                         | Center Auto Focus* | 5M         |
| Specific Objectives  | Wallpaper Camera  | Show mock Clock/Calendar in Viewfinder to capture photo and set it as Wallpaper. | Normal(Face)       | Wallpaper* |
|                      | Auction Camera    | Use guide to capture multiple photos for posting on auction sites.               | Center Auto Focus  | VGA        |
|                      | Messaging Camera  | Capture and send photos using mail easily.                                       | Normal(Face)*      | VGA        |
|                      | Blog Camera       | Capture and post photos to blogs easily.   | Normal(Face)       | VGA        |

|                      |                       | Description   | Focus Mode         | Size      |
|----------------------|-----------------------|---|--------------------|-----------|
| Auto Shutter Release | Look Back Camera      | Play sound and release shutter automatically when subject turns face to Camera.                             | —                  | 12M       |
|                      | Smile Camera          | Release shutter automatically when subject smiles.  | Normal(Face)*      | 12M       |
|                      | Self Timer Camera     | Release shutter automatically after selected time elapses.  | Normal(Face)*      | 12M       |
| Consecutive Shooting | Rapid Shooting Camera | Capture up to 30 photos rapidly.  | Normal(Face)       | VGA       |
|                      | Three-Shot Camera     | Capture three consecutive photos of up to 12M size automatically.   | Normal(Face)       | 12M       |
|                      | Best Select Photo     | Select best photo from a series of rapid shot photos including moments immediately before shutter releases. | Normal(Face)       | VGA       |
| Fun Cameras          | Fish-eye Camera       | Capture photos with enhanced barrel distortion as if shot with full-frame horizontal fisheye lens.          | Center Auto Focus* | 3M        |
|                      | Miniaturize Camera    | Capture photos of scenery, etc. that resemble miniature models as if shot with a tilt-shift lens.           | Center Auto Focus* | 5M        |
|                      | Drawable Camera       | Drag on captured photo to scribble or sketch.   | Normal(Face)*      | Wallpaper |

Additional  
Cameras

Pretty Arrange Camera

| Description                          | Focus Mode    | Size |
|--------------------------------------|---------------|------|
| Touch up faces in captured photos.   | Normal(Face)* | 5M   |
| Use guide to capture self portraits. | Normal(Face)* | 5M   |
| Register name and note for faces.    | Normal(Face)* | VGA* |

Self Portrait Camera

Face Register Camera

HD Video Camera

## Video Camera

Pro Auto Video Camera

Video Camera for Mail

Record long high quality videos.

Normal(Portrait)

HD\*

Record videos with more customizable options.

Normal(Portrait)

HD

Record small videos easily to send using mail.

Normal(Portrait)

QCIF

## Capturing Photos

Capture photos in portrait or landscape. Unless noted otherwise, photo capture descriptions are for portrait orientation.

### Using Photo Camera

To capture someone's photo with **Easy Auto Camera**:

- 1  ➔ **Frame subject on Display**



Photo Viewfinder  
(face detected)

- Focus automatically locks on detected face. (Face auto focus)

- 2 



Captured Photo Window

- Shutter clicks; captured photo is saved.

- 3 

- Viewfinder returns.
- Open saved photos from Album, Review or Data Folder.

- 4  ➔ **Camera shuts down**

### One Touch Shutter

- Tap subject in Photo Viewfinder; focus locks and shutter releases automatically.

### Mobile Light

- Mobile Light may illuminate automatically depending on ambient light or Camera mode. To turn Mobile Light off:

[Photo Viewfinder]  ➔ **Mobile Light** ➔  ➔ **Off** ➔ 

### Face Auto Focus

- Focus automatically locks on face of detected person or pet for Easy Auto Camera, Pro Auto Camera, etc.
  - Detection may fail depending on angle, distance from subject or environment.

 
### Detect Personal

- To use Detect Personal, first register a face with a name, etc. If Camera detects registered face, saved name, etc. appears in Viewfinder; handset automatically sorts saved photos to designated folder (Portrait & Pet).
  - Camera cannot detect registered faces and pets at the same time.

## Landscape Orientation





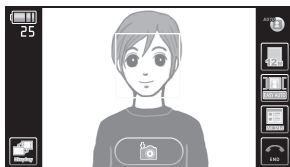


Hold handset horizontally for landscape photo capture; changes Viewfinder too.


### 1 In Photo Viewfinder, rotate handset 90 degrees



## Main Viewfinder Operations


### Handset Keys

|                             |   |
|-----------------------------|---|
| Zoom In/Out or Adjust Focus |   |
| Adjust Brightness           |   |
| Toggle Mobile Light Mode    |    |
| Change Viewfinder           |    |
| Open Help                   |    |


- Press  to open Options menu for more functions/settings.
- Multi Selector functions change with Viewfinder orientation.

## Touchscreen

Menu icons or Camera indicators appear on Display; Tap target item for assigned setting/function. Icons/indicators vary by Camera mode and Viewfinder orientation.

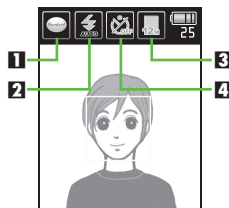 

Example: Pro Auto Camera

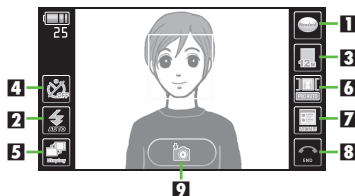 


Example: Pro Auto Camera

|                     |                   |
|---------------------|-------------------|
| 1 Scene             | 6 Switch Cameras  |
| 2 Mobile Light      | 7 MENU            |
| 3 Shooting Size     | 8 Exit            |
| 4 Self-timer        | 9 Release Shutter |
| 5 Change Viewfinder |                   |

## Changing Photo Viewfinder

[Photo Viewfinder] Tap /Disp

- Switch from menu icons to Camera indicators to all off.
- In all off, Press  for menu icons.

## Additional Operations

|                             |                  |
|-----------------------------|------------------|
| Zoom In/Out or Adjust Focus | Drag up/down.    |
| Adjust Brightness           | Drag left/right. |

- Tap **MENU** for more functions/settings.

## Opening Help

[Photo Viewfinder] Tap **MENU** ➔ Tap **Help**


## Focus Lock

Lock focus on subject; Camera continuously focuses on moving subjects.


- Chase Focus tracks subject's movement, and Continuous AF adjusts focus as distance to the subject changes.
- May be unavailable depending on Camera mode.

### 1 In Photo Viewfinder, frame subject in center of Display



- Focus Mark (e.g., ) appears and Focus Lock is set.



- Captured photo appears.
- Press  to return to Viewfinder.

## Canceling Focus Lock



### Chase Focus

- Camera uses color to track subjects; may not correctly track faintly colored subjects or ones similar to background color.

## Shooting Size & Usage

|                  |                           |
|------------------|---------------------------|
| <b>12M</b>       | A3 prints                 |
| <b>QFHD</b>      | 16:9 aspect ratio prints  |
| <b>5M</b>        | B5 prints                 |
| <b>3M</b>        | L to 2L prints            |
| <b>Full HD</b>   | Full HD display wallpaper |
| <b>Wallpaper</b> | Handset Wallpaper         |
| <b>VGA</b>       | Blog posts, etc.          |

# Selecting Camera

## Switching Cameras

### 1 In Photo Viewfinder,



### 2 Select Camera

- Selected Camera activates.
- For subsequent operations, see "Using Selected Camera" on the right.

#### Selecting Camera by Purpose

After 1, From 2

#### Selecting Camera by Subject

After 1, From 2

## Using Selected Camera

### ■ Rapid Shooting Camera

#### 1 **Continuous Type**

#### 2 Select mode

#### 3 Frame subject on Display

- After photo capture, thumbnails appear.

#### 4 **Check All**

- Alternatively, Tap **Check All** in thumbnail list.

#### 5

- Save process may take some time depending on the number of captured photos.
- If confirmation appears, follow onscreen prompts.
- Saved photos appear in Data Folder (Pictures > Shot Pics).

## Shooting Manually

After 3, Press for each frame From 4

### Saving Selected Photos

After 3, select photo ()

### Using Photo Recommender

- Save a photo from recommended photos (automatically selected in terms of Face, Move, Sharpness and Macro, one for each).

After 3, **Photo Recommender**

- Select photo ()
- Alternatively, Tap **Recommend** then proceed.

### Creating Strobe Photo (Composite Image)

- When **Compose Strobe Photo** appears in thumbnail list:

After 3, **Yes** to start composing to save

- Alternatively, Tap **Compose Strobe Photo**.

### Look Back Camera

#### 1 Frame subject on Display ➡

- 1 (whistle), 2 (rattle) or  
3 (dog bark)

- Sound plays.
- Alternatively, Tap , or .

#### 2 Face detection activates and shutter releases; photo appears



- Viewfinder returns.

### Smile Camera

#### 1 Frame subject on Display

#### 2 Smile detection activates and shutter releases; photo appears



- Viewfinder returns.

### Self Timer Camera

#### 1 Frame subject on Display



- Countdown starts.

#### 2 Shutter releases after approximately ten seconds; photo appears



- Viewfinder returns.

### Wallpaper Camera

#### 1 Frame subject on Display



- Wallpaper preview appears.



- Photo is set as Wallpaper.  
(Viewfinder returns.)

### Auction Camera

#### 1 Frame subject on Display



- First photo appears.



- Photo is saved.
- Repeat 1 - 2 to capture two more photos following onscreen instructions.



### Messaging Camera

#### 1 Frame subject on Display



- Mail Composition window opens.  
Complete and send message.

### Shot Memo Camera

#### 1 Frame subject on Display



- Corrected photo appears.
- Alternatively, Tap **Shot Memo**.



#### Select preview image



- Photo is saved. (Viewfinder returns.)

### ■ Pretty Arrange Camera

- 1 **Frame subject on Display**  
➡
- 2   
 • Face is touched up.  
 • Alternatively, Tap **Pretty**.
- 3 ➡   
 • Photo is saved. (Viewfinder returns.)

#### Canceling Effects

After ,

#### Adjusting Each Effect Separately

After , (Small Face), (Cute Eyes) or (Fair Skin) ➡

- Alternatively, Tap corresponding indicator then proceed.

#### When Multiple Faces are Detected

- After , Press to touch up all faces.  
To touch up selected faces:

After , (select face) ➡ ()  
➡ ➡

### ■ Self Portrait Camera

- 1 Turn handset around
- 2 Frame your face on Display and look into Lens
- 3 Face detection activates, tones sound, and shutter releases; photo appears
- 4   
 • Viewfinder returns.

### ■ Additional Cameras

|                    |  |
|--------------------|--|
| Three-Shot Camera  | Frame subject on Display<br>➡  ➡ Select photo<br>➡   |
| Best Select Photo  | <ul style="list-style-type: none"> <li>• To save all photos or use Photo Recommender, see P.7-8 "Rapid Shooting Camera."</li> </ul>                      |
| Scene Cameras      | Frame subject on Display<br>➡  |
| Monochrome Camera  |  |
| Sepia Camera       |  |
| Miniaturize Camera |  |
| Fish-eye Camera    | Frame subject on Display<br>➡  ➡  ➡ Proceed with blogging<br><ul style="list-style-type: none"> <li>• Complete Blog Tool settings beforehand.</li> </ul> |
| Blog Camera        |  |
| Drawable Camera    |  |
|                    |  |


Frame subject on Display  
➡ ➡ ➡ Drag on photo ➡ ➡ **Save as New** or **Overwrite** ➡   
 • For **Save as New**, follow onscreen instructions.

## Changing & Saving Camera Settings

Change settings by purpose/shooting conditions; save frequently used settings as **My Camera** for future use.  
Some settings may be unavailable depending on Camera mode (no corresponding indicators appear).

### Main Items

|                |                   | Description   |
|----------------|-------------------|---|
| Focus          | Focus Mode        | Select <b>Normal(Face)</b> , <b>Center Auto Focus</b> , <b>Macro</b> or <b>Manual Focus</b> .     |
|                | Continuous AF     | Adjust focus as focus-locked subject's position changes; choose <b>On</b> or <b>Off</b> .         |
|                | Chase Focus       | Track focus-locked subject as it moves within Viewfinder; choose <b>On</b> or <b>Off</b> .        |
|                | Focus Mark        | Select focus frame design from <b>Pattern 1</b> to <b>Pattern 6</b> .                             |
| Shutter        | One Touch Shutter | Release shutter upon Tapping Viewfinder; choose <b>On</b> or <b>Off</b> .                         |
|                | Self-timer        | Select <b>10 sec</b> , <b>5 sec</b> , <b>2 sec</b> or <b>Off</b> .                                |
|                | Shutter Mode      | Select <b>Normal</b> (manual), <b>Egao</b> (smile detection) or <b>Furimuki</b> (face detection). |
|                | Shutter Sound     | Select shutter click sound from <b>Pattern 1</b> to <b>Pattern 3</b> .                            |
| Size & Quality | Picture Size      | Select shooting size from <b>12M(3000x4000)</b> to <b>VGA(480x640)</b> .                          |
|                | Picture Quality   | Select photo quality from <b>High Quality</b> , <b>Fine</b> and <b>Normal</b> .                   |

|               |                  | Description   |
|---------------|------------------|---|
| Conditions    | ISO Sensitivity  | Select light sensitivity from <b>Auto</b> (~200), <b>Auto</b> (~1600) and <b>100</b> to <b>3200</b> .                       |
|               | White Balance    | Select <b>Auto</b> , <b>Daylight</b> , <b>Cloud/Shade</b> , <b>Tungsten</b> or <b>Fluorescent</b> for best color balance.   |
|               | Exposure         | Select amount of light received by Camera from <b>-2</b> to <b>+2</b> .   |
|               | Mobile Light     | Select Mobile Light mode from <b>On</b> , <b>Automatic</b> , <b>Low Light</b> and <b>Off</b> .                              |
| Save Settings | Save Pictures to | Select <b>Memory Card Priority</b> , <b>Memory Card Fixed</b> , <b>Phone Memory</b> , <b>DCIM</b> or <b>Ask Each Time</b> . |
|               | Auto Save        | Select <b>On(Preview Off)</b> , <b>On(Preview 2 sec)</b> , <b>On(Preview Manual)</b> or <b>Off</b> .                        |
|               | Background Save  | Enable quick transition to Viewfinder after saving photos; choose <b>On</b> or <b>Off</b> .                                 |
| Other         | Shake Reducing   | Select shake reduction option ( <b>Auto</b> or <b>Off</b> ).  |
|               | Display Setting  | Select Viewfinder view from <b>Normal</b> , <b>Guidance</b> and <b>Icon Off</b> .   |
|               | Set Send Key     | Select send option assigned to  .          |

## Changing Settings

Example: Picture Quality

### 1 In Photo Viewfinder,



### 2 Settings ➡

### 3 Picture Quality ➡



### 4 Select quality ➡

- Viewfinder returns.
- For some settings, current status appears in their indicators.

## Saving Changed Settings

After photo capture, save changed settings with a name and captured photo; load saved settings in the same manner as switching Cameras.

May be unavailable depending on Camera mode.

 
### Saving as My Camera

### 1 In captured photo window,

### 2 Save as My Camera ➡

- Messages appear.

### 3 Specify area

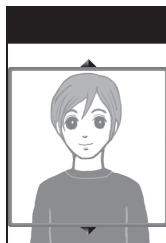

- Specified area is used as Camera's icon.

### 4

### 5 My Camera Name: ➡

### 6 Enter name ➡

### 7

- My Camera is created.

### Entering Information

After 6, Note: ➡  ➡ Enter text ➡  ➡ 7

### Using My Cameras

 
### 1 In Photo Viewfinder,

### 2 Select My Camera ➡

## Registering Faces (Detect Personal)

Register people's faces; related information appears in Viewfinder upon face detection, and saved photos are sorted into albums (Portrait & Pet).


- Register name, note and priority for up to ten faces.
- When multiple registered faces are detected, focus locks on one with highest priority.

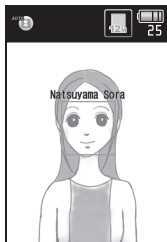

Viewfinder Information


### Saving Entries

 - 1 In Photo Viewfinder,
- 2 Detect Personal/Pet ➡
- 3 Register Face ➡
- 4 Use guide to find best position

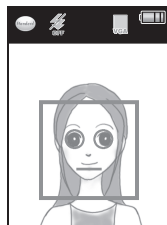

- Guide turns red when face is detected.

 5

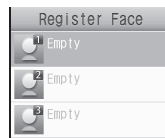

- Window shown above opens when face is recognized correctly; if not, repeat 4 - 5.

6 Empty ➡

7 Name: ➡

8 Enter name ➡

9

- Entry is saved.
- Lower entry numbers indicate higher priority.

### Entering Information

After 3, Note: ➡ ➡ Enter text ➡ ➡ 3

### Setting Text Color

After 3, Font Color: ➡ ➡ Select color ➡ ➡ 3

- Upon face detection, Viewfinder information appears in selected color.

 
## Recording Videos

Record videos in portrait or landscape. Unless noted otherwise, video recording descriptions are for portrait orientation.

### Using Video Camera

Record high definition videos with **HD Video Camera**, up to approximately 4 seconds per shot, on handset. Insert a Memory Card to record longer shots.

#### 1 (Long Press)

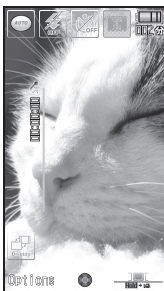

Video Viewfinder  
(HD Video Camera)

#### 2 Frame subject on Display



- Tone sounds and recording starts.

#### 3



- Tone sounds and recording stops.
- Video is saved and plays; Viewfinder returns.
- Play saved videos from Album, Review, Data Folder or Media Player.




#### Incoming Calls while Recording

- Recorded clip remains even if the call is answered. After the call, video is saved and plays automatically; Viewfinder returns.

#### If Battery Runs Low

- Recording stops. (Recorded clip is saved.)

#### Switching Video Cameras

[Video Viewfinder]  ➔ **Simple Setting** ➔  ➔ **Select Video Camera** ➔ 





### Landscape Orientation

 
Hold handset horizontally for landscape recording; changes Viewfinder too.

#### 1 In Video Viewfinder, rotate handset 90 degrees counterclockwise





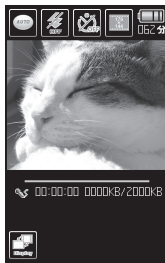


## Sending Recorded Video Using Mail

 - 1  (Long Press)
- 2  ➔ **Simple Setting** ➔ 
- 3 **Video Cam For Mail** ➔ 








 




Video Viewfinder  
(Video Camera for Mail)

- 4 **Frame subject on Display**  
➔ 
- Tone sounds and recording starts.
- 5 
- Tone sounds and recording stops.
- Video is saved and plays.


- 6 **During playback,** 
- 7 **S! Mail** ➔   
• Mail Composition window opens.
- 8 **Complete message** ➔ 

## Main Viewfinder Operations

## Handset Keys


|                               |   |
|-------------------------------|---|
| Zoom In/Out                   |  /  |
| Adjust Brightness             |  /  |
| Mobile Light On/Off           |    |
| Change Quality                |    |
| Pause/Resume Recording        | While Recording,   |
| Capture Photo                 | While Recording,   |
| Cancel Recording (Start Over) |    |
| Open Help                     |    |

\*May be unavailable depending on Camera mode and shooting size.

- Press  to open Options menu for more functions/settings.
- Multi Selector functions change with Viewfinder orientation.

## Touchscreen

Menu icons or Camera indicators appear on Display; Tap target item for assigned setting/function. Icons/indicators vary by Camera mode and Viewfinder orientation.

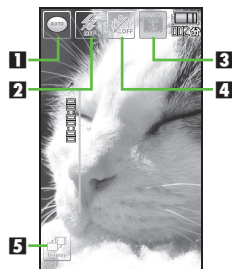 

Example: HD Video Camera



Example: HD Video Camera



Example: HD Video Camera (Recording)

|          |                   |           |                        |
|----------|-------------------|-----------|------------------------|
| <b>1</b> | Scene             | <b>7</b>  | MENU                   |
| <b>2</b> | Mobile Light      | <b>8</b>  | Exit                   |
| <b>3</b> | Shooting Size     | <b>9</b>  | Start Recording        |
| <b>4</b> | Self-timer        | <b>10</b> | Capture Photo          |
| <b>5</b> | Change Viewfinder | <b>11</b> | Stop Recording         |
| <b>6</b> | Switch Cameras    | <b>12</b> | Pause/Resume Recording |

### Changing Scene Setting by Subject

[Video Viewfinder] Tap ➡ Tap scene

### Changing Video Viewfinder

[Video Viewfinder] Tap /Disp

- Switch from menu icons to Camera indicators to all off.

### Switching Cameras

[Video Viewfinder] Tap Camera selection indicator (, , etc.) ➡ Tap Camera

## Additional Operations

|                          |                  |
|--------------------------|------------------|
| <b>Zoom In/Out</b>       | Drag up/down.    |
| <b>Adjust Brightness</b> | Drag left/right. |
| <b>Focus Lock</b>        | Tap image.       |

Tap **MENU** for more functions/settings.




### Opening Help

[Video Viewfinder] Tap **MENU** ➡ Tap *Help*

## Changing & Saving Video Camera Settings

Change settings by purpose/shooting conditions; save frequently used settings as **My Video Camera** for future use. Some settings may be unavailable depending on Camera mode (no corresponding indicators appear).

### Main Items

|   |               | Description  |
|---|---------------|--|
|  | Focus Mode    | Select <b>Normal(Portrait)</b> , <b>Manual Focus</b> or <b>Macro</b> .                     |
|   | Chase Focus   | Track focus-locked subject as it moves within Viewfinder; choose <b>On</b> or <b>Off</b> . |
|  | Picture Size  | Select shooting size from <b>HD(1280x720)</b> to <b>QCIF(176x144)</b> .                    |
|   | Video Quality | Select <b>High Quality</b> , <b>Fine</b> or <b>Normal</b> .                                |
|  | Microphone    | Record videos with sound; choose <b>On</b> or <b>Off</b> .                                 |

|               |                    | Description   |
|---------------|--------------------|---|
| Conditions    | Exposure           | Select amount of light received by Camera from <b>-2</b> to <b>+2</b> .                                       |
|               | Mobile Light       | Activate Mobile Light; choose <b>On</b> or <b>Off</b> .   |
| Save Settings | Save Videos to     | Select <b>Memory Card Priority</b> , <b>Memory Card Fixed</b> , <b>Phone Memory</b> or <b>Ask Each Time</b> . |
|               | Auto Save          | Select <b>On(Preview Off)</b> , <b>On(Preview On)</b> or <b>Off</b> .   |
| Other         | Display Setting    | Select Viewfinder view from <b>Normal</b> , <b>Guidance</b> and <b>Icon Off</b> .                             |
|               | Self-timer         | Select <b>10 sec</b> , <b>5 sec</b> , <b>2 sec</b> or <b>Off</b> .  |
|               | Video/Audio Encode | Select <b>H.264/AAC</b> or <b>MPEG4/AMR</b> .   |

 
## Changing Settings

Example: Picture Size (shooting size)

**1 In Video Viewfinder,** 



**2 Picture Size** ➡ 

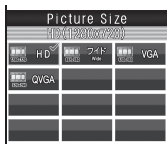

**3 Select size** ➡ 

- Viewfinder returns.
- For some settings, current status appears in their indicators.

## Saving Changed Settings

Save changed settings as My Video Camera and load them as needed.  
Change settings beforehand.

## Saving as My Video Camera


**1 In Video Viewfinder,**  ➡

**Simple Setting** ➡ 

**2 My Video1 Regist or My Video2 Regist** ➡ 

- Settings are saved as My Video Camera.

## Overwriting Saved My Video Camera

After **2**, Yes ➡ 

## Using My Video Cameras

**1 In Video Viewfinder,**  ➡  
**Simple Setting** ➡ 

**2 Select My Video Camera**  
➡ 

## Opening Saved Images from Album


### Basics

Handset sorts saved images (photos and videos) into up to 500 albums of the following preloaded categories automatically; create original albums as needed.

|                           |   |
|---------------------------|---|
| <b>Portrait &amp; Pet</b> | Stores portraits (sorted into albums by registered face) and images containing detected pets. |
| <b>Event</b>              | Stores images sorted into albums by period scheduled in Calendar.                             |
| <b>By Camera</b>          | Stores images sorted into albums by Camera mode.  |
| <b>By Date</b>            | Stores images sorted into albums by captured date.  |

### Album Images & Source Files

 
- Album stores only file locations. (Source files are saved in Data Folder.) Images disappear from Album if source files are deleted.

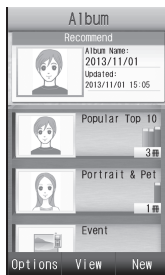

A single image may be sorted into multiple categories (e.g., a portrait captured with a specific Camera is stored in **By Camera** and **Portrait & Pet**). In addition, a single image with multiple registered faces will be stored in each subject's album in **Portrait & Pet**.

### Opening Albums

 
- 1 ➔ **Camera** ➔ ➔ **Album** ➔

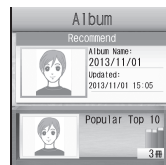

Album Window

- **Recommend** shows a recently updated album.
- **Popular Top 10** stores ten most frequently opened albums.

 - 2 **Select category** ➔

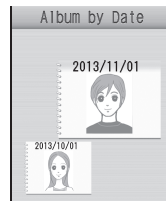

Album List

- Albums within appear.

### 3 Select album ➡

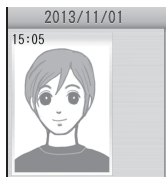 


Image List

### 4 Select image

### 5

- Image appears.
- For Rapid Shooting Camera and Three-Shot Camera albums, images appear sequentially (Continuous Slide); Press to stop.

#### Opening Latest Album

After 1,

 
#### Slideshow (Photos)

After 2, select album ➡ ➡ *Slide Show* ➡

## Creating Original Albums

Create new albums by selecting sort keys (from Portrait & Pet, Event and By Camera) and specifying date and time. To create an album by selecting sort keys from Portrait & Pet and By Camera:

### 1 In Album window, ➡ *Create Original Album* ➡

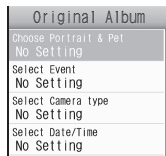

### 2 Choose Portrait & Pet ➡

### 3 Select entry ➡

 


- Repeat 3 to complete selection.

### 4

### 5 Select Camera type ➡

### 6 Select Camera ➡



- Repeat 6 to complete selection.

### 7

### 8 Create Album ➡

### 9 Enter name ➡

### 10 Yes ➡

#### Previewing Created Album

After 2, *Album Preview* ➡

- To return, Press .

#### Editing Sort Keys

[Album List] Select album ➡ ➡

*Edit Auto Sort Keys* ➡ ➡ Select item ➡ ➡ Edit ➡

- For items other than *Select Date/Time*, Press again.