

Introduction

Thank you for purchasing SoftBank 731SC.

SoftBank 731SC is compatible with 3G network technology.

- Read this guide thoroughly before using 731SC to ensure proper usage.
- After reading this guide, keep it on hand for later reference.
- Should you lose or damage this guide, contact Customer Service (➡P.12-25).
- Accessible services may be limited by contract conditions or service area.

Notes

- Unauthorized copying of any part of this guide is prohibited.
- Contents are subject to change without prior notice.
- Some functions and services are not available in Japan.
- Steps have been taken to ensure the accuracy of descriptions in this guide. If you find inaccurate or missing information, contact Customer Service (➡P.12-25).

Chapter Contents At a Glance

Getting Started	1
Basic Operations	2
Calling	3
Messaging	4
Internet Services	5
Camera	6
Media Player	7
Handy Extras	8
Handset Security	9
Connectivity & File Backup	10
Handset Customization	11
Appendix	12

Contents.....ii
 Accessories..... iv
 About This Guide v
 Safety Precautions vii
 General Notes xv
 SAR Certification..... xviii
 European RF Exposure Information xix

1 Getting Started

Parts & Functions1-2
 Charging Battery1-4
 Power On/Off1-6
 Handling Precautions.....1-6
 Minding Mobile Manners1-7
 Security Codes1-12
 Emergency Numbers1-13

2 Basic Operations

Selecting Functions2-2
 Common Operations2-4
 Standby Display Options.....2-4
 Text Entry2-5
 Text Entry Method2-6
 User's Dictionary2-9
 Phonebook2-10
 Using Phonebook2-14

Account Details.....2-16
 Data Folder2-16
 Viewing Files.....2-17
 Managing Files/Folders.....2-19
 Memory Card2-22
 Viewing Memory Status2-24

3 Calling

Making a Call.....3-2
 Receiving a Call3-3
 Answering Machine3-4
 Speed Dial.....3-5
 Call Time & Cost3-5
 Call Log Records3-6
 Optional Services.....3-7
 Voice Mail3-8
 Call Forwarding3-10
 Call Waiting3-11
 Group Call.....3-12
 Call Barring.....3-12
 Caller ID3-14

4 Messaging

Messaging Basics 4-2
 Custom Mail Address 4-3
 Sending S! Mail 4-3
 Sending SMS Messages 4-6
 Received Messages 4-7
 Managing & Using Messages 4-10
 Managing Folders..... 4-13

5 Internet Services

Internet Services 5-2
 Yahoo! Keitai..... 5-3
 PC Site Browser 5-3
 Page Operations 5-4
 Bookmarks..... 5-6
 Saved Pages 5-7

6 Camera

Mobile Camera 6-2
 Camera Mode 6-3
 Single Shot 6-4
 Capturing Options 6-5
 Video Mode 6-6
 Recording Video 6-6

7 Media Player

Media Player7-2
 Playing Music7-3
 Playing Video7-5
 Using Playlist7-7

8 Handy Extras

Saving Calendar Entries8-2
 Alarms8-3
 Calculator8-4
 Currency or Unit Converter8-4
 World Clock8-5
 Notepad8-5
 Tasks8-6
 Voice Recorder8-6
 Stopwatch8-7
 Dictionary8-7
 File Viewer8-8

9 Handset Security

Changing Phone Password9-2
 Setting PINs9-2
 Setting USIM Lock9-3
 Locking & Restricting Handset Operations ... 9-3
 Restoring Default Settings9-6

10 Connectivity & File Backup

Infrared 10-2
 Infrared Data Transmission 10-2
 USB Connection 10-5
 Memory Card Backup 10-5
 S! Addressbook Back-up (SAB) 10-6

11 Handset Customization

Messaging Settings 11-2
 Internet Settings 11-6
 Media Player Settings 11-8
 Mobile Camera Settings 11-9
 Phonebook Settings 11-10
 Sound & Alert Settings 11-11
 Display Settings 11-12
 Phone Settings 11-13
 Security Settings 11-15
 Call Settings 11-16
 Mode Settings 11-19
 Connectivity Settings 11-19
 Memory Settings 11-20

12 Appendix


Battery & Charger 12-2
 USIM Card 12-4
 Troubleshooting 12-6
 Software Update 12-9
 Function List 12-10
 Key List for Text Entry 12-12
 Symbols 12-13
 Memory List 12-14
 Specifications 12-14
 Index 12-16
 Objective Index 12-21
 Advanced Settings Index 12-23
 Warranty & Service 12-24
 Customer Service 12-25

Accessories

Make sure Battery is included in the package with handset. Battery is also sold separately.

For details on accessories or optional items, contact Customer Service (☎P.12-25).

Battery [SCBAM1]

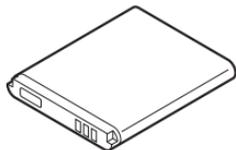

- Use only specified Charger/Earphone Microphone/USB Cable (Optional).
- Handset takes microSD™/microSDHC™ Memory Card (not included). Purchase one to use Memory Card functions.
- microSD™/microSDHC™ Memory Card is referred to as "Memory Card" in this guide.
- Download Samsung PC Studio from SAMSUNG Website (<http://jp.samsungmobile.com/pc/lineup/731download.html>).

About This Guide

In this guide, SoftBank 731SC is referred to as 731SC/handset. Instructions are described using mainly default settings. When settings are changed, screen shots or handset responses may differ from those depicted in this guide.

Screen Shots and Handset Illustrations

Screen shots appearing in this guide are for reference only and may differ from actual Display images. Product illustrations may differ from actual product appearances.

Confirmations & Warning Messages

Messages not described in this guide may appear; read all handset confirmations and warning messages carefully.

Japanese Functions & Services


When "(Japanese)" appears in a title, Japanese ability is required to use full range of the function or service.

Symbols


In this guide, graphics represent handset keys; see "Parts & Functions" (P.1-2). Softkey and Multi Selector operations are indicated as follows.

Softkeys

Operation options appear at the bottom of Display. Press the corresponding Softkey to execute assigned functions.

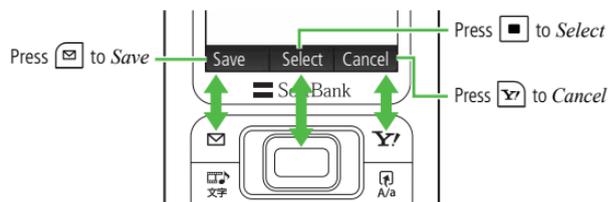


Softkey Operations

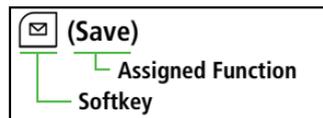

Multi Selector Operations

Use Multi Selector to select menu items, move cursor, scroll, etc. In this guide, Multi Selector operations are indicated as shown below.

Basic Multi Selector Operations

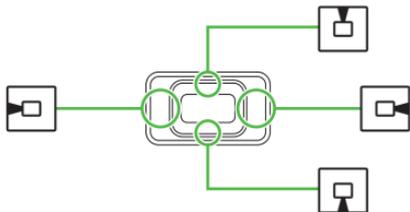

 : Press  or 

 : Press  or 

 : Press , ,  or 

Highlighting

In this guide, "to highlight" means to move cursor to an item.

Menu Operations

Main Menu/Menu operations are simplified with arrows.

Main Menu

1  → *Settings* → *Display settings* → *Wallpaper*
Highlight an item and press  (Select)

For details, see "Selecting Functions from Main Menu" (➡P.2-2).

Menu

1  → *Send* → *Via infrared*
Press  (Menu) to open Menu
Highlight an item and press  (Select)

Safety Precautions

Read safety precautions before using handset.

- Observe precautions to avoid injury to self or others, or damage to property.
- SoftBank is not liable for any damages resulting from use of this product.

These labels indicate the degree of risk from improper use. Make sure you thoroughly understand their meanings before reading on.

 Danger	Great risk of death or serious injury¹ from improper use
 Warning	Risk of death or serious injury¹ from improper use
 Caution	Risk of serious injury² or damage to property³ from improper use

1 "Serious injury" includes blindness, wounds, low/high heat burns, electric shock, bone fractures, poisoning or other physical harm with aftereffects, or requiring hospitalization or ongoing hospital visits.

2 "Serious injury" includes wounds, burns, electric shock or other physical harm not requiring hospitalization or ongoing hospital visits.

3 "Damage to property" includes damage to home, furniture, livestock, pets, etc.

These symbols indicate prohibited or compulsory actions. Make sure you thoroughly understand their meanings before reading on.

 Prohibited	Prohibited actions
 Do Not Disassemble	Disassembly prohibited
 Avoid Liquids Or Moisture	Exposure to liquids prohibited
 Do Not Use Wet Hands	Use with wet hands prohibited
 Compulsory	Compulsory actions
 Disconnect Power Source	Unplug Charger from outlet

Handset, Battery, USIM Card, Charger (Sold Separately) & Memory Card (Sold Separately)

Danger

Use specified battery and Charger (sold separately) only.

Non-specified equipment use may cause battery to leak, overheat, burst or ignite, and may cause Charger to overheat, ignite, malfunction, etc.



Compulsory

Do not disassemble, modify or solder handset or related hardware.

May cause fire, injury, electric shock or malfunction. Battery may leak, overheat, burst or ignite.

Modifying handsets is prohibited by the Radio Law and subject to a penalty.



Do Not
Disassemble

Do not expose handset or related hardware to liquids.

Do not leave handset or related hardware wet after exposure to water, pet urine, etc., and do not charge wet battery. May cause overheating, electric shock, fire, injury or malfunction. Use them in an appropriate place properly.



Avoid Liquids
Or Moisture

Do not charge battery in or expose handset or related hardware to extreme heat (e.g., near fire or sources of heat, in direct sunlight, inside vehicles, etc.).



Prohibited

May cause warping/malfunction; battery may leak, overheat, ignite or burst. Handset or related hardware may become hot to the touch, leading to burn injuries, etc.

Do not force battery/Charger into handset. Check the direction and retry.

Battery may leak, overheat, burst, ignite, etc.



Prohibited

Warning

Do not place handset, battery or Charger in/on ovens, microwave ovens, pressure cookers, induction stoves or other cooking appliances.

Battery may leak, overheat, burst or ignite. Handset/Charger may overheat, emit smoke, ignite, malfunction, etc.



Prohibited

Keep handset off and Charger disconnected near gas stations or places with fire/explosion risk.

Handset use near petrochemicals or other flammables may cause fire/explosion.

To prevent fire or explosion, do not use handset near gas or fine particles (Coal, dust, metal, etc.).



Compulsory

Do not apply strong shocks or impacts.

Do not drop/throw handset or related hardware. Battery may leak, overheat, burst or ignite, resulting in fire, electric shock, malfunction, etc.



Prohibited

If there is unusual sound/odor, smoke or any other abnormality:

Continued use may cause fire, electric shock, etc.; grasp plug to disconnect Charger, turn off handset, then remove battery, being careful not to burn or injure yourself.



Compulsory

Keep liquids (water, pet urine, etc.) or conductive material (pencil lead, metallic strip, metal jewelry, etc.) away from charging terminals, External Device Port or Memory Card Holder.

May cause short circuit, resulting in fire, malfunction, etc.



Prohibited

 **Caution**

Do not place handset or related hardware on unstable surfaces.

Handset or related hardware may fall, resulting in injury, malfunction, etc.; be especially careful when Vibration is set.



Prohibited

Keep handset and related hardware out of infants' reach.

Infants may choke from swallowing handset or related hardware or be injured, etc.



Compulsory

If your child is using handset and related hardware, explain all instructions and supervise usage.

Misuse may cause injury, etc.



Compulsory

Battery

Danger

Read battery label to confirm battery type; use/dispose of battery accordingly.

Display	Battery type
Li-ion00	Lithium-ion

Do not dispose of battery in fire.

Battery may leak, burst, ignite, etc.



Prohibited

Do not damage battery (with a nail, hammer, foot, etc.) or subject it to strong impacts or shocks.

Battery may leak, overheat, burst, ignite, etc.



Prohibited

Keep wire or other metal objects away from battery terminals. Do not carry/store battery with conductive material (pencil lead, metallic strip, metal jewelry, etc.).

Battery may leak, overheat, burst, ignite, etc.



Prohibited

If battery fluid gets in eyes, do not rub; rinse with water and consult a doctor immediately.

Eyes may be severely damaged.



Compulsory

Warning

If battery fluid contacts skin or clothes, discontinue handset use and rinse with clean water immediately.

May cause skin damage.



Compulsory

If battery does not charge properly, stop trying.

Battery may leak, overheat, burst, ignite, etc.



Compulsory

If there is abnormal odor, excessive heat, discoloration or distortion, remove battery, being careful not to burn or injure yourself. Avoid fire sources.

Continued use may cause battery to leak, overheat, burst, ignite, etc.



Compulsory

Caution

Do not dispose of an exhausted battery with ordinary refuse.

Tap over battery terminals before disposal. Take battery to a SoftBank Shop, or follow the local disposal regulations.



Prohibited

Handset

Warning

Do not use handset while driving or cycling.

Accidents may result.

Phone use while driving or cycling is prohibited by law and subject to a penalty; park in a legal parking space beforehand.



Prohibited

Turn handset power off near electronic devices that employ high precision control systems or weak signals.

May cause electronic malfunctions, etc. Be especially careful near the following devices:

Hearing aids, implanted pacemakers/defibrillators and other electronic medical equipment; fire alarms, automatic doors and other automatic control devices.



Compulsory

Turn handset power off before boarding aircraft. Cancel the setting that turns handset power on automatically (alarm, etc.) beforehand.

Handset use may impair aircraft operation. Turning on handset power aboard aircraft is prohibited by law and subject to a penalty.



Compulsory

Users with a heart condition should adjust ringtone Vibration and Volume as needed.

May cause heart damage.



Compulsory

If thunder is heard while outdoors, turn power off; find cover.

There is a risk of lightning strike or electric shock.



Compulsory

Do not look into Infrared Port during infrared transmissions.

Eyesight may be affected.



Prohibited

Caution

Do not use handset when it may affect a vehicle's electronic equipment.

Handset use inside vehicles may cause electronic equipment to malfunction, resulting in accidents.



Compulsory

If you experience any skin irritation associated with handset use, discontinue handset use and consult a doctor.

Metal and other materials may cause skin irritation, rashes, or itchiness depending on your physical condition.



Compulsory

Parts	Materials & Finishing
Housing (Upper)	PC
Housing (Rear)	PC
Keypad	PC
Charger Cover	PC + Urethane
Ear Cover	PC + Urethane
Battery Cover	PC

Keep handset away from magnetic cards, etc.

Data on bank cards, credit cards, telephone cards, floppy disks, etc. may be lost.



Prohibited

Do not swing handset by strap.

May harm self or others; strap may break, resulting in injury or handset malfunction/breakage.



Prohibited

Handset may become hot while in use, especially at high temperature.

Prolonged contact with skin may cause burn injuries.



Compulsory

Always maintain some distance from Speaker while ringtones, music or other handset sounds play.

Excessive volume may damage ears or hearing.



Prohibited

Moderate handset volume when using Earphone Microphone.

Excessive volume may damage ears or hearing.



Compulsory

Charger (Sold Separately)

Warning

Do not cover/wrap Charger while charging.

Charger may overheat, resulting in fire, malfunction, etc.



Prohibited

Use only the specified voltage.

Non-specified voltages may cause fire, malfunction, etc.

- AC Charger (sold separately): AC 100V-240V Input



Prohibited

Leave Charger unplugged during periods of disuse; grasp plug to disconnect it.

May cause electric shock, fire or malfunction.



Disconnect
Power Source

If liquids (water, pet urine, etc.) seep inside Charger, grasp plug and disconnect Charger immediately.

May cause electric shock, smoke or fire.



Disconnect
Power Source

If plug is dusty, grasp it and disconnect Charger, then clean with a dry cloth.

Fire may result.



Compulsory

Plug Charger firmly into the outlet, keeping the plug and Charger charging terminals away from conductive material (pencil lead, metallic strip, metal jewelry, etc.).

May cause electric shock, short circuit, fire, etc.



Compulsory

Do not touch Charger plug with wet hands.

May cause electric shock, malfunction, etc.



Do Not Use
Wet Hands

Do not touch Charger if thunder is heard.

May cause electric shock, etc.



Prohibited

Caution

Do not charge battery on unstable surfaces.

Handset may fall and disconnect from Charger or malfunction, etc.



Prohibited

Grasp plug and disconnect Charger before cleaning.

May cause electric shock, etc.



Disconnect
Power Source

Always grasp plug (not cord) to disconnect Charger.

Pulling the plug by cord may damage cord, causing electric shock, fire, etc.



Compulsory

Do not subject Charger (sold separately) to strong shocks or impacts while it is plugged into the outlet.

May cause malfunction or injury.



Prohibited

Handset Use & Electronic Medical Equipment

This section is based on "Guidelines on the Use of Radio Communications Equipment such as Cellular Telephones and Safeguards for Electronic Medical Equipment" (Electromagnetic Compatibility Conference, April 1997) and "Report of Investigation of the Effects of Radio Waves on Medical Equipment, etc." (Association of Radio Industries and Businesses, March 2001).

Warning

Persons with implanted pacemaker/defibrillator should keep handset more than 22 cm away.

Radio waves may interfere with implanted pacemakers or defibrillators.



If you intend to use electronic medical equipment other than implanted pacemaker/defibrillator outside medical facilities, consult the vendor on radio wave effects.

Radio waves may interfere with electronic medical equipment.



Observe these rules inside medical facilities to avoid effects of radio waves on electronic medical equipment:

- Do not enter an operating room or an Intensive or Coronary Care Unit while carrying a handset.
- Keep handset off in hospitals; cancel the setting that turns handset power on automatically (alarm, etc.) beforehand.
- Even in lobbies or other places where handset use is permitted, keep handset off near electronic medical equipment.
- Obey medical facility rules on mobile phone use.



Turn handset off in crowds or trains where persons with implanted pacemaker/defibrillator may be near; cancel the setting that turns handset power on automatically (alarm, etc.) beforehand.

Radio waves may interfere with implanted pacemakers or defibrillators causing such devices to malfunction.



General Notes

General Use

- SoftBank is not liable for any damage resulting from accidental loss/alteration of any data on handset/Memory Card. Please keep separate records of Phonebook entries, etc.
- Handset transmissions may be disrupted inside buildings, tunnels, or underground, or when moving into/out of such places.
- Use handset without disturbing others.
- Handsets are radios as stipulated by the Radio Law. Under the Radio Law, handsets must be submitted for inspection upon request.
- Handset use near landlines, TVs or radios may cause interference.
- **Beware of eavesdropping.**

Because this service is completely digital, the possibility of signal interception is greatly reduced. However, some transmissions may be overheard.

Eavesdropping

Deliberate/accidental interception of communications constitutes eavesdropping.

Inside Vehicles

- Never use handset while driving.
- Do not park illegally to use handset.
- Handset use may affect a vehicle's electronic equipment.

Aboard Aircraft

- Never use handset aboard aircraft (Keep the power off). Handset use may impair aircraft operation.

Function Usage Limits

- The following functions are disabled after handset upgrade/replacement or service cancellation:
 - Camera
 - Media Player
- After a long period of disuse, these functions may be unusable; establish a Network connection to restore usability.

Handset Care

- If handset is left with no battery or an exhausted one, data may be altered/lost. SoftBank is not liable for any resulting damage.
- Use handset between 5°C - 40°C. Avoid extreme temperatures/direct sunlight.
- Exposing the lens to direct sunlight may damage the color filter and affect image color.
- Do not drop or subject handset to shocks.
- Clean handset with a dry, soft cloth. Using alcohol, thinner, etc. may damage it.
- Do not expose handset to rain, snow, or high humidity.
- Never disassemble or modify handset.
- Avoid scratching Display.
- When using headphones, moderate the volume to avoid sound bleed.
- Handset is not water-proof. Avoid exposure to liquids and high humidity.
 - Keep handset away from precipitation.
 - Cold air from air conditioning, etc. may condense causing corrosion.
 - Avoid placing handset in damp places (Restrooms, bath/shower rooms, etc.).
 - On the beach, keep handset away from water and direct sunlight.
 - Perspiration may get inside handset causing malfunction.
- Heavy objects or excessive pressure should be avoided. This may cause malfunction or injury.
 - Do not sit down with handset in a back pocket.
 - Do not place heavy objects on handset in a bag.
- Insert only specified devices into Charger Port. Malfunction or damage may result.
- Always turn power off before removing battery. If battery is removed while saving data or sending mail, data may be lost, changed or destroyed.

Copyrights

Copyright laws protect sounds, images, computer programs, databases, other materials for copyright holders. Duplicated material is limited to private use only.

Use of materials beyond this limit or without permission of copyright holders may constitute copyright infringement, and be subject to criminal punishment. Comply with copyright laws when using images captured with handset camera.

The software contained in 731SC is copy protected material; copyright, moral right, and other related rights are protected by copyright laws. Do not copy, modify, alter, disassemble, decompile, or reverse-engineer the software, and do not separate it from hardware in whole or part.

Trademarks

- Licensed by QUALCOMM Incorporated under one or more of the following United States Patents and/or their counterparts in other nations:

4,901,307	5,490,165	5,056,109	5,504,773	5,101,501
5,506,865	5,109,390	5,511,073	5,228,054	5,535,239
5,267,261	5,544,196	5,267,262	5,568,483	5,337,338
5,600,754	5,414,796	5,657,420	5,416,797	5,659,569
5,710,784	5,778,338			

- S! Mail, PC site browser, S! Addressbook Back-up, Graphic Mail, Feeling Mail and 3D Pictogram are trademarks or registered trademarks of SOFTBANK MOBILE Corp.
- "SOFTBANK", SOFTBANK's equivalent in Japanese, and the SOFTBANK logo are trademarks or registered trademarks of SOFTBANK CORP. in Japan and in other countries.
- "Yahoo!", the "Yahoo!" and "Y!" logos are trademarks or registered trademarks of Yahoo! Inc.
- This product employs NetFront Browser (Internet browser) and NetFront Messaging Client developed by ACCESS Co., Ltd.
Copyright© 2004-2009 ACCESS CO., LTD.
ACCESS and NetFront are trademarks or registered trademarks of ACCESS Co., Ltd. in Japan or other countries.
Part of the software in this product incorporates a module developed by the Independent JPEG Group.

- THIS PRODUCT IS LICENSED UNDER THE MPEG-4 VISUAL PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER FOR (i) ENCODING VIDEO IN COMPLIANCE WITH THE MPEG-4 VISUAL STANDARD ("MPEG-4 VIDEO") AND/OR (ii) DECODING MPEG-4 VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NONCOMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED BY MPEG LA TO PROVIDE MPEG-4 VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION INCLUDING THAT RELATING TO PROMOTIONAL, INTERNAL AND COMMERCIAL USES AND LICENSING MAY BE OBTAINED FROM MPEG LA, LLC. SEE [HTTP://WWW.MPEGLA.COM](http://www.mpegla.com).
- Contains Macromedia® Flash® Flash Lite™ technology by Adobe Systems Incorporated.
- Copyright© 1995-2005 Adobe Systems Incorporated. All rights reserved.
- Macromedia, Flash, Macromedia Flash, and Macromedia Flash Lite are trademarks or registered trademarks of Adobe Systems Incorporated in the United States and other countries.
- "Chaku-Uta®" and "Chaku-Uta Full®" are registered trademarks of Sony Music Entertainment Corp.
- microSD™ and microSDHC™ are trademarks of SD Association.



SAR Certification

7315C meets the technical standards of Ministry of Internal Affairs and Communications (MIC) regarding radio wave absorption by a human body.

These technical standards are established on a scientific basis to prevent radio waves emitted from wireless devices such as mobile phones that are used close to human head from affecting human health. These standards assure that the SAR (Specific Absorption Rate), an indicator of the amount of average energy absorbed in the side of a human head, must not exceed the permissive value of 2W/kg^* . This value includes a substantial safety margin designated to assure the safety of all persons, regardless of age and physical size. The value is equal to the international guideline recommended by International Commission on Non-Ionizing Radiation Protection (ICNIRP) that has a cooperative relationship with the World Health Organization (WHO).

The highest SAR value for 7315C is 0.844 W/kg . This value is obtained in accordance with the MIC testing procedure with the mobile phone transmitting at its highest permitted power level. While there may be differences in the SAR levels depending on phones, they all meet the MIC's permissible value. Because mobile phones are designed to employ the minimum power level required for the communication with the base station, the SAR of the phone during a call is usually below the maximum value.

For further information about SAR, please see the following websites:

MIC: <http://www.tele.soumu.go.jp/ele/index.htm>

ARIB: <http://www.arib-emf.org/initiation/sar.html>

* The guideline is defined by relevant laws and regulations associated with the Radio Law (No. 2 of Article 14 of Ordinance Regulating Radio Equipment).

SoftBank's Body SAR Policy

* Body SAR: The SAR value at the maximum transmission power when continuously talking with handset placed on the body and using earphone-microphone.

** Specific Absorption Rate (SAR): The value measured when having talked continuously for 6 minutes.

*** Placement on the body: Measurements are taken with the rear of handset facing the body at a distance of 1.5 cm as the ordinary handset position. In order to comply with radio frequency exposure requirements, use an accessory (e.g. belt clip, holster) that does not contain metallic parts to maintain a 1.5 cm separation between the body and handset.

For further information, see SoftBank Mobile Website:

<http://www.softbankmobile.co.jp/ja/info/public/emf/emf02.html>

European RF Exposure Information

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg and the highest SAR value for this device when tested at the ear was 0.844 W/kg*. As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user guide. In this case, the highest tested SAR value is 0.297 W/kg.

As SAR is measured utilizing the devices highest transmitting power the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network.

The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure then you can do so by limiting the length of calls or using a hands-free device to keep the mobile phone away from the head and body.

* The tests are carried out in accordance with international guidelines for testing.



Getting Started



Parts & Functions	1-2
Handset	1-2
Display Indicators	1-3
Charging Battery	1-4
AC Charger	1-4
Power On/Off	1-6
Power On	1-6
Power Off	1-6
Handling Precautions	1-6
Key Lock	1-6
Minding Mobile Manners	1-7
Manner Related Functions	1-7
Offline Mode	1-7
Manner Key	1-8
Mode Settings	1-8
Changing Mode Settings	1-9
Security Codes	1-12
Phone Password	1-12
Center Access Code	1-12
Network Password	1-13
Emergency Numbers	1-13

Parts & Functions

Handset

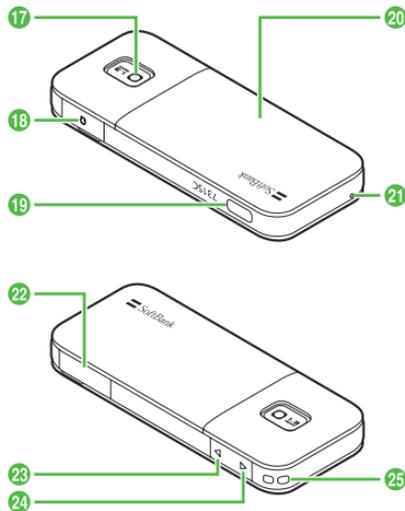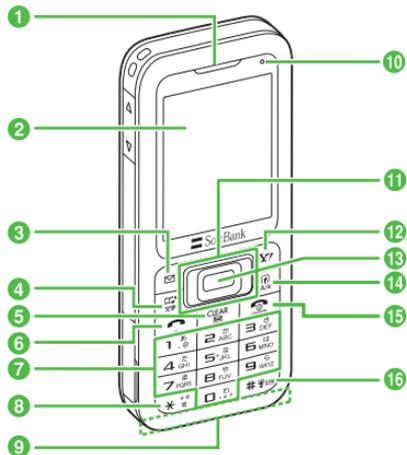

- 1 Earpiece/Speaker
- 2 Display
- 3  Mail Key/Left Softkey
Open Messaging menu or execute Left Softkey command/function.
- 4  Music/Character Key
Open Music list window or toggle text entry modes.
- 5  Clear/Back Key
Delete entered text or return to the previous operation step.
- 6  Start Key
Make and receive Voice Calls. Press on Standby to open Call log (Dialed).
- 7  -  Keypad
Enter numbers or characters and select menu items.
- 8  *  Key
Enter pictograms or press for 1+ seconds to open Manner mode settings.
- 9 Internal Antenna
- 10 External Light
Flashes for Missed Call or Incoming Call/Mail; illuminates blue while charging.
- 11    Multi Selector
Select menu items, move cursor, scroll window.
- 12  Yahoo! Keitai Key/Right Softkey
Access Mobile sites via Yahoo! Keitai main menu. Also, execute Right Softkey command/function.

- 13  Main Menu Key/Center Key
Open Main Menu or execute Center Softkey command/function.
- 14  Switch Bar Key
Open Switch Bar (P.2-3).
- 15  Power/End Key
Turn power on/off or end operations.
- 16  #/Manner Key
Enter symbols or press for 1+ seconds to activate or cancel Manner mode.
- 17 Camera
Capture images.
- 18 Earphone/Microphone Jack
Use for connecting to the earphone set (optional).
- 19 Infrared Port
Use for infrared data transmissions.
- 20 Battery Cover
Remove to access Battery or USIM/Memory Card.
- 21 Microphone
- 22 Charger/External Device Port
Connect Charger, PC, etc. here.
- 23  Side Key
Lower ringer or Media Player volume.
- 24  Side Key
Raise ringer or Media Player volume.
- 25 Strap Eyelet

• Internal Antenna

Handset transmits and receives signals via Internal Antenna. There is no external antenna. Voice quality may vary by where/how handset is used. Do not cover or place stickers, etc. over the area containing Internal Antenna.

Display Indicators



- 1  Signal Strength (more bars  indicate stronger signal)
 Out-of-Range (言語選択 set to Japanese)
Out Out-of-Range (言語選択 set to other than Japanese)
 Offline Mode
- 2  3G Network Connected
 3G Network Connected (Ready)
 3G Network Connected (In Use)
 Packet Communication Unavailable
 Voice Call in Progress
- 3  New Message
 Memory Full (S! Mail/SMS)
 Receiving Delivery report
 Downloading Content Key
- 4  Music Playback
 Music Paused

- 5  Memory Card Inserted
-  Loading Memory Card Data
-  PC Site Browser Connected
-  Software Update Required
- 6  (Blue) USB Connected
-  USB Connection
-  (Gray) Infrared Data in Transmission
-  (Red) Infrared Data Transmission Activated
-  Data Synchronized
- 7  Manner Mode
-  Drive Mode
-  Meeting Mode
-  Outdoor Mode
- 8  Battery Strong
-  Battery Moderate
-  Battery Low
-  (Flashing) Battery Weak (Charge Now)
- 9  Voice Mail/Call Forwarding (*No reply*) Activated
-  Answering Machine Activated
-  Alarm Set
-  Unheard Answering Machine Message
-  Unheard Voice Mail
-  All Keys Locked
-  Password Locked
-  Secret Mode Set

- 10  Other than *Off* for *Voice call* in *Volume*, and other than *Off* for *Voice call* in *Vibration Set*
-  Other than *Off* for *Voice call* in *Volume*, and *Off* for *Voice call* in *Vibration Set*
-  *Off* for *Voice call* in *Volume*, and other than *Off* for *Voice call* in *Vibration Set*
-  *Off* for *Voice call* in *Volume*, and *Off* for *Voice call* in *Vibration Set*


- When  (Red) appears, only Packet Communications and Outgoing S! Mail are available; Calls, Incoming S! Mail and SMS Service are all disabled.

Charging Battery

- If handset is on while Charger is connected, battery indicator shows charge level, charging as follows:  flashes when battery is fully charged. If handset is off, *Charging...* appears while charging and when battery is charged, *Battery full* appears. External Light illuminates while charging.
- An empty battery requires 150 minutes (approx.) to charge with power off. Charging time may vary by ambient temperature.


AC Charger

- 1 Open Port Cover and insert AC Charger Connector into Charger Port

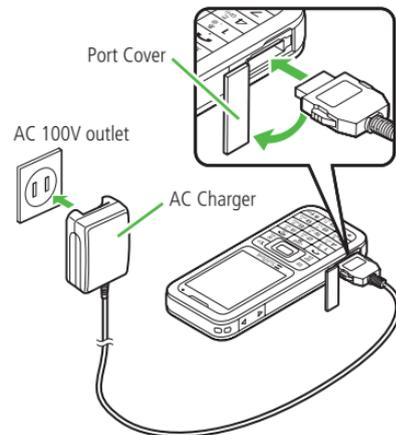

- 2 Plug AC Charger into an AC 100V outlet

3 When battery is charged, disconnect handset, close Port Cover and unplug AC Charger

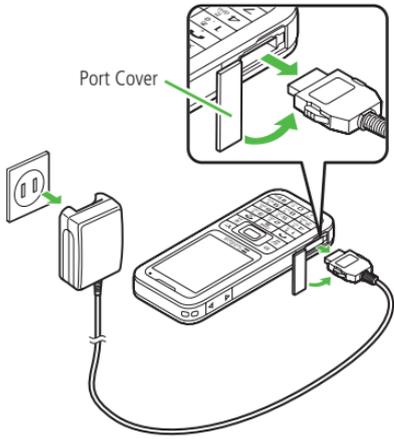

USB Charging

Connect handset to a PC via USB Cable to charge battery.

- 1** Open Port Cover and insert USB Cable Connector into Charger Port
- 2** Insert USB Plug into a PC USB port
- 3** When battery is charged, disconnect handset, close Port Cover and remove USB Plug

• USB Charging takes longer; charging time varies by PC. A weak battery may not charge via USB.

- If handset is off when initially connected to a PC, power on handset to begin charging battery.
- If install driver prompt appears upon USB connection, follow one of these steps:
 - Select *Cancel*.
 - Remove USB Plug from PC → Open <http://jp.samsungmobile.com/pc/support/download.html> → Select 731SC → Download driver via *USB Driver Installer*. To install driver, open the downloaded file and execute *Setup.exe* → Insert USB Plug into PC. Battery will charge without installing USB driver. If driver is unnecessary, select *Cancel* above.

Power On/Off

Power On

1 (1+ seconds)



Standby

Note

• Do not subject handset to strong shocks/impacts. Excessive force may cause damage.

- To confirm handset phone number, press  → . Your phone number appears in Account details. Edit or use contents (P.2-16).
- When handset is left open without operations, Display automatically shuts down to conserve power. Backlight time can be changed (P.11-12).

- The first time , ,  or  is pressed or a function requiring a network connection is activated, *Retrieve NW info* confirmation appears. Follow onscreen instructions and choose *Yes* or press .

- *Retrieve NW info* confirmation appears after replacing USIM Card or executing *All reset*.
- Retrieving Network Info sets time and date. Network Services (Messaging, Yahoo! Keitai) are available.
- Retrieve Network Info manually (P.11-19).
- This guide describes operations with time and date set unless noted otherwise.

Advanced

Settings

- Retrieve Network Information manually (P.11-19)

Power Off

1 (2+ seconds)

- SoftBank logo appears and handset powers off.

Note

• When powering off, be sure to press  for 2+ seconds.

Handling Precautions

Note these precautions when handling handset.

- Lock keys before carrying handset in a pocket.
- When carrying AC Charger, retract plug blades. Do not pull/twist power cord; doing so may damage the cord.

Key Lock

You can lock keys to prevent from malfunction when carrying handset. Set Key Lock in Standby.

1 (1+ seconds)



- When keys are locked,  appears in Standby. When any key is pressed, Unlock Keys message appears.
- While message appears, press  for 1+ seconds to cancel Key Lock.
- *Settings* → *Phone settings* → *Set Auto keypad lock to On* to lock automatically when Display backlight turns off (ⓈP.9-3).

Minding Mobile Manners

Please take care not to disturb others when using your handset.

- Turn your handset off in theaters, museums and other places where silence is the norm.
- Keep your handset off aboard airplanes, inside hospitals, or in other places where handset use is prohibited.
- Refrain from using your handset in quiet places such as restaurants, hotel lobbies or elevators.
- Observe announcements or posted instructions regarding handset use aboard trains, etc.
- Refrain from handset use that interrupts the flow of pedestrian or vehicle traffic.


Manner Related Functions

Handset offers two manner-related modes.

- **Manner mode**
Mute handset sounds and activate Vibration for all alerts, tones and alarms. Use Manner Key to activate or cancel Manner mode.
- **Offline mode**
Suspends handset transmissions. Other functions may be used. Without activating Manner mode or Offline mode, vibration and muting tones are still available independently.

Offline Mode

- 1  → *Settings* → *Call settings* → *Offline*

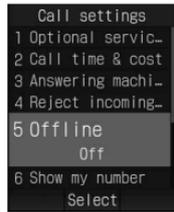

- 2 *On or Off*

- If handset powers off in Offline mode, Offline mode activation confirmation appears the next time handset powers on. Press  (No) for Normal mode.

Manner Key

Use Manner Key to toggle Manner mode. In Standby, press  for 1+ seconds to activate or cancel Manner mode. Using  to cancel Manner mode returns handset to the previous mode.

1 (1+ seconds)




- When Manner mode is active,  appears.
- Even when Manner mode is active, shutter click sounds for Camera.

Mode Settings

Handset features five modes, including Manner.

1 (1+ seconds)

2 *Normal, Manner, Drive, Meeting or Outdoor*

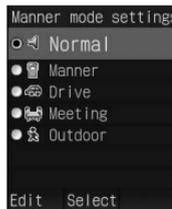

Modes

Select mode by usage; edit Normal mode or Manner mode settings as required (P.1-9).

Mode	Description
 Normal Mode*	All Sounds & Alerts settings apply
 Manner Mode	Mutes handset system sounds
 Drive Mode	Mutes ringer; plays Driving Message and activates Answer Phone for calls
 Meeting Mode	Mutes Ringtones & Keypad tones
 Outdoor Mode	Maximizes tone volume

* Normal mode indicator does not appear in Standby.

Changing Mode Settings

Change incoming transmission response by mode.

1  (1+ seconds)

2 Highlight mode →  (Edit)

3 Set items

■ To set ringtone volume

Volume → Select item to set → Use  to adjust volume →  (Play) →  (Select)

■ To set System sounds or Keypad tones

Volume → *Phone sounds* → Use  to adjust volume →  (Select)

■ To set ringtone for Voice Call

Ringtone → *Voice call* → Select a file location → Highlight a file →  (Play) →  (Select)

■ To set other ringtones

Ringtone → *Message, Missed call notification* or *Delivery report* → *Assign tone* → Select a file location → Highlight a file →  (Play) →  (Select)

■ To set message ringtone duration

Ringtone → *Message, Missed call notification* or *Delivery report* → *Duration* → Enter a time

■ To set Vibration

Vibration → Select item to set → *Off* or *Pattern 1 to Pattern 5* →  (Play) →  (Select)

■ To set Keypad tones

Phone sounds → *Keypad tones* → *Beep, Glossy* or *Off*

■ To set System sounds

Phone sounds → *System sounds* → Check item to set →  (Save)

■ To set External light

External light → *Incoming* or *Notification* → Select an item → *On/Off*

■ To set Answering machine

Answering machine → *On/Off*

- For details on items, see Mode Settings (📖P.1-10) and System Sounds (📖P.1-12).

- If *Ringtone reducer* is *On*, regardless of Ringtone volume set for Voice call, handset starts to ring at the smallest volume level, increasing the volume respectively, each of which lasts four seconds. Example: when Ringtone volume for Voice call is set to Level 4

Rings four seconds at *Level 1* → Four seconds at *Level 2* → Four seconds at *Level 3* → Keep ringing at *Level 4*

- Use / to adjust ringtone volume while handset rings.
- To mute Voice Call or Message tones, set *Volume* and *Vibration* to *Off*. 🚫 appears.
- Open *Sounds & Alerts* to change sounds for Normal mode. Settings cannot be changed for other modes.

Mode Settings

Available items vary by mode. Defaults are as listed below.

Item \ Mode	Normal	Manner	Drive	Meeting	Outdoor
Volume					
Voice call	Level 3	N/A	N/A	Off	Level 5
Message	Level 3	N/A	N/A	Off	Level 5
Missed call notification	Level 3	N/A	N/A	Off	Level 5
Delivery report	Level 3	N/A	N/A	Off	Level 5
Phone sounds	Level 3	N/A	N/A	Off	Level 5
Ringtone (Upper: Assign tone, Lower: Duration)					
Voice call	Samsung Tune.mp4 N/A	N/A	N/A	Samsung Tune.mp4 N/A	Samsung Tune.mp4 N/A
Message	Samsung Tune.mp4 5 seconds	N/A	N/A	Samsung Tune.mp4 5 seconds	Samsung Tune.mp4 5 seconds
Missed call notification	BusinessTone.mp4 5 seconds	N/A	N/A	BusinessTone.mp4 5 seconds	BusinessTone.mp4 5 seconds
Delivery report	BusinessTone.mp4 5 seconds	N/A	N/A	BusinessTone.mp4 5 seconds	BusinessTone.mp4 5 seconds
Vibration					
Voice call	Off	Pattern 1	N/A	Off	Off
Message	Off	Pattern 1	N/A	Off	Off
Missed call notification	Off	Pattern 1	N/A	Off	Off
Delivery report	Off	Pattern 1	N/A	Off	Off

Item \ Mode	Normal	Manner	Drive	Meeting	Outdoor
Phone sounds/System sounds ¹					
Keypad tones	Off	N/A	N/A	Off	Off
System sounds	Several tones on	Alerts on call	N/A	Alerts on call	Several tones on
External light					
Incoming					
Voice call	On	On	On	On	On
Message	On	On	On	On	On
Missed call notification	On	On	On	On	On
Delivery report	Off	Off	Off	Off	Off
Notification					
Missed call	On	On	On	On	On
Message	On	On	On	On	On
Answering Machine	On	On	On	On	On
Missed call notification	On	On	On	On	On
Missed alarm	On	On	On	On	On
Delivery report	On	On	On	On	On
Answering machine	Off	On	N/A ²	Off	Off

1 In Manner Mode, Phone sounds are not available.

2 Answering machine activates automatically in Drive mode and cannot be disabled.

System Sounds

Available items vary by mode. Volume level set in *System sounds* applies to all Phone sounds.

Item	Description
All	Check/uncheck all items.
Popup box alerts	Sounds for confirmations/warnings.
Minute minder	Sounds about once a minute during calls.
Call connect tone	Sounds before called phone rings to notify the call is going to be connected.
Call end tone	Sounds when a call ends.
Power on	Sounds when the power is turned on.
Power off	Sounds when power is turned off.
Alerts on call	Sounds for alarms/incoming transmissions during a call.

Advanced

Settings

- Adjust volume (☞ P.11-11)
- Set Ringtone for Voice Call (☞ P.11-11)
- Set ringtone other than Voice Call (☞ P.11-11)
- Set ringtone duration other than Voice Call (☞ P.11-11)
- Set Vibration (☞ P.11-11)
- Set Keypad tones (☞ P.11-11)
- Set system sounds (☞ P.11-11)
- Illuminate External Light for incoming transmissions (☞ P.11-11)
- Illuminate External Light for missed calls (☞ P.11-11)
- Activate or cancel Offline mode (☞ P.11-18)
- Activate or cancel automatic ringer reduction (☞ P.11-19)
- Change mode (☞ P.11-19)

Security Codes

Phone Password, Center Access Code and Network Password are required to use handset.

Phone Password

The 4-digit number (9999 by default) is required to operate/change some handset functions.

- Entered Phone Password digits are represented with *.
- If incorrect, an error message appears. Try again.
- Phone Password can be changed on handset (☞ P.9-2).

Center Access Code

4-digit number specified at subscription; required to change service subscriptions or to operate Optional Services from landlines.

Network Password

4-digit number specified at subscription, required to restrict handset services. Entering incorrect Network Password 3 consecutive times locks Call Barring settings. To resolve, Network Password and Center Access Code must be changed. For details, contact Customer Service (☎P.12-25).

- Network Password can be changed on handset (☎P.3-14).

Note

- **Write down Phone Password, Center Access Code and Network Password. If you lose a code, contact Customer Service (☎P.12-25).**
- **Do not reveal Phone Password, Center Access Code or Network Password to others. SoftBank is not liable for damage caused by misuse of these codes by others.**

Emergency Numbers

Call 110 (Police), 119 (Fire & Ambulance) or 118 (Maritime Safety Agency). These numbers can be dialed even when certain Call Barring settings are active. See details below.

Handset Status	Emergency Numbers
Offline mode activated (☎P.1-7)	None
Call Cost limit exceeded	110, 119, 118
Phone lock activated (☎P.9-3)	None
Password lock activated (☎P.9-4)	110, 119, 118
Required PIN not entered (☎P.9-2)	None
USIM Card not be authenticated (☎P.9-3)	None
Outgoing Call Barring activated (☎P.3-12)	110, 119, 118

Emergency Location Report

When calls are placed to Police or other emergency agencies from handset, handset location information is automatically sent to the corresponding agency.

Handset transmits location based on base station positioning information.

- Location accuracy may vary by geography or signal conditions. Always verify your location with address or nearby landmark.
- Base station positioning accuracy ranges from several hundred meters to 10 kilometers. This information may differ from actual location due to distance of the closest base station location.
- This function is only available if the agency receiving an emergency call has implemented infrastructure for receiving location information.
- If you hide Caller ID by dialing 184 before calling an emergency number, your location information is not sent. However, authorities may access this information when necessary.
- No subscription/communication fee required.

Basic Operations



Selecting Functions	2-2	Account Details	2-16
Selecting Functions from Main Menu	2-2	Data Folder	2-16
Using Shortcuts in Standby	2-3	Default Folders	2-16
Selecting Functions with Switch Bar	2-3	Viewing Files	2-17
Common Operations	2-4	Viewing Images with Picture Browser	2-18
Menu Options	2-4	Managing Files/Folders	2-19
Selecting/Canceling Multiple Items	2-4	Creating Folders	2-19
Standby Display Options	2-4	Renaming File/Folder	2-19
Wallpaper	2-4	Moving Files/Folders	2-19
Text Entry	2-5	Copying Files/Folders	2-20
Text Entry Window	2-5	Deleting Files/Folders	2-20
Changing Entry Mode	2-5	Memory Card	2-22
Text Entry Method	2-6	Precautions	2-22
Hiragana/Kanji	2-6	Inserting & Removing	2-22
Katakana, Alphanumerics and Numbers	2-7	Viewing Memory Status	2-24
Symbols	2-7	Advanced Settings	
Pictograms and Emoticons	2-8	Basic Operations	2-25
Line Breaks	2-8	Text Entry	2-25
Hangul	2-8	User's Dictionary	2-26
Deleting & Editing Text	2-9	Phonebook	2-26
User's Dictionary	2-9	Account Details	2-29
Saving to User's Dictionary	2-10	Viewing Files	2-30
Phonebook	2-10	File/Folder Management	2-31
Phonebook Entry Items	2-10	Memory Status	2-33
Phonebook Entry Tabs	2-12		
Creating New Entries	2-12		
Saving from Call Log Records	2-13		
Using Phonebook	2-14		
Searching Phonebook	2-14		
Calling from Phonebook	2-14		
Deleting Phonebook Entries	2-15		

Selecting Functions

Selecting Functions from Main Menu

1 In Standby,



Main Menu

2 Highlight an item →


(Select)

3 Repeat Step 2 to select target function


Example: Selecting *Wallpaper*




Highlight *Settings*
→  (Select)

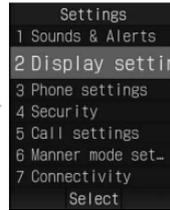

Highlight *Display settings*
→  (Select)

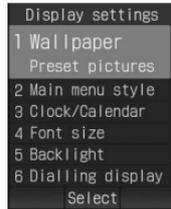

Highlight *Wallpaper*
→  (Select)

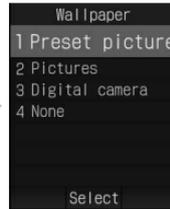

Wallpaper setting window appears

- Press  to exit menu. Handset returns to Standby. If multiple functions are active, active window appears.
- Press  to cancel menu. Handset returns to Standby or previous window. In some menus, a confirmation appears.
- When numbered items appear in menu or list window, use Keypad to select an item.

Using Shortcuts in Standby

Key	Corresponding Menu/Function
	Open Messaging menu
 (1+ seconds)	Open Create Message window
	Open Yahoo! Keitai Main Menu
 (1+ seconds)	Open Yahoo! Keitai menu
	Open Music list window
 (1+ seconds)	Open Media Player music window
	Activate Switch Bar
	Open Calendar
	Open Phonebook list
 (1+ seconds)	Open Phonebook Entry window
	Open Call log (Received)
	Open Call log (Dialed)
	Open Recordings list
 (1+ seconds)	Toggle Answering Machine On/Off
 (1+ seconds)	Open Manner mode setting window
 (1+ seconds)	Toggle Manner mode On/Off

Selecting Functions with Switch Bar

Select Call, Messaging, Yahoo! Keitai or Media Player. Use multiple functions at the same time (e.g. listen to music while messaging or talk to a friend or colleague while browsing Internet sites).

1 In Standby or active function,



2 Use to highlight an item

→ (Select)



- To exit a function, show it and press .
- To exit all, highlight at the Switch Bar and press (Yes).

- When exiting all, confirmation may appear for some functions; choose *Yes* or *No*.
- Activate other functions while creating a message. After exiting all, Create Message window appears.

Advanced

P.2-25

Common Operations

Menu Options

When *Menu* appears as Right Softkey label, press  to open Menu. To execute an item, highlight it and press  (Select).

Selecting/Canceling Multiple Items

Press  (Mark all) or  (Unmark all) to check/uncheck all items to delete or move.

- Available operations vary by function.
- Enter Phone Password to delete multiple items.

Standby Display Options

Wallpaper

Set still image to appear in Standby. Alternatively, hide still image.

- 1  → *Settings* → *Display settings* → *Wallpaper*



- 2 **Set Wallpaper**

■ To set an image in Data Folder

Select a folder → Select a file →  (Set)

■ To set none

None

Advanced


Settings

- Change Wallpaper ( P.11-12)
- Set Menu style ( P.11-12)
- Set Standby Display appearance ( P.11-12)
- Change font size for menu list ( P.11-12)
- Adjust Display brightness ( P.11-12)
- Set Dialing window font type ( P.11-12)
- Set Dialing window font size ( P.11-12)
- Set Dialing window font color ( P.11-12)
- Set Dialing window background color ( P.11-13)
- Set Operator name ( P.11-13)
- Change user interface language ( P.11-13)
- Set Time zone updating ( P.11-13)
- Change Home time zone ( P.11-13)
- Activate or cancel Daylight savings time adjustment ( P.11-13)
- Set time ( P.11-13)
- Set AM/PM (when Time format is set to 12H) ( P.11-13)
- Set date ( P.11-13)
- Change Time format ( P.11-13)
- Change Date format ( P.11-13)

Text Entry


Enter Kanji, Hiragana, Katakana (single-/double-byte), alphanumerics (single-/double-byte), symbols (single-/double-byte), pictograms, emoticons or Hangul.

Text Entry Window

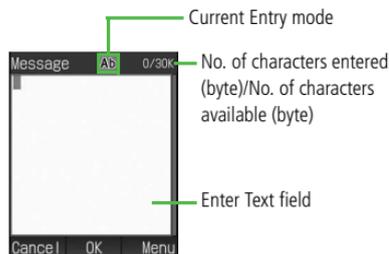

Icon	Entry Mode	Icon	Entry Mode
	Kanji or Hiragana		Symbols (double-byte)
	Katakana (double-byte)		Symbols (single-byte)
	Katakana (single-byte)		Pictograms
	Alphanumeric (double-byte)		Emoticons

Icon	Entry Mode	Icon	Entry Mode
	Alphanumeric (single-byte)		Hangul
	Number (double-byte)		Alphanumeric (double-byte, lower case)
	Number (single-byte)		Alphanumeric (single-byte, lower case)

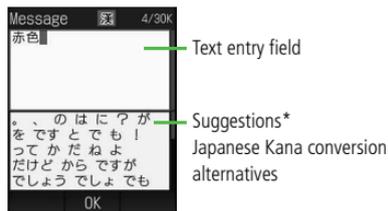

* Suggestions do not appear in Katakana, alphanumeric, and number input modes. If Prediction entry function is canceled, suggestions appear when characters are converted with (Convert) or (EngNumカナ) in Kanji/Katakana input mode.

- When Voice Call arrives while entering text, simply answer the call. When the call ends, text entry window returns. When Alarm is activated, end Alarm to return to text entry window.
- For Date field in Day and Time or Time field in Alarm which can only enter numbers, text entry window does not appear. Enter numbers directly in Entry field.

Changing Entry Mode

1 In text entry window,

2 Select entry mode to switch



- In text entry window, press for Symbols, to toggle Pictograms and Emoticons.
- Text entry modes may be limited by status.

Text Entry Method

Hiragana/Kanji

Use predictive entry to convert and enter characters. Alternatively, convert entered hiragana directly. Katakana or pictograms may appear in Suggestions.

Example: Enter "鈴木"

1 In text entry window, 

2 漢かな

3  (3 times)

- "す" is entered.

4  →  (3 times) →



- "ず" is entered.

5  (twice)

- "き" is entered.

6 



7 Highlight "鈴木" from Suggestions →  (Select)

- After entering hiragana, press  to add " or .

- After entering hiragana, press  for small kana.

- Press  to cancel a misentry.

- If you over-toggle target character, press  to toggle in reverse.

- To enter same character continuously, press  to move the cursor to the right.

- To set as Hiragana, after entering hiragana, press  (Select).

- If no suggestions appear, press  (Convert) → Use  to change the range for conversion as required → Use  to move cursor to Suggestions → Highlight the target conversion alternatives →  (Select) → Repeat the steps for other characters.

- When conversion fails, try another reading. When multiple Kanji characters do not convert together, try to convert them separately.

- While Suggestions appear, press  (Convert) for conversion alternatives. While conversion alternatives appear, press  (Predict) to return to Suggestions.

Katakana, Alphanumerics and Numbers

1 In text entry window,

2 Select entry mode

3 Enter text

- After entering katakana, press  to add * or .
- After entering katakana, press  to toggle case.
- Press  in alphanumerics entry mode to toggle  or ; enter same size/case characters without further mode change. After entering alphanumerics, press  to toggle case.
- Press  to cancel a misentry.
- If you over-toggle target character, press  to toggle in reverse.
- To enter same character continuously, press  to move the cursor to the right.
- In Kanji/Kana entry mode, enter characters and press  (EngNumカナ) to toggle katakana/alphanumerics/numbers entry mode. Example: Enter " < も " and press  (EngNumカナ). クモ, C, or 2227777 appears in Suggestions.

Symbols

1 In text entry window,

- Press  or  (Next page) until the target symbol appears.

2 Highlight target character in Suggestions → (Select)



- To enter symbols continuously, press  (Continue) instead of .

- Once entered double-byte symbols remain in history and appear in Suggestions at first. Press  to toggle Suggestions: double-byte symbol logs → double-byte symbols → single-byte symbols. In single-byte katakana, single-byte alphanumerics, single-byte numbers or Hangul entry mode, Suggestions appear: double-byte logs → single-byte symbols → double-byte symbols.

- In Kanji/Kana entry mode, enter characters and press  (Convert) to convert to symbols. Example: Enter " ㇏ " and press  (Convert), · or … appear among Suggestions.

Pictograms and Emoticons

1 In text entry window, 

2 Highlight target character in Suggestions →  (Select)



- To enter additional pictograms or emoticons, press  (Continue) instead of  (Select).

- Once entered pictograms remain as history and appear in Suggestions at first. Pressing  switches Suggestions between pictogram logs → pictograms → emoticons.
- In Kanji/Kana entry mode, enter "はーと", "でんわ" to switch to pictograms. Similarly, "わーい" or "えーん" can be converted to emoticons.

Line Breaks

Use these steps to enter Line break in any entry mode.

1 In text entry window, 

2 Select line break symbol and press  (Select)



- Alternatively, press .

- In some entry windows, line break cannot be inserted.

Hangul

1 In text entry window,  →

Hangul



2 Enter characters

- Press number keys to enter assigned character units that appear; combine several consonants and vowels.

Consonant Example (Key assignment)	
ㄱ	(once)
ㅋ	(twice)
ㆁ	(3 times)
Vowel Example (Key assignment)	
아	(ㅣ), (ㅏ)
어	(ㅓ), (ㅣ)
오	(ㅗ), (ㅓ)
야	
여	
요	
와	(ㅓ), (ㅓ), (ㅣ),
	(ㅓ), (ㅣ)

- Hangul appears in received S! Mail, however Hangul cannot be entered into an S! Mail message.

Deleting & Editing Text

- 1 Use to move cursor to character to delete, and



- When a space is highlighted, the character before cursor is deleted.
- To delete all characters after the cursor, press for 1+ seconds. If there is no character after the cursor, all characters are deleted.

Advanced

Advanced Settings (☞ P.2-25)

- Deleting Text Template
- Specify Range to Copy/Cut
- Pasting Copied or Cut Text
- Undoing Text Entry
- Jump to Top/End


Settings

- Change font size for text entry window (☞ P.11-12)
- Reset entry history to default (☞ P.11-14)

User's Dictionary

Save frequently used words/phrases of up to 20 characters; entries appear in Suggestions when Reading is entered.

- 1 → *Settings* → *Phone settings* → *User's dictionary* → *New entry*
- 2 Select **Word** field → Enter word or sentence
- 3 Select **Reading** field → Enter reading

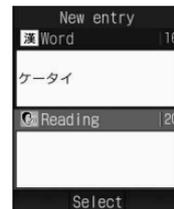

- 4 (Save)

Saving to User's Dictionary

1 In text entry window,  → *Add to dictionary*

2 Use  to move cursor to the first letter of adding character, and  (Start)

- Press  (UserDic) to open User's Dictionary menu and view added entries.

3 Use  to select the range →  (End)



4 Select Reading field → Enter text

5  (Save)

- If selected range includes a line break, character string before the line break is saved.

- Press  and select *Edit entry* in Step 2 to view currently saved word list.

Advanced

 **Advanced Settings** (☎ P.2-26)

- Setting & Canceling Prediction Entry Function

 **Settings**

- Save entries to User's Dictionary (☎ P.11-13)
- Edit User's Dictionary entries (☎ P.11-13)
- Delete User's Dictionary entries (☎ P.11-14)
- Reset entry history to default (☎ P.11-14)

Phonebook

Phonebook Entry Items

Create up to 1,000 entries. The number of items that can be saved varies by USIM Card. Insert USIM Card into compatible SoftBank handsets to use USIM Card Phonebook entries.

Each Phonebook entry contains items listed below.

Item/Description	Location
Last name	
Double/single-byte (Saved as "Name" in USIM Card Phonebook)	731SC: Yes (up to 50 byte)
	USIM Card: Yes ¹
First name	
Double/single-byte (Saved as "Name" in USIM Card Phonebook)	731SC: Yes (up to 50-byte)
	USIM Card: Yes ¹
Reading last name	
Single-byte (Saved as "Reading name" in USIM Card Phonebook)	731SC: Yes (up to 50-byte)
	USIM Card: Yes ¹

Item/Description	Location
Reading first name	
Single-byte (Saved as "Reading name" in USIM Card Phonebook)	731SC: Yes (up to 50-byte) USIM Card: Yes ¹
Add phone number	
Saved along with area code	731SC: Yes (5 entries/up to 32-byte) USIM Card: Yes ^{1,2}
Phone icon	
Select one of seven icons	731SC: Yes USIM Card: No (1 icon)
Add E-mail address	
Single-byte alphanumerics	731SC: Yes (5 entries/up to 128-byte) USIM Card: Yes ¹ (1 entry)
E-mail address icon	
Select one of four icons	731SC: Yes USIM Card: No (1 icon)

Item/Description	Location
Picture	
Still image appears for incoming calls Select a Data Folder image or capture with Camera	731SC: Yes USIM Card: No
Ringtone settings	
Voice Call/Messages Selectable from Data Folder	731SC: Yes USIM Card: No
Vibration settings	
Set vibration for all incoming calls/mails	731SC: Yes USIM Card: No
Group	
Select from 21 groups	731SC: Yes USIM Card: Yes ²
Secret mode	
On/Off	731SC: Yes USIM Card: No

Item/Description	Location
Birthday	
Date of birth	731SC: Yes USIM Card: No
Blood type	
Select one of four types	731SC: Yes USIM Card: No
Hobby	
Enter up to 100 bytes	731SC: Yes USIM Card: No
Company	
Enter up to 64 bytes	731SC: Yes USIM Card: No
Job title	
Enter up to 64-byte	731SC: Yes USIM Card: No
Add address	
Post code (40 bytes), Country (64 bytes), Province, City, Street and Additional information (128 bytes)	731SC: Yes (2 entries) USIM Card: No

Item/Description	Location
Add homepage	
Enter up to 1,024 bytes	731SC: Yes (2 entries)
	USIM Card: No
Homepage icon	
Select one of three icons	731SC: Yes
	USIM Card: No
Memo	
Enter up to 512-byte	731SC: Yes
	USIM Card: No

- 1 Number of savable characters varies by USIM Card type.
- 2 Number of savable items varies by USIM Card type.

- When using Phonebook entries for the first time after replacing USIM Card with Phonebook entries registered, a confirmation appears; choose *Yes* to copy USIM Card entries to 731SC.


Note

- **Protect important information**
Phonebook entries may be lost/alterd if battery is removed or left uncharged for an extended period; accidents/malfunctions may also affect entries. Back-up entries and store separately. SoftBank is not liable for damage from lost information.

Phonebook Entry Tabs

Phonebook entry information is divided into three tabs. Toggle Tabs to view desired information.

- 1  → Search Phonebook and select entry (P.2-14) → Use  to switch tabs

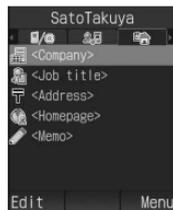

Creating New Entries

Default data location for Phonebook is *Phone*. Set it to USIM Card as required (P.11-10).



Entry Details

Example: Creating a new entry and saving Name, Reading, Phone Number and E-mail Address.

- For other items, see "Adding Information to Phonebook Entry" (P.2-26).

- 1  →  (New)
- 2 Select Last name field → Enter last name
- 3 Select First name field → Enter first name
- 4 Select Reading last name field → Edit as required

- 5 Select Reading first name field → Edit as required
- 6 Select Phone number field → Enter number → Select an icon
- 7 Select E-mail address field → Enter mail address → Select an icon
- 8  (Save)

• Valid Phone Field Characters

- Enter 0 through 9, #, *, -, P (Pause) and + (International Code). Press  to toggle *, - and P. Press  for 1+ seconds to enter +.
- If a Memory Card file is selected for Incoming Image or Ringtone, copy file to 7315C confirmation appears. For a copy protected file, move confirmation appears. Choose *Yes* to complete setting.

Saving from Call Log Records

Save numbers from Call Log records to new or existing Phonebook entries.

- 1  (Received calls) or  (Dialed calls)
- 2 Highlight an entry →  → *Add to Phonebook*
- 3 Select saving method
 - To save as a new entry
New
 - To update existing entry
Update → Search and select an entry (⊕P.2-14)
- 4 To enter each item, follow Steps 2 to 8 in "Creating New Entries" (⊕P.2-12)

Advanced

Advanced Settings (ⓘ P.2-26)

- Entering E-mail Address & URL to Phonebook Quickly
- Creating Message from Phonebook
- Adding Phonebook Entry to Speed Dial
- New Group (USIM Card)
- Adding Member to Group
- Removing Member from Group
- Showing or Hiding Caller ID
- Sending Phonebook as vFile
- Creating and Saving vFiles
- Copying Entries between Phone & USIM
- Copying Items
- Setting Default Phone Number or Mail Address
- Viewing USIM Card Service Number
- Canceling Phonebook Secret Mode Temporarily
- Checking Memory Status
- Enter and Save Phone Number
- Renaming Group


Settings

- Select Phonebook Save Location (ⓘ P.11-10)
- Change Phonebook preference (Phone/USIM) (ⓘ P.11-10)
- Change Search Method (ⓘ P.11-10)
- Backup Phonebook entries (ⓘ P.11-10)
- Change Phonebook font size (ⓘ P.11-10)
- Change font size for Phonebook (ⓘ P.11-12)
- Activate or cancel Simple Search (ⓘ P.11-14)

Using Phonebook

Searching Phonebook

Example: Using A-ka-sa-ta-na search

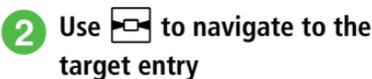

Phonebook List

- To change search method, in Phonebook list, press → *Settings* → *Search method*. The changed settings are saved.
- Alternatively, enter name in abc field (first few letters) to search.




- For details, press (Details/Select).

- In *Security*, if *Secret mode* is set to *Hide*, secret Phonebook entries do not appear. In Phonebook search window, press → *Unlock temporarily* → Enter Phone Password → (OK) to see secret entries.


Changing Search Method

In Standby, press to open the specified search window.

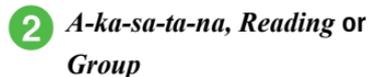

- For *A-ka-sa-ta-na*, press in Standby to open a list. When selecting other settings, the selected search window appears.

Calling from Phonebook

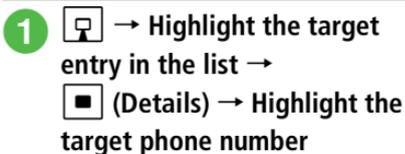

Entry Details



- To make a Voice Call

(Call) → *Voice call*

- To make an international call

(Call) → *International call*
 (P.3-15 Making International Calls from Japan)

- Alternatively, highlight the target entry in the list and press , select *Call*, then select *Voice call* or *International call*. When entry contains multiple numbers, *Default number* is dialed if set; otherwise, first number listed is dialed. If *Default number* is *Not assigned*, Call window appears; select a number.

• Calling from Simple Search or search result

If *Simple search* (P.11-14) is *On*, press number key to search entry starting with corresponding Reading. Name and phone number appears. Highlight phone number and press , or  (Select) and then  (Call) for Voice Call.

• Calling from phone number search or search result

Enter four digits to search for entry beginning or ending with those digits. Entry name and phone number appear. If *Simple search* is *On*, press  to toggle Phone Number search and Simple Search. Highlight number and press , or  (Select) and then  (Call) for Voice Call.

Deleting Phonebook Entries

Deleting an Entry

-  → Highlight an entry to delete in the list
-  → *Delete* → *Selected* → *Yes*

- To delete from details, after Step 1, select  (Details) →  → *Delete* → *Yes*.

Deleting Multiple Entries

- 
-  → *Delete* → *Multiple*
- Check entries
- Press  (Delete) → *Yes*

Deleting All Entries

Delete all Phonebook entries saved in 7315C or USIM Card at once.

- 
-  → *Delete* → *All*
- Enter Phone Password →  (OK) → *Yes*

Account Details

View handset phone number in USIM Card. Add your name, mail address, street address and other information.



- Alternatively, in Standby, press → *Phonebook* → *Account details*.

Advanced

Advanced Settings (P.2-29)

- Sending Account Details as vFile
- Resetting Account Details
- Creating vFile and Save in Data Folder
- Copying Item in Account Details


Data Folder

Organize handset files by file type here.

Default Folders

Data Folder contains 7 default folders. Files created with handset functions or acquired via infrared, Internet or Mail are saved to appropriate folder by the file type/format.

Create additional folders within default folders.

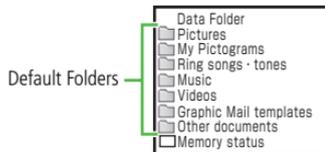

Folder/Description	File Type ¹
Pictures	
Image files captured with handset Camera	JPEG, BMP, GIF, WBMP, PNG, Animation GIF
Digital camera	
Still images captured with handset Camera (Insert Memory Card)	JPEG
My Pictograms	
Pictograms downloaded, or received via infrared or message	GIF, GPK
Ring songs · tones	
Melody files downloaded, or received via infrared or message, or files recorded with Voice Recorder	SMAF, MIDI, SMF, Mobile XMF, MPEG4 Audio, AMR
Music	
Chaku-Uta Full [®] downloaded, or received via infrared or message	MPEG4 Audio (mp4, m4a, aac, 3gp)
Videos	
Handset video files	MPEG4 (mp4, 3gp), H.263

Folder/Description	File Type ¹
Graphic Mail templates	
Created S! Mail Templates	HMT
Other documents	
Document or graphic files requiring File Viewer for use on handset, vFiles ² , etc.	vCard, vCalendar, vBookmark, EML, PDF, XLS, DOC, PPT, TXT, Unsupported file

- Files are saved by type. Files cannot be moved to or saved in folders that do not support them.
- Use vFiles to send or transfer handset files via S! Mail, etc. handset supports vCard (.vcf) for Phonebook entries, vCalendar (.vcs) for Task/Schedule, and vBookmark (.vbm) for Bookmarks.

- Save up to 999 files/folders in each default folder.
- In a folder, use *Memory status* to confirm memory. Alternatively, confirm memory in *Settings* (⌚P.2-24).
- In Data Folder, press (Memory) to open Memory Card Data Folder. Press (Phone) to return to 7315C Data Folder.
- appears in some folders as Downloaded Site shortcut. Select the link to access site via Yahoo! Keitai.

Viewing Files

- **Data Folder**
- Select a folder
- Highlight a file → (**View, Play, Select or Start**)

File List Indicators

- : Nontransferable
- : Nontransferable and unusable
- : Copy Protected File (Transferable, Content Key Valid)
- : Copy Protected File (Transferable, Content Key Expired)
- : Copy Protected File (Nontransferable, Content Key Valid)
- : Copy Protected File (Nontransferable, Content Key Expired)
- : Protected
- : Set as Wallpaper (⌚P.2-32)
- : Set as Ringtone (⌚P.2-32)

• Activating Camera or Voice Recorder from Data Folder

Highlight *Pictures* folder or image, press  and select *Take photo* to activate Camera in Camera mode. Similarly, highlight *Videos* or video in *Videos*, press  and select *Record video* to activate Camera in Video mode. Highlight *Ring songs · tones* or sound file in *Ring songs · tones*, press  and select *Record sound* to activate Voice recorder.

Note

• JPEG Files over 3 MB or larger than 5000 x 5000 pixels cannot be zoomed or set as Incoming image. For other formats, files over 1.3 MB or larger than 1600 x 1600 pixels cannot be zoomed.

Viewing Images with Picture Browser

View images in Normal or Full Screen View.
Landscape images rotate for Full Screen View.



Normal View



Full Screen View

- 1  → *Data Folder*
- 2 *Pictures*
- 3 Highlight file in the list →  (*View*)
 - Press  (*FULL*) to view in Full Screen View.
 - Press  to return to Normal View.
- 4 Use  to move image

• Some images may not be displayable.


Sorting Images

Choose sorting rule from the following:

- By Folder
- By Composition
- By Color
- By Timeline

- 1 View images (⊕ Viewing Images with Picture Browser).
- 2 Use  to select sorting rule

Advanced

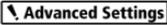 **Advanced Settings** (P.2-30)

- Viewing Slide Show
- Confirming File/Folder Details

Managing Files/Folders

Creating Folders

Create sub-folder in Default folders.
Use *Set secret* to hide created folder.

- 1  → *Data Folder*
- 2 Select default folder to create a sub-folder
- 3  → *Manage* → *Create folder*
- 4 Enter name

- New folder cannot be created in a created folder.
- Activate *Secret data folder of Security* to see secret folders.

Renaming File/Folder

- 1  → *Data Folder*
- 2 Select default folder → Highlight file or sub-folder to rename
- 3  → *Manage* → *Rename or Rename folder*
- 4 Enter a new name
 - To rename Graphic Mail template, Select *Rename* and enter name.

- Protected files cannot be renamed.

Moving Files/Folders

When Memory Card is inserted, move files or folders between 7315C (Phone) and Memory Card.

- 1  → *Data Folder*
- 2 Select default folder → Highlight a file or sub-folder
- 3  → *Move*
- 4 Move files/folders
 - To move a file/folder
Selected
 - To move multiple files/folders
Multiple → Check files or sub-folders to move →  (Move)
 - To move all files/sub-folders in the same folder
All
- 5 Select a destination folder → *Move here*
 - When Memory Card is inserted, select *Phone* or *Memory card*, then select a destination folder.

- Protected files cannot be moved.
- If target file/folder with the same name exists, text entry window appears; edit file/folder name.
- When moving a file set for Wallpaper or Ringtone to Memory Card, a confirmation appears. Choose *Yes* to release the setting and move the file. When moving multiple or all files, choose *No* to move only files without set functions. Press  to cancel moving.

Note

- Downloaded files may not appear/play properly if moved to another device or when a different USIM Card is inserted in handset.
- Nontransferable and unusable files (, protected files (), or nontransferable and Copy protected files (, ) cannot be moved to Memory Card.

Copying Files/Folders

Copy a file or folder and paste in the same or another folder. When Memory Card is inserted, copy folders between 7315C and Memory Card.

- 1  → *Data Folder* → Select a folder

- 2 Highlight file or folder to copy →  → *Copy* or *Copy folder*

- 3 Copy files/folders

■ To copy a file/folder

Selected

■ To copy multiple files/folders

Multiple → Check files/folders to copy →  (Copy)

■ To move all files/folders in the same folder

All

- 4 Select a destination folder → *Paste here*

- When Memory Card is inserted, select *Phone* or *Memory card*, then select a folder.

- When pasting files/folders in the same location as the original, numbers such as "_001" are automatically added to pasted file/folder names.
- When target file/folder with the same name exists, edit the name of the file/folder. Text entry window appears to enter new name.

Note

- Nontransferable files cannot be copied.

Deleting Files/Folders

Deleting Files

- 1  → *Data Folder* → Select a folder
- 2 Highlight a file in the list →  → *Delete*
- 3 Delete files
 - To delete a file
Selected → *Yes*
 - To delete multiple files
Multiple → Check files to delete →  (Delete) → *Yes*
 - To move all files in the same folder
All → Enter Phone Password →  (OK) → *Yes*

- When deleting a file that is set to a function, protected, or copy protected, a confirmation appears. Choose *Yes* to cancel the setting and delete the file. When deleting multiple files, choose *No* to delete only files not set to functions and unprotected files.
- When deleting files with Content Key, a confirmation appears. Choose *Yes* to delete both file and Content Key.

Deleting Created Sub-folders

- 1  → *Data Folder*
- 2 **Select default folder** → **Select created sub-folder** →  → *Delete folder*
- 3 **Enter Phone Password** →  **(OK)** → *Yes*
 - Enter Phone Password only when the file is saved in sub-folder.

- When deleting a file that is set to a function, protected, or copy protected, a confirmation appears. Choose *Yes* to cancel setting and delete the file. Choose *No* to delete only files not set to functions and unprotected files; folders are unchanged.
- When a file in the folder has Content Key, a confirmation appears. Choose *Yes* to delete both the file and Content Key.

Advanced

 **Advanced Settings**  P.2-31

- Sending Files
- Selecting Folder List
- Sorting Files
- Canceling Secret Setting Temporarily
- Activating Camera Mode
- Activating Video Mode
- Recording Sound
- Setting & Canceling File Lock
- Setting Secret in Sub-folder

Memory Card

Handset is compatible with microSD™ and microSDHC™ Memory Card. Purchase microSD™ or microSDHC™ Memory Card to use Memory Card-related handset functions.

- SoftBank recommends 64 MB, 128 MB, 256 MB, 512 MB, 1 GB, 2 GB, or 4* GB cards.
- * For microSDHC™ Memory Card only.

Note

- **Protect important information**
Memory Card files may be lost or damaged by accident or malfunction. Back-up entries and store separately. SoftBank is not liable for damage from lost or altered information.
- **Memory Cards do not have Write Protection Switch.** There is a risk of accidental erasure or overwriting of files.

Precautions

Note the following precautions.


- Use only recommended Memory Card. Other Memory Cards may not perform properly.
- Do not place labels or stickers on Memory Card. These items may affect card performance or result in lost information.
- Never disassemble or modify a Memory Card.
- Do not subject Memory Card to strong impacts, pressure or liquids.
- Do not touch Memory Card terminals or expose them to metal objects.
- Keep Memory Card away from dust, high humidity, or excessive heat.
- Do not use in the presence of corrosive gases.
- Avoid heat sources and do not dispose of in fire.
- Memory Card is a consumable item. Card performance deteriorates with usage.

Inserting & Removing


Turn handset power off before inserting or removing a Memory Card.

Inserting


- 1 Remove Battery (☞P.12-3)
- 2 Slide Memory Card holder and lift up as shown

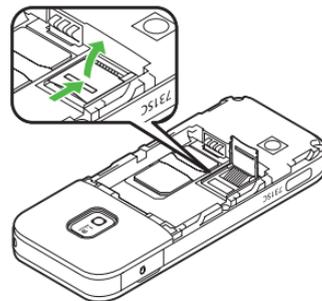

- 3** With contacts down, insert Memory Card to Memory Card tray

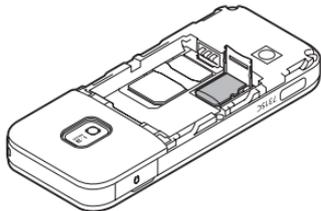


- 4** Replace Memory Card holder and slide to lock as shown

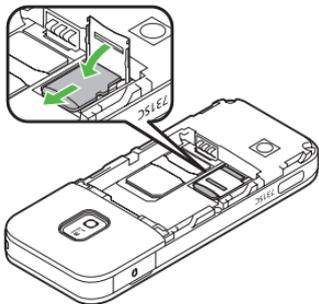


Removing


- 1** Remove Battery (➔P.12-3)
- 2** Slide Memory Card holder and lift up as shown

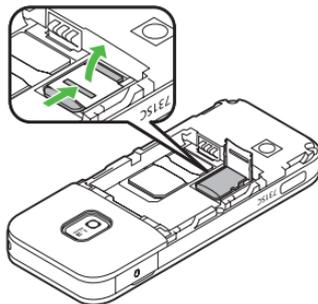

- 3** Remove Memory Card

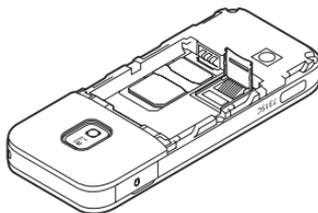

- 4** Replace Memory Card holder and slide to lock as shown

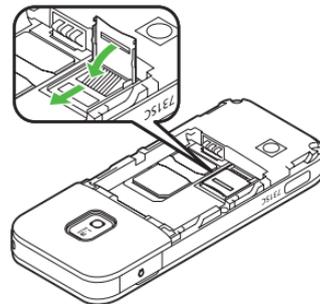

Note

- Do not apply excessive force when inserting/removing Memory Card; may damage Memory Card or handset.
- Take care not to lose removed Memory Card.
- Avoid touching/damaging Memory Card contacts when inserting/removing it.
- Never remove Memory Card or battery while files are being accessed; may damage handset/card or result in damaged/lost files.

Advanced

Settings


- Check Memory Card details (☞ P.11-20)
- Format Memory Card (☞ P.11-20)
- Rename Memory Card (☞ P.11-20)
- Set Default Memory to Phone or Memory Card (☞ P.11-20)

Viewing Memory Status

View the following information.

- Status of mail boxes
- Status of memory in Data Folder
- Status of Calendar items registered
- Status of Phonebooks (Handset and USIM Card)

1 → Settings → Memory settings → Memory status

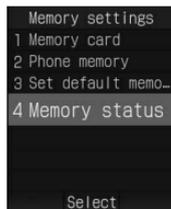

2 View each item

■ To view Messaging status

Messaging

- Received, Drafts, Sent and Unsent Mail memory appears by Size. Press  (Count) to see Mail memory by Count.
- USIM Card SMS appears by Count only.

■ To view Data Folder status

Data Folder → Phone memory or Memory card

■ To view Calendar status

Calendar

■ To view Phonebook

Phonebook

Advanced

Advanced Settings (☞ P.2-33)

Settings

- Confirm total or remaining Phone Memory (☞ P.11-20)
- Clear Phone Memory (☞ P.11-20)
- View Memory status (☞ P.11-20)

Advanced Settings

Basic Operations

Setting Main Menu Style

 →  (Style) → Use  to choose a color to set

- This setting changes menu appearance.

Text Entry

Entering date/time

In text entry window, select Kanji/Kana entry mode and enter Hiragana →  (EngNum/力+) → Highlight conversion alternative →  (Select)

Toggle Double-byte and Single-byte Symbols

In text entry window, while conversion alternative for double/single byte symbols, 

Adding Text to Templates

 → *Templates* → *Text templates*

■ To add the first entry

 (Add new) → Enter text

■ To add second or later entries

 → *Add new* → Enter text

- Save up to 70 characters per template.

Editing Text Template

 → *Templates* → *Text templates* → Highlight template →  (Edit) → Edit text

Deleting Text Template

 → *Templates* → *Text templates*

■ To delete an entry

Highlight template →  → *Delete* → *Selected* → *Yes*

■ To delete multiple entries

 → *Delete* → *Multiple* → Check templates to delete →  (Delete) → *Yes*

■ To delete all templates

 → *Delete* → *All* → Enter Phone password →  (OK) → *Yes*

Specify Range to Copy/Cut

In text entry window,  → *Copy* or *Cut* → Use  to move cursor to the first character of the range to cut/copy and press  (Start) → Use  to specify the range →  (End)

- To copy or cut all text in text entry window, press  (All).
- Copied or cut text remains even after powering off.

Pasting Copied or Cut Text

In text entry window, use  to move cursor to the position to paste →  → *Paste*

Undoing Text Entry

In text entry window,  → *Undo*

- In Kanji/Kana entry mode, undo operations immediately after performing such as Cut, Paste or Delete. Undoing conversion is also available.

Jump to Top/End

In text entry window,  → *Cursor position* → Select an item

User's Dictionary

Deleting Entries from User's Dictionary

 → *Settings* → *Phone settings* → *User's dictionary* → *Edit entry*

■ To delete an entry

Highlight entry →  → *Delete*

■ To delete all entries

 → *Delete all* → Enter Phone Password →  (OK) → *Yes*

Setting & Canceling Prediction Entry Function

In Dictionary window,  → *Prediction On* or *Prediction Off*

Phonebook

Adding Information to Phonebook Entry

 →  (New)

■ To save Group

Use  to switch to  → Select Group field → Select Group →  (Save)

■ To set Secret mode

Use  to switch to  → Select Secret mode field → Select an item →  (Save)

■ To save Birthday

Use  to switch to  → Select Birthday field → Enter Birthday →  (Save)

■ To save Blood type

Use  to switch to  → Select Blood type field → Select Blood type →  (Save)

■ To save Hobby

Use  to switch to  → Select Hobby field → Enter Hobby →  (Save)

■ To save Company

Use  to switch to  → Select Company field → Enter Company →  (Save)

■ To save Job title

Use  to switch to  → Select Job title field → Enter Job title →  (Save)

■ To save Address

Use  to switch to  → Select Address field → Select Zip code field → Enter Zip code → Select Country field → Enter Country name → Select Province field → Enter Province name → Select City field → Enter City name → Select Street field → Enter Street name → Select Additional information field → Enter Additional information →  (OK) → Select an icon →  (Save)

■ To save URL

Use  to switch to  → Select Homepage field → Enter URL → Select an icon →  (Save)

■ To save Memo

Use  to switch to  → Select Memo field → Enter Memo →  (Save)

- Items other than Group are unavailable in USIM Card Phonebook.

Entering E-mail Address & URL to Phonebook Quickly

 →  (New)

■ To enter E-mail address

Select E-mail address field →  → *Quick Address List* → Select an item

■ To enter URL

Use  to switch to  → Select homepage field →  → *Quick Address List* → Select an item

Setting Incoming Image to Phonebook Entry

→ (New) → Use to switch to → Select Picture field

■ To set from saved still image

Pictures → Select a file → (Save)

- With Memory Card inserted, select a file from *Pictures* or *Digital camera* folder.

■ To set by capturing still image

Take photo → Capture still image → (Save)

■ To cancel set incoming image

Off → (Save)

- If a Memory Card file is set as incoming image, copy file to 7315C first confirmation appears. If file is copy protected, move file to 7315C first confirmation appears. Choose *Yes* to complete setting.

Setting Ringtone to Phonebook Entry

→ (New) → Use to switch to → Select Ringtone field

■ To set Ringtone for Voice Call

Voice call → Select a file location → Highlight a file → (Play) → (Select) → (Done) → (Save)

■ To set Ringtone for Message

Messages → *Assign tone* → Select a file location → Highlight a file → (Play) → (Select) → (OK) → (Done) → (Save)

■ To set Ringtone duration for Message

Messages → *Duration* → Enter duration → (OK) → (Done) → (Save)

- If a Memory Card file is set as incoming image, copy file to 7315C first confirmation appears. If file is copy protected, move file to 7315C first confirmation appears. Choose *Yes* to complete setting.

Setting Vibration to Phonebook Entry

→ (New) → Use to switch to → Select Vibration field → Select an item → Highlight a vibration pattern → (Play) → (Select) → (Done) → (Save)

Adding International Code and Country Number to Phone Number in Phonebook

→ Search Phonebook and select entry (⊕P.2-14) → Highlight phone number → → *Call* →

International call (⊕P.3-15 Making International Calls from Japan)

Creating Message from Phonebook

→ Highlight Phonebook entry to send message → → *Create message* → *S! Mail or SMS* → (⊕P.4-3 Sending S! Mail , P.4-6 Sending SMS Messages)

Adding Phonebook Entry to Speed Dial

→ Search Phonebook and select entry (⊕P.2-14) → → *Add to Speed dial* → Select a field to add the entry

New Group (USIM Card)

→ → *New group* → Select Group name field → Enter group name → (Save)

- Change search method to *Group* (⊕P.2-14) and view USIM Phonebook, to create new group (⊕P.2-28).

Adding Member to Group

→ Select group to add member → → *Add member* → Check member → (Add)

- Set search method to *Group* to add (⊕P.2-14).

Removing Member from Group

→ Select group to remove member → → *Remove member* → Check member → (Remove)

- Set search method to *Group* to remove (⊕P.2-14).
- Removed member is not deleted from Phonebook.

Showing or Hiding Caller ID

→ Highlight Phonebook entry to call → →

Hide/Show my ID

■ To follow Show my number setting

None →

■ To show phone number

Show my ID →

■ To hide phone number

Hide my ID →

Sending Phonebook as vFile

→ Search Phonebook and select entry (ⓈP.2-14)
→ → *Send*

■ To send via message

Via message → (ⓈP.4-3 Sending S! Mail ②)

■ To send via infrared

Via infrared (ⓈP.10-3)

Creating and Saving vFiles

→ Search Phonebook and select entry (ⓈP.2-14)
→ → *Save to Data Folder* → *Phone or Memory card* → *Yes*

- Alternatively, save to Memory Card if inserted.

Copying Entries between Phone & USIM

→ Highlight Phonebook entry to copy → → *Copy to USIM* or *Copy to phone*

■ To delete an entry

Selected → *Yes*

- To copy entry details, press (Details) → (Menu).

■ To copy multiple entries

Multiple → Check entries → (Copy) → *Yes*

■ To copy all Phone or USIM Card entries

All → *Yes*

Copying Items

→ Search Phonebook and select entry (ⓈP.2-14)
→ Highlight item → → *Copy item*

- Paste copied item in text entry window.

Setting Default Phone Number or Mail Address

→ Search Phonebook and select entry (ⓈP.2-14)
→ → *Set default number* → *Voice call* or *Messages* → Select phone number or E-mail address
→ (Save)

- To leave default phone number or E-mail address undefined, highlight item and press (Reset).

Viewing USIM Card Service Number

→ → *Service number*

- *Service number* may not appear depending on USIM Card.

Toggling Phonebook View (USIM/Phone)

→ → *Settings* → *Change view* → Select an item

- Change remains even if handset is powered off.

Changing Phonebook Search Method

→ → *Settings* → *Search method*

■ To search by reading

Reading → Enter first part of reading in text field
→ View target Phonebook entry from search result

■ To search by group

Group → Select a group → Use to view target Phonebook entry from search result

- Alternatively, after selecting a group, enter first part of reading in text field.

Canceling Phonebook Secret Mode Temporarily

→ → *Unlock temporarily* → Enter Phone Password → (OK)

- In *Security*, if *Secret mode* is set to *Hide*, Secret entries appear for current session only.

Checking Memory Status

→ → *Memory status*

- To delete viewed memory, press (Delete) (ⓈP.2-33 Deleting Registered/Saved Data).

Editing Phonebook

→ Search Phonebook and select entry (ⓈP.2-14)
→ (Edit) → (ⓈP.2-12 Creating New Entries ②)

- To edit secret Phonebook entry, set *Secret mode of Security* to *Show*.

Enter and Save Phone Number

Enter phone number → → *Add to Phonebook*

■ To save new entry

New → Enter each item → (Save)

■ To update entry

Update → Search Phonebook and select entry (ⓈP.2-14) → Enter each item → (Save)

- Alternatively, during a call, press and select *Add to Phonebook*.
- Only Name, Reading, Phone number, E-mail address and Group can be saved in USIM Card Phonebook.

Renaming Group

■ → Phonebook → Group settings → → View from phone group or View from USIM group → Select group to edit → Select Group name field → Enter group name → (Save)

- When *Change view* (ⓅP.2-28) is set to *Phone*, *View from USIM group* appears; when *USIM*, *View from phone group* appears.

Changing Group Settings

■ → Phonebook → Group settings → Select group

■ To set Incoming image

Select Group image field → Select a file location → Select a file → (Save)

■ To set Ringtone for Voice Call

Select Ringtone field → *Voice call* → Select a file location → Highlight a file → (Play) → (Select) → (Done) → (Save)

■ To set Ringtone for Message

Select Ringtone field → *Messages* → *Assign tone* → Select a file location → Highlight a file → (Play) → (Select) → (OK) → (Done) → (Save)

■ To set Ringtone duration for Message

Select Ringtone field → *Messages* → *Duration* → Enter duration → (OK) → (Done) → (Save)

■ To set Vibration

Select Vibration settings field → Select an item → Highlight a vibration pattern → (Play) → (Select) → (Done) → (Save)

- To release set image or vibration and save the entry, highlight Image/Vibration field → (Reset) → (Save)
- To release set Ringtone and save the entry, select Ringtone field → Highlight item to reset → (Reset) → (Done) → (Save). To release all Ringtone, highlight Ringtone settings field → (Reset) → (Save).
- Set only for Phone group.
- Images and ringtones set for individual Phonebook entries take priority over Group settings.

Account Details

Editing Account Details

■ → → → → (Edit) → Enter each item in the same way as Phonebook entry (ⓅP.2-12 *Creating New Entries* ②) → (Save)

Sending Account Details as vFile

■ → → → → *Send Account details*

■ To send via message

Via message → (ⓅP.4-3 *Sending S! Mail* ②)

■ To send via infrared

Via infrared (ⓅP.10-3)

Resetting Account Details

■ → → → → *Reset account details* → *Yes*

- All Account details other than phone number saved in USIM Card are reset.

Creating vFile and Save in Data Folder

■ → → → → *Save to Data Folder* → *Phone* or *Memory card* → *Yes*

- Alternatively, save to Memory Card if inserted.

Copying Item in Account Details

■ → → → Highlight item → → *Copy item*

- Paste copied item in text entry window.

Sending Message to E-mail Address in Account Details

 →  → Highlight E-mail address → 
 (Send) →  P.4-3 Sending S! Mail 

Viewing Files

Enlarging and Viewing Image

 → *Data Folder* → *Pictures* → Highlight a file
 →  (View) →  (FULL) →  (Zoom)
 • Use  or  to enlarge or reduce image, or use  to scroll.

Viewing Slide Show

 → *Data Folder* → *Pictures* → Highlight a file
 →  (View) →  → *Slide show*
 • To pause/resume Slide show, press  (Pause/Restart).
 • To stop Slide show, press  (Stop).

Changing Picture View of Group

 → *Data Folder* → *Pictures* → Highlight a file
 →  (View) → Use  to select sorting order →
 Use  or  to move images by groups

Guide in Full Screen View

 → *Data Folder* → *Pictures* → Highlight a file
 →  (View) →  (FULL) → 
 • Guide disappears after about 3 seconds.

Confirming File/Folder Details

 → *Data Folder* → Select a file/folder location
 → Highlight a file/folder →  → *Details*

Toggling Memory Card and Phone Data Folder

 → *Data Folder* → Select a folder → Highlight a file →  → *Memory card* or *Phone*
 • Available when Memory Card is inserted.

File/Folder Management

Sending Files

 → *Data Folder* → Select a folder → Select a file →  → *Send*

■ To send via message

Via message → (P.4-3 Sending S! Mail 2)

■ To send via infrared

Via infrared (P.10-3)

Selecting Folder List

 → *Data Folder* → Select a folder → Highlight a file →  → *View by* → Select an item

Sorting Files

 → *Data Folder* → Select a folder → Highlight a file →  → *Sort by* → Select an item

• Sort by following order.

- Descending order of date (*Date*)
- File type (*Type*)
- File name (*Name*)
- Ascending order of file size (*Size*)
- Title (*Title*)
- Content Key status (*Content key type*)

• Folders appear at the top of list.

• When selecting *Type*, files are sorted in alphabetical order by file extension.

• When selecting *Name*, files are sorted in order of numerics → alphabets → Japanese syllabary.

• Files sorted by *Title* are *Ring songs · tones*, *Music*, *Videos* and *Graphic Mail templates*.

• For *Content key type*, files appear as follows:

Unrestricted → Nontransferable → Copy Protected (Content key valid) → Copy Protected (Content Key expired) → Invalid Nontransferable.

Adding Files to Playlist

 → *Data Folder* → *Ring songs · tones*, *Music* or *Videos* → Highlight a file →  → *Manage* →

Add to playlist

Showing & Hiding File/Folder Information

 → *Data Folder* → Select a folder → Highlight a file →  → *Manage* → *Show file info/Hide*

file info

• In List window for Folder with thumbnail view, set to show folder/file name when highlighted.

Deleting Content Key

 → *Data Folder* → Select a folder → Highlight a file →  → *Manage* → *Content key info*

■ To delete an entry

Highlight content key to delete →  → *Delete* → *Selected* → *Yes*

■ To delete all entries

 → *Delete* → *All* → Enter Phone password →  (OK) → *Yes*

Managing Content Key in Data Folder

 → *Data Folder* → Select a folder → Highlight a file →  → *Manage* → *Content key info*

■ To view Content Key details

Highlight Content Key →  (Details)

■ To view/play a file

Highlight a file →  → *View/Play*

Canceling Secret Setting Temporarily

 → *Data Folder* → Select a folder → Highlight a file →  → *Unlock temporarily* → Enter Phone Password →  (OK)

Activating Camera Mode

 → *Data Folder* → *Pictures* → In File list window,  → *Take photo*

Activating Video Mode

 → *Data Folder* → *Videos* → In File list window,  → *Record video*

Recording Sound

 → *Data Folder* → *Ring songs · tones* → In File list window,  → *Record sound*

Setting & Canceling File Lock

 → *Data Folder* → Select a folder → Highlight a file →  → *Lock* or *Unlock*

• Set file lock to restrict renaming, moving or deleting.

Setting Secret in Sub-folder

 → *Data Folder* → Highlight created sub-folder →  → *Set secret or Unset secret* → Enter
Phone password →  (OK)

- Set *Secret data folder* of *Security* to *Hide* to hide created sub-folders by *Set secret*. To cancel setting, set *Secret data folder* to *Show*.

Purchasing or Acquiring Content Key

 → *Data Folder* → Select a folder → Highlight a file →  → *Manage* → *Download Content key*

Setting Images to Wallpaper etc.

 → *Data Folder* → Select a folder → Highlight a file →  (Set as)

■ To set image to Wallpaper

Wallpaper → Preview the image →  (Set)

■ To set image to Incoming image

Caller ID → Search Phonebook and select entry ( →  (Set)

- If a Memory Card file is set as incoming image or ringtone, copy file to 7315C first confirmation appears. If file is copy protected, move file to handset first confirmation appears. Choose *Yes* to complete setting.

Setting Sound File to Ringtone in Normal Mode

 → *Data Folder* → Select a folder → Highlight a file →  (Set as)

■ To set to Ringtone for each function

Voice ringtone, *Message ringtone*, *Missed call notification ringtone* or *Delivery report ringtone*

■ To set to Ringtone for Phonebook

Caller ringtone → Search Phonebook and select entry ()

- If a Memory Card file is set as incoming image or ringtone, copy file to 7315C first confirmation appears. If file is copy protected, move file to handset first confirmation appears. Choose *Yes* to complete setting.
- Only copy protected MPEG4 AAC, AAC+, or Enhanced AAC+ files can be set.

Setting Video File to Ringtone in Normal Mode

 → *Data Folder* → Select a folder → Highlight a file →  (Set as)

■ To set to Ringtone for Voice call

Voice ringtone

■ To set to Ringtone for Phonebook

Caller ringtone → Select Phonebook entry to set ()

- Only copy protected MPEG4 (mp4, 3gp) AAC, AAC+ or Enhanced AAC+ files can be set.

Registering vFile to Other Functions

 → *Data Folder* → *Other documents* → Select vFile →  (Register)

- Register a vCard or vCalendar files saved in *Data Folder* to *Phonebook* or *Calendar*.

Memory Status

Deleting Registered/Saved Data

 → *Settings* → *Memory settings* → *Memory status* → Select function → Highlight item → 
(Delete) → *Yes* → View item list

■ To delete an entry/multiple entries

Check item →  (Delete) → *Yes*

■ To delete all entries

 (Mark all) →  (Delete) → Enter Phone

Password →  (OK) → *Yes*

- Delete Mailbox messages, Data Folder files, Calendar or Phonebook entries.
- If file(s) are locked or set for another function, a confirmation appears. Choose *Yes* to delete all files. Choose *No* to delete all other files only.

Calling



Making a Call	3-2
Receiving a Call	3-3
Answering Machine	3-4
Activating & Canceling	3-4
Playing Recordings	3-4
Deleting Recordings	3-4
Speed Dial	3-5
Saving as Phone Numbers	3-5
Using Speed Dial	3-5
Call Time & Cost	3-5
Checking Call Time & Cost	3-6
Call Log Records	3-6
Viewing Call Log Records	3-6
Calling Call Log Records	3-6
Deleting Call Log Records	3-7
Optional Services	3-7
Voice Mail	3-8
Setting Voice Mail	3-8
Canceling Voice Mail	3-9
Listening to Voice Mail Message	3-9
Missed Call Notification	3-9
Call Forwarding	3-10
Activating Call Forwarding	3-10
Canceling Call Forwarding	3-10
Call Waiting	3-11
Activating & Canceling Call Waiting	3-11
Receiving a Second Call	3-11

Group Call	3-12
Making New Call during a Call	3-12
Switching Party	3-12
Talking with All Parties	3-12
Call Barring	3-12
Restricting Outgoing/Incoming Calls	3-13
Canceling All Barring	3-13
Checking Call Barring Status	3-13
Changing Network Password	3-14
Caller ID	3-14
Showing & Hiding Caller ID	3-14
Advanced Settings	
Call	3-14
Call Log Records	3-16
Group Call	3-17

Making a Call

See "Using Phonebook" (➔P.2-14) to make a call from Phonebook.

- 1 Enter a phone number including area code
- 2 Confirm entered phone number →  or  (Call)



Phone Number Entry Window

- 3 To end the call, 

- To correct an entered digit, use  to move cursor to the digit to be deleted, and press . Press  for 1+ seconds to delete all.
- To enter "P (pause)", press  twice. To enter "+ (International Code)", press  for 1+ seconds.
- When the line is busy, press  to end the call and try again later. If *Auto Redial* (➔P.11-18) is *On*, number is automatically redialed. Press  (Cancel) or  to cancel redialing.
- If Earphone Microphone is connected, set *Earphone call activate* (➔P.11-19) to *On*, to call specified phone number by pressing Earphone Microphone switch for 1+ seconds in Standby. Press again for 1+ seconds to end the call.

Advanced

Advanced Settings (➔P.3-14)

- Saving Entered Phone Number to Phonebook
- Creating New Message Addressed to Entered Number
- Switching Phone Number Entry Window to Phonebook Window
- Switching Phone Number Entry Window to Call Log Window
- Making International Calls from Japan
- Calling with Your Phone Number Shown
- Talking in Small Voice
- Setting Mute
- Making New Call during a Call
- Searching Phonebook during a Call
- Saving the Other Party's Phone Number to Phonebook
- Viewing Call Log during a Call
- Creating New Message Addressed to the Other Party's Phone Number
- Sending Push Tones
- Recording Hearing Voice
- Creating Text Memo during a Call
- Ending Call by Menu Operation

Settings

- Save International Code (➔P.11-16)
- Add/change/delete Country Number (➔P.11-17)
- Show or hide your own number when placing calls (➔P.11-18)
- Check the current status of show my number (➔P.11-18)
- Set handset to automatically redial busy numbers (➔P.11-18)
- Enable or disable calling via Earphone Microphone (➔P.11-19)
- Adjust Earpiece volume (➔P.11-19)

Receiving a Call

1 Voice Call window appears,



2 To end the call,



- If *Any key answer* is *On*, press any key except , , , , and to accept call.
- To place caller on hold, press . To connect the call, press (Accept).
- To adjust ringer volume, press or .
- If Earphone Microphone is connected, press Earphone Microphone switch for 1+ seconds to accept Voice Calls. Press again for 1+ seconds to end the call.

• Missed Call Window

Missed Call window appears for unanswered calls. Press (View) to view Received calls (☞P.3-6).

• Ringtone

Specify ringtones by Phonebook entry or Category (☞P.2-27, P.2-29). If not set, active Mode Setting applies (☞P.1-9).

In *Security*, if *Secret mode* is set to *Hide* when a call from a Secret entry is received, active Mode Setting applies.

• Incoming Call Window

If a caller sends Caller ID, phone number appears. If saved in Phonebook, name also appears. If caller hides Caller ID, *Withheld* appears.

If incoming image has been saved in Phonebook or for the group, image also appears (☞P.2-27, P.2-29).

In *Security*, if *Secret mode* is set to *Hide* when a call from a Secret entry is received, only number appears.

• When you cannot answer a call

Use Call Forwarding or Voice Mail to handle calls. While handset rings/vibrates, press (Forward) to forward call to Voice Mail or forwarding number (☞P.3-8, P.3-10). Alternatively, press (Record) to record caller message on handset (☞P.3-4).

Advanced

Advanced Settings (☞P.3-14)

Settings

- Set Side Keys to activate Reject Call or mute ringer (☞P.11-14)
- Set Any key answer (☞P.11-14)
- Accept or reject calls from specified phone numbers (☞P.11-18)
- Create or edit Black List (☞P.11-18)
- Accept or reject calls from unknown numbers (☞P.11-18)
- Accept or reject calls when number is withheld (☞P.11-18)
- Accept or reject calls from payphones (☞P.11-18)
- Accept or reject calls when number is unavailable (☞P.11-18)

Answering Machine

Handset records up to three 15-second caller messages.

Activating & Canceling

1  → *Settings* → *Call settings* → *Answering machine* → *Setting*

2 *On or Off*

- When *On*,  appears in Standby.
- Alternatively, in Standby, press  for 1+ seconds to activate/cancel Answering Machine.

Note

- **Answering Machine is not available if handset is off, out-of-range or in Offline mode. Use Voice Mail (separate subscription required) to handle missed incoming calls.**
- If 7315C shared memory (ⓈP.12-14) is below 600KB, Answering Machine cannot be used.

Playing Recordings

1  → *Settings* → *Call settings* → *Answering machine* → *Recordings*

2 Highlight a voice file →  (Play)

- When a message is recorded,  appears in Standby.
- Alternatively, in Standby, press  to play recorded message.

Deleting Recordings

1  → *Settings* → *Call settings* → *Answering machine* → *Recordings*

2 Delete recording

■ To delete an entry

Highlight content →  (Delete) → *Yes*

■ To delete all entries

 (Delete all) → Enter Phone Password →  (OK) → *Yes*

Advanced

Settings

- Activate or cancel Answering Machine (ⓈP.11-17)
- Set Answering Machine response time (ⓈP.11-17)
- Play Answering Machine records (ⓈP.11-18)
- Set Answering Machine response language (ⓈP.11-18)

Speed Dial

Saving as Phone Numbers

Save up to ten frequently used phone numbers.

1  → *Phonebook* → *Speed dial*

2 Select number to save

3 Search Phonebook and select entry (P.2-14) → Select number

- To change saved phone number, highlight entry →  (Change) → *Yes* → Search Phonebook and select entry (P.2-14) → Select number.
- To delete saved phone number, highlight entry →  → *Delete* → *Yes*.
- To delete all, press  → *Clear all* → *Yes*.
- Secret entry phone numbers cannot be saved as Speed Dial.
- Setting a Speed Dial number to Secret cancels Speed Dial setting automatically.

Using Speed Dial

1 Select from  to 

2  () or 

- After Step **1**, press  (S! Mail) to compose a message.
- Enter Entry No. with *Simple search On*, for names and phone numbers. The display disappears in about 5 seconds. When  appears, make a call with Speed Dial.

Call Time & Cost

Show charge after call may not be available depending on service status. Set max cost limit is not available when Show charge after call is disabled.

Call settings menu includes items below.

Set	Settings
All calls	Confirm approximate total call time/cost or reset it.
Last call	Confirm approximate call time/cost of the previous call or reset it.
Data counter	Confirm approximate incoming/outgoing mail data volume or reset it.
Show charge after call	Set whether to show call time/cost after ending a call.
Set currency	Set or change currency.
Set max cost limit	Set the limit for call cost.

Checking Call Time & Cost

- 1  → *Settings* → *Call settings* → *Call time & cost*
- 2 Select an item

• To reset item, highlight it and press  (Reset).

Advanced

Settings

- Check Call Time/Cost ( P.11-17)
- Check last Call Time/Cost ( P.11-17)
- Check Data Counter ( P.11-17)
- Show or hide Call Time/Cost after calls ( P.11-17)
- Change Call Cost Currency ( P.11-17)
- Set Call Cost Limit ( P.11-17)
- Cancel Call Cost Limit ( P.11-17)

Call Log Records

Select Received Calls or Dialed Calls. Confirm call type, number and call time & cost or dial records directly. Call Log holds up to 500 Received Call and Dialed Call records each.

Viewing Call Log Records

- 1  (Received calls) or  (Dialed calls)
- 2 Highlight record →  (Details)

• Call Log Record Icons

-  : Dialed Voice Call
-  : Received Voice Call
-  : Missed Voice Call
-  : Rejected Voice Call
-  : Voice Mail Notification
-  : Received Call Notification

• In *Security*, if *Secret mode* is set to *Hide*, names do not appear in Call Log for Secret Phonebook entries.

Calling Call Log Records

- 1  (Received calls) or  (Dialed calls)



List Window
(Received calls)

- 2 Highlight record →  (Call) → *Voice call*

Deleting Call Log Records

Deleting a Single Records

- 1  (Received calls) or  (Dialed calls)
- 2 Highlight record →  → *Delete* → *Selected* → *Yes*

- To confirm and delete records one by one, after 1, highlight record →  (Details) → Confirm and press  → *Delete* → *Yes*.

Deleting Multiple Records

- 1  (Received calls) or  (Dialed calls)
- 2  → *Delete* → *Multiple*
- 3 Check records
- 4 Press  (Delete) → *Yes*

Deleting All Records

Delete all records in each Call Log at once.

- 1  (Received calls) or  (Dialed calls)
- 2  → *Delete* → *All*
- 3 Enter Phone Password →  (OK) → *Yes*

Advanced

 **Advanced Settings**  P.3-16

- Saving Call Log Record Numbers to Phonebook
- Saving Call Log Record Numbers to Black List
- Viewing Phonebook Entry Details via Call Log
- Adding International Code and Country Number to Call Log Record Numbers
- Showing Caller ID when Calling Call Log Record

Optional Services

Available optional services are as follows.

Service	Description
Voice Mail	Divert all or all unanswered calls to Voice Mail Center; access caller messages via handset from within the service area or via a touchtone phone anywhere. <ul style="list-style-type: none"> • Set <i>Missed call notification</i> to notify missed calls by SMS when handset is off or out-of-range (P.3-9).
Call Forwarding	When you know you will be unable to answer calls, automatically divert calls to a specified number.
Call Waiting*	Put the line on hold to answer another line or alternate between lines. Or you can toggle lines among multiple lines simultaneously.
Group Call*	Open another line while one is engaged; toggle lines or talk on up to six parties simultaneously.
Call Barring	Restrict incoming or outgoing calls by condition.
Caller ID	Show or hide your own number when making calls.

* A separate subscription is required to use this service.

Note

- When *Out* appears, services are unavailable. For details on operations from landline phones or services, confirm on SoftBank Mobile Website (<http://www.softbank.jp>).

Voice Mail

According to the following conditions, handset forwards incoming voice Call to Voice Mail Center.

Forwarding Condition	Description
Always	Handset does not ring/vibrate for incoming calls; calls are diverted automatically. Missed Call does not appear.
No reply	Unanswered calls are diverted after the specified ring time, or when the line is busy or handset is out-of-range.

Note

- Voice Mail and Call Forwarding cannot be active at the same time.
- Activating Voice Mail cancels Call Forwarding.

Setting Voice Mail

- 1  → *Settings* → *Call settings* → *Optional services*
→ *Voice mail/Call forwarding*
→ *Voice mail on*

- 2 **Select an item**

- **To transfer to Voice Mail Center immediately**

Always (0 sec.)

- **To set duration before transfer**

No reply (5 to 30 sec.) → 5 seconds, 10 seconds, 15 seconds, 20 seconds, 25 seconds or 30 seconds

- If *No reply (5 to 30 sec.)* is set, answer an incoming call while handset rings/vibrates, or press  (Forward) to forward immediately.

Canceling Voice Mail


- 1  → *Settings* → *Call settings* → *Optional services* → *Voice mail/Call forwarding* → *Deactivate All* → *Yes*

Note

- *Deactivate All* also cancels Call Forwarding.

Listening to Voice Mail Message

When a caller saves a Voice Mail message, a notification appears in Standby and  appears at the top of Display.

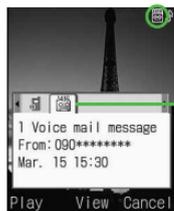

Notification

When Notification Appears

Connect to Voice Mail Center as described below.

- 1  (Play)
 - To confirm the details of the message, press  (View) while notification appears.
 - Press  (Cancel) to clear the notification without playing the message.

2 Follow guidance

When Notification does not Appear

- 1 Enter "1416" → 

2 Follow guidance

- Voice Mail indicator  disappears when messages are accessed via handset.

Missed Call Notification

Receive SMS for calls missed while handset is off or outside service area; or when caller saves message at Voice Mail Center while the line is engaged.

- 1 Enter "1414" → 

- To call from landline phone in Japan, dial "090-665-1414".

2 Follow guidance

- SMS notification is saved as Received call.
- Missed Call Notification is complimentary.

Advanced

Settings

- Forward all calls to Voice Mail (handset does not ring) ( P.11-16)
- Forward unanswered calls to Voice Mail (specify ring time) ( P.11-16)
- Cancel Voice Mail/Call Forwarding ( P.11-16)
- Confirm current Voice Mail/Call Forwarding settings ( P.11-16)
- Listen to Voice Mail message ( P.11-16)
- Set Missed Call Notification ( P.11-16)

Call Forwarding

Set forwarding condition (☞P.3-8) and number, beforehand, to divert incoming calls to a specified number.

Note

- Call Forwarding and Voice Mail cannot be used at the same time.
- Activating Call Forwarding cancels Voice Mail previously activated.

Activating Call Forwarding

Specify a forwarding number beforehand.

- 1  → *Settings* → *Call settings* → *Optional services* → *Voice mail/Call forwarding* → *Call forwarding on*
- 2 *Always (0 sec.) or No reply (5 to 30 sec.)*

3 Set forwarding number

■ To set previously forwarded number

Last set number → Select previously forwarded number

■ To set from Phonebook

Phonebook → Search Phonebook and select entry (☞P.2-14)

■ To set by entering phone number

Enter number → Enter phone number

- Specify call duration after Step 3 when *No reply* is selected for the call forwarding service.

• If *No reply (5 to 30 sec.)* is set, answer an incoming call while handset rings/vibrates, or press  (Forward) to forward immediately.

Canceling Call Forwarding

Cancel all Diverts services regardless of the condition.

- 1  → *Settings* → *Call settings* → *Optional services* → *Voice mail/Call forwarding* → *Deactivate All* → *Yes*

Note

- Voice Mail service previously activated is also canceled.

Advanced

Settings

- Activate and set Forwarding (☞P.11-16)
- Cancel Voice Mail/Call Forwarding (☞P.11-16)
- Confirm current Voice Mail/Call Forwarding settings (☞P.11-16)

Call Waiting

A separate subscription is required to use this service. This function is only applicable to Voice Calls.

Activating & Canceling Call Waiting

- 1  → *Settings* → *Call settings* → *Optional services* → *Call waiting*
- 2 *On or Off*

• To check current status, select *Get status* in Step 2.

Receiving a Second Call

If another incoming call arrives during a call, a tone sounds and notification appears. Place current call on hold to answer the second call.

- 1 **When you hear the interrupt sound,**  **(Accept)**
- 2 **Hold active call**
 - To disconnect the current call to answer the new incoming call, select *End Active call*.
- 3 **To switch party to talk, highlight party** →  **(Multi talk)** → *Switch*
- 4 **End a call**
 - **To end selected call**
Highlight party →  (Multi talk) → *End this call*
 - **To end all calls**
 (Multi talk) → *End all calls*

- If one party ends a call with another on hold, press  (Answer) to talk with party on hold.
- If Call Forwarding or Voice Mail is set and second call is unanswered, it is forwarded to forwarding number or Voice Mail Center. If forwarding condition is set to *Always*, Call Waiting service is unavailable.

Advanced

Settings

- Activate or cancel Call Waiting (📞 P.11-16)
- Confirm current Call Waiting settings (📞 P.11-16)

Group Call

A separate subscription is required to use this service. Talk with a maximum of 6 parties simultaneously.

Making New Call during a Call

When a new call is connected, first party is placed on hold.

1 Enter phone number during a call

- To select from Phonebook,  → *Phonebook* → Search Phonebook and select entry (☎P.2-14).

2 (Call) → Call with the party

Switching Party

1 While connected with multiple parties, highlight party → (Group call) → *Switch*

- If connected party ends call during Group Call, a party on hold remains on hold. To talk with party on hold, press  (Answer) and cancel hold.

Talking with All Parties

1 While connected with multiple parties, (Group call) → *Call to all*

- To talk with one party again, highlight party, press  (Group call), and select *Call to this person*.
- To end all calls, press  (Group call) and select *End all calls*.
- When one party ends the call during Group Call, continue talking with remaining parties.

Advanced

 **Advanced Settings**  P.3-17

Call Barring

Bar outgoing/incoming Voice Calls or SMS by the conditions listed below.

Item	Description
Outgoing Calls	
Bar all outgoing calls	Disables calling or sending SMS to all but emergency numbers.
Bar all international calls	Disables calling or sending SMS to numbers outside Japan.
Incoming Calls	
Bar all incoming calls	Blocks all incoming calls or SMS.

- Setting Call Barring requires Network Password (the 4-digit number dedicated to Call Barring service specified at the subscription). Network Password can be changed (☎P.3-14).
- A message appears indicating that outgoing Call Barring is active. The message may appear after a while depending on service area.

Note

- If incorrect Network Password is entered 3 consecutive times, Call Barring service is disabled. In this case, change Network Password and Center Access code. For details, contact Customer Service (☎P.12-25).
- If Call Forwarding or Voice Mail is active, *All outgoing calls* and *All incoming calls* cannot be set.

Restricting Outgoing/Incoming Calls

Set Call Barring for outgoing/incoming calls for Voice Calls/SMS transmissions.

- 1 → *Settings* → *Call settings* → *Optional services* → *Call barring*
- 2 Select a restriction type
 - For outgoing calls
Outgoing call → *Bar all outgoing calls* or *Bar all international calls*
 - For incoming calls
Incoming call → *Bar all incoming calls*
- 3 *On or Off* → Enter Network Password → (OK) → *Yes*

Canceling All Barring

Cancel all barring for outgoing or incoming calls.

- 1 → *Settings* → *Call settings* → *Optional services* → *Call barring*
- 2 *Cancel all barring*
- 3 Enter Network Password → (OK) → *Yes*

Checking Call Barring Status

- 1 → *Settings* → *Call settings* → *Optional services* → *Call barring*
- 2 *Get status* → *All outgoing calls*, *All international calls* or *All incoming calls*

Changing Network Password

- 1  → *Settings* → *Call settings* → *Optional services* → *Call barring* → *Set security code*
- 2 Enter current Network Password in Old field →  (OK)
- 3 Enter new Network Password in New field →  (OK)
- 4 Enter new Network Password again in Cnf field →  (OK)

Advanced

Settings

- Set Outgoing Call Barring (☎ P.11-16)
- Activate or cancel Incoming Call Barring (☎ P.11-16)
- Cancel all Call Barring (☎ P.11-16)
- Confirm current Call Barring settings (☎ P.11-16)
- Change Network Password (☎ P.11-16)

Caller ID

Show or hide your own phone number when calling from handset.

Showing & Hiding Caller ID

- 1  → *Settings* → *Call settings* → *Show my number*
- 2 *On/Off* → *On or Off*

- After Step 1, select *Get status* to confirm the current setting.
- Regardless of *Show my number* setting, show/hide your phone number each time you make a call (☎ P.3-15).

Advanced

Settings

- Show or hide your own number when placing calls (☎ P.11-18)
- Check the current status of show my number (☎ P.11-18)

Advanced Settings

Call

Saving Entered Phone Number to Phonebook

Enter a phone number including area code →  → *Add to Phonebook* → (☎ P.2-28 Enter and Save Phone Number)

Creating New Message Addressed to Entered Number

Enter a phone number →  → *Create message* → *S! Mail or SMS* → (☎ P.4-3 Sending S! Mail 5, P.4-6 Sending SMS Messages 5)

Switching Phone Number Entry Window to Phonebook Window

On phone number entry window,  → *Phonebook*

Switching Phone Number Entry Window to Call Log Window

On phone number entry window,  → *Call log*

Making International Calls from Japan

Enter a phone number including area code → → *International call* → Select a country/Select *Enter Code* and enter Country number → Confirm phone number →

- Handset is designed for domestic use only. For details, contact Customer Service (☎P.12-25).
- Calls to SoftBank handset abroad is available only by the phone number, regardless of the country where the receiver stays.

Calling with Your Phone Number Shown

Enter a phone number including area code → → *Hide/Show my ID*

■ To follow Show my number setting

None →

■ To show phone number

Show my ID →

■ To hide phone number

Hide my ID →

- Alternatively, enter → Enter phone number → , to make a call with your phone number shown.
- Alternatively, enter → Enter phone number → , to make a call with your phone number hidden.

Rejecting and Disconnecting Incoming Call

While handset is ringing, (Reject)

- The rejected call is recorded in Call Log.
- Alternatively, if *Side key* is set to *Reject*, press or for 1+ seconds to reject an incoming call.
- When Call Forwarding or Voice Mail is not used, press (Forward) while handset is ringing, to reject the incoming call. Message indicating "busy" appears on caller's handset before call is disconnected. If caller's handset is incompatible, call is simply disconnected.

Adjusting Earpiece Volume

During a call, or

- Adjust Earpiece or Earphone volume. Setting remains even after powered off.

Putting a Call on Hold

During a call, (Hold)

- When a call is put on hold, the party on hold hears a hold tone and neither party can hear the other's voice. A subscription to Call Waiting or Group Call is required to use this function.
- Press (Answer) to reconnect the call.

Switching to Speaker Phone

During a call, (Speaker) → *Yes*

- To cancel Speaker Phone, during a call, press (Speaker).

Talking in Small Voice

During a call, → *Whisper on* or *Whisper off*

- With *Whisper on*, the volume of sent sounds is raised on the other party's side.

Setting Mute

During a call, → *Mute* → Check or uncheck *Voice* → (OK)

Making New Call during a Call

During a call, → *New call* → Enter phone number → (Call)

- To search Phonebook, after pressing → *New call*, press (Search).
- This function is available when Group Call is in use.

Searching Phonebook during a Call

During a call, → *Phonebook* → (☎P.2-14 Searching Phonebook)

Saving the Other Party's Phone Number to Phonebook

During a call, → *Add to Phonebook*

■ To save new entry

New → Enter each item → (Save)

■ To update entry

Update → Search Phonebook and select entry (☎P.2-14) → Select phone number → (Save)

Viewing Call Log during a Call

During a call,  → *Call log*

Creating New Message Addressed to the Other Party's Phone Number

During a call,  → *Create message* → *S! Mail* or *SMS* → (P.4-3 Sending S! Mail , P.4-6 Sending SMS Messages )

Sending Push Tones

During a call,  → *Send DTMF* → Enter digits →  (Send)

- To search Phonebook, press *Send DTMF* and then  (Search).

Recording Hearing Voice

During a call,  → *Record* →  (Record) →  (Stop)

- Record voice of up to 2 minutes during a call.
- To pause recording, press  (Pause). Press  (Record) to resume recording; press  (Save) to save recording up to paused point.
- Recorded sound file is saved to *Ring songs · tones* in Data Folder.
- If Call Waiting is subscribed, incoming call window appears when receiving another incoming call.
- Recording stops automatically after the call is ended, and voice file is saved.

Creating Text Memo during a Call

During a call,  → *Memo* → Enter text memo

Ending Call by Menu Operation

During a call,  → *End call*

Call Log Records

Making Voice Calls from Call Log Records

 (Received calls) or  (Dialed calls) → Highlight record →  (Call) → *Voice call*

Sending Message from Call Log Records

 (Received calls) or  (Dialed calls) → Highlight record →  (Call) → *Create message* → *S! Mail* or *SMS* → (P.4-3 Sending S! Mail , P.4-6 Sending SMS Messages )

Saving Call Log Record Numbers to Phonebook

 (Received calls) or  (Dialed calls) → Highlight record →  → *Add to Phonebook* → (P.2-13 Saving from Call Log Records )

Saving Call Log Record Numbers to Black List

 (Received calls) or  (Dialed calls) → Highlight record →  → *Add to black list* → *Yes*

Viewing Phonebook Entry Details via Call Log

 (Received calls) or  (Dialed calls) → Highlight record →  → *View phonebook details*

Adding International Code and Country Number to Call Log Record Numbers

 (Received calls) or  (Dialed calls) → Highlight record →  → *International call* → Select country or *Enter Code* and enter Country number → Confirm phone number → 

Showing Caller ID when Calling Call Log Record

 (Received calls) or  (Dialed calls) → Highlight record →  → *Hide/Show my ID*

■ **To apply *Show my number* setting**

None → 

■ **To show phone number**

Show my ID → 

■ **To hide phone number**

Hide my ID → 

Group Call

Ending Selected Call

During Group call, highlight party to disconnect →

 (Group call) → *End this call*

Putting All Calls on Hold

During Group call,  (Group call) → *Hold all calls*

Messaging



Messaging Basics	4-2
Custom Mail Address	4-3
Changing Mail Address	4-3
Confirming New Mail Address	4-3
Sending S! Mail	4-3
Attaching Files	4-4
Creating Graphic Mail	4-5
Sending SMS Messages	4-6
Received Messages	4-7
Viewing New Messages	4-7
Receiving Messages Manually	4-8
Replying to Received Messages	4-9
Forwarding Received Messages	4-9
Managing & Using Messages	4-10
Viewing from Message List	4-10
Using Message Information	4-11
Deleting Messages or Templates	4-12
Managing Folders	4-13
Creating Folders	4-13
Moving Messages	4-14
Sorting Messages	4-14
Advanced Settings	
Sending S! Mail	4-15
Sending SMS	4-18
Received Messages	4-19
Using & Managing Messages	4-20
Folder Management	4-23

Messaging Basics

Use S! Mail and SMS services on handset.

S! Mail

Exchange long text messages with SoftBank and other E-mail compatible handsets, PCs and other mobile devices; attach media files for multimedia messaging.

Use Graphic Mail or Feeling Mail to add color and other graphic elements to S! Mail message text.

- Exchange Feeling Mail with compatible handsets.
- A separate subscription is required to use S! Mail.

SMS

Exchange short text messages with SoftBank handsets; use handset numbers as address.

Entry items and character limits vary as follows.

Item	S! Mail ¹	SMS
Entry Item		
Address	Yes	Yes
Subject	Yes	No
Attachment	Yes	No
Text	Yes	Yes
Character Limits	Up to 15,000 double-byte/ 30,000 single-byte characters (30 KB) ²	Up to 70 single-/ double-byte characters, or up to 160 single-byte alphanumerics ³

- 1 Send up to 300 KB including address, subject and message text, as well as attachments (same limit applies to replies and forwarded S! Mail messages).
- 2 Entry limit varies by attachment size, etc.
- 3 When *Char-code* is set to *GSM 7 bit* (☎P.11-5).

- Undeliverable mail (handset off or out-of-range) are saved at Mail Service Center and delivery reattempted regularly.

Note

- Messages created on handset may not appear on other party's handset correctly.
- Received Hangul messages are viewable. Use SMS to create new Hangul messages. Replying to/forwarding received S! Mail automatically deletes Hangul characters.
- Hangul may be deleted from sent SMS or appear as spaces on other party's handset.

Custom Mail Address

Change the alphanumerics appearing before @ of handset Mail Address (Account Name). Default Account Name consists of random alphanumerics. For details, confirm on SoftBank Mobile Website (<http://www.softbank.jp>).

Changing Mail Address

Customizing Mail Address may help reduce spam.

- 1  → *Settings* → *Custom mail address*
- 2 Select *English* and follow onscreen instructions

Confirming New Mail Address

After Mail Address is changed, SoftBank sends a confirmation message.

- 1  → *Received messages* → **Select a folder** → **Select message from Information** → **Yes or No**




Advanced

Settings

- Customize or change handset mail address (☎ P.11-2)

Sending S! Mail

Example: Sending S! Mail to a Phonebook entry.

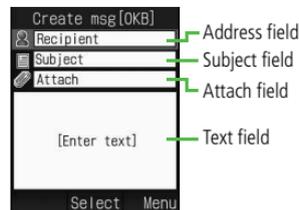

Text Entry Window

- 1  → *Create new*
- 2 Select Recipient field
- 3 *From Phonebook* → Select entry (☎ P.2-14 Searching Phonebook ②)
- 4 Select number or mail address
- 5 Select Subject field → Enter subject
 - Alternatively, highlight Subject field and enter Subject text.

6 Select Enter Text field → Enter text

- Alternatively, highlight Enter Text field and enter message text.

7 (Send)

- Alternatively, in Standby, press  for 1+ seconds to open Create msg window.
- Enter SoftBank handset numbers or mail addresses in Recipient field. Add up to 20 recipients.
- If ,  or  is pressed with address, subject or text entered, or a file attached, an exit confirmation appears. Choose *Yes* to exit. Alternatively, if  or  is pressed, select *Save* to save to Drafts before exiting.
- Sent mail is saved in *Sent messages* or *Unsent*. If *Auto delete* is *On (Auto delete)* (P.11-2) and memory full, sent messages are deleted, oldest first (except protected), automatically to make room for new ones. If *Auto delete* is *Off* or *Unsent* full, memory full confirmation appears. Delete items and then send message.

Note

- **Received S! Mail Hangul is viewable, but is deleted from replies or forward messages (Hangul cannot be used to create S! Mail).**

Attaching Files

Send up to 300 KB including address, subject, text and attachment. Attach up to 20 files per S! Mail message.

- During message creation, message size appears next to *Create msg* in Create Message window.

Note

- **Some attachments may be lost depending on recipient handset status. For supported file types, confirm on SoftBank Mobile Website (<http://www.softbank.jp>).**
- **When attaching a video, select a file recorded in *For S! Mail* (P.6-10). If file is incompatible, a warning message appears.**

Attaching Files from Data Folder, etc.

Attach media files directly, or Phonebook/Calendar entries or Account details as vCard or vCalendar.

1 → *Create new* → Select Attach field

2 Attach file

■ Data Folder files

Data Folder → Select folder → Select a file

■ Phonebook entries (vCard)

Phonebook details → Search Phonebook and select an entry (P.2-14) →  (Add)

■ Calendar entries (vCalendar)

Calendar item → Use  to select *Schedule* or *Task* → Select an entry

■ Account details (vCard)

Account details →  (Add)

- To add files, select Attach field → *Add file*.
- When files are attached, file type indicators and file names appear in Attached file list.

 : Image

 : Sound

 : Video

 : vCalendar

 : vCard

 : Other

Note

- When attaching Account details, Hobby cannot be attached.

Creating Graphic Mail

Example:

- Changing font size, background color
- Inserting image, pictograms in Data Folder
- Scrolling characters left and right
- For other items, see "Sending S! Mail" of Advanced Settings (P.4-15).

1  → **Create new** → **Select Enter Text field**

2  → **Graphic Mail**



Graphic Mail Entry Window

3 **Font size** → *Large, Normal or Small* → **Enter text**

- To continue, press  (Add art).

4  **(Add art)** → **Background color**

5 **Select a background color**

6  **(Add art)** → **Image**

7 **Pictures** → **Select a file**

- If Memory Card is inserted, select from *DCIM* folder.
- To capture image to insert, select *Camera*.
- If Memory Card is inserted, select *Pictures* and press  to select a Memory Card file.

8  **(Add art)** → **MYPIC** → **Select a pictogram**

9  **(Add art)** →  **(Select Area)** →  **to move cursor to starting point and  (Start)** →  **to specify Add art area** →  **(End)** → **Effect**

10 **Scrolling**

11 **Right to left or Swing**

12  **(Quit)** →  **(Done)**

- In Graphic Mail entry window, *Undo* to undo most recent change.
- In Graphic Mail entry window, *Cancel* → *Yes* to cancel Graphic Mail and return message text only.

Advanced

 **Advanced Settings** (P.4-15)

- Changing Address Type to To, Cc or Bcc
- Deleting Address
- Deleting Attached File
- Sending Feeling Mail
- Resetting Feeling Setting
- Saving S! Mail Being Created to Drafts
- Using Templates to Create S! Mail
- Deleting All Text
- Setting Scroll Unit in S! Mail Creation Window
- Jumping to Top/Bottom of Text
- Viewing 3D Pictograms before Sending
- Setting Message Actions
- Using Graphic Mail Settings
- Changing Font Color or Font Size
- Using Templates
- Moving Cursor to Top or End of Text
- Setting Conversion
- Inserting Information into S! Mail

- Adding Words to Dictionary (Japanese)
- Selecting Pictogram Setting
- Entering Address Quickly

Settings


- Insert or hide Signature (☞ P.11-2)
- Edit Signature (☞ P.11-2)
- Set or cancel Auto Delete for received messages when Received memory is full (☞ P.11-2)
- Set or cancel Auto Delete for sent messages when Sent memory is full (☞ P.11-2)
- Show or hide transmission progress bar (☞ P.11-2)
- Set message sending priority (☞ P.11-4)
- Set sent message Mail Service Center expiry (☞ P.11-4)
- Set time to send a message via Mail Service Center (☞ P.11-4)
- Select reply setting (☞ P.11-4)
- Set "reply to" address (☞ P.11-4)

Sending SMS Messages

Example: Sending SMS to a Phonebook entry.

1  → **Create new SMS**

2 **Select Recipient field**

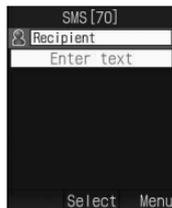

Text Entry Window

3 **From Phonebook** → Search Phonebook and select an entry (☞ P.2-14 Searching Phonebook 2)

4 **Select a phone number**

5 **Select Enter Text field** → Enter text

- Alternatively, with Enter Text field highlighted, enter text.

6  **(Send)**

- Enter SoftBank handset numbers in Recipient field. Add up to 20 Recipients.

- When entered text exceeds entry limit (☞ P.4-2), S! Mail conversion confirmation appears. Choose *Yes* to switch to S! Mail. If SMS contained Hangul text, delete Hangul text confirmation appears. Choose *Yes* to delete Hangul text and switch to S! Mail.

- Sent mail is saved in *Sent messages* or *Unsent*. If *Auto delete is On (Auto delete)* (☞ P.11-2) and memory full, sent messages are deleted, oldest first (except protected), automatically to make room for new ones. If *Auto delete is Off* or *Unsent* full, memory full confirmation appears. Delete items and then send message.

Advanced

Advanced Settings (P.4-18)

- Deleting Recipient
- Saving SMS to Drafts
- Converting SMS to S! Mail
- Deleting All Text
- Viewing 3D Pictograms before Sending
- Using Template to Send SMS

Settings


- Insert or hide Signature (P.11-2)
- Edit Signature (P.11-2)
- Set or cancel Auto Delete for received messages when Received memory is full (P.11-2)
- Set or cancel Auto Delete for sent messages when Sent memory is full (P.11-2)
- Show or hide transmission progress bar (P.11-2)
- Select reply setting (P.11-4)
- Set "reply to" address (P.11-4)
- Set Mail Service Center message expiry time (P.11-5)
- Set Message Center Number (P.11-5)
- Edit Message Center Number (P.11-5)
- Change character code (P.11-5)

Received Messages

Viewing New Messages

When a message is received, notice appears in Standby. Number of messages, sender and reception dates/times appear.

- Complete S! Mail including attachments is automatically received. Note that any applicable charges may apply depending on your subscription. Auto receiving option can be disabled (P.4-8).

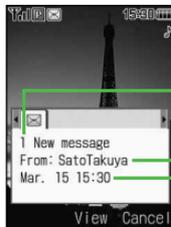

Message Notice Window


Number of messages

Sender

Reception dates/times

1


(View) → Select a folder

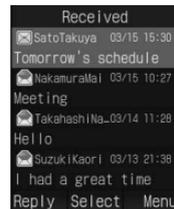

Message List Window

2

Select a new message

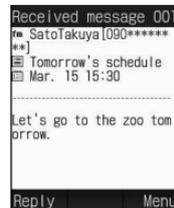

Message Window (S! Mail)

- If 3D Pictograms confirmation appears, select *Always, Only unread* or *Disable*.

4

Messaging

• 3D Pictograms

When viewing new/unread messages, message text appears in 3D animation.

If *3D pictograms* (P.11-3) is set to other than *Disable*, 3D animation appears. After animation stops or [Stop] (Stop) is pressed, Message window appears. Use Menu options in Message window.

• Sender Information in Notification Window

Phone number or mail address appears. If sender is saved in Phonebook, name appears. If incoming image is saved or set for Group, image appears. In *Security*, if *Secret mode* is set to *Hide*, sender name/image does not appear for Secret entries.

- If a file is attached, a file name and thumbnail appear at the bottom of the message.
- If messages are received out of Standby, number of messages, sender numbers or mail addresses (names if saved in Phonebook), etc. scroll across Display top. Afterward [Message] appears (P.1-3, P.11-3).
- When a Delivery Report arrives, [Delivery Report] flashes and disappears. In Standby, a notification appears.

- Received mail is saved in *Received messages*. If *Auto delete is On (Auto delete)* (P.11-2) and memory full, received messages are deleted, oldest first (except protected), automatically to make room for new ones. If *Auto delete is Off*, memory full confirmation appears. Delete messages and retry.

Receiving Messages Manually

When *Receiving options* (P.11-4) is set to *Manual retrieval*, S! Mail is temporarily stored on Mail Server; part of the received message is sent to handset as a reception notification. Retrieve complete messages from Mail Server.

- By default, *Auto download* is selected, which automatically retrieves whole message with any attachments.

- 1 [Message] → *Received messages*
- 2 Select a folder → Select a notification
- 3 *Retrieve mail* → Select a complete message



Notification
Details

• **Message List Indicators**

Unread Message Notification

: Priority high

: Priority standard

: Priority low

Read Message Notification

: Priority high

: Priority standard

: Priority low

Replying to Received Messages

Reply to received messages.

- 1  → *Received messages*
- 2 **Select a folder** → **Select a message to reply to**
- 3  → *Reply* → *S! Mail, S! Mail (History), SMS or SMS (History)*

- To include received message text, select *S! Mail (History)* or *SMS (History)*. Press  to open S! Mail or SMS Mail creation window with received message text.

- 4 **Create a message (P.4-3 Sending S! Mail 5)**

- *Re:* appears before Reply Subject automatically.


Forwarding Received Messages

Forward received message to other recipients.

- 1  → *Received messages* → **Select a folder**
- 2 **Highlight a message** →  → *Forward*
- 3 **Create a message (P.4-3 Sending S! Mail 2)**

- *Fw:* appears before forwarded S! Mail Subject automatically.
- To forward received SMS, select S! Mail or SMS.

Advanced

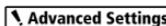 **Advanced Settings**  P.4-19

- Replying to All
- Forwarding Reception Notification or Server Mail
- Showing 3D Pictograms
- Adding Sender to Phonebook
- Viewing Sender and Recipient
- Copying Message Content
- Deleting Message
- Viewing Message Details
- Setting Attached Picture Appearance
- Setting Font Size
- Setting Character Code

- Setting Scroll Unit
- Moving to Top/Bottom of the Message
- Retrieving Complete Messages
- Stopping Server Mail Retrieval
- Replying to All

Settings

- Change font size (☞ P.11-2)
- Change scroll unit (☞ P.11-2)
- Request or cancel Delivery Report (☞ P.11-2)
- Set received message notice content or hide notice (☞ P.11-3)
- Select secret folder message notice setting (☞ P.11-3)
- Adjust 3D Pictogram auto play setting (☞ P.11-3)
- Select 3D Pictogram color settings (☞ P.11-3)
- Select 3D Pictogram display speed (☞ P.11-3)
- Set S! Mail receiving options (☞ P.11-4)
- Show or hide emotion in received Feeling Mail Notification (☞ P.11-4)
- Link External Light to incoming Feeling Mail (☞ P.11-4)
- Link Vibration to incoming Feeling Mail (☞ P.11-4)
- Set whether to sound handset when Feeling Mail arrives (☞ P.11-4)
- Linking Ringtone to incoming Feeling Mail (☞ P.11-5)
- Set Feeling Mail ringtone duration (☞ P.11-5)
- Set attached image appearance (☞ P.11-5)
- Set attached image auto playback (☞ P.11-5)
- Set attached sound auto playback (☞ P.11-5)

Managing & Using Messages

Organize messages by type in five default folders.

Folder	Message Type
Received messages	Saved Received Mail
Drafts	Saved Incomplete Mail
Templates	Created Graphic Mail/SMS Templates
Sent messages	Saved Sent Mail
Unsent	Failed/Cancelled/Outgoing Mail

Viewing from Message List

From list of Received messages, Unsent messages or Unsent, view the messages.


- 1  → **Received messages, Sent messages or Unsent** → **Select a folder as required**

- 2 **Select a message**

- In *Security*, if *Secret mode* is set to *Hide*, Secret folders do not appear. To show secret folders, press  → *Unlock temporarily* → Enter Phone Password →  (OK).
- In Message window, press  or  for next/previous message.

Message List

These indicators appear in message lists.

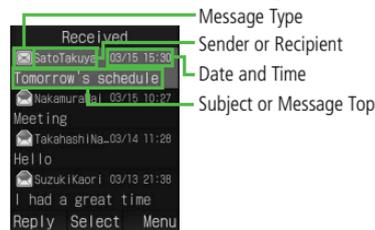

Message List (Received messages)

● Received Message Indicators

Unread S! Mail

-   : Priority high
-   : Priority standard
-   : Priority low
-   : Attached File Inserted

Read S! Mail

-   : Priority high
-   : Priority standard
-   : Priority low
-   : Attached File Inserted

Unread Message Notification

-  : Priority high
-  : Priority standard
-  : Priority low

Read Message Notification

-  : Priority high
-  : Priority standard
-  : Priority low

Unread SMS

-  : Saved to Phone
-  : USIM Card SMS

Read SMS

-  : Saved to Phone
-  : USIM Card SMS

Receiving

-  : S! Mail

• Draft Message Indicators**S! Mail**

-   : S! Mail
-   : Attached File Inserted

SMS

-  : SMS

• Unsent Message Indicators**S! Mail**

-   : S! Mail
-   : Attached File Inserted
-  : Sending

SMS

-  : SMS
-  : USIM Card SMS

• Sent Message Indicators**S! Mail**

-   : S! Mail
-   : Attached File Inserted

SMS

-  : SMS
-  : USIM Card SMS

Delivery Report

-   : Unread S! Mail
-  : Unread SMS

- In *Security*, if Secret mode is set to *Hide*, only number or mail address appears for messages to/from Secret entries.

Using Message Information

In a Message or Notification, highlight sender, recipient, phone number or mail address to save it to Phonebook, place a call, send mail, or open or bookmark a website.

Saving to Phonebook

- 1  → *Received messages* → **Select a folder** → **Select a message** → **Select phone number, E-mail address or URL** → *Add to phonebook*
- 2 **Save a number to Phonebook**
 - **To save as a new entry**
New → Enter each item (⊕P.2-12)
 →  (Save)
 - **To update existing entry**
Update → Search Phonebook and select entry (⊕P.2-14) → Enter each item (⊕P.2-12) →  (Save)

Saving as Bookmark

- 1  → *Received messages* → Select a folder → Select a message → Select URL → Add to bookmark
- 2  (Select) → Enter a title →  (Save)

Using Page Links

Use sender's address, or a phone number, mail address, or URL embedded in message text.

- 1  → *Received messages* → Select a folder → Select a message
- 2 Use linked information
 - To make a Voice Call
Select a phone number → *Voice call*
 - To edit a number before call
Select a phone number → *Edit before call*
 - To send a message
Select a phone number or an E-mail address → *Create message* → *S! Mail* or *SMS* → (P.4-3 Sending *S! Mail* 5, P.4-6 Sending SMS Messages 5)
 - To access the Internet
Select URL → *Go to URL* → *Yes*

• To select a phone number and send a message, select *S! Mail* or *SMS* and create a message.

Deleting Messages or Templates

Deleting Messages

Delete specified messages or all messages in Mailbox.

- 1  → *Received messages, Drafts, Sent messages or Unsent* → Select a folder as required
- 2 Delete message
 - To delete a message
Highlight a message →  → *Delete* → *Selected* → *Yes*
 - To delete multiple messages
 → *Delete* → *Multiple* → Check messages →  (Delete) → *Yes*
 - To delete all messages in the selected mailbox
 → *Delete* → *All* → Enter Phone Password →  (OK) → *Yes*

Deleting Templates

Delete specified templates or all saved templates.

1  → *Templates* → *Graphic Mail templates or Text templates*

2 **Delete template**

■ To delete a template

Highlight Graphic Mail template or text template →  → *Delete* → *Selected* → *Yes*

■ To delete multiple templates

 → *Delete* → *Multiple* → Check Graphic Mail templates or text templates →  (Delete) → *Yes*

■ To delete all templates

 → *Delete* → *All* → Enter Phone Password →  (OK) → *Yes*

Advanced

Advanced Settings P.4-20

- Editing & Sending Sent/Unsent Messages
- Saving Attached Files to Data Folder
- Saving Received/Sent Graphic Mail as Template
- Adding Address/Number to Phonebook
- Locking/Unlocking Messages
- Switching Message List View
- Sorting Messages
- Changing Messages to Read/Unread
- Moving SMS Messages to 731SC/USIM Card
- Viewing Message or Folder Details
- Saving Graphic Mail as Template
- Sending Saved Graphic Mail Template via S! Mail
- Viewing Saved Graphic Mail Template Details
- Sending Unsent Messages after Editing
- Viewing Unsent Message Details
- Forwarding Server Mail
- Deleting Mail List Messages

Settings

- Change message list view ( P.11-3)
- Change received message view ( P.11-3)
- Change sent message view ( P.11-3)

Managing Folders

Create folders in Received messages and Sent messages, and set a rule to each folder to automatically sort messages. Set Security to personal folders. *Received messages* and *Sent messages* folders cannot be deleted; the settings cannot be changed.

Creating Folders

1  → *Received messages or Sent messages*

2  → *Add new folder*

3 **Edit folder name**

Moving Messages

1  → *Received messages* or *Sent messages*

2 Move message

■ To move a message

Select a folder → Highlight a message →  → *Move to folder* → *Selected*

■ To move multiple messages

Select a folder →  → *Move to folder* → *Multiple* → Check messages →  (Move)

■ To move all messages

Select a folder →  → *Move to folder* → *All*

3 Select a destination folder

- Received messages are saved to *Received* folder, and sent messages are saved to *Sent* folder. To move back to the original folder after moving messages to another folder, select *Received* or *Sent* folder in Step 3.

Sorting Messages

Sort and save the sent/received messages automatically by phone number, mail address, etc. to the specified folders. Sort messages by S! Mail subject or SMS text. Set up to 20 rules per folder.

1  → *Received messages* or *Sent messages*

2 Highlight a folder to move to →  → *Auto sort*

3 Set sorting rule

■ To select phone number/E-mail address from Phonebook

Select Rule field → *Sender* or *Recipient* → *From phonebook* → Search Phonebook and select an entry (P.2-14) → Select phone number or E-mail address

■ To enter phone number/E-mail address directly

Select Rule field → *Sender* or *Recipient* → *Direct input* → Enter phone number or E-mail address

■ To select phone number/E-mail address from Group in Phonebook

Select Rule field → *Sender* or *Recipient* → *From group* → Select a group

- Groups saved on USIM Card cannot be set as a rule.

■ To select a rule from text

Select Rule field → *Subject* → Enter text to set as a rule

4  (OK)

Advanced

  P.4-23

- Changing Folder Name
- Setting Secret to Folder
- Changing Sorting Rules
- Deleting Folders



- Change received message view ( P.11-3)
- Change sent message view ( P.11-3)

Advanced Settings

Sending S! Mail

Entering Address from Other Than Phonebook

Select Recipient field in S! Mail creation window

■ To enter address from Call Log records

Select a record

■ To enter phone number directly

Enter Number → Enter phone number

■ To enter E-mail address directly

Enter address → Enter mail address

■ To select phone number from Group in Phonebook

From group → Select group

- When multiple phone numbers or mail addresses are saved in Phonebook, Selection window for address may appear. Select a phone number or an mail address.

Adding Address

Select Recipient field in S! Mail creation window with address already entered → *Add recipients*

■ To enter address from Call Log records

Select a record →  (Done)

■ To select from Phonebook

From Phonebook → Search Phonebook and select entry (P.2-14) → Select phone number or E-mail address →  (Done)

■ To enter phone number directly

Enter Number → Enter phone number →  (Done)

■ To enter mail address directly

Enter address → Enter mail address →  (Done)

■ To select phone number from Group in Phonebook

From group → Select group →  (Done)

- When multiple phone numbers or mail addresses are saved in Phonebook, Selection window for address may appear. Select a phone number or an mail address.
- When multiple addresses are saved, the number of addresses appears next to Recipient field  in Create Message window.

Changing Address Type to To, Cc or Bcc

Select Recipient field in S! Mail creation window → Highlight address →  → *Change to To, Change to Cc or Change to Bcc* →  (Done)

Deleting Address

Select Recipient field in S! Mail creation window

■ To delete an address

Highlight address →  → *Remove* → *Selected* →  (Done)

■ To delete all addresses

 → *Remove* → *All* → *Yes* →  (Done)

Viewing Attached File

Select Attach field in S! Mail creation window → Highlight a file to view →  (Open)

Deleting Attached File

Select Attach field in S! Mail creation window

■ To delete a file

Highlight a file →  → *Remove* → *Selected* →  (Done)

■ To delete all files

 → *Remove* → *All* → *Yes* →  (Done)

Sending Feeling Mail

In S! Mail creation window,  → *Feeling Setting* → Select a Feeling → Select pictogram

Resetting Feeling Setting

In S! Mail creation window,  → *Reset feeling*

Saving S! Mail Being Created to Drafts

In S! Mail creation window,  → *Save to Drafts*

- Only messages with recipient, subject, or text entered, or file attached can be saved to Drafts.

Using Templates to Create S! Mail

In S! Mail creation window,  → *Launch Graphic Mail template* → Select template

- When Subject/Text is saved, or files are attached or inserted, delete text confirmation appears. Choose *Yes* to delete text and open the Template.

Deleting All Text

In S! Mail creation window, highlight Enter Text field
→  → *Remove Text* → *Yes*

Setting Scroll Unit in S! Mail Creation Window

In S! Mail creation window, highlight Enter Text field
→  → *Scroll unit* → Select an item

Jumping to Top/Bottom of Text

In S! Mail creation window, highlight Enter Text field
→  → *Scroll jump* → Select an item

Viewing 3D Pictograms before Sending

In S! Mail creation window,  → *3D Pictogram*

Setting Message Actions

In S! Mail creation window,  → *Action settings*

■ To set whether to delete automatically after the other party reads the message

Set auto delete → Select an item

■ To set Reply request

Reply Request → *On/Off* → *On* → Enter Reply request message

- When *On* is set, select *Edit Message* from *Reply Request* to edit a message.

■ To restrict message forwarding

Forward NG → *On/Off* → *On* → Enter Forward NG message

- When *On* is set, select *Edit Message* from *Forward NG* to edit a message.

■ To restrict message deletion

Delete NG → *On/Off* → *On* → Delete NG message

- When *On* is set, select *Edit Message* from *Delete NG* to edit a message.

■ To restrict message access with a question

Quiz → *On/Off* → *Open question* → Select Question field → Enter question → Select Answer field → Enter answer → Select Message (Correct) field → Enter message when answer is correct → Select Message (Incorrect) field → Enter message when answer is incorrect →  (Done)

- To edit question, select *Edit question* from *Quiz*.

■ To restrict message access with a multiple choice question

Quiz → *On/Off* → *Multiple choice question* → Select Question field → Enter question → Highlight Answer field → Use  to select correct number → Select Example1 to 4 field to enter choices → Select Message (Correct) field → Enter message when answer is correct → Select Message (Incorrect) field → Enter message when answer is incorrect →  (Done)

- To edit a question, select *Edit question* from *Quiz*.
- When *Action settings* are set, the recipient's action can be set.

Requesting S! Mail Delivery Report

In S! Mail creation window,  → *Sending options*
→ *Delivery report* → Select an item

- Select *On* to receive a Delivery Report when a message is sent from Mail Server to the other party. This option can be set to the message being created.

Setting Reply Settings

In S! Mail creation window,  → *Sending options*
→ *Reply settings* → Select an item

- Set the address "*Reply to*" address (ⓈP.11-4).

Setting Message Priority

In S! Mail creation window,  → *Sending options*
→ *Priority* → Select an item

Setting Mail Server Expiry Time

In S! Mail creation window,  → *Sending options*
→ *Expiry time* → Select an item

Setting Delivery Time

In S! Mail creation window,  → *Sending options*
→ *Delivery time* → Select an item

Setting Remote Forward Action

In S! Mail creation window,  → *Sending options*
→ *Remote Fwd Action* → Select an item

- This function is available only when forwarding Server Mail message (ⓈP.4-22).

Using Graphic Mail Settings

In S! Mail creation window, select Enter Text field →

 → *Graphic Mail*

■ To insert BGM from Data Folder

Insert → *Insert BGM* → *Ring songs · tones or Music* → Select a file

■ To record BGM to insert

Insert → *Insert BGM* → *Record sound* →
(⊕P.8-7 Recording Sound ②)

■ To insert line

Insert → *Insert Line*

Changing Font Color or Font Size

In S! Mail creation window with text entered, Select

Enter Text field →  → *Graphic Mail* → 

(Select Area) → Use  to move cursor to the first character and  (Start) → Use  to select area →  (End)

■ To change Font color

Font color → Select color

■ To change Font size

Font size → Select size

■ To change effect

Effect → Select an effect → Select an item

■ To cancel these modifications

Undo

Using Templates

In S! Mail creation window,  → *Text templates*

→ Select a template

Moving Cursor to Top or End of Text

In S! Mail creation window,  → *Cursor position*

→ Select an item

Setting Conversion

In S! Mail creation window,  → *Conversion*

■ To activate/cancel Prediction

Prediction Off or *Prediction On*

■ To activate/cancel Learning

Learning Off or *Learning On*

■ To reset User's dictionary

Reset learning

■ To clear records of pictograms/symbols

Clear history

Inserting Information into S! Mail

In S! Mail creation window,  → *Advanced*

■ To insert signature

Signature

■ To insert Phonebook entry information

Phonebook → Search Phonebook and select entry (⊕P.2-14) → Select an item

■ To insert Account details

Account details → Select an item

Adding Words to Dictionary (Japanese)

In S! Mail creation window,  → *Add to dictionary*

→ (⊕P.2-10 Saving to User's Dictionary ②)

Selecting Pictogram Setting

In S! Mail creation window,  → *Pict setting* →

Select an item

Entering Address Quickly

In S! Mail creation window,  → *Quick address*

list → Select an item

Using Template to Send S! Mail

 → *Templates* → *Graphic Mail templates* →

Select Graphic Mail template →  (Mail) → (⊕P.4-3 Sending S! Mail ②)

Sending SMS

Entering Addresses from Sources

In SMS creation window, select Recipient field

■ To enter address from log

Open log and select a record

■ To enter phone number directly

Enter Number → Enter phone number

■ To select Phonebook Group number in Phonebook

From group → Select group

- When multiple phone numbers are saved in Phonebook, Selection window may appear. Select a phone number.
- When E-mail address is set for *Messages* in *Set default number*, the entry cannot be set as recipient.

Adding Recipient

Select Recipient field in SMS creation window with address already entered → *Add recipients*

■ To enter address from log

Select displayed log →  (Done)

■ To select from Phonebook

From Phonebook → Search Phonebook and select entry (☎P.2-14) → Select phone number →  (Done)

■ To enter phone number directly

Enter Number → Enter phone number →  (Done)

■ To select Phonebook Group number

From group → Select group →  (Done)

- When multiple phone numbers are saved in Phonebook, Selection window may appear. Select a phone number.
- When E-mail address is set for *Messages* in *Set default number*, the entry cannot be set.
- If multiple addresses are saved, a number appears next to Recipient field  in Create Message window.

Deleting Recipient

In SMS creation window, select Recipient field

■ To delete a recipient

Highlight address →  → *Remove* → *Selected* →  (Done)

■ To delete all addresses

 →  → *Remove* → *All* → *Yes* →  (Done)

Saving SMS to Drafts

In SMS Mail creation window,  → *Save to Drafts*
 • SMS can be saved to Drafts only when Recipient or Text is entered.

Converting SMS to S! Mail

In SMS creation window,  → *Change to S! Mail*

Requesting SMS Delivery Report

In SMS creation window,  → *Sending options* → *Delivery report* → Select an item

- Select *On* to receive a Delivery Report when a message is sent from Mail Server to the other party. This option can be set to the message being created.

Setting Mail Server Expiry Time

In SMS creation window,  → *Sending options* → *Expiry time* → Select an item

Deleting All Text

In SMS creation window, highlight Enter Text field →  → *Remove Text* → *Yes*

Viewing 3D Pictograms before Sending

In SMS creation window, highlight Enter Text field →  → *3D Pictogram*

Using Template to Send SMS

 → *Templates* → *Text templates* → Highlight template →  → *Send*

Received Messages

Retrieving Messages Manually

 → Retrieve new

Replying to All

 → Received messages → Select folder → Select message →  → Reply to all → Select an item → Create a message (📧P.4-3 Sending S! Mail 📧)

Forwarding Reception Notification or Server Mail

 → Received messages → Select folder → Highlight notification →  → Forward → Select an item → Create a message (📧P.4-3 Sending S! Mail 📧)

Showing 3D Pictograms

 → Received messages, Sent messages or Unsent → Select folder as required → Select message →  → 3D Pictogram

Adding Sender to Phonebook

 → Received messages → Select folder → Select message →  → Add to phonebook → Select phone number or E-mail address

■ To save as a new entry

New → Enter each item (📧P.2-12 Creating New Entries 📧)

■ To update existing entry

Update → Search Phonebook and select entry (📧P.2-14) → Enter each item (📧P.2-12 Creating New Entries 📧)

Viewing Sender and Recipient

 → Received messages or Sent messages → Select folder as required → Select message →  → View mail address

Copying Message Content

 → Received messages or Sent messages → Select folder as required → Select message →  → Copy

■ To copy sender or recipient address

Address → Select address to copy

■ To copy subject

Subject (📧P.2-25 Specify Range to Copy/Cut)

■ To copy text

Message txt (📧P.2-25 Specify Range to Copy/Cut)

Deleting Message

 → Received messages, Sent messages or Unsent → Select folder as required → Select message →  → Delete → Yes

Viewing Message Details

 → Received messages, Sent messages or Unsent → Select folder → Select message →  → Details

Setting Attached Picture Appearance

 → Received messages → Select folder → Select message →  → Picture appearance → Select an item

Setting Font Size

 → Received messages, Sent messages or Unsent → Select folder as required → Select message →  → Font size → Select an item

Setting Character Code

 → Received messages → Select folder → Select message →  → Char-code → Select an item

Setting Scroll Unit

 → Received messages, Sent messages or Unsent → Select folder as required → Select message →  → Scroll unit → Select an item

Moving to Top/Bottom of the Message

 → Received messages, Sent messages or Unsent → Select folder as required → Select message →  → Scroll jump → Select an item

Viewing Attachment

 → *Received messages, Sent messages* or *Unsent* → Select folder as required → Select message → Select a file → *Open*

- To save a file to Data Folder before viewing, Select a file in Message window and select *Save*.
- To save attachment to vCard or vCalendar before viewing, select a file in Message window and select *Register to Phonebook* or *Register to Calendar*.
- To save vCard or vCalendar to Phonebook or Calendar after viewing, press  (Register).
- When a file requiring Content Key is attached, a confirmation appears. To view the file, choose *Yes* and purchase or acquire Content Key.
- When single view/play file is attached, a confirmation appears.

Retrieving Complete Messages

 → *Received messages* → Select folder → Highlight a message →  → *Retrieve*

Stopping Server Mail Retrieval

 → *Received messages* → Select folder → Highlight a message →  → *Cancel retrieving*

Replying to All

 → *Received messages* → Select folder → Highlight a message →  → *Reply to all* → Select an item → Create a message (➔P.4-3 Sending S! Mail )

Using & Managing Messages

Editing & Sending Sent/Unsent Messages

 → *Sent messages* or *Unsent* → Select folder as required → Select message →  → *Edit & send* → Create message (➔P.4-3 Sending S! Mail )

Saving Attached Files to Data Folder

 → *Received messages* or *Sent messages* → Select folder as required → Select message → 

Save items

■ To save a file

Highlight a file to save →  (Select)

■ To save multiple files

 → *Save multiple* → Check files to save →  (Save)

■ To save all files

 → *Save All*

- When a message to notify the same file name exists, press  (OK) →  (Select) → Edit file name →  (Save).

Saving Received/Sent Graphic Mail as Template

 → *Received messages* or *Sent messages* → Select folder as required → Select message →  → *Save as Graphic Mail template* → Enter file name

- Save S! Mail text graphics as a template (➔P.4-5).

Adding Address/Number to Phonebook

 → *Received messages* or *Sent messages* → Select folder → Highlight a message →  → *Add to phonebook* → Select phone number or E-mail address

■ To save as a new entry

New → Enter each item (➔P.2-12 Creating New Entries )

■ To update existing entry

Update → Search Phonebook and select entry (➔P.2-14) → Enter each item (➔P.2-12 Creating New Entries )

Locking/Unlocking Messages

 → *Received messages, Drafts, Sent messages* or *Unsent* → Select a folder as required

■ To lock/unlock a message

Highlight a message →  → *Lock* or *Unlock* → *Selected*

■ To lock/unlock multiple messages

 → *Lock* or *Unlock* → *Multiple* → Check messages to delete →  (Lock) or  (Unlock)

■ To lock/unlock all messages

 → *Lock* or *Unlock* → *All*

Switching Message List View

 → *Received messages, Drafts, Sent messages* or *Unsent* → Select folder as required →  → *Message list view* → Select an item

- Message list view setting changed via Menu becomes invalid when Message list window is closed.
- Items in *Message list view* setting vary by folder.

Sorting Messages

 → *Received messages, Drafts, Sent messages* or *Unsent* → Select a folder as required →  → *Sort by* → Select an item

- Sort messages by the following items.
 - By time (*Time* ↓ or *Time* ↑)
 - By sender (*Sender*)
 - By recipient (*Recipients*)
 - By read or unread messages (*Read or Unread*)
 - By message type (*Message type*)
 - By subject (*Subject*)
 - By message size (*Size*)
 - By attachment (*Attach*)
 - By priority (*Priority*)
 - By locked/unlocked message (*Lock*)
- When *Message type* is selected, messages are sorted by the order of S! Mail (including reception notification), SMS saved on USIM Card, and then SMS saved on 731SC.

- When *Sender* or *Subject* is selected, messages are sorted by the order of single-byte symbol, single-byte number, single-byte alphabet, single-byte Katakana, double-byte symbol, double-byte Hiragana, double-byte Katakana, Kanji, double-byte number, and double-byte alphabet. When *Subject* is selected, messages with *no subject* appear first.

Changing Messages to Read/Unread

 → *Received messages* → Select a folder

■ To change a message to Read/Unread

Highlight a message to switch to Read or Unread →  → *Switch to read* or *Switch to unread* → *Selected*

■ To change multiple messages to Read/Unread

Highlight messages to switch to Read or Unread →  → *Switch to read* or *Switch to unread* → *Multiple* → Check messages to switch to Read or Unread →  (Read/Unread)

■ To change all messages to Read/Unread

 → *Switch to read* or *Switch to unread* → *All*

Moving SMS Messages to 731SC/USIM Card

 → *Received messages, Sent messages* or *Unsent* → Select folder as required → Highlight SMS →  → *Move to phone* or *Move to USIM*

- Save up to 10 messages to USIM Card. The number of messages that can be saved varies by the types of USIM Card.
- When moving received SMS messages in a personal folder to USIM Card, a confirmation appears. Choose *Yes* to move to USIM Card.

Viewing Message or Folder Details

■ To view message details

 → *Received messages, Drafts, Sent messages* or *Unsent* → Select a folder as required → Highlight a message →  → *Details*

■ To view folder details

 → *Received messages* or *Sent messages* → Highlight a folder →  → *Details*

Saving Graphic Mail as Template

In S! Mail creation window,  → *Save as Graphic Mail template* → Enter file name

- Save Graphic Mail messages to Templates (ⓈP.4-5).

Sending Draft Message

 → *Drafts* → Select a message →  (Send)

- When recipient is not entered,  (Send) does not appear.

Viewing Saved Graphic Mail Templates

 → *Templates* → *Graphic Mail templates* → Select Graphic Mail template

Editing Saved Graphic Mail Template

 → *Templates* → *Graphic Mail templates* → Select saved Graphic Mail template →  (Mail) → Select Enter Text field → Enter text →  (Done) →  → *Save as Graphic Mail template* → Enter file name

Sending Saved Graphic Mail Template via S! Mail

 → *Templates* → *Graphic Mail templates* → Select Graphic Mail template →  → *Send via message* → (P.4-3 Sending S! Mail 2)

Viewing Saved Graphic Mail Template Details

 → *Templates* → *Graphic Mail templates* → Select Graphic Mail template →  → *Details*

Viewing Delivery Report

 → *Sent messages* → Select a folder → Select a message with *Delivery* setting →  (Report)

- Use with SMS/S! Mail addressed to phone number.

Resending Unsent Messages

 → *Unsent* → Highlight a message to resend →  (Resend)

Sending Unsent Messages after Editing

 → *Unsent* → Highlight a message to edit →  → *Edit* → (P.4-3 Sending S! Mail 2)

Viewing Unsent Message Details

 → *Unsent* → Highlight a message to view →  → *Error details*

Retrieving Mail List

 → *Server mail* → *Retrieve mail list* → *Yes*

- To update Mail list after received, press  (Update), or  and select *Retrieve mail list*.

Receiving Mail List Messages

 → *Server mail*

■ To retrieve a selected message

Retrieve mail list → *Yes* → Highlight a message →  (Get)

- Alternatively, highlight a message to retrieve, then press  and select *Get*.

■ To receive all messages

Retrieve all mails

- Alternatively, select *Retrieve mail list* → *Yes* → *Retrieve all*.

Forwarding Server Mail

 → *Server mail* → *Retrieve mail list* → *Yes* → Highlight a message →  → *Remote forward* → Select Recipient field

■ Select recipient from Call Log records

Select a record →  (Send)

■ To select recipient from Phonebook

From Phonebook → Search Phonebook and select entry (P.2-14) → Select phone number or E-mail address →  (Send)

■ To enter phone number directly

Enter Number → Enter phone number →  (Send)

■ To enter E-mail address directly

Enter address → Enter E-mail address →  (Send)

■ To select recipient from Group in Phonebook

From group → Select recipient to enter →  (Send)

- To edit subject or text, select Subject or Enter Text field after entering recipient and edit as required (P.4-3).
- *Fw:* appears before forwarded S! Mail Subject automatically.
- Set whether to delete message from Server after forwarding Server Mail message (P.4-16 Setting Remote Forward Action).

Deleting All Server Mail

 → *Server mail* → *Delete all* → Enter Phone Password →  (OK) → Select an item

Deleting Mail List Messages

 → *Server mail* → *Retrieve mail list* → *Yes*

■ To delete a message

Highlight a message →  → *Delete* → *Selected* → *Yes*

■ To delete multiple messages

 → *Delete* → *Multiple* → Check messages to delete →  (Delete) → *Yes*

■ To delete all messages

 → *Delete* → *All* → Enter Phone password →  (OK) → *Yes*

Viewing Server Mail Status

 → *Server mail* → *Server mail memory*

- To update status, press  (Update).

Viewing Memory Status

 → *Memory status*

- Received, Drafts, Sent and Unsent Mail memory appears by Size. Press  (Count) to see Mail memory by Count.
- USIM Card SMS appears by Count only.
- To delete contents of current item, press  (Delete) → *Yes* (P.2-33 Deleting Registered/Saved Data).

Folder Management

Changing Folder Name

 → *Received messages* or *Sent messages* → Highlight a folder →  → *Change name* → Enter folder name

Setting Secret to Folder

 → *Received messages* or *Sent messages* → Highlight a folder →  → *Set secret* → Enter Phone Password →  (OK) →  (OK)

- In *Security*, if *Secret mode* is set to *Hide*, Secret folders do not appear. To cancel *Secret mode* temporarily, press  → *Unlock temporarily* → Enter Phone Password →  (OK).

Changing Sorting Rules

 → *Received messages* or *Sent messages* → Highlight a folder →  → *Auto sort* → Highlight Rule field →  → *Replace rule* → (P.4-14 Sorting Messages 3)

Deleting Sorting Rules

 → *Received messages* or *Sent messages* → Highlight a folder containing a rule →  → *Auto sort*

■ To delete a rule

Highlight Rule field →  → *Delete* → *Selected*

■ To delete all rules

 → *Delete* → *All* → *Yes*

Deleting Folders

 → *Received messages* or *Sent messages* → Highlight a folder →  → *Delete* → Enter Phone Password →  (OK) → *Yes*


Internet Services



Internet Services	5-2
SSL & TLS	5-2
Cache	5-2
Yahoo! Keitai	5-3
Yahoo! Keitai Main Menu	5-3
PC Site Browser	5-3
PC Site Browser Main Menu	5-3
Page Operations	5-4
Scrolling	5-4
Moving Cursor	5-5
Previous/Next Page	5-5
Text Entry & Item Selection	5-5
Bookmarks	5-6
Saving as Bookmark	5-6
Accessing from Bookmark	5-6
Saved Pages	5-7
Saving Page	5-7
Opening Saved Page	5-7
Advanced Settings	
Yahoo! Keitai	5-7
PC Site Browser	5-11
Page Operations	5-14
Bookmarks	5-15
Saved Pages	5-16

Internet Services

Access Mobile Internet sites via Yahoo! Keitai or Internet sites via PC Site Browser. View page contents or download image/music files.

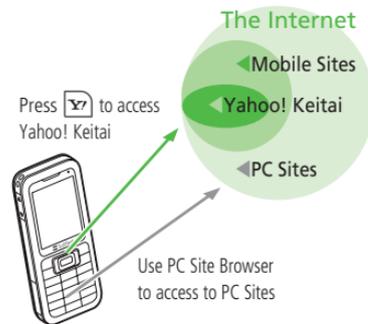

- In this guide, "Yahoo! Keitai" refers to the SoftBank Mobile Internet portal and service itself. "PC sites" are sites accessible via PC Site Browser. "Internet" refers to both Internet and Mobile Internet sites.
- A separate subscription is required for Internet services.
- Before using Internet, retrieve Network information.

Note

- **Internet connections incur Packet Communication fees.**

SSL & TLS

Secure Sockets Layer (SSL) and Transport Layer Security (TLS) are encryption protocols for secure Internet transmissions of important/sensitive information (credit card numbers, etc.) and authentication.

Confirm electronic certificates saved on handset (➡ P.5-9, P.5-13).

Note

- **Using SSL/TLS**
When a security notice appears, subscribers must decide for themselves whether or not to open a page.
Opening secure pages constitutes agreement to the terms of usage.
SOFTBANK MOBILE Corp., VeriSign Japan K.K., Cybertrust Japan Co., Ltd., Entrust Japan Co., Ltd., GlobalSign K.K., RSA Security Inc. and SECOM Trust Systems Co., Ltd. are not liable for the security of SSL/TLS. No liability is assumed for any damage associated with SSL/TLS use.

Cache

Retrieved Mobile Internet pages are temporarily saved in cache. Cache remains even after a session ends or handset is turned off. When full, oldest pages are automatically deleted to make room for new ones.

When a saved page is opened again, it may open from Cache. For the latest content, reload the page.

- When another USIM Card is inserted, Cache contents are automatically deleted.
- When a page with an expiry date is saved, page is automatically deleted upon expiry.

Yahoo! Keitai

Yahoo! Keitai Main Menu

Access Mobile sites via Yahoo! Keitai main menu.




2 Select an item

- When accessing Mobile Internet for the first time, Retrieve NW info window appears after Step 1. Retrieve Network information to open a page.
- To change to a PC site from a Yahoo! Keitai page, press → *Manage content* → *Switch to PC site browser* → *This page or Link* → (OK) → *Yes or No*.

Note

- When *Send referer* is set to *Not send*, pages may not be displayed (⊕P.5-9).

Entering URL

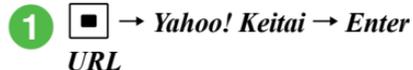

- "http://" is set by default.

2 Enter URL

Advanced



- Moving to Next Page
- Copying Text
- Refreshing Page
- Entering URL to Open Another Site/Page
- Entering URL Quickly
- Entering URL from History
- Deleting Access History
- Moving to Main Menu
- Exiting Browser




- Delete cache/Cookie/certificates (ⓘ P.11-6)
- Show or hide Manufacture Number (ⓘ P.11-6)
- Send or hide Referer (ⓘ P.11-6)
- Select Cookie setting (ⓘ P.11-6)
- Select Script setting (ⓘ P.11-6)
- Confirm Root Certificate (ⓘ P.11-6)
- Set Certificate retention period (ⓘ P.11-6)
- Initialize Browser (ⓘ P.11-6)
- Reset settings (ⓘ P.11-6)

PC Site Browser

PC Site Browser Main Menu

Access PC sites via PC Site Browser main menu.

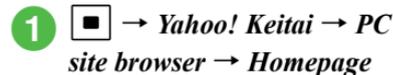

- If a warning appears, press (OK) and choose *Yes or No*.

2 Select an item

- Activate PC Site Browser, appears.
- Some sites may not appear correctly.
- To open Yahoo! Keitai from PC Site Browser, press → *Manage content* → *Switch to Yahoo! Keitai* → *This page or Link* → If a warning appears, (OK) → *Yes or No*.

Note

- When *Send referer* is set to *Not send*, page may not open (⊕P.5-13).
- Viewing content rich sites may incur high Packet Communication charges.

Entering URL

1  → *Yahoo! Keitai* → *PC site browser* → *Enter URL*

- "http://" is set in URL field by default.

2 **Enter URL**

- If a warning appears, press  (OK) and choose *Yes* or *No*.

Advanced

 **Advanced Settings** (☞ P.5-11)

- Moving to Next Page
- Copying Text
- Refreshing Page
- Entering URL to Open Page
- Entering URL Quickly
- Entering URL from History
- Deleting Access History
- Opening Main Menu
- Changing Page Layout
- Exiting Browser


 **Settings**

- Delete cache/Cookie/certificates (☞ P.11-7)
- Show or hide Manufacture Number (☞ P.11-7)
- Send or hide Referer (☞ P.11-7)
- Select Cookie setting (☞ P.11-7)
- Select Script setting (☞ P.11-7)
- Confirm Root Certificate (☞ P.11-7)
- Set Certificate retention period (☞ P.11-7)
- Show or hide warning (☞ P.11-7)
- Initialize Browser (☞ P.11-7)
- Reset settings (☞ P.11-7)

Page Operations

Scrolling

Scroll bar appears when window content extends beyond current view.

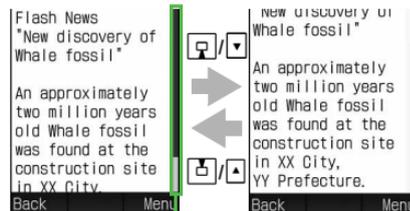

Scroll Bar

: Scroll down line by line

: Scroll up line by line


- When a horizontal scroll bar appears, use  to scroll to right, or  to the left.

Side Key : Scroll page down by multiple lines

Side Key : Scroll page up by multiple lines

Moving Cursor

When selecting an item such as link, move cursor to the item.

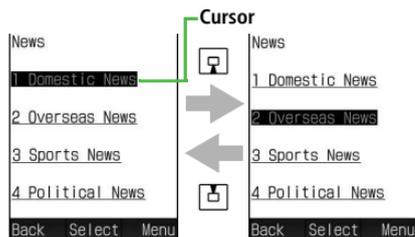

: In a vertical list, move cursor down


- Press  to move cursor down.

: In a vertical list, move cursor up

- Press  to move cursor up.

- When multiple items exist in the same line, press  to move cursor to right or left.
- Move cursor onto linked item, then it is highlighted or enclosed in a blue frame.

Previous/Next Page

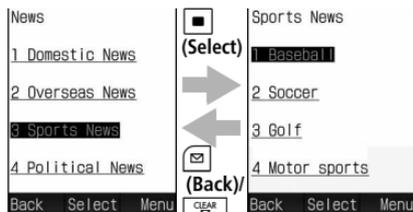

Highlight link and press  (Select)

: Open the next page

- Alternatively, press  and select *Next*.


 (Back) / 

: Return to previous page

- Press  (Back) or  with no previous page, end browser a confirmation appears. Choose *Yes* to end Internet connection.

Text Entry & Item Selection

Pages may contain fields and items shown below.

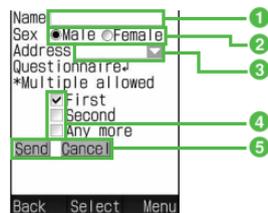

1 Text entry field

Enter data, certification passwords, etc. Highlight text entry field, press  (Select) and enter text.

2 Radio button

Select an item only. Highlight an item with  and press  (Select) to select it (Appearing as .

3 Menu field

Open a menu and select item. Highlight an item and press  (Select) to open it. Use  to highlight an item and press  (Select) to select it. If multiple items are selectable, press  to cancel all.

4 Check box

Select multiple items. Highlight an item with  and press  (Select) to select it (Appearing as ). To deselect an item, highlight  and press  (Select).

5 Command button

Perform operations assigned to a button such as *Send* or *Reset*. Highlight a command button and press  (Select) to execute the operation.

Note

- Text entry and item selection varies by page.

Advanced

 **Advanced Settings**  P.5-14

Settings

- Change page font size ( P.11-6, P.11-7)
- Set page scroll unit ( P.11-6, P.11-7)
- Show or hide page images ( P.11-6, P.11-7)
- Play or mute page sounds ( P.11-6, P.11-7)
- Set text size in Yahoo! Keitai pages ( P.11-12)

Bookmarks

Save page URLs as Bookmarks.

Saving as Bookmark

Save up to 50 Bookmarks each of Yahoo! Keitai and PC Site Browser.

- 1 Open a page
- 2  → *Bookmarks* → *Save*
- 3 Enter title

Accessing from Bookmark

- 1  → *Yahoo! Keitai* → *Bookmarks*

- When connecting from PC Site browser Bookmark,  → *Yahoo! Keitai* → *PC site browser* → *Bookmark*.

- 2 Select a bookmark

Note

- Packet Communication fees apply for Internet connection.

Advanced

 **Advanced Settings**  P.5-15

- Sending Bookmark URL
- Sending Bookmark URL via Infrared
- Changing Bookmark Order
- Saving Bookmark to Data Folder
- Viewing Bookmark Details
- Deleting Yahoo! Keitai Bookmark
- Deleting PC Site Bookmark

Saved Pages

Save page contents to view without connections.

Saving Page

Save up to 30 pages each of Yahoo! Keitai and PC Site Browser.

1 Open a page

2  → *Saved pages* → *Save*

3 Enter title

Opening Saved Page

1  → *Yahoo! Keitai* →

Saved pages

- To open PC Site Browser Saved Pages,  → *Yahoo! Keitai* → *PC site browser* → *Saved pages*.

2 Select a page

Note

- If USIM Card inserted when pages are saved is replaced, *Saved Pages* do not appear.

Advanced

 **Advanced Settings**  P.5-16

- Renaming Saved Page
- Changing Order of Saved Pages
- Deleting Saved Pages in Yahoo! Keitai
- Deleting Saved Pages in PC Site Browser

Advanced Settings

Yahoo! Keitai

Moving to Next Page

In a page,  → *Next*

Copying Text

In a page,  → *Copy text*

■ To copy selected text

Use  to move cursor to the first character to copy →  (Start) → Use  to specify range with →  (End)

■ To copy all text in text entry window

 (All)

Refreshing Page

In a page,  → *Refresh*

Entering URL to Open Another Site/Page

In a page,  → *Enter URL* → Enter URL

Entering URL Quickly

In URL entry window  → *Quick address list* → Select an item

Entering URL from History

■ From Yahoo! Keitai

 → Yahoo! Keitai → Enter URL → 
→ Enter URL logs → Select URL

■ From a page

 → Enter URL →  → Enter URL logs
→ Select URL

- In URL entry window, enter URL from History. Up to 10 URL logs appear, newest first. When maximum is reached, pages are automatically deleted oldest first.

Saving Document File

In a page, highlight document link →  (Select) → Save

■ To play file

Play

■ To view file details

Details

■ To return to page

Back to browser

- If file name exists confirmation appears, choose *Yes* to save under a different name. *No* to edit file name.

Saving Image/Background Image

In a page with an image,  → Save files → Select Save items and image or Save BG image → Save/Save to Pictograms

■ To view image

Display

■ To set image to Wallpaper etc.

Set as (ⓈP.2-32 Setting Images to Wallpaper etc.)

■ To view image details

Details

■ To return to page

Back to browser

- If file name exists confirmation appears, choose *Yes* to save under a different name. *No* to edit file name.

Saving Background Sound

In a page playing background sound,  → Save files → Save items →  (Save)

■ To play sound file

Play

■ To set sound file as Ringtone

Set as (ⓈP.2-32 Setting Sound File to Ringtone in Normal Mode)

■ To view sound file details

Details

■ To return to page

Back to browser

- If file name exists confirmation appears, choose *Yes* to save under a different name. *No* to edit file name.

Switching Browser

In a page,  → Manage content → Switch to PC site browser → Select an item

- If a warning appears, press  (OK) and choose *Yes* or *No*.
- *Link* can be selected only when a link is highlighted.

Searching Text

In a page,  → Manage content → Search → Enter text to search

- Words that match are highlighted. Press  (Prev.) or  (Next) to search for the previous or next match. Press  (Cancel) to back to a page.

Moving to Top/Bottom of Page

In a page,  → Manage content → Jump to top or Jump to bottom

Sending URL

In a page,  → Manage content → Send URL → S! Mail or SMS → (ⓈP.4-3 Sending S! Mail ②, P.4-6 Sending SMS Messages ②)

Opening Previously Viewed Page

■ From Yahoo! Keitai

 → Yahoo! Keitai → History → Select URL

■ From a page

In a page,  → Manage content → History → Select URL

- To open in a new tab, highlight URL, press , and select *Open new tab*.
- Up to 50 accessed URLs are saved.

Deleting Access History

■ → Yahoo! Keitai → History

■ To delete an entry

Highlight URL → **Y** → Delete → Selected → Yes

■ To delete multiple entries

Y → Delete → Multiple → Check histories to delete → **E** (Delete) → Yes

■ To delete all entries

Y → Delete → All → Enter Phone Password → **■** (OK) → Yes

- Alternatively, in a page, press **Y** → Manage content → History → Highlight URL → **Y** → Delete.

Zooming Page in/out

In a page, **Y** → Manage content → Zoom In/Out → Use **+** to select digit → **■** (Save)

Viewing Only Selected Frame

In a page, **Y** → Manage content → Frame in

- Some pages may be divided into multiple sections. Such a section is referred to as a "Frame".
- To return to the normal display, select Manage content → Frame out.

Viewing Page Details

In a page, **Y** → Manage content → Details

■ To view page information

Page information

■ To view Server certificate

Server certificate

Moving to Main Menu

In a page, **Y** → Yahoo! Keitai

Changing Font Size

In a page, **Y** → Settings → Font size → Select an item

Changing Character Code

In a page, **Y** → Settings → Encoding → Select an item

- If page text appears garbled, changing character encoding may solve the problem.

Changing Scroll Unit

In a page, **Y** → Settings → Scroll unit → Select an item

Setting Show/Play of Image/Sound

In a page, **Y** → Settings → Downloads

■ To set image

Display image → Select an item

■ To set sound

Play sounds → Select an item

Clearing Cache

In a page, **Y** → Settings → Memory manager → Clear cache → Yes

Deleting Cookies

In a page, **Y** → Settings → Memory manager → Delete cookies → Yes

Deleting Certificates

In a page, **Y** → Settings → Memory manager → Delete certificates → Yes

Setting Manufacture Number Transmission

In a page, **Y** → Settings → Security → Manufacture number → Select an item

Sending/Not Sending Referer Information

In a page, **Y** → Settings → Security → Send referer → Select an item

- Referer is a link source URL information to be sent to Web server when accessing websites.

Enabling Cookies

In a page, **Y** → Settings → Security → Cookies → Select an item

- Select *Confirm* for acceptance confirmation every time before a Cookie is saved.
- Cookie automatically saves identification information of visitors in handset. Cookies contain user information allowing sites to recognize users and track preferences.

Enabling Script

In a page, **Y** → Settings → Security → Script → Select an item

Checking Root Certificates

In a page, **Y** → Settings → Security → Root certificates → Select a certificate

- View electronic certificate preinstalled on handset.

Certificate Retention

In a page,  → *Settings* → *Security* → *Certificate retention* → Select an item

Initializing Saved Information

In a page,  → *Settings* → *Initialized browser* → Enter Phone Password →  (OK) → *Yes*

- Initialize browser settings or information such as Bookmarks or Saved Pages.

Resetting Yahoo! Keitai Settings

In a page,  → *Settings* → *Reset settings* → Enter Phone Password →  (OK) → *Yes*

Opening Multiple Pages

Highlight page link →  → *Tab menu* → *Open new tab*

- Use tabs at top of window to open up to three pages.
- Yahoo! Keitai and PC sites cannot be open simultaneously.
- Some pages may open in a new tab automatically.
- When multiple tabs are open, some pages may be partially obscured. Close unnecessary tabs.

Using Multiple Pages

When multiple tabs are open,  → *Tab menu*

■ To switch between tabs

Switch to other tabs → Use  to move to another tab to view →  (Select)

■ To close selected tab

Close selected tab

■ To select and close a tab

Close other tabs → Use  to move to another tab to close →  (Select)

Exiting Browser

In a page,  → *Exit*

Saving Automatic Save-type Images

Highlight image link in a page →  (Select) →  (OK)

■ To view image

Display

■ To set image to Wallpaper

Set as (☎P.2-32 Setting Images to Wallpaper etc.)

■ To view image details

Details

■ To return to a page

Back to browser

- If file name exists confirmation appears, choose *Yes* to save under a different name, *No* to edit file name.

Zooming Image in/out

In image view,  (Full) →  (Zoom)

- Press / to zoom in/out

Viewing Details in Image View

In image view,  (Details)

Setting Saved Image to Wallpaper etc.

In image view,  (Set as) → (☎P.2-32 Setting Images to Wallpaper etc.)

Saving Automatic Save-type Sound

Highlight sound link in a page →  (Select) →  (OK)

■ To play sound file

Play

■ To set sound file as Ringtone

Set as (☎P.2-32 Setting Sound File to Ringtone in Normal Mode)

■ To view sound file details

Details

■ To return to a page

Back to browser

- If file name exists confirmation appears, choose *Yes* to save under a different name. *No* to edit file name.

Saving Manual Save-type Sound

Highlight sound link in a page →  (Select) →

Save

■ To play sound file

Play

■ To set saved sound file as Ringtone

Set as (☎P.2-32 Setting Sound File to Ringtone in Normal Mode)

■ To view sound file details

Details

■ To return to a page

Back to browser

- If file name exists confirmation appears, choose *Yes* to save under a different name. *No* to edit file name.

Setting Saved Sound File as Ringtone

In Player window,  (Stop) →  (Set as) → (P.2-32 Setting Sound File to Ringtone in Normal Mode)

Saving Automatic Save-type Video

Highlight video link in a page →  (Select) →  (OK)

■ To play video

Play

■ To set saved video file as Ringtone

Set as (P.2-32 Setting Video File to Ringtone in Normal Mode)

■ To view video file details

Details

■ To return to a page

Back to browser

- If file name exists confirmation appears, choose *Yes* to save under a different name. *No* to edit file name.

Saving Manual Save-type Video

Highlight video link in a page →  (Select) → *Save*

■ To play video

Play

■ To set video file as Ringtone

Set as (P.2-32 Setting Video File to Ringtone in Normal Mode)

■ To view video file details

Details

■ To return to a page

Back to browser

- If file name exists confirmation appears, choose *Yes* to save under a different name. *No* to edit file name.

Setting Saved Video File as Ringtone

In Player window of saved video,  (Stop) →  (Set as) → (P.2-32 Setting Sound File to Ringtone in Normal Mode)

PC Site Browser

Moving to Next Page

In a page,  → *Next*

Copying Text

In a page,  → *Copy text*

■ To copy selected text

Use  to move cursor to the first character →  (Start) → Use  to specify range →  (End)

■ To copy all text in text entry window

 (All)

Refreshing Page

In a page,  → *Refresh*

Entering URL to Open Page

In a page,  → *Enter URL* → Enter URL

Entering URL Quickly

In URL entry window,  → *Quick address list* → Select an item

Entering URL from History

■ From PC Site Browser

■ → Yahoo! Keitai → PC site browser → Enter URL → [Y] → Enter URL logs → Select URL

■ From a page

[Y] → Enter URL → Select URL entry field → [Y] → Enter URL logs → Select URL

- In URL entry window, enter URL from History. Up to 10 URL logs appear, newest first. When limit is reached, pages are automatically deleted oldest first.

Saving Document File

In a page, highlight file link → [] (Select) → Save

■ To play file

Play

■ To view file details

Details

■ To return to a page

Back to browser

- If file name exists confirmation appears, choose *Yes* to save under a different name. *No* to edit file name.

Switching Browser

In a page, [Y] → Manage content → Switch to Yahoo! Keitai → Select an item

- If a warning appears, press [] (OK) → *Yes* or *No*.
- *Link* can be selected only when a link is highlighted.

Searching Text

In a page, [Y] → Manage content → Search → Enter text to search

- Words that match are highlighted. Press [] (Back) or [] (Next) to search for the previous or next match. Press [Y] (Cancel) to back to a page.

Moving to Top/Bottom of Page

In a page, [Y] → Manage content → Jump to top or Jump to bottom

Sending URL

In a page, [Y] → Manage content → Send URL → S! Mail or SMS → (P.4-3 Sending S! Mail 2, P.4-6 Sending SMS Messages 2)

Opening Previously Viewed Pages

■ From Yahoo! Keitai

■ → Yahoo! Keitai → PC site browser → History → Select URL

■ From a page

[Y] → Manage content → History → Select URL

- To open in a new tab, highlight URL, press [Y], and select *Open new tab*.
- Up to 50 accessed page URLs are saved.

Deleting Access History

■ → Yahoo! Keitai → PC site browser → History

■ To delete an entry

Highlight URL → [Y] → Delete → Selected → Yes

■ To delete multiple entries

[Y] → Delete → Multiple → Check entries → [] (Delete) → Yes

■ To delete all entries

[Y] → Delete → All → Enter Phone Password → [] (OK) → Yes

- Alternatively, in a page, press [Y] → Manage content → History → Highlight URL → [Y] → Delete.

Zooming Page in/out

In a page, [Y] → Manage content → Zoom In/Out → Use [] to select digit → [] (Save)

Viewing Only Selected Frame

In a page, [Y] → Manage content → Frame in

- Some pages may be divided into multiple sections. Such a section is referred to as a "Frame".
- To return to the normal display, [Y] → Manage content → Frame out.

Viewing Page Details

In a page,  → *Manage content* → *Details*

■ To view page information

Page information

■ To view Server certificate

Server certificate

Opening Main Menu

In a page,  → *Homepage*

Changing Font Size

In a page,  → *Settings* → *Font size* → Select an item

Changing Character Code

In a page,  → *Settings* → *Encoding* → Select an item

- If page text appears garbled, changing character encoding may solve the problem.
-

Changing Scroll Unit

In a page,  → *Settings* → *Scroll unit* → Select an item

Setting Show/Play of Image/Sound

In a page,  → *Settings* → *Downloads*

■ To set image

Display image → Select an item

■ To set sound

Play sounds → Select an item

Clearing Cache

In a page,  → *Settings* → *Memory manager* → *Clear cache* → *Yes*

Deleting Cookies

In a page,  → *Settings* → *Memory manager* → *Delete cookies* → *Yes*

Deleting Certificates

In a page,  → *Settings* → *Memory manager* → *Delete certificates* → *Yes*

Setting Manufacture Number Transmission

In a page,  → *Settings* → *Security* → *Manufacture number* → Select an item

Sending/Not Sending Referer Information

In a page,  → *Settings* → *Security* → *Send referer* → Select an item

- Referer is a link source URL to be sent to server when accessing websites.
-

Enabling Cookies

In a page,  → *Settings* → *Security* → *Cookies* → Select an item

- Select *Confirm* to show confirmation every time before a Cookie is saved.
 - Cookies contain identification information allowing sites to recognize users and track preferences.
-

Enabling Script

In a page,  → *Settings* → *Security* → *Script* → Select an item

Checking Root Certificates

In a page,  → *Settings* → *Security* → *Root certificates* → Select certificate

- View electronic certificate preinstalled on handset.

Certificate Retention

In a page,  → *Settings* → *Security* → *Certificate retention* → Select an item

Setting to Show Warning Messages

In a page,  → *Settings* → *Warning messages* → *Activate PC site browser* or *Switch to Yahoo! Keitai* → Select an item

- Always show or hide warning when activating PC Site Browser, or switching between Yahoo! Keitai or PC Site Browser or vice versa.
-

Initializing Saved Information

In a page,  → *Settings* → *Initialized browser* → Enter Phone Password →  (OK) → *Yes*

- Initialize browser settings or information such as Bookmarks or Saved Pages.
-

Resetting PC Site Browser

In a page,  → *Settings* → *Reset settings* → Enter Phone Password →  (OK) → *Yes*

Opening Multiple Pages

Highlight page link →  → *Tab menu* → *Open new tab*

- Use tabs too toggle up to three pages.
- Yahoo! Keitai and PC sites cannot be open simultaneously.
- Some pages may open in a new tab automatically.
- When multiple tabs are open, contents may be partially obscured. Close unnecessary tabs.

Using Multiple Pages

When opening multiple tabs,  → *Tab menu*

■ To switch between tabs

Switch to other tab → Use  to move to another tab to view →  (Select)

■ To close selected tab

Close selected tab

■ To select and close a tab

Close other tabs → Use  to move to another tab to close →  (Select)

Changing Page Layout

In a page,  → *Small screen* or *PC screen*

Exiting Browser

In a page,  → *Exit*

Page Operations

Saving Phone Number/E-mail Address

■ To save as a new entry

In a page containing phone number/
E-mail address, select phone number or E-mail
address → *Save Number* → *Phone* or *USIM* →
New → Enter each item (☞P.2-12 Creating New
Entries ②)

■ To update entry

In a page containing phone number/E-mail
address, select phone number/E-mail address →
Save Number → *Phone* or *USIM* → *Update*
→ Search Phonebook and select entry (☞P.2-14)
→ Enter each item (☞P.2-12 Creating New Entries
②)

- Available phone numbers, Mail addresses appear underlined.

Sending Mail to Number/Mail Address

In a page containing phone number/E-mail address,
select phone number/E-mail address → *Create
Message* → *S! Mail* or *SMS* → (☞P.4-3 Sending S!
Mail ⑤, P.4-6 Sending SMS Messages ⑤)

- Available phone numbers, Mail addresses appear underlined.

Calling Phone Number

In a page containing phone number, select phone
number → *Voice call*

- Available phone numbers appear underlined.

Using URL to Open Another Page

Select URL in a page

- Available URLs appear underlined.

Bookmarks

Opening Bookmarked Site

In a page,  → *Bookmarks* → *Open list* → Select bookmark

- To open in a new tab, highlight bookmark →  → Select *Open new tab*.

Editing Bookmark Title or URL

■ From Yahoo! Keitai

 → *Yahoo! Keitai* → *Bookmarks* → Highlight bookmark →  (Edit) → Select Title field → Edit title → Select URL → Edit URL →  (Save)

■ From PC Site Browser

 → *Yahoo! Keitai* → *PC site browser* → *Bookmarks* → Highlight bookmark →  (Edit) → Select Title field → Edit title → Select URL → Edit URL →  (Save)

■ From a page

 → *Bookmarks* → *Open list* → Highlight bookmark →  (Edit) → Select Title field → Edit title → Select URL → Edit URL →  (Save)

Saving Bookmark by Direct Entry

■ From Yahoo! Keitai

 → *Yahoo! Keitai* → *Bookmarks* →  → *Add bookmark* → Select title field → Enter title → Select URL field → Enter URL →  (Save)

■ From PC Site Browser

 → *Yahoo! Keitai* → *PC site browser* → *Bookmarks* →  → *Add bookmark* → Select title field → Enter title → Select URL field → Enter URL →  (Save)

■ From a page

 → *Bookmarks* → *Save* → Enter title

Sending Bookmark URL

■ From Yahoo! Keitai

 → *Yahoo! Keitai* → *Bookmarks* → Highlight bookmark →  → *Send* → *Via message* → *S! Mail* or *SMS* → (ⓈP.4-3 Sending S! Mail ②, P.4-6 Sending SMS Messages ②)

■ From PC Site Browser

 → *Yahoo! Keitai* → *PC site browser* → *Bookmarks* → Highlight bookmark →  → *Send* → *Via message* → *S! Mail* or *SMS* → (ⓈP.4-3 Sending S! Mail ②, P.4-6 Sending SMS Messages ②)

■ From a page

 → *Bookmarks* → *Open list* → Highlight bookmark →  → *Send* → *Via message* → *S! Mail* or *SMS* → (ⓈP.4-3 Sending S! Mail ②, P.4-6 Sending SMS Messages ②)

Sending Bookmark URL via Infrared

■ From Yahoo! Keitai

 → *Yahoo! Keitai* → *Bookmarks* → Highlight bookmark →  → *Send* → *Via infrared* (ⓈP.10-3)

■ From PC Site Browser

 → *Yahoo! Keitai* → *PC site browser* → *Bookmarks* → Highlight bookmark →  → *Send* → *Via infrared* (ⓈP.10-3)

■ From a page

 → *Bookmarks* → *Open list* → Highlight bookmark →  → *Send* → *Via infrared* (ⓈP.10-3)

Changing Bookmark Order

■ From Yahoo! Keitai

 → *Yahoo! Keitai* → *Bookmarks* → Highlight bookmark →  → *Change order* → Use  to move cursor to the target location →  (Select)

■ From PC Site Browser

 → *Yahoo! Keitai* → *PC site browser* → *Bookmarks* → Highlight bookmark →  → *Change order* → Use  to move cursor to the target location →  (Select)

■ From a page

 → *Bookmarks* → *Open list* → Highlight bookmark →  → *Change order* → Use  to move cursor to the target location →  (Select)

Saving Bookmark to Data Folder

■ From Yahoo! Keitai

■ → Yahoo! Keitai → Bookmarks →  → Save to data folder → Phone or Memory card → Yes

■ From PC Site Browser

■ → Yahoo! Keitai → PC site browser → Bookmarks →  → Save to data folder → Phone or Memory card → Yes

■ From a page

 → Bookmarks → Open list →  → Save to data folder → Phone or Memory card → Yes

- The save location can be set to *Memory card* if inserted.

Viewing Bookmark Details

■ From Yahoo! Keitai

■ → Yahoo! Keitai → Bookmarks → Highlight bookmark →  → Details

■ From PC Site Browser

■ → Yahoo! Keitai → PC site browser → Bookmarks → Highlight bookmark →  → Details

■ From a page

 → Bookmarks → Open list → Highlight bookmark →  → Details

Deleting Yahoo! Keitai Bookmark

■ → Yahoo! Keitai → Bookmarks

■ To delete an entry

Highlight bookmark →  → Delete → Selected → Yes

■ To delete multiple entries

 → Delete → Multiple → Check bookmarks →  (Delete) → Yes

■ To delete all entries

 → Delete → All → Enter Phone Password →  (OK) → Yes

- Alternatively, in a page, press  → Bookmarks → Open list → Highlight bookmark →  → Delete.

Deleting PC Site Bookmark

■ → Yahoo! Keitai → PC site browser → Bookmarks

■ To delete an entry

Highlight bookmark →  → Delete → Selected → Yes

■ To delete multiple entries

 → Delete → Multiple → Check bookmarks →  (Delete) → Yes

■ To delete all entries

 → Delete → All → Enter Phone Password →  (OK) → Yes

- Alternatively, in a page, press  → Bookmarks → Open list → Highlight bookmark →  → Delete.

Saved Pages

Opening Saved Page from a Page

 → Saved pages → Open list → Select page

- To open in a new tab, highlight page →  → select *Open new tab*.

Renaming Saved Page

■ From Yahoo! Keitai

■ → Yahoo! Keitai → Saved pages → Highlight entry →  → Rename → Enter name

■ From PC Site Browser

■ → Yahoo! Keitai → PC site browser → Saved pages → Highlight entry →  → Rename → Enter name

■ From a page

 → Saved pages → Open list → Highlight entry →  → Rename → Enter name

Changing Order of Saved Pages

■ From Yahoo! Keitai

■ → Yahoo! Keitai → Saved pages →
 Highlight entry →  → Change order → Use
 to move cursor to the target location → ■
 (Select)

■ From PC Site Browser

■ → Yahoo! Keitai → PC site browser →
 Saved pages → Highlight entry →  →
 Change order → Use  to move cursor to the
 target location → ■ (Select)

■ From a page

 → Saved pages → Open list → Highlight
 entry →  → Change order → Use  to
 move cursor to the target location → ■ (Select)

Deleting Saved Pages in Yahoo! Keitai

■ → Yahoo! Keitai → Saved pages

■ To delete an entry

Highlight entry →  → Delete → Selected →
 Yes

■ To delete multiple entries

 → Delete → Multiple → Check entries →
 (Delete) → Yes

■ To delete all entries

 → Delete → All → Enter Phone Password
 → ■ (OK) → Yes

• Alternatively, in a page, press  → Saved pages
 → Open list → Highlight entry →  → Delete.

Deleting Saved Pages in PC Site Browser

■ → Yahoo! Keitai → PC site browser →
 Saved pages

■ To delete an entry

Highlight entry →  → Delete → Selected →
 Yes

■ To delete multiple entries

 → Delete → Multiple → Check entries →
 (Delete) → Yes

■ To delete all entries

 → Delete → All → Enter Phone Password
 → ■ (OK) → Yes

• Alternatively, in a page, press  → Saved pages
 → Open list → Highlight entry →  → Delete.


Camera



Mobile Camera	6-2
Mobile Camera Precautions	6-2
Using Display as Viewfinder	6-3
Camera Mode	6-3
Single Shot	6-4
Capturing Options	6-5
Multi Shot	6-5
Photo Combination	6-5
Capturing Still Images with Frame	6-6
Night Shot	6-6
Video Mode	6-6
Recording Video	6-6
Advanced Settings	
Capturing Still Images	6-8
Recording Videos	6-10

Mobile Camera

Capture pictures (still images) or record videos. Capture still images in JPEG or videos in 3GP format.

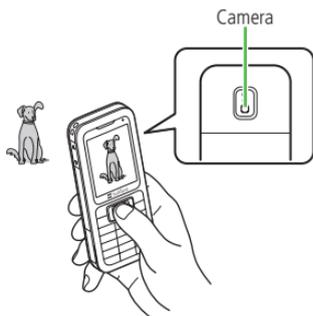


Mobile Camera Precautions

- Use a dry soft cloth to remove debris from camera lens.
- Avoid camera shake; hold handset steady or place it on a stable surface and use Self-timer to prevent objectionable image blur.
- Do not expose handset to devices with static electricity at use of camera.
- Mobile Camera employs high precision technology, however, some pixels may seem brighter or darker than others.
- Leaving handset in a hot place for an extended period before image capture/save may affect image quality.
- Exposing lens to direct sunlight may affect color filter.
- When battery is low, camera may be unavailable.

Using Display as Viewfinder

Initial Viewfinder appears in Portrait.

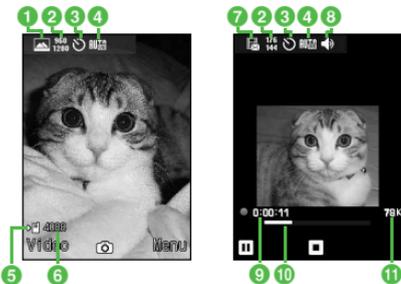

Still Image Viewfinder

Video Viewfinder

1 Shooting mode

- : Single shot
- : Multi-shot (6 shots)
- : Multi-shot (9 shots)
- : Photo combination
- : Frame shot
- : Night shot

2 Shooting size

Still image

- : 1.3M (960 x 1280)
- : VGA (480 x 640)
- : Standby (240 x 320)

Video

- : 176 x 144
- : 128 x 96

3 Self-timer

- : Off
- : 3 seconds
- : 5 seconds
- : 10 seconds

4 White balance

- : Auto
- : Daylight
- : Incandescent
- : Fluorescent
- : Cloudy

5 Save to

- : Phone or Ask each time
- : Memory card or Digital camera

6 Available remaining shooting number

7 Recording time

- : For S! Mail
- : Normal

8 Record sound

- : Sound On
- : Sound Off

9 Elapsed recording time

10 Progress bar

11 Total data size (For S! Mail)/Available recording time (Normal)

Camera Mode

Select Camera mode that is best-suited for your subject when taking still pictures.

Set Camera mode to *Single shot* for taking pictures one by one, *Multi-shot* or *Photo combination* for continuous shooting, *Frame shot* for a still image with Frame or *Night shot* for taking portraits in the dark scene at dusk or night. Captured images are saved to *Pictures*. Insert Memory Card to save images to Digital camera.

Shooting Size

Shooting size can be selected from 1.3M (960 x 1280), VGA (480 x 640) or Standby (240 x 320).

- When Memory Card is inserted and save location is set to Digital camera, 240 x 320 pixel images are automatically saved to Memory card with the setting being changed.

Shooting Mode

Shooting Mode	Description
Single shot	Capture single images, select size for purpose; attach images to S! Mail, save as Wallpaper, etc.
Multi-shot	Press shutter once to capture six or nine sequential images.
Photo combination	Capture sequential images manually. Select Frame to automatically combine images into a composite image.
Frame shot	Capture a still image with Frame.
Night shot	Capture a portrait in the dark scene at dusk or night.

Single Shot

-  → **Camera** → **Take photo**
 - Adjust settings before capturing as required.
- Frame image in Viewfinder**
 - Press / or / to enlarge or reduce image.
 - Use  or  to brighten or darken image.
-  ()
 - To redo, press .
-  (Save)



Still Image Save Confirmation Window

- Zoom is not available when picture size is set to 960 x 1280.

Shortcut Key Operations

Press assigned key to change settings. Available shortcuts vary by mode or setting status.

Key	Item	Description
	Shooting mode	Single shot, Multi-shot (6 shots), Multi-shot (9 shots), Photo combination, Frame shot and Night shot
	Self-timer	Off, 3 seconds, 5 seconds and 10 seconds
	Quick view	Phone, Memory card, Digital camera
	Mode switch	—
	Zoom	—
	Brightness	—

- Pressing keys while taking a picture does not make operation tone.

Advanced

Advanced Settings (P.6-8)

- Switching Shooting Mode
- Setting Shooting Size
- Setting Self-timer
- Setting White Balance
- Setting Effect (Color Tone)
- Viewing Captured Pictures
- Viewing Capturing Shortcut Key Assignments
- Entering File Name of Captured Still Image
- Setting Captured Still Image as Wallpaper etc.
- Enlarging Captured Still Image
- Deleting Images Opened via Quick Play
- Setting Still Image Opened via Quick Play as Wallpaper etc.
- Playing Slide Show
- Viewing Quick Play Image Details

Settings

- Show or hide Indicators (P.11-9)
- Activate or cancel Auto Save (P.11-9)
- Show or hide menu item guidance (P.11-9)
- Select Quality (P.11-9)
- Set ISO (P.11-9)
- Set Exposure metering (P.11-9)
- Set save location when Memory Card is inserted (P.11-9)
- Show or hide Guideline (P.11-9)
- Set Shutter sound (P.11-9)

Capturing Options

Multi Shot

1  → *Camera* → *Take photo*

2  → *Highlight*  →

Multi-shot → **Select image count**

- Adjust settings before capturing as required.

3 **Frame image in Viewfinder**

- Press / or / to enlarge or reduce image.
- Use  or  to brighten or darken image.

4  ()

- To redo, press .

5 **Check images to save** →

 (Save)

- When using Multi Shot, shooting size is set to *Standby* (240 x 320). Other shooting sizes, and Self-timer are not available.

Photo Combination

1  → *Camera* → *Take photo*

2  → *Highlight*  → *Photo combination*

- Press  (View) to enable  for viewing each frame; press  (List) to return to list view.

3 **Select a frame**

- Adjust settings before capturing as required.

4 **Frame image in Viewfinder** →

Apply selected frame and press  ()

- Press / or / to enlarge or reduce image.
- Use  or  to brighten or darken image.

5 **Repeat step 4 to capture images** →  ()

- To redo, press .

6  (Save)

- When using Photo Combination, shooting size is set to *Standby* (240 x 320). Other shooting sizes, and Self-timer are not available.

Capturing Still Images with Frame

1  → *Camera* → *Take photo*

2  → **Highlight**  → *Frame shot*

- Press  (View) to enable  for viewing each frame; press  (List) to return to list view.

3 **Select a frame**

- Adjust settings before capturing as required.

4 **Frame image in Viewfinder**

- Press / or / to enlarge or reduce image.
- Use  or  to brighten or darken image.

5  ()

- To redo, press .

6  (**Save**)

- When using Photo Combination, shooting size is set to *Standby* (240 x 320). Other shooting sizes are not available.

Night Shot

1  → *Camera* → *Take photo*

2  → **Highlight**  → *Night shot*

- Set before shooting when necessary.

3 **Frame image in Viewfinder**

- Press / or / to enlarge or reduce image.
- Use  or  to brighten or darken image.

4  ()

- To redo, press .

5  (**Save**)

- When using Night Shot, White Balance cannot be set.

Video Mode

Capture clips easily. Files are saved in 3GP format to *Videos* folder in Data Folder. When recording a video to attach to or insert into an S! Mail, set Recording time to *For S! Mail* (ⓄP.6-10).

Recording Video

1  → *Camera* → *Record video*

- Adjust settings before capturing as required.

2 **Frame image in Viewfinder**

- Press / or / to enlarge or reduce image.
- Use  or  to brighten or darken image.

3  ()

- Press  () to pause recording. Press  () to resume recording.

4  ()

- Capturing ends. When recordable time has elapsed, recording automatically ends.

5 (Save)



Video Save Confirmation Window

- Pressing keys while pausing or resuming recording does not make operation tone.

Shortcut Key Operations

Press assigned key to change settings. Available shortcuts vary by mode or setting status.

Key	Item	Description
	Shooting mode	For S! Mail, Normal
	Self-timer	Off, 3 seconds, 5 seconds and 10 seconds
	Record sound	Sound On, Sound Off
	Switch Photo/Video	—
	Zoom	—
	Brightness	—

- Pressing keys while recording video does not make operation tone.

Advanced

Advanced Settings P.6-10

- Setting Recording Time
- Setting Shooting Size
- Setting Self-timer
- Setting White Balance
- Setting Effect (Color Tone)
- Setting Sound Recording
- Viewing Recorded Video
- Viewing Recording Shortcut Key Assignments
- Viewing Recorded Video before Saving
- Entering File Name of Recorded Video

Settings

- Show or hide Indicators (P.11-9)
- Activate or cancel Auto Save (P.11-9)
- Show or hide menu item guidance (P.11-9)
- Select Quality (P.11-10)
- Set save location (P.11-10)

Advanced Settings

Capturing Still Images

Switching Shooting Mode

- → *Camera* → *Take photo* → → Highlight
- Select an item

Setting Shooting Size

- → *Camera* → *Take photo* → → Highlight
- Select an item

- For details on available items, see "Shooting Size" (P.6-3).

Setting Self-timer

- → *Camera* → *Take photo* → → Highlight
- Select an item

Setting White Balance

- → *Camera* → *Take photo* → → Highlight
- Select an item

Setting Effect (Color Tone)

- → *Camera* → *Take photo* → → Highlight
- Select an item

Viewing Captured Pictures

- → *Camera* → *Take photo* → → Highlight
- *Pictures* or *Digital camera* → Select a file

- *Digital camera* is available if Memory Card is inserted.

Viewing Capturing Shortcut Key Assignments

- → *Camera* → *Take photo* → → Highlight
-

Entering File Name of Captured Still Image

- → *Camera* → *Take photo* → Frame image in Viewfinder → Capture image → → *Rename & Save* → Enter file name

Setting Captured Still Image as Wallpaper etc.

- → *Camera* → *Take photo* → Frame image in Viewfinder → Capture image → → *Set as*

■ To set image to Wallpaper

- Wallpaper* → Use (Rotate) to adjust position as required → Use or to adjust size as required → (Set)

■ To set image to Incoming image

- Caller ID* → Search Phonebook and select entry (P.2-14) → (Set)

Enlarging Captured Still Image

- → *Camera* → *Take photo* → Frame image in Viewfinder → Capture image → → *Zoom*
- Press or to enlarge or reduce image.
- Press to change position.

Sending Captured Still Images

- → *Camera* → *Take photo* → Frame image in Viewfinder → Capture image → (Send)

■ To send via message

- Via message* → (P.4-3 Sending S! Mail 2)

- If the captured image size exceeds 300 KB, image resizing window appears after saving the image to Data Folder. Resize the image to attach to a message (P.4-4 Attaching Files).

■ To send via infrared

- Via infrared* (P.10-3)

Viewing Still Images via Quick Play

- → *Camera* → *Take photo* → → Use to view images

- Alternatively, press or to view previous and next still images.
- Press (Zoom) → to enlarge still image.
- When Memory Card is inserted, press and select *Phone*, *Memory card*, or *Digital camera* to view images.

Sending Still Images Opened via Quick Play

→ *Camera* → *Take photo* → → Use to view images → (Send)

■ To send via message

Via message → (P.4-3 Sending S! Mail 2)

■ To send via infrared

Via infrared (P.10-3)

- When Memory Card is inserted, press and select *Phone*, *Memory card*, or *Digital camera* to view images.

Deleting Images Opened via Quick Play

→ *Camera* → *Take photo* → → Use to view images → → *Delete* → *Yes*

- When Memory Card is inserted, press and select *Phone*, *Memory card*, or *Digital camera* to view images.

Setting Still Image Opened via Quick Play as Wallpaper etc.

→ *Camera* → *Take photo* → → Use to view images → → *Set as*

■ To set image to Wallpaper

Wallpaper → Use (Rotate) to adjust position as required → Use or to adjust size as required → (Set)

■ To set image to Incoming image

Caller ID → Search Phonebook and select entry (P.2-14) → (Set)

- When Memory Card is inserted, press and select *Phone*, *Memory card*, or *Digital camera* to view images.

Playing Slide Show

→ *Camera* → *Take photo* → → → *Slide Show*

- Press (Stop) during playback to cancel Slide Show.
- When Memory Card is inserted, press and select *Phone*, *Memory card*, or *Digital camera* to view images.

Enlarging Still Images Opened via Quick Play

→ *Camera* → *Take photo* → → Use to view images → (Zoom)

- Press or to enlarge or reduce.
- Press to change position.
- When Memory Card is inserted, press and select *Phone*, *Memory card*, or *Digital camera* to view images.

Viewing Quick Play Image Details

→ *Camera* → *Take photo* → → Use to view images → → *Details*

- When Memory Card is inserted, press and select *Phone*, *Memory card*, or *Digital camera* to view images.

Recording Videos

Setting Recording Time

 → *Camera* → *Record video* →  →

Highlight  → Select an item

- *Normal*: Record video up to one hour.
- *For S! Mail*: Quality is automatically set to *Economy*.

Setting Shooting Size

 → *Camera* → *Record video* →  →

Highlight  → Select an item

Setting Self-timer

 → *Camera* → *Record video* →  →

Highlight  → Select an item

Setting White Balance

 → *Camera* → *Record video* →  →

Highlight  → Select an item

Setting Effect (Color Tone)

 → *Camera* → *Record video* →  →

Highlight  → Select an item

Setting Sound Recording

 → *Camera* → *Record video* →  →

Highlight  → Select an item

Viewing Recorded Video

 → *Camera* → *Record video* →  →

Highlight  → *Videos* → Select a file

- Open *Videos*.

Viewing Recording Shortcut Key Assignments

 → *Camera* → *Record video* →  →

Highlight 

Viewing Recorded Video before Saving

 → *Camera* → *Record video* → Record video

→  → *Play*

Entering File Name of Recorded Video

 → *Camera* → *Record video* → Record video

→  → *Rename & Save* → Enter file name

Sending Recorded Video

 → *Camera* → *Record video* → Record video

→  (Send)

■ To send via message

Via message → (P.4-3 Sending S! Mail 2)

■ To send via Infrared

Via infrared (P.10-3)

Media Player



Media Player	7-2
Music & Video	7-2
Playable File Formats	7-2
Media Player Music Window	7-3
Media Player Video Window	7-3
Playing Music	7-3
Playing Video	7-5
Using Playlist	7-7
Creating Playlist	7-7
Playing Playlist	7-7
Advanced Settings	
Music Playback	7-7
Video Playback	7-8
Playlist	7-10

Media Player

Play sound/video files in Data Folder.

- Use Earphone Microphone with Media Player. Insert Connector. Remove Connector to use Speaker (Disconnecting Earphone Microphone in Manner mode mutes Speaker).
- Use Earphone Microphone to accept Voice Calls. When handset rings/vibrates, press Earphone Microphone switch for 1+ seconds to answer the call.
- From Music or Video menu, select *Download music* or *Download movies*, to download files via Yahoo! Keitai.

Music & Video

Downloading Music & Video

Access Yahoo! Keitai and download music or video. Read information (price, expiry date, etc.) on the source site.

1  → *Media Player*

2 **Download music or video**

■ To download music

Music → *All music* → *Download music* or *Music search*

- Select *Music search* to access Music Search and search by genre or artist name.

■ To download video

Movie → *All movies* →
Download movies

Saving PC Media Files to Memory Card

1 **Insert Memory Card into handset** (☞P.2-22)

- Press  → *Data Folder* →  (Memory) to confirm folders are created.

2 **Remove Memory Card from handset** (☞P.2-23) and insert into PC

3 **Save PC Media Files to the specified Memory Card Folder**

- Save files to the following folders by type:

Music file: PRIVATE/MYFOLDER/My Items/Music
PRIVATE/MYFOLDER/My Items/Sounds
& Ringtones

Video file: PRIVATE/MYFOLDER/My Items/Videos

- After saving files, insert Memory Card into handset and load saved files to play the files.

Playable File Formats

Player	File (Extension)
Music	MPEG4 Audio (mp4, m4a, aac or 3gp (sound only))
Video	MPEG4 or H.263 (mp4, 3gp)

- To play a music file in a format other than above, select it from *Ring songs · tones*. Even compatible files must be saved in *Ring songs · tones* to play.

Note

- Video files exceeding 176 x 144 in resolution cannot be played.

Media Player Music Window



Music Playback

- 1 Copy protected icon
- 2 Volume level
- 3 Title (File name when title is unknown)
- 4 Artist's name
- 5 File no./Total number of files
- 6 Playing status : Play/Pause/Stop
- 7 Elapsed playing time
- 8 Repeat section
- 9 Repeat mode
 - Repeat all
 - Off
 - One
 - Shuffle
- 10 Progress bar
- 11 Total playing time

Media Player Video Window



Video Playback

- 1 Copy protected icon
- 2 Volume level
- 3 Title and artist's name (File name when title is unknown)
- 4 Playing status : Play/Pause/Stop
- 5 Elapsed playing time
- 6 File no./Total number of files
- 7 Progress bar
- 8 Total playing time
- 9 Repeat mode/Repeat section/Playback speed

Playing Music

1  → *Media Player* →

Music

2 Play a file

■ To play most recently played file

Last played

■ To select from all files

All music → Highlight a file →  (Play)

■ To play Playlist

Playlist → Highlight a Playlist →  (Play)

■ To select from list of recently played files

Recent music → Highlight a file →  (Play)

■ To select from list of often played files

Most played music → Highlight a file →  (Play)

■ To select from list of Artists

Artists → Highlight a file →  (Play)

■ To select from list of Albums

Albums → Highlight a file →  (Play)

■ To select from list of Genres

Genres → Highlight a file →  (Play)

- To set music file to Ringtone, highlight a paused file or one from list and press  (Set as) (P.2-32). Valid only for compatible files.
- To end playback and return to list, press  (Stop) and then . In Menu, press  to return to previous window or close Menu.
- During playback, press  for the next file. Press  to restart the file. Press  at the beginning for the previous file.
- To play a specified section repeatedly, during playback, press  at the start point and  at the end point. Press  again to cancel.
- When Memory Card is inserted, Memory Card files appear in *All music* list with .
- If a call arrives while a file is playing, playback pauses and handset rings. After call ends, paused Player window returns.
- If Alarm time arrives while a file is playing, playback pauses, Alarm sounds and indicator appears. Press any key to stop Alarm, then another key to clear the indicator.

Music Folder

Folder structure is as follows.

Folder	Description
Last played	Last played file
All music	View all playable files in <i>Music</i>
Playlist	View playable files in created folders in <i>Music</i>
Recent music	100 recently played files (most recent first)
Most played music	100 most frequently played files (most frequent first)
Artist	All <i>Music</i> files by Artist
Album	All <i>Music</i> files by Artist Album
Genre	All <i>Music</i> files by Artist Genre

- Memory Card files may take longer to load.
- Show/hide in *Music menu* (P.11-8).

Note

- **Changing or deleting *All music* files affects files in *Music* or *Ring songs* • tones.**

Shortcut Key Operations

Press the assigned key to perform operations.

Available shortcuts vary by playback status or file type.

Key	Description
	Play/Pause
	Next track
	Previous track/Beginning of current track
	Volume up
	Volume down
	Stop
	Menu
	Repeat section
	Repeat mode
	Time search

Advanced

Advanced Settings (P.7-7)

- Searching Files by Text
- Adding Files to Playlist
- Sending Files
- Sorting Files
- Purchasing or Acquiring Content Key
- Deleting Files
- Renaming File
- Protecting File
- Viewing File Details
- Changing Order of Files in Playlist
- Renaming Playlist
- Deleting Playlist
- Playing from Specified Point
- Connecting to Web Link
- Viewing Music Player Shortcut Key Assignments

Settings

- Set Repeat mode (P.11-8)
- Adjust Tone volume level (P.11-8)
- Set Music sub folders (P.11-8)

Playing Video

1  → *Media Player* → *Movie*

2 **Play a file**

■ To play most recently played file

Last played

■ To select from all files

All movies → Highlight a file →



■ To play Playlist

Playlist → Highlight a Playlist →



■ To select from list of recently played files

Recent movie → Highlight a file →



■ To select from list often played files

Most played movie → Highlight a file →  (Play)

- To set video file to Ringtone, highlight a paused file or one from list and press  (Set as) (P.2-32). Valid only for compatible files.
- When Memory Card is inserted, Memory Card files appear in *All movies* list with .

Movie Folder

Folder structure is as follows.

Folder	Description
Last played	Play most recently played file
All movies	View all playable files in <i>Movie</i>
Playlist	View playable files in created folders in <i>Movie</i>
Recent movie	View up to 100 recently played files (most recent appears first)
Most played movie	View up to 100 frequently played files (most frequent appears first)

- Set folder show/hide in *Movie menu* (P.11-8).

Note

- Changing/deleting a file in *All movies* folder, changes/deletes the file in *Movie* as well.

Shortcut Key Operations

Press the assigned key to perform operations.

Available shortcuts vary by playback status or file type.

In Normal Screen View

Key	Description
	Play/Pause
	Next clip
	Previous clip/Beginning of current clip
	Volume up
	Volume down
	Stop
	Menu
	Repeat section
	Repeat mode
	Full screen view
	Time search
	Resolution change
	Capture frame
	Play faster
	Play slower

In Full Screen View

Key	Description
	Play/Pause
	Volume up
	Volume down
	Previous clip/Beginning of current clip
	Next clip
	Repeat section
	Repeat mode
	Normal screen view
	Capture frame
	Play faster
	Play slower

Advanced

Advanced Settings P.7-8

- Searching Files by Text
- Adding Files to Playlist
- Sending Files
- Sorting Files
- Purchasing or Acquiring Content Key
- Deleting Files
- Renaming File
- Protecting File to Restrict Editing File Name and Deleting File
- Viewing File Details
- Changing Order of Files in Playlist
- Renaming Playlist
- Deleting Playlist
- Playing Video in Full Screen View
- Changing Resolution
- Playing from Specified Point
- Capturing Still Image from Video and Saving to Pictures
- Connecting to Web Link
- Changing Playback Speed
- Viewing Video Player Shortcut Key Assignments

Settings

- Set Repeat mode ( P.11-8)
- Adjust Tone volume level ( P.11-8)
- Set Backlight ( P.11-8)
- Set Video sub folders ( P.11-8)
- Show or hide Video thumbnails ( P.11-8)
- Access or ignore linked information ( P.11-8)

Using Playlist

Creating Playlist

Create up to 20 Playlists, containing up to 100 files each.

- 1  → *Media Player* → *Music or Movie* → *Playlist* →  → *Create playlist*
- 2 Enter Playlist name
- 3 Select the created Playlist
- 4  → *Add* → *Files*
- 5 Check files to save →  (Save)

Playing Playlist

- 1  → *Media Player* → *Music or Movie* → *Playlist*
- 2 Highlight a Playlist →  (Play)

- Playlist will not play if list file has been deleted, or added from a removed Memory Card. Insert Memory Card and load file to play.

Advanced

Advanced Settings P.7-10

- Creating Playlist Including All Tracks in Existing Playlist

Advanced Settings

Music Playback

Searching Files by Text

-  → *Media Player* → *Music* → *All music* →  → *Search files* → Check item to search → Select Search field → Enter title or artist name →  (Search)

Adding Files to Playlist

-  → *Media Player* → *Music* → *All music*
- **To add a file**
Highlight file →  → *Add to playlist* → *Selected* → Select Playlist
- **To add multiple files**
 → *Add to playlist* → *Multiple* → Check files to add →  (Save) → Select Playlist

Sending Files

-  → *Media Player* → *Music* → Select a folder → Highlight a file →  → *Send*
- **To send via message**
Via message → (P.4-3 Sending S! Mail 2)
- **To send via infrared**
Via infrared (P.10-3)

Sorting Files

-  → *Media Player* → *Music* → *All music* →  → *Sort by* → Select an item

Purchasing or Acquiring Content Key

■ → *Media Player* → *Music* → Select a folder
→ Highlight a file →  → *Download Content key*

Deleting Files

■ → *Media Player* → *Music* → Select a folder

■ To delete a file

Highlight a file →  → *Delete* → *Selected* → *Yes*

■ To delete multiple files

 → *Delete* → *Multiple* → Check files to delete →  (Delete) → *Yes*

■ To delete all files

 → *Delete* → *All* → *Yes*

- To delete all files in *All music* folder, enter Phone Password.

Renaming File

■ → *Media Player* → *Music* → *All music* →
Highlight a file →  → *Rename* → Enter file name

Protecting File

■ → *Media Player* → *Music* → *All music* →
Highlight a file →  → *Lock or Unlock*

Viewing File Details

■ → *Media Player* → *Music* → Select a folder
→ Highlight a file →  → *Details*

- Alternatively, during playback, press  → *Details*.

Changing Order of Files in Playlist

■ → *Media Player* → *Music* → *Playlist* →
Select Playlist → Highlight a file →  → *Move track in playlist* → Use  to highlight destination
→  (OK)

Renaming Playlist

■ → *Media Player* → *Music* → *Playlist* →
Highlight a Playlist →  → *Rename* → Enter
Playlist name

Deleting Playlist

■ → *Media Player* → *Music* → *Playlist*

■ To delete a list

Highlight Playlist →  → *Delete* → *Selected* → *Yes*

■ To delete all lists

 → *Delete* → *All* → Enter Phone Password
→  (OK) → *Yes*

Playing from Specified Point

In Music Playback window,  → *Time search* →
Enter time →  (Play)

Connecting to Web Link

In Music Playback window,  → *Connect web link*
→ *Yes*

-  appears in Music playback window for files with connection to web link.

Viewing Music Player Shortcut Key Assignments

In Music Playback window,  → *Shortcut*

Video Playback

Searching Files by Text

■ → *Media Player* → *Movie* → *All movies* →
 → *Search files* → Check item to search →
Select Search field → Enter title or artist name →  (Search)

Adding Files to Playlist

■ → *Media Player* → *Movie* → *All movies*

■ To add a file

Highlight a file →  → *Add to playlist* →
Selected → Select Playlist

■ To add multiple files

 → *Add to playlist* → *Multiple* → Check
files to add →  (Save) → Select Playlist

Sending Files

■ → *Media Player* → *Movie* → Select a folder
→ Highlight a file →  → *Send*

■ To send via message

Via message → (ⓂP.4-3 Sending S! Mail )

■ To send via infrared

Via infrared (ⓂP.10-3)

Sorting Files

■ → *Media Player* → *Movie* → *All movies* →
 → *Sort by* → Select an item

Purchasing or Acquiring Content Key

■ → *Media Player* → *Movie* → Select a folder
→ Highlight a file →  → *Download Content key*

Deleting Files

■ → *Media Player* → *Movie* → Select a folder

■ To delete a file

Highlight a file →  → *Delete* → *Selected* → *Yes*

■ To delete multiple files

 → *Delete* → *Multiple* → Check files to delete →  (Delete) → *Yes*

■ To delete all files

 → *Delete* → *All* → *Yes*

- To delete all files in *All movies* folder, enter Phone Password.

Renaming File

■ → *Media Player* → *Movie* → *All movies* → Highlight a file →  → *Rename* → Enter file name

Protecting File to Restrict Editing File Name and Deleting File

■ → *Media Player* → *Movie* → *All movies* → Highlight a file →  → *Lock or Unlock*

Viewing File Details

■ → *Media Player* → *Movie* → Select a folder → Highlight a file →  → *Details*

- Alternatively, during playback, press  → *Details*.

Changing Order of Files in Playlist

■ → *Media Player* → *Movie* → *Playlist* → Select Playlist → Highlight a file →  → *Move track in playlist* → Use  to highlight destination → ■ (OK)

Renaming Playlist

■ → *Media Player* → *Movie* → *Playlist* → Highlight Playlist →  → *Rename* → Enter Playlist name

Deleting Playlist

■ → *Media Player* → *Movie* → *Playlist*

■ To delete a list

Highlight Playlist →  → *Delete* → *Selected* → *Yes*

■ To delete all lists

 → *Delete* → *All* → Enter Phone Password → ■ (OK) → *Yes*

Playing Video in Full Screen View

In Video Playback window,  → *Full screen view*

Changing Resolution

In Video Playback window,  → *Resolution* → Select an item

Playing from Specified Point

In Video Playback window,  → *Time search* → Enter time → ■ (Play)

Capturing Still Image from Video and Saving to Pictures

In Video Playback window,  → *Capture frame* → ■ (Save)

Connecting to Web Link

In Video Playback window,  → *Connect web link*

-  appears in Video playback window for files with connection to web link.

Changing Playback Speed

In Video Playback window,  → *Playback speed* → Select an item

- Sound is muted while changing speed.

Viewing Video Player Shortcut Key Assignments

In Video Playback window,  → *Shortcut*

Playlist

Creating Playlist Including All Tracks in Existing Playlist

■ To create music Playlist

☐ → *Media Player* → *Music* → *Playlist* →

Select Playlist → ☒ → *Add* → *Playlist* →

Select Playlist

■ To create video Playlist

☐ → *Media Player* → *Movie* → *Playlist* →

Select Playlist → ☒ → *Add* → *Playlist* →

Select Playlist

Handy Extras



Saving Calendar Entries	8-2
Opening Calendar	8-2
Saving Schedule	8-2
Viewing Schedule	8-3
Alarms	8-3
Setting Alarms	8-3
Calculator	8-4
Currency or Unit Converter	8-4
Converting Currencies	8-4
Converting Units	8-5
World Clock	8-5
Viewing World Clock	8-5
Selecting Areas	8-5
Notepad	8-5
Adding Notepad	8-5
Viewing Notepad	8-5
Tasks	8-6
Saving Tasks	8-6
Viewing Tasks	8-6
Voice Recorder	8-6
Voice Recorder Window	8-6
Recording Sound	8-7
Playing Sound	8-7
Stopwatch	8-7
Dictionary	8-7
File Viewer	8-8
Using File Viewer	8-8

Advanced Settings

Calendar	8-9
Alarm	8-11
Currency/Unit Conversion	8-12
World Clock	8-12
Notepad	8-12
Tasks	8-13
Voice Recorder	8-14
File Viewer	8-14

Saving Calendar Entries

Opening Calendar



Viewing Calendar

Select from three view modes. Select a date in Monthly view or Weekly view to open Daily view.



Monthly View



Weekly View

: Display position


Light blue: Today*

Blue: Saturday

Red: Holiday/Sunday

* Only weekdays appear in light blue. Saturday or Sunday/Holidays appear in blue or red.

■ (Blue): Schedule registered

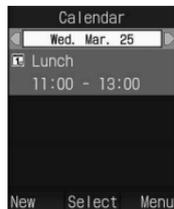

Daily View

- : Schedule (No category)
- : Schedule (Appointment)
- : Schedule (Meeting)
- : Schedule (Business)
- : Schedule (Holiday)
- : Schedule (Anniversary)
- : Schedule (Birthday)
- : Schedule (Phone call)
- : Schedule (Date)
- : Schedule (Travel)
- : Schedule (Miscellaneous)
- : Holiday
- : Alarm set
- : Repetition set

• To change Monthly view window for previous/next month, press or , or highlight Year/Month field and press .

• To change Weekly view window for previous/next week, press or , or highlight Year/Month field and press .

Saving Schedule

Save up to 200 events including Tasks.
Example: Saving Title, Start date & time.

- For other items, see "Saving to Schedule" (➔P.8-9).



- In Calendar, place cursor on target date before Step 2, to enter the date in Start date or End date field.

Viewing Schedule

1 

2 Move cursor to the day to view →  (Select)

3 Select a schedule

- To check the status of Calendar items registered, press  in Calendar or Schedule list, and select *Memory status* to view the registered number of Schedule and Task.

Advanced

 **Advanced Settings**  P.8-9

- Switching View Mode
- Opening a Specific Date
- Viewing Schedule by Category
- Sending Schedule
- Deleting Schedule
- Viewing Secret Schedule
- Checking Missed Alarm Event
- Viewing Calendar Memory Status
- Sending Schedule as vFile
- Saving Schedule as vFile

Alarms

Save up to five Alarms. Use Alarm activation to activate or cancel alarm settings. Set alarms to repeat on specific days of the week or everyday.

Setting Alarms

Example: Setting Alarm time

- For other items, see "Saving Alarm" (☎P.8-11).

1  → *Tools* → *Alarms*

2 Select from *Alarm1* to *Alarm5*

3 Enter Alarm time

4  (Save)

- At Alarm Time, tone sounds and indicator appears. Handset vibrates if Vibration is not *Off*. Press any key to stop Alarm. Press again to clear indicator.
- During a call or while dialing (*Connecting...* or *Dialling...* appears) at Alarm time, a tone sounds and an indicator appears. When *Alerts on call* on *System sounds* is unchecked, only indicator appears during a call or connection. Press any key twice to clear indicator. When Snooze is set to other than *Off*, press  (End).
- When Alarm is set,  appears in Standby.
- If multiple alarms are set for the same time, first one set sounds first. If Schedule or Tasks alarm is set for the same time as Alarm (*Tools*), Alarm sounds first.
- When Manner mode is active, setting in *For manner mode* (☎P.8-11) applies.
- If Camera or Voice Recorder is active at Alarm Time, Alarm sounds upon operation termination.

Advanced

 **Advanced Settings**  P.8-11

- Setting Volume or Vibration in Manner Mode

Calculator

Perform arithmetic operations up to 13 digits.

1  → *Tools* → *Calculator*

2 Use keypad,  and  to enter equations

- To enter +, -, × or ÷, press , ,  or  or .
- To view the result, press .
- To toggle symbols to enter decimal numbers, (or), press  (.).).
- To move cursor to left/right, press  or  or .
- To erase a symbol in a mathematical expression, place cursor after a symbol to erase and press .
- To erase mathematical expression and the result at once, press  (C) or hold  for 1+ seconds.

Currency or Unit Converter

Convert various currencies or units of measure.

Converting Currencies

1  → *Tools* → *Converter* → *Currency*

2 Select Original currency field
→ Select currency



3 Highlight Original currency value field → Enter value



- To enter a decimal point, press .

4 Select Target currency field → Select currency

5 View result in Converted currency value field

- To toggle the original currency and target currency, press  (Reverse).

Converting Units

- 1  → *Tools* → *Converter* → *Length, Weight, Volume, Area or Temperature*
- 2 Select Original unit field → Select currency
- 3 Highlight Original unit value field → Enter value
 - To enter a decimal point, press .
- 4 Select Target unit field → Select unit
- 5 View result in Converted value field

- To toggle original and target unit, press  (Reverse).
- To enter/delete "-" when converting temperature, press .
- To erase value, press  (Clear).

Advanced

 **Advanced Settings**  P.8-12

World Clock

See current time in world's major cities.

Viewing World Clock


- 1  → *Tools* → *World clock*

Selecting Areas

Save a second time zone to see the time in World clock.

- 1  → *Tools* → *World clock*
- 2 Highlight Area 1 or Area 2 field → Use  to select city
- 3  (Save)

Advanced

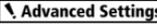 **Advanced Settings**  P.8-12

Notepad

Add up to 20 memos. Memos can be added even during calls ( P.3-16).

Adding Notepad

- 1  → *Tools* → *Notepad*
- 2 *<Add new>* → Enter text

Viewing Notepad

- 1  → *Tools* → *Notepad* → Highlight the target →  (View)

Advanced

 **Advanced Settings**  P.8-12

- Deleting Notepad
- Sending Notepad
- Viewing Notepad Memory Status

Tasks

Save up to 200 Tasks and Schedule and manage by list.

Saving Tasks

Example: Saving Title, Due date & time

• For other items, see "Saving Task" (P.8-13).

1 [Task Icon] → **Tools** → **Tasks**

2 [Add Icon] → **Add new**

3 **Enter a title**

4 **Highlight Due date & time field** → Enter date and time

5 [Save Icon] **(Save)**

Viewing Tasks

1 [Task Icon] → **Tools** → **Tasks**

• In Tasks, press [Task Icon] to toggle *All tasks*, *Completed tasks*, *Uncompleted tasks* and *Expired tasks*.

Marking a Task as Completed

1 [Task Icon] → **Tools** → **Tasks**

2 **Highlight a Task (Status)** → [Task Icon] → **Completed**

• To unmark a Task, select [Task Icon] (Status) → *Uncompleted*.

Advanced

[Task Icon] **Advanced Settings** (P.8-13)


- Saving Task
- Sending Tasks as vFile
- Sorting Tasks
- Opening Task for a Specific Date
- Deleting Tasks
- Saving Tasks as vFile
- Viewing Secret Schedule
- Viewing Missed Alarm Event
- Viewing Task Item Status

Voice Recorder

Record up to 60 minutes; activate from Tools, or via Menu in Data Folder, Create Message window or during a call.

Voice Recorder Window

Use Softkeys and Multi Selector operations to control Voice Recorder.

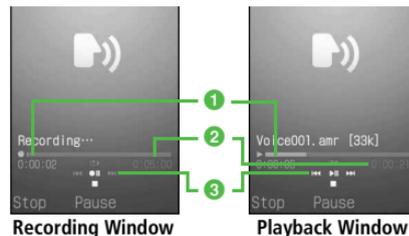

- 1 Elapsed time
- 2 Recordable time (recording)/Playback time (playback)
- 3 Multi Selector operations

Recording Sound

Recorded sound is saved to *Ring songs · tones* in Data Folder.

1  → *Tools* → *Voice recorder*

2  (Record)

3  (Stop) or 

- Recording ends. When recordable time has elapsed, recording automatically ends.
- Press  (Pause) to pause recording.

- To quickly confirm the recorded content, press  (Play). Press  (Pause) again to pause playback.
- To start the next recording, press  and then  (Record).

Playing Sound

Play a sound file saved in Data Folder.

1  → *Tools* → *Voice recorder*

2  → *My sounds*

3 Highlight a sound file →  (Play)

Advanced

 **Advanced Settings**  P.8-14

- Recording Continuously
- Sending Recorded Sound File
- Deleting Recorded Sound File
- Editing Recorded Sound File Name
- Protecting Recorded Sound File
- Viewing Recorded Sound File Details

Stopwatch

Use handset as a stopwatch; record up to 10 lap times and total time.

1  → *Tools* → *Stopwatch*

2  (Start)

3  (Stop)

- While Stopwatch is running, press  (Lap) to mark a lap.

Dictionary

Look up words in English/Japanese dictionaries.

1  → *Tools* → *Dictionary*

2 *English dictionary* or *Japanese dictionary* → Enter a word

3 Select a target word

File Viewer

Using File Viewer

Select Normal view or Full screen view. In either view, Menu and shortcut (Key operations) are available to control Display.



Normal View



Full Screen View

1  → *Data Folder*

2 *Other documents* → Select a file

3 Use Menu or navigation shortcuts to browse

- Open PDF, XLS, DOC, PPT, or TXT files saved in Data Folder. Select an image file saved in Data Folder and File Viewer is activated automatically.
- To scroll pages, press .
- While File Viewer is active, Switch Bar (P.2-3) is not available.
- Files with up to approximately 10 MB can be browsed. Some file with less than 10 MB may not be browsed.

Note

- If a document includes many pages or complicated designs, all pages of the document may not appear properly.
- A file in any language other than Japanese or English may not appear properly.

Shortcut Key Operations

Press the assigned key to perform operations.

Key	Description
	Zoom in
	Zoom out
	Move to the first page
	Move to the previous page
	Rotate 90 degrees clockwise or cancel
	Move to the next page

Key	Description
	Move to the last page
	Select Full screen view or Normal view

Advanced

Advanced Settings P.8-14

- Switching Between Full Screen View and Normal View
- Zoom In/Out Browser Screen
- Changing Display Mode for File Width or Size
- Going to Pages
- Capturing Images
- Rotating File 90 Degrees Clockwise
- Searching String within Page
- Sending Files
- Editing File Name
- Protecting File
- Viewing File Details
- Deleting Files
- Viewing Shortcut Key Assignments

Advanced Settings

Calendar

Saving to Schedule

→ (New) → Enter title → Highlight Start date & time field → Enter date & time

To set End date & time

Select End date & time field → Highlight End date & time field → Enter date and time → (Save)

To set Schedule for all day

Select Start or End date & time field → (Check) → (OK) → (Save)

To set Category

Select Category field → Select a Category → (Save)

To set Alarm

Select Alarm field → Select Alarm time field → Select time → Select Duration field → Select Duration → Select Alert tone/video field → Select folder → Highlight a file → (Play) → (Select) → Select Volume field → Use to adjust volume → (OK) → Select Vibration field → Select a vibration pattern → (Done) → (Save)

- If a Memory Card file is set as Alarm Sound, copy to 7315C confirmation appears. For a copy protected file, move to handset confirmation appears. Choose *Yes* to complete setting.

To repeat a set Schedule

Select Repeat field → Select an item → Enter a number of times to repeat → (Save)

To set Location

Select Location field → Enter content → (Save)

To automatically delete Schedule

Select Expiry field → Select an item → (Save)

- Upon expiry, schedule is automatically deleted from Calendar (e.g. if Expiry is *After 1 year* and Repetition is unset, schedule is deleted one year from event end date. If Repetition is set, schedule is deleted one year after last repetition). Select *Off* to cancel auto delete.

To set Details

Select Details field → Enter content → (Save)

To set Secret

Select Secret field → Select an item → (Save)

Editing Schedule

→ Select a date → Select a schedule → (Edit) → Edit in the same way as on registration → (Save)

Switching View Mode

→ → *View mode* → Select an item

Opening a Specific Date

→ → *Go to*

To show today's date

Today

To toggle to a specified date

Date → Enter date

Viewing Schedule by Category

→ → *List by category* → Select a Category

Sending Schedule

→ → *Send via infrared* → Check a schedule → (Send) → *Yes* (P.10-3)

Deleting Schedule



To delete an entry

Select a date → Highlight a schedule → → *Delete* → *Selected* → *Yes*

To delete all schedules of selected date

Highlight a date → → *Delete* → *All this day* → *Yes*

To delete schedules for a specified period of time

→ *Delete* → *Periods* → Enter start date and end date → (Delete) → *Yes*

To delete schedules of currently displayed month or week

→ *Delete* → *This month* or *This week* → *Yes*

To delete all schedules before the highlighted date

→ *Delete* → *All past data* → Enter Phone Password → (OK) → *Yes*

To delete all schedules

→ *Delete* → *All* → Enter Phone Password → (OK) → *Yes*

■ To delete multiple schedules listed by category

→ → *List by category* → Select a category → → *Delete* → *Multiple* → Check schedules → (Delete) → *Yes*

■ To delete all schedules in a category

→ *List by category* → Select a category → → *Delete* → *All (This category)* → *Yes*

Setting Holiday

→ → *Settings* → *Set holiday* → Select a field → Enter title → Enter Date → Select frequency → (Save)

Setting Holiday Display

→ → *Settings* → *Set holiday* → Check an item to set → (Save)

Editing Added Holiday

→ → *Settings* → *Set holiday* → Highlight an entry → → *Edit* → Edit the entry → (Save)

Deleting Added Holiday

→ → *Settings* → *Set holiday* → Highlight an entry → → *Delete*

Setting the Beginning of a Week

→ → *Settings* → *Starting day* → Select an item

Setting Default Calendar View

→ → *Settings* → *Default view mode* → Select an item

Setting Reminder

→ → *Settings* → *Reminder* → Select On/Off field → *On*

■ To set remind time

Select Time field → Enter a time → (Save)

■ To set Alarm sound duration

Select Duration field → Select an item → (Save)

• When selecting *Other*, enter duration.

■ To set Alarm sound or video

Highlight Alert tone/video field → Select folder → Highlight a file → (Play) → (Select) → (Save)

• If a Memory Card file is set as Alarm Sound, copy to 7313C confirmation appears. For a copy protected file, move to handset confirmation appears. Choose *Yes* to complete setting.

■ To adjust Alarm volume

Select Volume field → Use to adjust volume → (Play) → (OK) → (Save)

■ To set Vibration

Select Vibration field → Select a vibration pattern → (Save)

Viewing Secret Schedule

→ → *Unlock temporarily* → Enter Phone Password → (OK)

Checking Missed Alarm Event

→ → *Missed alarm event* → Select a schedule

Viewing Calendar Memory Status

→ → *Memory status*

Sending Schedule as vFile

→ Select a date → Highlight a schedule → → *Send*

■ To send via message

Via message → (☎P.4-3 Sending S! Mail ②)

■ To send via infrared

Via infrared (☎P.10-3)

Saving Schedule as vFile

→ Select a date → Highlight a schedule → → *Save to Data Folder* → *Phone or Memory card* → *Yes*

• Save location can be set to Memory Card if inserted.

Alarm

Saving Alarm

 → *Tools* → *Alarms* → *Alarm1 to Alarm5* → Enter Alarm time

■ To edit Alarm name

Select Alarm name field → Enter Alarm name →  (Save)

■ To set Alarm once only or every day

Select Repeat field → *Once only* or *Everyday* →  (Save)

■ To set Alarm for a specific day

Select Repeat field → *Selected day* → Check day to set →  (Done) →  (Save)

■ To set Alarm sound or video

Highlight Alert tone/video field → Select folder → Highlight a file →  (Play) →  (Select) →  (Save)

- If a Memory Card file is set as Alarm Sound, copy to 7315C confirmation appears. For a copy protected file, move to handset confirmation appears. Choose *Yes* to complete setting.

■ To adjust Alarm volume

Select Volume field → Use  to adjust volume →  (Play) →  (OK) →  (Save)

■ To set Vibration

Select Vibration field → Select a vibration pattern →  (Save)

■ To set Snooze

Select Snooze field → Select an item →  (Save)

- When Snooze is other than *Off*, alarm sounds at the specified interval until Snooze is canceled. Alarm repeats specified times. If no handset operations take place, or any key except  and  (End) is pressed while alarm sounds, alarm stops, and resets to sound again at specified interval.

To cancel Snooze, press  or  (End).

- For *Other*, enter duration.

■ To set Snooze repeat time(s)

Select Snooze repeat times field → Select a repeat time(s) →  (Save)

■ To set Alarm duration time

Select Duration field → Select duration →  (Save)

- For *Other*, enter duration.

Setting/Canceling Alarm

 → *Tools* → *Alarms* → Highlight an Alarm →  (On/Off)

Resetting Alarm

 → *Tools* → *Alarms*

■ To reset an entry

Highlight an Alarm →  → *Reset this*

■ To reset all entries

 → *Clear all*

Setting Volume or Vibration in Manner Mode

 → *Tools* → *Alarms* → Highlight an Alarm →  → *For manner mode*

■ To set Alarm volume

Alarm volume → Use  to adjust volume →  (Play) →  (OK)

■ To set Vibration

Vibration → Select an item

Currency/Unit Conversion

Viewing Exchange Rate

■ → *Tools* → *Converter* → *Currency* →
Highlight Original currency field → [✉] (Rate)

Changing Exchange Rate

■ → *Tools* → *Converter* → *Currency* →
Highlight Original currency field → [✉] (Rate) →
Highlight a currency → [■] (Edit) → Enter rate

Adding Currency Unit

■ → *Tools* → *Converter* → *Currency* → [✉]
(Rate) → [✉] (Add) → Enter currency unit and
exchange rate

- To delete an added currency unit, highlight a rate and press [⌫], and select *Delete*.

World Clock

Setting Daylight Saving Time

■ → *Tools* → *World clock* → [⌚] (DST) →
Check an area to set daylight saving time → [✉]
(Done) → [■] (Save)

Notepad

Deleting Notepad

■ → *Tools* → *Notepad*

■ To delete a notepad

Highlight a notepad → [⌫] → *Delete* →
Selected → *Yes*

■ To delete multiple entries

Highlight a notepad → [⌫] → *Delete* →
Multiple → Check entries → [✉] (Delete) →
Yes

■ To delete all entries

Highlight a notepad → [⌫] → *Delete* → *All* →
Enter Phone Password → [■] (OK) → *Yes*

Sending Notepad

■ → *Tools* → *Notepad* → Select a notepad →
[⌫] → *Send memo* → (P.4-3 Sending S! Mail 2)

Viewing Notepad Memory Status

■ → *Tools* → *Notepad* → [⌫] → *Memory*
status

Editing Notepad

■ → *Tools* → *Notepad* → Highlight a notepad →
[✉] (Edit) → Edit the notepad

Tasks

Saving Task

■ → Tools → Tasks → [Y] → Add new → Enter title → Highlight Due date & time → Enter Due date and time

■ Setting Alarm

Select Alarm field → Select Alarm time field → Select Alarm time → Select Duration field → Select Duration → Select Alert tone/video field → Select a location of sound or video file → Highlight a file → [M] (Play) → [Y] (Select) → Select Volume field → Use [V] to adjust volume → [M] (OK) → Select Vibration field → Select a vibration pattern → [M] (Done) → [M] (Save)

- If a Memory Card file is set as Alarm Sound, copy to handset confirmation appears. For a copy protected file, move to 7315C confirmation appears. Choose *Yes* to complete setting.
- At Alarm Time, tone sounds and indicator appears. Press any key to stop Alarm. Press [M] (OK) to clear indicator. If no key is pressed, Missed Alarm message appears. Press [M] (View) to view the event.
- During a call or while dialing (*Connecting...* or *Dialling...* appears) at Alarm time, a tone sounds and an indicator appears. When *Alerts on call on System sounds* is unchecked, only indicator appears during a call or connection. Press [M] (OK) to clear an indicator.

■ To set Priority

Select Priority field → Select an item → [M] (Save)

■ To set Details

Select Details field → Enter content → [M] (Save)

■ To activate or cancel Secret

Select Secret field → Select an item → [M] (Save)

Sending Tasks as vFile

■ → Tools → Tasks → Select a task to send → [Y] → Send

■ To send via message

Via message → (P.4-3 Sending S! Mail)

■ To send via infrared

Via infrared (P.10-3)

Sorting Tasks

■ → Tools → Tasks → [Y] → Sort by → Select an item

Opening Task for a Specific Date

■ → Tools → Tasks → [Y] → Go to

■ To show today's task

Today

■ To enter a date to view a task

Date → Enter date

Deleting Tasks

■ → Tools → Tasks

■ To delete a task

Highlight a task → [Y] → Delete → Selected → Yes

■ To delete multiple tasks

[Y] → Delete → Multiple → Check tasks → [M] (Delete) → Yes

■ To delete all tasks

[Y] → Delete → All tasks → Enter Phone Password → [M] (OK) → Yes

Saving Tasks as vFile

■ → Tools → Tasks → Select a task → [Y] → Save to Data Folder → Phone or Memory card → Yes

- Save location can be set to Memory Card if inserted.

Viewing Secret Schedule

■ → Tools → Tasks → [Y] → Unlock temporarily → Enter Phone Password → [M] (OK)

Viewing Missed Alarm Event

■ → Tools → Tasks → [Y] → Missed alarm event → Select a missed task to check

Viewing Task Item Status

■ → Tools → Tasks → [Y] → Memory status

Editing Tasks

■ → Tools → Tasks → Select a task to edit → [M] (Edit) → Edit item → [M] (Save)

Voice Recorder

Setting Recorded Sound File for Ringtone, etc.

■ → Tools → Voice recorder → ■ (Record)
→ [Stop] → [Set as] → Select a ringtone

Recording Continuously

■ → Tools → Voice recorder → ■ (Record)
→ [Stop] → [Y] → Record

Sending Recorded Sound File

■ → Tools → Voice recorder → ■ (Record)
→ [Stop] → [Y] → Send

■ To send via message

Via message → (P.4-3 Sending S! Mail 2)

■ To send via infrared

Via infrared (P.10-3)

Deleting Recorded Sound File

■ → Tools → Voice recorder → ■ (Record)
→ [Stop] → [Y] → Delete → Yes

Editing Recorded Sound File Name

■ → Tools → Voice recorder → ■ (Record)
→ [Stop] → [Y] → Rename → Enter file name

Protecting Recorded Sound File

■ → Tools → Voice recorder → ■ (Record)
→ [Stop] → [Y] → Lock or Unlock

Viewing Recorded Sound File Details

■ → Tools → Voice recorder → ■ (Record)
→ [Stop] → [Y] → Details

Changing Default Name at Saving

■ → Tools → Voice recorder → [Y] →
Recording settings → Default name → Enter file
name

Changing Recording Time

■ → Tools → Voice recorder → [Y] →
Recording settings → Recording time → Select
duration

Changing Default Saving Location

■ → Tools → Voice recorder → [Y] → Record
settings → Set default memory → Phone or
Memory card

- When Memory Card is not inserted, files are automatically saved to Phone.

File Viewer

Switching Between Full Screen View and Normal View

■ → Data Folder → Other documents → Select
a file → [Y] → Full screen view or Normal view

Zoom In/Out Browser Screen

■ → Data Folder → Other documents → Select
a file → [Y] → Zoom → Select an item

Changing Display Mode for File Width or Size

■ → Data Folder → Other documents → Select
a file → [Y] → Fit to screen → Select an item

Going to Pages

■ → Data Folder → Other documents → Select
a file → [Y] → Go to → Select an item
• For Page, specify page number.

Capturing Images

■ → Data Folder → Other documents → Select
a file → [Y] → Screen capture
• Captured image is saved in JPEG format to Pictures
in Data Folder of 731SC.

Rotating File 90 Degrees Clockwise

■ → Data Folder → Other documents → Select
a file → [Y] → Rotate

Searching String within Page

■ → *Data Folder* → *Other documents* → Select a file →  → *Search* → Enter keyword

- When search result appears and next result is ready, press  then  for previous result.

Sending Files

■ → *Data Folder* → *Other documents* → Select a file →  → *Send*

■ To send via message

Via message → (P.4-3 Sending S! Mail 2)

■ To send via infrared

Via infrared (P.10-3)

Editing File Name

■ → *Data Folder* → *Other documents* → Select a file →  → *Rename* → Enter file name

Protecting File

■ → *Data Folder* → *Other documents* → Select a file →  → *Lock or Unlock*

Viewing File Details

■ → *Data Folder* → *Other documents* → Select a file →  → *Details*

Deleting Files

■ → *Data Folder* → *Other documents* → Select a file →  → *Delete* → *Yes*

Assigning Scroll Range

■ → *Data Folder* → *Other documents* → Select a file →  → *Settings* → *Panning* → Select an item

- Assign scroll range for each press of .

Fit to Display

■ → *Data Folder* → *Other documents* → Select a file →  → *Settings* → *Reflow* → Select an item

- When *On*, content is fit to Display size.

Setting Map

■ → *Data Folder* → *Other documents* → Select a file →  → *Settings* → *Map on* → Select an item

- When *On*, current position is framed in red.

Setting Guide for Shortcuts in Full Screen View

■ → *Data Folder* → *Other documents* → Select a file →  → *Settings* → *Controller* → Select an item

Editing Default File Name at Screen Capture

■ → *Data Folder* → *Other documents* → Select a file →  → *Settings* → *Screen capture name* → Enter file name

Viewing Shortcut Key Assignments

■ → *Data Folder* → *Other documents* → Select a file →  → *FileViewer shortcuts* → Use  to view shortcuts

Handset Security



Changing Phone Password	9-2
Setting PINs	9-2
PIN Certification	9-2
Changing PIN/PIN2	9-2
Canceling PIN Lock	9-3
Setting USIM Lock	9-3
Locking & Restricting Handset Operations	9-3
Phone Lock	9-3
Auto Keypad Lock	9-3
Password Lock	9-4
Application Lock	9-4
Secret Mode	9-4
Secret Folders	9-5
Mobile Tracker	9-5
Restoring Default Settings	9-6
Clearing Phone Memory	9-6
Resetting Settings	9-6
All Reset	9-6

Changing Phone Password

By default, Phone password is set to "9999".

- 1  → **Settings** → **Security** → **Change password**

- 2 **Enter current Phone Password**
→  (OK)



- 3 **Enter new Phone Password (4 digits)** →  (OK)

- 4 **Enter new Phone Password again** →  (OK)

Advanced

Settings

- Change Phone Password (📞 P.11-15)

Setting PINs

PINs are security codes for USIM Card. For details, see "USIM Card" (📞 P.12-4).

PIN Certification

To activate PIN certification each time the power is turned on, set this function to *On*.

- 1  → **Settings** → **Security** → **PIN certification**

- 2 **On or Off**

- 3 **Enter PIN** →  (OK)

Changing PIN/PIN2

- 1  → **Settings** → **Security** → **Change PIN or Change PIN2**

• When *PIN certification* (📞 P.9-2) is set to *Off*, PIN cannot be changed.

- 2 **Enter current PIN or PIN2** →  (OK)

- 3 **Enter new PIN or PIN2 (4 to 8 digits)** →  (OK)

- 4 **Enter new PIN or PIN2 (4 to 8 digits)** →  (OK)

Canceling PIN Lock

If PIN or PIN2 is incorrectly entered three consecutive times, PIN lock or PIN2 lock is activated to restrict handset operations. To cancel PIN lock or PIN2 lock, perform following operations.

- 1 In PUK Code entry window, enter PUK Code →  (OK)
- 2 Enter new PIN or PIN2 (4 to 8 digits) →  (OK)
- 3 Enter new PIN or PIN2 (4 to 8 digits) →  (OK)

Note

- For more information about PUK and PUK2, contact Customer Service (☎P.12-25).
- Entering incorrect PUK Code 10 consecutive times locks USIM Card (turning handset off does not reset the count).
- Once locked, USIM Card cannot be unlocked. Contact Customer Service (☎P.12-25).

Advanced

Settings

- Activate or cancel PIN Certification (☞P.11-15)
- Change PIN (☞P.11-15)
- Change PIN2 (☞P.11-15)

Setting USIM Lock

Activate this function to require USIM Password entry to use 7315C with a different USIM Card.

- 1  → *Settings* → *Security* → *USIM lock*
- 2 *On or Off*
- 3 Enter USIM Password (4 to 8 digits) →  (OK)

- To set to *On*, enter USIM password (4 to 8 digits) again and press  (OK).

- USIM Password is dedicated to USIM Card authentication. If USIM Password matches, another USIM Card can be used in handset. Change USIM Password each time *USIM lock* is set to *On*.
- If you forget USIM Password, insert USIM Card with *USIM lock* set to *On* and reset all settings (☎P.9-6).

Advanced

Settings

- Activate or cancel USIM Lock (☞P.11-15)

Locking & Restricting Handset Operations

Phone Lock

Activate this function to require Phone Password entry each time handset is powered on.

- 1  → *Settings* → *Security* → *Phone lock*
- 2 *On or Off*
- 3 Enter Phone Password →  (OK)

- After handset powers on, all operations including receiving calls cannot be performed until Phone Password is entered.

Auto Keypad Lock

When this function is set to *On*, keypad lock is automatically activated when Display turns off.

- 1  → *Settings* → *Phone settings* → *Auto keypad lock*
- 2 *On or Off*

Password Lock

Lock handset in Standby. Activate this function to require Phone Password entry to use handset.

- 1  → *Settings* → *Security* → *Password lock*
- 2 *On or Off*
- 3 Enter Phone Password →  (OK)

- Even if Password lock is activated, some of operations can be performed.
- Upon Password Lock activation, Standby returns. Press any key for Phone Password entry window. Enter Phone Password to cancel Password Lock. Password lock remains *Off*.

Application Lock

Activate this function to require Phone Password entry to open Phonebook, Calendar, Notepad, Tasks, Messaging, Call log or Data Folder.

- 1  → *Settings* → *Security* → *Application lock*
- 2 Check functions to lock →  (Save)
- 3 Enter Phone Password →  (OK)

Secret Mode

Select *Hide* to activate this function and hide Secret Phonebook entries, Messaging folders, Calendar schedules or Tasks.

- 1  → *Settings* → *Security* → *Secret mode*
- 2 Enter Phone Password →  (OK)
- 3 *Show or Hide*

- Powering handset off then back on activates Secret mode.

Secret Folders

Activate Secret mode to see additional Secret folders within Data Folder.

- 1  → **Settings** → **Security** → **Secret data folder**
- 2 **Enter Phone Password** →  (OK)
- 3 **Show or Hide**

• Powering handset off then back on activates Secret mode.

Mobile Tracker

Activate this function to send SMS notification to a specified address when a different USIM Card is inserted. Specify up to 2 addresses.

- 1  → **Settings** → **Security** → **Mobile tracker**
- 2 **Enter Phone Password** →  (OK)
- 3 **Select Activation field** → **On**
- 4 **Select Recipients field**
- 5 **Select To field** → **Enter address** →  (Save)
 - To enter an address from Phonebook, highlight To field →  → **Phonebook** → Search Phonebook and select entry (P.2-14) → Select a phone number.
- 6 **Select Sender field** → **Enter sender name**
- 7  (Save) → **Confirm message**

8 (Agree)

• Not to agree the message, press  (Reject).

- When a different USIM Card is inserted, SMS notification is sent to the specified address upon handset activation. Nothing appears on handset. If Phone Password is incorrectly entered three consecutive times when trying to set Mobile Tracker, SMS notification is also sent.
- To delete a recipient address, press  and select **Delete** in Step 5.

Advanced

Settings

- Activate or cancel Auto keypad lock (P.11-14)
- Activate or cancel Phone Lock (P.11-15)
- Activate or cancel Password Lock (P.11-15)
- Activate or cancel Application Lock (P.11-15)
- Activate or cancel Secret mode (P.11-15)
- Create or cancel Secret folders in Data Folder (P.11-15)
- Activate Mobile Tracker (P.11-15)

Restoring Default Settings

Clearing Phone Memory

Clear Data Folder, Messaging, 7315C Phonebook, Calendar, Notepads, Tasks or User's dictionary. Alternatively, clear all 7315C files at once.

- 1  → **Settings** → **Memory settings** → **Phone memory** → **Clear phone memory**
- 2 **Check items** →  **(Delete)**
- 3 **Enter Phone Password** →  **(OK)** → **Yes**

Resetting Settings

Clear saved contents/settings regarding Settings and Alarms in Tools, then restore default settings. The following settings are not affected.

Item	Unaffected Settings
Call settings	<i>Edit black list contents</i> <i>Voice mail on settings</i> <i>Call forwarding on setting</i> <i>Call waiting setting</i> <i>Call barring settings</i>
Phonebook	Entry details, <i>Group settings</i> (contents and group name) in the USIM Card
Security	<i>USIM lock, PIN certification, Change PIN, Change PIN2</i>
Tools	<i>Calendar contents and settings</i>

- 1  → **Settings** → **Security** → **Reset** → **Reset settings**
- 2 **Enter Phone Password** →  **(OK)** → **Yes**

All Reset

Restore 7315C to defaults and delete Phonebook (Phone), Messaging, and Data Folder contents/settings. However, preinstalled files are not deleted.

- 1  → **Settings** → **Security** → **Reset** → **All reset**
- 2 **Enter Phone Password** →  **(OK)** → **Yes**

Advanced

Settings

- Restore handset to defaults ( P.11-15)
- Restore Settings to default values ( P.11-15)

Connectivity & File Backup



Infrared	10-2
Getting Started	10-2
Infrared Precautions	10-2
Infrared Data Transmission	10-2
Transmission Types	10-3
Sending Data	10-3
Receiving One by One	10-3
Transferring All	10-4
Receiving All	10-4
USB Connection	10-5
Getting Started	10-5
Connecting to a PC	10-5
Memory Card Backup	10-5
Backup Precautions	10-5
Backing Up to Memory Card	10-6
Loading from Memory Card	10-6
S! Addressbook Back-up (SAB)	10-6
SAB Precautions	10-7
Synchronization Modes	10-7
Synchronizing Phonebook	10-8
Synchronizing Phonebook Automatically	10-8
Advanced Settings	
S! Addressbook Back-up	10-9

Infrared


Exchange files wirelessly with infrared-compatible handsets, PCs or other devices.

Getting Started

- Handset Infrared is based on IrMC1.1. Transmission may be unavailable for some functions, even when IrMC1.1 is supported on the other party's handset.
- Infrared data transmission is unavailable while sending/receiving message.
- Calling or sending mail are unavailable during Infrared transmissions.
- Transmissions may be inhibited in direct sunlight, under fluorescent lighting or near infrared devices.
- Authorization Code is the 4-digit password used to allow transmissions between infrared devices. Enter same Authorization Code on both devices when transmitting all files at once.

Infrared Precautions

- Place devices within 30 cm. Align device ports. Do not place objects in between devices.

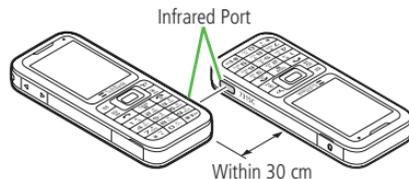

- Maintain port alignment until transmission ends.
- A soiled port may inhibit transmission. Clean port with a soft cloth beforehand.
- If transmission fails, a confirmation appears. Review precautions, choose *Yes* to try again.

Infrared Data Transmission

Send and receive Phonebook or Account details, Calendar entries, Schedules, Tasks, still images, videos, sound files, vFiles, and others. Send either all Phonebook entries, Schedules, Tasks or Bookmarks in a single transfer.

Note

- **Infrared is unavailable while Internet services/Media Player is use, or while editing mail/files.**
- **Some received files cannot be saved on handset.**

Transmission Types

Transfer files via Infrared as follows.

Transmission Type	Description
Transfer Each	Receive single files/send multiple files. Received files are automatically saved to the appropriate location by file type.
Transfer All	Receive/send all files by function at once.

- Most received files are saved to the appropriate location by file type, however, some may be saved to *Other documents* in Data Folder.

Sending Data

First, activate Infrared on the other device.

1 Send data

■ To send from Data Folder, Tasks or Phonebook

In list,  → *Send* → *Via infrared*
→ Select data →  (Send)

■ To send from Calendar or Bookmarks

Highlight item →  → *Send* → *Via infrared*

- Some functions allow sending from Details/ Playback window.

Receiving One by One

1  → *Settings* → *Connectivity* → *Infrared* → *Infrared On/Off* → *On (3 min.)*

- Handset is ready to receive data.

2 **Begin sending from other device within 3 minutes**

3 **Cancel Calling confirmation appears, choose *Yes***

4 **Receive and Save confirmation appears, choose *Yes***

- To save pictograms, select *Pictures* or *My Pictograms*.
- Press  (Cancel) to cancel receiving.
- Press  to terminate data reception.

- If vCard contains incoming image over 40KB, handset deletes the image then saves vCard.

Note

- Receive files in Standby. Files cannot be received when Password Lock is active or All Keys locked.

Transferring All

- 1  → *Settings* → *Connectivity* → *Infrared* → *Transfer all*
- 2 Enter Phone Password →  (OK)
- 3 *Phonebook, Calendar, or Bookmarks*
 - For *Phonebook*, choose *Yes* to transfer images.
- 4 Enter Authorization Code (4 digits) →  (OK)

Receiving All

- 1  → *Settings* → *Connectivity* → *Infrared* → *Infrared On/Off* → *On (3 min.)*
 - Handset is ready to receive files.
- 2 Begin sending from other device within 3 minutes
- 3 No Calling confirmation appears, choose *Yes*
- 4 Enter Authorization Code (4 digits) →  (OK)
 - Enter same Authorization Code as sender.
- 5 Select a saving method
 - To add files as new entries
Add New
 - To overwrite current entries
Overwrite → *Yes* → Enter Phone Password →  (OK)
 - Receiving all entries deletes existing handset entries except Account details. Receiving Account details deletes existing Account details except handset phone number.
 - Press  (Cancel) to cancel receiving.
 - Press  to terminate reception.

Advanced

Settings

- Activate or cancel Infrared transmission ( P.11-19)
- Transfer Phonebook or Calendar entries at once ( P.11-19)

USB Connection

Connect handset to a PC to transfer files between devices. Handset supports USB 2.0.

Getting Started

Samsung PC Studio is available via Samsung Website:

<http://jp.samsungmobile.com/pc/lineup/731download.html>

- Install Samsung PC Studio and USB driver first.

Connecting to a PC

The following operations are available:

- Transfer handset Data Folder files to PC
- Import PC files and save to Data Folder
- Perform Packet Communications

Note

- **To access to the Internet through PC or PDA connection (Mobile data communication), a large volume of packet communication is required in short period that will apply for high packet communication charge. Please pay attention on communication fee when using mobile data communication.**

Memory Card Backup

Back up Phonebook entries, etc. to Memory Card (Package backup). Restore backed up items as required (Package restoration).

- Restore from Backup in case of accidental loss.
- Backups are saved by type (transfer date is file name).
- Available Backup types:
 - Phonebook
 - Calendar
 - Tasks
 - Content Key
 - Bookmarks

- Use Backup to save files, share information between Memory Card-compatible handsets, or move files to a newly purchased handset.

Backup Precautions

- Not available when battery is low.
- During backup or restore, handset transmissions are not possible.
- Some files cannot be backed up. Some backed up files may not be usable on other SoftBank handsets or PCs, etc.
- Back up may fail if 731SC/Memory Card memory is too low.

- 731SC holds up to 200 Calendar/Tasks entries. When 200 entries are restored from Memory Card, a confirmation appears and excess is not saved.
- Yahoo! Keitai, PC Site Browser bookmarks are backed up.
- If a backed up bookmark is too large it may not be restorable.
- If image is over 40KB, handset delete the image then backup.
- Backup data saved on Memory Card is not accessible on handset until restored from Memory Card.
- When backing up Content Keys, note the following:
 - Backup file can hold only one Content Key at a time. To backup another Content Key, a confirmation appears and the previous backup file is overwritten (To keep the previously backed up files, restore the Content Key to 731SC from Memory Card and then perform backup again).
 - Backing up a file containing a Content Key to Memory Card moves Content Key from 731SC to Memory Card making the file inaccessible.
 - Restoring a file with a Content Key to 731SC adds the Content Key to 731SC without overwriting any existing Content Keys on 731SC.

Backing Up to Memory Card

- 1  → *Settings* → *Memory settings* → *Memory card* → *Backup & Restore*
- 2 *Backup* → *Yes*
- 3 Enter Phone Password →  (OK)
- 4 *Phonebook, Calendar, Tasks, Contents keys, or Bookmarks*
- 5 Confirmation appears, choose *Yes*
 - Press  (Cancel) to cancel backup.
 - If Content Key backup file already exists, an overwrite confirmation appears. Press  (Yes) to overwrite the file.

Loading from Memory Card

- 1  → *Settings* → *Memory settings* → *Memory card* → *Backup & Restore*
- 2 *Restore* → *Yes*
- 3 Enter Phone Password →  (OK)
- 4 *Phonebook, Calendar, Tasks, Contents keys, or Bookmarks*
- 5 Select a file
 - Press  (Delete) and choose *Yes*.
- 6 *Add or Overwrite*
 - Press  (Cancel) to cancel restoration.


Advanced

Settings

- Backup Memory ( P.11-20)
- Restore Memory ( P.11-20)

S! Addressbook Back-up (SAB)

Back up 7315C Phonebook entries on Server or synchronize 7315C Phonebook entries with SAB. Restore lost 7315C Phonebook entries from SAB.

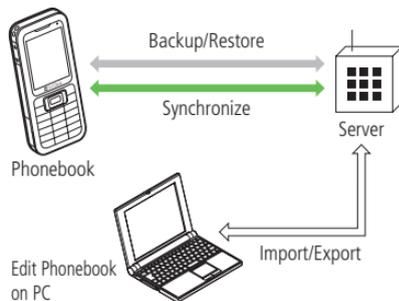

- SAB use requires a separate subscription.
- If you should change handsets, select an SAB compatible handset to access SAB entries.

Note

- **Packet Communication charges apply to connections between 7315C and SAB (Backup, Restore, or Synchronize).**

SAB Precautions

- These items cannot be synchronized with SAB; using Restore for these items will delete them from 731SC:
 - Picture
 - Ringtone settings, Vibration settings (Voice Call or Messages)
 - Blood type
 - Hobby
- Select back up/restore timing and sync mode carefully to avoid accidental deletion of entries.
 - Delete all 731SC entries then select *Synchronize*, *Sync from client*, or *Backup* to delete all SAB entries.
 - Delete all SAB entries then select *Synchronize*, *Sync from server*, or *Restore* to delete all 731SC entries.
- If number of entry items savable on handset varies from SAB, synchronization will reflect lower number.
- Post handset change service continues as follows:

Content	Detail
SoftBank 3G Handsets	
SAB Supported	SAB entries remain.
SAB Not Supported	SAB service usable and entries remain; SoftBank handset access unavailable but PC access available.

Content	Detail
V3, V4, V5, V6, V8 Series	
SAB service is automatically canceled and SAB entries are deleted.	

- When SAB service is cancelled and Phonebook entries on Server are deleted.

Synchronization Modes

Available synchronization modes are as follows.

Sync Mode	Description
Synchronize	Backs up 731SC entries and updates SAB. ¹
Sync from client	Backs up updated 731SC entries. ²
Sync from server	Downloads updated SAB entries to 731SC. ³
Backup	Deletes SAB entries and uploads 731SC entries. ⁴
Restore	Deletes all 731SC entries and downloads SAB entries to 731SC (up to 731SC limit) last edited first. ⁵

- 1 If 731SC Phonebook entry and SAB entry item are both updated, SAB entry item takes priority.
- 2 Phonebook update information on Server is not applied to the one on 731SC.
- 3 Phonebook update information of 731SC is not applied to the one on Server.

- 4 Be careful that all Phonebook entries on Server is deleted.
- 5 Be careful that all Phonebook entries of 731SC is deleted.

• *Slow sync* is performed regardless of Sync mode setting when using SAB for the first time or the last synch was not completed correctly by canceling, etc., *Slow sync* works as the same with *Synchronize*. View Sync type in Sync log to see if *Slow sync* was performed.

Synchronizing Phonebook

Connect to Phonebook managed on Server and synchronize it with 731SC Phonebook entries.

- 1 → **Phonebook** → **S! Addressbook Back-up** → **Start sync**
- 2 **Enter Phone Password** → (OK)
- 3 **Synchronize, Sync from client, Sync from server, Back up, or Restore** → **Yes** → (OK)

Note

- Starting synch connect to network. Packet Communication charges apply. Network connection is automatically disconnected when the synchronization ends.

Synchronizing Phonebook Automatically

Setting *Auto sync* to *On* requires Set frequency and Sync mode settings.

Setting & Canceling Auto Sync

- 1 → **Phonebook** → **S! Addressbook Back-up** → **Auto sync settings** → **Enter Phone Password** → (OK)
- 2 **On/Off** → **On** or **Off**
 - For *On*, press (OK).

Setting Frequency

- 1 → **Phonebook** → **S! Addressbook Back-up** → **Auto sync settings** → **Enter Phone Password** → (OK)
- 2 **Set frequency**

3 Set items

- **To back up once a month**
Every month → Enter date → Enter time
- **To back up once a week**
Every week → Select day → Enter time
- **To back up 10 minutes after editing Phonebook entries**
Every editing (after 10 min)

4 Sync mode

- 5 **Synchronize, Sync from client, Sync from server, Back up, or Restore** → (OK)

Advanced

 **Advanced Settings**  P.10-9

Advanced Settings

S! Addressbook Back-up

Viewing S! Addressbook Back-up History

 → Phonebook → S! Addressbook Back-up
→ Sync log

Deleting S! Addressbook Back-up History

 → Phonebook → S! Addressbook Back-up
→ Sync log

■ To delete a log

Highlight a log →  (Delete) → Yes

■ To delete all logs

 (Delete all) → Yes

Handset Customization



Messaging Settings	11-2
Custom Mail Address	11-2
S! Mail & SMS	11-2
S! Mail	11-4
SMS	11-5
Internet Settings	11-6
Yahoo! Keitai	11-6
PC Site Browser	11-7
Media Player Settings	11-8
Music	11-8
Movie	11-8
Mobile Camera Settings	11-9
Camera & Video	11-9
Photo	11-9
Video	11-10
Phonebook Settings	11-10
Sound & Alert Settings	11-11
Sounds & Alerts	11-11
External Light	11-11
Display Settings	11-12
Phone Settings	11-13
Security Settings	11-15
Call Settings	11-16
Mode Settings	11-19
Connectivity Settings	11-19
Infrared	11-19
Network	11-19
Memory Settings	11-20

Messaging Settings

Custom Mail Address

Customize or change handset mail address	 → <i>Settings</i> → <i>Custom mail address</i> → Follow onscreen instructions <ul style="list-style-type: none"> • Change mail account name (alphanumerics before @). Random alphanumerics set by default.
--	--

S! Mail & SMS

Start Here

 → *Settings* → *Universal settings*

Change font size	Default Standard	<i>Font size</i> → Select an item
Change scroll unit	Default Single line	<i>Scroll unit</i> → Select an item
Request or cancel Delivery Report	Default Off	<i>Delivery report</i> → Select an item <ul style="list-style-type: none"> • <i>On</i>: Receive a message confirming successful delivery of a sent message.
Insert or hide Signature	Default Off	<i>Signature</i> → <i>Auto insert</i> → Select an item
Edit Signature		<i>Signature</i> → <i>Edit</i> → Enter a signature
Set or cancel Auto Delete for received messages when Received memory is full	Default On (Auto delete)	<i>Auto delete</i> → <i>Received messages</i> → Select an item <i>On (Auto delete)</i> : Unprotected messages are automatically deleted oldest first to make room for new ones. If <i>Auto delete</i> is <i>Off</i> , memory full confirmation appears. Delete messages and retry. <i>Off</i> : Memory full confirmation appears. Delete messages and retry.
Set or cancel Auto Delete for sent messages when Sent memory is full	Default On (Auto delete)	<i>Auto delete</i> → <i>Sent messages</i> → Select an item <i>On (Auto delete)</i> : Unprotected messages are automatically deleted oldest first to make room for new ones. If <i>Auto delete</i> is <i>Off</i> or <i>Unsent</i> is full, memory full confirmation appears. Delete messages and retry. <i>Off</i> : Memory full confirmation appears. Delete messages and retry.
Show or hide transmission progress bar	Default Show	<i>Sending progress settings</i> → <i>Sending progress</i> → Select an item
Always show or hide send result (progress bar hidden)		<i>Sending progress settings</i> → <i>Sending result notice</i> → Select an item <ul style="list-style-type: none"> • <i>Sending result</i> notice is only selectable when <i>Sending progress</i> is set to <i>Do not show</i>.

Set received message notice content or hide notice	Default Sender	<p><i>Message notice</i> → <i>View setting</i> → Select an item</p> <ul style="list-style-type: none"> Received message notice scrolls above active function windows.
Select secret folder message notice setting	Default Show	<p><i>Message notice</i> → <i>Secret folder</i> → Enter Phone Password → <input type="checkbox"/> (OK) → Select an item</p> <ul style="list-style-type: none"> <i>Not show</i>: Incoming message notice window for messages sorted to secret folders or <i>Message notice</i> does not appear.
Change message list view	Default 2 line	<i>Message list view</i> → Select an item
Change received message view	Default Folder view	<i>Received messages view</i> → Select an item
Change sent message view	Default Folder view	<i>Sent messages view</i> → Select an item
Adjust 3D Pictogram auto play setting		<p><i>3D pictograms</i> → <i>3D Picto. Auto play</i> → Select an item</p> <p><i>Always</i>: Show 3D Pictogram for all messages</p> <p><i>Only unread</i>: Show 3D Pictogram for unread messages only</p> <p><i>Disable</i>: Hide 3D Pictogram</p> <ul style="list-style-type: none"> The first time a received message is viewed <i>3D Picto., Auto play</i> confirmation appears.
Select 3D Pictogram color settings	Default Pattern 1	<p><i>3D pictograms</i> → <i>Color settings</i> → Use  to show target pattern → <input type="checkbox"/> (Select)</p> <ul style="list-style-type: none"> In <i>Color settings</i>, press  (Preview) for current settings.
Select 3D Pictogram display speed	Default Standard	<p><i>3D pictograms</i> → <i>Display speed</i> → Select an item</p> <ul style="list-style-type: none"> In <i>Display speed</i>, press  (Preview) for current settings.

S! Mail

Start Here


→ Settings → S! Mail settings

Set message sending priority	Default Normal	<i>Sending options</i> → <i>Priority</i> → Select an item
Set sent message Mail Service Center expiry	Default Maximum	<i>Sending options</i> → <i>Expiry time</i> → Select an item <ul style="list-style-type: none"> • When the expiry time has elapsed, S! Mails are automatically deleted from Mail Server.
Set time to send a message via Mail Service Center	Default Immediately	<i>Sending options</i> → <i>Delivery time</i> → Select an item <ul style="list-style-type: none"> • When set time has elapsed, Mail Service Center sends S! Mail message.
Set S! Mail receiving options	Default Auto download	<i>Receiving options</i> → Select an item <i>Auto download</i> : Mail Service Center sends complete S! Mail messages automatically <i>From number only</i> : Mail Service Center sends complete S! Mail sent to handset number <i>Manual retrieval</i> : Mail Service Center sends S! Mail Notice; retrieve complete message
Select reply setting	Default Off	<i>Reply settings</i> → Select an item <i>On</i> : Replies to sent messages are automatically addressed to " <i>Reply to</i> " address <i>Off</i> : Replies to sent messages are addressed to handset number/mail address <ul style="list-style-type: none"> • Set address that appears in To: field of replies to messages sent from handset.
Set "reply to" address		<i>"Reply to" address</i> → Select an item → Adjust settings as required <ul style="list-style-type: none"> • Select <i>Phonebook</i> → Select an entry (P.2-14) → Highlight number or E-mail address → <input type="checkbox"/> (Select). • Alternatively, select <i>Enter address</i> and enter an E-mail address.
Show or hide emotion in received Feeling Mail Notification	Default On	<i>Link to feeling</i> → <i>Idle screen Info.</i> → Select an item
Link External Light to incoming Feeling Mail	Default On	<i>Link to feeling</i> → <i>External light</i> → <i>On/Off</i> → Select an item
Link Vibration to incoming Feeling Mail	Default On	<i>Link to feeling</i> → <i>Vibration pattern</i> → Select an item
Set whether to sound handset when Feeling Mail arrives	Default On	<i>Link to feeling</i> → <i>Ringtone</i> → <i>On/Off</i> → Select an item

Linking Ringtone to incoming Feeling Mail Default Happy/Glad: One Fine Day.mp4, OK/Good: Sunny day.mp4, Sad/Sorry: Jazzy House_Pleasure.mp4, NG/Bad: MinimalTone.mp4, Important/Notice: On my way home.mp4	<i>Link to feeling</i> → <i>Ringtone</i> → <i>Assign tone</i> → Select an emotion → Select folder → Highlight a file →  (Play) →  (Select)
Set Feeling Mail ringtone duration Default 5 Seconds	<i>Link to feeling</i> → <i>Ringtone</i> → <i>Duration</i> → Enter time
Set attached image appearance Default Normal	<i>Picture appearance</i> → Select an item
Set attached image auto playback Default On	<i>Auto play file</i> → <i>Picture</i> → Select an item
Set attached sound auto playback Default Off	<i>Auto play file</i> → <i>Sound</i> → Select an item
SMS	Start Here  → <i>Settings</i> → <i>SMS settings</i>
Set Mail Service Center message expiry time Default None	<i>Expiry time</i> → Select an item • Upon expiry Mail Service Center SMS messages are automatically deleted.
Set Message Center Number Default Setting 1 +819066519300	<i>Message center</i> → Select an item
Edit Message Center Number Default +819066519300	<i>Message center</i> → Highlight item →  (Edit) → Edit Message center number
Change character code Default Unicode	<i>Char-code</i> → Select an item

Internet Settings

Yahoo! Keitai

Start Here

→ Yahoo! Keitai → Yahoo! Keitai browser settings

Change page font size	Default Standard	Font size → Select an item
Set page scroll unit	Default Single line	Scroll unit → Select an item
Show or hide page images	Default On	Downloads → Display image → Select an item • Select <i>Off</i> to help reduce download time.
Play or mute page sounds	Default On	Downloads → Play sounds → Select an item • Select <i>Off</i> to help reduce download time.
Delete cache/Cookie/certificates		Memory manager → Select an item → Yes
Show or hide Manufacture Number	Default On	Security → Manufacture number → Select an item • <i>On</i> : Handset automatically sends Manufacture Number to websites upon request as user ID.
Send or hide Referer	Default Send	Security → Send referer → Select an item
Select Cookie setting	Default Enabled	Security → Cookies → Select an item
Select Script setting	Default Ask NW access	Security → Script → Select an item
Confirm Root Certificate		Security → Root certificates → Select a certificate
Set Certificate retention period	Default Per browsing	Security → Certificate retention → Select an item
Initialize Browser		Initialized browser → Enter Phone Password → <input type="checkbox"/> (OK) → Yes
Reset settings		Reset settings → Enter Phone Password → <input type="checkbox"/> (OK) → Yes

PC Site Browser		Start Here	<input type="checkbox"/> → Yahoo! Keitai → PC site browser → PC site browser settings
Change page font size	Default Standard		Font size → Select an item
Set page scroll unit	Default Single line		Scroll unit → Select an item
Show or hide page images	Default On		Downloads → Display image → Select an item • Select <i>Off</i> to help reduce download time.
Play or mute page sounds	Default On		Downloads → Play sounds → Select an item • Select <i>Off</i> to help reduce download time.
Delete cache/Cookie/certificates			Memory manager → Select an item → Yes
Show or hide Manufacture Number	Default On		Security → Manufacture number → Select an item • <i>On</i> : Handset automatically sends Manufacture Number to websites upon request as user ID.
Send or hide Referer	Default Send		Security → Send referer → Select an item
Select Cookie setting	Default Enabled		Security → Cookies → Select an item
Select Script setting	Default On		Security → Script → Select an item
Confirm Root Certificate			Security → Root certificates → Select a certificate
Set Certificate retention period	Default Per browsing		Security → Certificate retention → Select an item
Show or hide warning	Default Activate PC site browser: On, Switch to Yahoo! Keitai: On		Warning messages → Activate PC site browser or Switch to Yahoo! Keitai → Select an item • Show or hide PC Site Browser activation, or Yahoo! Keitai/PC Site Browser switching warning.
Initialize Browser			Initialized browser → Enter Phone Password → <input type="checkbox"/> (OK) → Yes
Reset settings			Reset settings → Enter Phone Password → <input type="checkbox"/> (OK) → Yes

Media Player Settings

Music		Start Here  → <i>Media Player</i> → <i>Settings</i> → <i>Music</i>
Set Repeat mode	Default All	<i>Repeat mode</i> → Select an item • Play a single track repeatedly, all music or all files in Playlist randomly or repeatedly.
Adjust Tone volume level	Default 70	<i>Tone volume</i> → Use  to adjust volume →  (Save)
Set Music sub folders	Default Recent music, Most played music, Artist	<i>Music menu</i> → Check a folder you want to display →  (Save) • Select folders to appear in <i>Music</i> .
Movie		Start Here  → <i>Media Player</i> → <i>Settings</i> → <i>Movie</i>
Set Repeat mode	Default All	<i>Repeat mode</i> → Select an item • Play a single file repeatedly, all videos or all files in Playlist randomly or repeatedly.
Adjust Tone volume level	Default 70	<i>Tone volume</i> → Use  to adjust volume →  (Save)
Set Backlight	Default Always On	<i>Backlight</i> → Select an item
Set Video sub folders	Default Recent movie, Most played movie	<i>Movie menu</i> → Check a folder you want to display →  (Save) • Select folders to appear in <i>Movie</i> .
Show or hide Video thumbnails	Default On	<i>Movie thumbnail display</i> → Select an item
Access or ignore linked information	Default On	Under <i>Web link</i> , <i>On</i> or <i>Off</i> • <i>On</i> : After playing a file with linked info, access confirmation appears.

Mobile Camera Settings

Camera & Video

Start Here



→ *Camera* → *Take photo/Record video* → → *Settings* → *General*

Show or hide Indicators	Default On	<i>Indicators</i> → Select an item • <i>On</i> : Indicators appear.
Activate or cancel Auto Save	Default Off	<i>Auto Save</i> → Select an item • <i>On</i> : Image or video automatically saved after capturing or recording.
Show or hide menu item guidance	Default On	<i>Help</i> → Select an item • <i>On</i> : Guidance information appears for selected menu item.

Photo

Start Here



→ *Camera* → *Take photo/Record video* → → *Settings* → *Photo*

Select Quality	Default Normal	<i>Quality</i> → Select an item
Set ISO	Default Auto	<i>ISO</i> → Select an item
Set Exposure metering	Default Normal	<i>Exposure metering</i> → Select an item
Set save location when Memory Card is inserted	Default Phone	<i>Save to</i> → Select an item • When image size is 240 x 320, Digital Camera is unselectable. • Memory Card must be inserted to select it as save location. • If Memory Card is not inserted, images are automatically saved to <i>Phone</i> .
Show or hide Guideline	Default Off	<i>Guideline</i> → Select an item
Set Shutter sound	Default Pattern1	<i>Shutter sound</i> → Select an item

Video

Start Here



→ *Camera* → *Take photo/Record video* → → *Settings* → *Video*

Select Quality	Default Economy	<i>Quality</i> → Select an item • When <i>For S! Mail</i> is set, quality is automatically set to <i>Economy</i> .
Set save location	Default Phone	<i>Save to</i> → Select an item • When Memory Card is not inserted, images are automatically saved to <i>Phone</i> .

Phonebook Settings

Start Here



→ *Phonebook* → *Settings*

Select Phonebook Save Location	Default Phone	<i>Save settings</i> → Select an item • <i>Ask each time</i> : A confirmation appears each time a new entry is saved.
Change Phonebook preference (Phone/USIM)	Default Phone	<i>Change view</i> → Select an item
Change Search Method	Default A-ka-sa-ta-na	<i>Search method</i> → Select an item
Backup Phonebook entries		<i>Backup</i> → Select an item → <i>Yes</i>
Change Phonebook font size	Default Standard	<i>Font size</i> → Select an item

Sound & Alert Settings

Sounds & Alerts		Start Here	☐ → Settings → Sounds & Alerts
Adjust volume	Default Level 3	Volume → Select an item → Use  to adjust volume →  (Play) →  (Select)	• There is no <i>Play</i> option to sample <i>Phone sounds</i> .
Set Ringtone for Voice Call	Default Samsung Tune.mp4	Ringtone → Voice call → Select save location for a file → Highlight a file →  (Play) →  (Select)	
Set ringtone other than Voice Call	Default Message: Samsung Tune.mp4, Missed call notification/Delivery report: BusinessTone.mp4	Ringtone → Select an item → Assign tone → Select save location for a file → Highlight a file →  (Play) →  (Select)	
Set ringtone duration other than Voice Call	Default 5 Seconds	Ringtone → Message/Missed call notification/Delivery report → Duration → Enter duration	
Set Vibration	Default Off	Vibration → Voice call/Message/Missed call notification/Delivery report → Select a vibration pattern →  (Play) →  (Select)	
Set Keypad tones	Default Off	Phone sounds → Keypad tones → Select an item	
Set system sounds	Default Several tones on	Phone sounds → System sounds → Check item to set →  (Save)	
External Light		Start Here	☐ → Settings → Sounds & Alerts → External light
Illuminate External Light for incoming transmissions	Default Voice call/Message/Missed call notification: On, Delivery report: Off	Incoming → Select an item → On or Off	
Illuminate External Light for missed calls	Default On	Notification → Select an item → On or Off	

Display Settings Start Here → Settings → Display settings

Change Wallpaper	Default Preset pictures	Wallpaper → (P.2-4 Wallpaper 2)
Set Menu style	Default Silver	Main menu style → Use  to choose color • Change menu appearance.
Set Standby Display appearance	Default Off	Clock/Calendar → Select an item and edit as required • To set clock type, select <i>Digital clock</i> → Use  to select clock type →  (OK). • <i>Dual clock</i> : 2 clocks appear in Standby. Local time (set in <i>Date & Time</i>) appears on top. To set clock below it, <i>Dual clock</i> → Highlight Time zone field → Use  to specify an area → Highlight and check <i>Daylight saving</i> as required →  (OK).
Change font size for menu list	Default Large	Font size → List font → Select an item
Set text size in Yahoo! Keitai pages	Default Standard	Font size → Browser → Select an item • Text size cannot be set in PC Site Browser.
Change font size for Phonebook	Default Standard	Font size → Phonebook → Select an item
Change font size for text entry window	Default Standard	Font size → Editor → Select an item
Change Message text font size	Default Standard	Font size → Messages → Select an item
Adjust Display brightness	Default 3	Backlight → Brightness → Use  to adjust brightness →  (OK)
Set Backlight time	Default On: 15 seconds, Dim: 15 seconds	Backlight → Backlight time → Select On field → Select duration → Select Dim field → Select duration →  (Save) • When <i>Backlight time</i> is set to <i>Off</i> , Display becomes dim. • Display becomes dimmer when <i>Backlight time</i> elapses and turns off when <i>Dim</i> time elapses.
Set Dialling window font type	Default Normal	Dialling display → Font type → Use  to change the type →  (OK)
Set Dialling window font size	Default Standard	Dialling display → Font size → Use  to change the size →  (OK)
Set Dialling window font color	Default Basic	Dialling display → Font color → Use  to change color →  (OK) • For <i>Monochrome</i> , use  to highlight Color field → Use  to change color →  (OK).

Set Dialing window background color		<i>Dialling display</i> → <i>Background color</i> → Use  to change color →  (OK)
Set Operator name	Default Off	<i>Operator name</i> → Select an item

Phone Settings → *Settings* → *Phone settings*

Change user interface language	Default 日本語	<i>言語選択</i> → Select an item <ul style="list-style-type: none"> • <i>中文</i> (Chinese) and <i>Português</i> (Portuguese) only support menu display in those languages. Entering characters or displaying received messages in those languages are not supported.
Set Time zone updating	Default Prompt first	<i>Date & Time</i> → Select Time zone updating field → Select an item →  (Save) <ul style="list-style-type: none"> • <i>Automatic</i>: A confirmation appears. Choose <i>Yes</i> to restart handset. • <i>Time zone updating</i> is disabled even when the setting is changed.
Change Home time zone	Default GMT+09:00	<i>Date & Time</i> → Highlight Home zone field → Use  to toggle areas →  (Select) →  (Save) <ul style="list-style-type: none"> • Select the zone closest to your locality. Complete this setting before selecting <i>Dual clock</i>.
Activate or cancel Daylight savings time adjustment	Default Unchecked	<i>Date & Time</i> → Select Home zone field → Highlight and check <i>Daylight saving</i> →  (OK) →  (Save)
Set time		<i>Date & Time</i> → Highlight Time field → Enter time →  (Save) <ul style="list-style-type: none"> • Some functions are disabled when time is not set.
Set AM/PM (when Time format is set to 12H)		<i>Date & Time</i> → Highlight <i>AM</i> or <i>PM</i> in Time field → Use  to toggle setting →  (Save)
Set date		<i>Date & Time</i> → Highlight Date field → Enter date →  (Save) <ul style="list-style-type: none"> • Some functions are disabled until date is set.
Change Time format	Default 24H	<i>Date & Time</i> → Select Time format field → Select an item →  (Save)
Change Date format	Default YYYY/MM/DD	<i>Date & Time</i> → Highlight Date format field → Select an item →  (Save)
Save entries to User's Dictionary		<i>User's dictionary</i> → <i>New entry</i> → Select Word field → Enter word or sentence → Select Reading field → Enter reading →  (Save)
Edit User's Dictionary entries		<i>User's dictionary</i> → <i>Edit entry</i> → Select entry to edit → Edit word or reading →  (Save)

Delete User's Dictionary entries		<i>User's dictionary</i> → <i>Delete all</i> → Enter Phone Password → <input type="checkbox"/> (OK) → <i>Yes</i>
Reset entry history to default		<i>User's dictionary</i> → <i>Reset learning</i> → Enter Phone Password → <input type="checkbox"/> (OK) → <i>Yes</i> <ul style="list-style-type: none"> • Previous Kanji conversions appear first for predicted/conversion alternatives. This action clears conversion history.
Activate or cancel Auto keypad lock	Default Off	<i>Auto keypad lock</i> → Select an item
Activate or cancel Simple Search	Default Off	<i>Simple search</i> → Select an item <ul style="list-style-type: none"> • <i>On</i>: In Standby, press keys assigned to characters used in Phonebook entry Readings.
Set Side Keys to activate Reject Call or mute ringer	Default Silence	<i>Side key</i> → Select an item <ul style="list-style-type: none"> • Set handset action when <input type="checkbox"/> or <input type="checkbox"/> is pressed for 1+ seconds during incoming transmission.
Set Any key answer	Default Off	<i>Any key answer</i> → Select an item <ul style="list-style-type: none"> • <i>On</i>: Press any key except <input type="checkbox"/>, <input type="checkbox"/>, <input type="checkbox"/>, <input type="checkbox"/>, <input type="checkbox"/> and <input type="checkbox"/> to answer a call.
Set Keypad Light illumination mode	Default Normal mode	<i>Keypad light</i> → Select an item <ul style="list-style-type: none"> • <i>Normal mode</i>: Keypad Light illuminates for Backlight Time duration. • When <i>Saving mode</i> is set, select Starting time field → Enter time → Ending time field → Enter time → <input type="checkbox"/> (Save). • <i>Saving mode</i>: Keypad Light turns off for set duration.

Security Settings **Start Here** → *Settings* → *Security*

Activate or cancel Phone Lock	Default Off	<i>Phone lock</i> → Select an item → Enter Phone Password → <input type="checkbox"/> (OK)
Activate or cancel Password Lock	Default Off	<i>Password lock</i> → Select an item → Enter Phone Password → <input type="checkbox"/> (OK)
Activate or cancel USIM Lock	Default Off	<i>USIM lock</i> → Select an item → Enter USIM password (4 to 8 digits) → <input type="checkbox"/> (OK) → Enter USIM password again as required → <input type="checkbox"/> (OK)
Activate or cancel Application Lock	Default Unlock all	<i>Application lock</i> → Check item to lock → <input type="checkbox"/> (Save) → Enter Phone Password → <input type="checkbox"/> (OK)
Activate or cancel Secret mode	Default Hide	<i>Secret mode</i> → Enter Phone Password → <input type="checkbox"/> (OK) → Select an item
Create or cancel Secret folders in Data Folder	Default Hide	<i>Secret data folder</i> → Enter Phone Password → <input type="checkbox"/> (OK) → Select an item
Restore handset to defaults		<i>Reset</i> → <i>All reset</i> → Enter Phone Password → <input type="checkbox"/> (OK) → <i>Yes</i>
Restore Settings to default values		<i>Reset</i> → <i>Reset settings</i> → Enter Phone Password → <input type="checkbox"/> (OK) → <i>Yes</i>
Activate or cancel PIN Certification	Default Off	<i>PIN certification</i> → Select an item → Enter PIN → <input type="checkbox"/> (OK)
Change PIN		<i>Change PIN</i> → Enter current PIN → <input type="checkbox"/> (OK) → Enter new PIN → <input type="checkbox"/> (OK) → Enter new PIN again → <input type="checkbox"/> (OK)
Change PIN2		<i>Change PIN2</i> → Enter current PIN2 → <input type="checkbox"/> (OK) → Enter new PIN2 → <input type="checkbox"/> (OK) → Enter new PIN2 again → <input type="checkbox"/> (OK)
Change Phone Password	Default 9999	<i>Change password</i> → Enter current password → <input type="checkbox"/> (OK) → Enter new password → <input type="checkbox"/> (OK) → Enter new password again → <input type="checkbox"/> (OK)
Activate Mobile Tracker	Default Off	<i>Mobile tracker</i> → Enter Phone Password → <input type="checkbox"/> (OK) → Select Activation field → <i>On</i> → Select Recipients field → Select To field → Enter a recipient → <input type="checkbox"/> (Save) → Select Sender field → Enter sender name → <input type="checkbox"/> (Save) → Confirm entries → <input type="checkbox"/> (Agree) or <input type="checkbox"/> (Reject)

Call Settings Start Here → Settings → Call settings

Forward all calls to Voice Mail (handset does not ring)	<i>Optional services</i> → <i>Voice mail/Call forwarding</i> → <i>Voice mail on</i> → <i>Always (0 sec.)</i>
Forward unanswered calls to Voice Mail (specify ring time)	<i>Optional services</i> → <i>Voice mail/Call forwarding</i> → <i>Voice mail on</i> → <i>No reply (5 to 30 sec.)</i> → Select call duration
Activate and set Forwarding	<i>Optional services</i> → <i>Voice mail/Call forwarding</i> → <i>Call forwarding on</i> → Select a setting → Select an item → Enter number as required
Cancel Voice Mail/Call Forwarding	<i>Optional services</i> → <i>Voice mail/Call forwarding</i> → <i>Deactivate All</i> → <i>Yes</i>
Confirm current Voice Mail/Call Forwarding settings	<i>Optional services</i> → <i>Voice mail/Call forwarding</i> → <i>Get status</i>
Listen to Voice Mail message	<i>Optional services</i> → <i>Voice mail/Call forwarding</i> → <i>Listen to voice mail</i> → <input type="checkbox"/> (Call)
Activate or cancel Call Waiting	<i>Optional services</i> → <i>Call waiting</i> → Select an item
Confirm current Call Waiting settings	<i>Optional services</i> → <i>Call waiting</i> → <i>Get status</i>
Set Outgoing Call Barring	<i>Optional services</i> → <i>Call barring</i> → <i>Outgoing call</i> → Select an item → <i>On or Off</i> → Enter Network Password → <input type="checkbox"/> (OK)
Activate or cancel Incoming Call Barring	<i>Optional services</i> → <i>Call barring</i> → <i>Incoming call</i> → <i>Bar all incoming calls</i> → Select an item → Enter Network Password → <input type="checkbox"/> (OK)
Cancel all Call Barring	<i>Optional services</i> → <i>Call barring</i> → <i>Cancel all barring</i> → Enter Network Password → <input type="checkbox"/> (OK) → <i>Yes</i>
Confirm current Call Barring settings	<i>Optional services</i> → <i>Call barring</i> → <i>Get status</i> → Select an item
Change Network Password	<i>Optional services</i> → <i>Call barring</i> → <i>Set security code</i> → Enter current Network Password in Old field → <input type="checkbox"/> (OK) → Enter new Network Password in New field → <input type="checkbox"/> (OK) → Enter new Network Password again in Cnf field → <input type="checkbox"/> (OK)
Set Missed Call Notification	<i>Optional services</i> → <i>Missed call notification</i> → <input type="checkbox"/> (Call)
Save International Code Default 0046010	<i>Optional services</i> → <i>International call</i> → <i>International code</i> → Enter Phone Password → <input type="checkbox"/> (OK) → Enter an international code

Add/change/delete Country Number Default 1: 日本 (Japan), 2: 韓国 (KOR), 3: イギリス (GBR), 4: イタリア (ITA), 5: スイス (CHE), 6: スペイン (ESP), 7: ドイツ (DEU), 8: ポルトガル (PRT), 9: オランダ (NLD), 0: フランス (FRA), *: モナコ (MCO), #: アメリカ合衆国 (USA), スウェーデン (SWE), オーストラリア (AUS), 中国 (CHN), 香港 (HKG), 台湾 (TWN)	<i>Optional services</i> → <i>International call</i> → <i>Country number</i> → Add, change or delete item <ul style="list-style-type: none"> To add/save, highlight an item from Country code → <input type="checkbox"/> (Change) → Select Country name field → Enter country name → Highlight Enter country code field → Enter country number → <input type="checkbox"/> (Save). To delete, highlight item → <input type="checkbox"/> (Delete) → Yes.
Check Call Time/Cost	<i>Call time & cost</i> → <i>All calls</i> <ul style="list-style-type: none"> To reset call time/cost, <input type="checkbox"/> (Reset) → Enter PIN2 → <input type="checkbox"/> (OK).
Check last Call Time/Cost	<i>Call time & cost</i> → <i>Last calls</i> <ul style="list-style-type: none"> To reset last call time/cost, press <input type="checkbox"/> (Reset).
Check Data Counter	<i>Call time & cost</i> → <i>Data counter</i> <ul style="list-style-type: none"> To reset sent/received data counter, press <input type="checkbox"/> (Reset).
Show or hide Call Time/Cost after calls	<i>Call time & cost</i> → <i>Show charge after call</i> → Select an item <ul style="list-style-type: none"> This function may not be available.
Change Call Cost Currency	<i>Call time & cost</i> → <i>Set currency</i> → Enter PIN2 → <input type="checkbox"/> (OK) → Select Price field → Enter rate to the yen → Select Currency field → Enter currency unit → <input type="checkbox"/> (Save)
Set Call Cost Limit	<i>Call time & cost</i> → <i>Set max cost limit</i> → <input type="checkbox"/> (Edit) → Enter PIN2 → <input type="checkbox"/> (OK) → Select Upper limit after changing field → Enter upper limit → <input type="checkbox"/> (Save) <ul style="list-style-type: none"> After reaching the call cost limit, only emergency calls can be made; messaging, web connections (fee-based operations) are disabled. When <i>Show charge after call</i> is not available, this function is also unavailable.
Cancel Call Cost Limit	<i>Call time & cost</i> → <i>Set max cost limit</i> → <input type="checkbox"/> (Release) → Enter PIN2 → <input type="checkbox"/> (OK)
Activate or cancel Answering Machine	<i>Answering machine</i> → <i>Setting</i> → Select an item
Set Answering Machine response time	<i>Answering machine</i> → <i>Ringling duration</i> → Select an item → <input type="checkbox"/> (Select) <ul style="list-style-type: none"> When <i>Other (0-30secs)</i> is selected, press <input type="checkbox"/> to enter time.

Play Answering Machine records		<p><i>Answering machine</i> → <i>Recordings</i> → Highlight a record →  (Play)</p> <ul style="list-style-type: none"> • To delete one record, highlight it →  (Delete) → <i>Yes</i>. • To delete all records, in list, press  (Delete all) → Enter Phone Password →  (OK) → <i>Yes</i>.
Set Answering Machine response language	Default 日本語	<p><i>Answering machine</i> → <i>Sound language</i> → Select an item</p> <ul style="list-style-type: none"> • Press  (Play) to hear response in the highlighted language.
Accept or reject calls from specified phone numbers	Default Off	<p><i>Reject incoming calls</i> → <i>Reject list</i> → <i>On/Off</i> → Select an item</p> <ul style="list-style-type: none"> • When a call from Reject list arrives, a caller hears a busy tone and call is not connected. <i>Rejected</i> appears in Standby. Press  (View) to check missed call.
Create or edit Black List		<p><i>Reject incoming calls</i> → <i>Reject list</i> → <i>Edit black list</i> →  → <i>Add</i> → Add an entry →  (Save)</p> <ul style="list-style-type: none"> • To delete saved phone numbers, select <i>Edit black list</i> → highlight phone number →  → <i>Delete</i> → <i>Selected</i> or <i>All</i> → <i>Yes</i>. When <i>All</i> is selected, enter Phone Password.
Accept or reject calls from unknown numbers	Default Off	<i>Reject incoming calls</i> → <i>Unknown</i> → Select an item
Accept or reject calls when number is withheld	Default Off	<i>Reject incoming calls</i> → <i>Withheld</i> → Select an item
Accept or reject calls from payphones	Default Off	<i>Reject incoming calls</i> → <i>Payphone</i> → Select an item
Accept or reject calls when number is unavailable	Default Off	<i>Reject incoming calls</i> → <i>Unavailable</i> → Select an item
Activate or cancel Offline mode	Default Off	<i>Offline</i> → Select an item
Show or hide your own number when placing calls		<i>Show my number</i> → <i>On/Off</i> → Select an item
Check the current status of show my number		<i>Show my number</i> → <i>Get status</i>
Set handset to automatically redial busy numbers	Default Off	<p><i>Auto redial</i> → Select an item</p> <ul style="list-style-type: none"> • <i>On</i>: Handset automatically disconnects call and redials busy numbers. Auto redial repeats up to 10 times until  (Cancel) or  is pressed. • If called party uses Call Forwarding or Voice Mail, call is forwarded accordingly.

Activate or cancel automatic ringer reduction Default On	<p><i>Ringtone reducer</i> → Select an item</p> <ul style="list-style-type: none"> • When ringtone volume level is high, the volume level is reduced to <i>Level 1</i> for the first four seconds, then returns to the set level in the following manner: <i>Level 1</i> for four seconds → <i>Level 2</i> for four seconds → <i>Level 3</i> for four seconds → <i>Level 4</i>.
Enable or disable calling via Earphone Microphone Default Earphone call: Off	<p><i>Earphone call</i> → <i>Earphone call activate</i> → Select an item → <i>Call number</i> → Add an entry →  (Save)</p> <ul style="list-style-type: none"> • <i>On</i>: Press Earphone Microphone switch for 1+ seconds in Standby to call specified number. To change specified number, repeat setup operation, saving the new number.
Adjust Earpiece volume Default Level 5	<p><i>Hearing volume</i> → Use  to adjust volume →  (Select)</p>

Mode Settings **Start Here** → *Settings* → *Manner mode settings*

Change mode	<p><i>Normal, Manner, Drive, Meeting or Outdoor</i></p> <ul style="list-style-type: none"> • To change settings for each mode, highlight a mode, press  (Edit) and set each item.
-------------	---

Connectivity Settings

Infrared	Start Here  → <i>Settings</i> → <i>Connectivity</i> → <i>Infrared</i>
Activate or cancel Infrared transmission Default Off	<p><i>Infrared On/Off</i> → Select an item</p>
Transfer Phonebook or Calendar entries at once	<p><i>Transfer all</i> → Enter Phone Password →  (OK) → Select an item → Enter Authorization Code (4 digits) →  (OK)</p> <ul style="list-style-type: none"> • For <i>Phonebook</i>, choose <i>Yes</i> to transfer images.
Network	Start Here  → <i>Settings</i> → <i>Connectivity</i>
Retrieve Network Information manually	<p><i>Retrieve NW info</i> → <i>Yes or No</i></p>

Memory Settings Start Here → Settings → Memory settings

Check Memory Card details	<i>Memory card</i> → <i>Memory card details</i> • Check Memory Card name, memory capacity, or remaining memory.
Format Memory Card	<i>Memory card</i> → <i>Format memory card</i> → Enter Phone Password →  (OK) → <i>Yes</i>
Rename Memory Card	<i>Memory card</i> → <i>Rename memory card</i> → Enter name
Backup Memory	<i>Memory card</i> → <i>Backup & Restore</i> → <i>Backup</i> → <i>Yes</i> → Enter Phone Password →  (OK) → Select an item → <i>Yes</i>
Restore Memory	<i>Memory card</i> → <i>Backup & Restore</i> → <i>Restore</i> → <i>Yes</i> → Enter Phone Password →  (OK) → Select an item → Select a file → <i>Add or Overwrite</i>
Confirm total or remaining Phone Memory	<i>Phone memory</i> → <i>Phone memory details</i> • View Phone memory capacity or remaining memory.
Clear Phone Memory	<i>Phone memory</i> → <i>Clear phone memory</i> → Check item to delete →  (Delete) → Enter Phone Password →  (OK) → <i>Yes</i>
Set Default Memory to Phone or Memory Card Default Phone	<i>Set default memory</i> → Select an item • With Memory Card inserted, select 731SC (Phone) or Memory Card. Available when saving S1 Mail attachments, downloading files, etc. • When <i>Memory card</i> or <i>Always ask</i> is selected with no Memory Card inserted, files are automatically saved to 731SC (Phone).
View Memory status	<i>Memory status</i> → Select an item • To delete viewed memory, press  (Delete) (P.2-33 Deleting Registered/Saved Data).

Appendix



Battery & Charger	12-2
Before Using Battery or Charger	12-2
Inserting & Removing Battery	12-3
USIM Card	12-4
Information & Precautions	12-4
Inserting & Removing USIM Card	12-5
PIN	12-6
Troubleshooting	12-6
Software Update	12-9
Function List	12-10
Key List for Text Entry	12-12
Symbols	12-13
Memory List	12-14
Specifications	12-14
Index	12-16
Objective Index	12-21
Advanced Settings Index	12-23
Warranty & Service	12-24
Customer Service	12-25

Battery & Charger

Before Using Battery or Charger

Charge battery before first use of handset or after long periods of disuse.

Charging Battery

- Long periods of disuse may affect battery's ability to hold a full charge. Charge battery at least once every six months while not in use. Otherwise, battery may become unusable.
- Depending on usage, bulges may appear near end of battery life; this does not affect safety.
- Handset uses a lithium-ion battery; charge battery in anytime without damaging its ability to hold a charge.
- Do not charge battery under the following conditions:
 - In ambient temperatures beyond 5°C - 40°C
 - In high levels of humidity, vibration or dust (May cause malfunction)
 - Near a radio receiver (May cause feedback)
- Handset or Charger may warm while charging. This is normal, however, should they become very hot to the touch, stop charging and contact Customer Service (☎P.12-25).

- Battery is a consumable; replace it if operating time shortens noticeably.

Note

- **Use specified Charger only. Do not use it for devices other than handset.**
- **Battery must be inside handset to charge it.**
- **When not in use, unplug Charger from outlet.**

Battery Life

Battery time/life may be reduced by any of the following:

- Environmental Factors
 - Storing/using handset beyond 5°C - 40°C
 - Using handset when signal is poor/out-of-range
 - Debris on handset, battery or Charger Port
- Operational Factors
 - Camera use
 - Media Player use
 - Heavy Keypad use (e.g., for messaging)
- Settings
 - Increasing *Brightness* or *Backlight time*
 - Using Media Player with Backlight set to *Always On*

Battery Disposal

Do not dispose of exhausted batteries with ordinary refuse. Tape over battery terminals before disposal or take to a SoftBank shop. Follow any and all local regulations regarding battery disposal. Lithium-ion batteries are recyclable.

When Battery Runs Out

When battery is weak, a warning appears and handset beeps. Charge or replace battery; otherwise handset will automatically turn off.


Inserting & Removing Battery

Inserting


- 1 Press and slide Battery Cover as shown




- 2 Remove Battery Cover

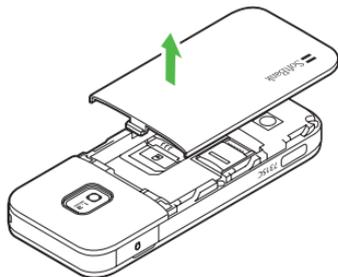

- 3 Fit battery into handset as shown

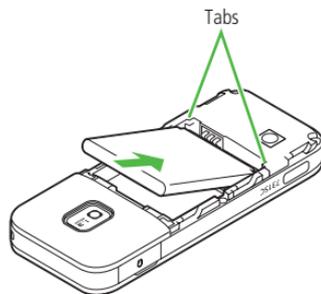

- 4 Replace Battery Cover

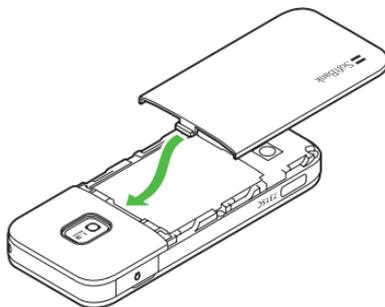

Note

- Remove battery cover with care; stress on tabs may damage them.
- Gently insert battery to avoid damaging handset tabs.


Removing

Always turn handset off before removing battery. Never remove battery while AC Charger is connected.


- 1 Press and slide Battery Cover as shown



2 Remove Battery Cover

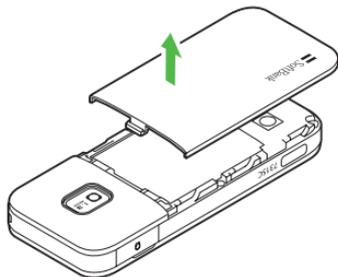


3 Lift battery up and remove as shown

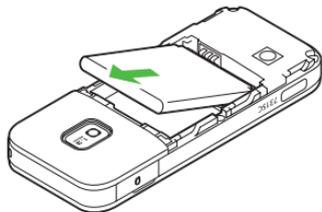

USIM Card

Information & Precautions

Universal Subscriber Identity Module (USIM) Card is an IC card containing customer and authentication information, including handset number and limited storage for Phonebook entries and SMS. Install USIM Card to use handset; turn handset power off to insert/remove USIM Card.

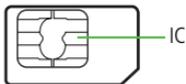

USIM Card

Insert USIM Card into another compatible handset to access SMS and Phonebook entries saved on USIM Card. Note the following precautions regarding USIM Card usage and care (see USIM Card User Guide for details):

- Avoid using excessive force when inserting/removing USIM Card.
- SoftBank is not liable for damage resulting from inserting USIM Card into IC card readers or other third party devices.

- Always keep USIM Card IC chip clean.
- Clean USIM Card IC chip with a soft, dry cloth.
- Do not attach labels to USIM Card; malfunction may result.

Note


- **USIM Card is the property of SoftBank.**
- **If USIM Card is lost or damaged, you will be charged for reissuing it.**
- **Return USIM Card to SoftBank upon termination of subscription.**
- **Returned USIM Cards are recycled.**
- **USIM Card specifications may change without prior notice.**
- **If USIM Card or handset with USIM Card inserted is lost or stolen in Japan or abroad, immediately contact Customer Service (☎P.12-25) to suspend service.**
- **Handset/USIM Card repairs, replacement or upgrades may deactivate Chaku-Uta[®], Chaku-Uta Full[®] or video files on handset/Memory Card.**
- **Back-up USIM Card files. SoftBank is not liable for lost files.**

Inserting & Removing USIM Card


Always turn power off before opening handset to remove battery or insert/remove USIM Card.

Inserting

- 1 Remove battery (ⓘP.12-3)
- 2 With IC chip down, insert USIM Card into card slot as shown in the illustration

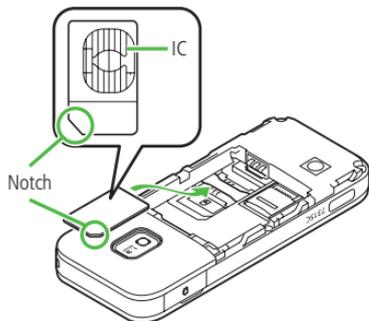


- 3 Push in USIM Card until it stops and locks

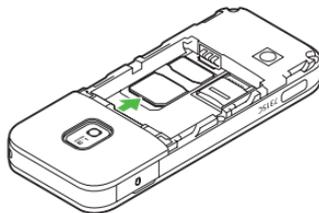

Removing

- 1 Remove battery (ⓘP.12-3)
- 2 Press down on USIM Card and gently slide it out

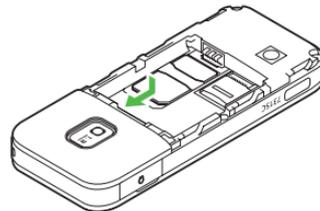

Note

- Inserting USIM Card with excessive force may damage it or handset.
- Do not misplace a removed USIM Card.
- To prevent damaging it, avoid touching the IC chip when inserting or removing USIM Card. Do not touch battery contacts.

PIN

USIM Card features 2 security codes: PIN and PIN2.

PIN

Use PIN (4- to 8-digit) to prevent unauthorized use of handset by others.

- Modify PIN (ⓍP.9-2).
- When PIN lock is activated, PIN entry is required each time handset is turned on or whenever USIM Card is re-inserted (ⓍP.9-2).

PIN2

PIN2 (4- to 8-digit) is required for Reset Call Cost or Edit Cost Limit, etc.

- Modify PIN2 (ⓍP.9-2).

Canceling PIN Lock (PUK/PUK2 Code)

Incorrectly entering PIN or PIN2 three consecutive times activates PIN Lock and limits handset function access. Enter PUK (PIN Unlocking Key) Code to cancel PIN Lock.

For more information, contact Customer Service (ⓍP.12-25).

Note

- Entering PUK or PUK2 incorrectly ten consecutive times locks USIM Card and deactivates handset. Take a note of PUK and PUK2.
- A locked USIM Card cannot be unlocked. Contact Customer Service (ⓍP.12-25).

Troubleshooting

■ Handset does not turn on

- Is battery empty?
 - ➔ Replace or charge battery.
- Is battery installed in handset?
 - ➔ Install battery correctly.

■ When power is turned on, PIN entry window appears

- Is *PIN certification* set to *On*?
 - ➔ If *PIN certification* is *On*, enter PIN.

■ When power is turned on, USIM password entry window appears

- Is *USIM lock* set to *On*?
 - ➔ If *USIM lock* is *On*, enter USIM password.

■ **Please insert USIM card, Incorrect USIM or USIM card failed appears when handset is turned on or executing a function**

- ☑ Is USIM Card correctly installed?
 - ➔ Check to see if USIM Card is correctly installed. If the message appears even though USIM Card is correctly installed, it may be damaged.
- ☑ Is USIM Card still being loaded?
 - ➔ Try again after a while.
- ☑ Is an incorrect USIM Card used?
 - ➔ Check to see if correct USIM Card is used. Use USIM Card specified by SoftBank.
- ☑ Is there debris on USIM Card IC chip?
 - ➔ Remove debris with a clean, dry cloth, and then install USIM Card correctly.

■ **圏外 or Out appears and no calls can be made**

- ☑ Handset is out-of-range.
 - ➔ Move to a place where the signal is stronger and try again.

■ **Calls are interrupted or disconnected**

- ☑ Does 圏外 or **Out** appear?
 - ➔ Move to a place where the signal is stronger and try again.
- ☑ Is battery empty?
 - ➔ Replace or charge battery.

■ **Unable to make a call**

- ☑ Is Call Barring set?
 - ➔ Deactivate Call Barring.
- ☑ Is *Offline* set to *On*? ( appears)
 - ➔ Set *Offline* to *Off*.

■ **Unable to open Phonebook entry, Data Folder, Call Log, Calendar or Messaging**

- ☑ Is *Application lock* set?
 - ➔ Cancel *Application lock*.

■ **Clicking noise is heard during a call**

- ☑ Noise may be generated when signal is weak or while moving between coverage areas.

■ **Unable to charge battery**

- ☑ Is AC Charger Connector securely inserted?
 - ➔ Insert AC Charger Connector securely.
- ☑ Is AC Charger plug securely inserted?
 - ➔ Insert AC Charger plug securely.
- ☑ Is battery installed in handset?
 - ➔ Install battery correctly.
- ☑ Are handset terminals and AC Charger clean?
 - ➔ Clean contacts with a dry cotton swab.
- ☑ Was battery charged in ambient temperature below 5 °C or above 40 °C?
 - ➔ Charge battery in ambient temperature between 5 °C and 40 °C.
- ☑ Battery may need to be replaced.
 - ➔ Install a new battery.
- ☑ Does battery always lose its charge quickly after being charged?
 - ➔ Battery life has expired. Replace with a new battery.
- ☑ Does handset or battery become very warm during charging?
 - ➔ If the temperature rises too much, charging may stop. After handset and battery are cool, retry charging.

■ Devices become hot

- ☑ During charging, AC Charger may heat up.
- ☑ Handset may heat up during charging/long calls.
- ➔ If handset is safe to touch, heat level is normal. If it is too hot to touch, immediately stop charging and contact Customer Service (☎P.12-25).

■ Battery drains quickly

- ☑ Battery may drain quickly depending on the operating environment (Ambient temperature, charging conditions or signal strength), operations and settings.
- ➔ Use handset in an appropriate environment and reduce operations requiring high power (☎P.12-2).

■ Display flickers

- ☑ Is handset used near a fluorescent light?
- ➔ Use handset as far away from a fluorescent light as possible.

■ Display is dim or unlit

- ☑ This may be due to the characteristics of Display and not a problem. The time (seconds) until Display is dimmed or unlit can be changed by adjusting the Backlight time (☎P.11-12).

■ Unable to play music via speaker

- ☑ Is Manner mode set?
 - ➔ Cancel Manner mode.
- ☑ Is the earphone microphone connected?
 - ➔ Disconnect the connector for the earphone microphone from handset.

■ *Too many applications are already running.* appears

- ☑ Too many functions are active.
 - ➔ Close some.

■ Unable to establish USB connections using Samsung PC Studio

- ☑ Is the USB driver installed?
 - ➔ If communications are executed connecting to a personal computer with the USB Cable, installing the driver is required. Download and install the driver.

- ☑ Is the connection method set correctly on the personal computer?
 - ➔ Set to *USB* on the Connection Manager of Samsung PC Studio or the Connection Wizard for the communication in use.
- ☑ Is PC USB connection port and Samsung PC Studio the same?
 - ➔ Make sure port settings match those set for Samsung PC Studio Connection Manager or Connection Wizard.

■ Phonebook entry, Message folder, schedule event in Calendar, or Tasks do not appear

- ☑ In *Security*, is *Secret mode* set to *Hide*?
 - ➔ In *Security*, set *Secret mode* to *Show* (☎P.11-15).
- ☑ Is *Secret* of each function set to *On*?
 - ➔ Press  and select *Unlock temporarily* on the window you want to display information.

■ *Sending failed* appears

- ☑ If send fails, error message and reason appear.
 - ➔ Confirm reason and try again.

■ **Service not allowed** appears

- ☑ Handset is outside the service area.
- ➔ Send from within the service area.

■ **Offline mode set.** appears

- ☑ In Offline mode, handset transmissions are disabled.
- ➔ Cancel Offline mode then try again.

■ **Storage space short by ** bytes.** **Edit data folder files?** appears

- ☑ Handset memory is full.
- ➔ Delete unnecessary files and try again.

■ **Cannot download. File corrupt.** **appears**

- ➔ File cannot be downloaded; cancel download.

■ **Unable to call via Earphone** **Microphone**

- ☑ Is *Earphone call activate* set to *Off*?
- ➔ Even if *Earphone call* number is saved, if *Earphone call activate* is set to *Off* it will not be dialed. Set *Earphone call activate* to *On*.

Software Update

Check for handset software updates and download as required. Choose to begin *Update* or *Schedule update*.

1  ➔ *Tools* ➔ *Software update*

2  (Yes)

- Handset connects to network by pressing  (Yes).

3 **Read Terms of Use and then Agree**

- Read through Terms of Use before selecting *Agree*.

4 **Enter Center Access Code (ⓈP.1-12) ➔  (OK) ➔  (OK)**


- Update Result appears.

5 Select one from the following updating methods

■ **To update immediately**

Update now

- The update starts. When completed, handset turns the power off and on again; then Notification window appears.

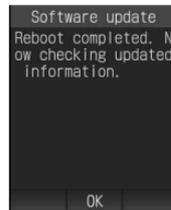


Notification Window

■ **To schedule later update**

Schedule update ➔  (Yes) ➔ Select schedule date ➔ Select schedule time ➔ Confirm schedule date & time ➔  (OK)

- For procedures, find details on SoftBank Mobile Website (<http://www.softbank.jp>).
- No fees are applied to update checks or downloads.
- At scheduled update time, message appears. Press  (OK) or wait ten seconds. Update will not start while handset is in use. When operation ends, a message window appears. However if operation does not end within ten minutes of scheduled update time, scheduled update is automatically canceled.

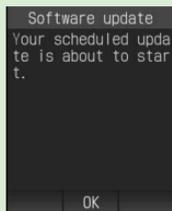

Message Window

- To cancel Schedule update, perform Steps **1** to **4**, select *Cancel schedule* and press  (Yes).

Note

- **Charge battery beforehand; if low, update may fail.**
- **If Scheduled update time arrives while handset is out-of-range, Software Update is canceled.**
- **Remain within strong, stable signal conditions.**
- **Handset Phonebook entries, media files, and other contents are not affected by software updates, but always back-up important information (note that some files cannot be copied). SoftBank is not liable for damage from lost information, etc.**
- **Handset transmissions are disabled during update.**
- **Update may take some time to complete.**
- **Update failure may disable handset. Contact SoftBank Mobile Customer Center, Customer Assistance.**

Function List

Main Menu Item	Page
Messaging	
Received messages	P.4-8, P.4-10
Create new	P.4-3
Retrieve new	P.4-19
Drafts	P.4-10, P.4-21
Templates	P.4-10, P.4-17, P.4-18
Sent messages	P.4-10
Unsent	P.4-10
Server mail	P.4-22
Create new SMS	P.4-6
Settings	P.11-2
Memory status	P.2-24
Yahoo! Keitai	
Yahoo! Keitai	P.5-3
Bookmarks	P.5-6
Saved pages	P.5-7
Enter URL	P.5-3, P.5-4

Main Menu Item	Page
Yahoo! Keitai	
History	P.5-8, P.5-12
PC site browser	P.5-3
Yahoo! Keitai browser settings	P.11-6
Media Player	
Music	P.7-3
Movie	P.7-5
Settings	P.11-8
Calendar	P.8-2
Camera	
Take photo	P.6-4
Record video	P.6-6
Data Folder	
Pictures	P.2-16
My Pictograms	P.2-16
Ring songs · tones	P.2-16
Music	P.2-16
Videos	P.2-16
Graphic Mail templates	P.2-17
Other documents	P.2-17
Memory status	P.2-17

Main Menu Item	Page
Tools	
Alarms	P.8-3
Calculator	P.8-4
Converter	P.8-4
World clock	P.8-5
Notepad	P.8-5
Tasks	P.8-6
Voice recorder	P.8-6
Stopwatch	P.8-7
Dictionary	P.8-7
Software update	P.12-9
Phonebook	
Phonebook	P.2-14
Create new entry	P.2-12
Call log	P.3-6
Group settings	P.2-29
Account details	P.2-16
Speed dial	P.3-5
S! Addressbook Back-up	P.10-6
Settings	P.11-10
Memory status	P.2-28

Main Menu Item	Page
Settings	
Sounds & Alerts	P.11-11
Display settings	P.11-12
Phone settings	P.11-13
Security	P.11-15
Call settings	P.11-16
Manner mode settings	P.11-19
Connectivity	P.11-19
Memory settings	P.11-20

Key List for Text Entry

Multiple characters are assigned to each key. Press a key repeatedly until the target character appears.

Press  to change text entry mode.

Press  to switch to Symbols,  to toggle Pictograms and Emoticons.

Key	Kanji/Hiragana	Katakana	Alphanumerics	Numbers
	あいうえおあいうえお ¹	アイウエオアイウエオ ¹	.@-./:~ ¹ 1	1
	かきくけこ ²	カキクケコ ²	ABCabc2	2
	さしすせそ ³	サシスセソ ³	DEFdef3	3
	たちつとっ ⁴	タチツテトッ ⁴	GHIghi4	4
	なにぬねの ⁵	ナニヌネノ ⁵	JKLjkl5	5
	はひふへほ ⁶	ハヒフヘホ ⁶	MNOmno6	6
	まみむめも ⁷	マミムメモ ⁷	PQRSpqrs7	7
	やゆよゃゅょ ⁸	ヤユヨャュョ ⁸	TUVtuv8	8
	らりるれろ ⁹	ラリルレロ ⁹	WXYZwxyz9	9
	わをん、。－ ⁰	ワヲン、。－ ⁰	„-_!? <Space> ⁰	0
	<ul style="list-style-type: none"> • Add ^ˆ / [˘] to unfixed, convertible kana • Toggle Pictograms, Emoticons 		<ul style="list-style-type: none"> • Toggle Pictograms, Emoticons 	
	<ul style="list-style-type: none"> • Toggle Double-byte Symbols, Single-byte Symbols 			
	<ul style="list-style-type: none"> • Reverse toggle characters assigned to the same key before finalizing character selection 			—
	<ul style="list-style-type: none"> • Toggle upper/lower-case 			

¹ When double-byte, "ˆ" cannot be used ("˘" appears on Display).

Memory List

S! Mail/SMS (Phone memory)	Received messages	Up to 1000 messages or 5MB
	Drafts	Up to 20 messages or 1MB
	Sent messages	Up to 250 messages or 1MB
	Unsent	Up to 20 messages or 1MB
SMS	USIM card	Up to 10 messages
Data Folder	Pictures	Up to 999 items (files/subfolders) per folder or 110MB (all folders)
	My Pictograms	
	Ring songs · tones	
	Music	
	Videos	
	Graphic Mail templates	
	Other documents	

Specifications

Handset specifications may change without prior notice.

SoftBank 731SC

Item	Specification
Weight	93.8 g*
Continuous Talk Time	Voice Call: 270 minutes*
Continuous Standby Time (Turning off Display)	500 hours*
Dimensions (W x H x D)	44.5 x 107.9 x 14.7 mm*
Maximum Output	0.25 W

*Approximate Value

- Handset with battery installed.
- Battery Time is calculated by SoftBank under stable signal conditions. Calling in poor signal conditions or leaving 731SC on out-of-range will consume more power and may reduce Battery Time by more than half.
- Frequent handset operations requiring Backlight may reduce Continuous Talk Time and Continuous Standby Time.
- Using video for Wallpaper may significantly reduce Continuous Talking and Continuous Standby Times.
- Continuous Talk Time is an average measured with a battery in stable signal conditions. Continuous Standby Time is an average measured with a new, fully charged battery with handset without calls or operations, in Standby, in stable signal conditions. Alternating between usage and Standby shortens Continuous Talk Time and Continuous Standby Time. Talk Time/Standby Time may vary by environment (battery status, ambient temperature, etc.).

Battery

Item	Specification
Voltage	3.7 V
Type	Lithium-ion
Capacity	880 mAh
Dimensions (W x H x D)	36.0 x 43.6 x 5.5 mm* (without protruding parts)

* Approximate Value

Index

A

AC Charger	1-4
Account details	2-16
Reset	2-29
Alarms	8-3
All reset	9-6
Answering Machine	3-4
Cancel	3-4
Play recordings	3-4
Set	3-4
Any key answer	11-14
Application lock	9-4
Auto Keypad Lock	9-3, 11-14
Auto redial	11-18

B

Battery	12-2, 12-3
Bookmark	5-6
Delete	5-16
Internet connection	5-6
Save	5-6
Send URL	5-15

C

Cache	5-2
Calculator	8-4
Calendar	8-2
Delete schedule	8-9
Display settings	8-10
Holiday	8-10
Schedule	8-2, 8-9
View schedule	8-3, 8-9
Call barring service	3-7, 3-12
Call forwarding service	3-7, 3-10
Call log	3-6
Check	3-6
Delete	3-7
Call time & cost	3-5
Check	3-6
Reset	3-6
Set max cost limit	11-17
Show charge after call	11-17
Call waiting service	3-7, 3-11
Camera	6-2
Attach to message for sending still image	6-8
Attach to message for sending video	6-10
Capture video	6-6
Effect	6-8, 6-10
Frame shot	6-6
Multi-shot	6-5
Night shot	6-6
Photo combination	6-5

Quick play	6-8
Self-timer	6-8, 6-10
Send a still image via infrared	6-8
Send video via infrared	6-10
Settings	11-9, 11-10
Shortcut operations	6-4, 6-7
Viewfinder	6-3
Cancel PIN lock	9-3
Center access code	1-12
Change mode	1-8
Change mode settings	1-9
Phone sounds	1-9, 1-12
Phone sounds volume	1-9
Volume	1-9
Change PIN	9-2
Change PIN2	9-2
Charge	1-4
Charger Port	1-3
Clear memory	9-6
Convert currency or unit	8-4
Copy item	2-28, 2-29
Country number	11-17

D

Data Folder	2-16
Date & Time	11-13
Daylight saving time	8-12
Dictionary	8-7
Display	1-3
Backlight	11-12
Brightness	11-12
Clock/Calendar	11-12
Dialing display	11-12
Font size	11-12
Main menu style	11-12
Operator name	11-13
Wallpaper	2-4
Display language	11-13
Download Content key	7-8

E

Earphone call	11-19
Emergency call	1-13
Emergency Location Report	1-13
Encoding	5-9, 5-13
External Device Port	1-3
External light	1-9

F

File	2-17
Copy	2-20
Delete	2-20
Details	2-30
Displayed icon	2-16, 2-17
Lock/Unlock	2-31
Rename file	2-19
Set image to Wallpaper etc.	2-32
Set Ringtone	2-32
Sort	2-31
File Viewer	8-8
Shortcut operations	8-8
Folder	2-19
Copy	2-20
Create	2-19
Delete	2-21
Rename folder	2-19

G

Group call	3-7, 3-12
Group call operations	3-12

H

Hearing volume	3-15, 11-19
History	5-12
Delete	5-9, 5-12
Internet connection	5-8, 5-12

I

International code	11-16
Internet page	5-2

K

Key Lock	1-6
----------	-----

M

Make a call	3-2
Make international call	3-15
Manner mode	1-7
Media Player	7-2
Add to Playlist	7-7, 7-8
Adjust Tone volume	11-8
Create Playlist	7-7
Play music	7-3
Play Playlist	7-7
Play video	7-5
Repeat mode	11-8
Settings	11-8
Shortcut operations	7-4, 7-6
Video resolution	7-9
Memory Card	2-22
Insert/remove	2-22
Memory card backup	10-5
Memory Status	2-17, 2-24

Search	5-12
Send URL	5-12
Phone lock	9-3
Phone Password	1-12, 9-2
Phonebook	2-10
Copy	2-28
Default number	2-28
Delete	2-15
Edit	2-28
Group	2-27
Save	2-12
Search	2-14
Set Secret mode	2-26
Setting search method	2-14
Picture browser	2-18
PIN	12-6
PIN Certification	9-2
PIN lock	9-3
PIN2	12-6
Power On/Off	1-6
Prediction On/Off	2-26
PUK Code	9-3, 12-6

R

Receive a call	3-3
Record	3-16
Reject incoming calls	11-18
Edit black list	11-18
Payphone	11-18

Reject list	11-18
Side key	11-14
Unavailable	11-18
Unknown	11-18
Withheld	11-18
Reset settings	9-6
Ringtone reducer	11-19

S

Saved pages	5-7
Delete	5-17
Rename	5-16
Save	5-7
View	5-7, 5-16
Secret data folder	9-5
Secret mode	9-4
Security code	1-12
Select function from Main Menu	2-2
Select function with Switch Bar	2-3
Select item with keypad	2-2
Send DTMF	3-16
Set Default memory	11-20
Shortcuts	2-3
Show my number	3-7, 3-14
Side key	11-14
Simple search	2-15, 11-14
Slide show	2-30
Softkey	v

Software Update	12-9
Sounds & Alerts	1-9
Speaker phone call	3-15
Speed dial	3-5
Stopwatch	8-7
S! Addressbook Back-up	10-6
Sync log	10-9
Sync mode	10-7

T

Tasks	8-6, 8-13
Delete	8-13
Text entry	2-6
Copy	2-25
Cursor position	2-25
Cut	2-25
Delete	2-9
Edit	2-9
Enter emoticon	2-8
Enter pictogram	2-8
Enter symbol	2-7
Entry Mode	2-5
Paste	2-25
Quick Address List	2-26
Undo	2-25
Time zone	11-13

U

USB connection	10-5
User's dictionary	2-9
Add	2-10
USIM Card	12-4
Insert/remove	12-5
USIM lock	9-3
USIM password	9-3

V

vFile	2-17, 2-32
Via infrared	10-2
Authorization Code	10-2
Receive data	10-3, 10-4
Send data	10-3, 10-4
Vibration	1-9, 2-27, 8-11
View Account details	2-16
Voice Call	3-2
Adjust ringtone volume	3-3
Put a call on hold	3-15
Voice mail service	3-8
Voice recorder	8-6
Lock/Unlock sound files	8-14
Play sound files	8-7
Record settings	8-14
Record sound	8-7
Send sound files	8-14

W

World clock	8-5
--------------------------	-----

Y

Yahoo! Keitai	5-3
Copy text	5-7
Details	5-9
Enter URL	5-3
Font size	11-6
Manufacture number	5-9, 11-6
Refresh	5-7
Root certificates	11-6
Script	11-6
Search	5-8
Send URL	5-8

Objective Index

Adjust volume

Hearing volume	3-15, 11-19
Media Player	11-8
Phone sounds	1-9
Ringtone volume	1-9, 3-3

Back up

Memory card	10-5
Phonebook	10-6

Cancel/Unlock

Answering Machine	3-4
Call forwarding	3-10
Call waiting	3-11
File lock	2-31
Locked messages	4-20
Manner mode	1-8
Offline mode	1-7
Phonebook Secret mode	2-26
PIN lock	9-3
Voice mail	3-9

Change

E-mail address	4-3
Font size	11-12
Mode	1-8
Network Password	3-14
Phone Password	9-2
PIN	9-2
PIN2	9-2

Copy

File/Folder	2-20
Items	2-28, 2-29
Phonebook	2-28
Text	2-25

Delete/Clear

Calendar	8-9
File/Folder	2-20, 2-21
Messages	4-12, 4-19, 4-23
Phonebook	2-15
Tasks	8-13

Edit

Calendar	8-9
Phonebook	2-28
Text	2-9

Insert/Remove

Battery	12-3
Memory Card	2-22
USIM Card	12-5

Make

Emergency call	1-13
International call	3-15
Voice Call	3-2

Play

Voice recorder	8-7
Answering Machine	3-4
Media Player	7-3, 7-5

Protect/Lock

File	2-31
Messages	4-20
Phonebook Secret mode	2-26

Receive

Messages	4-10, 4-22
Via infrared	10-3, 10-4

Reset

Account details	2-29
All reset	9-6
Call time & cost	3-6
PC site browser	5-13
Reset settings	9-6
Yahoo! Keitai	5-10

Save

Messages	2-25, 4-20
Phonebook	2-10, 2-12
User's dictionary	2-10

Search

Phonebook	2-14
-----------	------

Send

Manufacture number	5-9, 5-13
Messages	4-3, 4-6
URL	5-8, 5-9, 5-12, 5-13
Via infrared	10-3, 10-4

Set

All keys lock	1-6
Answering Machine.....	3-4
Any key answer.....	11-14
Auto keypad lock	9-3
Calendar.....	8-10
Call barring.....	3-7, 3-12
Call forwarding	3-10
Call waiting.....	3-11
Clock/Calendar	11-12
Date & Time	11-13
Images	2-32
International code.....	11-16
Manner mode.....	1-8
Media Player.....	11-8
Mode	1-9
Offline mode.....	1-7
Phone lock	9-3
Phone sounds	1-9
Phonebook	2-14
Photo/Video	11-9, 11-10
Reject incoming calls.....	11-18
Secret mode	9-4
Side key	11-14
Simple search	11-14
Sounds & Alerts.....	1-9
Voice mail.....	3-8

Show

Calendar.....	8-2
Call log	3-6
Cost after call	11-17
Data Folder	2-16

View

Account details	2-16
Calendar.....	8-3
Call log	3-6
Call time & cost.....	3-6
Memory status.....	2-17, 2-24
Messages	4-7, 4-10, 4-20, 4-23

Advanced Settings Index

Account Details	2-29	Sending SMS	4-18
Alarm	8-11	Tasks	8-13
Basic Operations	2-25	Text Entry	2-25
Bookmarks	5-15	User's Dictionary	2-26
Calendar	8-9	Using & Managing Messages	4-20
Call	3-14	Video Playback	7-8
Call Log Records	3-16	Viewing Files	2-30
Capturing Still Images	6-8	Voice Recorder	8-14
Currency/Unit Conversion	8-12	World Clock	8-12
File Viewer	8-14	Yahoo! Keitai	5-7
File/Folder Management	2-31		
Folder Management	4-23		
Group Call	3-17		
Memory Status	2-33		
Music Playback	7-7		
Notepad	8-12		
Page Operations	5-14		
PC Site Browser	5-11		
Phonebook	2-26		
Playlist	7-10		
Received Messages	4-19		
Recording Videos	6-10		
S! Addressbook Back-up	10-9		
Saved Pages	5-16		
Sending S! Mail	4-15		

Warranty & Service

Warranty

731SC purchase includes Warranty.

- Confirm shop name and date of purchase.
- Read through the contents of the Warranty and keep it in a safe place.
- The warranty period can be found in the Warranty.

SoftBank is not liable for damage to you or a third party from missed calls, etc. due to handset failure or malfunction, etc.

Repair Requests

Before submitting handset for repair, consult the "Troubleshooting" for a solution. If a problem persists, contact Customer Service (☎P.12-25) or the nearest SoftBank shop; be prepared to describe problem in detail.

- During the warranty period, repairs will be made under the terms and conditions described in the warranty.
- After the warranty period, repairs will be upon request; if said repairs can be made, you will be charged for them.

Note

- **SoftBank is not liable for any damages resulting from use of this product.**
- **Handset files and settings may be lost or altered due to accidents or repairs. Keep a copy of important files, etc. like Phonebook entries. SoftBank is not liable for damage resulting from accidental loss or alteration of handset files (Phonebook, Data Folder, etc.) or settings.**
- **Disassembling or modifying this product may be a violation of the Radio Law. Note that SoftBank will not accept repair requests for disassembled or modified products.**

Customer Service

For SoftBank handset or service information, call General Information. For repairs, call Customer Assistance.

SoftBank Mobile Customer Center

From a SoftBank handset, dial 157 for General Information, or 113 for Customer Assistance, toll free

SoftBank Mobile Global Call Center

From outside Japan, dial **+81-3-5351-3491**
(Please take care to dial correctly. International charges will apply.)

Call these numbers toll free from landlines.

Subscription Areas	Contact	
Hokkaido, Aomori, Akita, Iwate, Yamagata, Miyagi, Fukushima, Niigata, Tokyo, Kanagawa, Chiba, Saitama, Ibaraki, Tochigi, Gunma, Yamanashi, Nagano, Toyama, Ishikawa, Fukui	General Information	0088-240-157
	Customer Assistance	0088-240-113
Aichi, Gifu, Mie, Shizuoka	General Information	0088-241-157
	Customer Assistance	0088-241-113
Osaka, Hyogo, Kyoto, Nara, Shiga, Wakayama	General Information	0088-242-157
	Customer Assistance	0088-242-113
Hiroshima, Okayama, Yamaguchi, Tottori, Shimane, Tokushima, Kagawa, Ehime, Kochi, Fukuoka, Saga, Nagasaki, Oita, Kumamoto, Miyazaki, Kagoshima, Okinawa	General Information	0088-250-157
	Customer Assistance	0088-250-113

SoftBank 731SC User Guide

October 2009, Second Edition

SOFTBANK MOBILE Corp.

For more information, please visit your
nearest SoftBank Shop.



モバイル・リサイクル・ネットワーク
携帯電話・PHSのリサイクルにご協力を。

To help protect the environment and recycle valuable resources, mobile phone, and PHS shops displaying the above mark accept mobile phones, batteries, and chargers of all manufacturers.

Mobile phones, batteries, and chargers collected for recycling cannot be returned.

To protect your privacy, delete any personal information (telephone numbers, call log records, messages, etc.) beforehand.

Model Name: SoftBank 731SC

Manufacturer: Samsung Electronics Co., Ltd.
