

Basic Operations



Functions Selection	2-2
Accessing Functions	2-3
Using Switch Bar	2-3
Using Main Menu	2-3
Using Shortcuts in Standby	2-4
Common Operations	2-4
Menu Options	2-4
Selecting/Canceling Multiple Items	2-4
Received Call Settings	2-5
Ringtone Volume	2-5
Ringtone	2-5
Vibration	2-6
Standby Display Options	2-6
Wallpaper	2-6
Text Entry	2-7
Text Entry Window	2-8
Text Entry Flow	2-8
Changing Entry Mode	2-8
Kana/Kanji	2-9
Kana/Alphabet/Number	2-9
Symbol	2-10
Pictograms/Emoticons	2-10
Line Break	2-10
Hangul	2-11
E-mail Address/URL Quick Entry	2-11
Deleting/Editing	2-12
User's Dictionary	2-12
Editing User's Dictionary	2-12
Saving to User's Dictionary	2-12

Phonebook	2-13
Phonebook Window	2-15
Creating New Entries	2-15
Searching Phonebook	2-17
Calling from Phonebook	2-17
Deleting Phonebook Entries	2-18
Advanced Settings	
Main Menu	2-19
Standby Image	2-19
Text Entry	2-19
User's Dictionary	2-20
Phonebook	2-20

Functions Selection

Handset offers many convenient functions. Learn how to access them here.

2

Basic Operation

Accessing Functions




Use Switch Bar, etc. to select functions quickly (➡P.2-3).

Text Entry



Enter English, Japanese, or Hangul text (➡P.2-7).

Received Call Settings

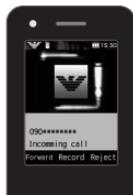

Set handset response (e.g., Ringtone, Vibration) to incoming calls (➡P.2-5).

Phonebook



Save phone numbers or mail addresses, etc. here (➡P.2-13).

Accessing Functions

Use these methods to access handset applications:

- Switch Bar
- Main Menu
- Shortcut

Using Switch Bar

Select *Call*, *Messaging*, *Yahoo! Keitai* or *Media Player*. Use multiple functions at the same time (e.g. create messages while listening to music or use the Internet during a call).

1 In Standby or active function,



2 Use to highlight target function → (Select)

- To exit an active function, open the window of the function and press .
- To exit all active functions, highlight  at the Switch Bar and press  (Yes).

- When you exit all active functions, a confirmation may appear for some functions. When the confirmation appears, choose *Yes* or *No*.
- When you exit all active functions while creating a message, functions are exited and the message creation window appears.
- Switch Bar does not appear in text entry window.

Using Main Menu

1 In Standby,



Main Menu

2 Highlight target item → (Select)

3 Repeat Step 2 to select target function


Example: Selecting *Wallpaper*
Settings → *Display settings* → *Wallpaper*



Highlight *Settings*
 →  (Select)



Highlight *Display settings*
 →  (Select)

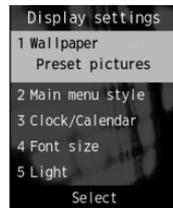

Highlight *Wallpaper*
 →  (Select)



Wallpaper setting window appears

- Press  to return to the previous operation step.
- Press  to exit menu. Handset returns to Standby. If multiple functions are active, active window appears.
- Press  to cancel menu. Handset returns to Standby or previous window. In some menus, a confirmation appears.
- Speed Dial numbers appear in item or list window. Press corresponding Keypad key to select an item.

Using Shortcuts in Standby

Press Shortcut Key in Standby to activate corresponding function.

Key	Menu/Function
	Messaging menu
 (1+ seconds)	Create S! Mail
	Yahoo! Keitai main menu
 (1+ seconds)	Yahoo! Keitai menu
	Switch Bar
 (1+ seconds)	Activate/Cancel Key Lock
	Calendar
	Search Phonebook
 (1+ seconds)	Add to Phonebook
	Call log (Received)
 	Call log (Dialed)

Key	Menu/Function
	Open Recording list
 (1+ seconds)	Activate/Cancel Answering Machine
 (1+ seconds)	Manner mode setting window
 (1+ seconds)	Toggle Manner mode On/Off
	Adjust Earpiece volume
 (2+ seconds)	Activate Camera
	Music list window
 (1+ seconds)	Media Player music playback window

Advanced

 **Advanced Settings**  P.2-19

Common Operations

Menu Options

When **Menu** appears on the lower-right screen, press  to open Menu.

To execute a menu item, highlight it and press  (Select).

Selecting/Canceling Multiple Items


Select "**Multiple**" etc. to select multiple items for deleting or moving operation.

Highlight items on displayed screen and press  (Select) to check; of item changes to .

Repeat the operation to select multiple items.

Highlight checked items and press  (Select) to cancel the selection.

To select or cancel all items, press  (Mark all) or  (Unmark all).

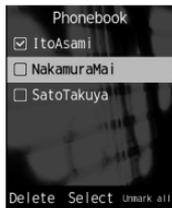

In this guide, "to check (item)" means to select multiple items.

- Available operations vary by function.
- If you select all items to delete, Phone Password entry is required.

Received Call Settings


Adjust Volume, Ringtone and Vibration settings. Use ringtone/vibration pattern to identify caller.

Ringtone Volume

Adjust Ringtone volume in 6 levels: 0 (mute) - 5.

1  → *Settings* → *Sounds & Alerts* → *Volume*

2 Select types of incoming call/
message/transmission

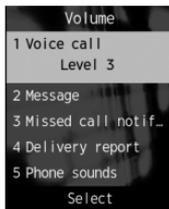


3 Use  to adjust volume

Ringtone

Set Ringtones, Ring songs, Movies downloaded from the Internet, apart from presets.

1  → *Settings* → *Sounds & Alerts* → *Ringtone*

2 Select types of incoming call/
message/transmission

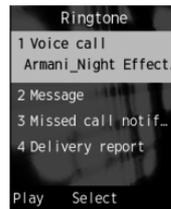

3 Select Ringtone type

4 Select Ringtone data


- Highlight Ringtone data →  (Play) to sample.

Vibration

Select Vibration Pattern from six options: *Off*, and *Pattern 1* to *Pattern 5*.

1  → *Settings* → *Sounds & Alerts* → *Vibration*

2 Select types of incoming call/message/transmission

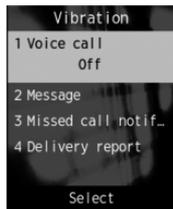

3 Select vibration

■ To cancel Vibration
Off

■ To select a Vibration Pattern
Pattern 1 to *Pattern 5*

● Highlight Vibration Pattern →  (Play) to play sample.

Advanced

Settings

- Adjust Volume ( P.12-10)
- Set Ringtone for Voice Call ( P.12-11)
- Set Ringtone other than Voice Call ( P.12-11)
- Set Ringtone Duration other than Voice Call ( P.12-11)
- Set Vibration ( P.12-11)

Standby Display Options

Set Pictures, etc. as Wallpaper in Standby.

Wallpaper

Set still image, etc. to appear in Standby. Alternatively, set *Wallpaper* to *None*.

1  → *Settings* → *Display settings* → *Wallpaper*



2 Set Wallpaper

- To set an image in Data Folder
Select a file location → Select a file →  (Set)
- To set none
None

Advanced Settings (P.2-19)

Settings

- Change Wallpaper (P.12-12)
- Change Main Menu settings (P.12-12)
- Set Standby Display appearance (P.12-12)
- Adjust Display brightness (P.12-12)
- Set Dialing window font type (P.12-13)
- Set Dialing window font size (P.12-13)
- Set Dialing window font color (P.12-13)
- Set Dialing window background color (P.12-13)
- Set Operator name (P.12-13)
- Change user interface language (P.12-13)
- Set Time zone updating (P.12-13)
- Change Home time zone (P.12-13)
- Activate or cancel Daylight savings time adjustment (P.12-14)
- Set time (P.12-14)
- Set AM/PM (when Time format is set to 12H) (P.12-14)
- Set date (P.12-14)
- Change Time format (P.12-14)
- Change Date format (P.12-14)

Text Entry


Enter Kanji, Hiragana, Katakana (single-/double-byte), alphanumerics (single-/double-byte), symbols (single-/double-byte), pictograms, emoticons or Hangul.

Icon	Entry Mode	Icon	Entry Mode
漢	Kanji or Hiragana (P.2-9)	※	Symbols (double-byte) (P.2-10)
力	Katakana (double-byte) (P.2-9)	#@	Symbols (single-byte) (P.2-10)
力	Katakana (single-byte) (P.2-9)	絵	Pictograms (P.2-10)
A	Alphabets (double-byte) (P.2-9)	顔	Emoticons (P.2-10)
Ab	Alphabets (single-byte) (P.2-9)	韓	Hangul (P.2-11)
1	Number (double-byte) (P.2-9)	a	Alphabets (double-byte, lower case) (P.2-9)

Icon	Entry Mode	Icon	Entry Mode
12	Number (single-byte) (P.2-9)	ab	Alphabets (single-byte, lower case) (P.2-9)

See "Changing Entry Mode" (P.2-8) about toggling Entry Mode.

Text Entry Window

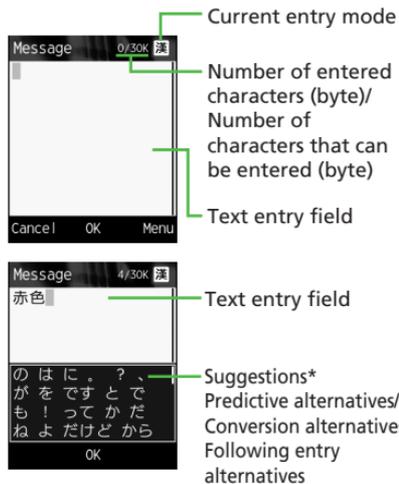

* Suggestions do not appear in Katakana, alphanumeric and number input modes. When the prediction entry function is disabled, suggestions are displayed by pressing (Convert) or (EngNum/カナ) to convert characters in Kanji/Kana entry mode.

- For Date field in Day and Time or Time field in Alarm which can only enter numbers, the text entry window does not appear. Enter numbers directly in the entry field of registration or setting window.
- When Voice Call arrives while entering text, simply answer the call. When the call ends, text entry window returns. When Alarm is activated, end Alarm to return to text entry window.

Text Entry Flow

Select Text entry mode → Enter text → Suggestion → Select suggestion

Changing Entry Mode

Toggle text entry mode: Kanji, Hiragana, Katakana (single-/double-byte), alphabet, number (single-/double-byte), symbols (single-/double-byte), pictograms, emoticons or Hangul.

1 In text entry window,



2 Select entry mode

- In the text entry window, press for Symbols, for Pictograms and Emoticons.

Kana/Kanji

Use predictive entry to convert and enter characters. Alternatively, convert entered hiragana directly. Katakana or pictograms may appear in Suggestions. Example: Enter "鈴木"

1 In text entry window, 

2 漢かな

3  (3 times)

• "す" is entered.

4  →  (3 times) →




• "ず" is entered.

5  (2 times)

• "き" is entered.

6 

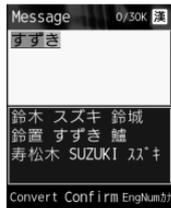

7 Highlight "鈴木" from Suggestions → (Confirm)

- After entering hiragana, press  to add * or .
- Press  to cancel an entry.
- If you over-toggle target character, press  to toggle in reverse.
- To enter same character continuously, press  to move the cursor to the right.
- To set as Hiragana, enter characters, then press  (Confirm).
- If Suggestions does not appear, press  (Convert) → Use  to change conversion range → Use  to move the cursor to the alternative area → Highlight the target conversion alternative →  (Confirm) → Repeat steps for other characters.
- If conversion fails, try another reading of the word. For multiple Kanji words, try converting characters separately.
- While Suggestions appears, press  (Convert) for conversion alternatives. While conversion alternatives appear, press  (Predict) to return to Suggestions.

Kana/Alphabet/Number

1 In text entry window, 

2 Select entry mode

3 Enter text

- After entering katakana, press  to add * or .
- In Alphabet entry mode, enter a letter then press  to toggle case.
- Press  to cancel an entry.
- If you over-toggle target character, press  to toggle in reverse.
- To enter same character continuously, press  to move the cursor to the right.
- In Kanji/Kana entry mode, enter characters and press  (EngNumカナ) to toggle katakana/alphabet/numbers entry mode. Example: Enter "くも" and press  (EngNumカナ). クモ, C, or 22277777 appears in Suggestions.

Symbol

Alternatively, enter symbols such as \ or ! (ⓍP.13-9).

1 In text entry window,



- Press  or  (Next page) until target symbol appears.


2 Highlight target character in Suggestions →

- Enter symbols continuously. To cancel symbol entry, press .
- Entered double-byte symbols remain as history and appear in Suggestions.  toggles the double-byte symbol log → double-byte symbols → single-byte symbols. In single-byte Katakana/Alphabet/Number and Hangeul entry modes,  toggles the double-byte symbol log → single-byte symbols → double-byte symbols.
- In Kanji/Kana entry mode, enter characters and press  (Convert) to convert to symbols. Example: Enter "てん" and press  (Convert), "・" or "・・・" appear in Suggestions.

Pictograms/Emoticons

Enter not only Pictograms but also Emoticons by combine symbols (ⓍP.13-10).

1 In text entry window,

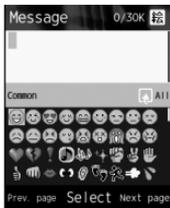

- Press  or  (Next page) until the target pictogram or emoticons appears.

2 Highlight target character in Suggestions →

- Pictograms and emoticons can be entered consecutively. To cancel pictogram and emoticon entry, press .
- In message text/subject entry window, press  in conversion alternative area of pictograms to toggle **Common/All**. Select **Common** when using Pict General.
- Entered pictograms remain as history and appear in Suggestions.  toggles pictogram logs → pictograms → emoticons.
- In Kanji/Kana entry mode, enter "はーと", "でんわ" and convert to pictograms. Similarly, "わーい" or "えーん" can be converted to emoticons.

Line Break

Use these steps to enter line breaks in any entry mode.

1 In text entry window,

2 Highlight line break symbol →



- Alternatively, press  at the end of the sentence to insert a line break.

- Line breaks cannot be inserted in some entry windows (e.g., Subject window in Messaging).

Hangul

1 In text entry window, 

2 *Hangul*



3 Enter characters

- Press number keys to enter assigned character units that appear and combine to create text.

Consonant Example (Key assignment)	
ㄱ	 (once)
ㅋ	 (twice)
ㆁ	 (3 times)
Vowel Example (Key assignment)	
아	  (1),  (.)
어	  (.),  (1)
오	  (.),  (-)
야	   
여	   
요	   
왜	  (.),  (-),  (1),  (.),  (1)

- Messages in Hangul can be received as S! Mail. However, S! Mail cannot be used to create messages in Hangul.

E-mail Address/URL Quick Entry

Save mail addresses/URLs for quick entry.

1 In text entry window for E-mail Address or URL, 
→ *Quick address list*

2 Select a target mail address/URL



Deleting/Editing

- 1 Use to move cursor to character to delete, and

- When a space is highlighted, the character before cursor is deleted.
- To delete all characters after cursor, press for 1+ seconds. If there is no character after cursor, all characters are deleted.
- Press for text entry window exit confirmation.

Advanced

Advanced Settings P.2-19

- Specifying Range to Copy/Cut
- Pasting Copied or Cut Text
- Undoing Text Entry
- Jump to Top/End
- Setting Prediction Entry or Learning Function

Settings


- Change font size in text entry window (P.12-12)
- Reset entry history to default (P.12-14)

User's Dictionary

Save frequently used words/phrases of up to 20 characters; entries appear in Suggestions when Reading is entered.

Editing User's Dictionary

- 1 → *Settings* → *Phone settings* → *User's dictionary* → *New entry*
- 2 Select Word field → Enter word or phrase
- 3 Select Reading field → Enter reading

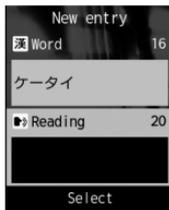

- 4 (Save)

Saving to User's Dictionary

- 1 In text entry window, → *Add to dictionary*
- 2 Use to move cursor to the first character for adding text, and (Start)
 - To view the current saved word, press (UserDic) → Select *Edit entry*.
- 3 Use to set the range → (End)



- 4 Select Reading field → Enter text
- 5 (Save)

- If a line break is in the selected range, the character string before the line break is saved.

Advanced Settings (P.2-20)

- Deleting Entries from User's Dictionary

Settings

- Save entries to User's Dictionary (P.12-14)
- Edit User's Dictionary entries (P.12-14)
- Delete User's Dictionary entries (P.12-14)

Phonebook

Create up to 1,000 entries. Number of savable items per entry varies by USIM Card. Insert USIM Card into compatible SoftBank handsets to access USIM Card entries. Each entry contains the following items:

Item/Description	Location
Last name	
Double/single-byte (Saved as "Name" in USIM Card Phonebook)	Handset: Yes (up to 50 bytes) USIM Card: Yes ¹
First name	
Double/single-byte (Saved as "Name" in USIM Card Phonebook)	Handset: Yes (up to 50 bytes) USIM Card: Yes ¹
Reading last name	
Single-byte (Saved as "Reading" in USIM Card Phonebook)	Handset: Yes (up to 50 bytes) USIM Card: Yes ¹
Reading first name	
Single-byte (Saved as "Reading" in USIM Card Phonebook)	Handset: Yes (up to 50 bytes) USIM Card: Yes ¹

Item/Description	Location
Phone number	
Saved with area code	Handset: Yes (5 entries/up to 32 bytes) USIM Card: Yes ^{1 2}
Phone icon	
Select one of seven icons	Handset: Yes USIM Card: Yes ³
E-mail address	
Single-byte alphanumerics	Handset: Yes (5 entries/up to 128 bytes) USIM Card: Yes ¹ (1 entry)
E-mail address icon	
Select one of four icons	Handset: Yes USIM Card: No (1 icon)
Photo	
Still image appears for incoming Voice Call Select a Data Folder image or capture with Camera	Handset: Yes USIM Card: No

Item/Description	Location
Ringtone	
Voice Call/Messages Selectable from Data Folder	Handset: Yes USIM Card: No
Vibration	
Set vibration for Voice Call/Messages	Handset: Yes USIM Card: No
Group	
Select from original 21 groups including "No group"	Handset: Yes USIM Card: Yes ²
Secret mode	
On/Off	Handset: Yes USIM Card: No
Birthday	
Date of birth	Handset: Yes USIM Card: No
Blood type	
Select one of four types	Handset: Yes USIM Card: No
Hobby	
Up to 100 bytes	Handset: Yes USIM Card: No

Item/Description	Location
Company	
Enter up to 64 bytes	Handset: Yes USIM Card: No
Job title	
Enter up to 64 bytes	Handset: Yes USIM Card: No
Address	
Post code (40 bytes), Country (64 bytes), Province, City, Street and Additional information (128 bytes)	Handset: Yes (2 entries) USIM Card: No
Address icon	
Select one of two icons	Handset: Yes USIM Card: No
Homepage	
Enter up to 1,024 bytes	Handset: Yes (2 entries) USIM Card: No
Homepage icon	
Select one of three icons	Handset: Yes USIM Card: No

Item/Description	Location
Memo	
Enter up to 512 bytes	Handset: Yes USIM Card: No

- 1 Number of savable characters varies by USIM Card.
- 2 Number of savable items varies by USIM Card.
- 3 Savable icon types vary by USIM Card.

- If a different USIM Card (with saved entries) is inserted, copy saved USIM entries to handset confirmation appears when handset is first powered on. Choose **Yes** to copy entries.

Note

- **Protect Important Information**
Phonebook entries may be lost/alterd if battery is removed or left uncharged for an extended period; accidents/malfunctions may also affect entries. Back-up entries and store separately. SoftBank is not liable for damage from lost information.

Phonebook Window

Phonebook entries (☞P.2-13) are divided into three tabs. Toggle the tabs to view information.

- 1  → Search Phonebook and select an entry (☞P.2-17) → Use  to toggle tabs



Tab	Item
 Basic info	Reading
	Phone number
	E-mail address
 Settings	Photo
	Ringtone
	Vibration
	Group
	Secret mode
	Birthday
	Blood type
	Hobby
	Company
	Job title
 Others	Address
	Homepage
	Memo

Creating New Entries

Save to handset or USIM Card. Default data location for Phonebook is **Phone**. Set to USIM Card as required (☞P.12-10).

Create new entry or save from Call Log record.


Saving Phonebook as a new entry

Create new entry; save Name, Reading, Phone Number and E-mail Address.

- For other items, see "Adding Information to Phonebook Entry" (☞P.2-20).

- 1  →  (New)

- If Save setting (☞P.12-10) is set to **Ask each time**, a message appears to prompt you to specify a saving location. Choose **Phone** or **USIM**.

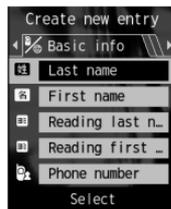

New Entry Details

- 2 Select Last name field → Enter last name


- 3 Select First name field → Enter first name
- 4 Select Reading last name field → Edit reading of last name as required
- 5 Select Reading first name field → Edit reading of first name as required
- 6 Select Phone number field → Enter a phone number → Select icon
- 7 Select E-mail address field → Enter mail address → Select icon
- 8  (Save)

- Enter 0-9, #, *, P (Pause), - and + (International code). Press  to toggle *, - and P. Press  for 1+ seconds to enter +.
- If a Memory Card file is selected for Incoming Image or Ringtone, copy file to handset confirmation appears. For a copy protected file, move file to handset first confirmation appears. Choose **Yes** to complete setting.
- When using Samsung New PC Studio to synchronize Phonebook entries with a PC, Secret entries are not synchronized to PC. If an entry is changed to a Secret entry, it can no longer be synchronized and is deleted from PC. Samsung New PC Studio is available for download from SAMSUNG Website (<http://fp.samsungmobile.com/pc/lineup/830download.html>).

Saving Entries from Call Log Records

Save numbers from Call Log records to new or existing Phonebook entries.

- 1  (Received Calls) or  (Diald Calls)
- 2 Select a Call Log record to save →  → Add to Phonebook

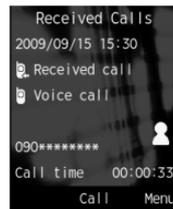

- 3 Select saving method

To save as a new entry

New → (P.2-15 Saving Phonebook as a new entry 2)


To update existing entry

Update → Search and select an entry (P.2-17) → Save a number to Phonebook (P.2-15 Saving Phonebook as a new entry 2)

Searching Phonebook

Use *A-ka-sa-ta-na*, *Reading* or *Group* to search Phonebook entries.

1 

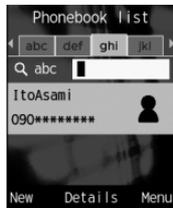

Phonebook List

2  → *Settings* → *Search method*

3 *A-ka-sa-ta-na*, *Reading* or *Group*

- Selected search method is saved.

4 Search Phonebook

To search by *A-ka-sa-ta-na*

Phone number appears in Japanese syllabary, Alphabet, Hangul or Number tab.

Use  to toggle a target line → Select phonebook entry with 

- Alternatively, enter reading (or first part of reading) in abc field to search.

To search by *Reading*

View target Phonebook entry from search result


- Alternatively, enter reading (or first part of reading) in abc field to search.

To search by *Group*

Select a group → View target

Phonebook entry from search result

- Alternatively, after selecting a group, enter reading (or first part of reading) in abc field to search.

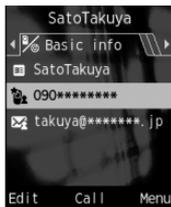


Entry Details

- If *Secret mode* is set to *Hide*, secret Phonebook entries do not appear. In Phonebook search window, press  → *Unlock temporarily* → Enter Phone Password →  (OK) to see secret entries.

Calling from Phonebook

1 Search Phonebook (⊕P.2-17) →  (Details) → Highlight target phone number

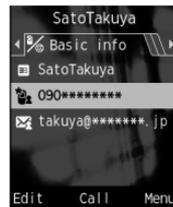

2 Make a call

To make a Voice Call

-  (Call) → *Voice call*

To make an international call

-  (Call) → *International call* → (⊕P.3-11 International Call)

- Alternatively, highlight the intended phonebook entry on the list window →  → **Call** → **Voice call** or **International call** to make a call. When entry contains multiple numbers, the phone number set to **Voice call of Default number** (⊕ P.2-23) (if not set, the first phone number) is dialed. When the phone number selection screen appears (**Voice call of Default number** is set to **Not assigned**), select a phone number.

- **Calling from simple search or search result**

When **Simple search** (⊕ P.12-14) is set to **On**, press a key to use its assigned character to search for a phonebook entry with **Reading** that matches the assigned character. When the assigned character and **Reading** match, a corresponding name and phone number appear. Highlight a phone number →  or  (Select) → Press  (Call) to make a voice call.

- **Calling from phone number search or search result**

Enter four digits to search for entry beginning or ending with those digits. Entry name and phone number appear. Highlight a phone number →  or  (Select) → Press  (Call) to make a voice call.

Deleting Phonebook Entries

1

2 Delete entries

■ To delete an item

Highlight an entry to delete →  → **Delete** → **Selected** → **Yes**

■ To delete multiple items

 → **Delete** → **Multiple** → Check phonebook entries to delete →  (Delete) → **Yes**

■ To delete all items

Delete all phonebook entries in Phone or USIM Card at once.

 → **Delete** → **All** → Enter Phone Password →  (OK) → **Yes**

- Alternatively, in Entry Details window,  → **Delete** → **Yes**.

Advanced

Advanced Settings (ⓘ P.2-20)

- Creating Message from Phonebook
- Creating New Group (USIM Card)
- Adding Member to Group
- Removing Member from Group
- Viewing USIM Card Service Number
- Calling with Your Phone Number Shown
- Adding Phonebook Entry to Speed Dial
- Sending Phonebook as vFile
- Creating vFile and Save in Data Folder
- Copying Entries between Phone & USIM
- Printing Phonebook Details via Bluetooth®
- Canceling Phonebook Secret Mode Temporarily
- Checking Memory Status
- Copy Item
- Setting Default Phone Number or Mail Address
- Enter and Save Phone Number
- Renaming Group

Settings

- Select Phonebook Save Location (ⓘ P.12-10)
- Change Phonebook preference (Phone/USIM) (ⓘ P.12-10)
- Change Search Method (ⓘ P.12-10)
- Backup Phonebook entries (ⓘ P.12-10)
- Change Phonebook font size (ⓘ P.12-10)
- Activate or cancel Simple Search (ⓘ P.12-14)

Advanced Settings

Main Menu

Setting Main Menu Style

● →  (Style) → Select a style → Select color to set with 

- Change menu appearance.

Standby Image

Rotating Still Images

● → *Settings* → *Display settings* → *Wallpaper* → Select a file location → Select a file →  (Rotate) → ● (Set)

- To restore the default, press  (Reset).

Text Entry

Entering Date/Time

In text entry window, select Kanji/Kana entry mode and enter Hiragana with Keypad →  (EngNum力ナ) → Highlight entry in Suggestions for date and/or time → ● (Confirm)

Toggling Double-byte and Single-byte Symbols

In text entry window, while displaying Suggestions for double-/single-byte symbols, 

Specifying Range to Copy/Cut

In text entry window,  → *Copy* or *Cut* → Move the cursor with  to the first character to copy/cut and press ● (Start) → Specify range with  → ● (End)

- To copy or cut all text in text entry window, press  (All).
- Copied or cut text remains even after powering off.

Pasting Copied or Cut Text

In text entry window, move cursor with  to the position to paste →  → *Paste*

Undoing Text Entry

In text entry window,  → *Undo*

- In Kanji/Kana entry mode, undo operations immediately after performing *Cut*, *Paste* or *Delete*. Undoing conversion is also available.

Jump to Top/End

In text entry window,  → *Cursor position*
→ Select an item

Setting Prediction Entry or Learning Function

In text entry window,  → *Conversion*

■ To activate or cancel the prediction entry function

Prediction on or *Prediction off*

■ To activate or cancel the learning function

Learning on or *Learning off*

■ To reset entry log

Reset learning → Enter Phone Password →

 (OK) → *Yes*

■ To reset logs of pictograms or symbols

Clear history

User's Dictionary

Deleting Entries from User's Dictionary

 → *Settings* → *Phone settings* → *User's dictionary* → *Edit entry*

■ To delete an item

Highlight an entry of User's Dictionary to delete →

 → *Delete*

■ To delete all items

 → *Delete all* → Enter Phone Password →

 (OK) → *Yes*

Phonebook

Adding Information to Phonebook Entry

 →  (New)

■ To save Group

Use  to switch to  *Settings* → Select Group field → Select a group →  (Save)

■ To set Secret mode

Use  to switch to  *Settings* → Select Secret mode field → Select an item →  (Save)

■ To save Birthday

Use  to switch to  *Settings* → Select Birthday field → Enter a birthday →  (Save)

■ To save Blood type

Use  to switch to  *Settings* → Select Blood type field → Select a blood type →  (Save)

■ To save Hobby

Use  to switch to  *Settings* → Select Hobby field → Enter text →  (Save)

■ To save Company

Use  to switch to  *Others* → Select Company field → Enter company name →  (Save)

■ To save Job title

Use  to switch to  *Others* → Select Job title field → Enter job title →  (Save)

To save Address

Use to switch to **Others** → Select Address field → Select Zip code field → Enter postal code → Select Country field → Enter country name → Select Province field → Enter province name → Select City field → Enter city name → Select Street field → Enter street name → Select Additional information field → Enter additional information → (OK) → Select an icon → (Save)

To save URL

Use to switch to **Others** → Select Homepage field → Enter URL → Select an icon → (Save)

To save Memo

Use to switch to **Others** → Select Memo field → Enter text → (Save)

- Items other than Group are unavailable in USIM Card Phonebook.

Setting Incoming Image to Phonebook Entry

→ (New) → Use to switch to **Settings** → Select Photo field

To set from saved still image

Pictures → Select a file → (Save)

- With Memory Card inserted, select a file from **Pictures** or **Digital camera** folder.

To set by capturing still image

Take photo → Capture still image → (Camera)

To cancel set incoming image

Off → (Save)

- If a Memory Card file is set as incoming image, copy file to handset first confirmation appears. If file is copy protected, move file to handset first confirmation appears. Choose **Yes** to complete setting.

Setting Ringtone to Phonebook Entry

→ (New) → Use to switch to **Settings** → Select Ringtone field

To set Ringtone for Voice Call

Voice call → Select a file location → Highlight a file → (Play) → (Select) → (Done) → (Save)

To set Ringtone for Message

Messages → **Assign tone** → Select a file location → Highlight a file → (Play) → (Select) → (Done) → (Done) → (Save)

To set ringtone duration for Message

Messages → **Duration** → Enter time → (Done) → (Done) → (Save)

- If a Memory Card file is set as ringtone, copy file to handset first confirmation appears. If file is copy protected, move file to handset first confirmation appears. Choose **Yes** to complete setting.

Setting Vibration to Phonebook Entry

→ (New) → Use to switch to **Settings** → Select Vibration field → Select a ringtone type → highlight a vibration pattern → (Play) → (Select) → (Done) → (Save)

Creating Message from Phonebook

→ Highlight a phonebook entry to create a message → → **Create message** → **S! Mail** or **SMS** → S! Mail , P.4-7 SMS

Creating New Group (USIM Card)

→ → **New group** → Select Group name field → Enter a group name → (Save)

- Set search method to **Group** (P.2-17) and display USIM Phonebook to create new group (P.2-22).

Adding Member to Group

→ Select a group to add a member → → **Add member** → Check a member to add → (Add)

- Set search method to **Group** to add (P.2-17).

Removing Member from Group

→ Select a group to delete a member → → **Remove member** → Check a member to delete → (Remove)

- Set search method to **Group** to operate (P.2-17).
- Removed member is not deleted from Phonebook.

Showing or Hiding Caller ID

→ Highlight a phonebook entry to make a call → → **Hide/Show my ID**

■ To follow the settings of caller ID notification service

None → or (Call)

■ To show a phone number

Show my ID → or (Call)

■ To hide a phone number

Hide my ID → or (Call)

Adding Phonebook Entry to Speed Dial

→ Search the phonebook and select an entry (P.2-17) → → **Add to Speed dial** → Select a phone number field to save

Sending Phonebook as vFile

→ Search and select a phonebook entry to send (P.2-17) → → **Send**

■ To send via message

Via message → (P.4-4 S! Mail 2)

■ To send via Bluetooth®

Via Bluetooth → (P.11-5 Sending One by One 2)

Creating and Saving vFiles

→ Search the phonebook and select an entry (P.2-17) → → **Save to Data Folder** → **Phone** or **Memory card** → **Yes**

- To save a file to **Memory card**, insert Memory Card.

Copying Entries between Phone & USIM

→ Highlight an entry to copy → → **Copy to USIM** or **Copy to phone**

■ To copy an item

Selected → **Yes**

- To copy 1 item from details window, press (Details) on list window → Press and operate.

■ To copy multiple items

Multiple → Check phonebook entries → (Copy) → **Yes**

■ To copy Phonebook stored in both handset and USIM Card at once

All → **Yes**

Printing Phonebook Details via Bluetooth®

→ Search Phonebook and select entry (P.2-17) → → **Print via bluetooth** → (P.6-12 Printing via Bluetooth® 4)

Specifying Saving Destination for Phonebook Entries

→ → **Settings** → **Save settings** → Select an item

toggling Phonebook View between USIM & Phone

→ → **Settings** → **Change view** → Select an item

- Change remains even if handset is powered off.

Canceling Phonebook Secret Mode Temporarily

→ → **Unlock temporarily** → Enter Phone Password → (OK)

- If **Secret mode** is set to **Hide**, Secret entries appear for current session only.

Viewing USIM Card Service Number

→ → **Service number**

- The item **Service number** may not appear for some USIM Card.

Checking Memory Status

 →  → **Memory status**

- To delete contents of current item, press  (Delete) (ⓍP.10-13 Deleting Registered/Saved Data).

Copy Item

 → Search Phonebook and select entry (ⓍP.2-17) → Highlight an item to copy →  → **Copy item**

Setting Default Phone Number or Mail Address

 → Search for a phonebook entry to set and select it (ⓍP.2-17) →  → **Set default number** → **Voice call** or **Messages** → Select phone number or mail address →  (Save)

- To leave default phone number or mail address undefined, highlight item and press  (Reset) to set to **Not assigned**.
- Set default phone number only for handset Phonebook.

Opening Website from Phonebook

 → Search phonebook entries with homepage saved and select an entry (ⓍP.2-17) → Highlight a homepage address to connect →  (Connect)

Editing Phonebook

 → Search Phonebook and select entry (ⓍP.2-17) →  (Edit) → (ⓍP.2-15 Saving Phonebook as a new entry )

- To edit secret Phonebook entry, set **Secret mode** to **Show**.

Enter and Save Phone Number

Enter phone number →  → **Add to Phonebook**

■ To save new entry

New → (ⓍP.2-15 Saving Phonebook as a new entry )

■ To update entry

Update → Search Phonebook and select entry (ⓍP.2-17) → Enter each item (ⓍP.2-15 Saving Phonebook as a new entry )

- Alternatively, during a call,  → select **Add to Phonebook**.
- Only Name, Reading, E-mail address, and Group can be entered in USIM Card entries.

Changing Group Settings

 → **Phonebook** → **Group settings** → Select a group to set

■ To set incoming image

Select Group image field → Select a file location → Select a file →  (Save)

■ To set ringtone for Voice call

Select Ringtone field → **Voice call** → Select a file location → Highlight a file →  (Play) →  (Select) →  (Done) →  (Save)

■ To set ringtone for Message

Select Ringtone field → **Messages** → **Assign tone** → Select a file location → Highlight a file →  (Play) →  (Select) →  (Done) →  (Done) →  (Save)

■ To set ringtone duration for Message

Select Ringtone field → **Messages** → **Duration** → Enter time →  (Done) →  (Done) →  (Save)

■ To set Vibration

Select Vibration field → Select a ringtone type →

Highlight a vibration pattern →  (Play) →

 (Select) →  (Done) →  (Save)

- To cancel set image or vibration and save the entry, highlight Image/Vibration field → Press  (Reset) →  (Save).
- To cancel set ringtone and save the entry, select Ringtone field → Highlight item to reset → Press  (Reset) →  (Done) →  (Save).
To cancel all ringtones, highlight Ringtone field → Press  (Reset) →  (Save).
- Set only for handset group.
- Images and ringtones set for individual Phonebook entries take priority over Group settings.

Renaming Group

 → **Phonebook** → **Group settings** → 
→ **View from phone group** or **View from USIM group** → Select a group to edit → Select Group name field → Enter a group name →  (Save)

- When **Change view** (P.2-22) is set to **Phone**, **View from USIM group** appears; when **USIM**, **View from phone group** appears.