

Camera



Mobile Camera	6-2
Mobile Camera Precautions	6-3
Camera	6-3
Using Display as Viewfinder	6-3
Single Shot	6-4
Normal	6-6
Multi Shot	6-6
Photo Combination	6-7
Capturing Still Images with Frame	6-7
Night Shot	6-7
Viewing Captured Pictures (Quick Play)	6-8
Video Camera	6-9
Using Display as Viewfinder	6-9
Recording Video	6-10
Video Mode	6-11
Viewing Recorded Video	6-11
Printing Still Images	6-12
Printing via Bluetooth®	6-12
Advanced Settings	
Capturing Still Images	6-12
Recording Videos	6-14

Mobile Camera

Use handset camera to capture pictures and record movies. Edit pictures and print them via Bluetooth®-compatible printers.

Capturing Pictures & Recording Movie Clips

Select Scene, Multi Shot, etc. (P.6-3)

Record up to one hour per clip (P.6-9).



Printing pictures

Print pictures via Bluetooth® (P.6-12).



Capturing options and corresponding image sizes:

Shooting Mode		Shooting Size
Still Image	Single shot Night shot	3M (2048×1536) 2M (1600×1200) 1.3M (1280×960) VGA (640×480) Standby (320×240)
	Multi shot Photo combination Frame shot	Standby (320×240)
Video	For S! Mail Normal	176×144 128×96

Multi Selector Operations

When Camera is activated, Viewfinder appears in Landscape. The operations assigned to vertical scroll keys are set to horizontal scroll keys, and vice versa. Operations are described in Landscape view in this chapter.

Vertical scrolls (horizontal scrolls in Portrait):



Horizontal scrolls (vertical scrolls in Portrait):



Mobile Camera Precautions

- Use a dry soft cloth to remove debris from camera lens.
- Avoid camera shake; hold handset steady or put it on a stable place and use Self-timer to prevent objectionable image blur.
- Do not expose handset to devices with static electricity at use of camera.
- Camera employs high precision technology, however, some pixels may seem brighter or darker than others.
- Leaving handset in a hot place for an extended period before image capture/save may affect image quality.
- Exposing lens to direct sunlight may affect image color.
- When battery is low, camera may be unavailable.

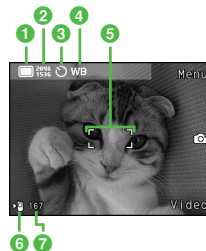 
Camera

For taking still pictures, select Shooting mode: **Normal** to shoot single picture, **Multi shot** or **Photo combination** to shoot multi-shot, **Frame shot** to shoot picture with frame, **Night shot** to shoot in sunset or night situation.

Captured images are saved into **Picture**. Insert Memory Card to save images to **Digital camera**.







Using Display as Viewfinder

When Camera is activated, Viewfinder appears in Landscape.



Still Image Viewfinder

1 Shooting mode

-  : Single shot
-  : Multi shot (6 shots)
-  : Multi shot (9 shots)
-  : Photo combination
-  : Frame shot
-  : Night shot

2 Shooting size






-  : 3M (2048×1536) *
-  : 2M (1600×1200) *
-  : 1.3M (1280×960) *
-  : VGA (640×480) *
-  : Standby (320×240)

*Only when the shooting mode is set to **Single shot** or **Night shot**

3 Self-timer



-  : Off  : 3 seconds  : 5 seconds  : 10 seconds

4 White balance

-  : Auto  : Daylight  : Incandescent  : Fluorescent
-  : Cloudy

5 Focus frame

6 Save to

-  : Phone or Ask each time
-  : Memory card or Digital camera

7 Number of remaining shots available

Single Shot



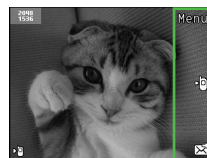 
Press  in Viewfinder



Press  or 



Set shooting methods with  and 



Confirmation window for saving/sending/registering still image appears only when **Auto Save** is set to **Off**.

 





- Set **Auto Save** (ⓘP.12-9) to **Off** to attach picture to messages after capturing still image (ⓘP.6-13) or set as Wallpaper (ⓘP.6-13).

Shooting Mode

Shooting Mode	Description
Single shot	Capture still image and select size for purpose; attach images to S! Mail, save as Wallpaper, etc.
Multi shot	Press shutter once to capture six or nine sequential images.
Photo combination	Capture sequential images manually. Select Frame to automatically combine images into a composite image.
Frame shot	Capture still image with frame.
Night shot	Capture still image in the dark scene at dusk or night.

Shortcut Key Operations

Press assigned key to change settings. Available shortcuts vary by mode or setting status.

Key	Item	Description
	Shooting mode	Single shot, Multi shot (6 shots), Multi shot (9 shots), Photo combination, Frame shot, Night shot
	Self-timer	Off, 3 seconds, 5 seconds, 10 seconds
	Quick Play	Phone memory, Memory card, Digital camera
	Switch to Photo/Video	—
	Zoom	—
	Brightness	—



●While using Camera, pressing keys does not make operation tone.

Normal

Captured images are saved to **Picture**. Insert memory Card to save images (**VGA** images and larger) to **Digital camera**.

- Even if Memory Card is inserted and save location is set to **Digital camera** folder, setting is changed to **Memory card** when **Standby** size images are saved.

1 (2+ seconds)

- If **Record video** is activated last time, Video Viewfinder appears. Press  (Photo) to switch to Still Image Viewfinder.
- Alternatively, press  → select **Camera** → **Take photo**.
- Adjust settings before capturing as required (P.6-12).


2 Frame image in Viewfinder

- Press  or  to zoom in/out.
- Press  to brighten or darken an image.

3 or (📷)



Prompt for Saving Still Image



- To redo, press .


 
4 or (📷)

- Zoom is not available when an image size is set to **3M**.

• Using Auto Focus

When **AF** is set to **On**, Auto focus is available, the subject at the center of the frame will be automatically focused.

Press  halfway to focus on the subject. Then press  all the way to take a picture.

If using , press  to focus and take picture simultaneously.

Multi Shot

1 (2+ seconds)


2 → Highlight → **Multi-shot** → Select number of shooting

- Adjust settings before capturing as required (P.6-12).

3 Frame image in Viewfinder

- Press  or  to zoom in/out.
- Press  to brighten or darken an image.















4 or (📷)

- To redo, press .

5 Check images to save → (📷)













- When using Multi shot, shooting size is set to **Standby**. Other shooting sizes and Self-timer are not available.

Photo Combination

- 1  (2+ seconds)
- 2  → Highlight  →
Photo combination
- 3 Select a frame →  (OK)
 - Adjust settings before capturing as required (P.6-12).
- 4 Frame image in Viewfinder
→ Apply selected frame and press  or  (📷)
 - Press  or  to zoom in/out.
 - Press  to brighten or darken an image.
- 5 Repeat step 4 to capture images →  or  (📷)
 - To redo, press .
- 6  or  (📷)












●When using Photo combination, shooting size is set to **Standby**. Other shooting sizes and Self-timer are not available.

Capturing Still Images with Frame

- 1  (2+ seconds)
- 2  → Highlight  →
Frame shot
- 3 Select a frame →  (OK)
 - Adjust settings before capturing as required (P.6-12).
- 4 Frame image in Viewfinder
 - Press  or  to zoom in/out.
 - Press  to brighten or darken an image.
- 5  or  (📷)
 - To redo, press .
- 6  or  (📷)

●When using Frame shot, shooting size is set to **Standby**. Other shooting sizes are not available.

Night Shot

- 1  (2+ seconds)
 - 2  → Highlight  →
Night shot
 - Adjust settings before shooting as required (P.6-12).
 - 3 Frame image in Viewfinder
 - Press  or  to zoom in/out.
 - Press  to brighten or darken an image.
 - 4  or  (📷)
 - To redo, press .
 - 5  or  (📷)
- When using Night shot, White Balance cannot be set.



 


Viewing Captured Pictures (Quick Play)

Use Quick Play to view still images.

1 (2+ seconds)

2 → View still images

with / or 

 
 

 
 


 
- Press  (Zoom) → / to zoom in/out.
- When Memory Card is inserted, press  and select **Phone**, **Memory card** or **Digital camera** to view images.
- Alternatively, check still images from **Data Folder** ( P.10-3).



Advanced

Advanced Settings P.6-12

- Switching Shooting Mode
- Setting Shooting Size
- Setting Self-timer
- Setting White Balance
- Setting Effect (Color Tone)
- Viewing Captured Pictures
- Viewing Capturing Shortcut Key Assignments
- Entering File Name of Captured Still Image
- Setting Captured Still Image as Wallpaper etc.
- Enlarging Captured Still Image
- Deleting Images Opened via Quick Play
- Setting Still Image Opened via Quick Play to Wallpaper etc.
- Playing Quick Play Slide Show
- Viewing Image Details via Quick Play

Settings

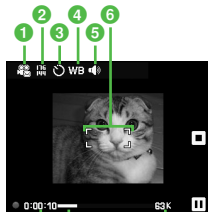 
- Show or hide Indicators ( P.12-9)
- Set Auto-focus ( P.12-9)
- Activate or cancel Auto Save ( P.12-9)
- Show or hide menu item guidance ( P.12-9)
- Select Quality ( P.12-9)
- Set ISO ( P.12-9)
- Set Exposure metering ( P.12-9)
- Set save location ( P.12-10)

- Show or hide Guideline ( P.12-9)
- Set Shutter sound ( P.12-9)

Video Camera

Capture clips easily. Files are saved in 3GP format to **Videos** folder in **Data Folder**. When recording a video to attach or insert into an S! Mail, set Shooting size to **For S! Mail** (P.6-14).

Using Display as Viewfinder



Video Viewfinder

1 Mode

- : For S! Mail
- : Normal

2 Size

- : 176×144
- : 128×96

3 Self-timer

- : Off : 3 seconds
- : 5 seconds : 10 seconds

4 White balance

- : Auto : Daylight
- : Incandescent : Fluorescent
- : Cloudy

5 Sound

- : Sound On : Sound Off

6 Focus frame

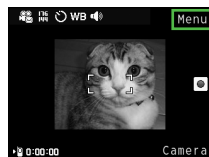 
7 Elapsed recording time

8 Progress bar

9 Expected video size/Available recording time

- If **Shooting size** is set to **For S! Mail**, the shooting data size appears; if **Normal**, available recording time appears.

Recording Video



Press in Viewfinder



Press or () to start recording
Press or () to end recording

- Set **Auto Save** (➡P.12-9) to **Off** to attach the file to messages after recording video (➡P.6-14).



Set shooting methods with , , and



Confirmation window for saving/sending video appears only when **Auto Save** is **Off**.



Shooting Mode

Shooting Mode	Description
For S! Mail	Record a short video (up to 295 KB) to attach to a message.
Normal	Record a long video (up to 1 hour).

Shortcut Key Operations

Press assigned key to change settings. Available shortcuts vary by mode or setting status.

 

Key	Item	Description
	Shooting mode	For S! Mail, Normal
	Self-timer	Off, 3 seconds, 5 seconds, 10 seconds
	Record sound	Sound On, Sound Off
	Switch to Camera/Video	—
or	Zoom	—
	Brightness	—

- While using Video camera, pressing keys does not make operation tone.

Video Mode

Up to 1 hour per clip can be recorded.





1 (2+ seconds)

- If **Take photo** is activated last time, Still Image Viewfinder appears. Press  (Video) to switch to Video Viewfinder.
- Alternatively, press  → select **Camera** → **Record video**.
- Adjust settings before capturing as required (P.6-14).

2 Frame image in Viewfinder

- Press  or  to zoom in/out.
- Press  to brighten or darken an image.

3 or ()

- To pause while recording, press  ().
- To resume the recording, press  (.

4 or ()



 


 
Prompt for Saving Video

- Recording ends. When recordable time has elapsed, recording automatically ends.

5 or ()

•Using Auto Focus

When **AF** is set to **On**, Auto Focus is available, the subject at the center of the frame will be automatically focused (the focus is locked while recording).

Press  halfway to focus on the subject. Then press  all the way to start recording. If using , press  to focus and start recording simultaneously.

Viewing Recorded Video

View captured and saved videos by opening **Videos** folder in **Data Folder** from Viewfinder.

1 (2+ seconds)

2 → Highlight → **Videos**

3 Highlight a video with → (Play)

Advanced

Advanced Settings (P.6-14)

- Setting Shooting Mode
- Setting Shooting Size
- Setting Self-timer
- Setting White Balance
- Setting Effect (Color Tone)
- Setting Sound Recording
- Viewing Recording Shortcut Key Assignments
- Viewing Recorded Video before Saving
- Entering File Name of Recorded Video

Settings

- Show or hide Indicators (P.12-9)
- Set Auto-focus (P.12-9)
- Activate or cancel Auto Save (P.12-9)
- Show or hide menu item guidance (P.12-9)
- Select Quality (P.12-10)
- Set save location (P.12-10)

Printing Still Images

Print still images saved on handset by connecting a printer via Bluetooth®.

For more information about printer operations and paper setting, see printer User Manual.

Printing via Bluetooth®

- Print images with Bluetooth® printer.
- Pair Bluetooth® printer beforehand.

1  → **Data Folder** → **Select a file location**

2  → **Print via Bluetooth**

3 **Check files to print** →
 (Print)

4 **Select destination device**


- If no device is registered, search and register new device (➡ P.11-4).

5 Set items as required

■ To set print size

Print size → Select an item to set

■ To set the number of copies

Number of copies → Enter the number of copies (1 to 99) →  (OK)

■ To set the number of pages to print per sheet

Page format → Select an item

- When selecting **Duplicate**, select **Pages per sheet** and select a setting (1 to 16 up).

■ To set whether to print the date or not

Print date → Select an item

■ To set whether to print a border or not

Border → Select an item

■ To set print quality



Print quality → Select an item

6  (Preview) →  (Print)



Advanced Settings

Capturing Still Images

 

Switching Shooting Mode

In Viewfinder,  → Highlight  → Select an item



Setting Shooting Size

In Viewfinder,  → Highlight  → Select an item

 

Setting Self-timer

In Viewfinder,  → Highlight  → Select an item

Setting White Balance

In Viewfinder,  → Highlight  → Select an item

Setting Effect (Color Tone)

In Viewfinder,  → Highlight  → Select an item

Viewing Captured Pictures

In Viewfinder,  → Highlight  → **Pictures** or **Digital camera** → Select a file

- **Digital camera** can be selected when Memory Card is inserted.

Viewing Capturing Shortcut Key Assignments

In Viewfinder,  → Highlight 

Sending Captured Still Images

In Still Image Saved Confirmation window,
 (X)

To send via message

Via message → (P.4-4 S! Mail 2)

- If the captured image size exceeds 300 KB, a window for resizing the image appears after saving the image to **Data Folder**. Resize the image before attaching it (P.4-5 Attaching Files).

To send via Bluetooth®

Via Bluetooth → (P.11-5 Sending One by One 2)


 

Entering File Name of Captured Still Image

In Still Image Saved Confirmation window,
 → **Rename** → Enter file name

Setting Captured Still Image as Wallpaper etc.

In Still Image Saved Confirmation window,
 → **Set as**

To set image to Wallpaper




Wallpaper → Use  (Rotate) to adjust position as required → Use  or  to adjust size as required → (Set)

To set image to Incoming image





Caller ID → Search Phonebook and select an entry (P.2-17) → (Set)

Enlarging Captured Still Image

In Still Image Saved Confirmation window,
 → **Zoom**

- Press  or  to zoom in/out.
- Press  to change a display position.

Sending Still Images Opened via Quick Play


In Viewfinder,  → View still images with  or  →  (Send)

To send via message





Via message → (P.4-4 S! Mail 2)


To send via Bluetooth®

Via Bluetooth → (P.11-5 Sending One by One 2)





- When Memory Card is inserted, press  and select **Phone**, **Memory card** or **Digital camera** to view images.

Deleting Images Opened via Quick Play

 


In Viewfinder,  → View still images with  or  →  → **Delete**

- When Memory Card is inserted, press  and select **Phone**, **Memory card** or **Digital camera** to view images.

Setting Still Image Opened via Quick Play to Wallpaper etc.


In Viewfinder,  → View still images with  or  →  → **Set**

To set image to Wallpaper

Wallpaper → Use  (Rotate) to adjust position as required → Use  or  to adjust size as required → (Set)

 

To set image to incoming image

Caller ID → Search the phonebook and select an entry (P.2-17) → (Set)





- When Memory Card is inserted, press  and select **Phone**, **Memory card** or **Digital camera** to view images.


Playing Quick Play Slide Show

In Viewfinder,  →  → **Slide Show**





- Press  (Stop) during playback to cancel Slide Show.
- When Memory Card is inserted, press  and select **Phone**, **Memory card** or **Digital camera** to view images.





Viewing Image Details via Quick Play

In Viewfinder,  → View still images with  or  →  → **Details**

- When Memory Card is inserted, press  and select **Phone**, **Memory card** or **Digital camera** to view images.



Enlarging Still Images Opened via Quick Play

In Viewfinder,  → View still images with  or  →  (Zoom)

- Press  or  to zoom in/out.
- Press  to change a display position.
- When Memory Card is inserted, press  and select **Phone**, **Memory card** or **Digital camera** to view images.



Recording Videos

Setting Shooting Mode



In Viewfinder,  → Highlight  → Select an item

- When **Normal** is selected, up to 1 hour video recording is available in **Normal**.
- When **For S! Mail** is set, **Quality** is automatically set to **Economy**.



Setting Shooting Size

In Viewfinder,  → Highlight  → Select an item



Setting Self-timer

In Viewfinder,  → Highlight  → Select an item



Setting White Balance

In Viewfinder,  → Highlight  → Select an item

Setting Effect (Color Tone)

In Viewfinder,  → Highlight  → Select an item



Setting Sound Recording

In Viewfinder,  → Highlight  → Select an item

Viewing Recording Shortcut Key Assignments

In Viewfinder,  → Highlight 

Sending Recorded Video

In Video Saved Confirmation window,  ()


■ To send via message

Via message → (P.4-4 S! Mail ②)


■ To send via Bluetooth®

Via Bluetooth → (P.11-5 Sending One by One ②)

Viewing Recorded Video before Saving

In Video Saved Confirmation window,  → **Play**

Entering File Name of Recorded Video

 → **Rename** → Enter file name