

Getting Started

 
Handset Parts	1-2	Other Basic Information	1-23
Basic Key Operations.....	1-3	Checking Battery Level	1-23
One-Touch Open	1-6	My Phone Number	1-23
Display	1-7	Stereo Earphone Conversion Cable.....	1-23
Display Indicators	1-7	Side Key Guard	1-24
External Display (Indicator display).....	1-9		
USIM Card	1-12		
Before Using USIM Card	1-12		
Other Notes on USIM Cards.....	1-12		
USIM PINs.....	1-13		
USIM Card Installation	1-14		
Battery & Charger	1-15		
Notes on Charging Battery	1-15		
Battery Installation.....	1-15		
Charging Battery	1-17		
Power On/Off	1-19		
Power On	1-19		
Power Off	1-19		
Mobile Manners	1-21		
Activating Manner Mode	1-21		
Codes	1-22		
Security Code.....	1-22		
Center Access Code	1-22		
Network Password	1-22		









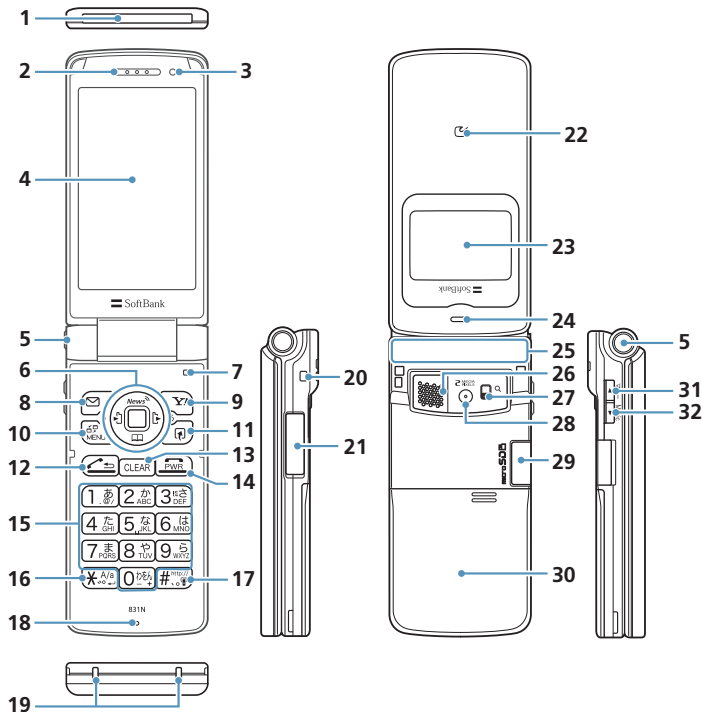


1

 Handset Parts

 1

Getting Started



- 1 Infrared Port
- 2 Earpiece
- 3 Front Camera
- 4 Display
- 5 One-Touch Open Key
- 6 Multi Selector 
- 7 Light Sensor
- 8 Mail Key 
- 9 Yahoo! Keitai Key 
- 10 Menu Key 
- 11 Shortcut Key 
- 12 Send Key 
- 13 Clear/Back Key 
- 14 Power/End Key 
- 15 Keypad 
- 16 *Key 
- 17 # /Manner Key 
- 18 Microphone
- 19 Charger Terminals
- 20 Strap Eyelet
- 21 External Device Port
- 22 FeliCa Mark
- 23 External Display (Indicator display)
- 24 Charging Indicator/Illumination
- 25 Internal Antenna
- 26 Speaker
- 27 Macro Switch
- 28 Rear Camera

29 Memory Card Slot

30 Battery Cover

31 Volume up/Manner Key 














 


32 Volume down/Music Key  MUSIC



 







 
Tip

- TV antenna is built into handset. For optimal signal reception, do not cover Internal Antenna with hands or anything else. Do not put stickers over Internal Antenna.
- Key illustrations are simplified and differ in appearance from actual handset keys.

Basic Key Operations














 
 

In Standby

No.	Key/Operations	Description
6		Open S! Quick News List.
	Press and hold 	Increase earpiece volume.
		Open Phone Book Search menu.
	Press and hold 	Decrease earpiece volume.
		Open Received Calls window.
	Press and hold 	Open Received Address List.
		Open Redial window.
	Press and hold 	Open Sent Address List.
		Access Desktop Icons.
8		Open Mail menu.
	Press and hold 	Compose a new message.
9		Access Yahoo! Keitai portal.
	Press and hold 	Open Yahoo! Keitai menu.
10		Open Main Menu.
11		Activate function assigned to key.
	Press and hold 	Assign a function to key.











No.	Key/Operations	Description
13	Press and hold 	Delete notifications.
14	Press and hold 	Turn power on/off.
15	Press and hold 	Set/cancel IC Card Lock.
	Press and hold 	Dim Backlight.
	Press and hold 	Set Privacy Angle on/off.
	Press and hold 	Enter "+" (international access code).
17	Press and hold 	Set/cancel Manner Mode.
31		Illuminate External Display (handset closed)
	Press and hold 	Set/cancel Manner Mode.
32		Play Answering Machine. Illuminate External Display (handset closed)
	Press and hold 	Activate Music Player ¹ .



1 Music Player does not activate when battery charge is low.

During Voice Calls

No.	Key/Operations	Description
6		Open Phone Book Search Group menu.
	Press and hold 	Continuously increase earpiece volume.
		Open Phone Book Search Column menu.
	Press and hold 	Continuously decrease earpiece volume.
		Open Received Calls window.
		Open Redial window.
8		Turn handsfree on/off.
9		Toggle Hyper Clear Voice modes (High, OFF or Low).
10		Open Task Switch window.
13		Hold call.
14		End call.
	Press and hold 	Turn power off.
17	Press and hold 	Set/cancel Manner Mode.
31		Increase earpiece volume.
32		Decrease earpiece volume.
	Press and hold 	Record other party's voice

 During Text Entry

No.	Key/Operations	Description
6		Insert line feed ↵ (when cursor is at the end of text).
		Add a space (when cursor is at the end of text).
8		Open pictograph/symbol lists.
	Press and hold 	Access My Pictograms (in S! Mail).
9		Toggle character entry modes (in 5-touch or T9 input mode). Toggle double-byte and single-byte characters (in 2-touch mode).
	Press and hold 	Toggle text input methods (in 5-touch, 2-touch or T9 input mode).
12		Cycle characters in reverse order (in 5-touch mode).
	Press and hold 	Undo last operation (conversion, pasting, cut, etc.) and return to the previous state.
13		Delete one character to right of cursor. When cursor is at end of text, a character to left is deleted.
	Press and hold 	Delete all text to right of cursor. When cursor is at end of text, delete all text.

  No.	Key/Operations	Description
16		Enter dakuten (゛) or handakuten (゜) (in 5-touch, 2-touch or T9 input mode). Toggle case (in 5-touch or 2-touch mode). Toggle Shift, Caps Lock and lower case modes (when entering alphanumerics in T9 input mode).
	Press and hold 	Insert line feed ↵ .

Operating in Landscape View

 
Multi Selector key assignments are the same in Landscape View.

One-Touch Open

Push One-Touch Open Key to open handset.

- Close handset by hand. If handset does not close properly, fully open then close handset.

1 Press One-Touch Open Key

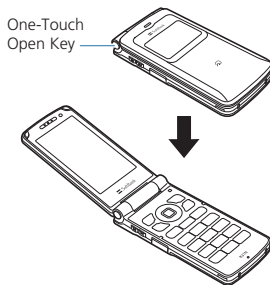

Note

- Handset may open only partway depending on how handset is held.
- Handset may spring open. Be careful not to drop handset.

Tip

- Set handset opening operation to immediately answer an incoming call. Also quickly check other party for missed calls and message content of new messages (P. 13-25).

Display Indicators

1 2 3 4 5 6 7 8 9 10 11










 






12 13 14 15 16 17 18

- ① Battery Level
- ② Signal Strength
 - Out of Range
 - Emission OFF Mode
 - USIM Lock Active
- ③ Yahoo! Keitai Mode
 - Yahoo! Keitai Communication in Progress
 - Packet Transmission (No Data Transfer)
 - Connecting to Network for Packet Transmission
 - Packet Transmission (Sending/Receiving Data)
- ④ SSL Secured Site Connected
- ⑤ Unread Messages
 - Handset Message Memory Full
 - USIM SMS Memory Full (when there are unread messages)
 - Handset & USIM SMS Memory Full

- New Quake Alert
- ⑥ Pedometer ON
- ⑦ Dial Lock Active
 - Original Lock Active
 - Secret Mode/Secret Data Only Mode
 - Original Lock Active in Secret Mode/Secret Data Only Mode
- ⑧ Software Updated
 - Side Key Guard On
 - IC Card Lock Active (when Side Key Guard is **ON**)
- ⑨ USB Cable Connected (Communication/microSD Mode)
 - microSD/MTP Mode
 - Handsfree Device Connected (Communication/microSD Mode)
 - USB Cable/Handsfree Device Connected (Communication/microSD Mode)
- ⑩ Infrared Transmission
- ⑪ Memory Card Inserted
 - Invalid Memory Card Inserted
 - Write-protect Memory Card Inserted
 - Memory Card Reader/Writer in Use
 - Accessing Memory Card
- ⑫ Vibration Set for Incoming Calls & Messages

- ⑬ No Ringtone for Incoming Calls & Messages
- ⑭ Manner Mode
- ⑮ Alarm Set
 - Alarm Set for Today (appears prior to set time.)
- ⑯ One Seg Timer Recording in Progress
- ⑰ New Messages at Voice Mail Center
 - Answering Machine On
 - New Voice Call
 - New Video Call
 - New Voice & Video Call
- ⑱ Backlight Off
 - Privacy Angle On (when Backlight is **Off**)

Tip

- To see indicator descriptions:
 ⇒ **Settings** ⇒  ⇒ **Display** ⇒  ⇒ **Other settings** ⇒ **Icons** ⇒ 
- The following indicators appear when the menu design is **Basic Menu**.
 -  Voice Call
 -  Video Call
 -  Maximum Call Cost Limit Reached
 -  Vibration Set for Incoming calls & Messages
 -  /  Vibration Set for Incoming Calls or Messages
 -  No Ringtone for Incoming Calls & Messages
 -  /  No Ringtone for Incoming Calls or Messages
 -  Keypad Lock Active (**After folded** or **Timer is ON**)

External Display (Indicator display)

Select from four patterns.

- See P. 13-8 for details on changing the pattern.

Digital 1



Digital 2




Digital 3



Digital 4




 ① Meters



! Quake Alert
1 One arrow indicates either missed call(s) or message(s); two arrows indicate missed call(s) and message(s).

 ② Indicators



Alarm Set/Alarm Set for Today (appears prior to set time)²

² Appears for Clock 2

③ Cat Animation

 


④ Pedometer Step Count

Animation

Handset status and new information appear on External Display.

Examples



Tip

- External Display may be hard to see when outdoors or under strong light.

More Features

Customize

Style Mode Settings

- Set Display Design Collectively
- Check Default Style Mode Settings
- Edit Title of a Style
- Save Current Style Mode Settings as Favorite
- Change Each Item for Favorites
- Clear All Favorite Settings

▶ P. 13-3

Display Settings

- Wallpaper
- Show Calendar in Standby
- Slideshow
- Display Color Scheme
- Battery Level Indicator/Signal Strength Indicator Design
- Interface Language
- Guard from Prying Eyes
- Set Effect for Screen Change

▶ P. 13-3

Backlight

- Set Backlight & Power Saving
- Set Backlight Lighting Area
- Set Brightness of Backlight

▶ P. 13-5

Standby Indicators

- Enable Indicator Selector

▶ P. 13-8

External Display (Indicator display)

- Notifications/Animation
- Set Clock Pattern
- Set Messages to Appear
- Set Clock to Appear at Specified Time
- Set Display On/Off

(▶ P. 13-8)

Closed Illumination

- Set Flashing Color for Handset Close
- Set Flashing Pattern for Handset Close

(▶ P. 13-26)

Key Backlight

- Set Key Backlight Color

(▶ P. 13-26)

 
Before Using USIM Card

Universal Subscriber Identity Module (USIM) Card is an IC card that contains customer information (phone number, etc.). A USIM Card must be inserted to use your handset.

- Store Phone Book entries and SMS on USIM Card.
- Insert USIM Card into other USIM-compatible SoftBank handsets to use information on Card.
- Do not apply excessive force when inserting/removing USIM Card.
- SoftBank is not liable for any damage caused by inserting USIM Card into other IC card readers/writers.
- USIM Card may become warm during use. This is not a malfunction.
- Keep IC chip clean.
- For details, refer to the manual supplied with your USIM Card.
- Do not drop USIM Card or subject to excessive shock. Doing so may cause malfunction.
- Do not bend USIM Card or place heavy objects on it. Doing so may cause malfunction.
- Avoid extreme temperatures.
- Do not scratch, carelessly touch or short-circuit the IC chip. Doing so may result in data loss or malfunction.
- Clean USIM Card with a dry soft cloth (such as is used for eyeglasses).
- Use a SoftBank-designated USIM Card. Using a non-designated card may result in handset malfunction.

Other Notes on USIM Cards

- USIM Cards are the property of SoftBank.
- USIM Cards will be reissued for a fee if lost or damaged.
- Return USIM Cards to SoftBank upon cancellation or suspension of service.
- Returned USIM Cards are recycled.
- USIM Card specifications and performance may change without prior notice.
- Keep a separate copy of data saved on your USIM Card. SoftBank is not liable for lost data.
- If USIM Card or handset (with USIM Card inserted) is lost or stolen, suspend service immediately. For details, contact SoftBank Mobile Customer Center, General Information (P. 14-53).
- Downloaded files (S! Appli, videos, Saved Pages, etc.) saved to handset or memory card may be inaccessible after USIM Card replacement, handset upgrade or service subscription cancellation. If a different USIM Card is inserted, the cookies and cache are cleared to protect personal information.



USIM PINs

There are two security codes for USIM Cards: PIN1 and PIN2.

PIN1

PIN1 is a four- to eight-digit code to prevent unauthorized handset use by a third party.

- Default PIN1 is 9999.
- PIN1 can be changed (P. 4-2).
- When *PIN1 code entry set* is set to *ON*, PIN1 must be entered each time handset is turned on to be used.

PIN2

PIN2 is required to reset total call cost or to set a maximum limit to call costs.

- Default PIN2 is 9999.
- PIN2 can be changed (P. 4-2).

PIN Lock & Cancellation (PUK)

If PIN1 or PIN2 is incorrectly entered three times consecutively, PIN Lock is activated, limiting handset use to specific functions. Enter Personal Unblocking Key (PUK1/PUK2) to cancel PIN Lock.

- For information on PUK, contact SoftBank Mobile Customer Center, General Information (P. 14-53).

Note

- If PIN1 is incorrectly entered three times, and then PUK is incorrectly entered 10 times, USIM Card locks and handset cannot be used.
- If PIN2 is incorrectly entered three times, and then PUK is incorrectly entered 10 times, operations that require PIN2 will become unusable.
- Write down your PUK.
- To cancel USIM Card lock, contact SoftBank Mobile Customer Center, General Information (P. 14-53).

 
1

USIM Card Installation


- Remove Battery (P. 1-16) before inserting or removing USIM Card. Do not press One-Touch Open Key while inserting/removing Card.

Insertion

1 Slide in USIM Card (IC chip facing down)

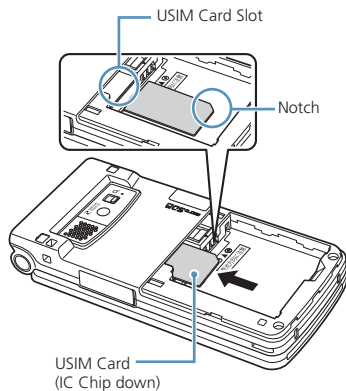

2 Push USIM Card in completely

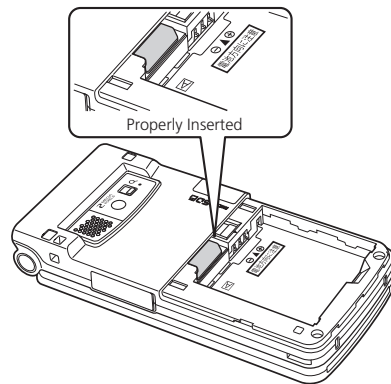 

Removal

1 Slide USIM Card out gently

Notes on Charging Battery

- Charge battery at least once every six months. If battery is left uncharged for a long period, it may become unusable or its operation time may decrease.
- Avoid connecting too many things to one AC outlet. Doing so may cause the AC outlet to overheat and cause a fire.
- Battery and AC Charger may become warm during charging, but this is not a malfunction. If they become too hot, however, stop charging and contact SoftBank Mobile Customer Center, Customer Assistance (P. 14-53).
- If Charging Indicator flashes red during charging, battery may be faulty. Contact SoftBank Mobile Customer Center, Customer Assistance (P. 14-53).
- Depending on the conditions of usage, the battery may expand as it nears the end of its life. However, this presents no safety problems.
- Check the battery type on its label:

Mark	Type
Li-ion00	Lithium-ion battery Lithium-ion batteries are a recyclable resource. Do not dispose of them as municipal waste. Bring used batteries to your nearest SoftBank Shop or recycling center after insulating the terminals with tape. Observe local regulations on battery disposal.

 


Battery Installation

- Do not press One-Touch Open Key when inserting or removing Battery.


Insertion

1 Press and slide battery cover off

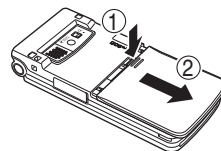


2 Insert Battery into place

 Align $\ominus \blacktriangle \oplus$ marks on Battery and handset then slide Battery into place.

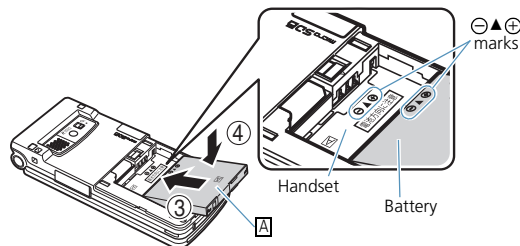

3 Replace cover

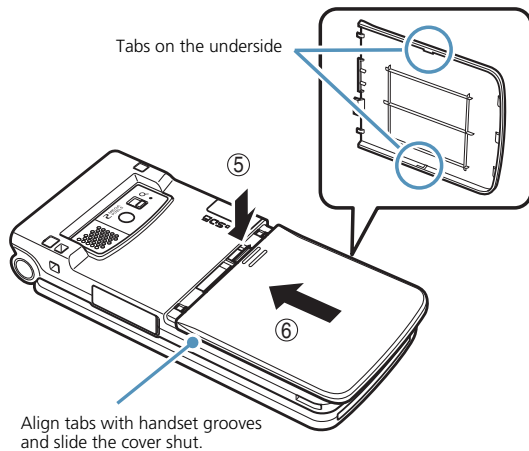 

Note

- Do not force Battery Cover shut. Tab may be misaligned and cause breakage.

 
Removal

- Turn off handset before removing battery.

1 Remove Battery Cover

See Battery Installation (P. 1-15) for details.


2 Press Tab (1) and lift out (2)

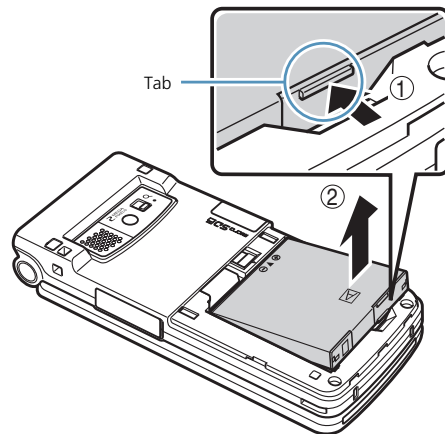

Charging Battery

Using AC Charger

 Use only SoftBank-specified AC Charger (ZTDAA1, sold separately).

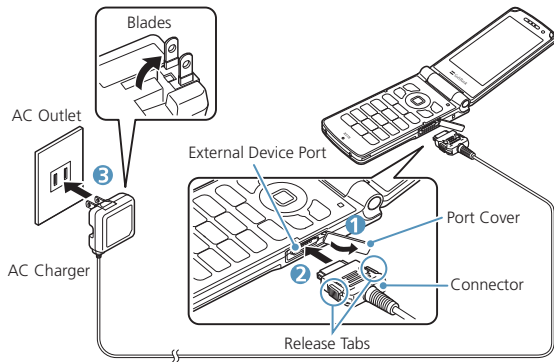

1 Open Port Cover

2 Insert Charger connector into External Device Port

3 Extend Charger blades and plug into an AC Outlet

Charging Indicator lights red while charging. When charging is complete, Indicator goes out.

4 Disconnect connector from handset

 
Press and hold Release Tabs to remove connector.

5 Unplug Charger from AC Outlet

6 Close Port Cover

Using Desktop Holder

Desktop Holder is sold separately.

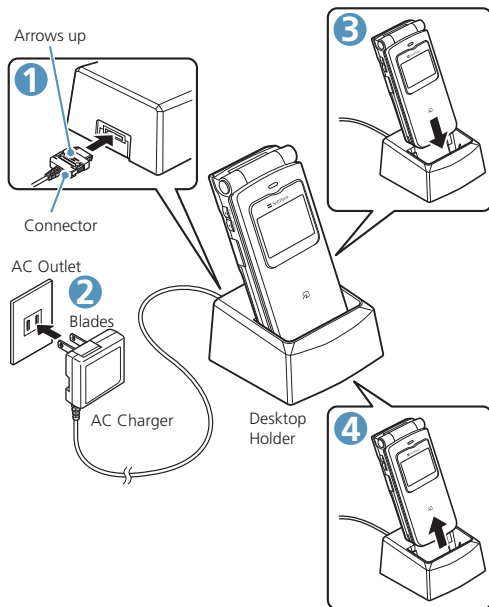

1 Insert Charger connector into Desktop Holder


2 Plug Charger into an AC Outlet

3 Place handset in Desktop Holder

Charging Indicator lights red while charging. When charging is complete, Indicator goes out.

4 Lift out

Note

- Battery can only be charged while inserted in handset.
- When both Charging Indicator and Display Indicator  go out and **Charge unusual Stop charge** appears, disconnect handset from AC Charger and remove battery. Set up handset and Charger and start charging again. If the same error occurs, AC Charger may be faulty or a non-specified charger is being used. Contact SoftBank Mobile Customer Center, Customer Assistance (P. 14-53).

More Features

Customize

Backlight

- Set Backlight during Charging

[▶ P. 13-5](#)

Sounds

 
- Set to Play Charging Start/End Tones

[▶ P. 13-10](#)

Power On

- Make sure USIM Card is correctly inserted before turning power on.


1 Press and hold

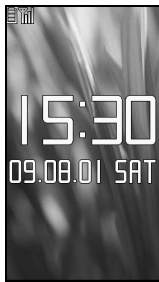

Tip

- Power-on message (WELCOME) may appear on Display for a while when turning on handset immediately after turning power off or inserting battery.
- After USIM Card is replaced, Security Code is required when powering handset on for the first time. If Security Code is incorrectly entered five times, handset shuts down. Turn handset on again.

 
Initial Setup

Setup prompt appears in Japanese the first time handset is turned on. Select **NO** and press  to exit.






Change interface language to English (P. 13-4) and restart handset to perform setup as follows.

1 [Initial Settings] window **YES**

▶ To Automatically Enter Date & Time
Auto   Select a time zone 



▶ To Manually Enter Date & Time
Manual (Date time set)  
Select a time zone   Enter
date and time 

2 Enter Security Code (9999)

 Enter new Security Code 

 **YES** 

3 Select a font size

Select **Separate setting** to customize
font per window (P. 13-5).



 
4 [Keypad Sound Setting] window

 **ON or OFF** 


 
 

 







Tip

- Setup prompt no longer appears after setup is complete.
- The default Security Code is 9999.

 Retrieving Network Information

When ,  or , is pressed after initial setup, a prompt appears. Select **YES** to update network settings.

Tip

- Retrieve network information to use network-related services, such as mail and the Internet.
- To manually update network settings:
  **Settings**   **Other settings** 
  **Connection Settings**  
Retrieve NW Info   **YES** 

Power Off

1 Press and hold

Handset shuts down.

More Features

Customize

Clock

- Hide Clock
- Clock Size
- Clock Color
- Time Zone (Sub Clock)
- Hide Sub Clock
- Summer Time (Sub Clock)
- Set Auto Time Adjustment
- Manually Adjust Time
- Summer Time

[▶ P. 13-2](#)

Auto Power On/Off

- Set Auto Power On/Off

[▶ P. 13-3](#)

Display Settings

- Set a Wake-up Image
- Set a Wake-up Message
- Set Font Type
- Set Font Thickness
- Set Font Sizes Collectively
- Set Font Size for Each Function Window

[▶ P. 13-3](#)

Sounds

- Set Key Sound Off

[▶ P. 13-10](#)

Resetting Handset

- Reset All Settings to Default
- Initialize Handset to Default Status

[▶ P. 13-26](#)

Use your handset responsibly. Inappropriate handset use can be both dangerous and bothersome. Take care not to disturb others when using your handset. Adjust handset use according to your surroundings.

- Turn handset power off in theaters, museums and other places where silence is the norm.
- Refrain from use in restaurants, lobbies, elevators, etc.
- Observe signs and instructions regarding handset use aboard trains, etc.
- Refrain from use that interrupts the flow of pedestrian or vehicle traffic.

Activating Manner Mode




Mute handset sounds.

1 Press and hold

Note

- When handset is set to vibrate for incoming calls, be careful as handset may slide off, slide into a stove, etc.
- The other party may hear a short beep if Manner Mode is set or canceled during a call.

Tip


- Press and hold  again to cancel Manner Mode.
- Shutter click sounds even in Manner Mode.
- Press and hold  to set or cancel Manner Mode during a call. Short beeps sound through the earpiece when Manner Mode is set or canceled during a call.
- Set or cancel Manner Mode by pressing and holding .

More Features

Customize

Manner Mode

- Set Manner Mode Type
- Configure Original Manner Mode

 P. 13-10

Security Code, Center Access Code and Network Password are required to use handset.

- Do not reveal these codes to others. Write down your codes.
- SoftBank is not liable for any damage due to handset misuse.

Security Code









Security Code, 9999 by default, is required to use some handset functions. The code can be changed.

- If Security Code is entered incorrectly or nothing is entered for 15 seconds, a tone sounds and a message appears. Enter correct Security Code.

Note

- The warning tone does not sound in Manner Mode or when *Keypad sound* is set to *OFF*.

Changing Security Code

- 1  ⇒ **Settings** ⇒  ⇒ **Security** ⇒  ⇒ **Change security code** ⇒ 

- 2 Enter current Security Code ⇒ 
- 3 Enter new Security Code ⇒  ⇒ **YES** ⇒ 

Center Access Code

Center Access Code, a four-digit code assigned at initial subscription, is required to access Optional Services via landlines or to subscribe to fee-based information.

Network Password

Network Password, a four-digit code assigned at initial subscription, is required to use Call Barring.

- If Network Password is incorrectly entered three times, Call Barring settings are locked. Network Password and Center Access Code must be changed.

Checking Battery Level

Use Battery Level meters as a guide only.

Battery Level Indicator

Check the battery level at top of Display.

- Near full charge
- Sufficient charge
- Almost depleted; charge battery

Battery Level Beeper & Large Indicator

Check battery level by number of beeps and large indicator.

1 → **Settings** → → **Other settings** → → **Battery level** →

Battery Level indicator appears. Beeps sound according to the battery level.

Three beeps:

Near full charge

Two beeps:

Sufficient charge

One beep:

Almost depleted; charge battery

Note

- The battery level beeper does not sound in Manner Mode or when *Keypad sound* is set to *OFF*.

When Battery Is Empty

Recharge battery appears, the battery alarm sounds for about 10 seconds, and handset powers off in about 60 seconds. Charge battery.

My Phone Number

Check handset phone number.

1 → →

Account Details appear.

■ Add Other Information

→ → Enter Security Code → → Select an item → → Enter information → →

■ View All Information

→ → **Display all data** → → Enter Security Code → → to switch tabs

■ Reset Account Details

→ → **Reset** → → Enter Security Code → → **YES** → .



Stereo Earphone Conversion Cable

Use Stereo Earphone Conversion Cable (sold separately) to connect earphones.

When sound source is monaural (calls, etc.), stereo earphones output monaural sound to left and right earphones; when sound source is stereo, only the left channel is output to monaural earphones.

Side Key Guard





Disable Side Keys (MUSIC and 77-) while handset is closed.

1  → Press and hold 

Repeat to cancel setting.

Tip

- Alternatively, set Side Key Guard by:

 → Settings →  → Other settings
→  → Side key guard →  → ON or
OFF → 